


LG-K350ds-MAIN_BOT

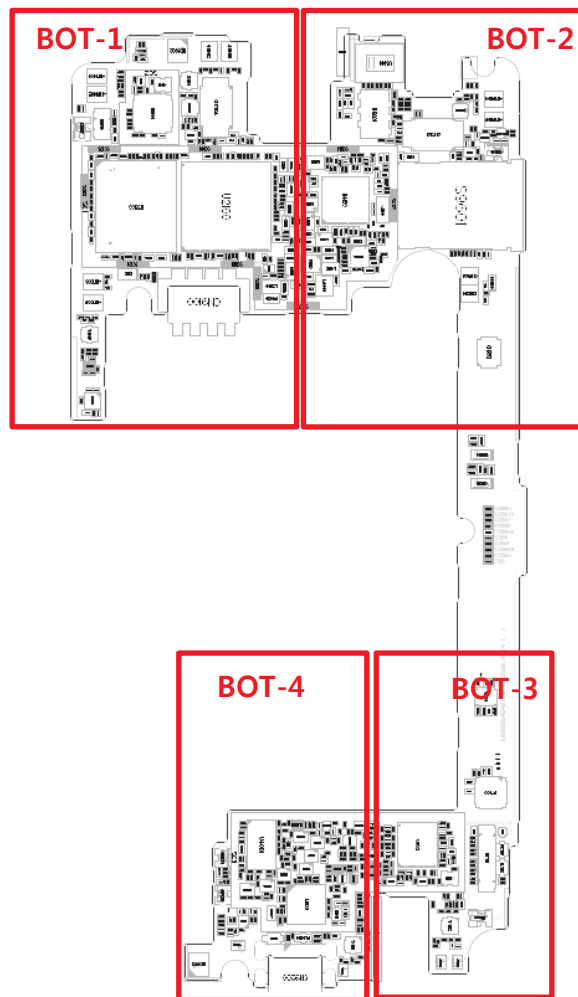

7. PCB LAYOUT

LG-K350DS-MAIN_BOT 1

U6001 - Connectivity MT6625L
No WiFi/ GPS/ FM Radio/Bluetooth

CN9900 – 2nd SIM connector
SIM2 - No service

U3300 - Memory
No Power on

U2100 – AP MT6735
No Power on

FL1003 – B20 LNA
B20 No service


U8100 – Acceleration/Compass
No Sensor

MIC6902 – SUB MIC
No MIC

CN7304 – Main Camera
No Camera(Main)

FL9202 – Switch
No DRX service

CN9100 – Battery Connector
No Power on

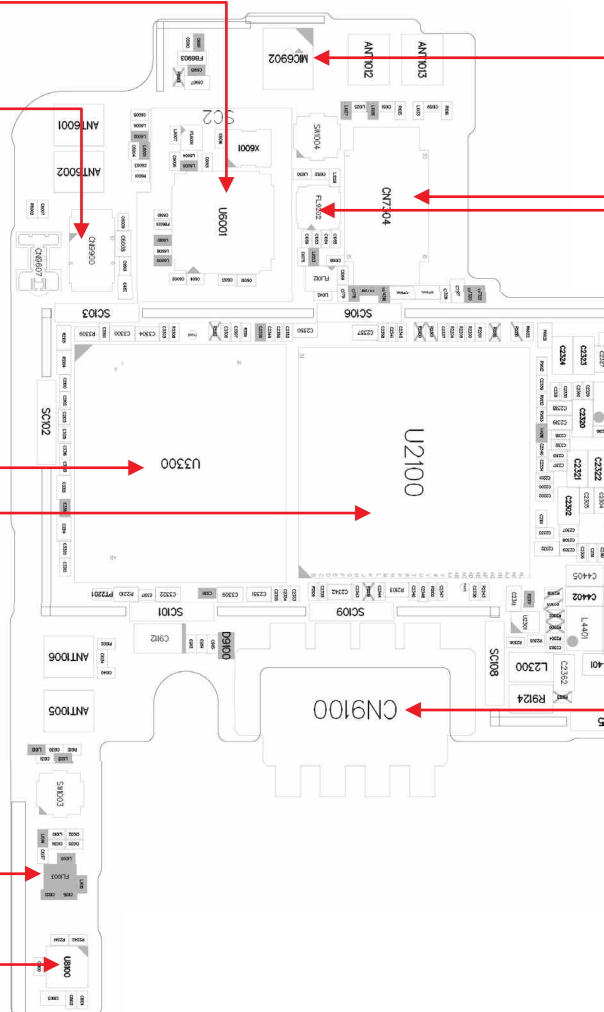

7. PCB LAYOUT

LG-K350DS-MAIN_BOT 2

U8400 – Proximity Sensor

No Proximity

CN9201 – Back Key Connector

No Back Key function/ No Flash

U4100 – PMIC MT6328

No Power on

U4400 – DSV IC

No LCD/ No Flash

U5200 – NFC IC

No NFC service

CN7401 – VT Camera connector

No Camera(VT)

FL6003/ FL6002/ U6002

No GPS service

FL6003/ U1002


No B7 DRX function

S9601 – Combo Socket

No 1st SIM/ SD card service

CN9501/CN9502 – Motor Contact

No Vibrator fuction

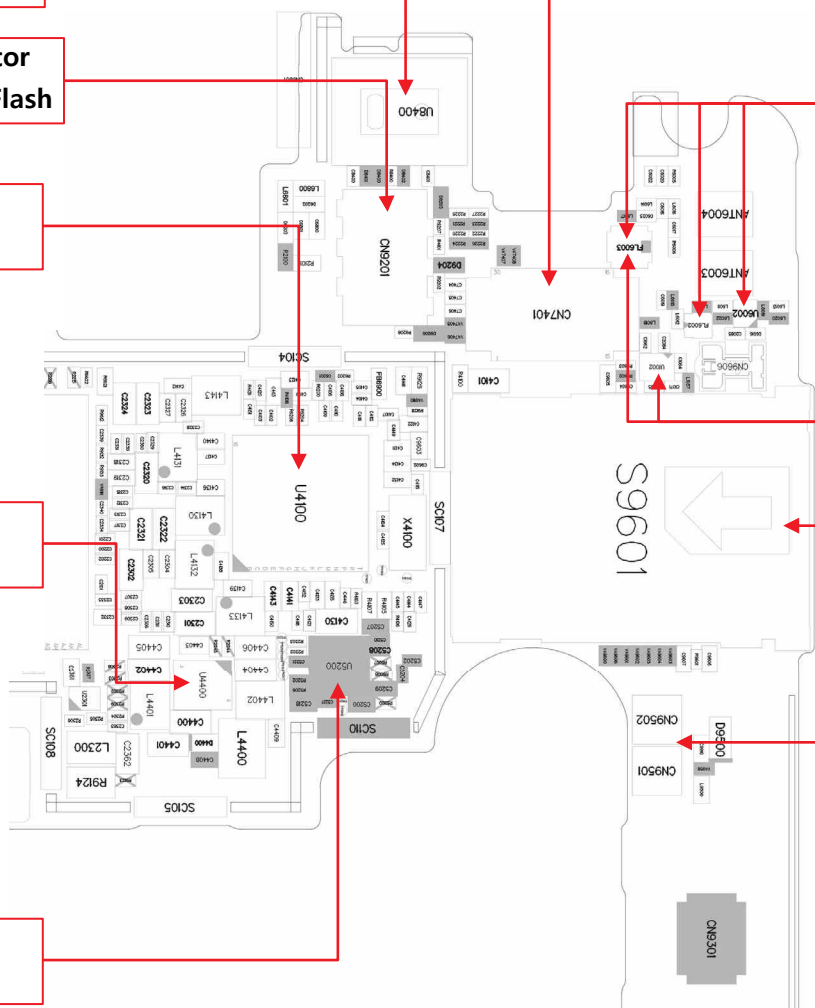


U4001 – MMPA
No Service

ANT6200/6201
- **Speaker Contact**
No Sound

U3001 – Tx Module

No Service

MIC6901 - MIC
No MIC(Main)

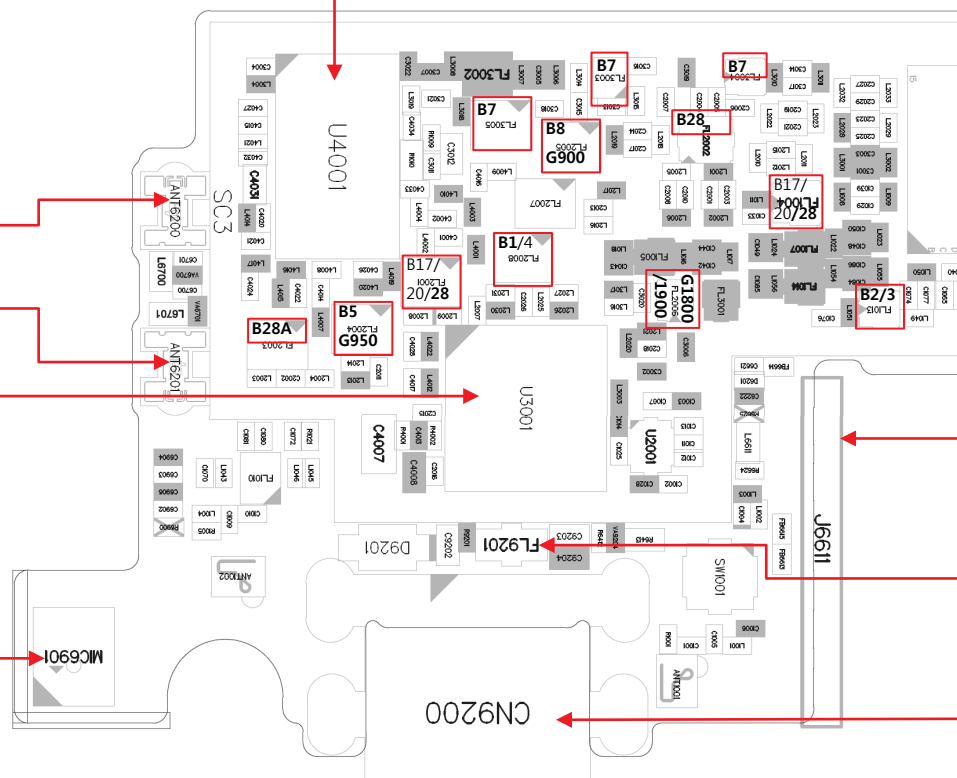

J6611 – Ear-jack
No Ear-mic function

FL9201 – USB EMI filter
No USB

CN9200 – USB Connector
No USB connection
No Charging

