

L3 Moto X RF Troubleshooting Guide

RF Test

Introduction:

This document covers the Board Test RF sections for all variants of X+1. It includes the schematic and layout of each block to help troubleshoot factory failures and analysis.

Sequence

PCB COMPONENT PLACEMENT:	3
GSM HB TX	7
LTE & WCDMA B1 TX	10
LTE & WCDMA B3 TX	20
LTE & WCDMA B4 TX	25
LTE B7 TX	34
LTE B20 TX EU SKU	46
LTE B41 TX	49
GSM 1800 RX	54
GSM 1900 RX	57
WCDMA B1 C0 RX ATT & VZW	60
WCDMA B1 C0 RX SPRINT	64
LTE B3 C0 RX ATT & VZW SKUS.....	74
LTE & WCDMA B3 C0 RX EU SKU	77
LTE & WCDMA B4 C0 RX SPRINT	80
LTE & WCDMA B4 C0 RX ATT VZW	84
LTE B7 C0 RX ATT & VZW & EU SKUS	90
LTE B12 B13 B17 C0 RX.....	97
LTE B20 C0 RX	99
LTE B29 C0 RX_SPRINT	102
LTE B41 C0 RX SPRINT	105
LTE B3 C1 RX ATT & VZW SKUS.....	114
LTE & WCDMA B3 C1 RX EU SKUS	117
LTE & WCDMA B4 C1 RX SPRINT	120
LTE & WCDMA B4 C1 RX ATT & VZW SKU.....	125
LTE B7 C1 RX ATT & VZW & EU SKUS.....	131
LTE B12 B13 B17 C1 RX.....	134
LTE B20&B8 C1 RX	137

TITLE

L3 Moto X RF Troubleshooting Guide

MODEL

RF Test

LTE B29 C1 RX SPRINT 140





TITLE

MODEL

L3 Moto X RF Troubleshooting Guide

RF Test


PCB Component Placement:

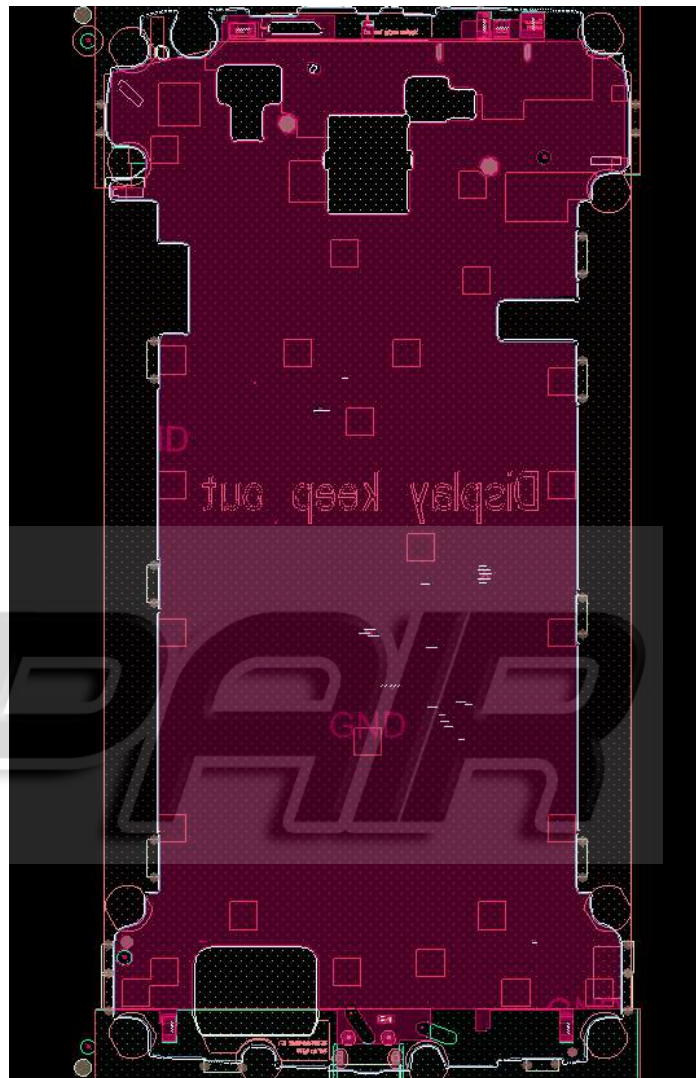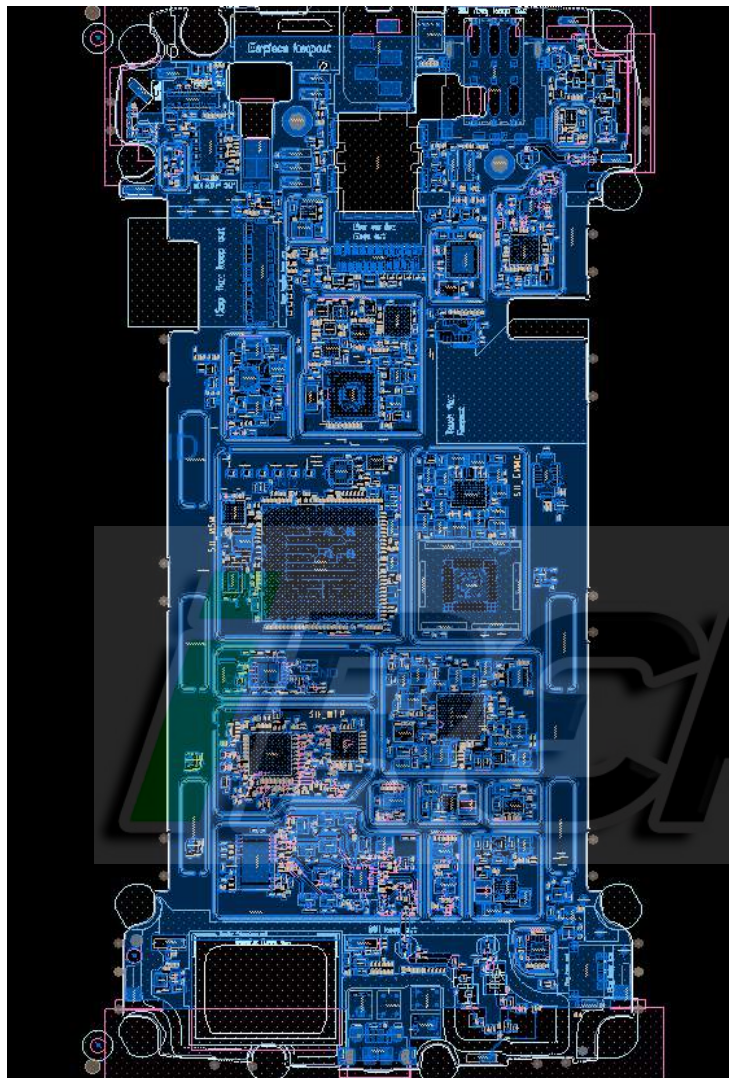

L3 Moto X RF Troubleshooting Guide




RF Test

GSM LB TX

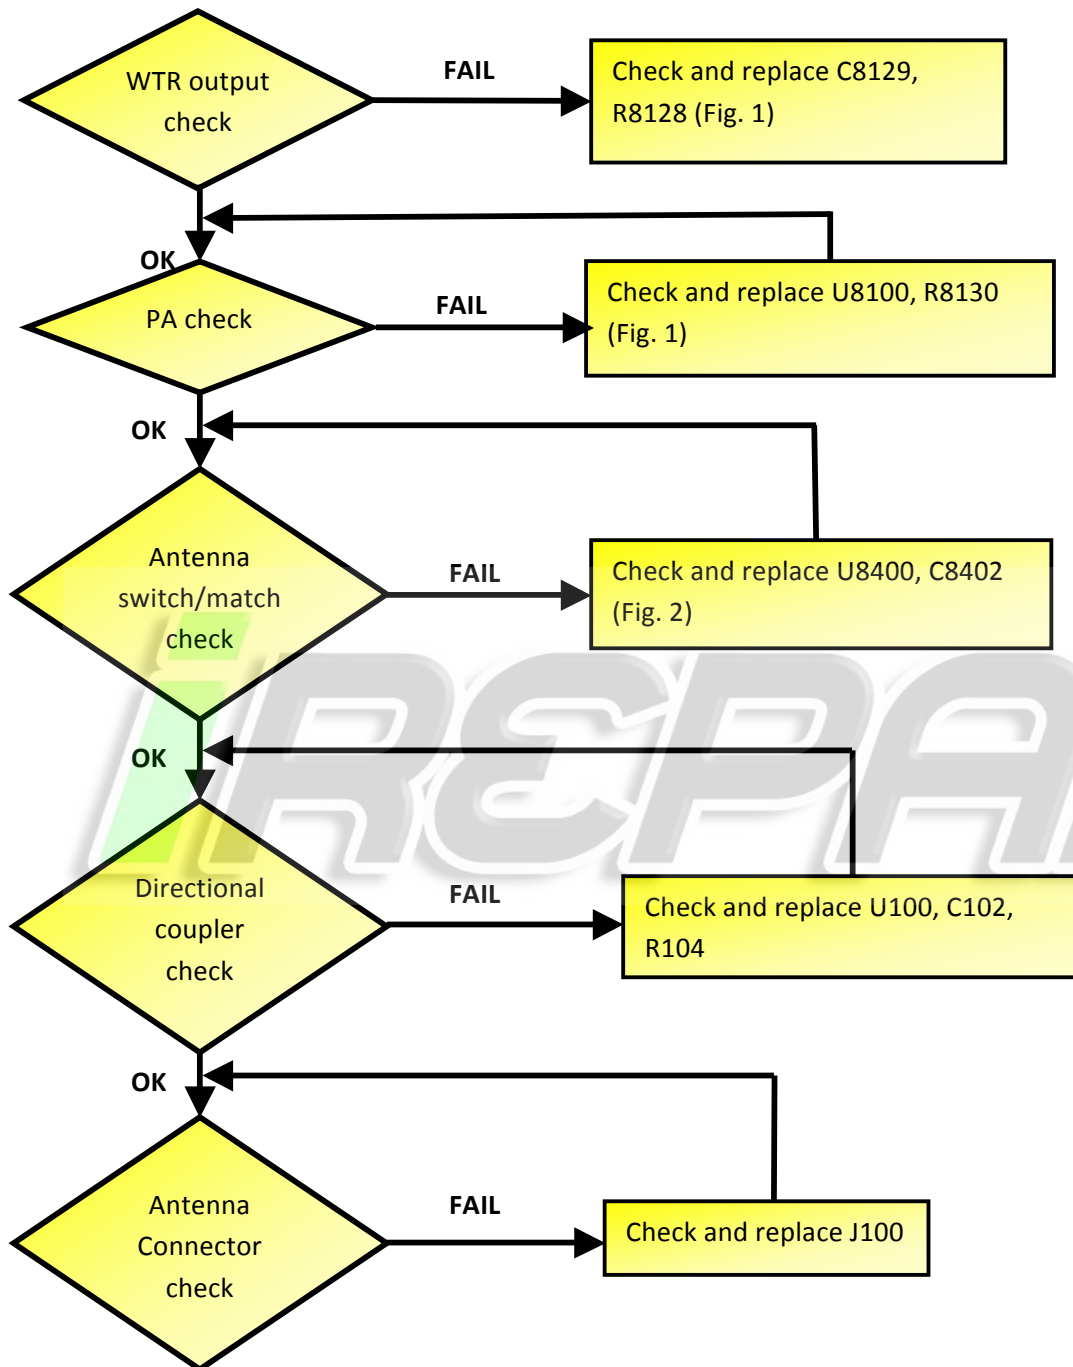

L3 Moto X RF Troubleshooting Guide


RF Test

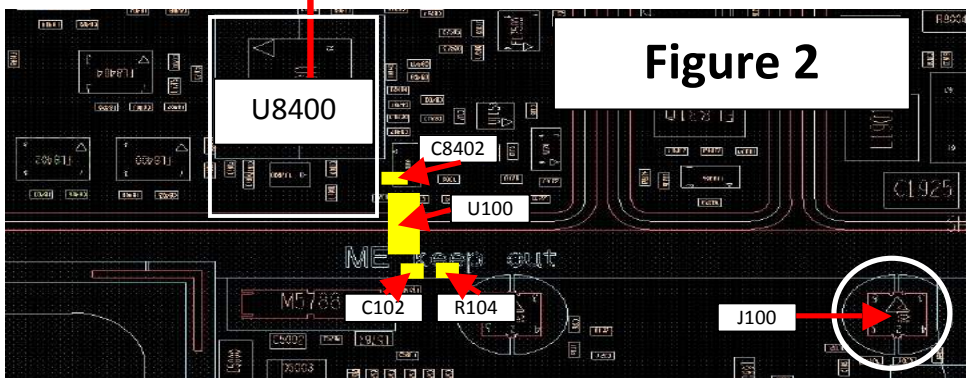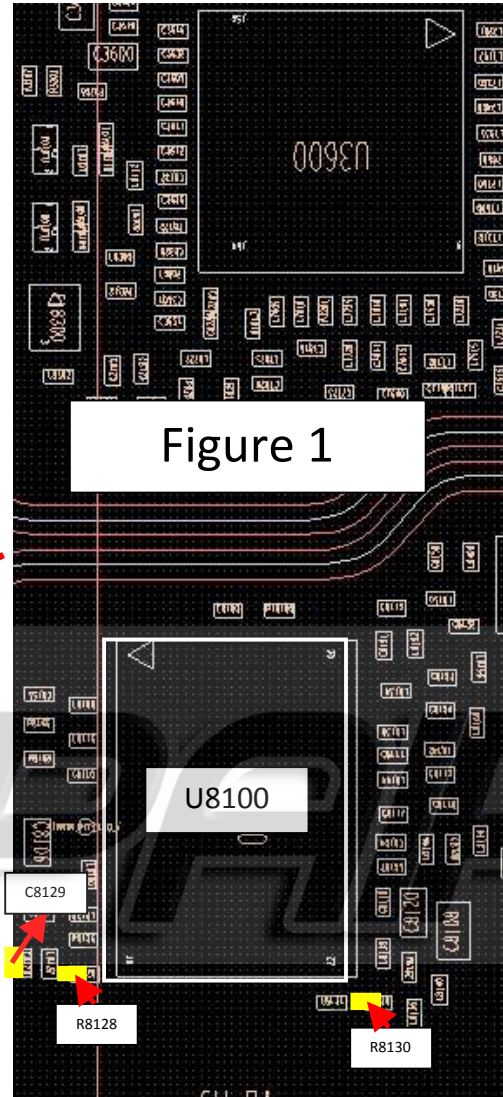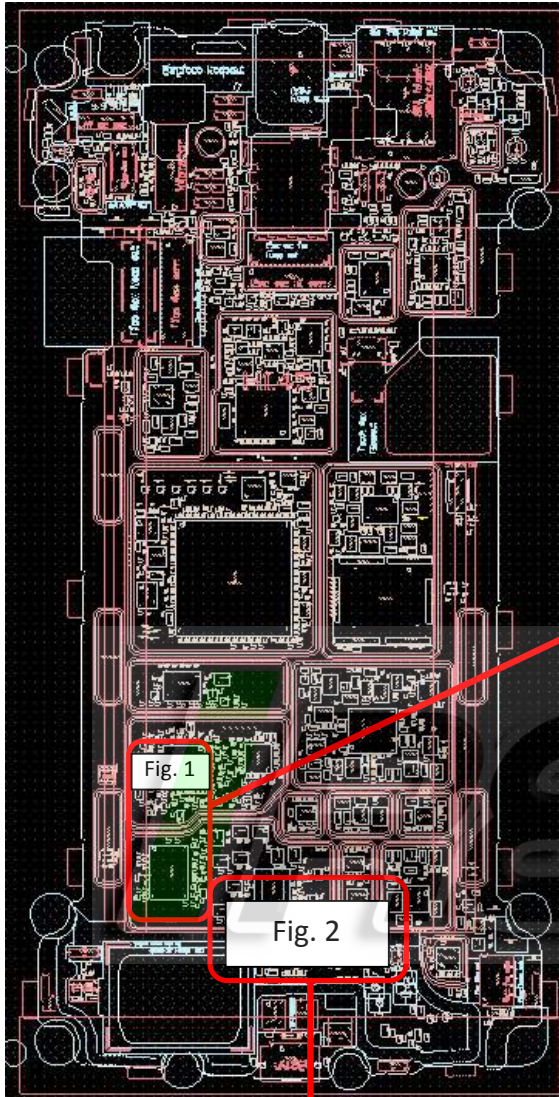


L3 Moto X RF Troubleshooting Guide

RF Test


KFFE: IX MMBB PA
REF 8100-8199 ROOM=P_8_150

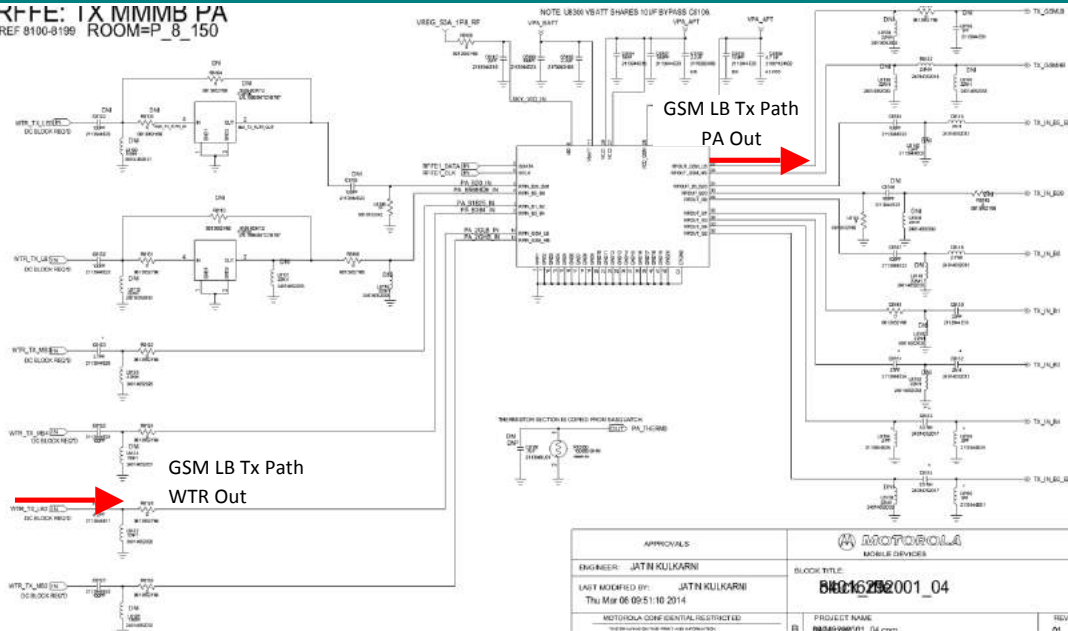

RFFE: TRX SWITCH
REF 7100-8499

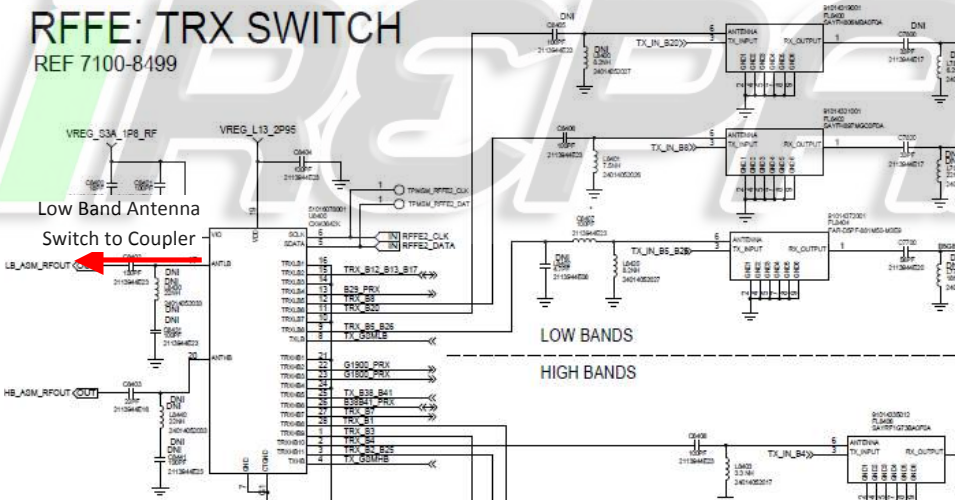


ROOM=P_18_184

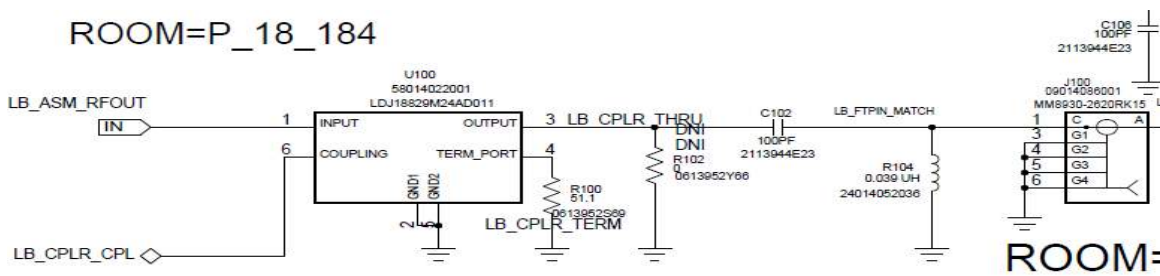

L3 Moto X RF Troubleshooting Guide

RF Test

GSM HB TX


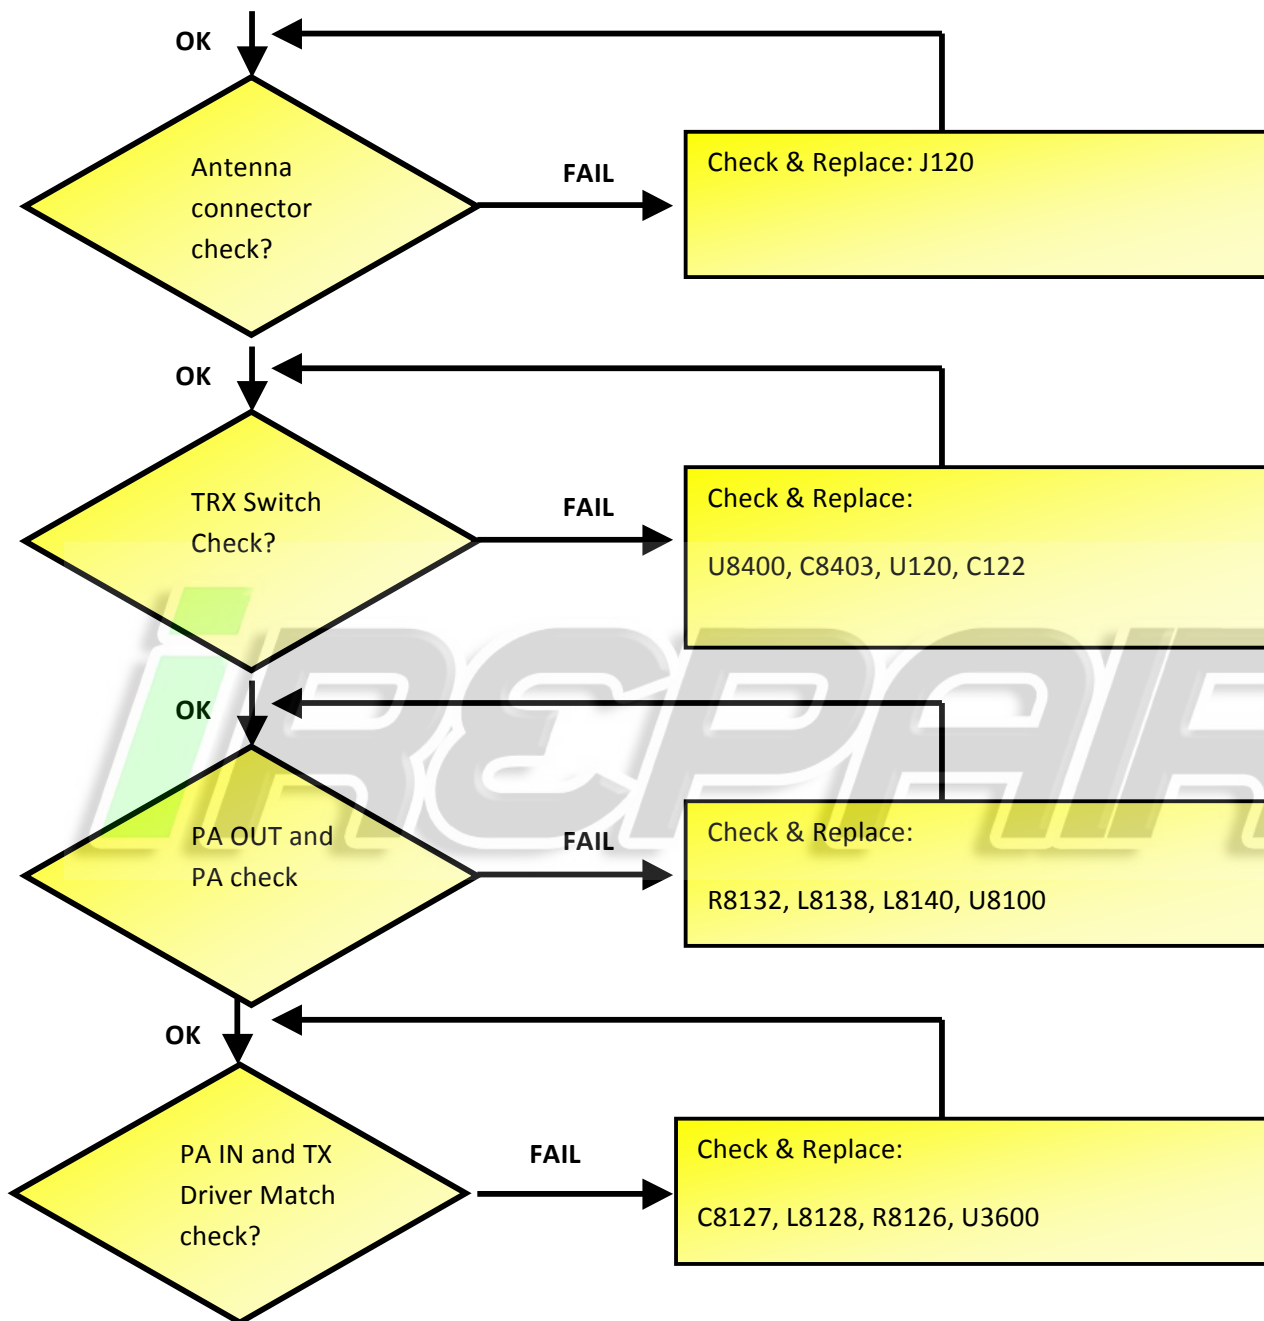


TITLE

MODEL

L3 Moto X RF Troubleshooting Guide

RF Test

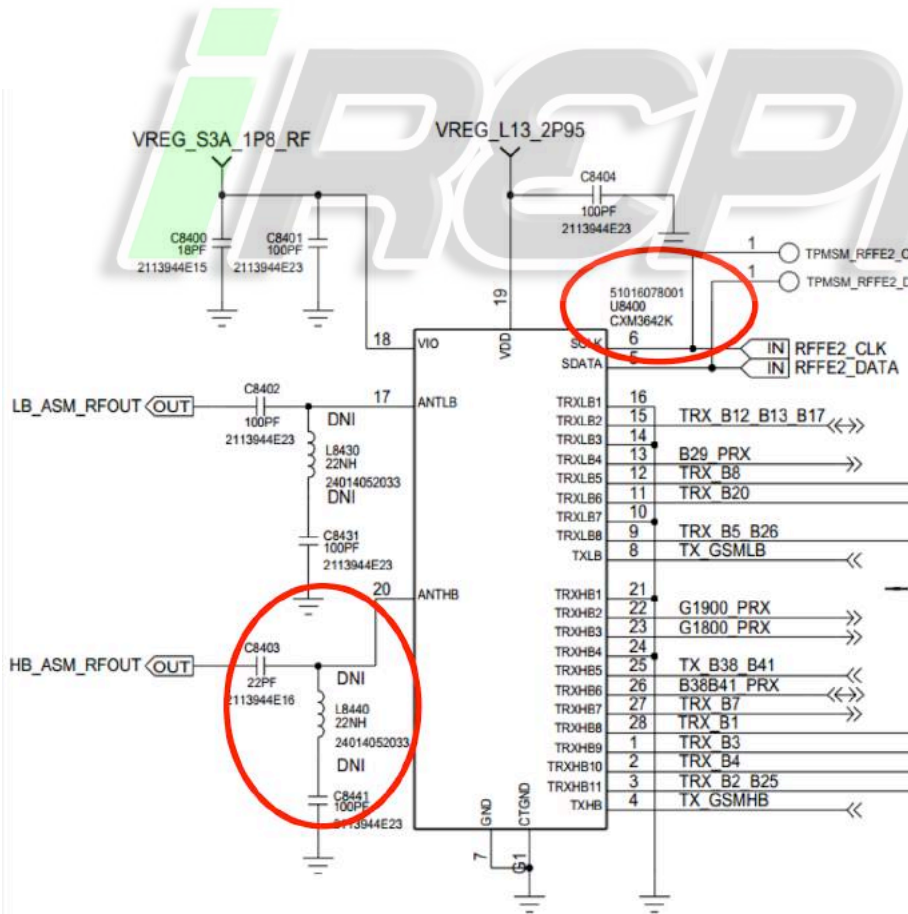
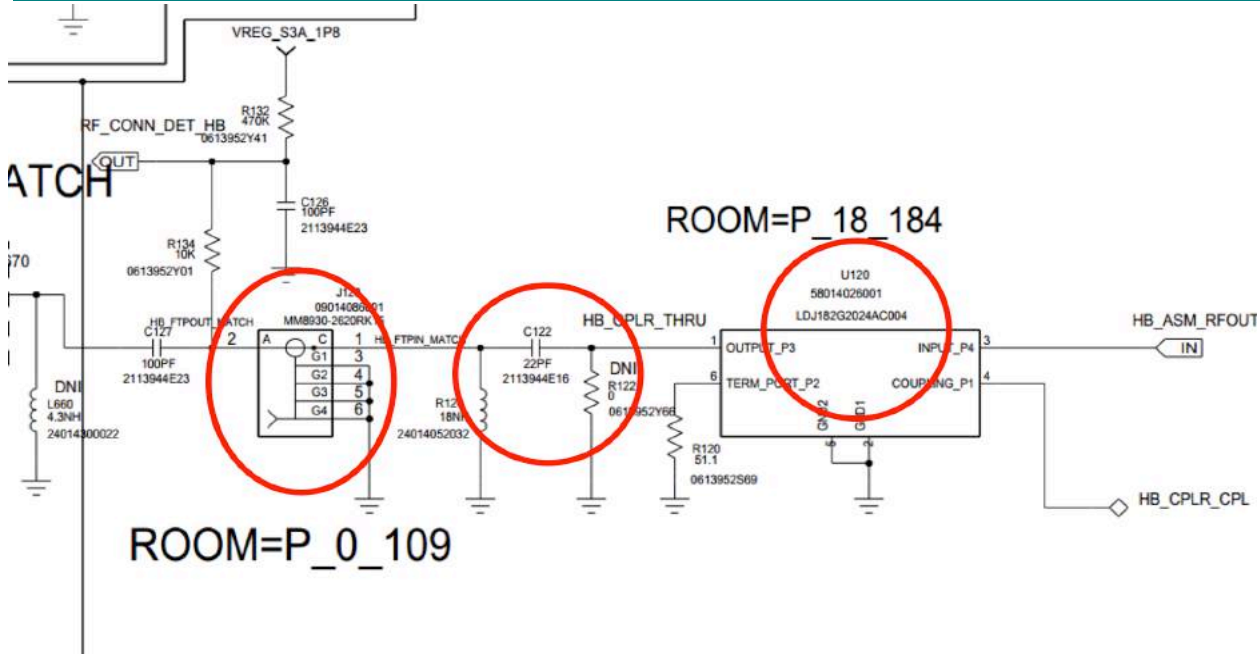


TITLE

MODEL

L3 Moto X RF Troubleshooting Guide

RF Test

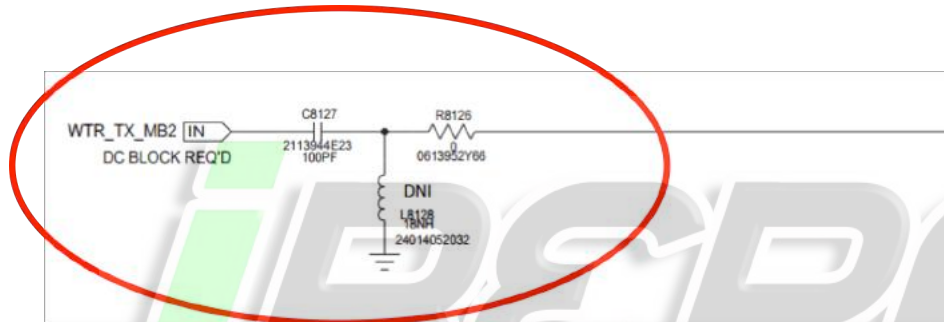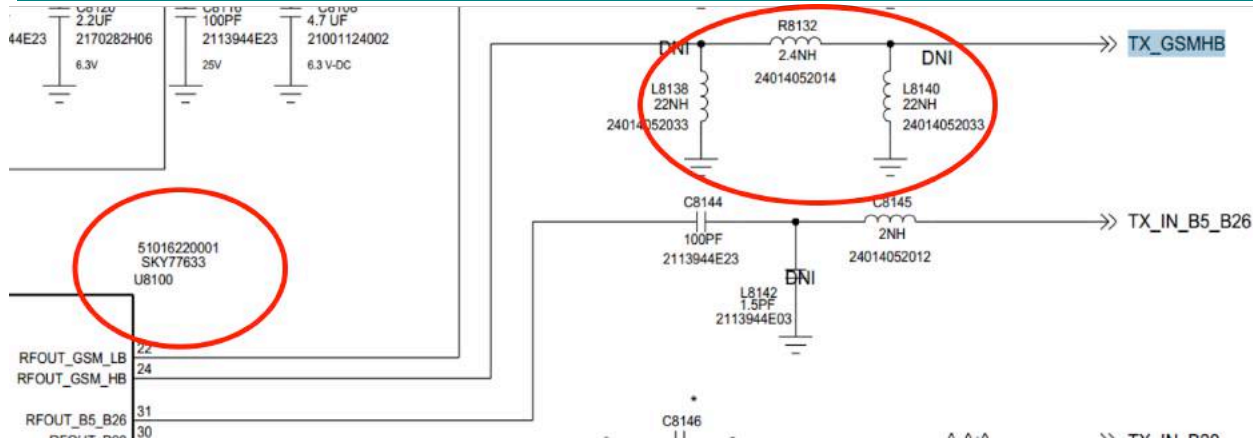

51016102001
U3600
WTR1625L

TX_LB1_OUT	162	B5/B8/B26	OUT	WTR_TX_LB1
TX_LB2_OUT	153	GSM LB	OUT	WTR_TX_LB2
TX_LB3_OUT	163	B20	OUT	WTR_TX_LB3
TX_LB4_OUT	154	B12/B13/B17	OUT	WTR_TX_LB4
TX_MB1_OUT	146	VC		
TX_MB2_OUT	138	GSM HB	OUT	WTR_TX_MB2
TX_MB3_OUT	139	B1/B25	OUT	WTR_TX_MB3
TX_MB4_OUT	155	B3/B4	OUT	WTR_TX_MB4


TITLE

MODEL

L3 Moto X RF Troubleshooting Guide

RF Test


GSM_1800_TX, EDGE_1800_TX,
GSM_1900_TX, & EDGE_1900_TX

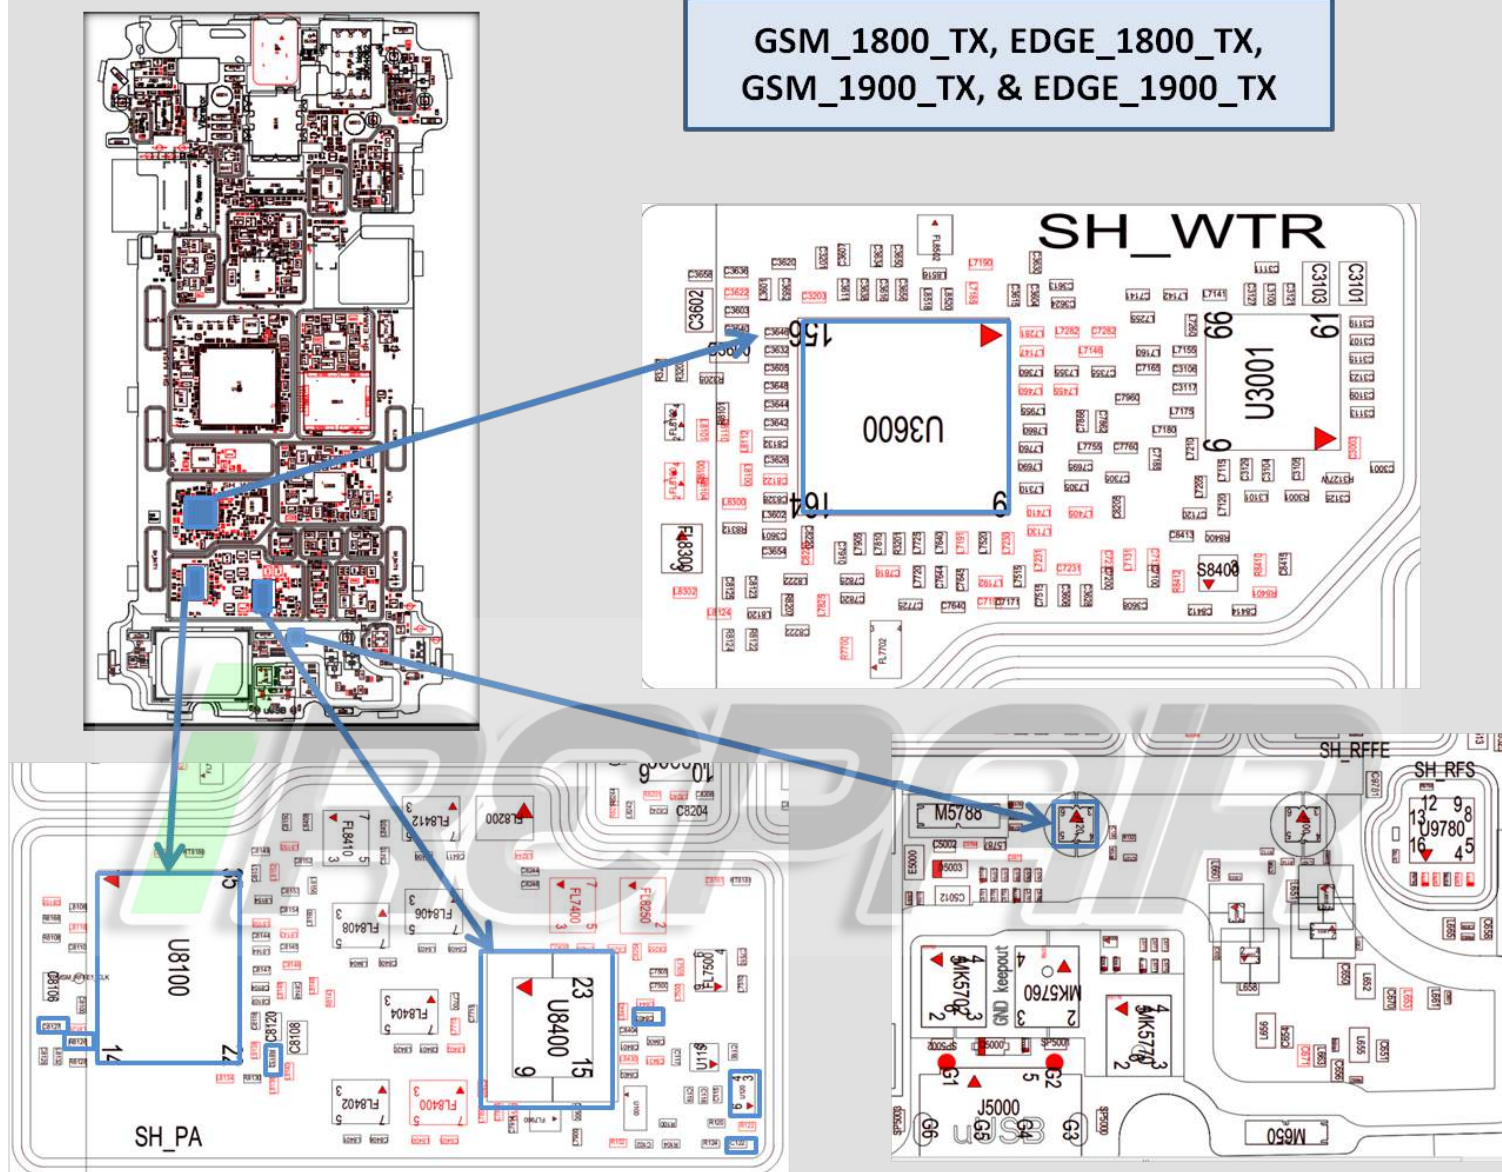

LTE & WCDMA B1 TX

L3 Moto X RF Troubleshooting Guide

RF Test


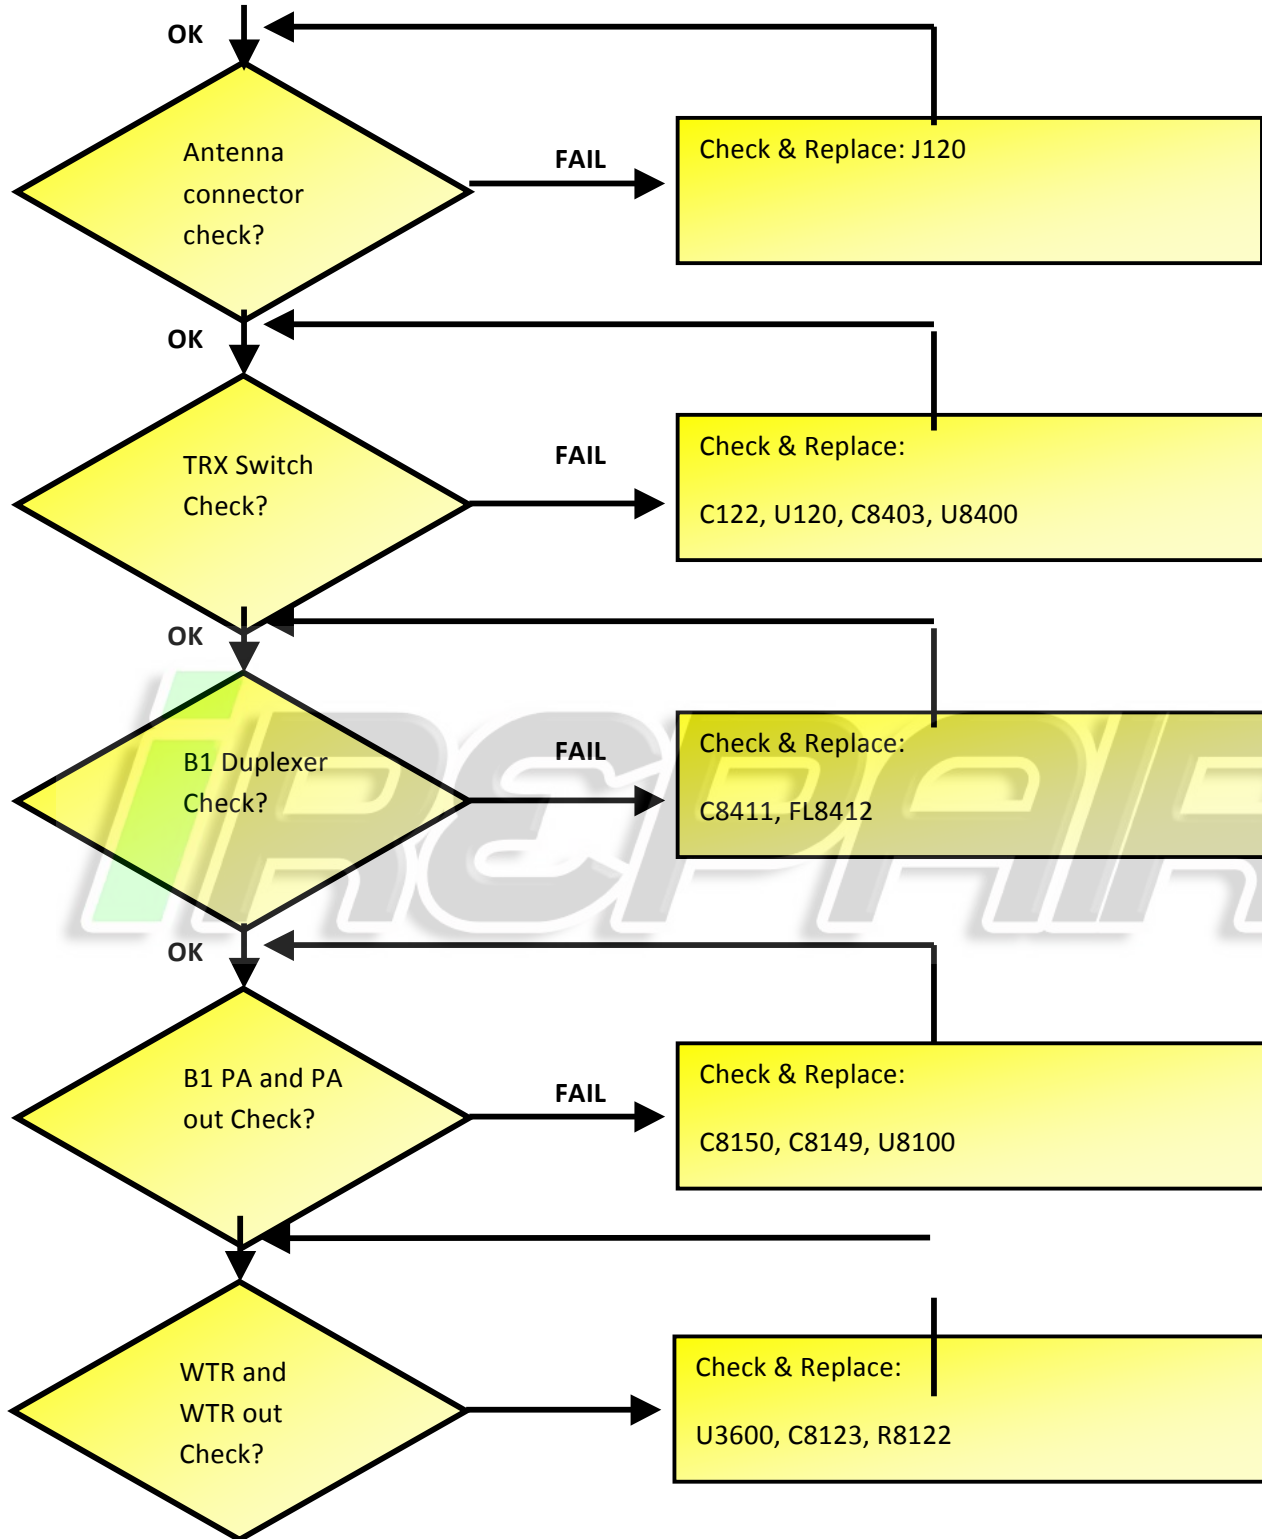


TITLE

MODEL



L3 Moto X RF Troubleshooting Guide

RF Test

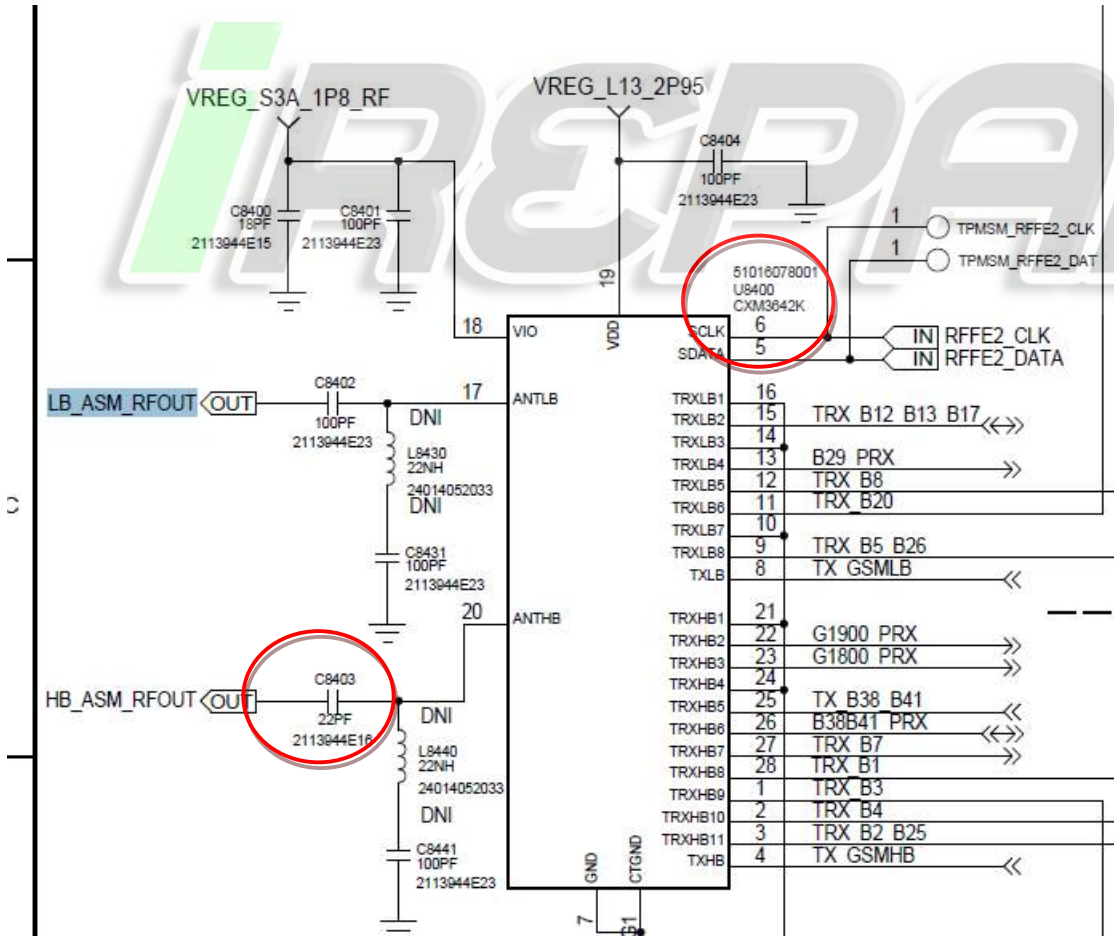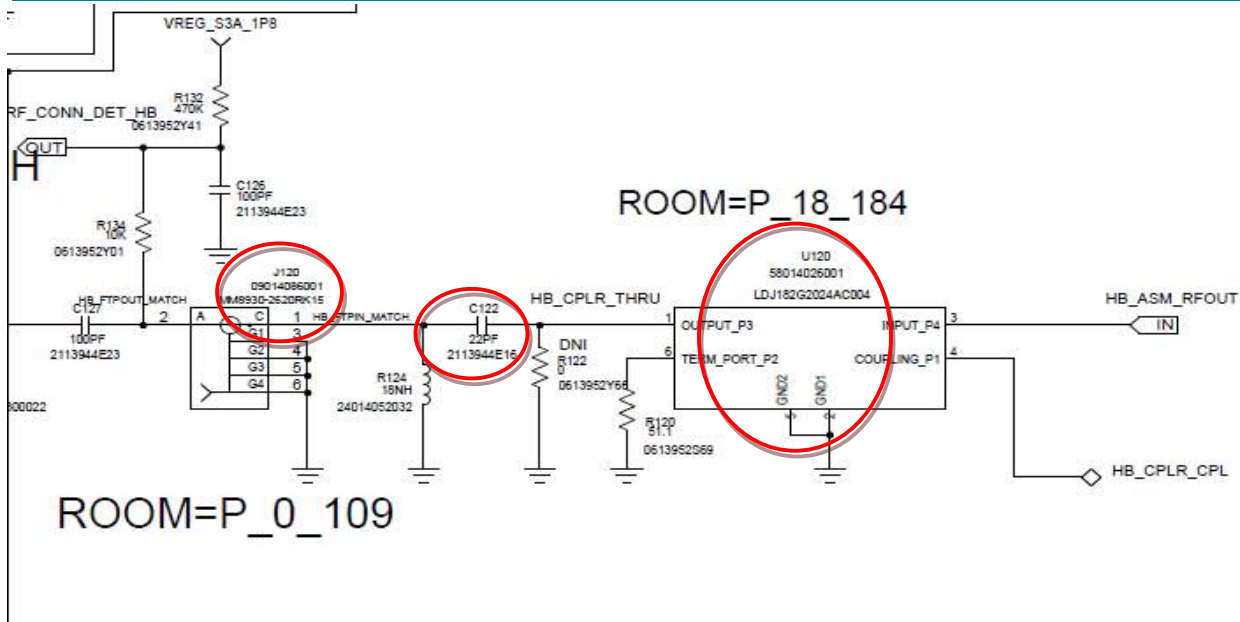




L3 Moto X RF Troubleshooting Guide

RF Test

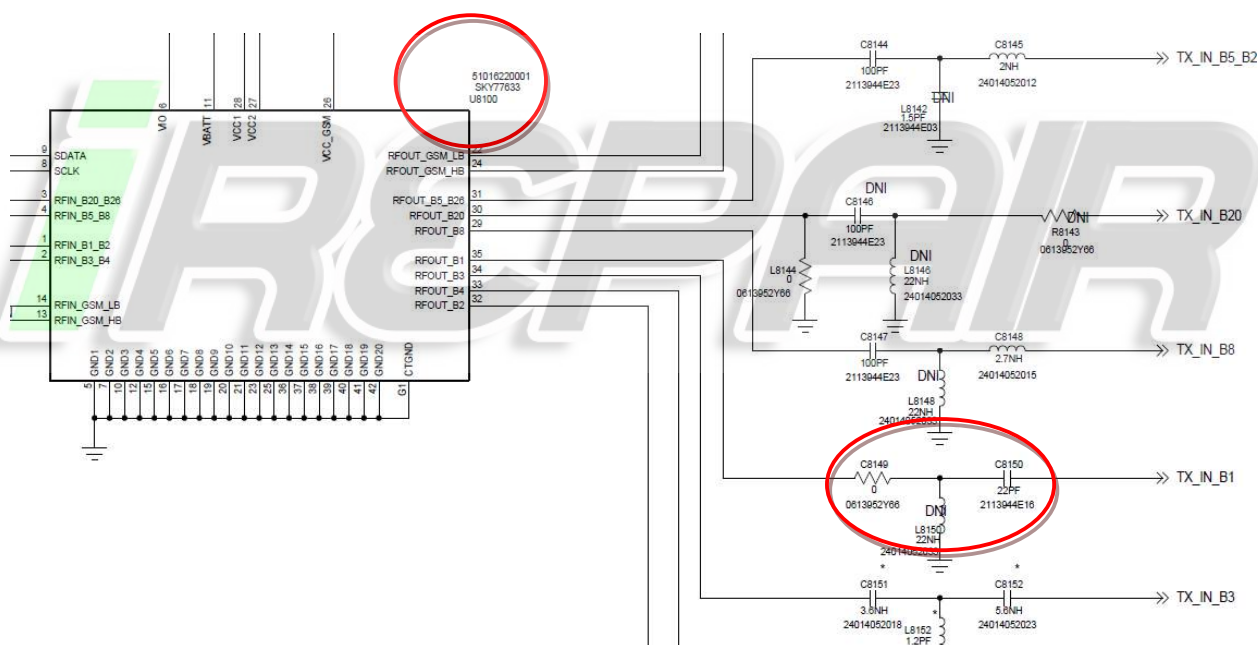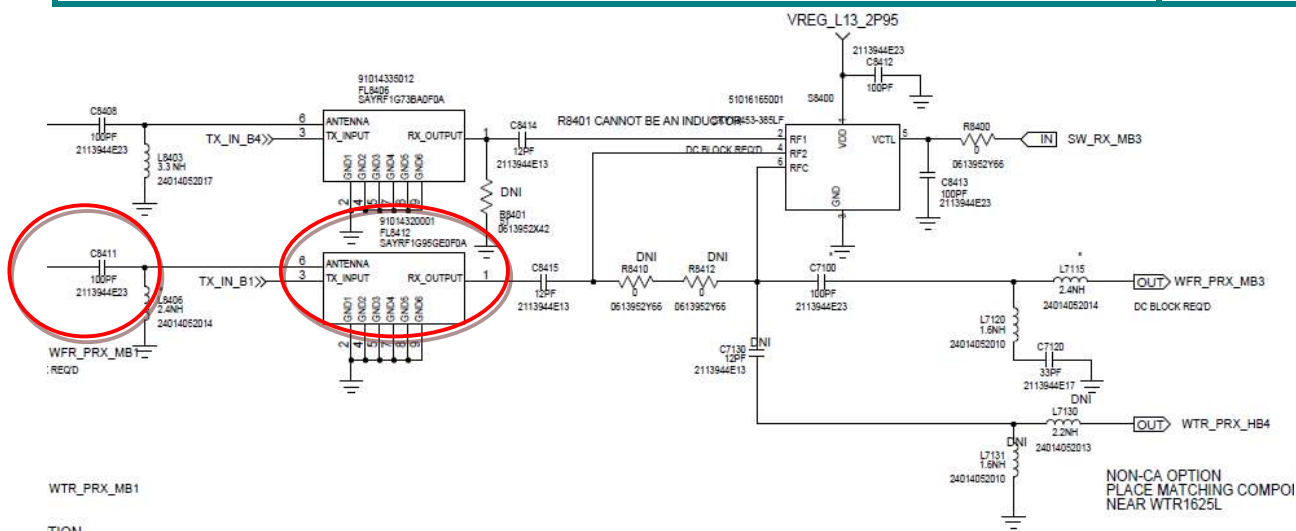

L3 Moto X RF Troubleshooting Guide


RF Test

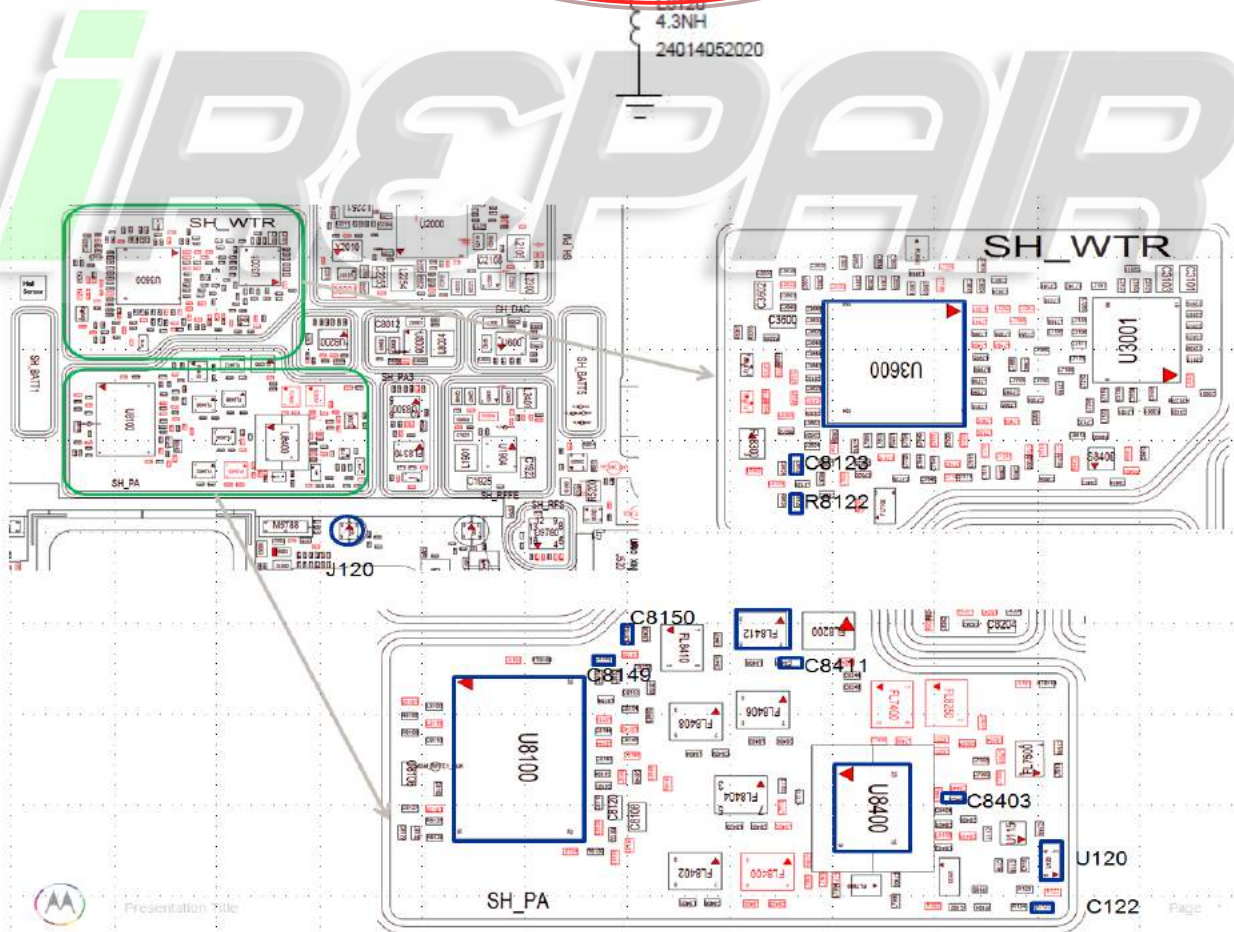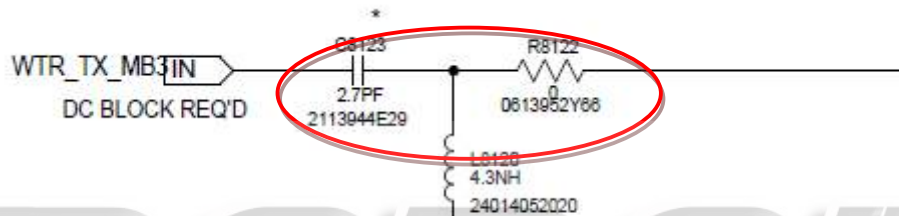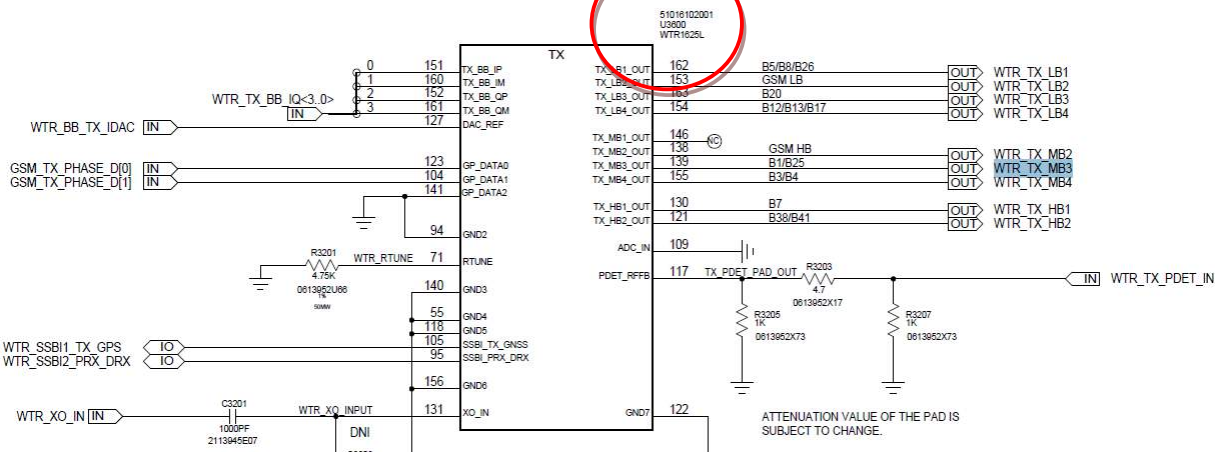

LTE B2&B25,WCDMA B2, CDMA BC1 TX

L3 Moto X RF Troubleshooting Guide

RF Test

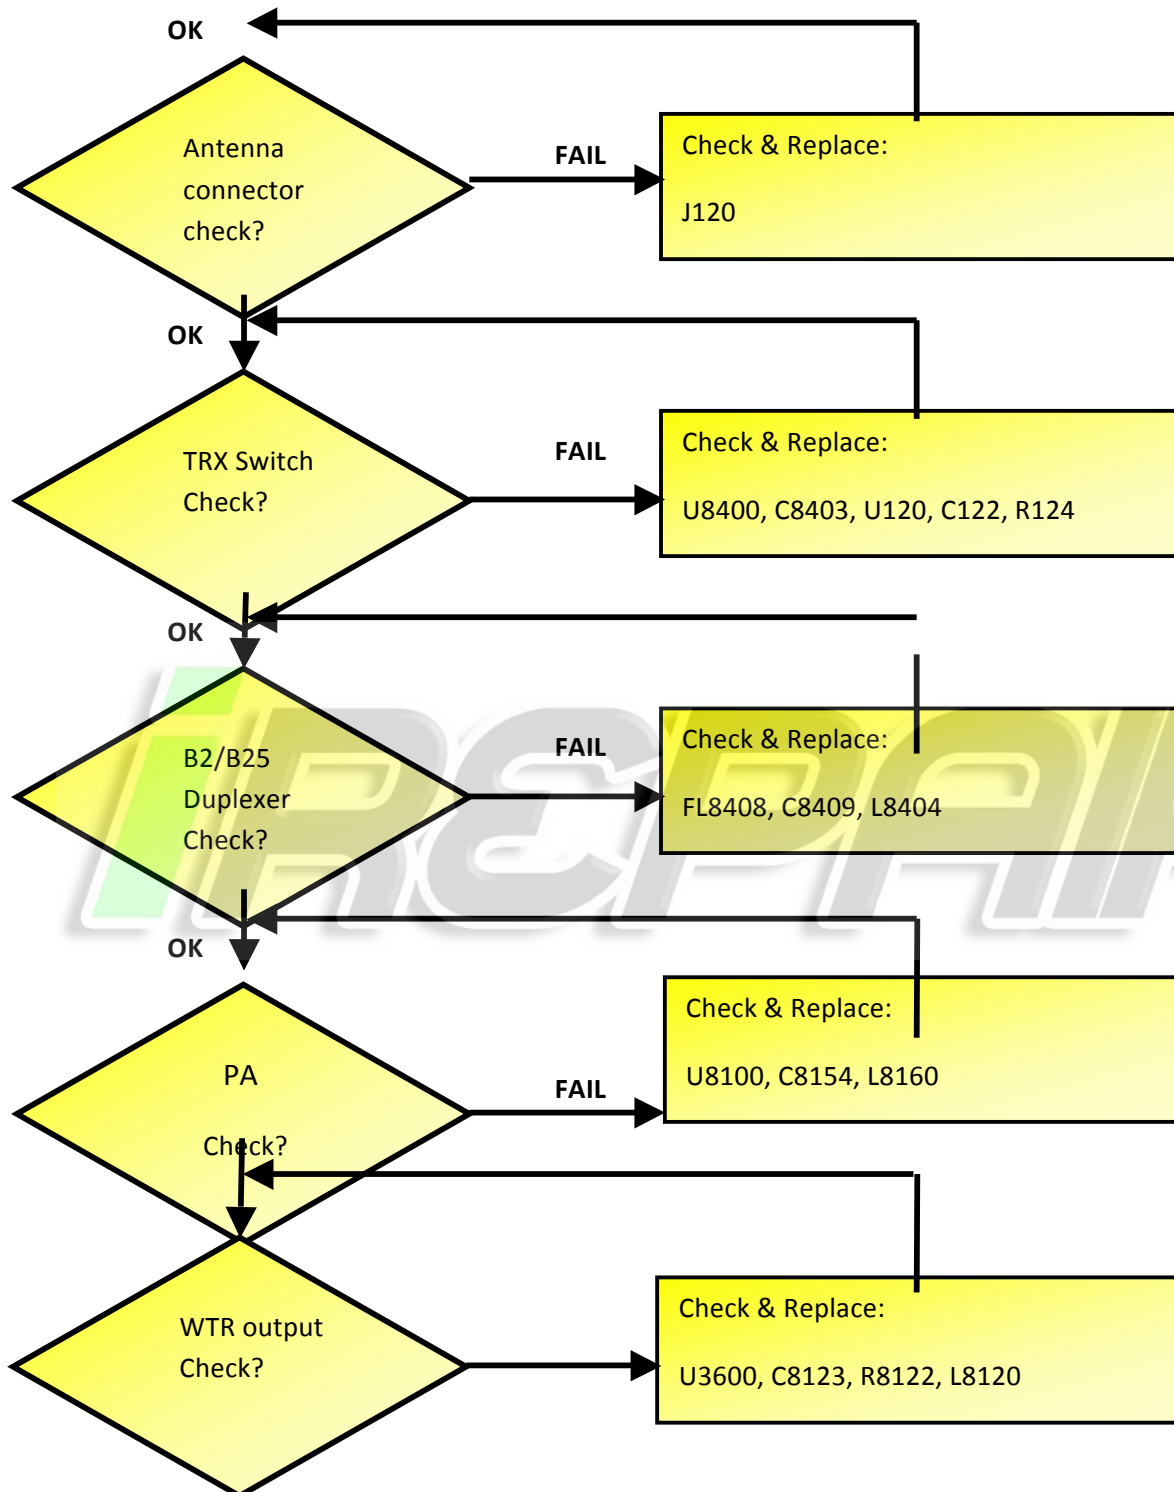


TITLE

MODEL

L3 Moto X RF Troubleshooting Guide


RF Test

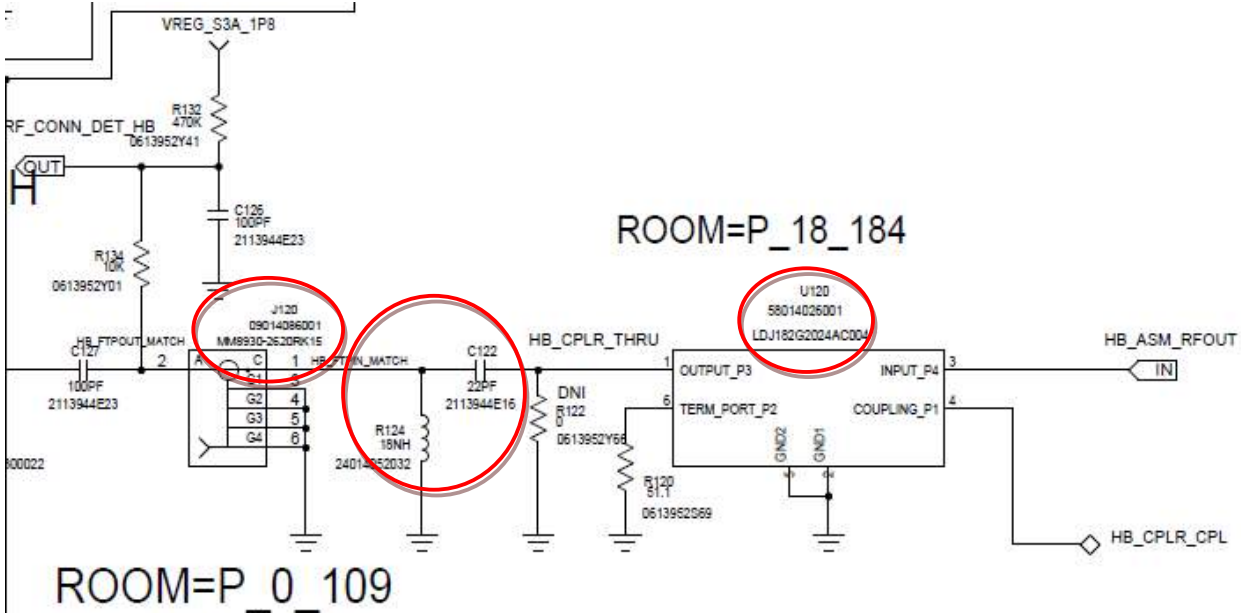

iREPAIR

L3 Moto X RF Troubleshooting Guide

RF Test

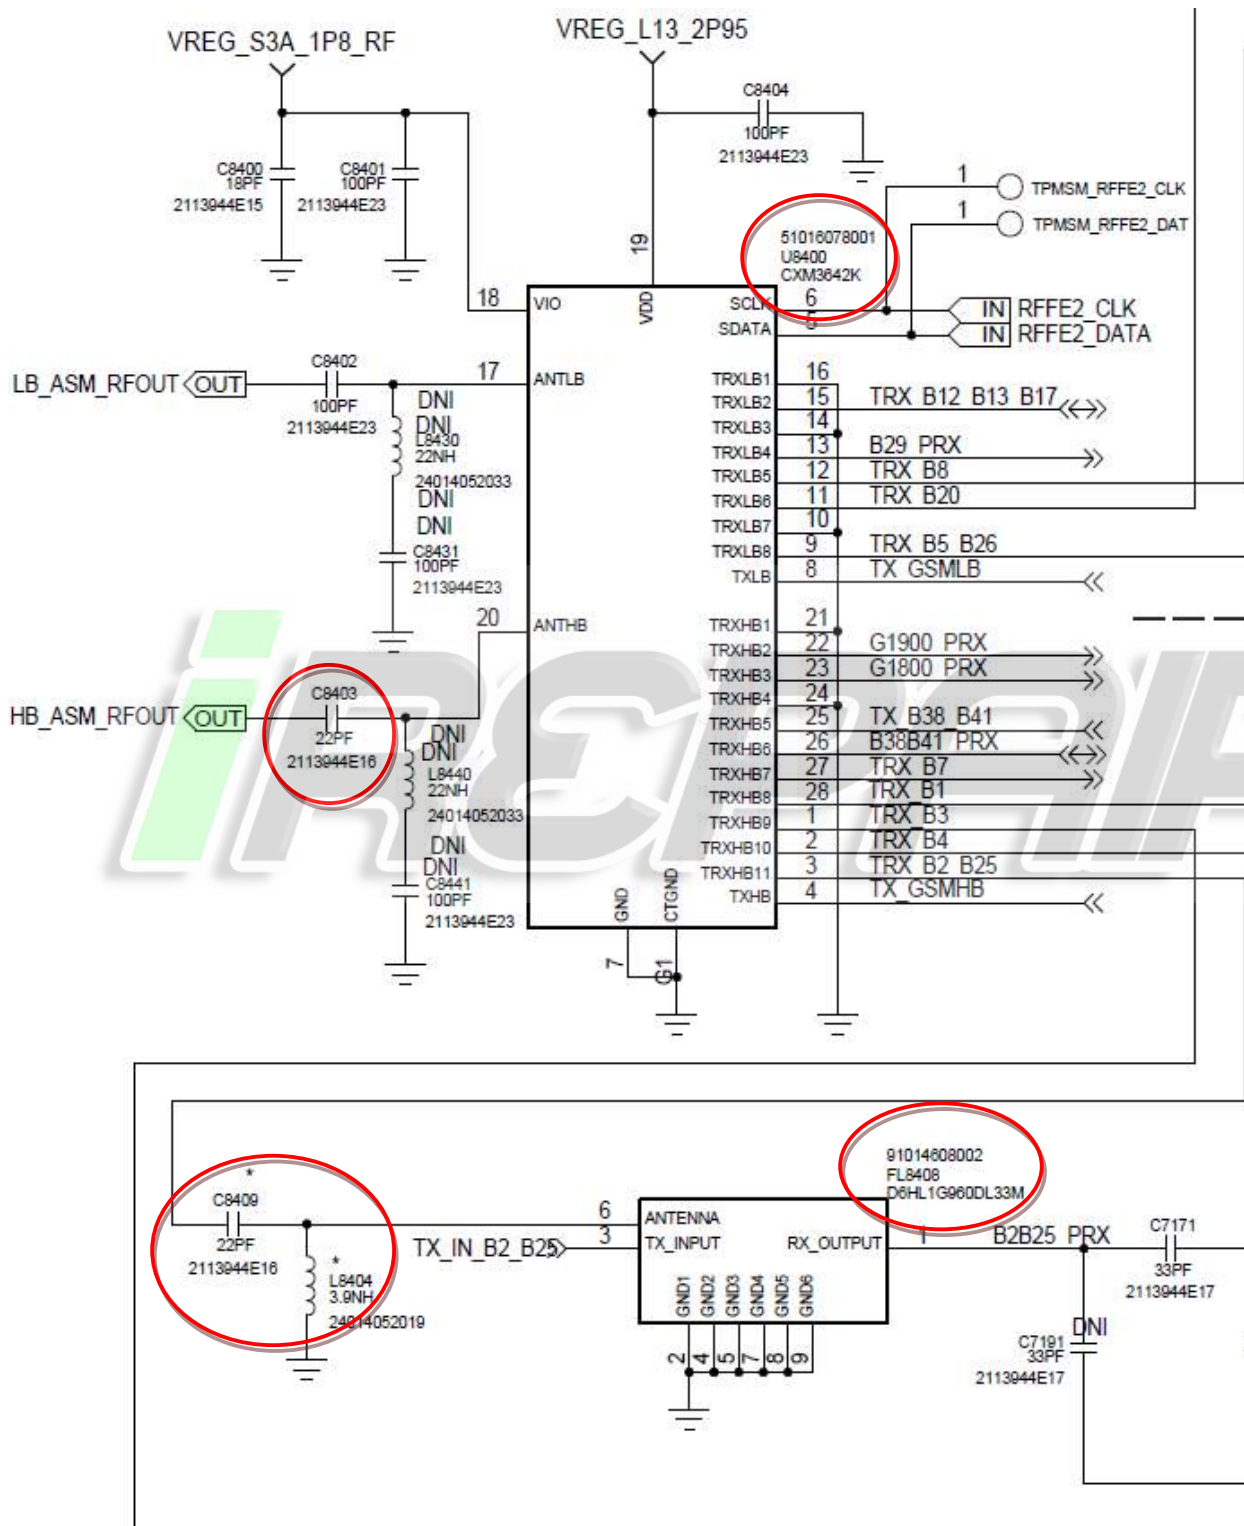


TITLE

MODEL



L3 Moto X RF Troubleshooting Guide

RF Test

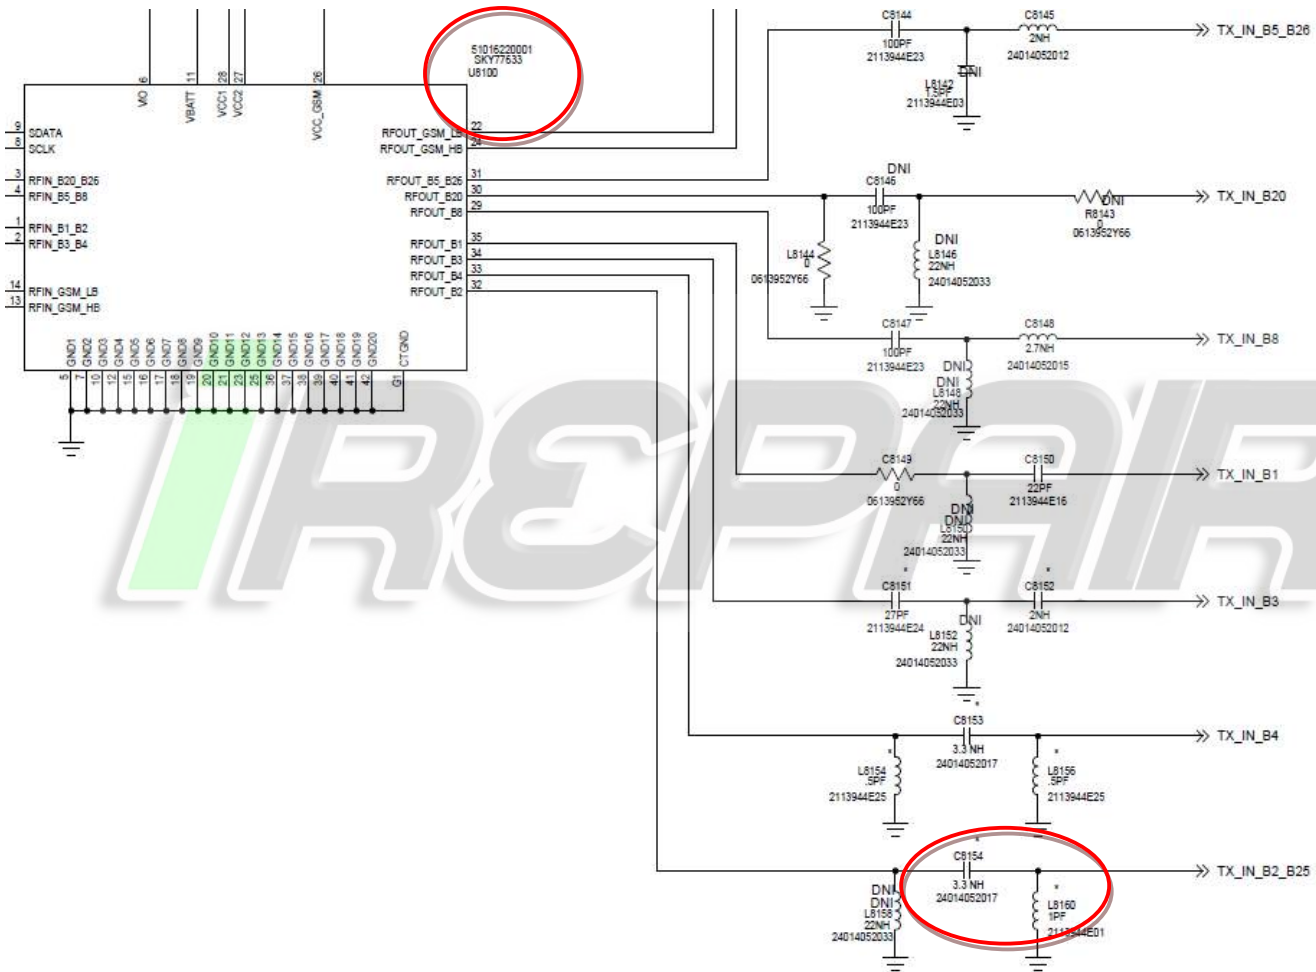


L3 Moto X RF Troubleshooting Guide

RF Test

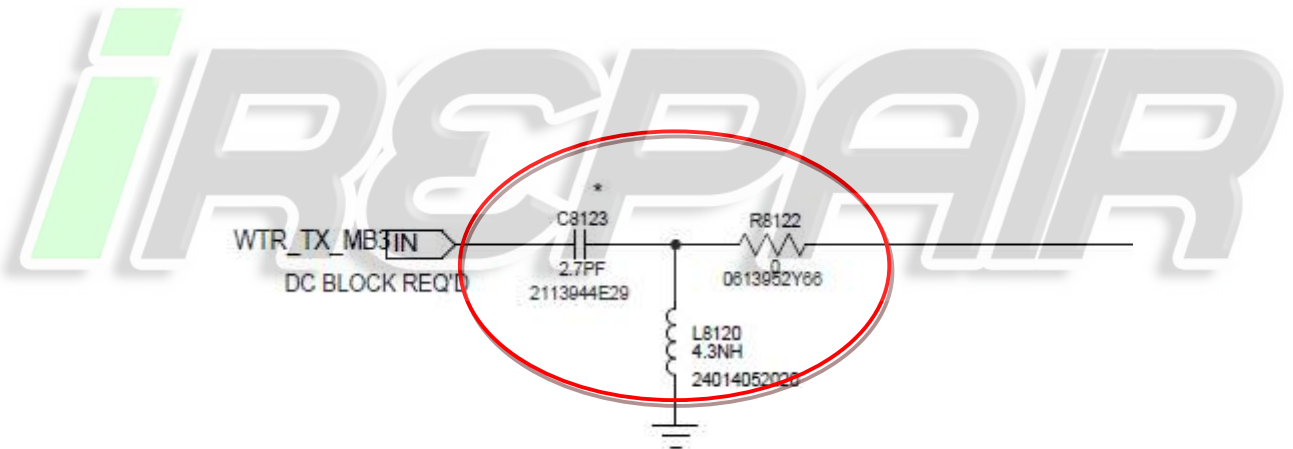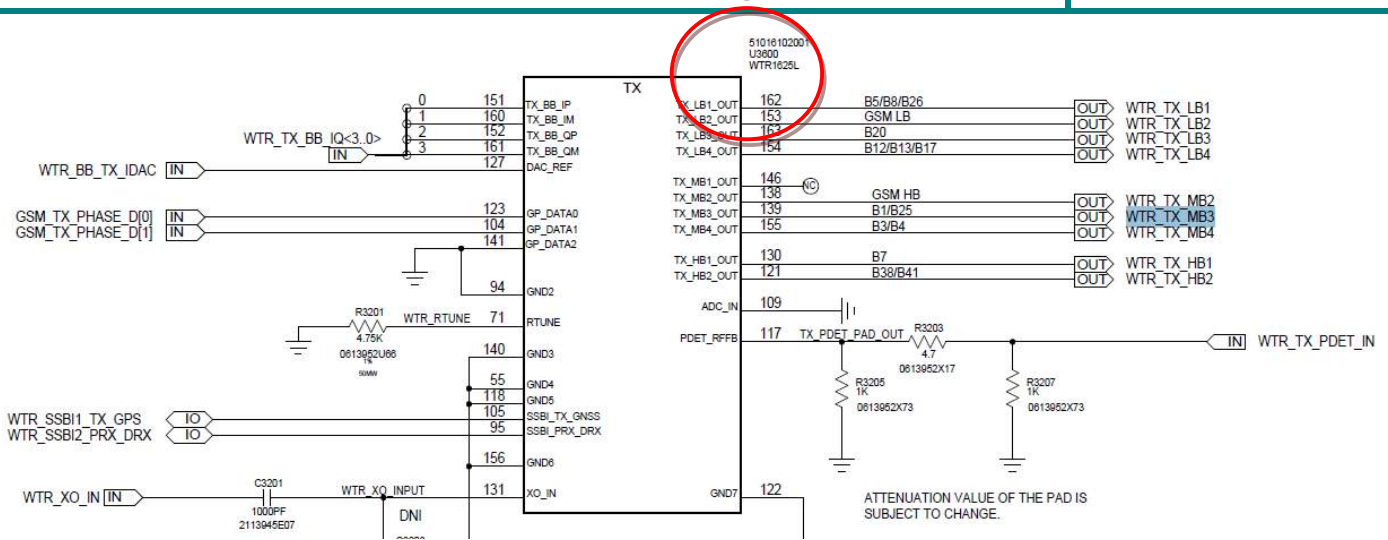

L3 Moto X RF Troubleshooting Guide

RF Test

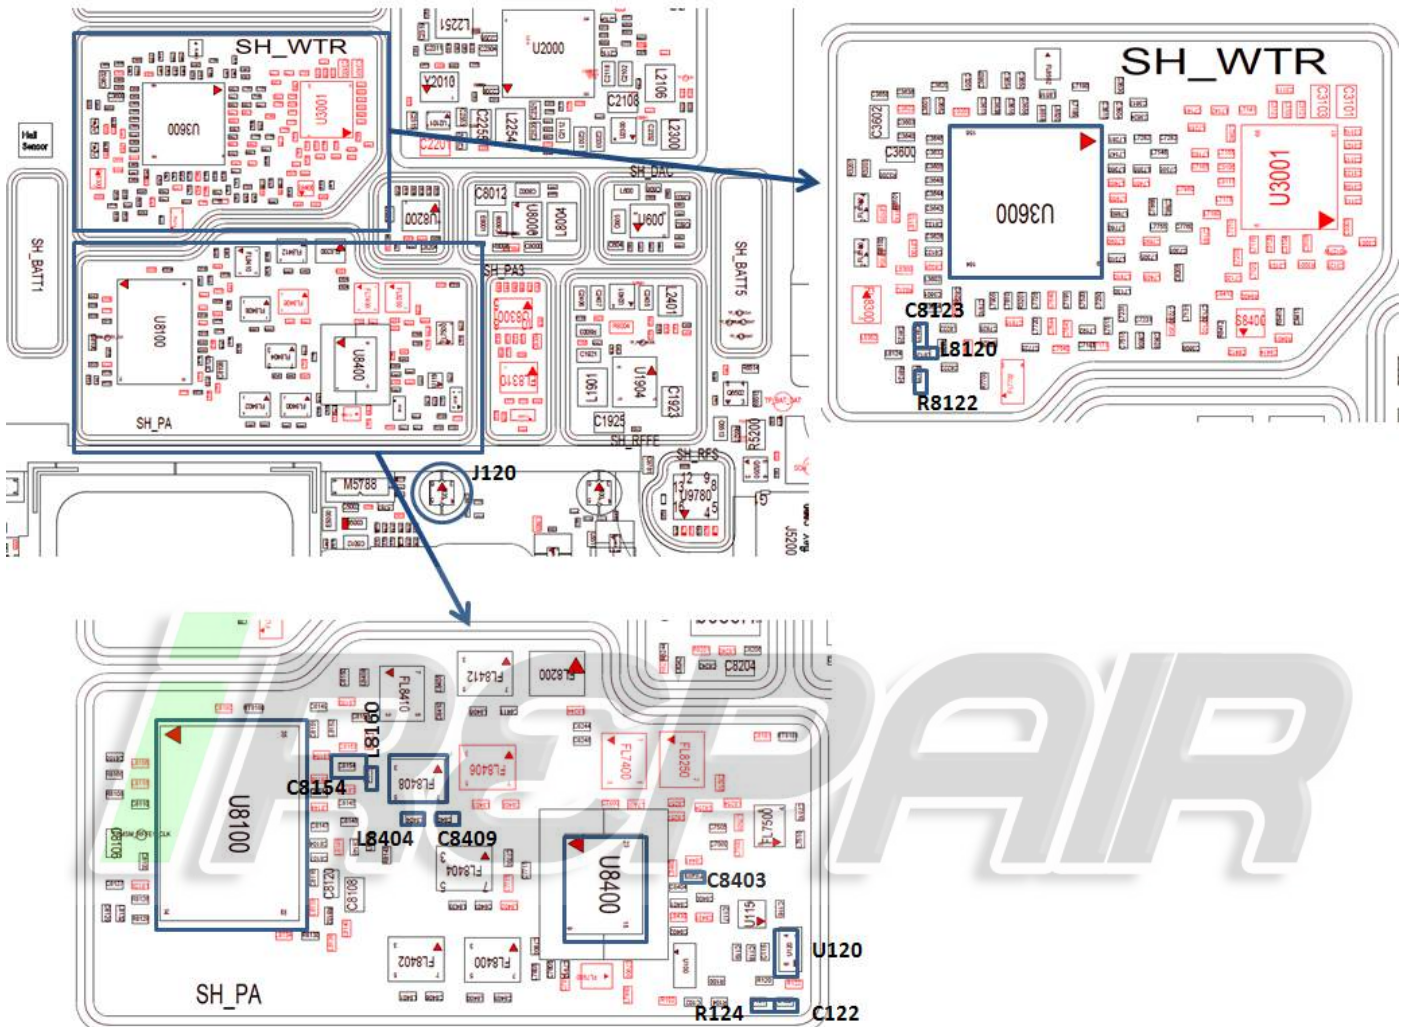


LTE & WCDMA B3 TX

OK

L3 Moto X RF Troubleshooting Guide

RF Test


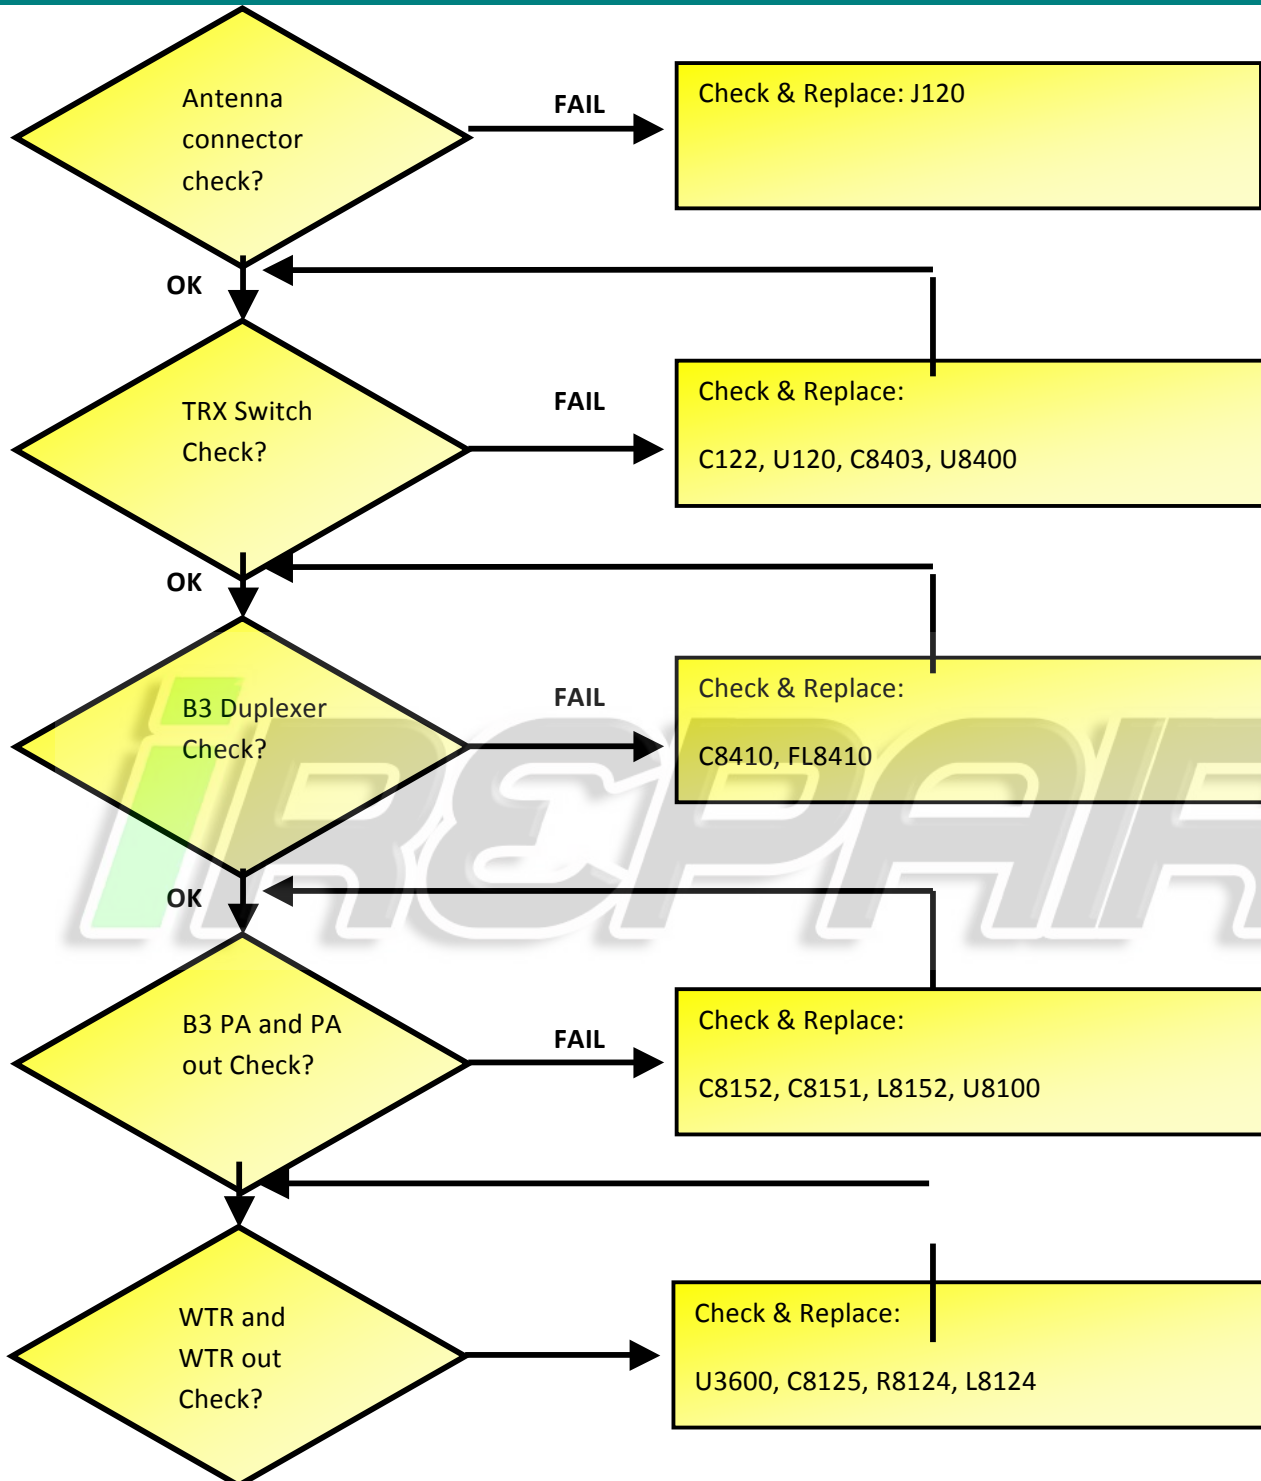


TITLE

MODEL


L3 Moto X RF Troubleshooting Guide

RF Test

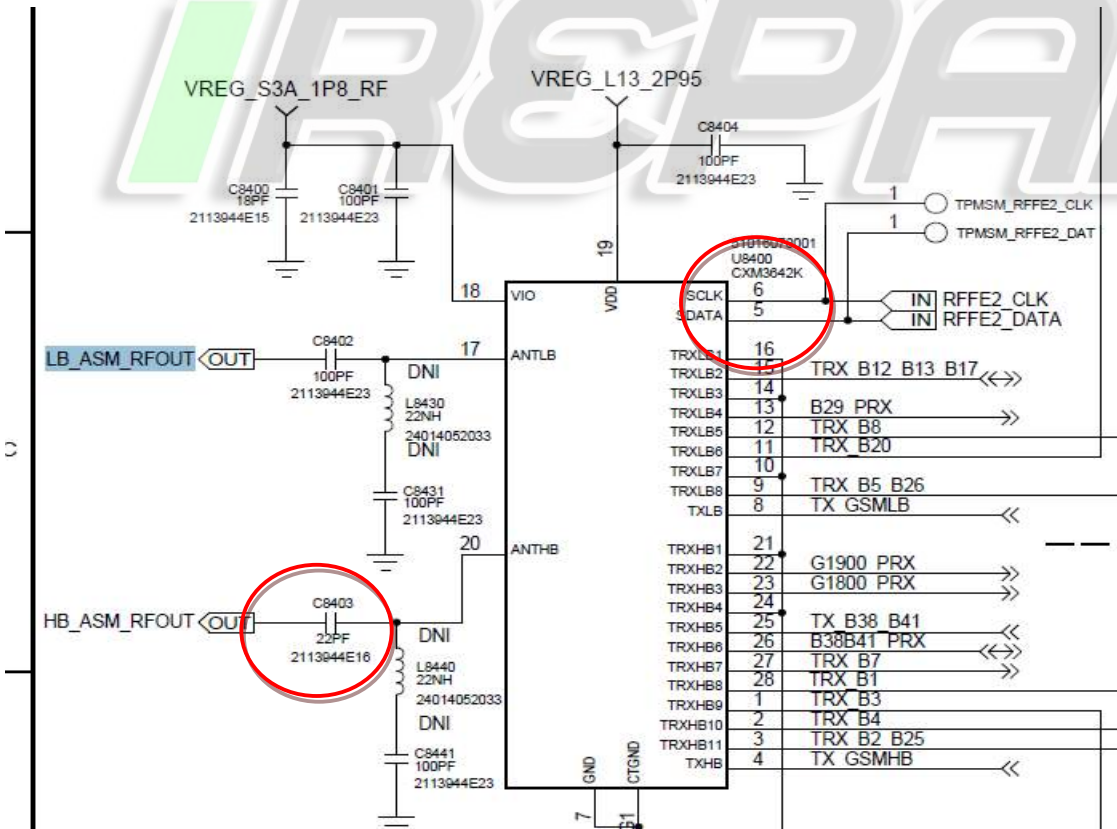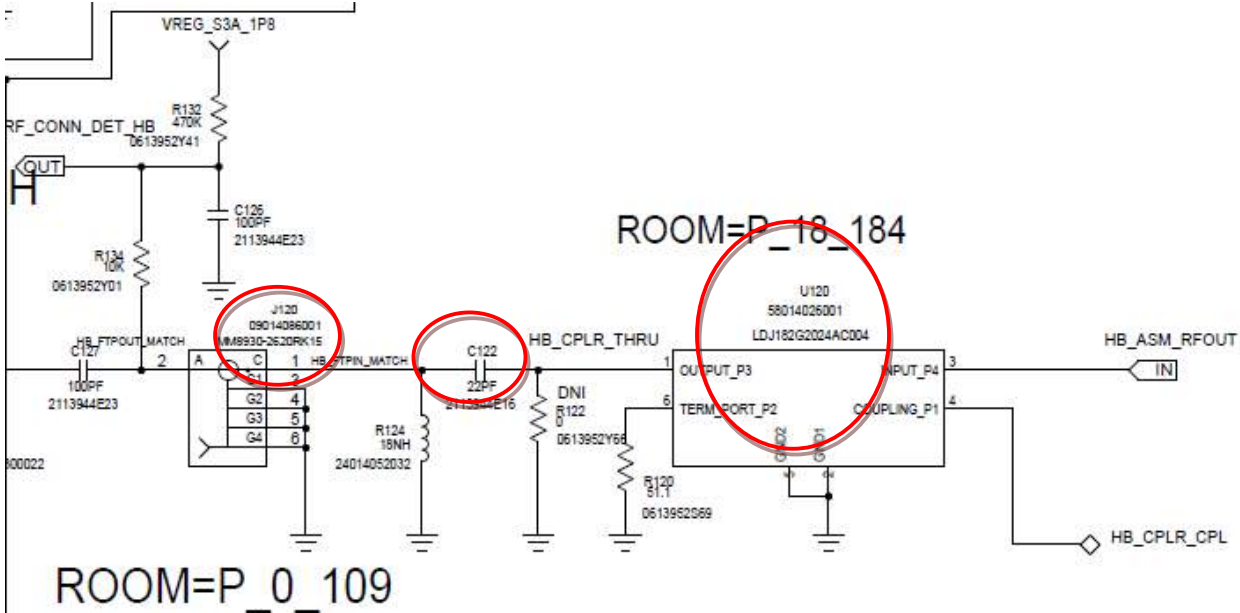


L3 Moto X RF Troubleshooting Guide

RF Test

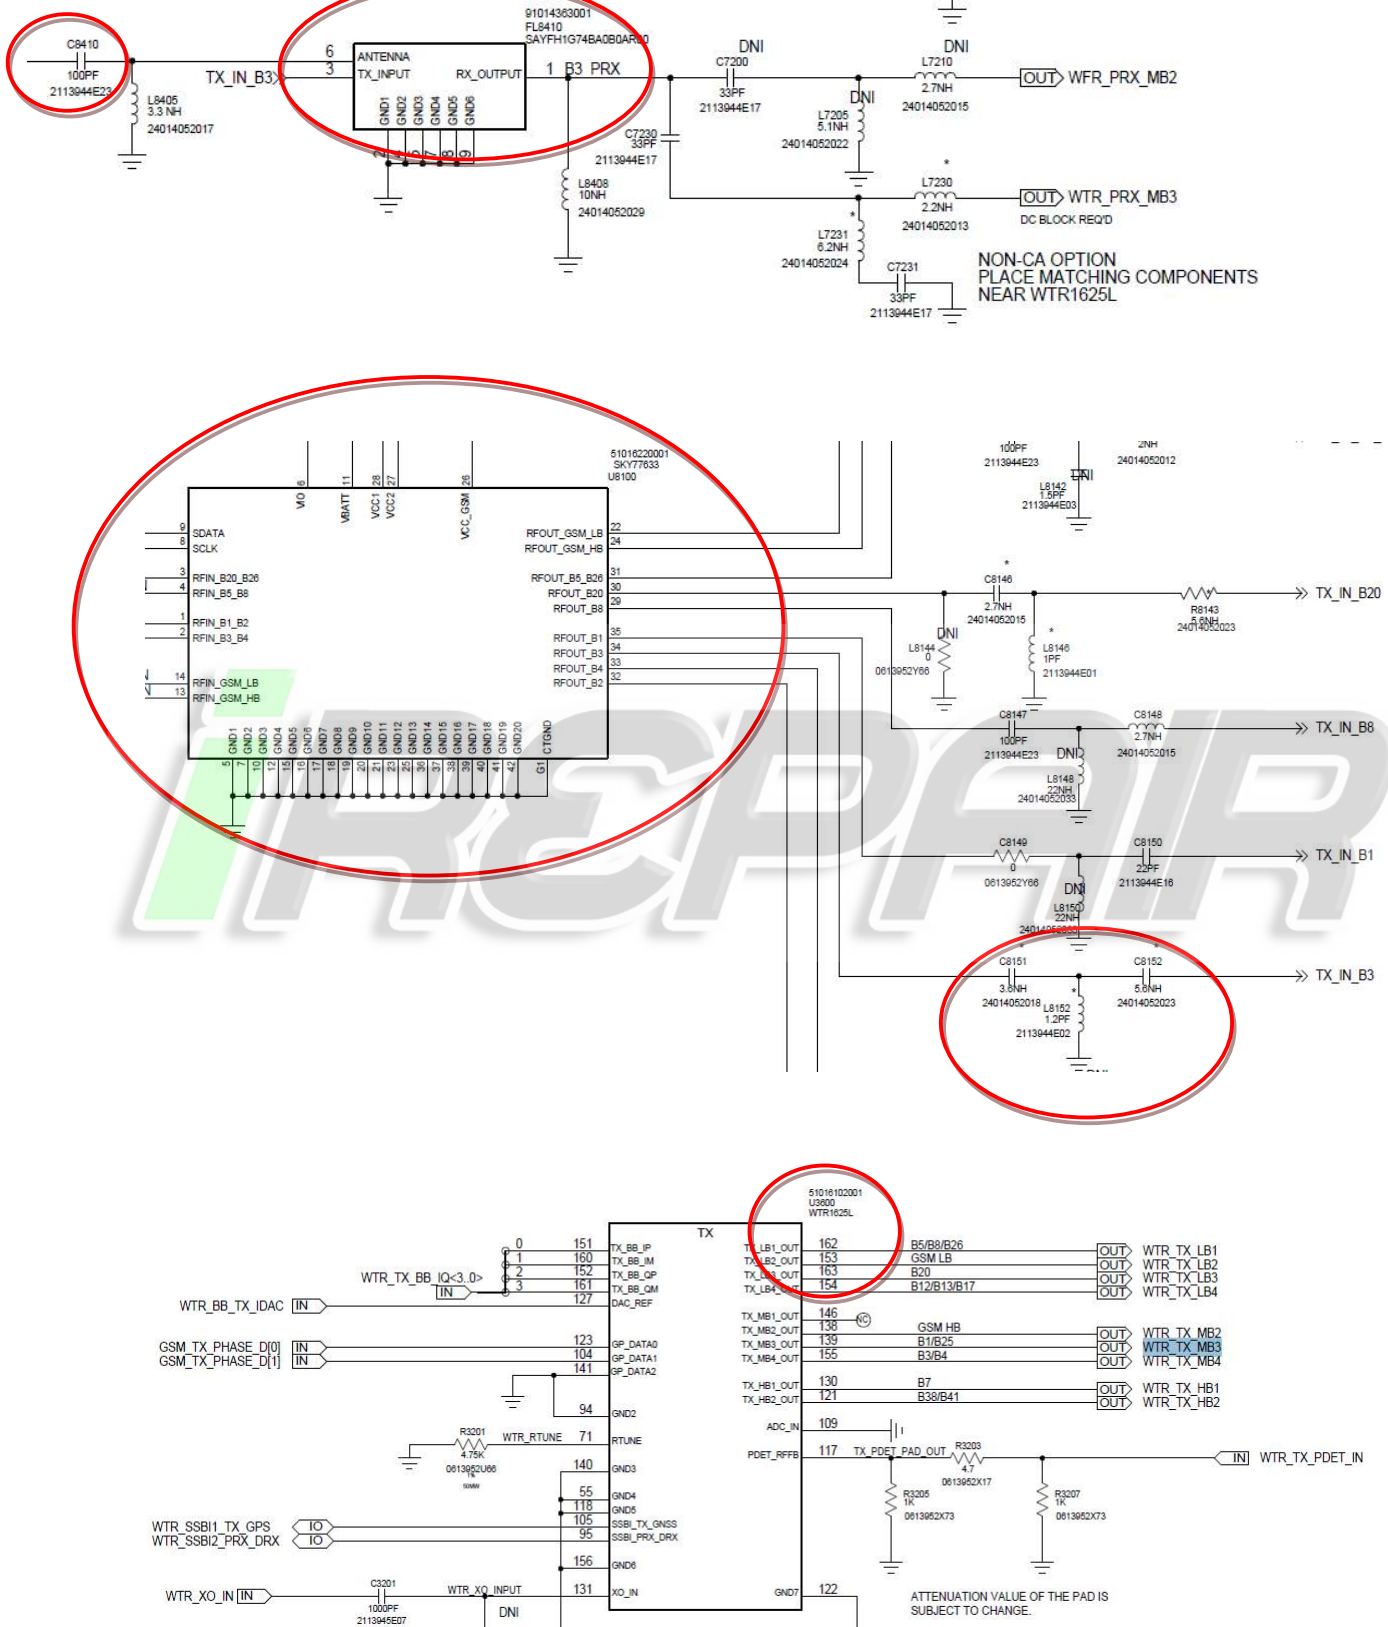

L3 Moto X RF Troubleshooting Guide


RF Test

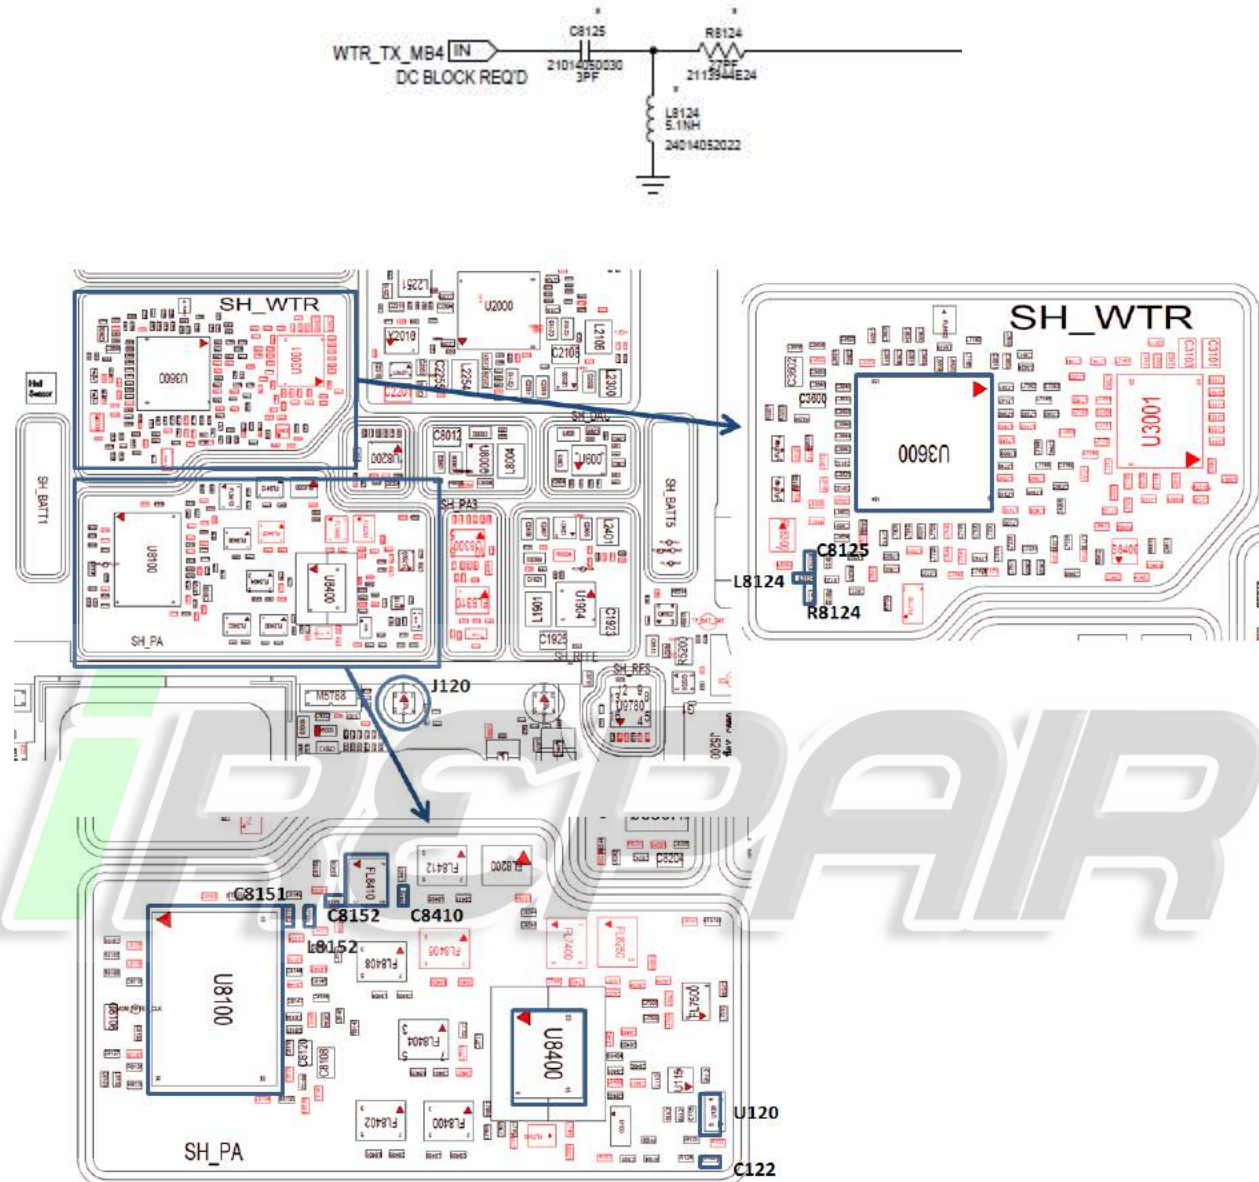

L3 Moto X RF Troubleshooting Guide

RF Test

LTE & WCDMA B4 TX

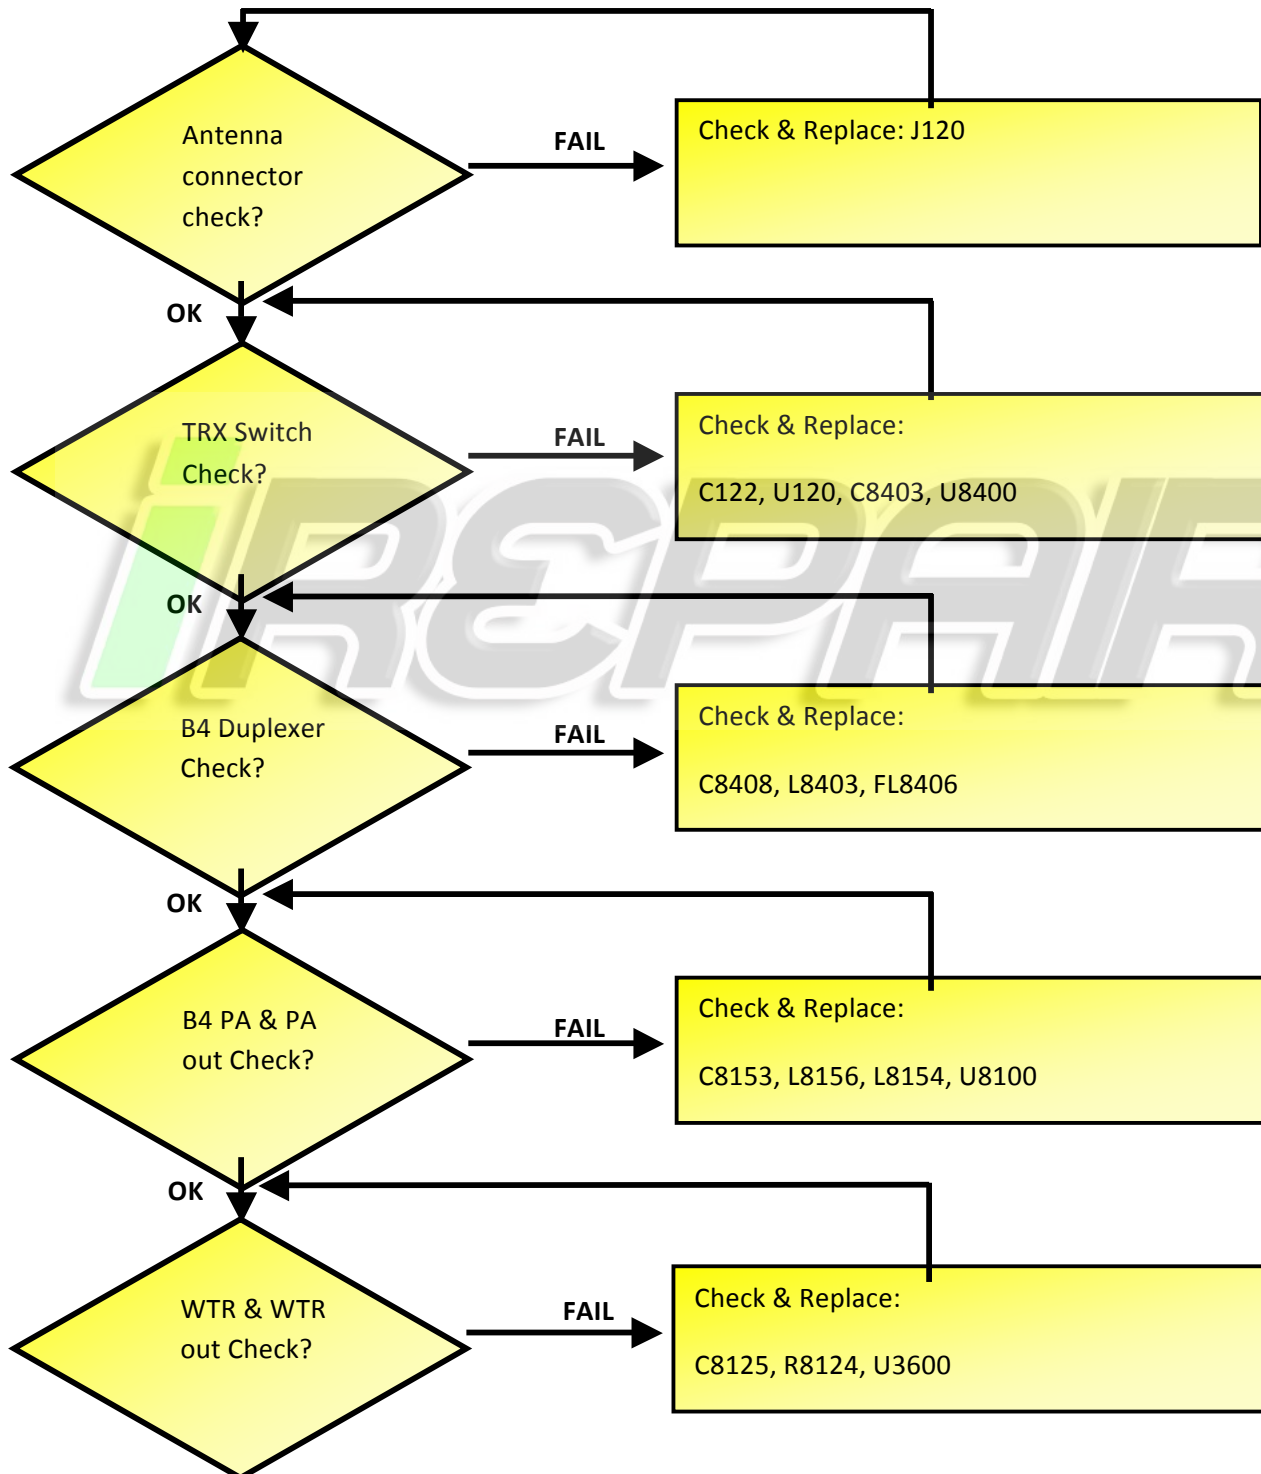


L3 Moto X RF Troubleshooting Guide

RF Test

Antenna Connector Check: J120

TRX Switch Checks: C122, U120, C8403, U8400

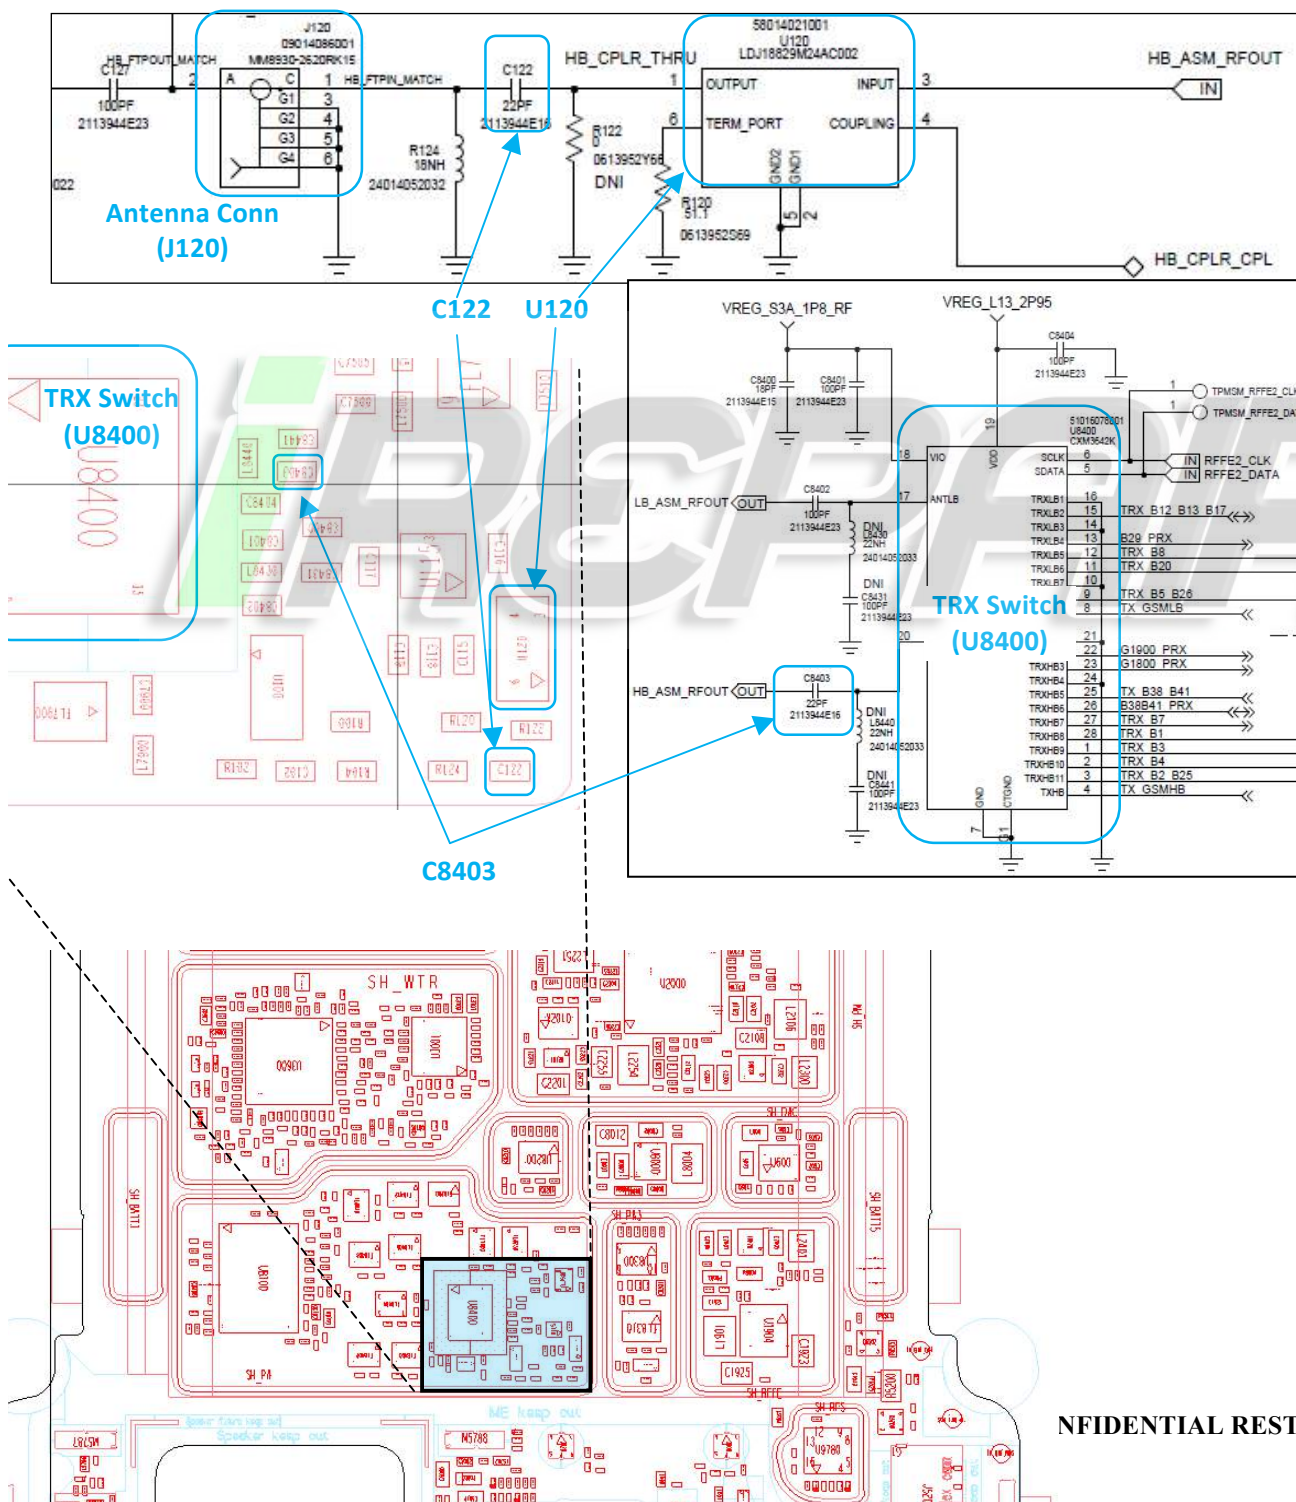


L3 Moto X RF Troubleshooting Guide

RF Test


Antenna Conn

B4 Duplexer Check: C8408, L8403, FL8406 (J120)

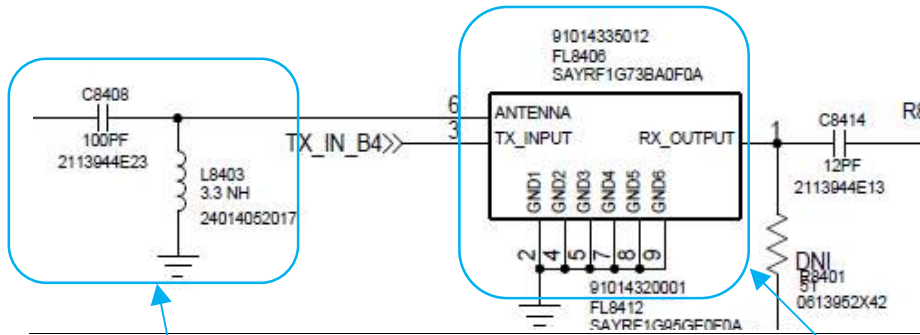

Duplexer Ant Port
Matching
(C8408 & L8403)


B4 Duplexer
(FL8406)

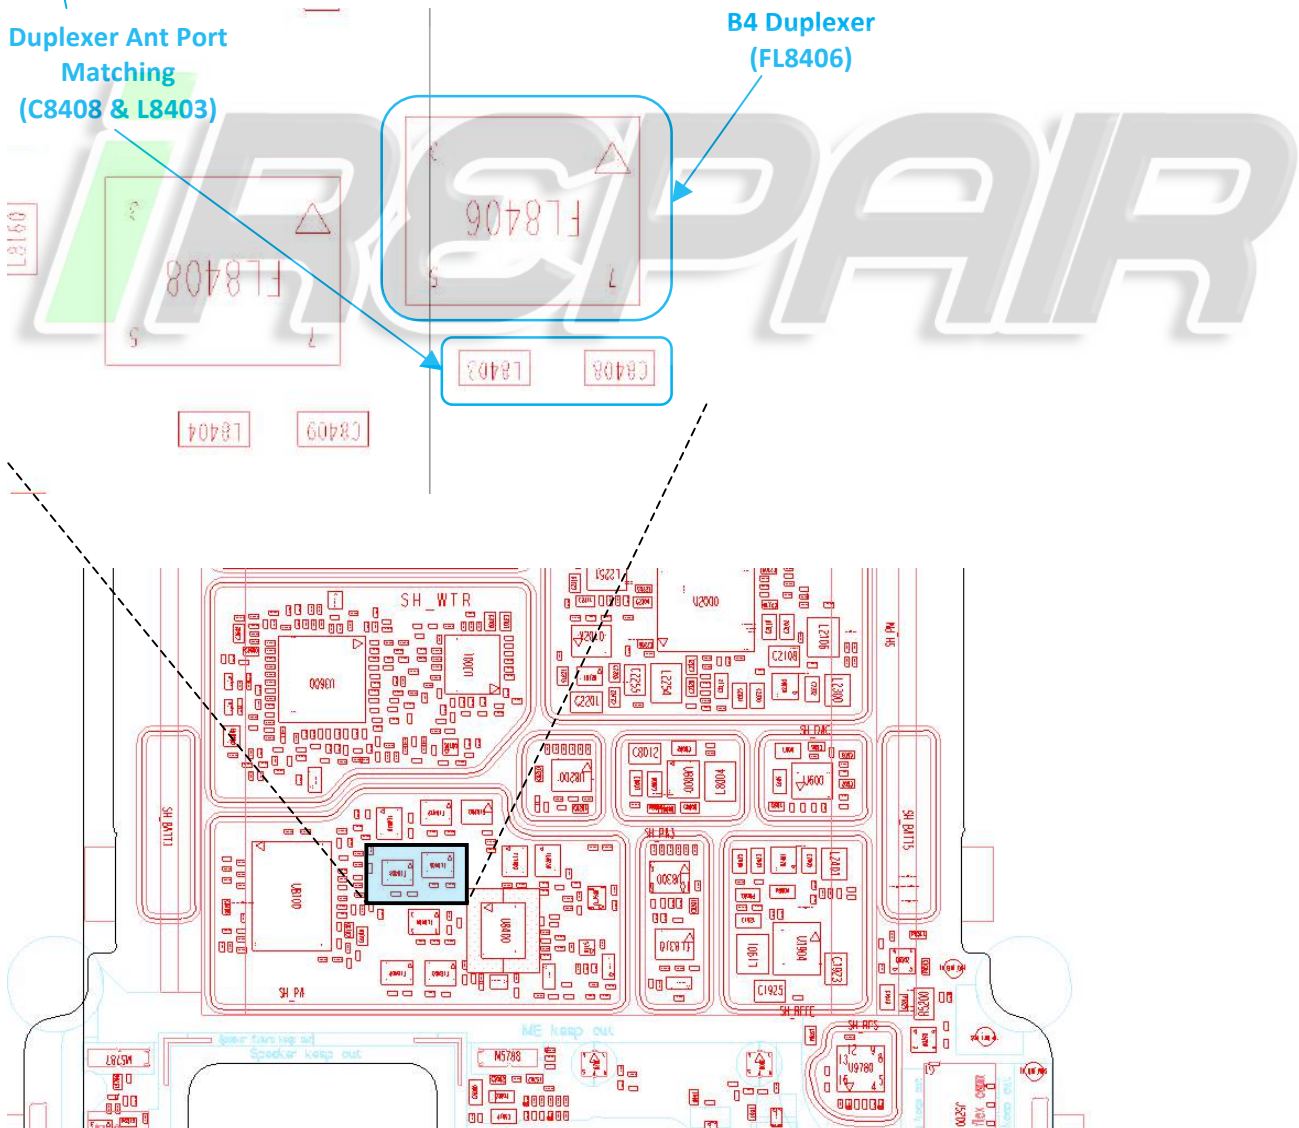

L3 Moto X RF Troubleshooting Guide




RF Test

B4 PA & PA Out Check: C8153, L8156, L8154, U8100

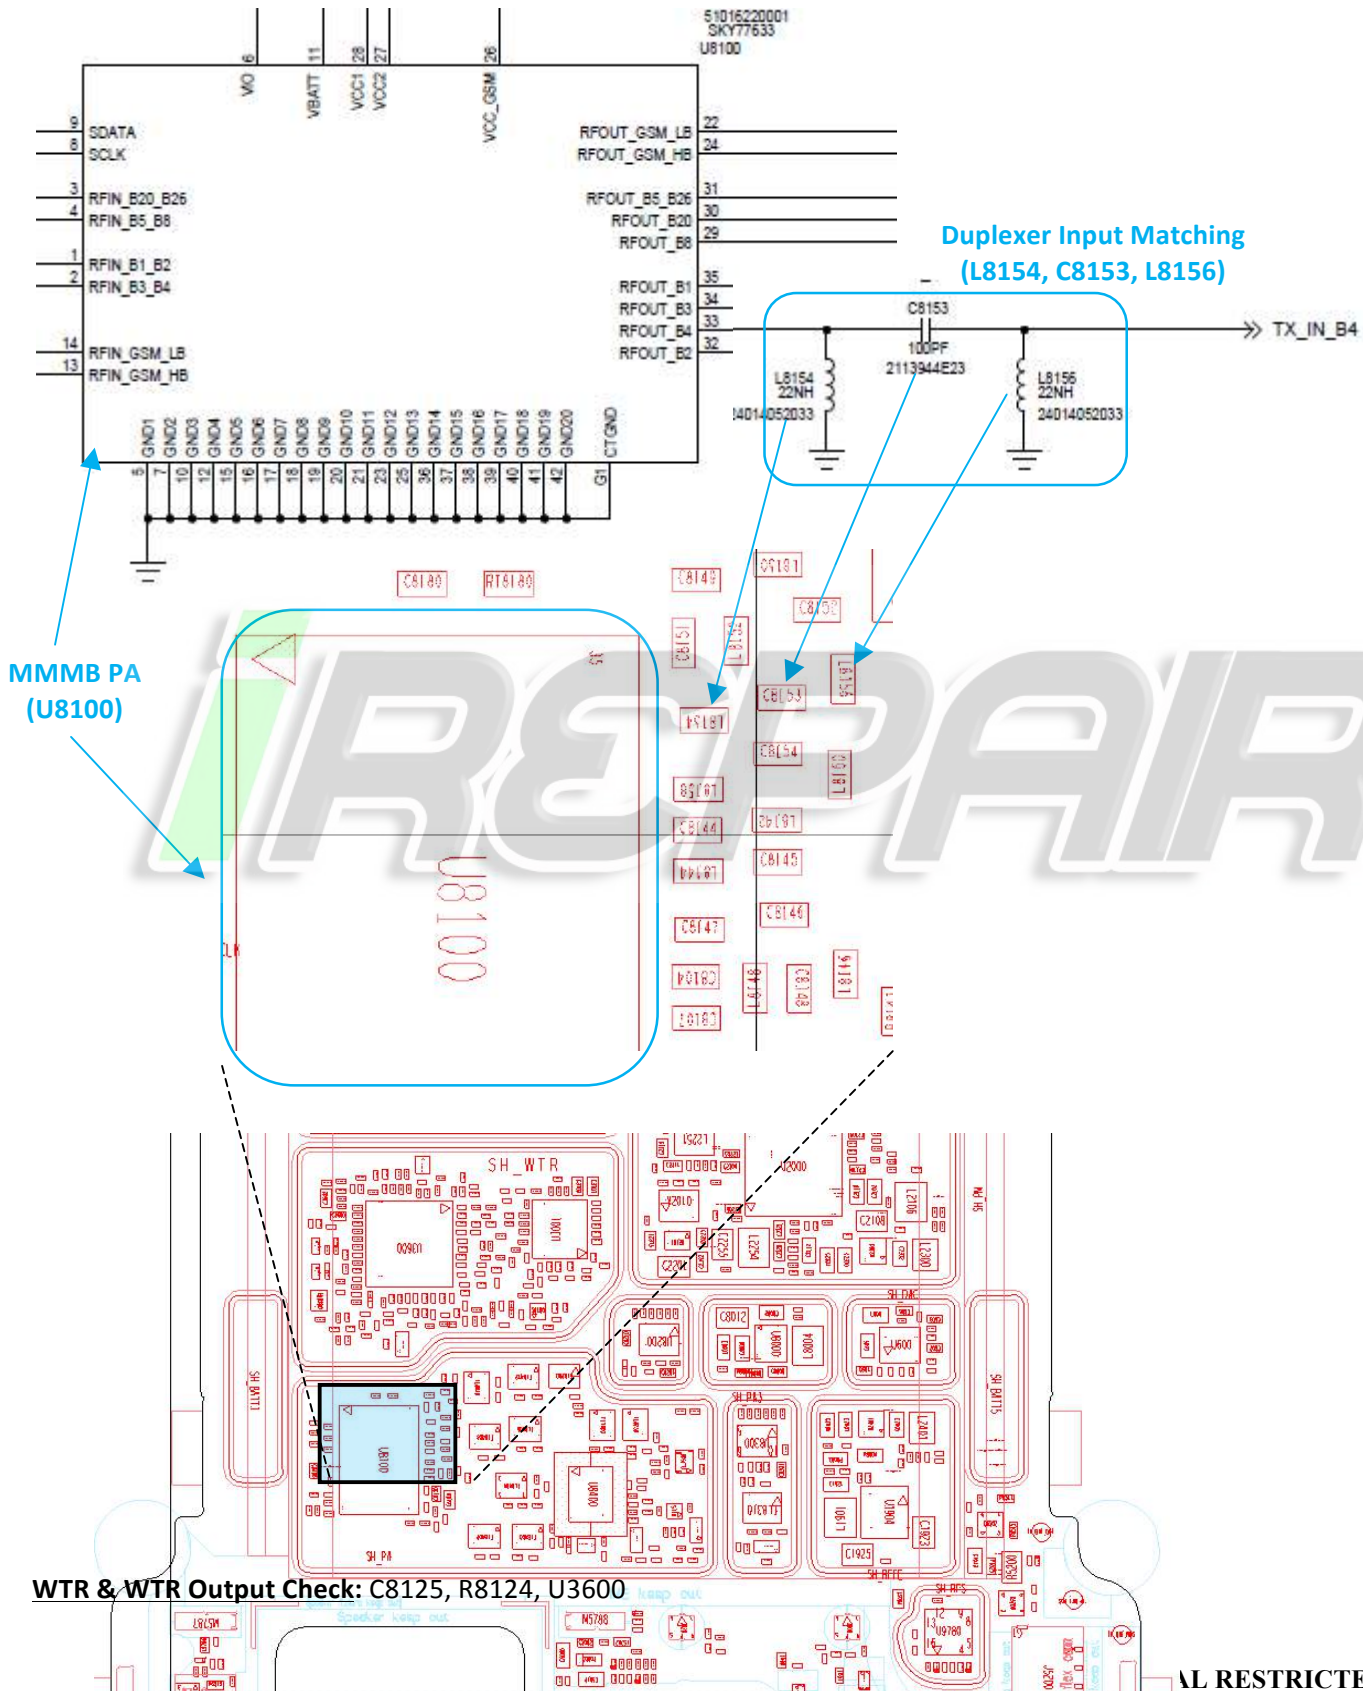


L3 Moto X RF Troubleshooting Guide

RF Test

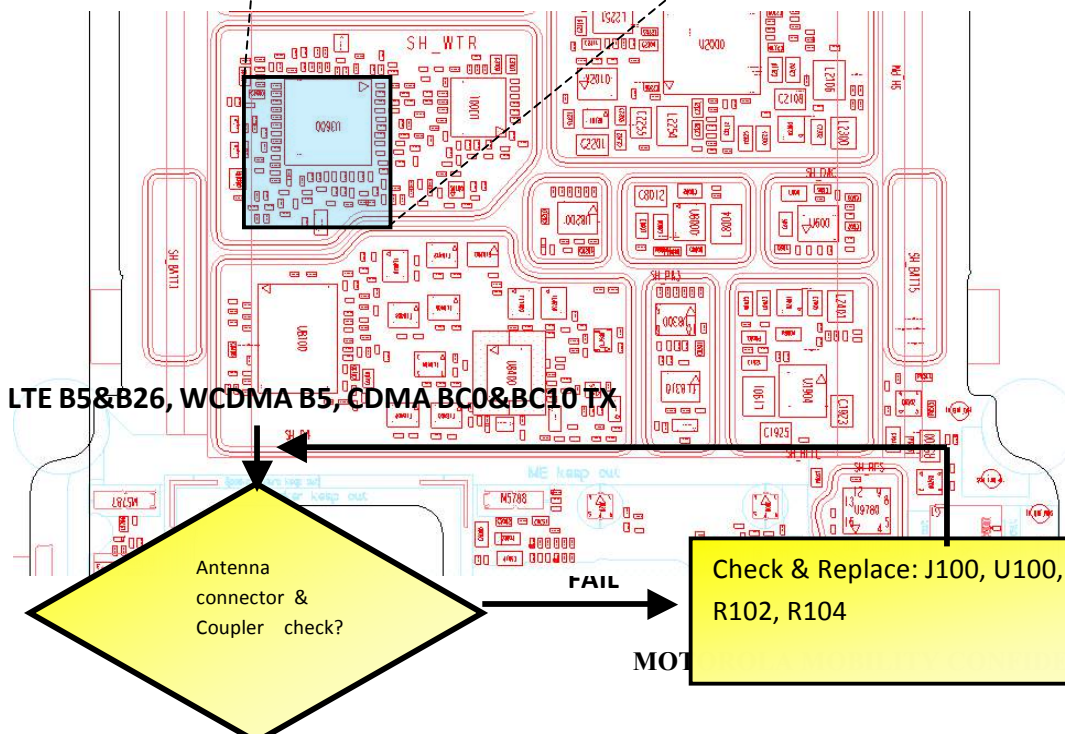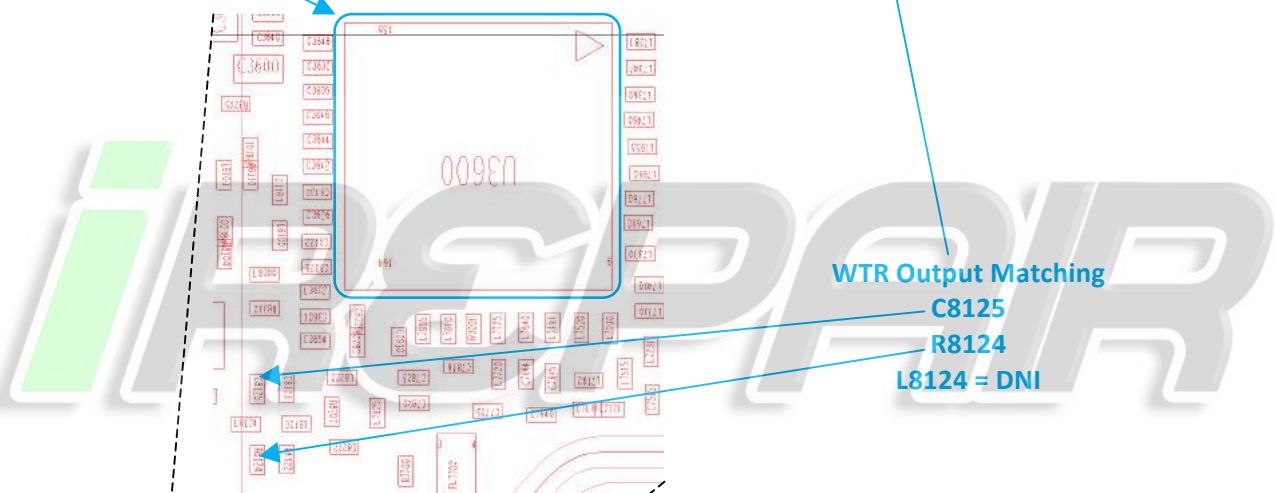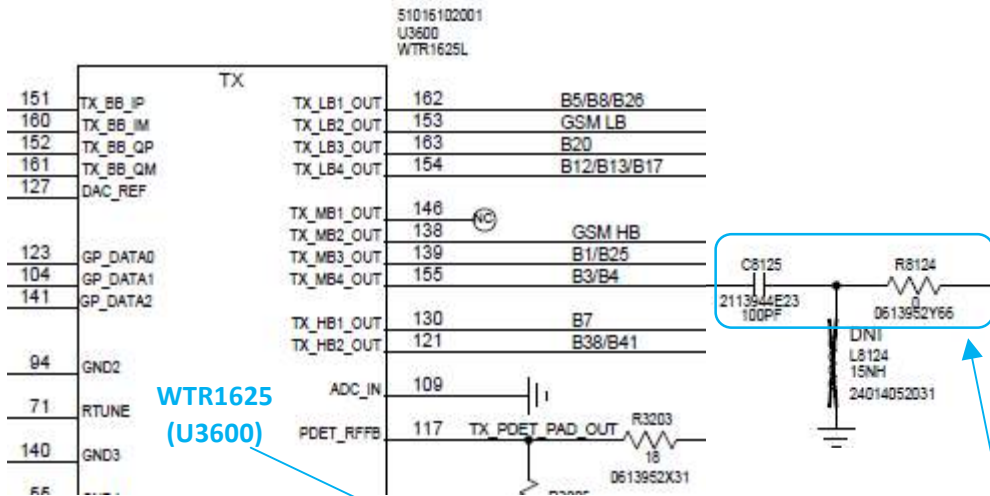

L3 Moto X RF Troubleshooting Guide


RF Test

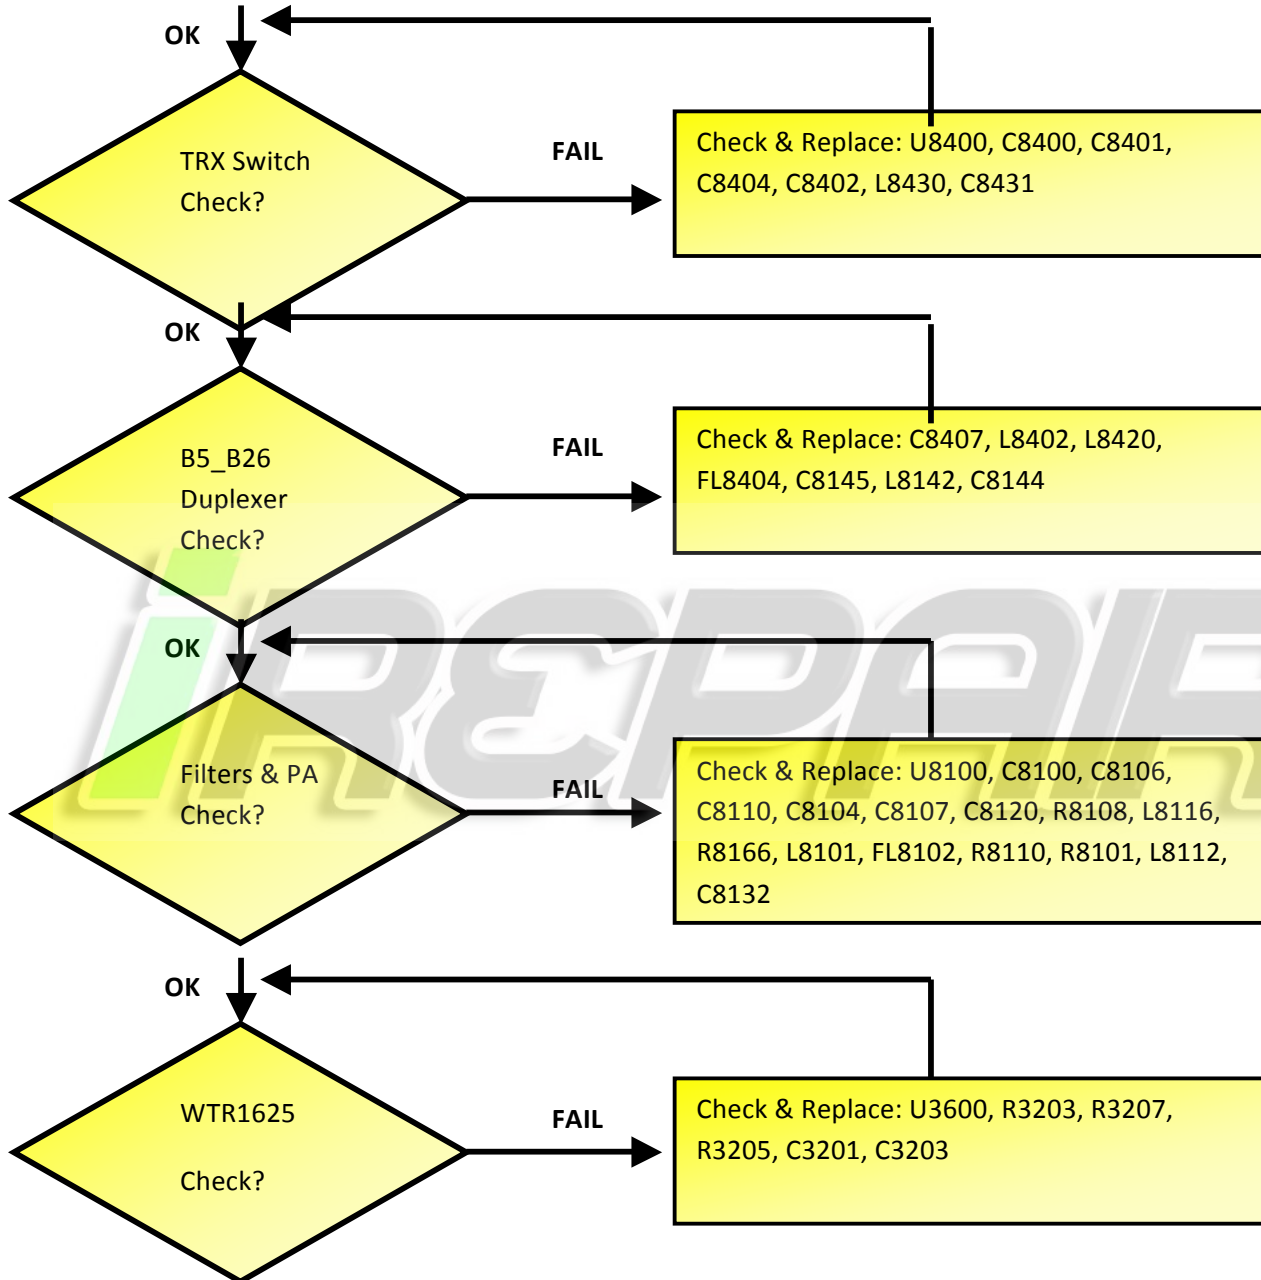

L3 Moto X RF Troubleshooting Guide

RF Test


RF Path from WTR to PA to ASM to RF Jack.

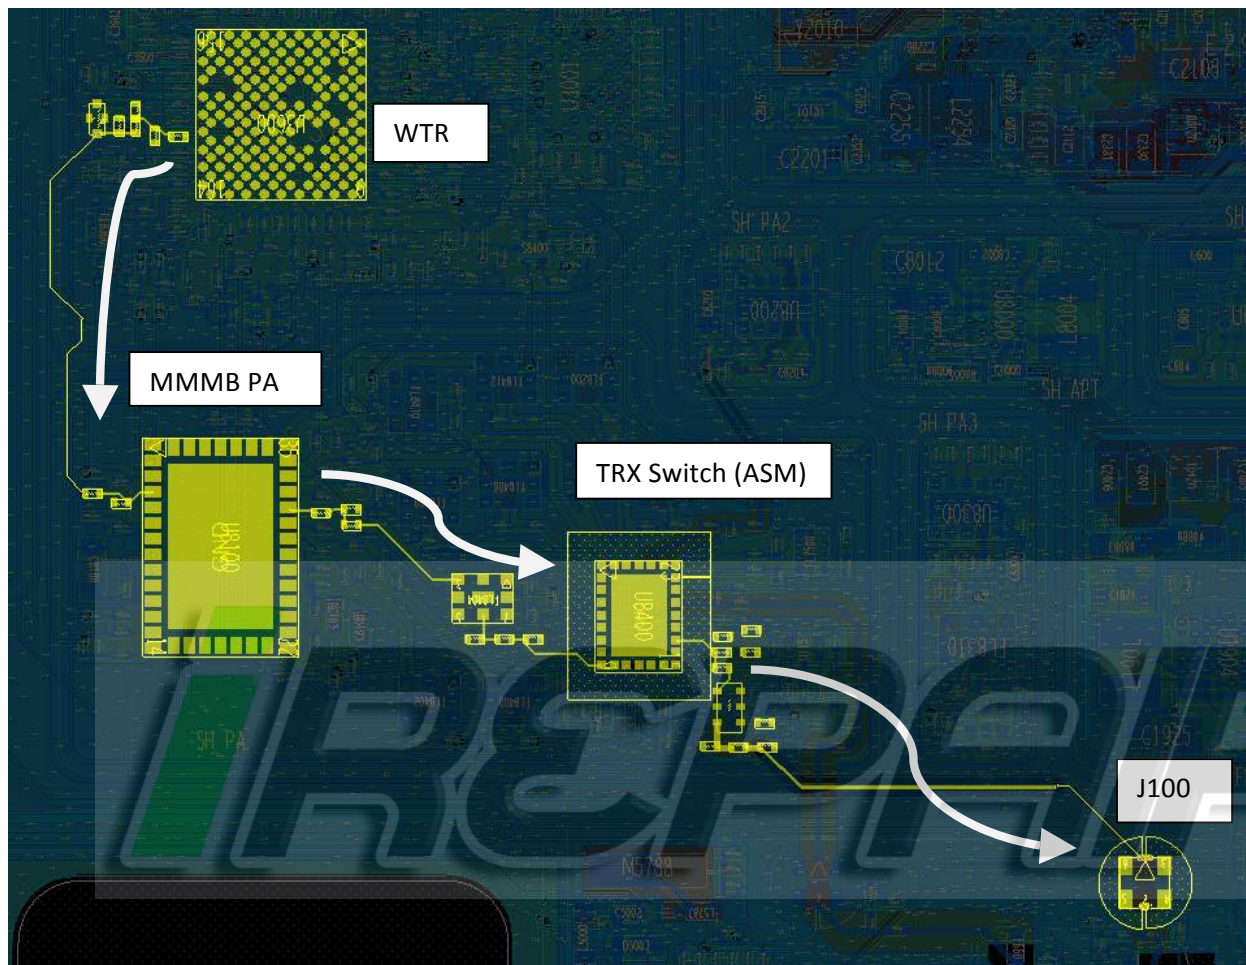

WTR TX Output Schematic:


L3 Moto X RF Troubleshooting Guide

RF Test

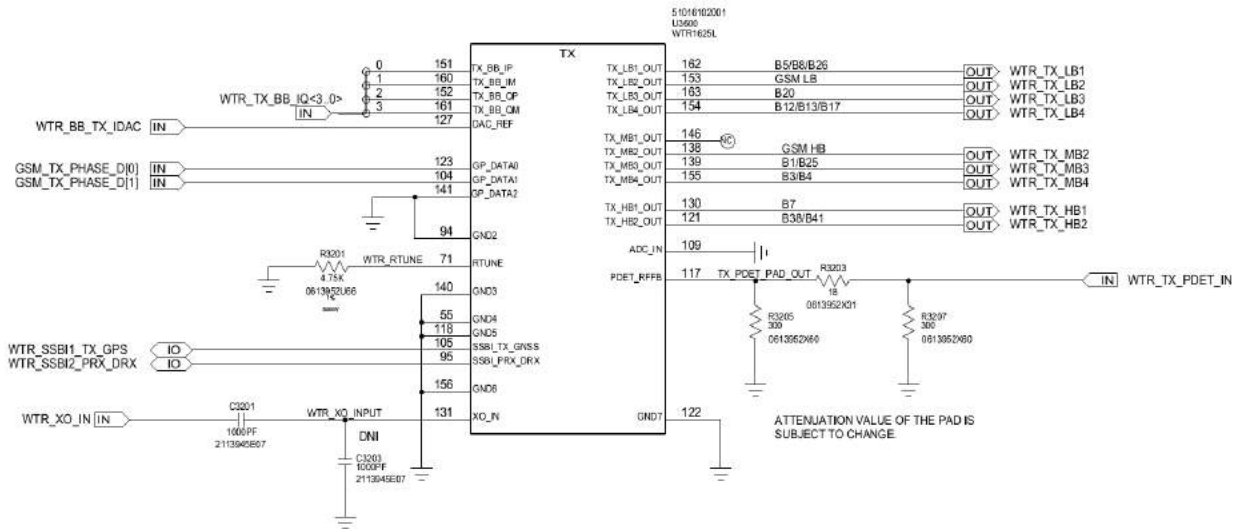

TX input and output of RF MMBB PA:

REF 8100-8199 ROOM=P_8_150

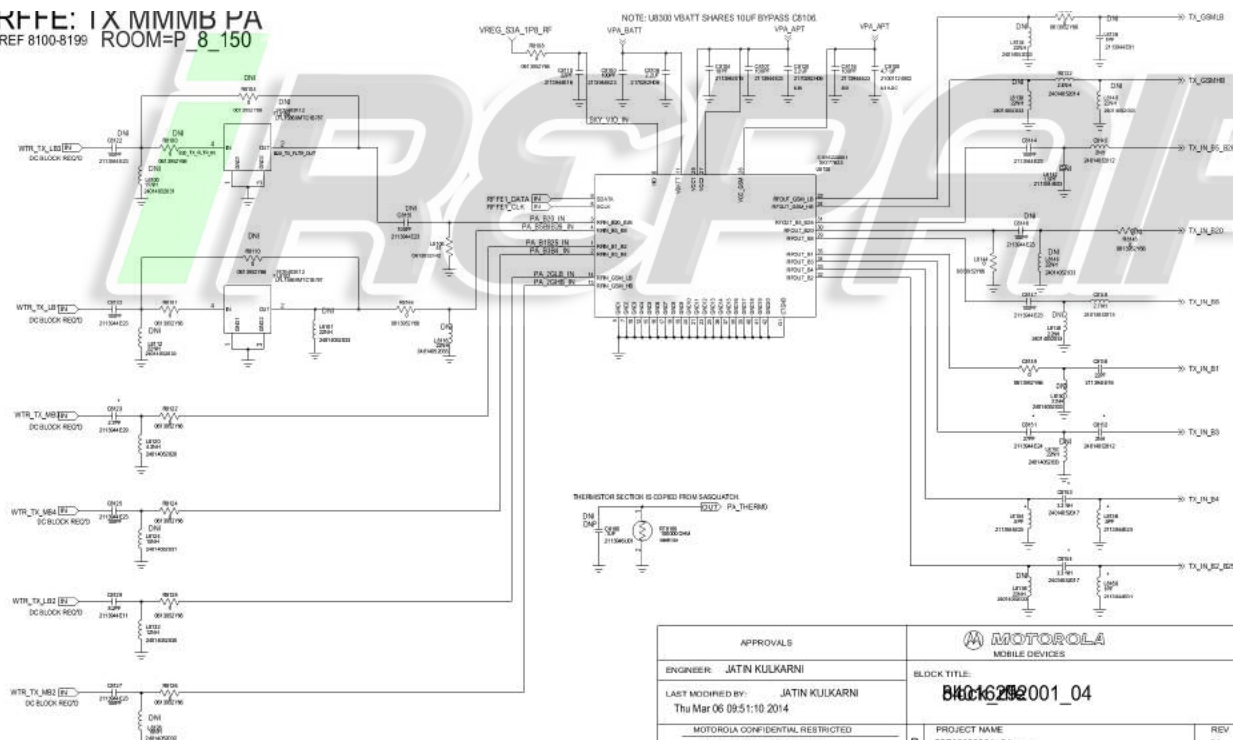


TX RF input and output of TRX switch (Antenna Switch Module) ASM.

L3 Moto X RF Troubleshooting Guide

RF Test

RFFE: TRX SWITCH



REF 7100-8499

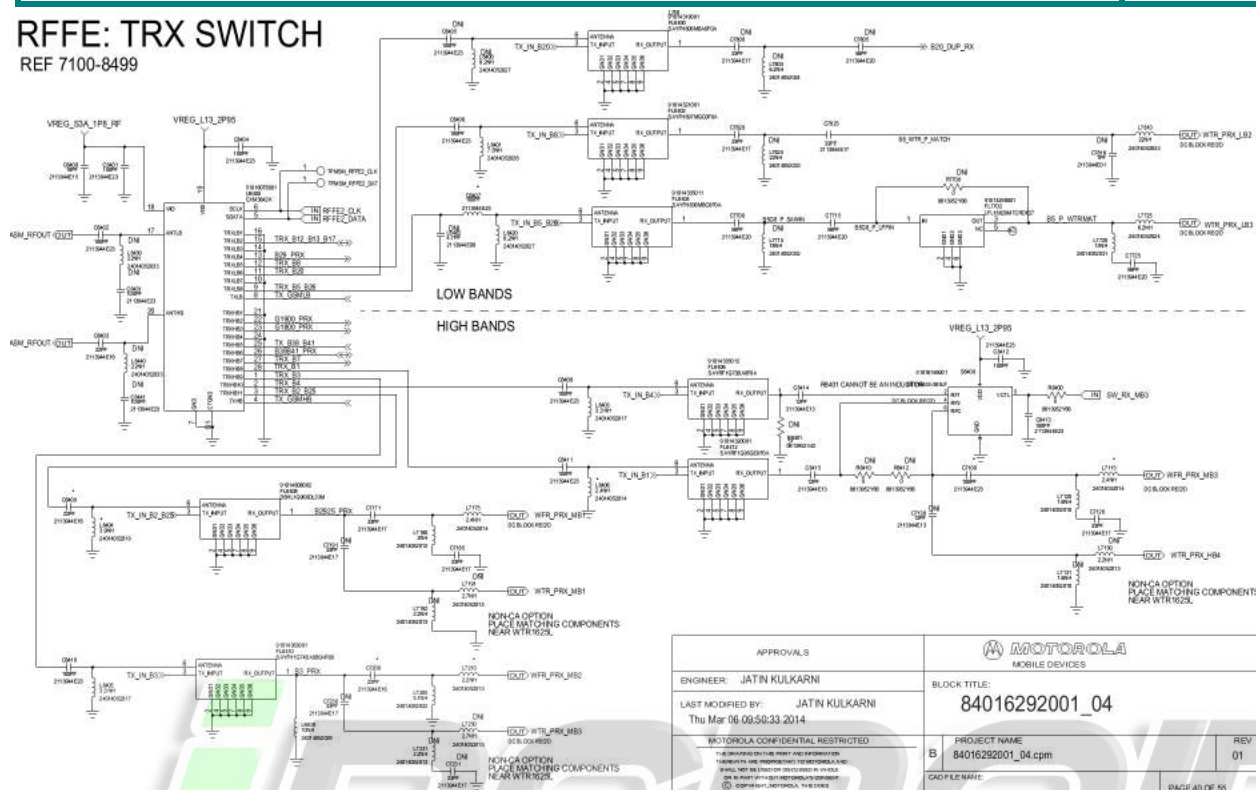

TX coupler and Antenna Jack for Conducted Power:

MAIN LOW BAND ANTENNA (GSM/UTMS/LTE)


ROOM=P 18 184

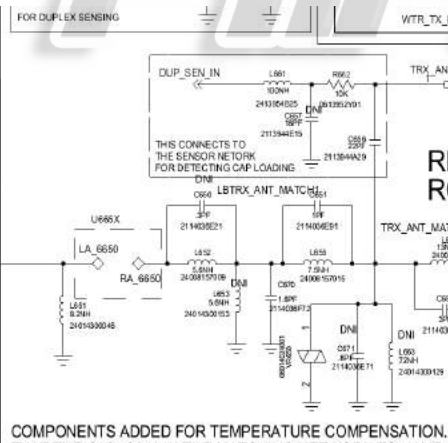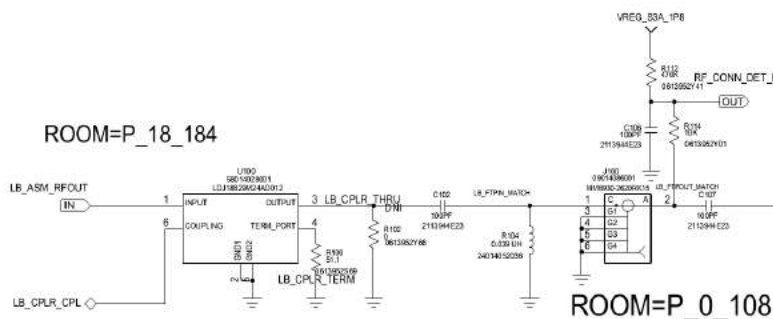

L3 Moto X RF Troubleshooting Guide

RF Test

LTE B7 TX


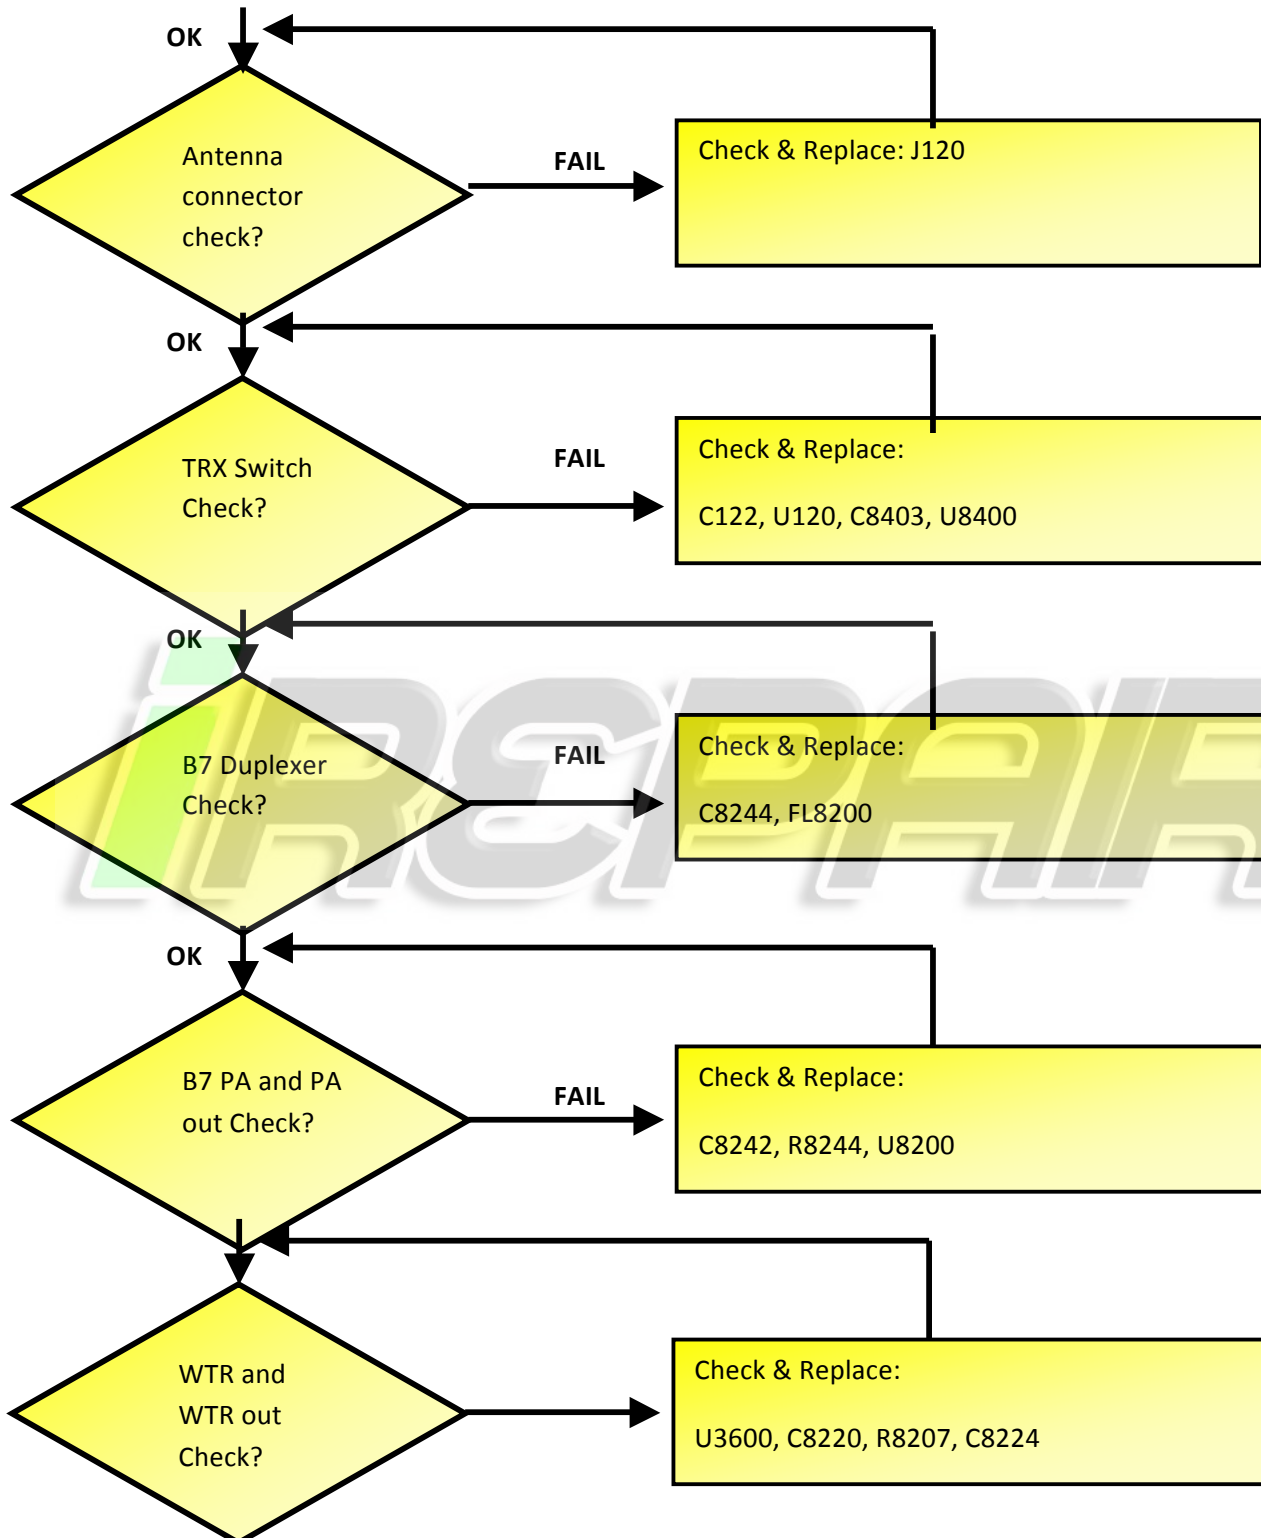


TITLE

MODEL



L3 Moto X RF Troubleshooting Guide

RF Test

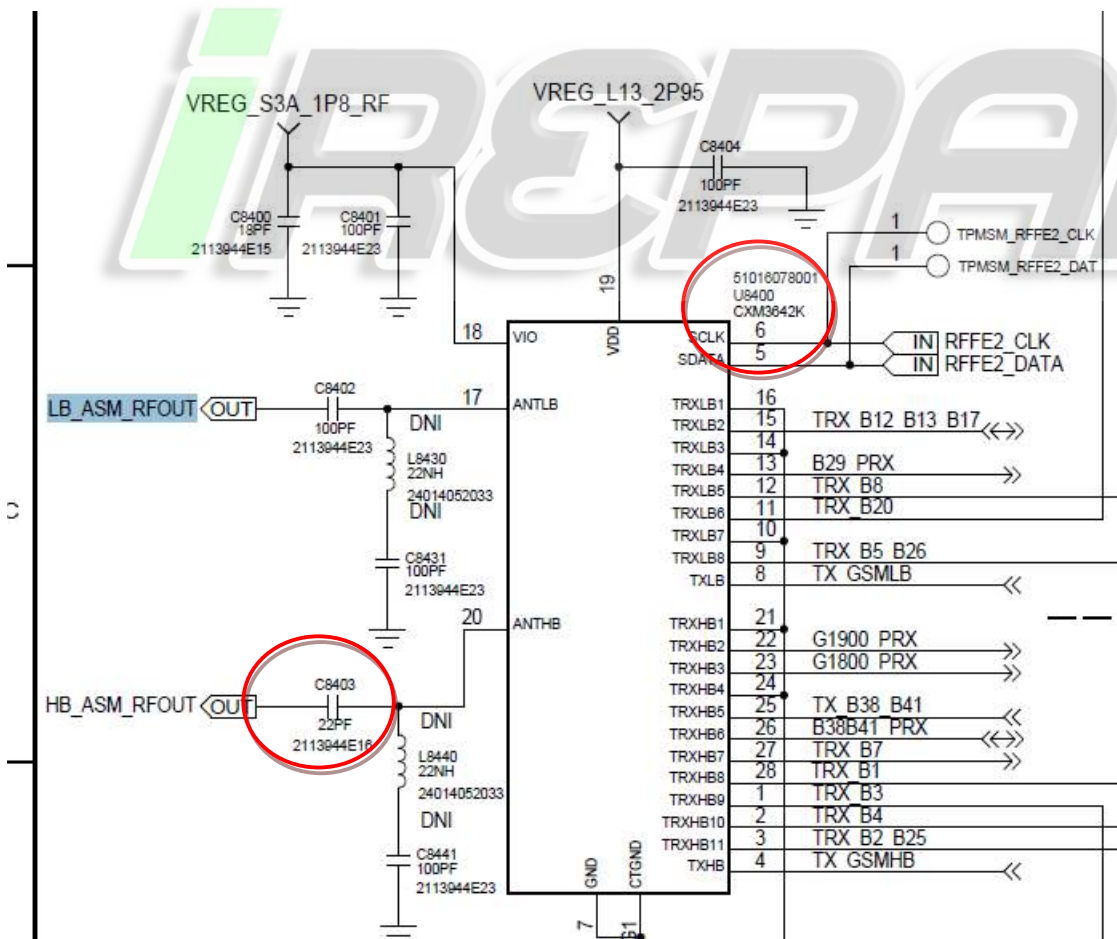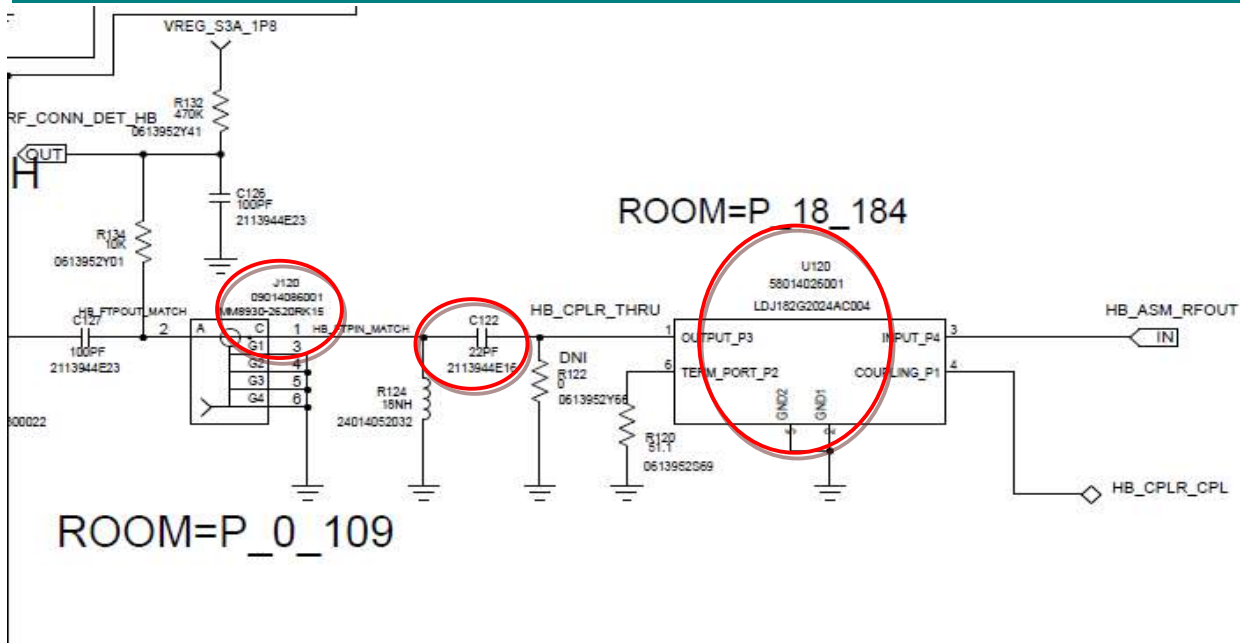

L3 Moto X RF Troubleshooting Guide

RF Test

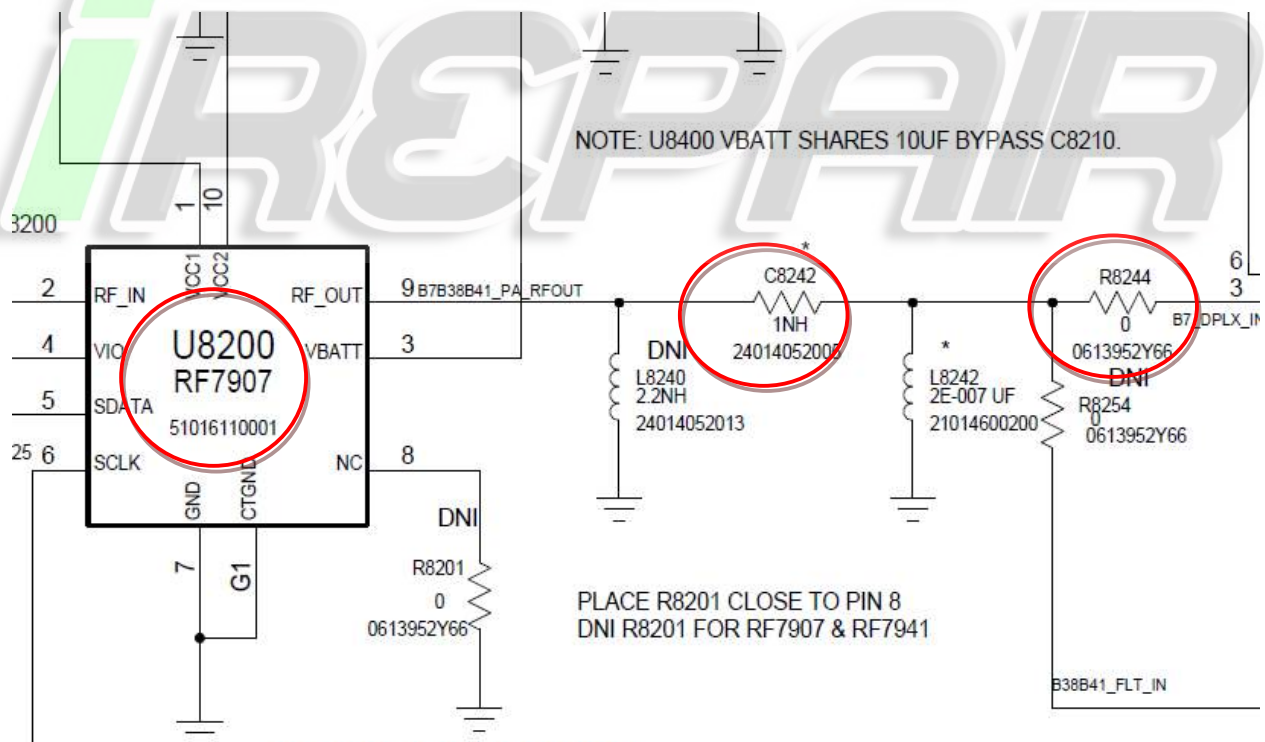
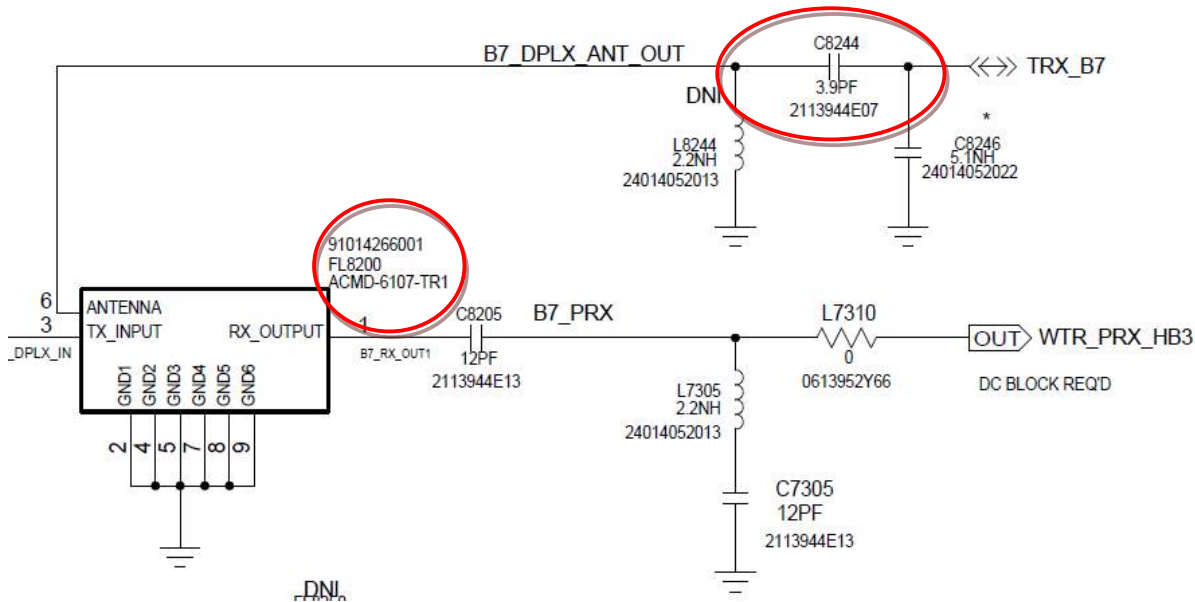




TITLE


MODEL

RF Test

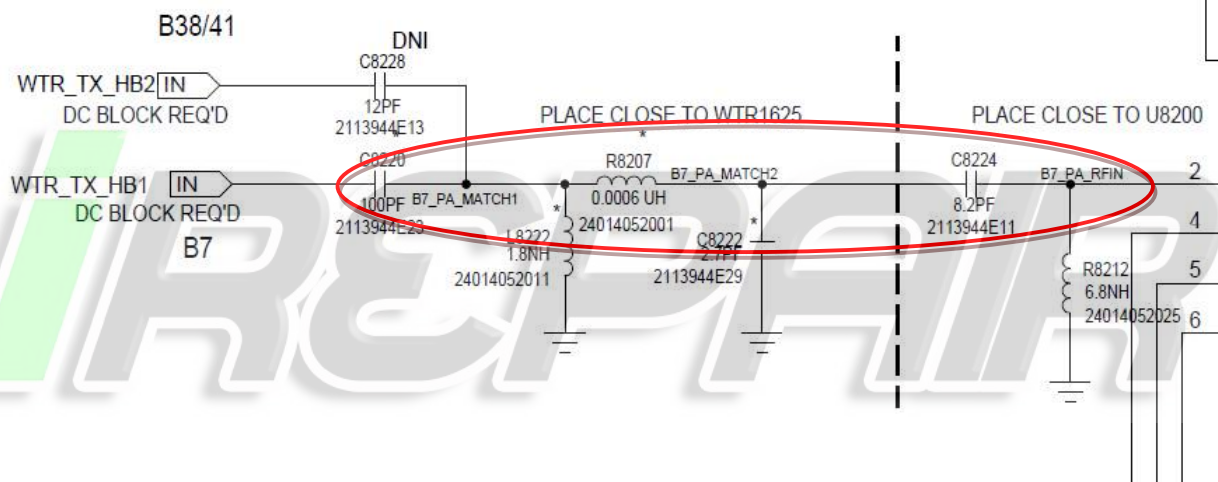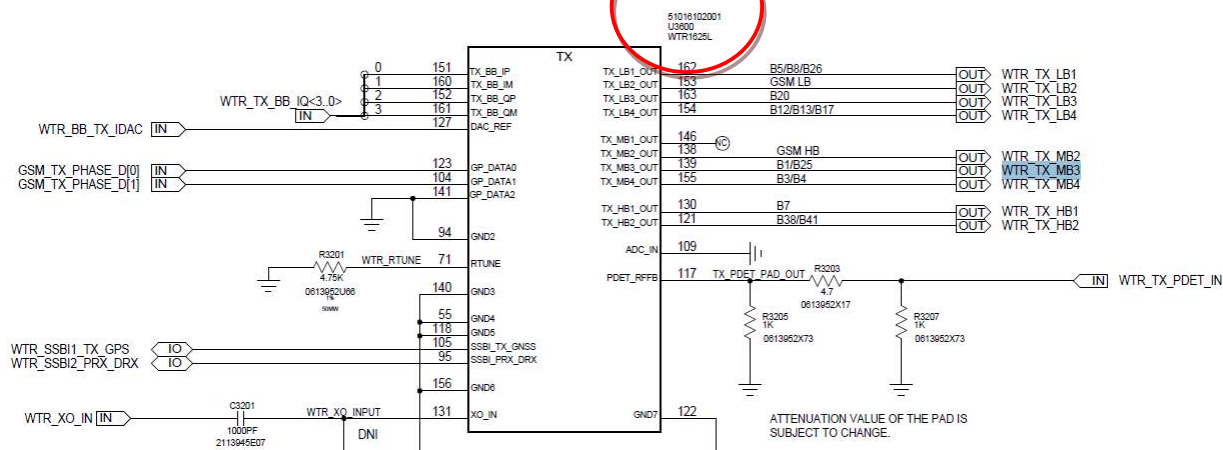


L3 Moto X RF Troubleshooting Guide

RF Test

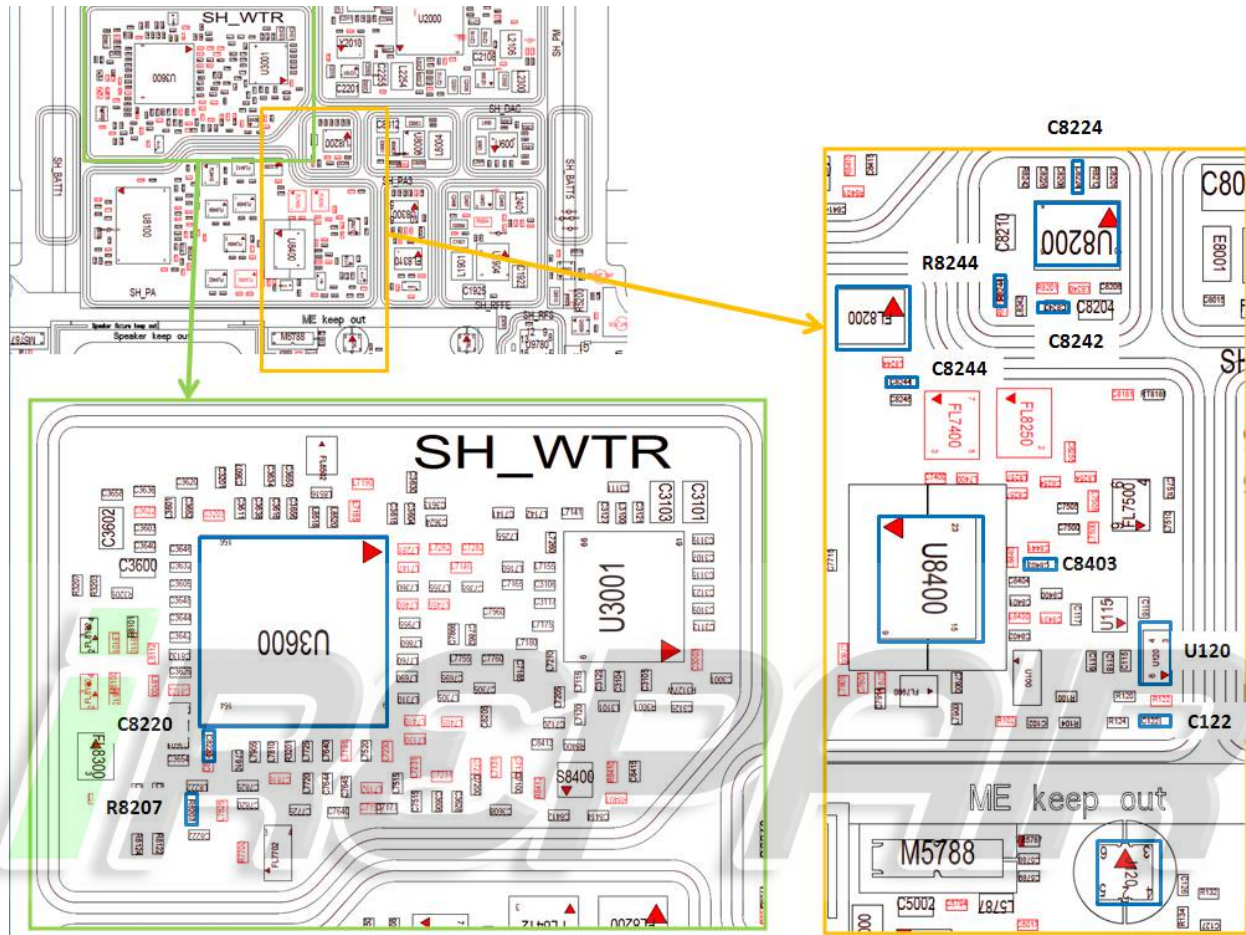


LTE & WCDMA B8 TX

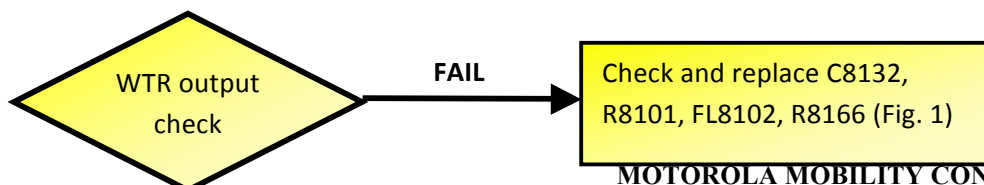




L3 Moto X RF Troubleshooting Guide

RF Test

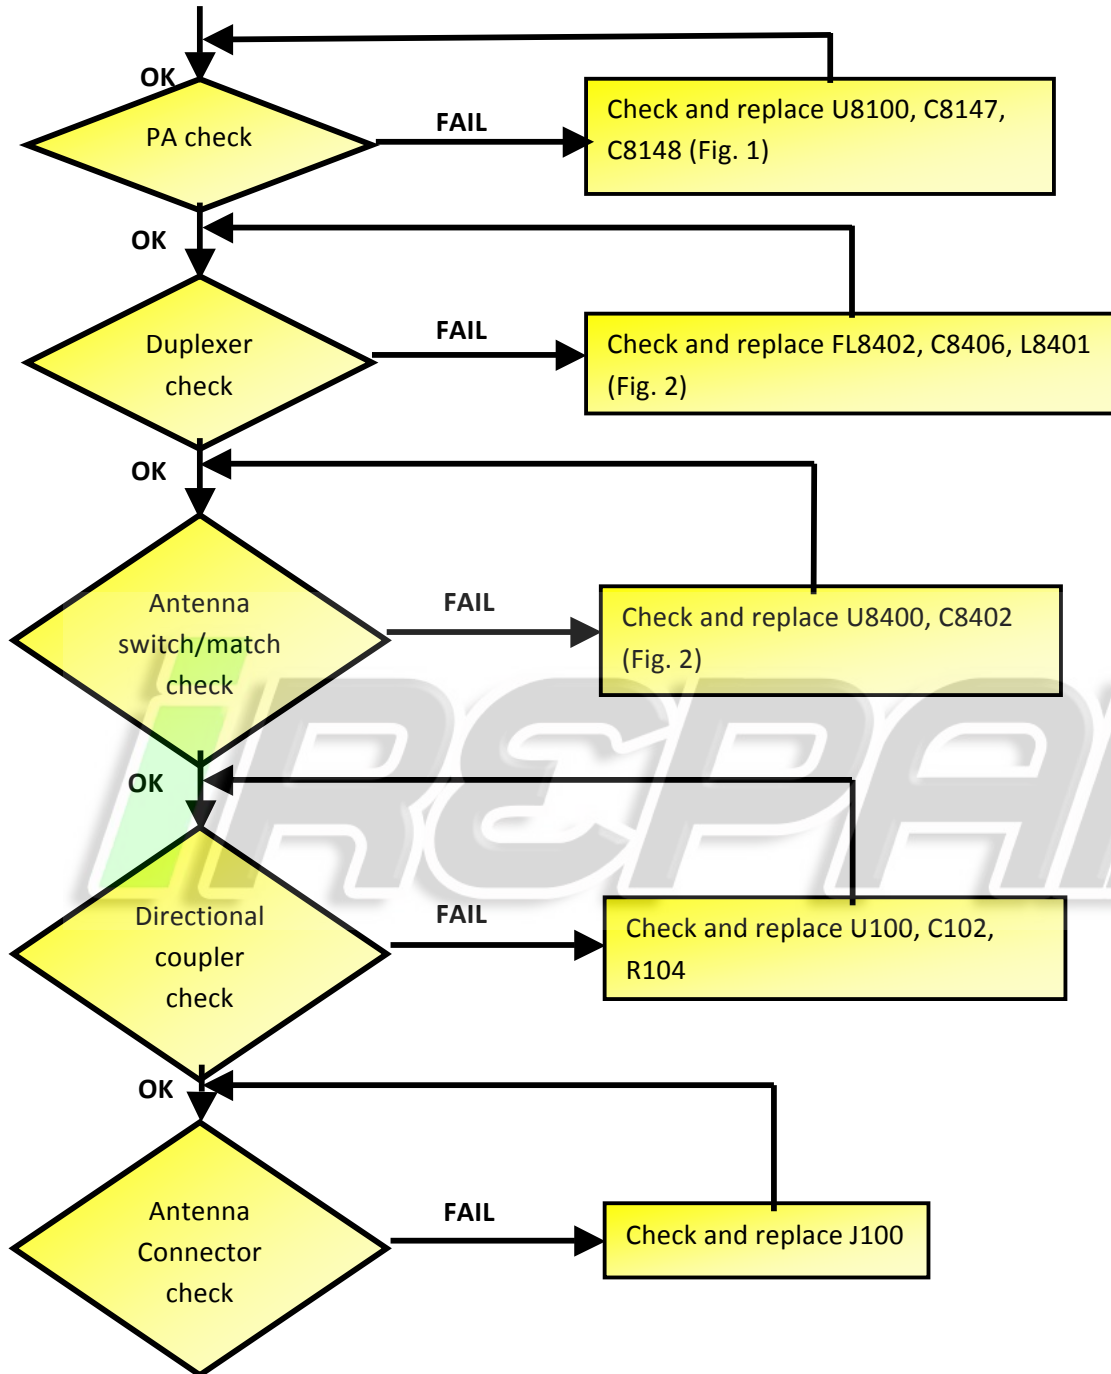

L3 Moto X RF Troubleshooting Guide


RF Test

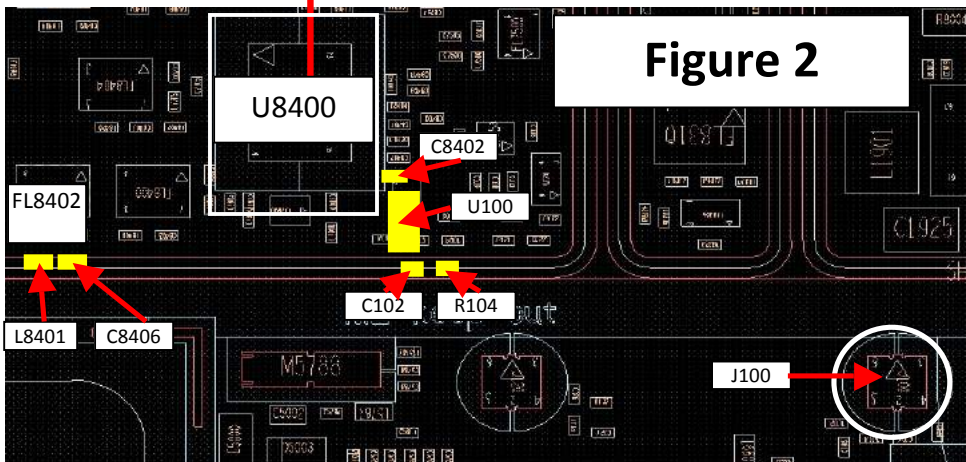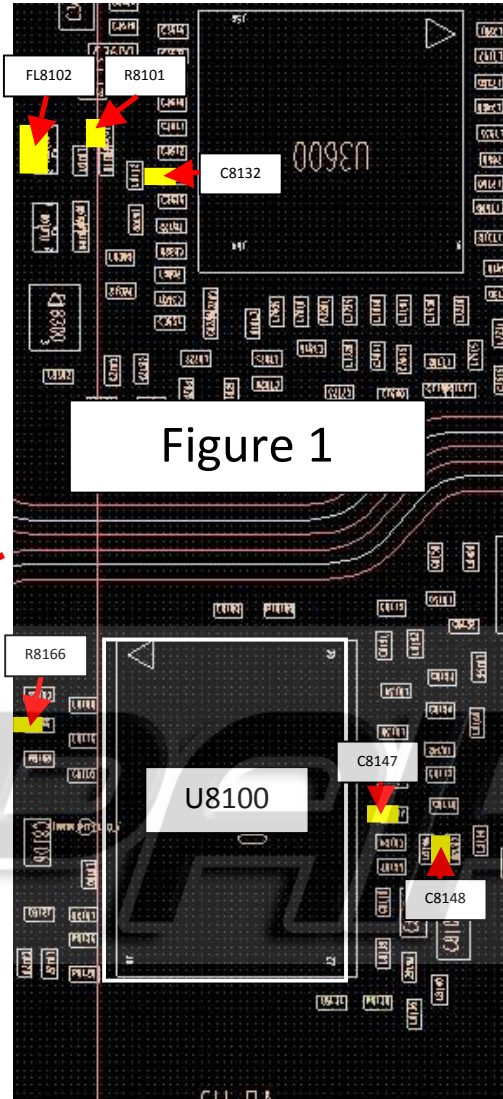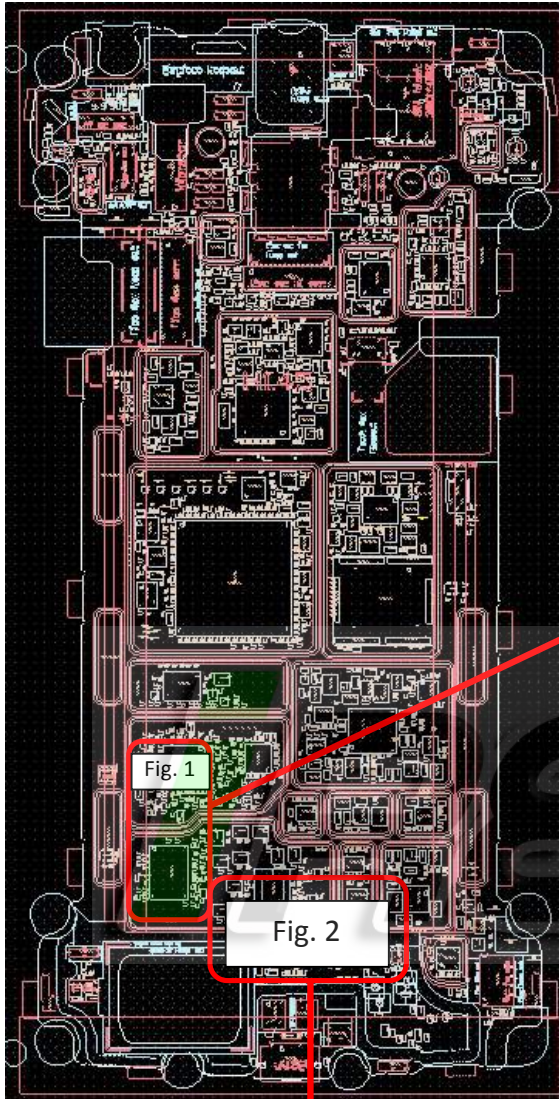


L3 Moto X RF Troubleshooting Guide

RF Test


RFFE: TX MMBB PA
REF 8190-8199 ROOM=P_8_150

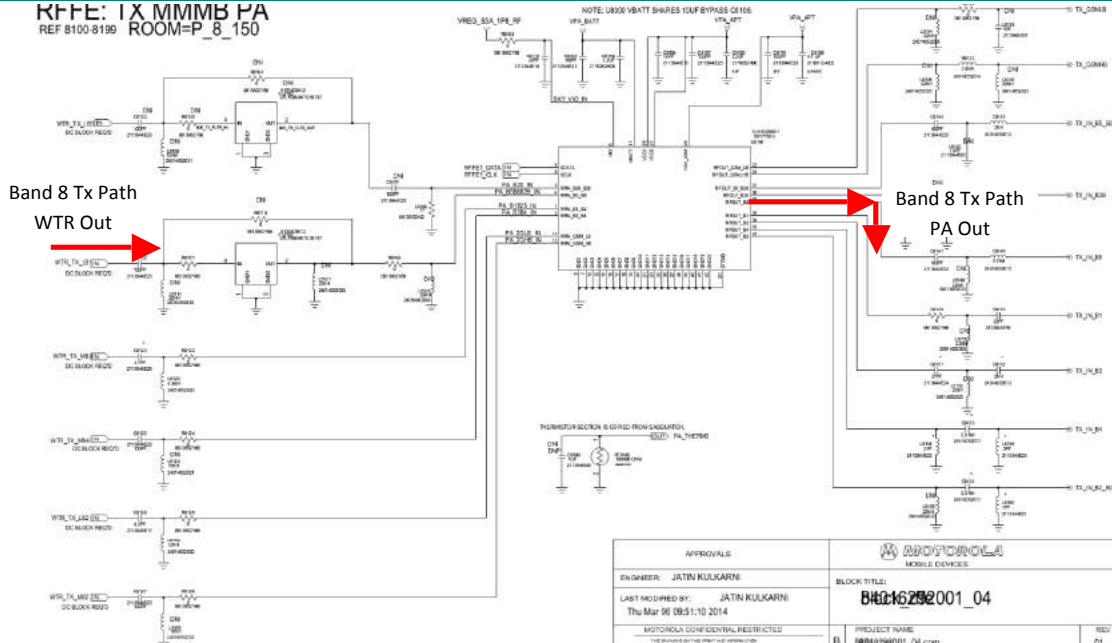

RFFE: TRX SWITCH
REF 7100-8499

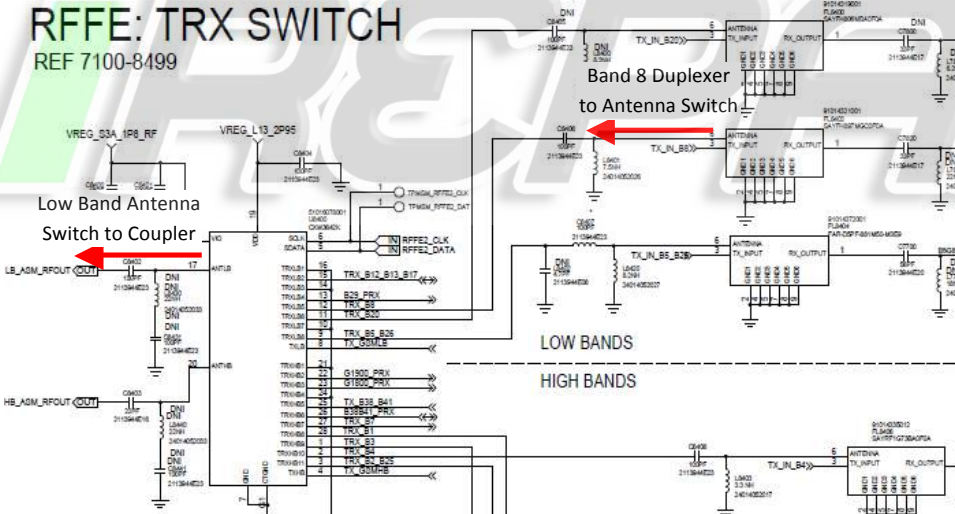


ROOM=P_18_184

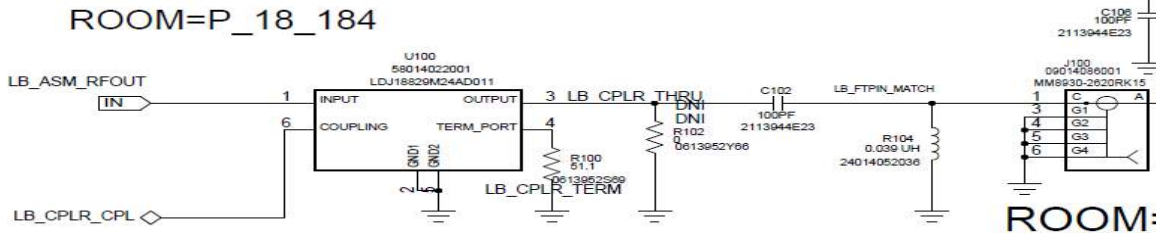

LTE B12, B13, B17 TX

L3 Moto X RF Troubleshooting Guide


RF Test

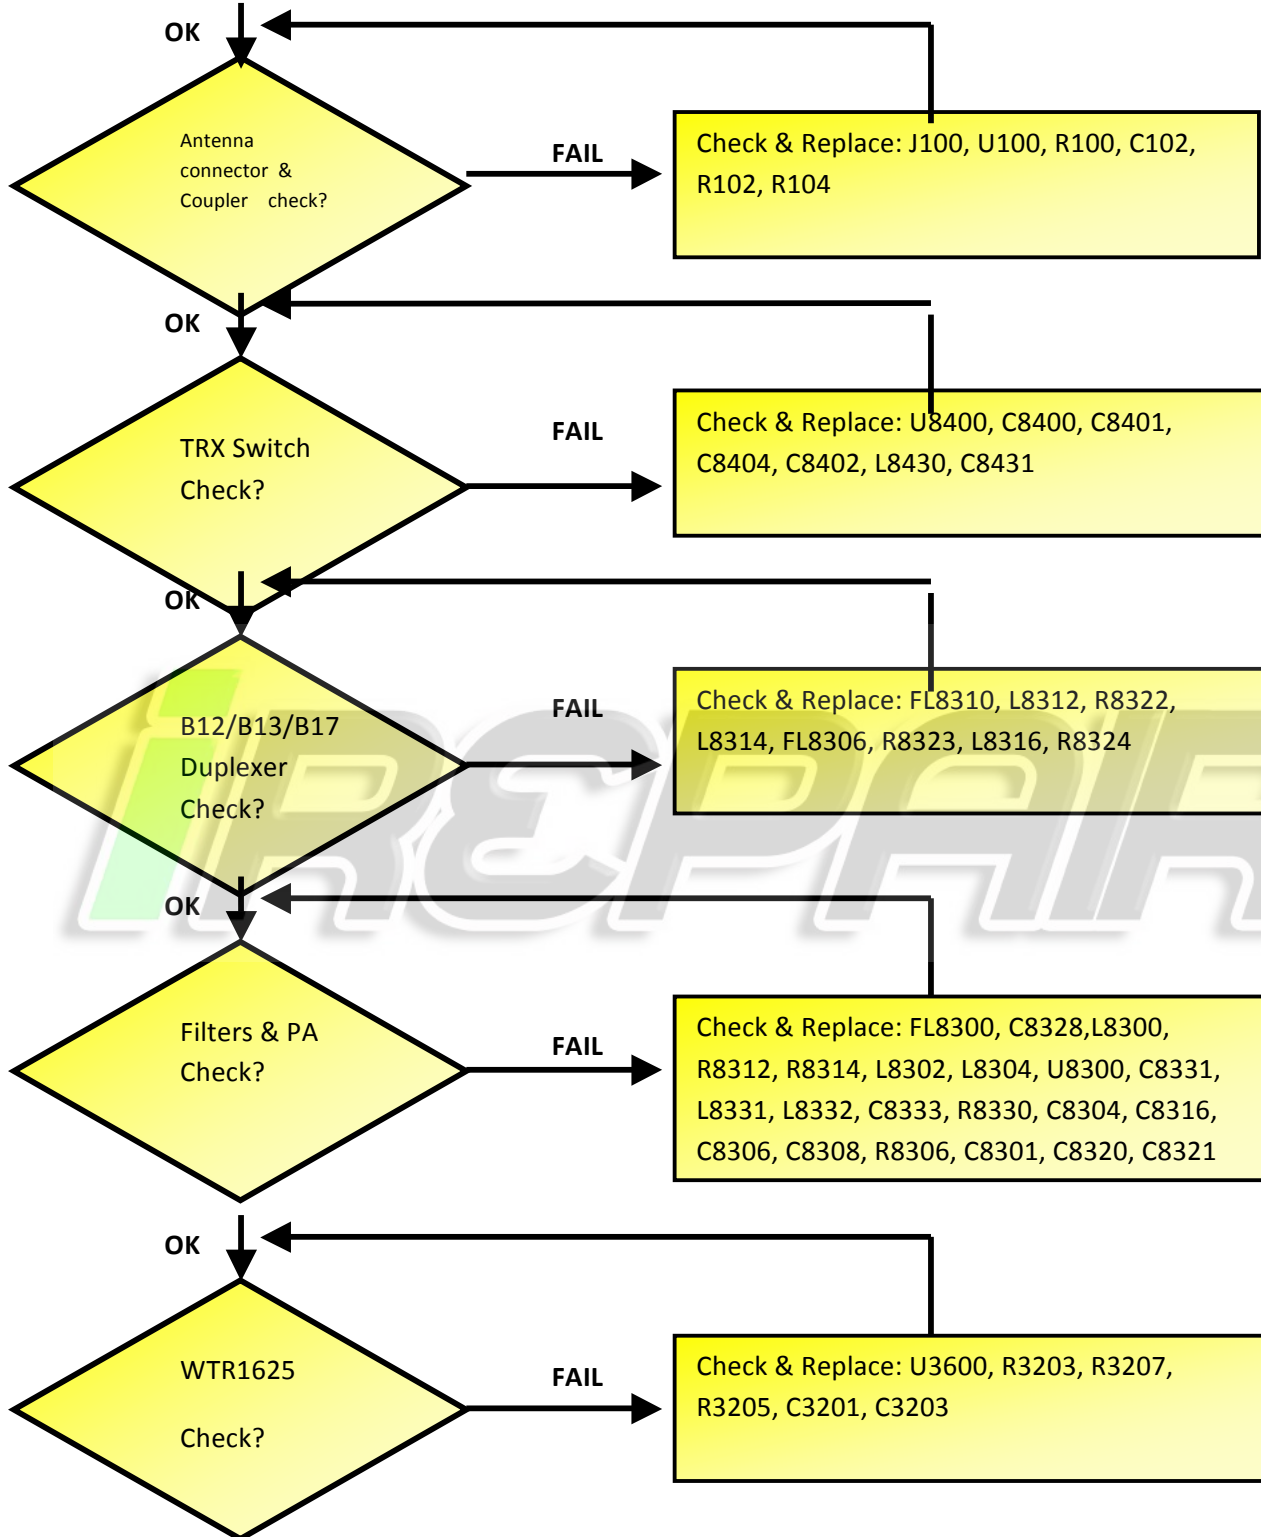


L3 Moto X RF Troubleshooting Guide

RF Test

RF Path from WTR to PA to ASM to RF Jack.

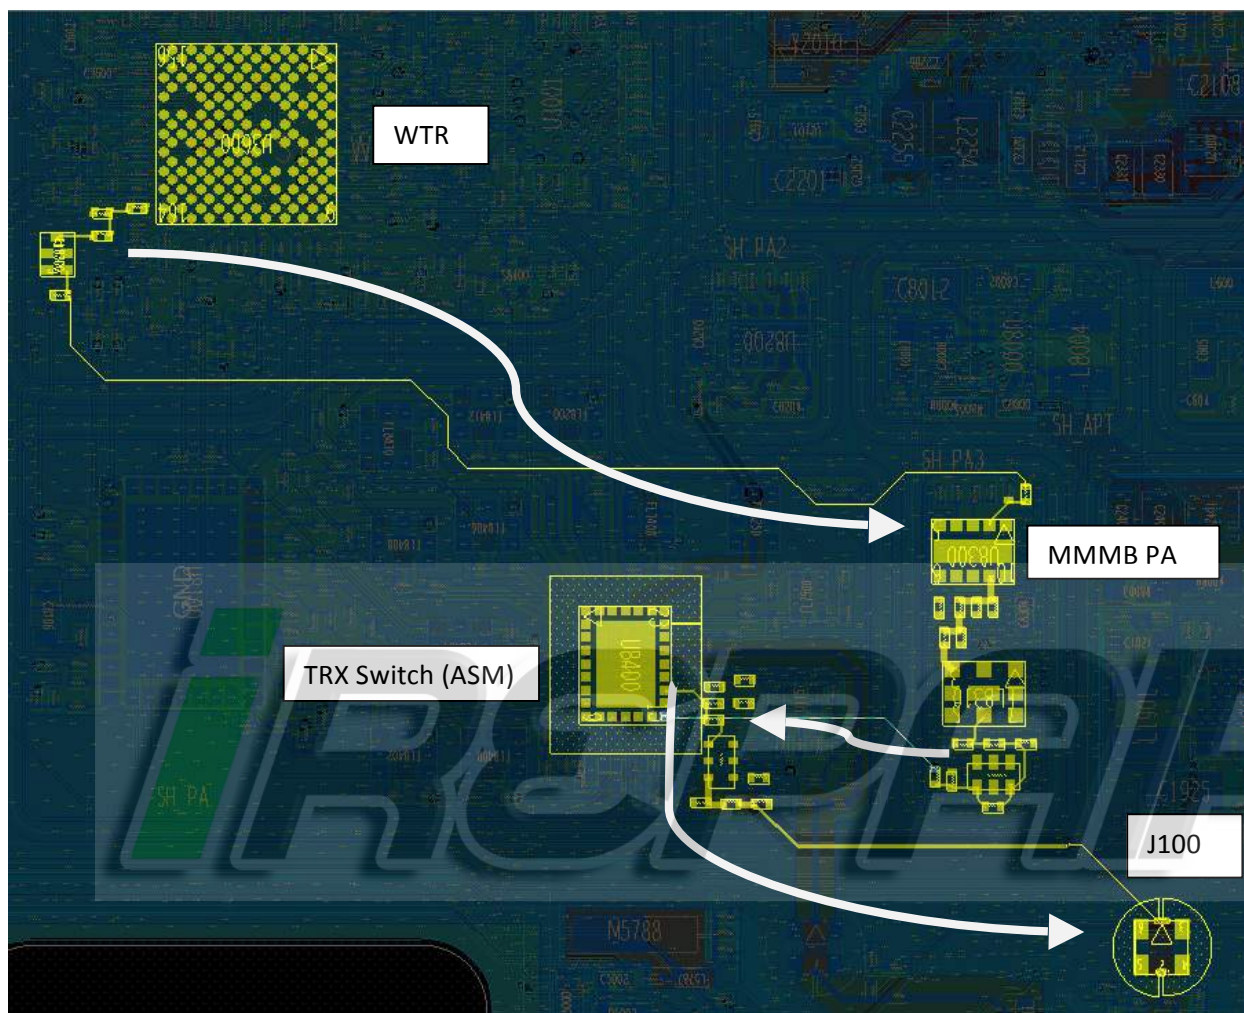


WTR TX Output Schematic:

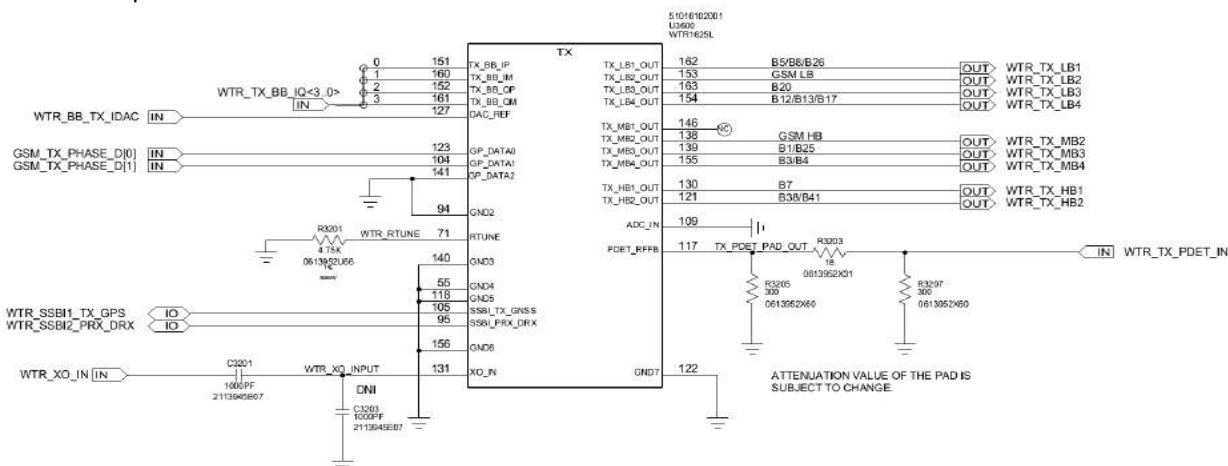

TX input and output of RF PA:

L3 Moto X RF Troubleshooting Guide

RF Test

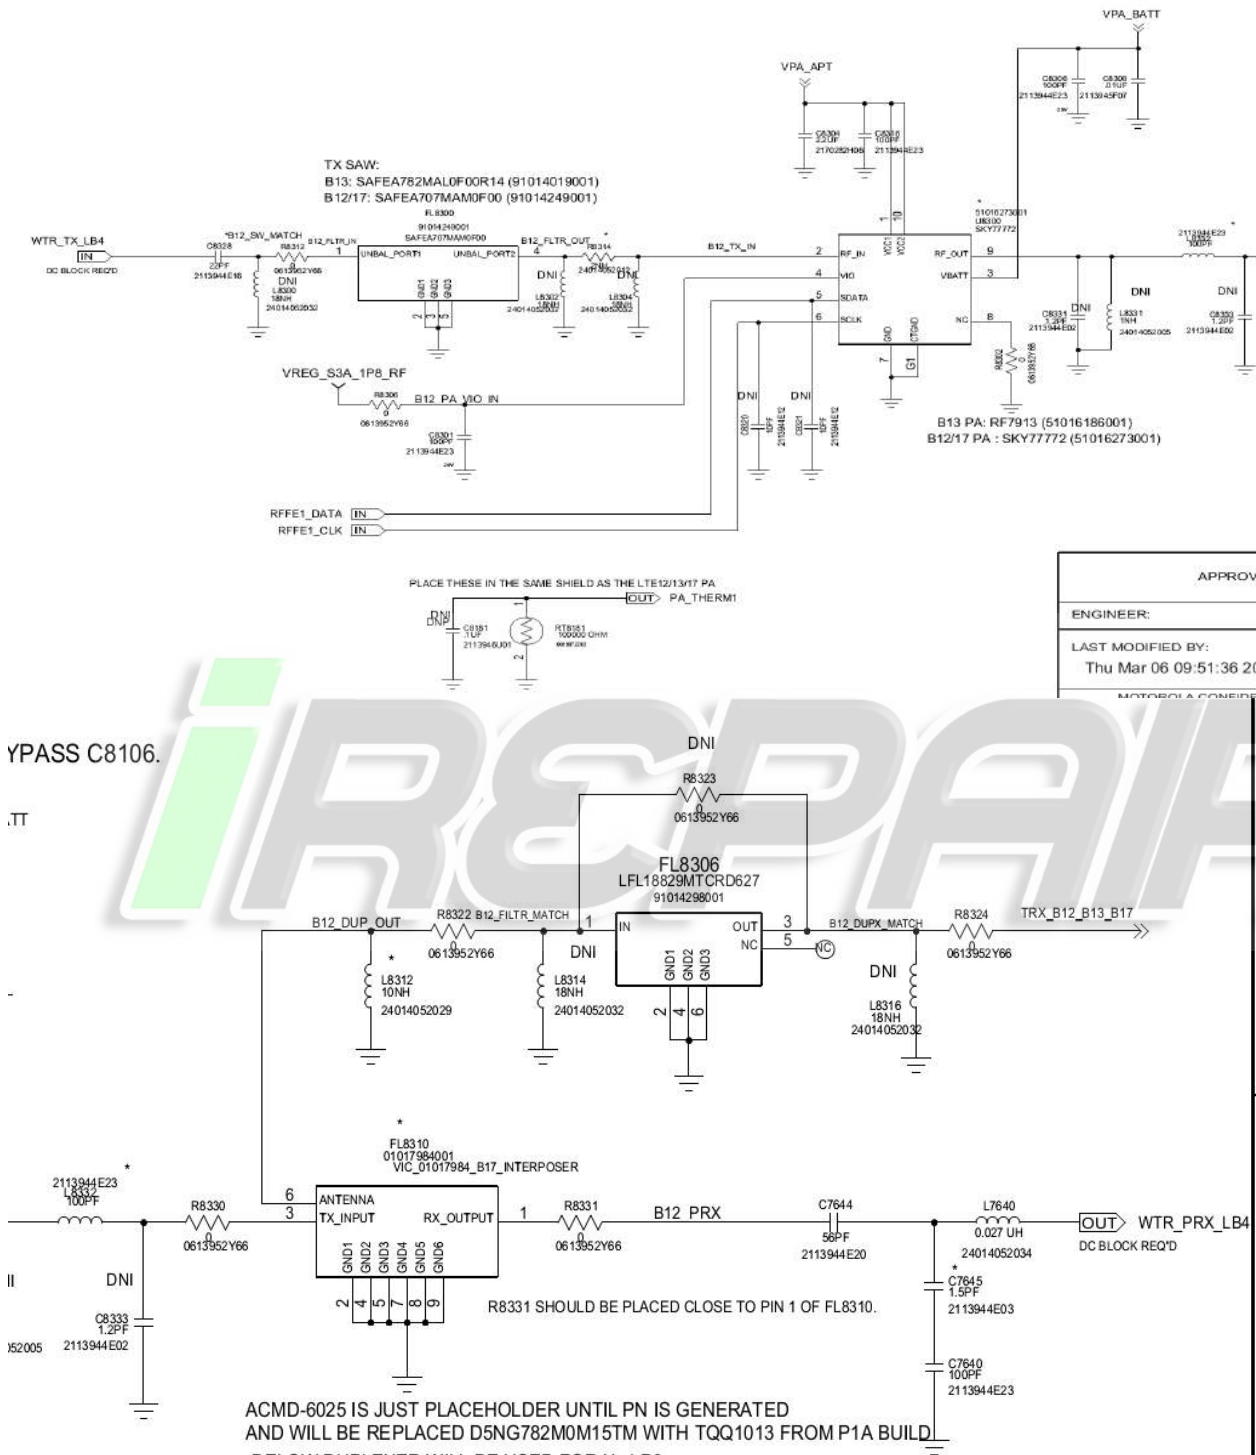


TX RF input and output of TRX switch (Antenna Switch Module) ASM.

L3 Moto X RF Troubleshooting Guide

RF Test

RFFE: TRX SWITCH



REF 7100-8499

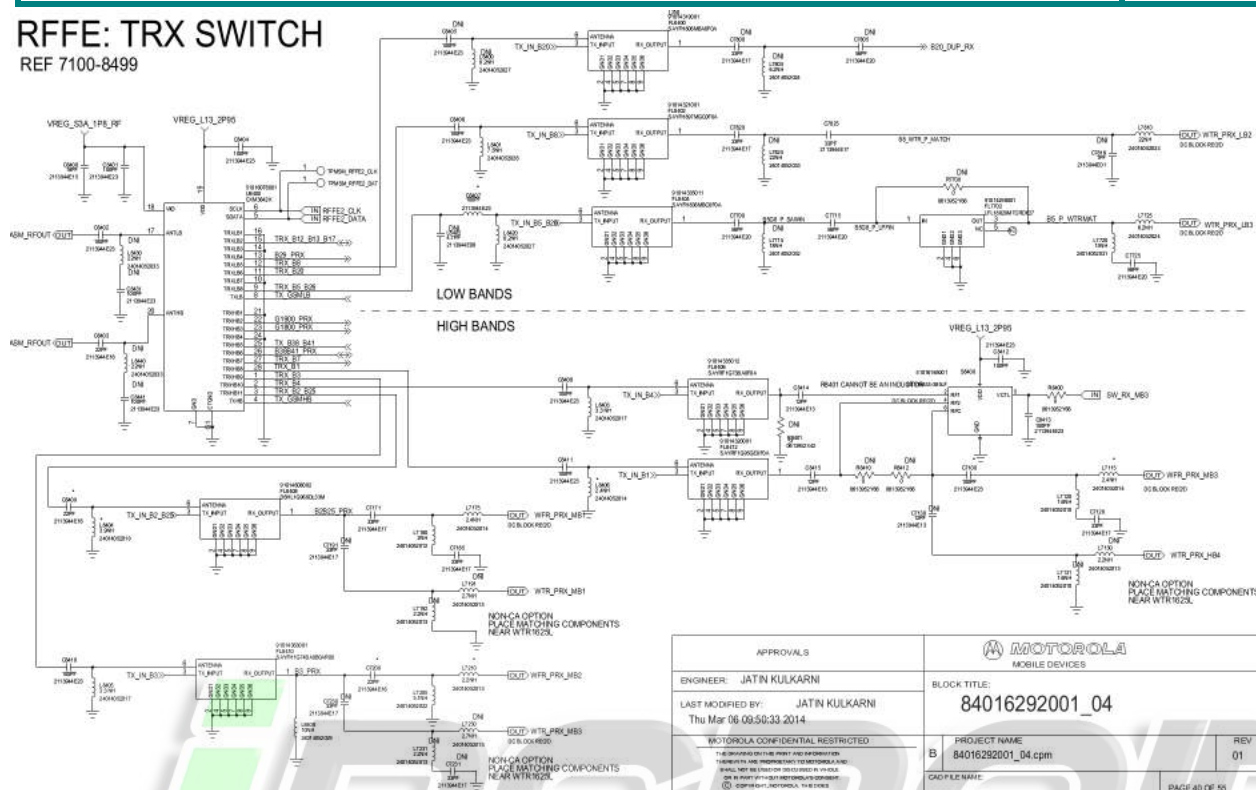

TX coupler and Antenna Jack for Conducted Power:

MAIN LOW BAND ANTENNA (GSM/UTMS/LTE)


ROOM=P 18 184

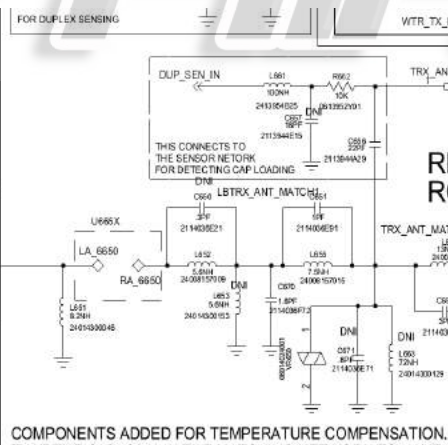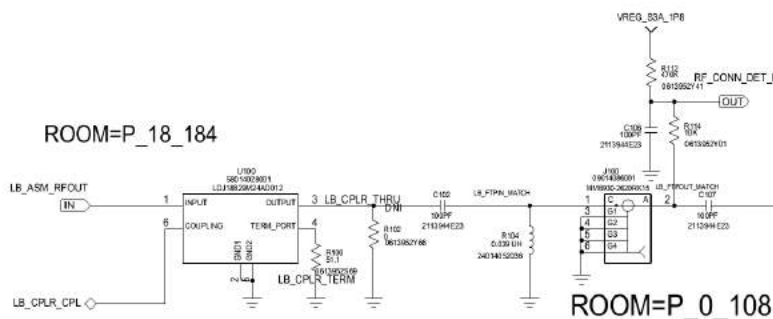

L3 Moto X RF Troubleshooting Guide

RF Test

LTE B20 TX EU SKU


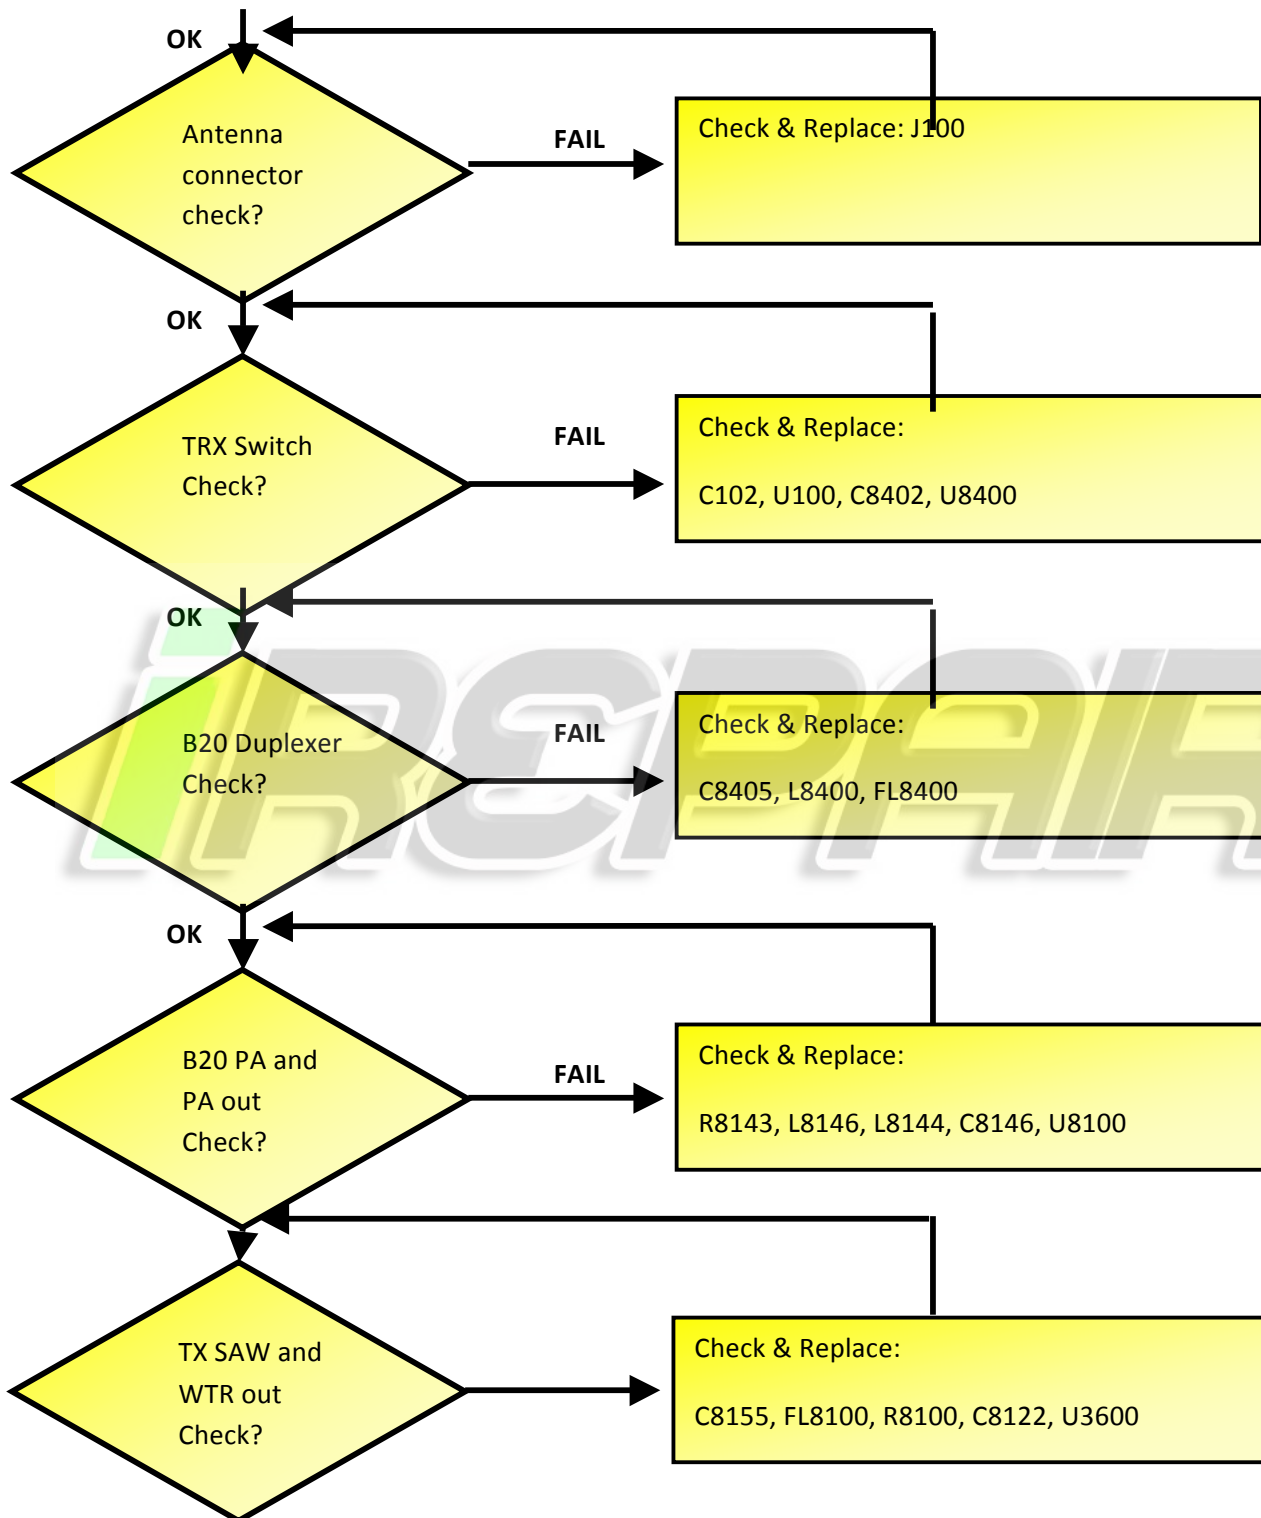


TITLE

MODEL


L3 Moto X RF Troubleshooting Guide

RF Test

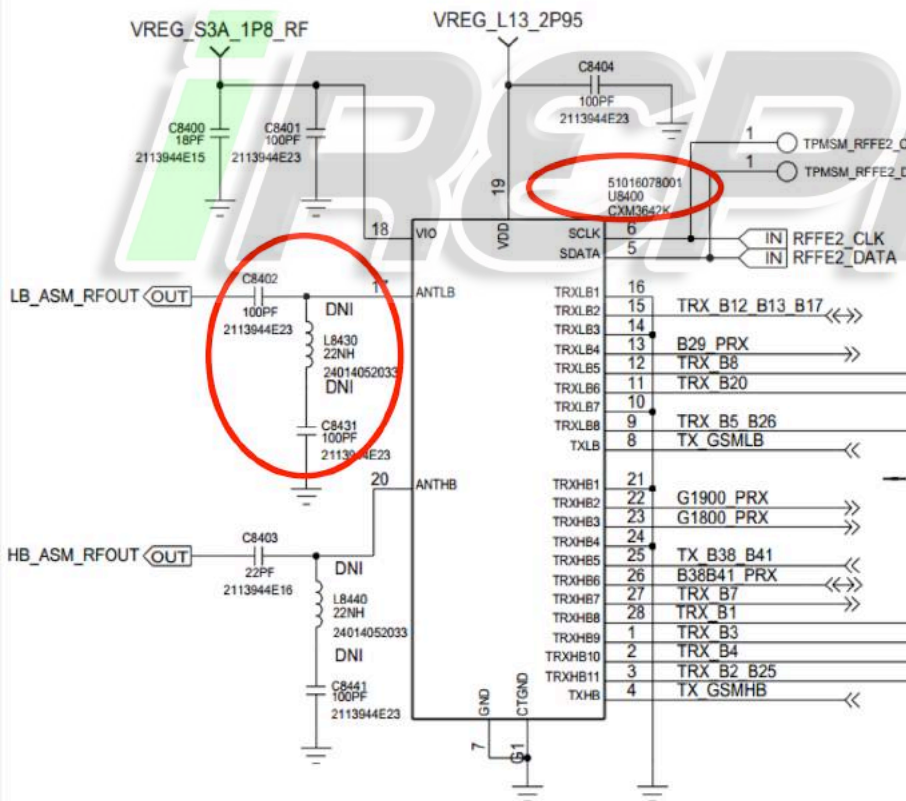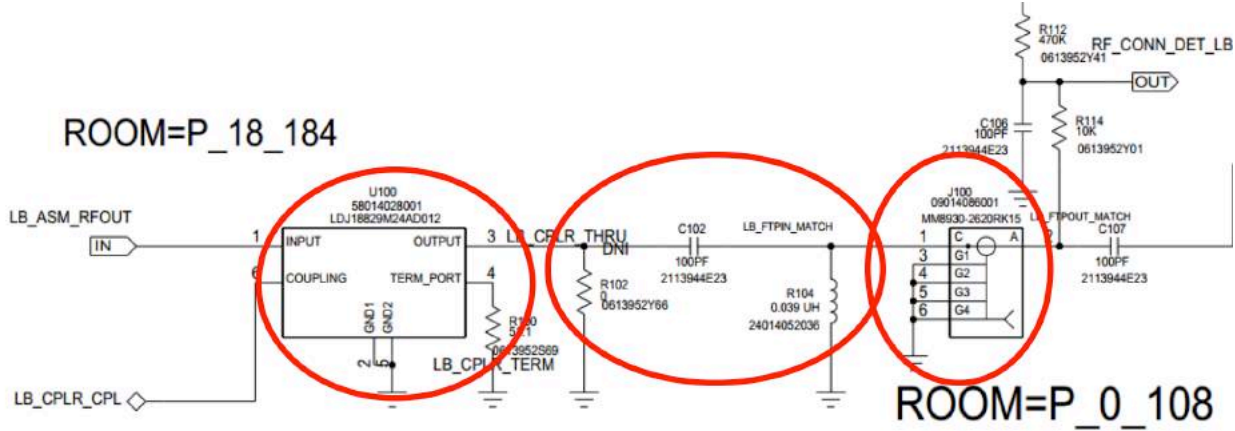

L3 Moto X RF Troubleshooting Guide

RF Test

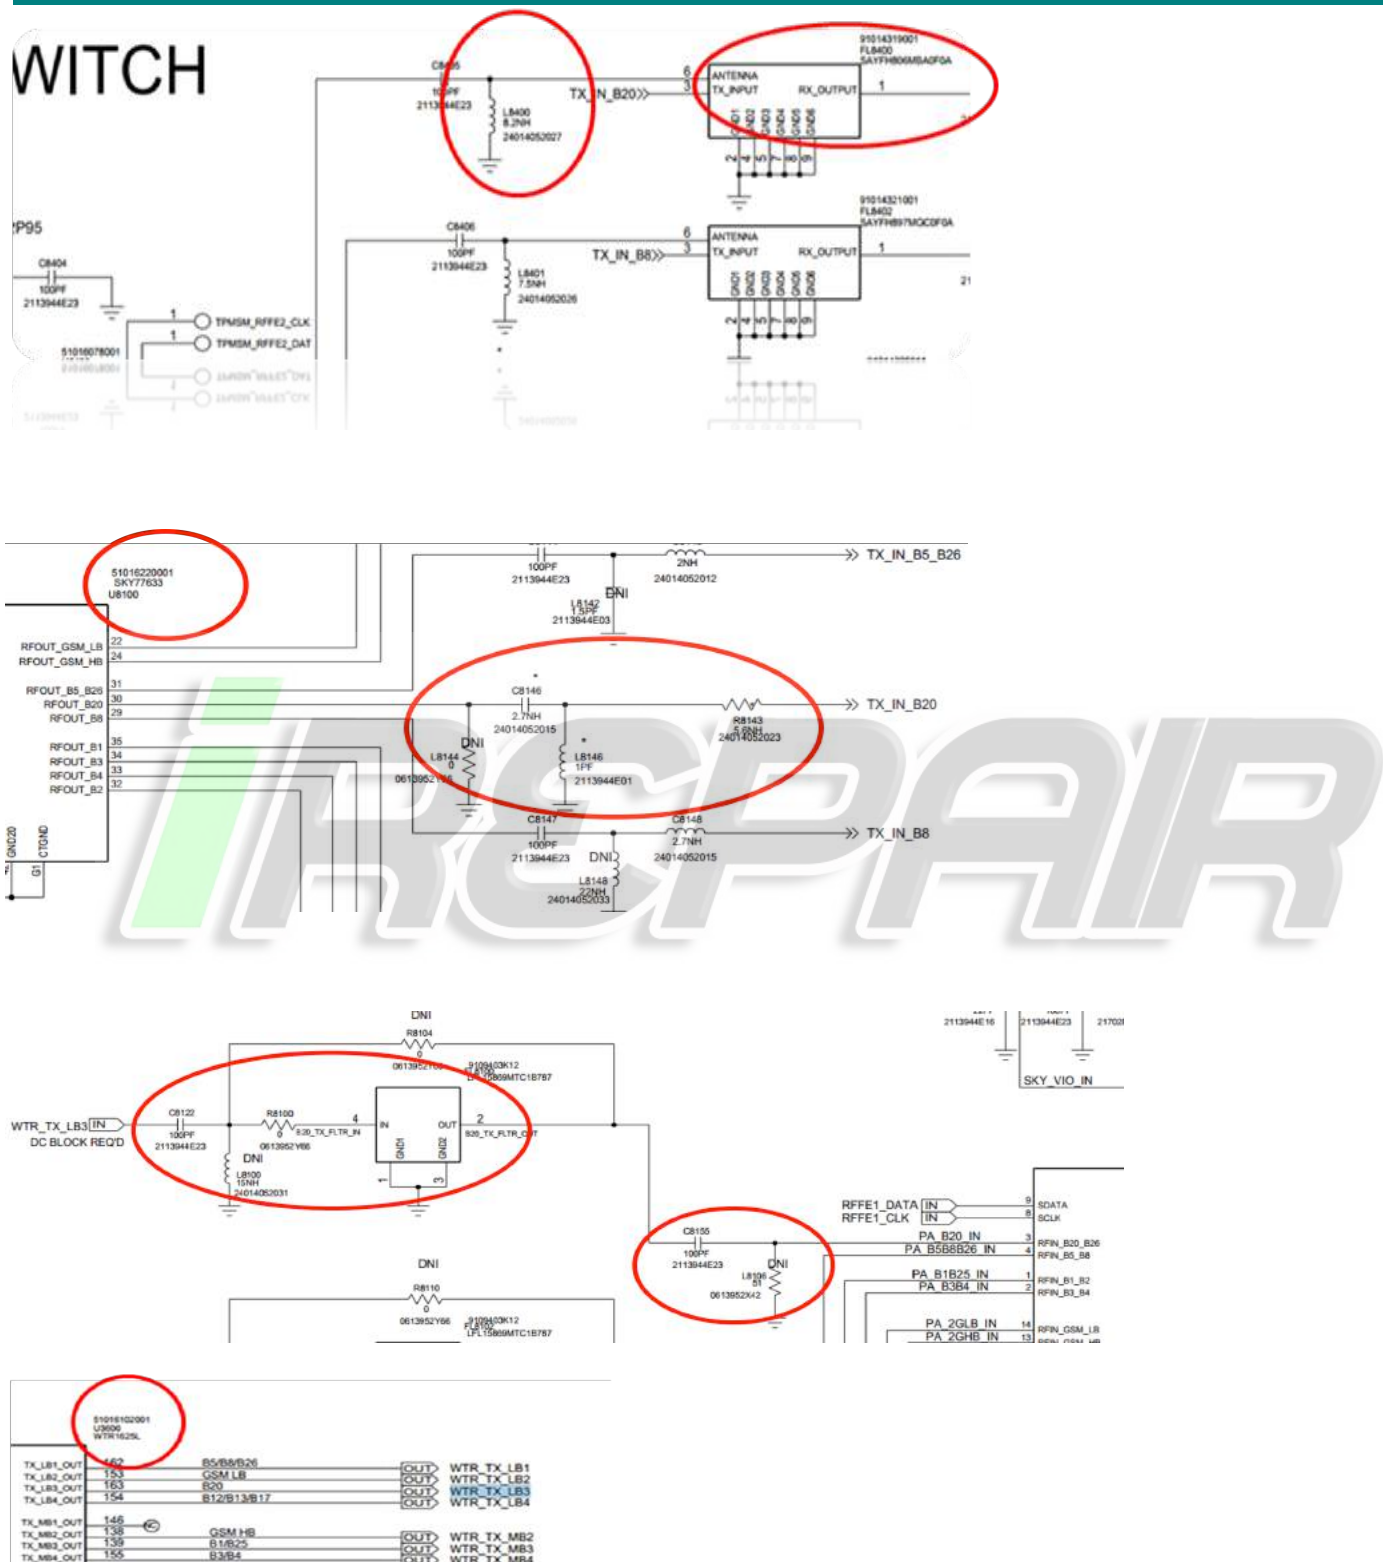

TITLE

MODEL

L3 Moto X RF Troubleshooting Guide

RF Test

LTE_B20_TX (EU SKU)

SH_WTR

U3600

U3001

SH_PA

U8100

U8400

SH_RFFE

SH_RFS

U9780

U9780

U9780

U9780

U9780

U9780

U9780

U9780

U9780

U9780

U9780

U9780

U9780

U9780

U9780

U9780

U9780

U9780

U9780

U9780

U9780

U9780

U9780

U9780

U9780

U9780

U9780

U9780

U9780

U9780

U9780

U9780

U9780

U9780

U9780

U9780

U9780

U9780


U9780

LTE B41 TX

OK

L3 Moto X RF Troubleshooting Guide

RF Test


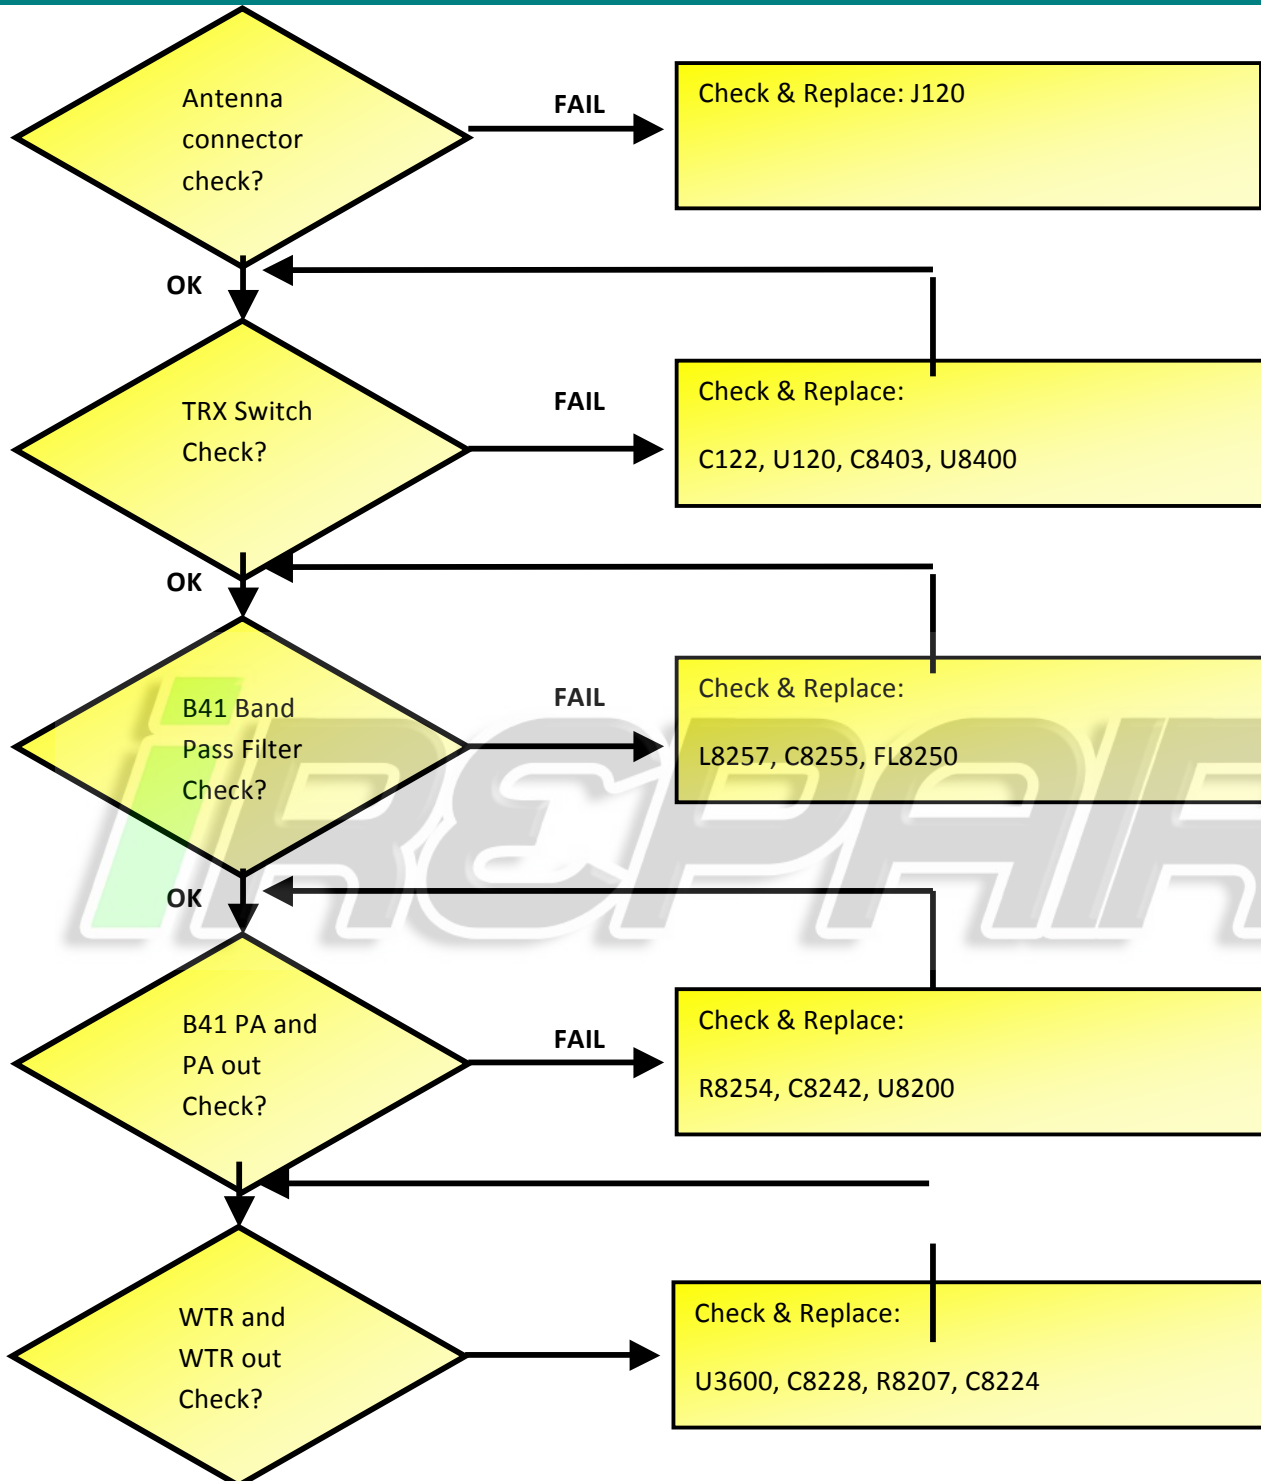


TITLE

MODEL



L3 Moto X RF Troubleshooting Guide

RF Test

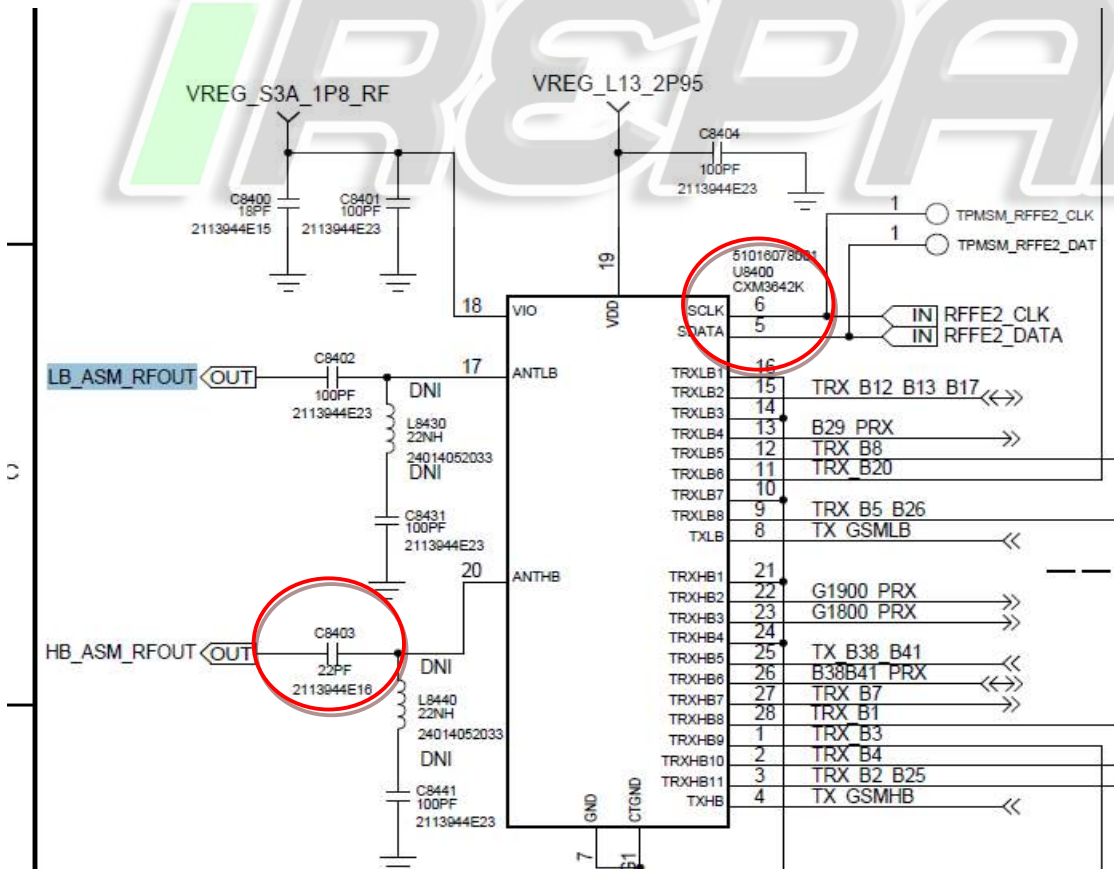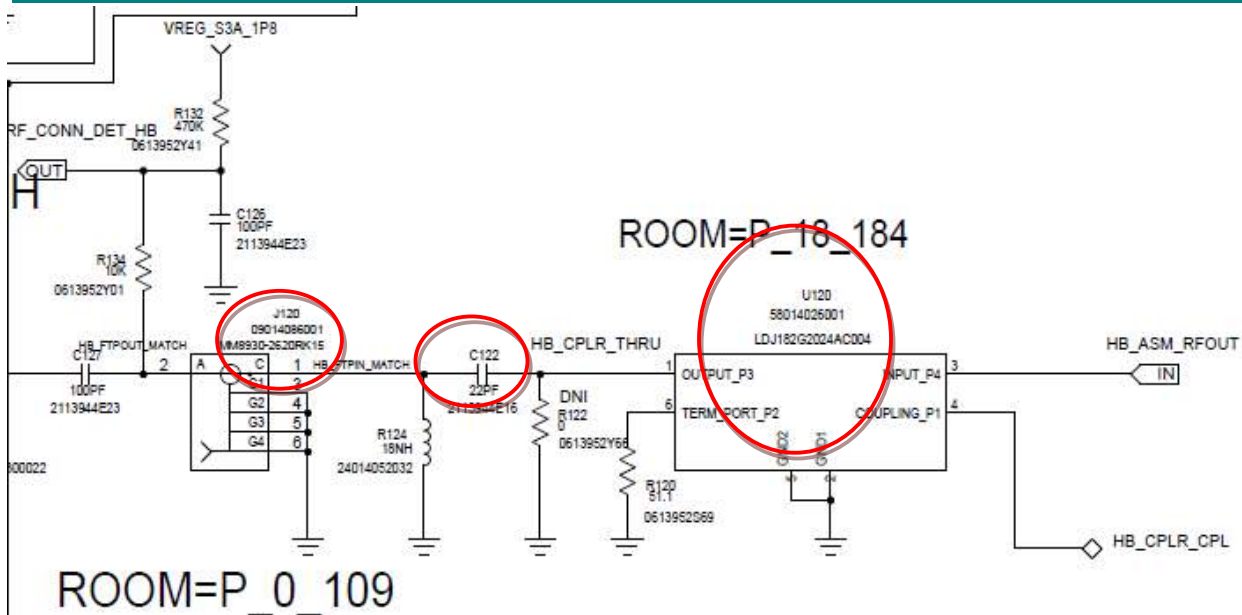

L3 Moto X RF Troubleshooting Guide

RF Test

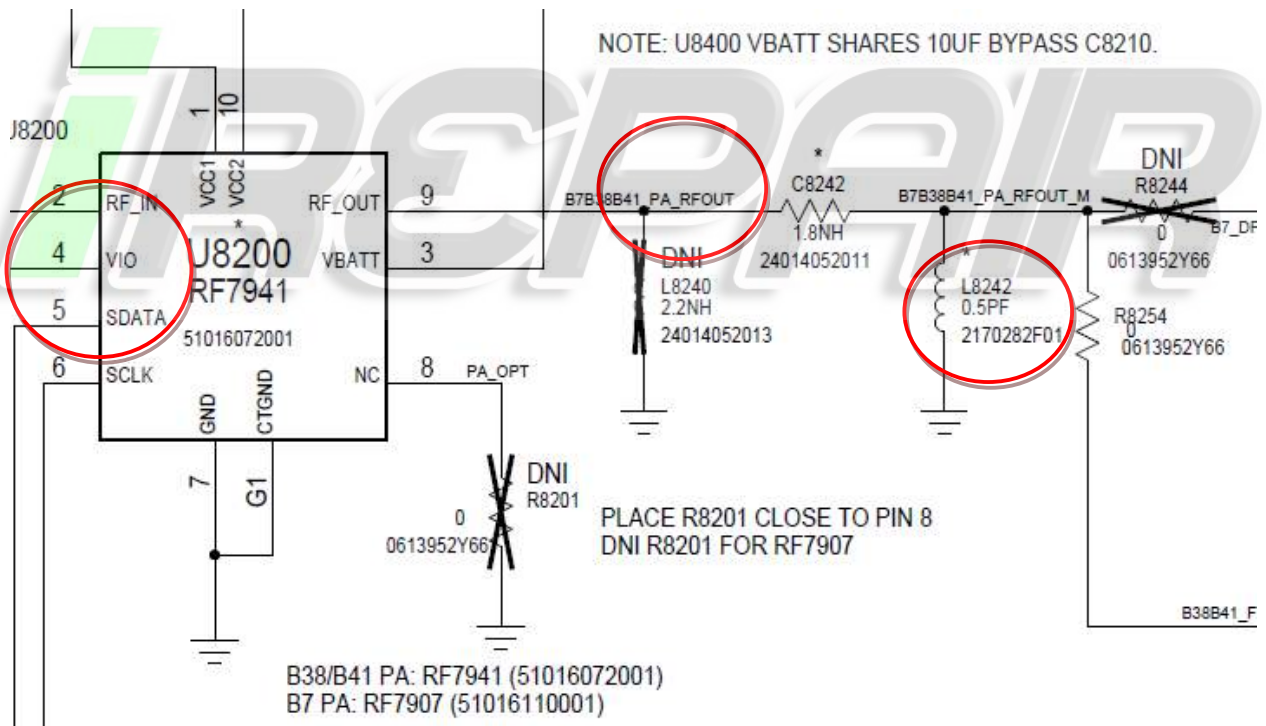
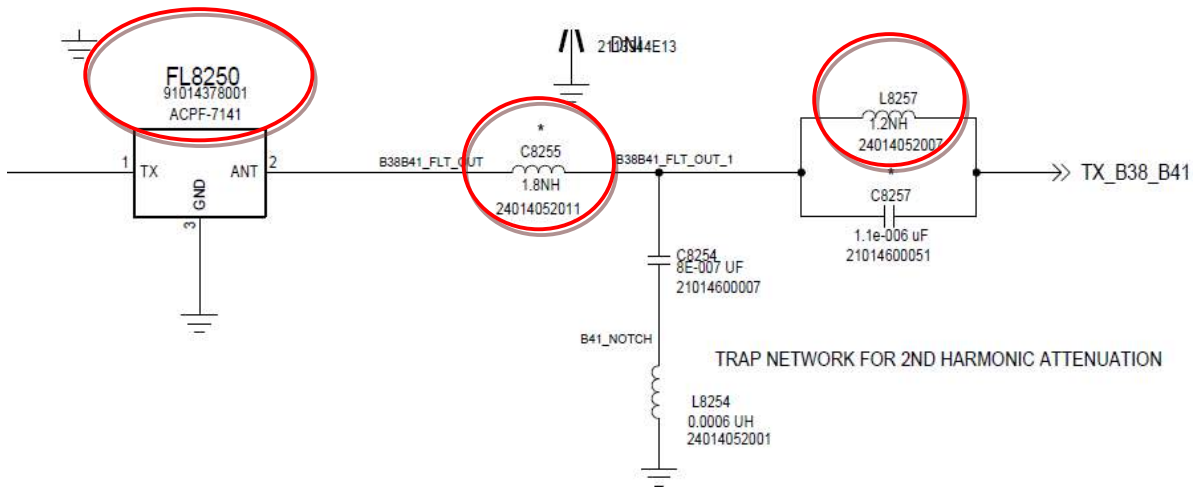




TITLE


MODEL

RF Test

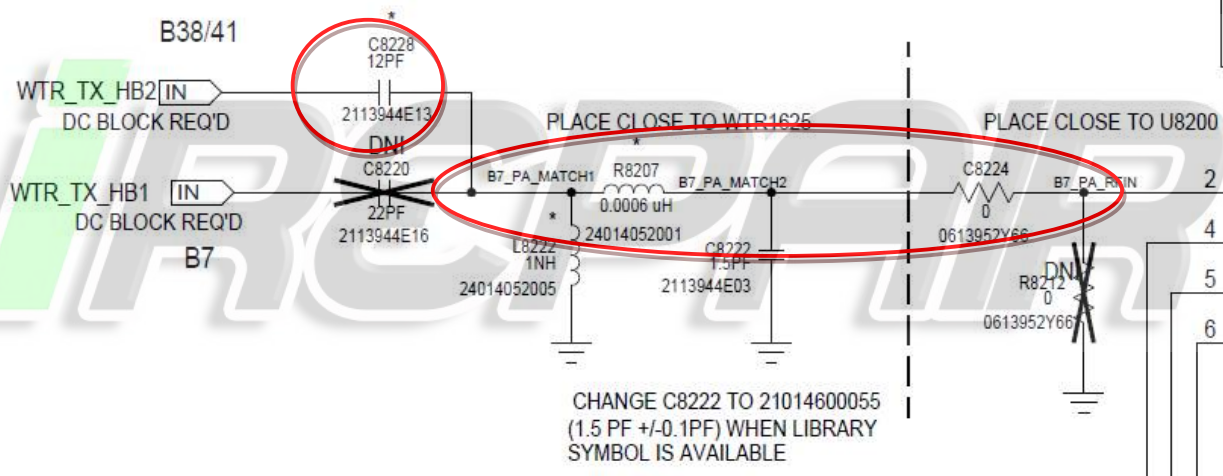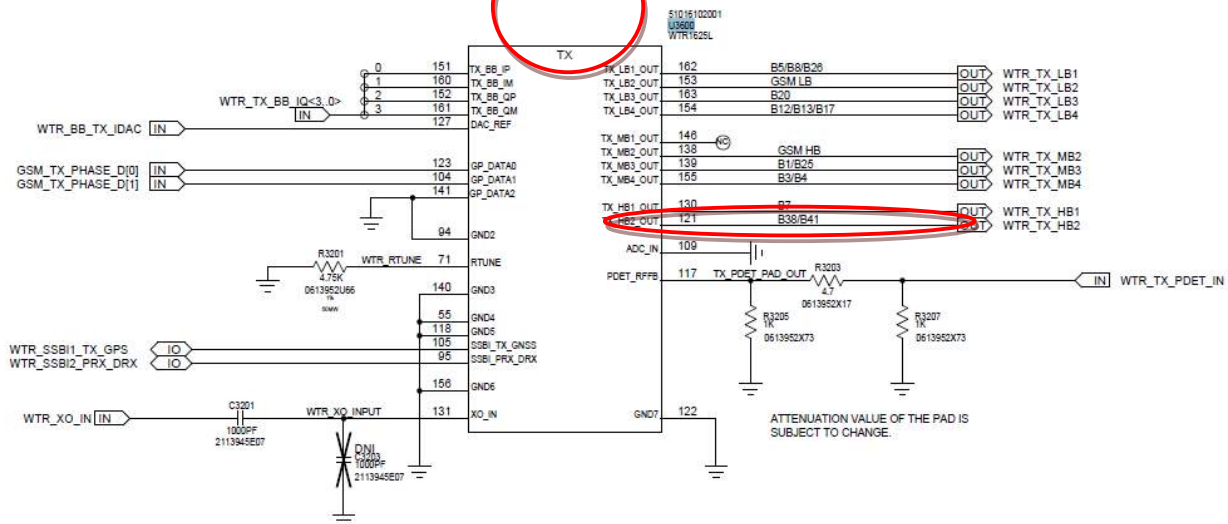

L3 Moto X RF Troubleshooting Guide


RF Test

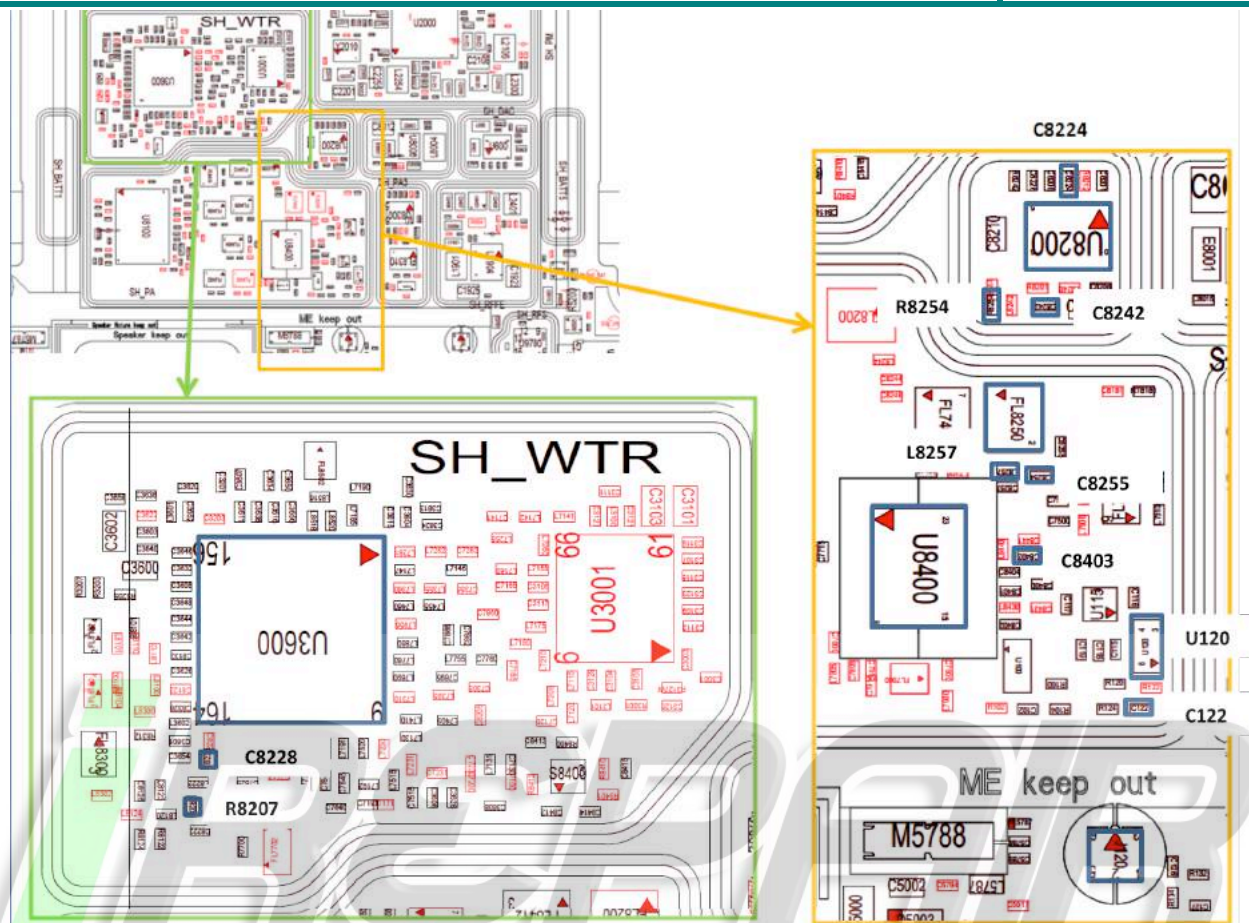

GSM 1800 RX

L3 Moto X RF Troubleshooting Guide

RF Test


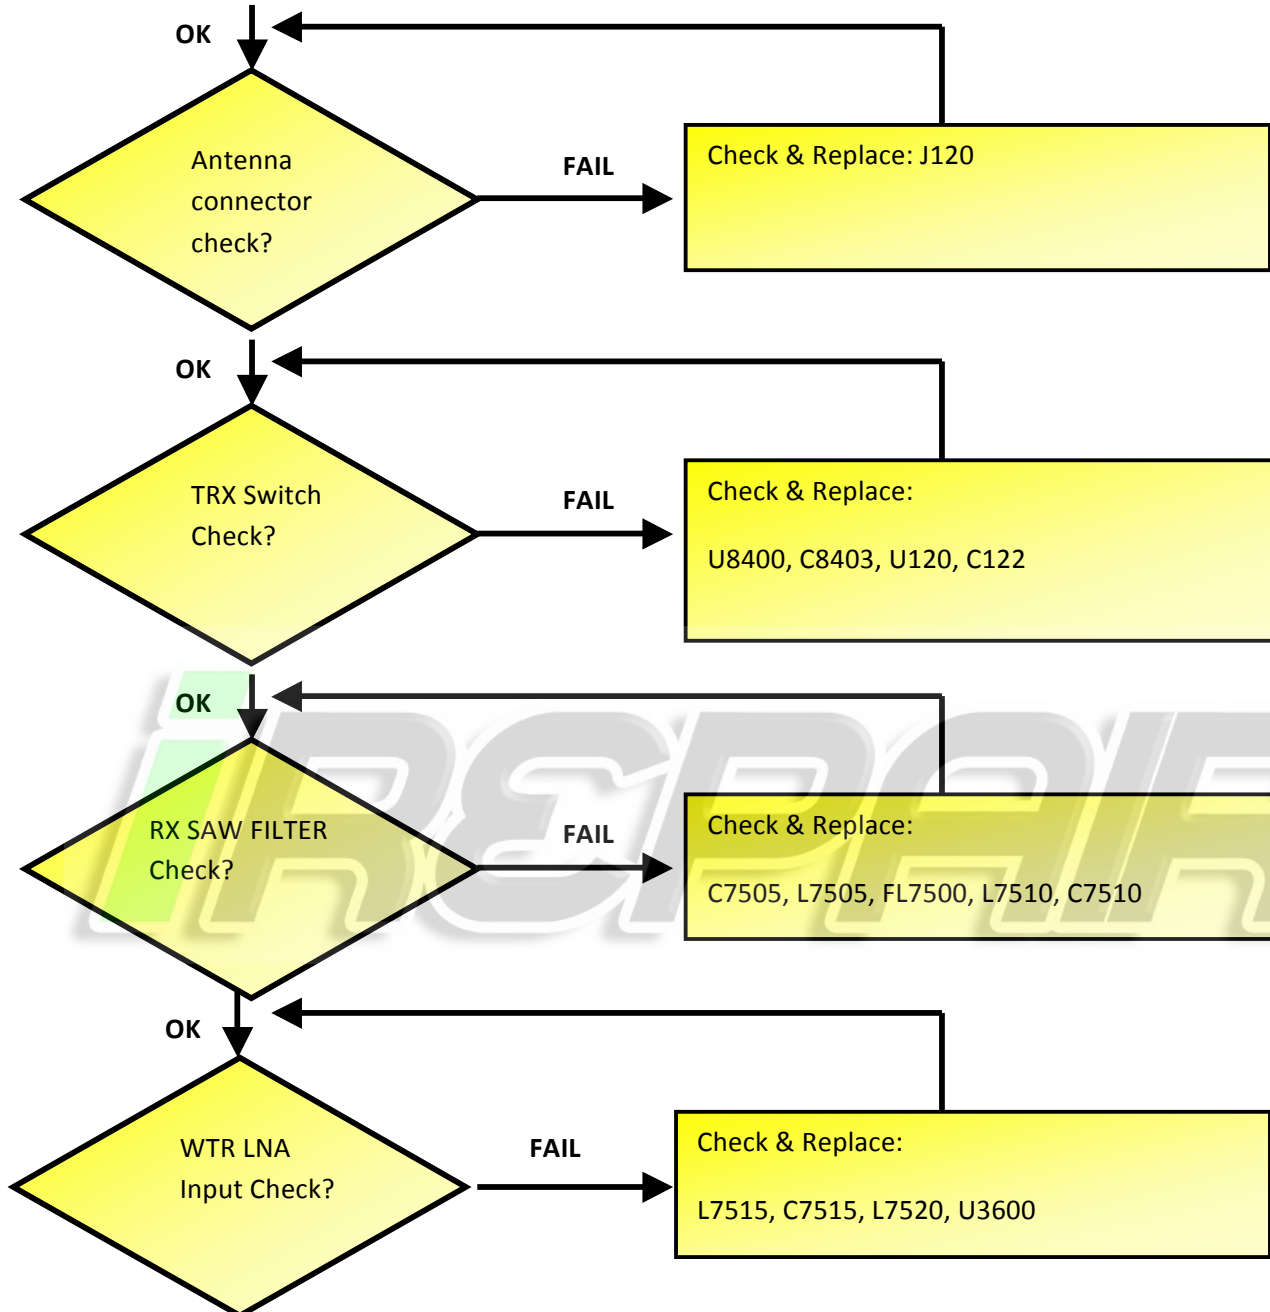


TITLE

MODEL




L3 Moto X RF Troubleshooting Guide

RF Test

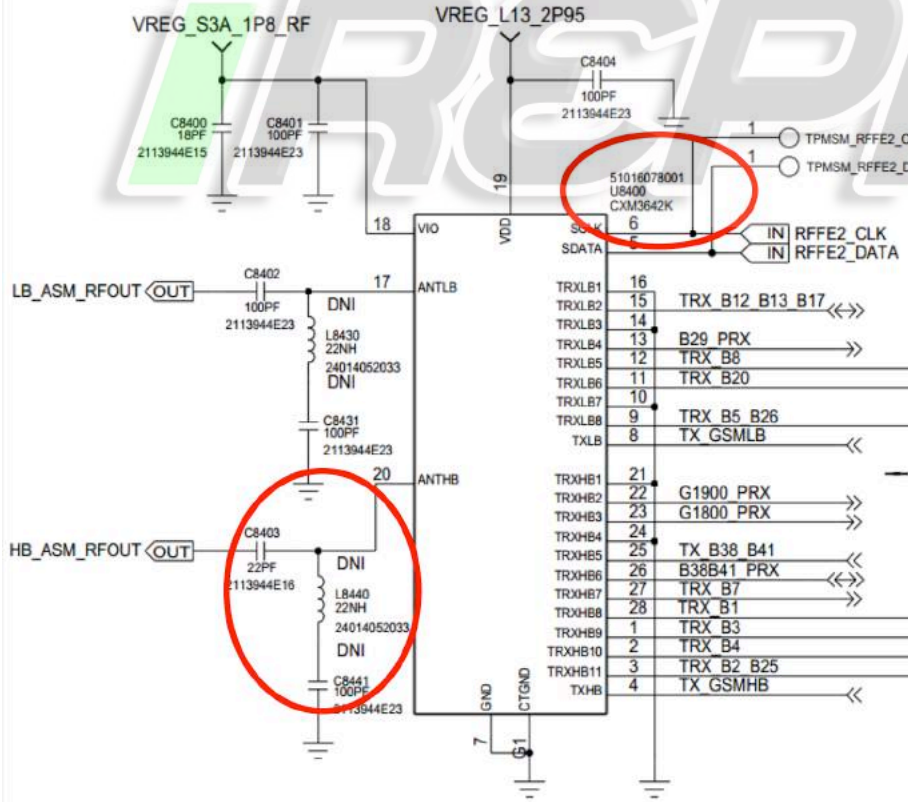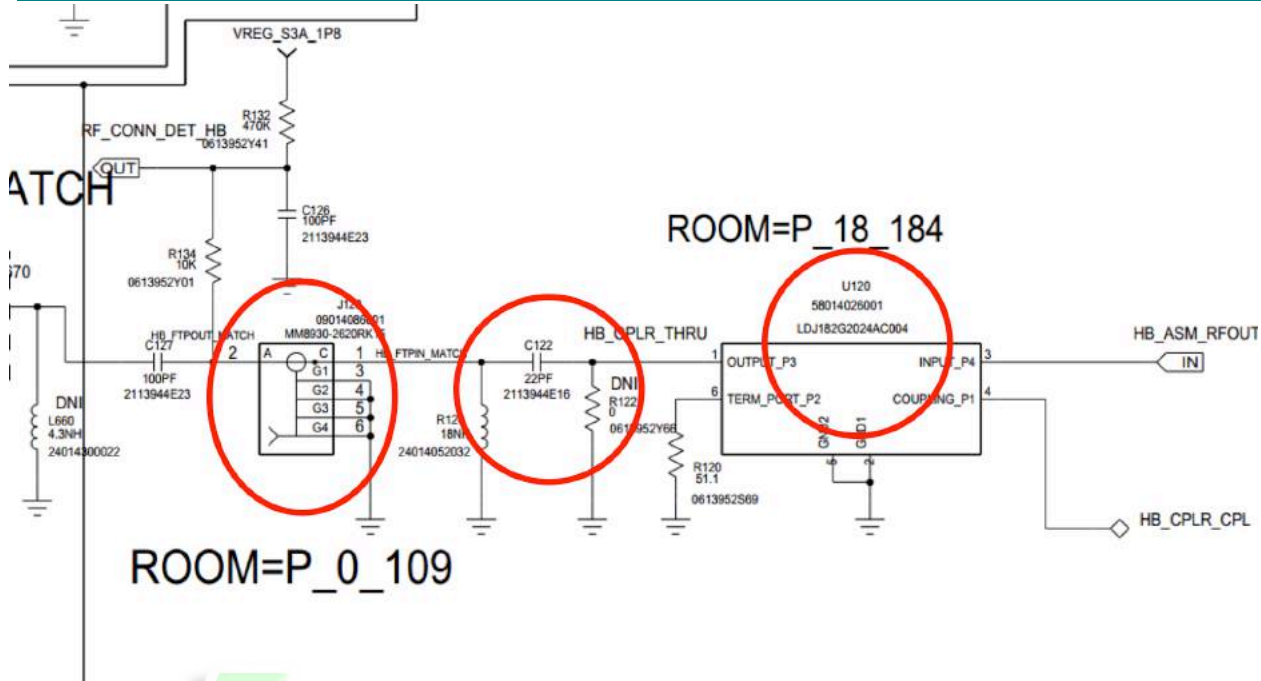

L3 Moto X RF Troubleshooting Guide


RF Test

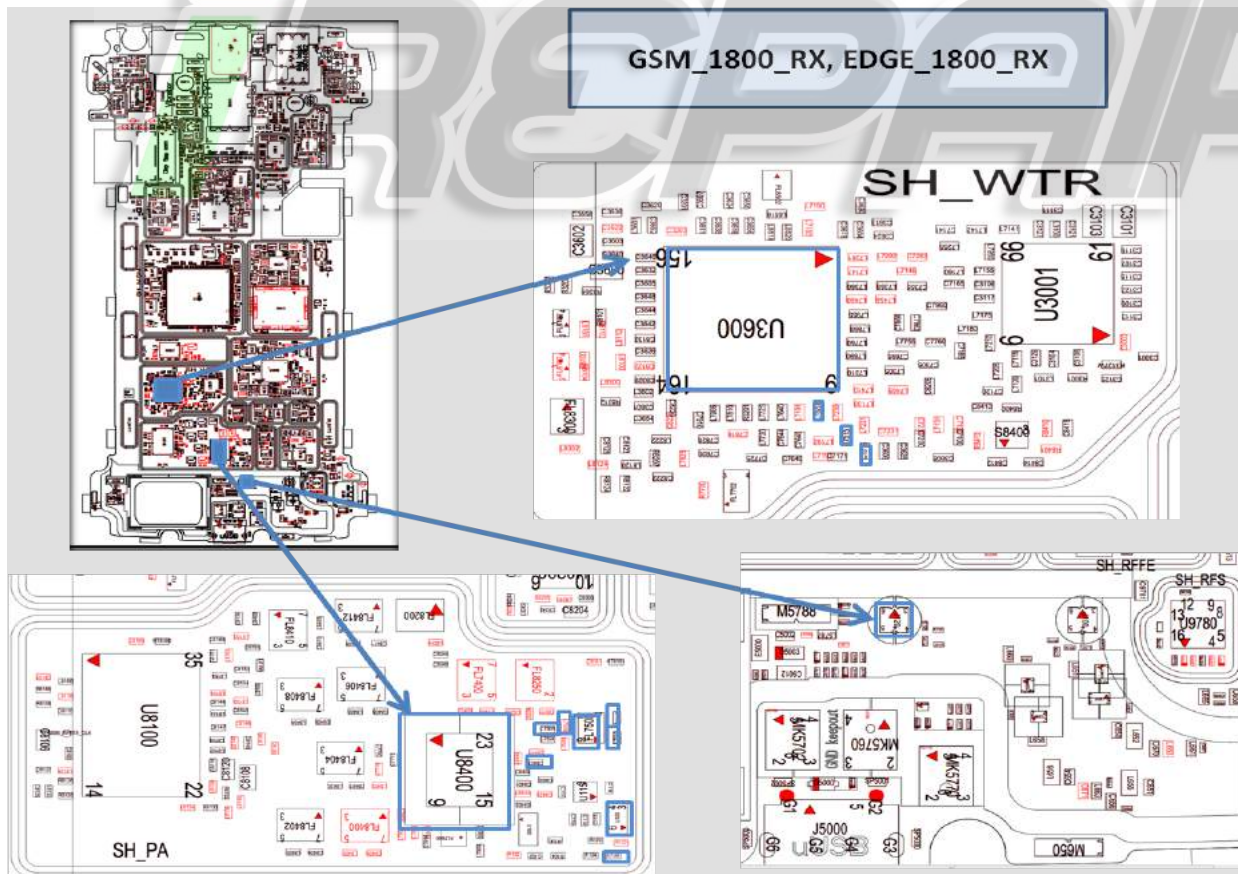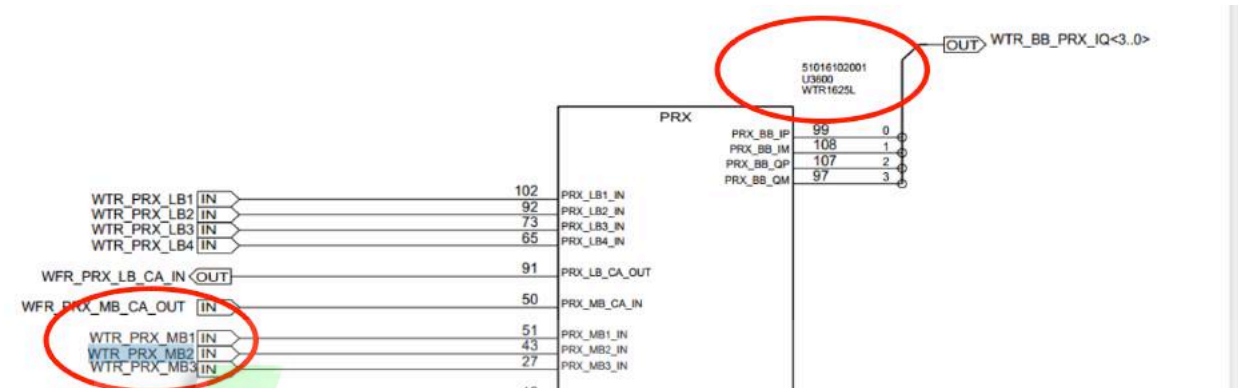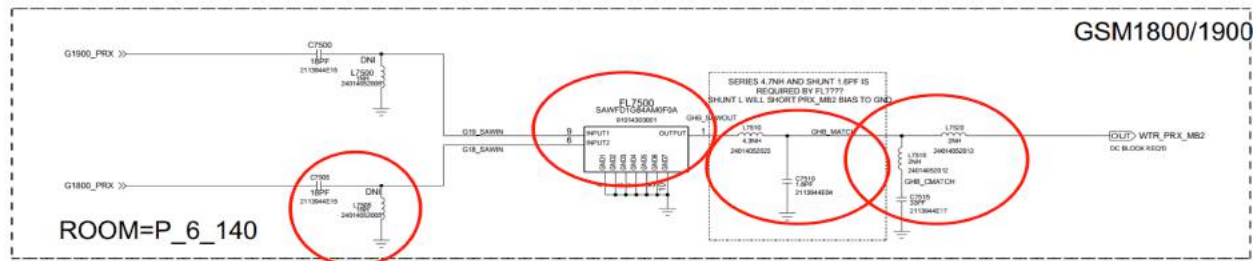

GSM 1900 RX

L3 Moto X RF Troubleshooting Guide

RF Test


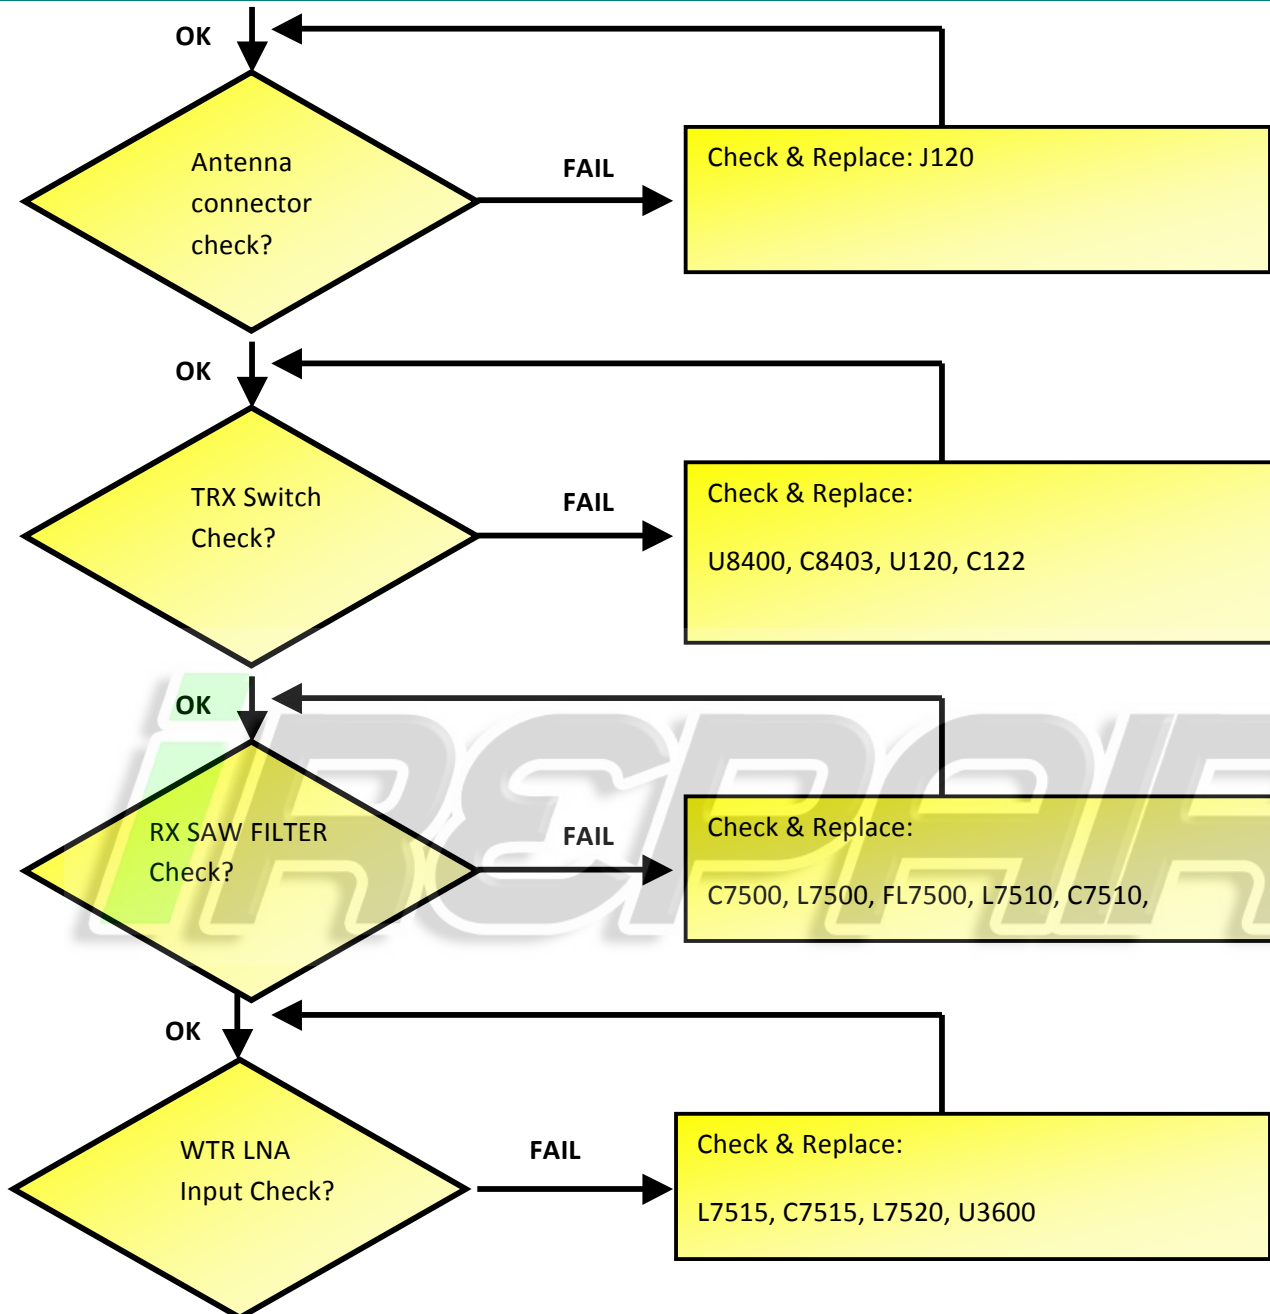


TITLE

MODEL




L3 Moto X RF Troubleshooting Guide

RF Test

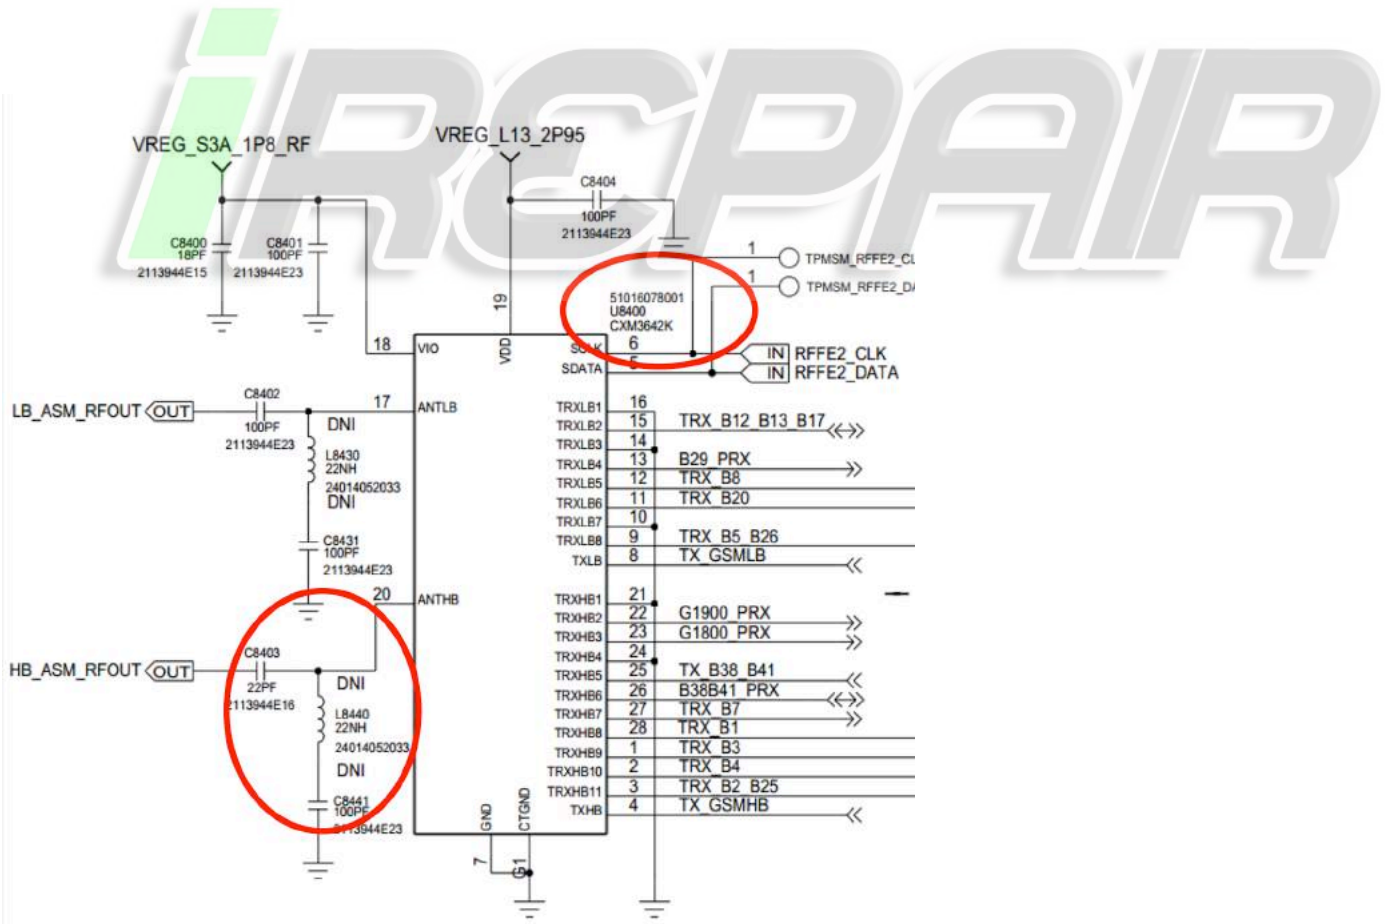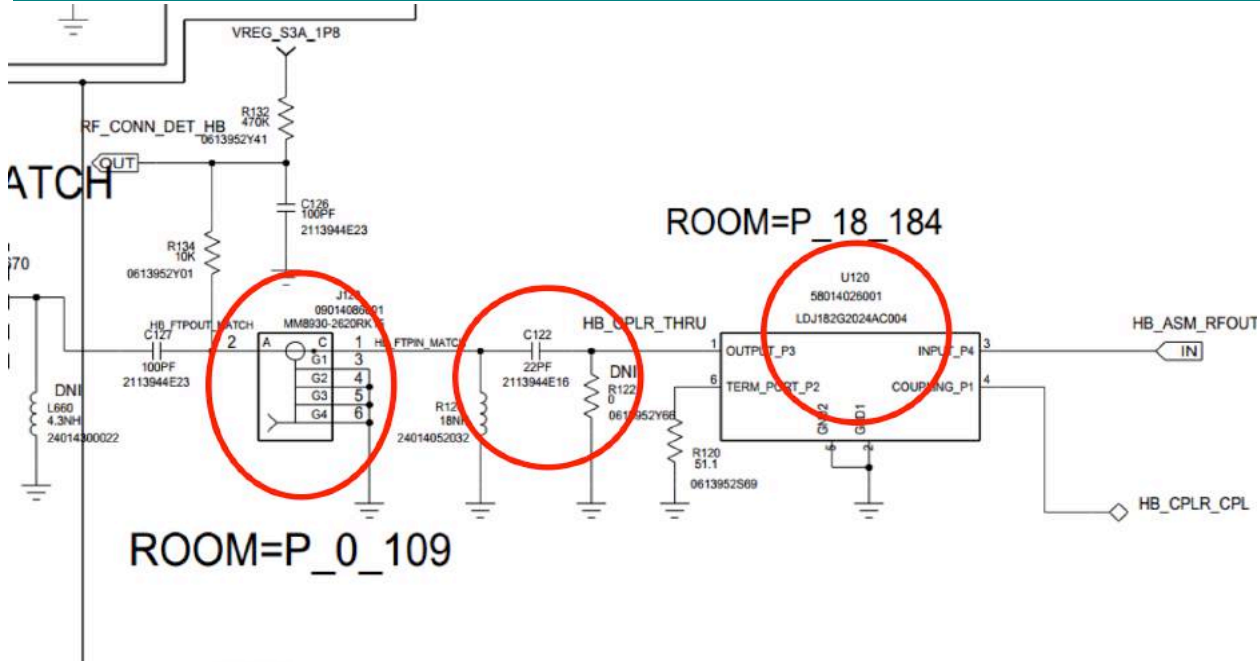

L3 Moto X RF Troubleshooting Guide


RF Test

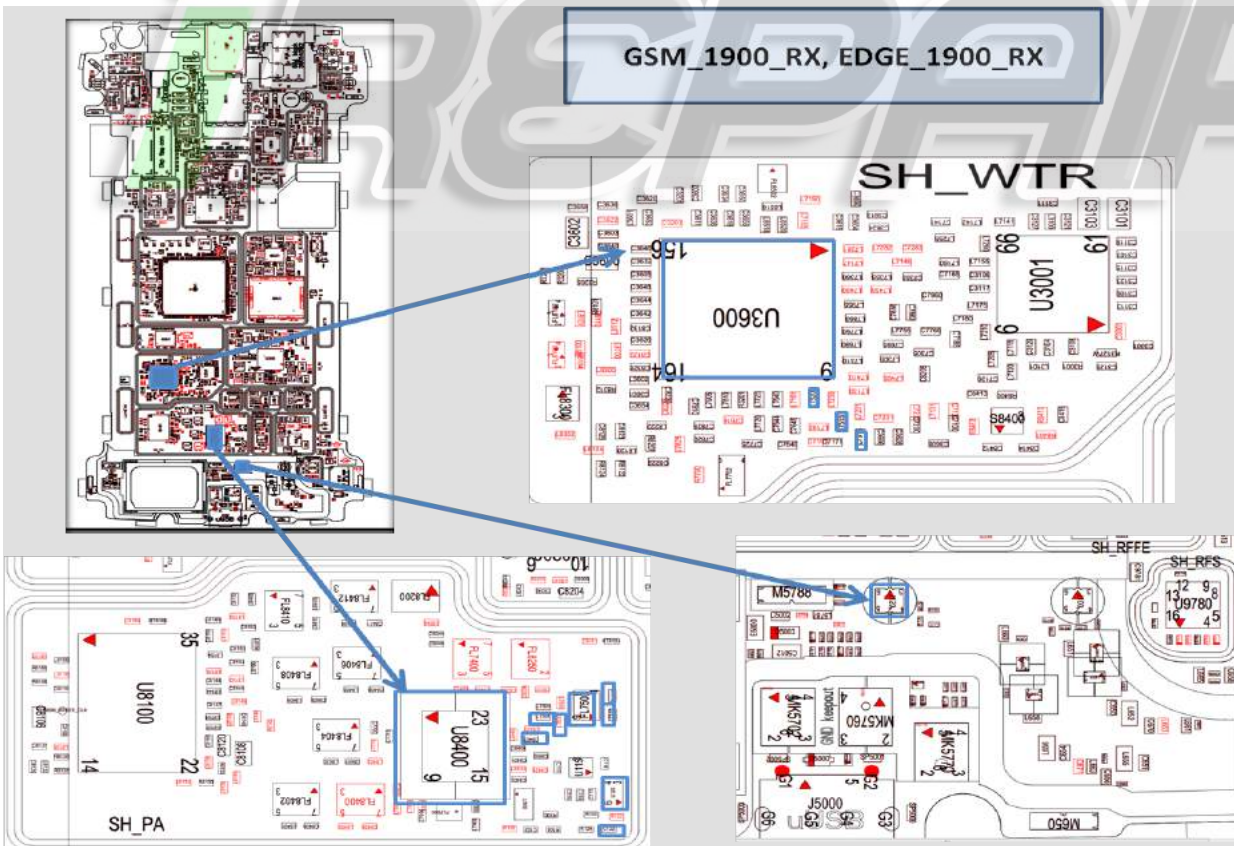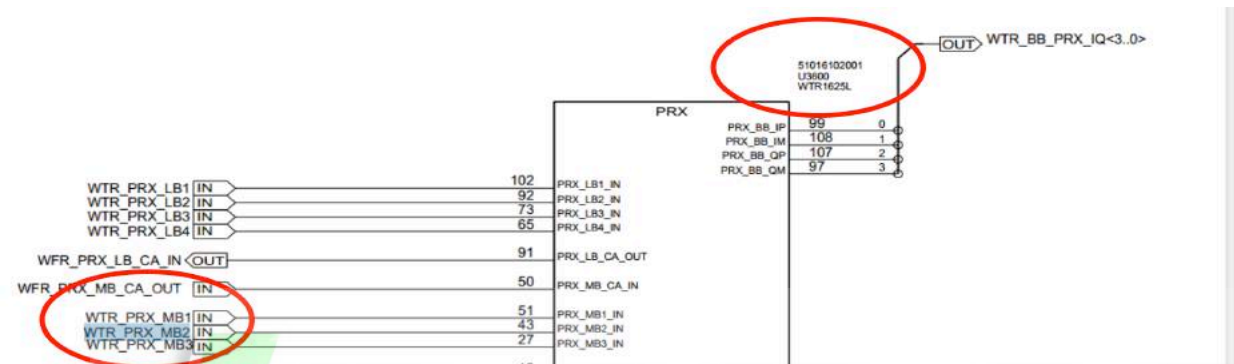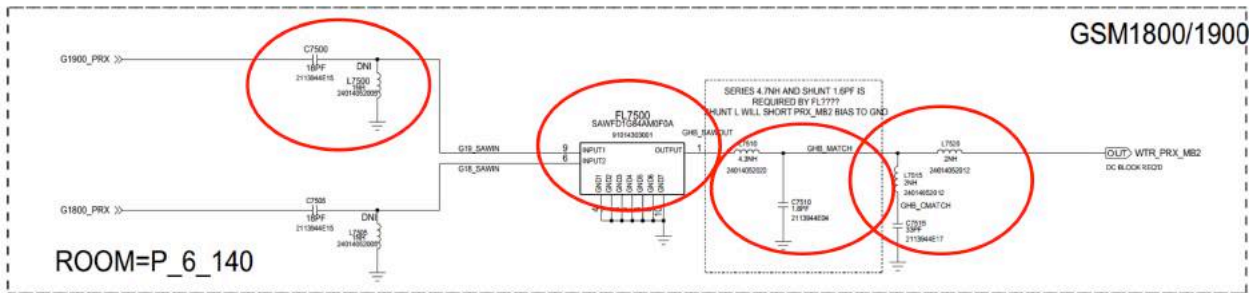

WCDMA B1 **C0** RX ATT & VZW

L3 Moto X RF Troubleshooting Guide

RF Test


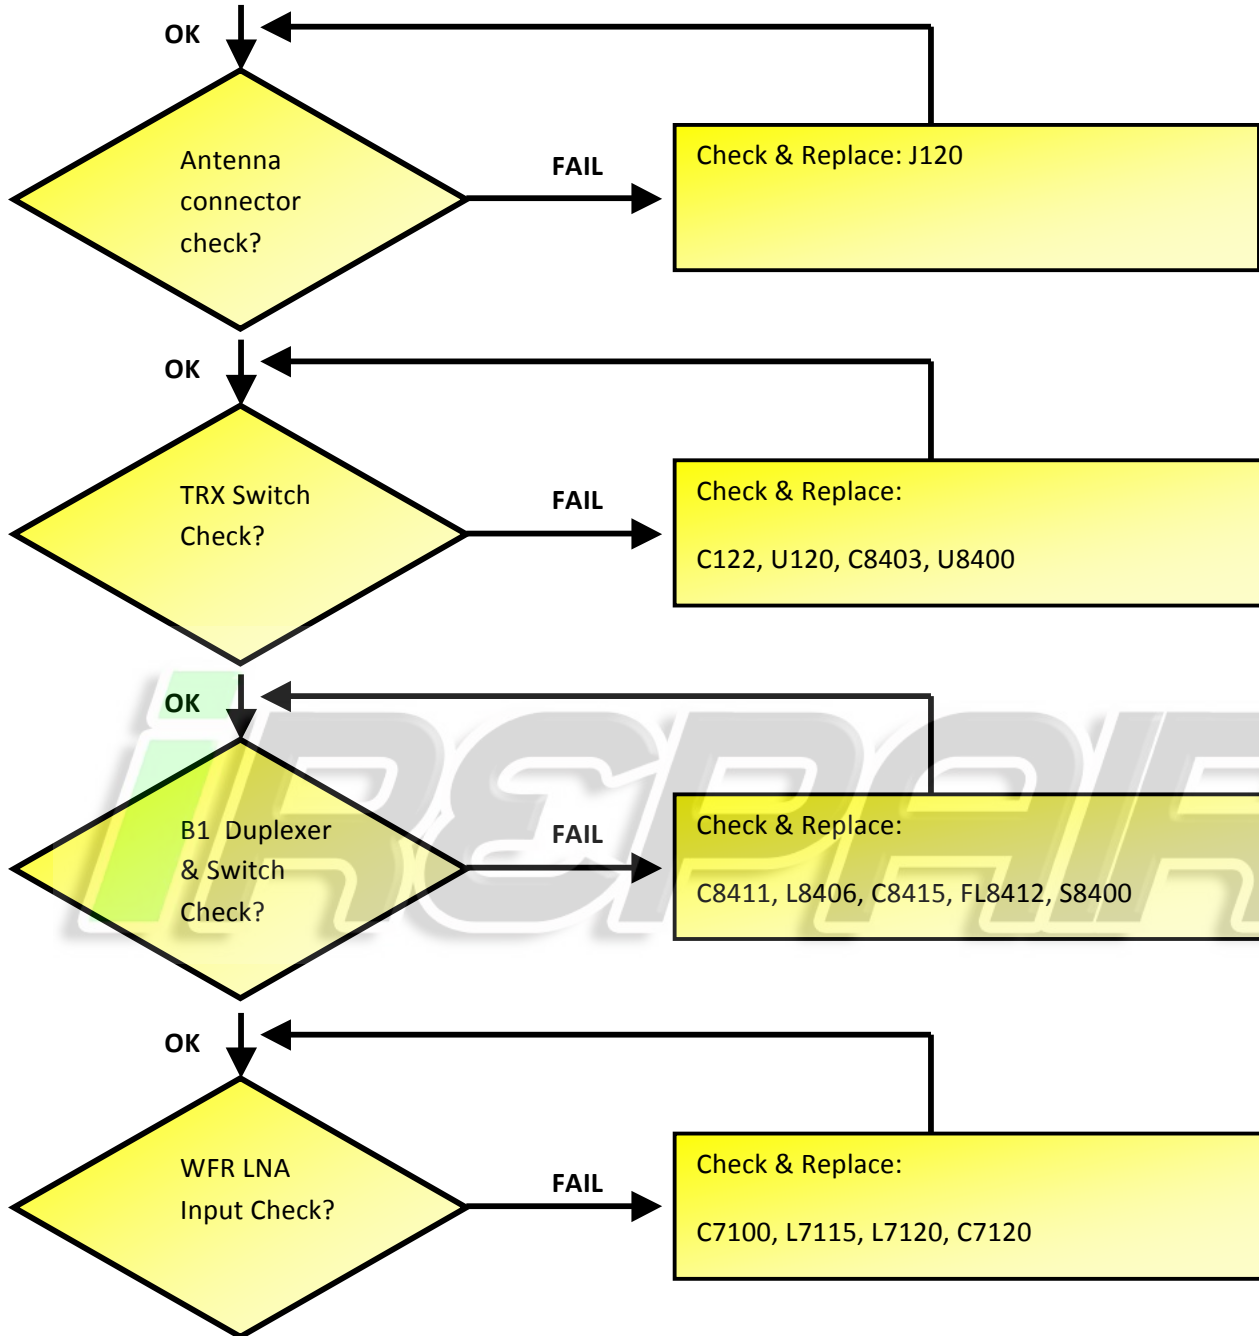


TITLE

MODEL

L3 Moto X RF Troubleshooting Guide

RF Test

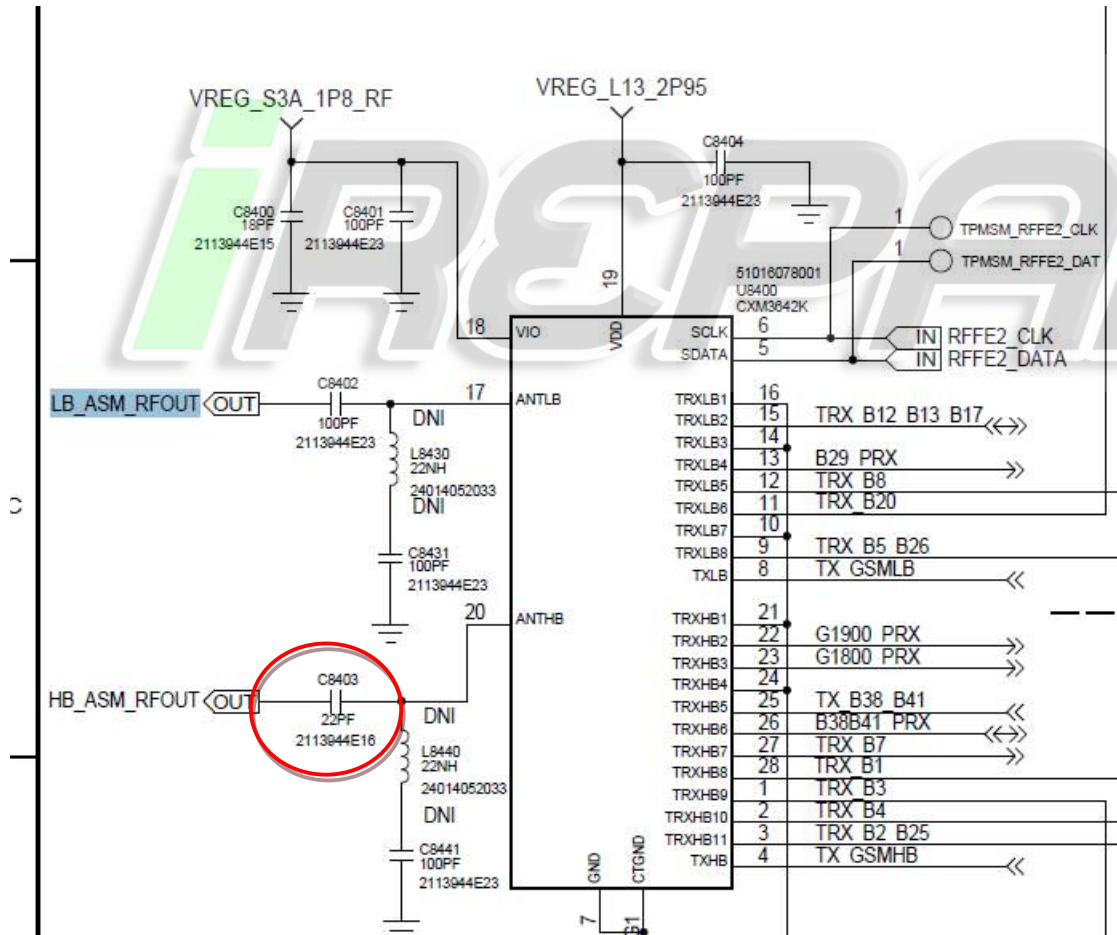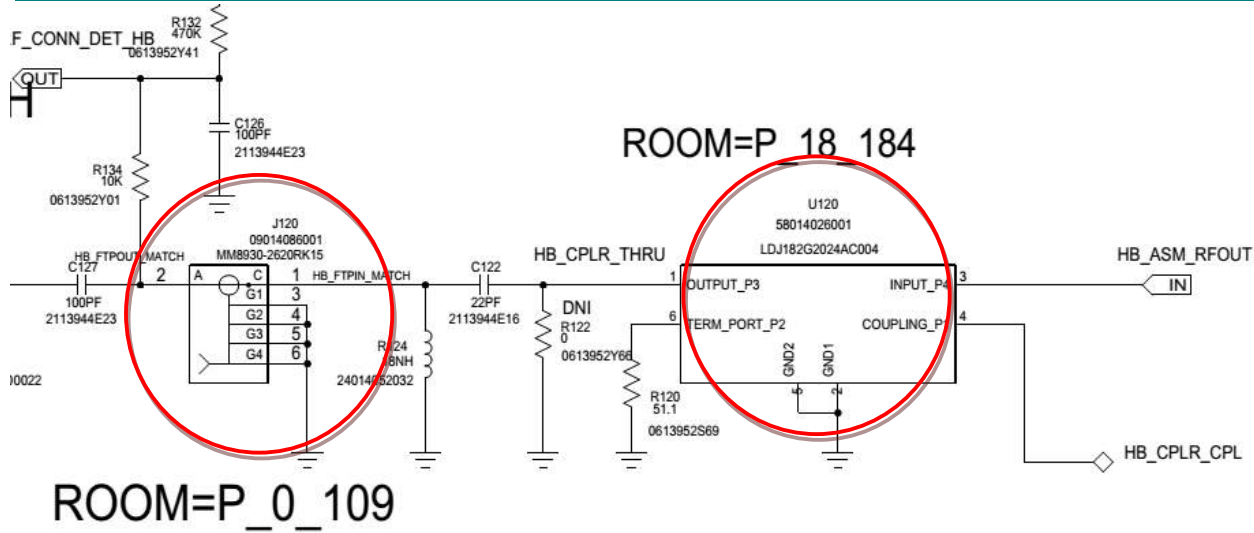





TITLE

MODEL

L3 Moto X RF Troubleshooting Guide


RF Test

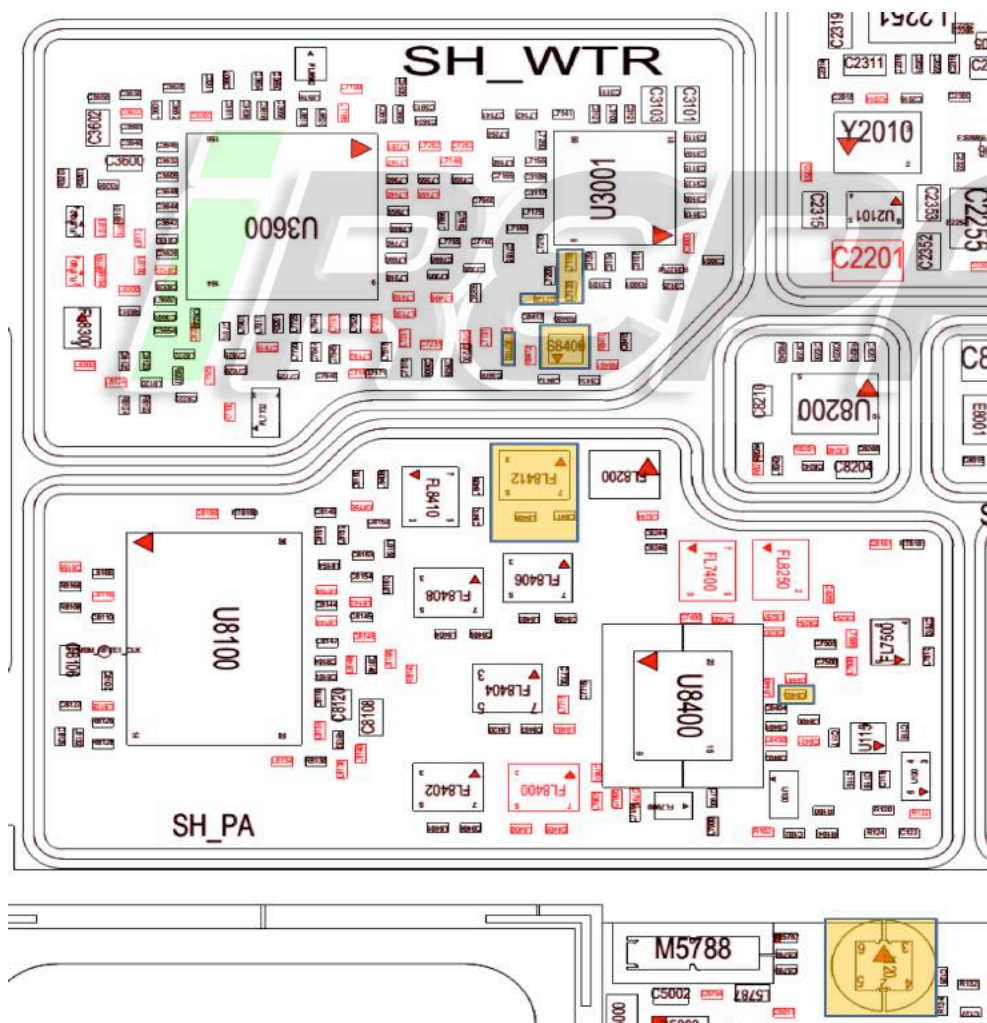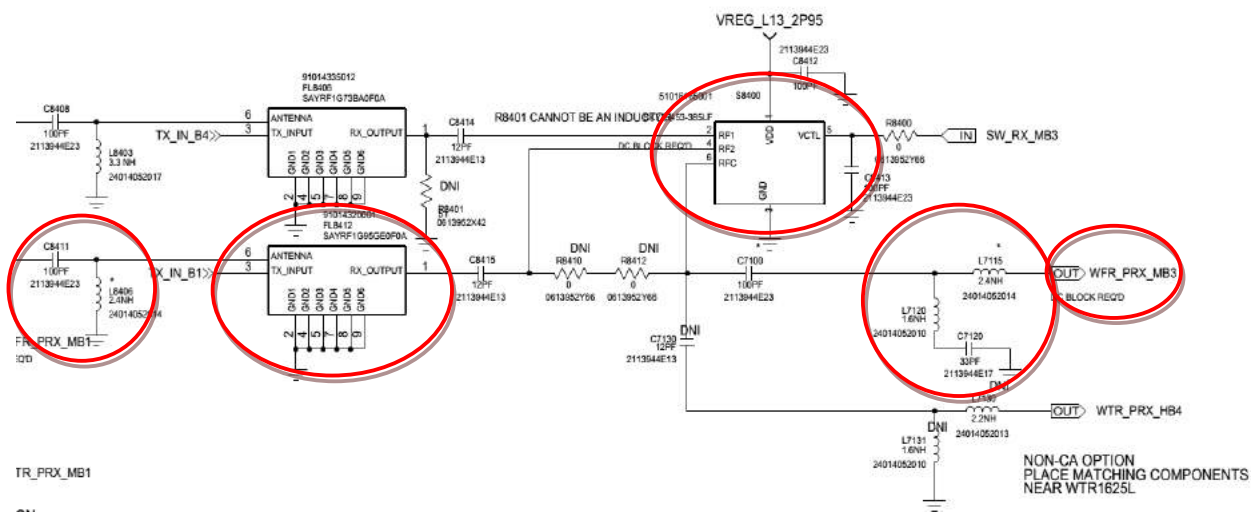

L3 Moto X RF Troubleshooting Guide

RF Test

WCDMA B1 **C0** RX SPRINT


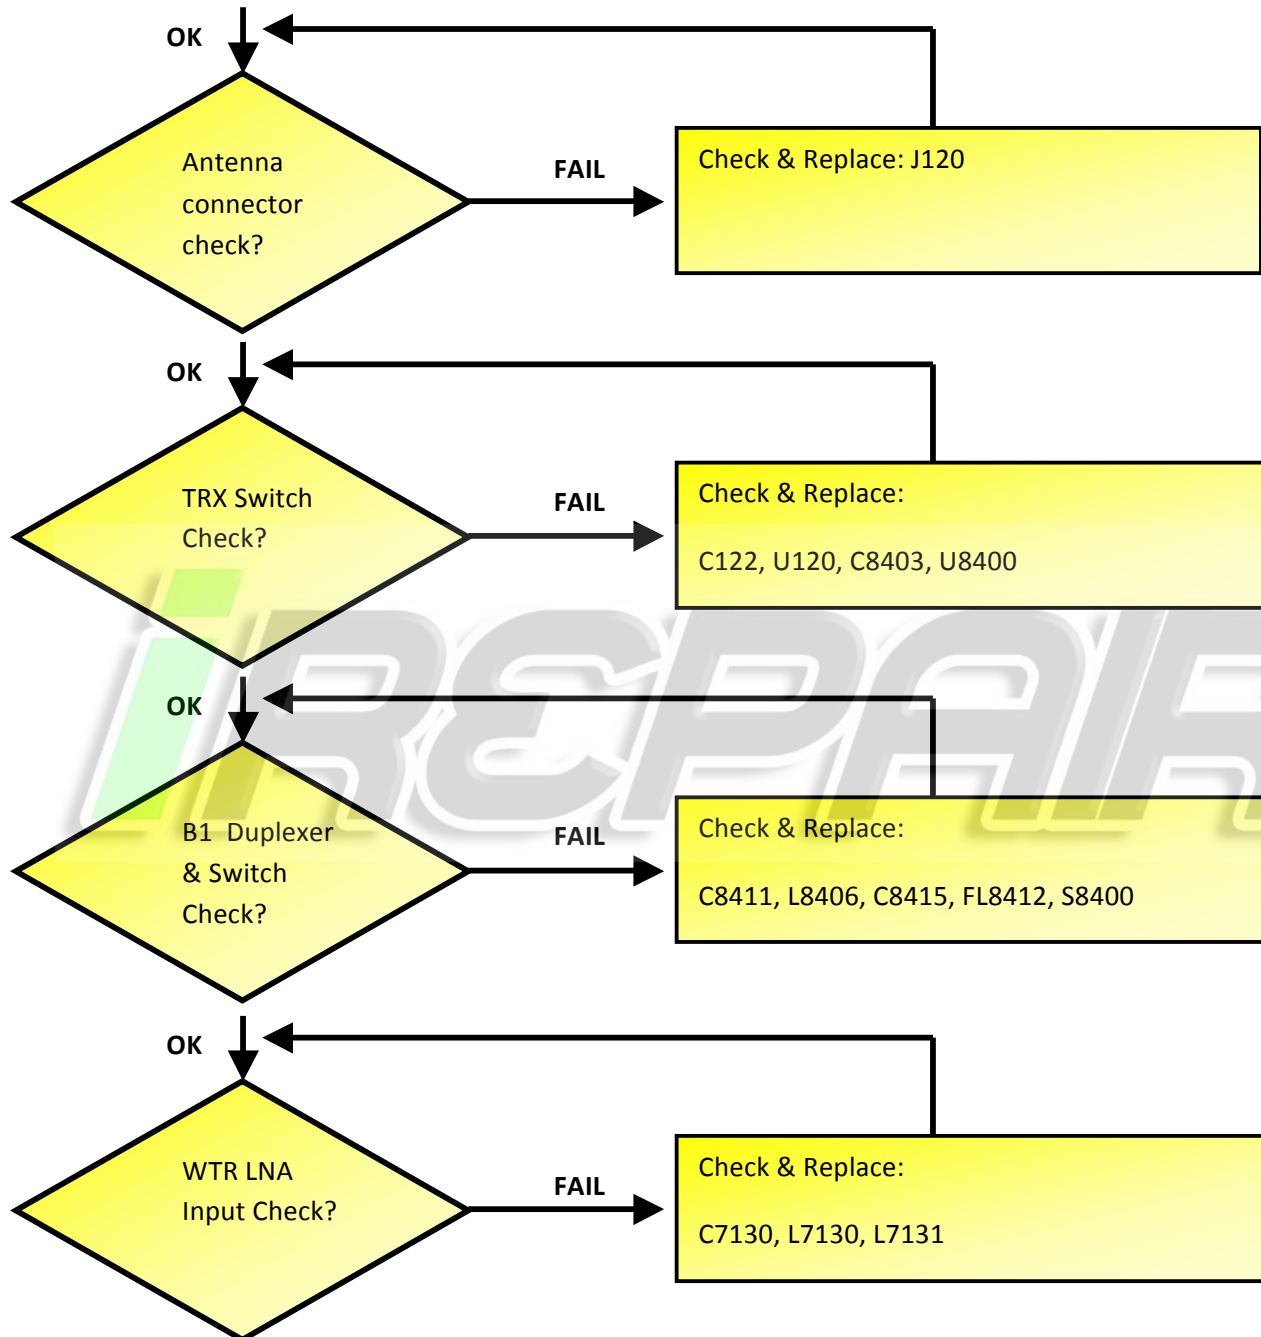


TITLE

MODEL

L3 Moto X RF Troubleshooting Guide

RF Test

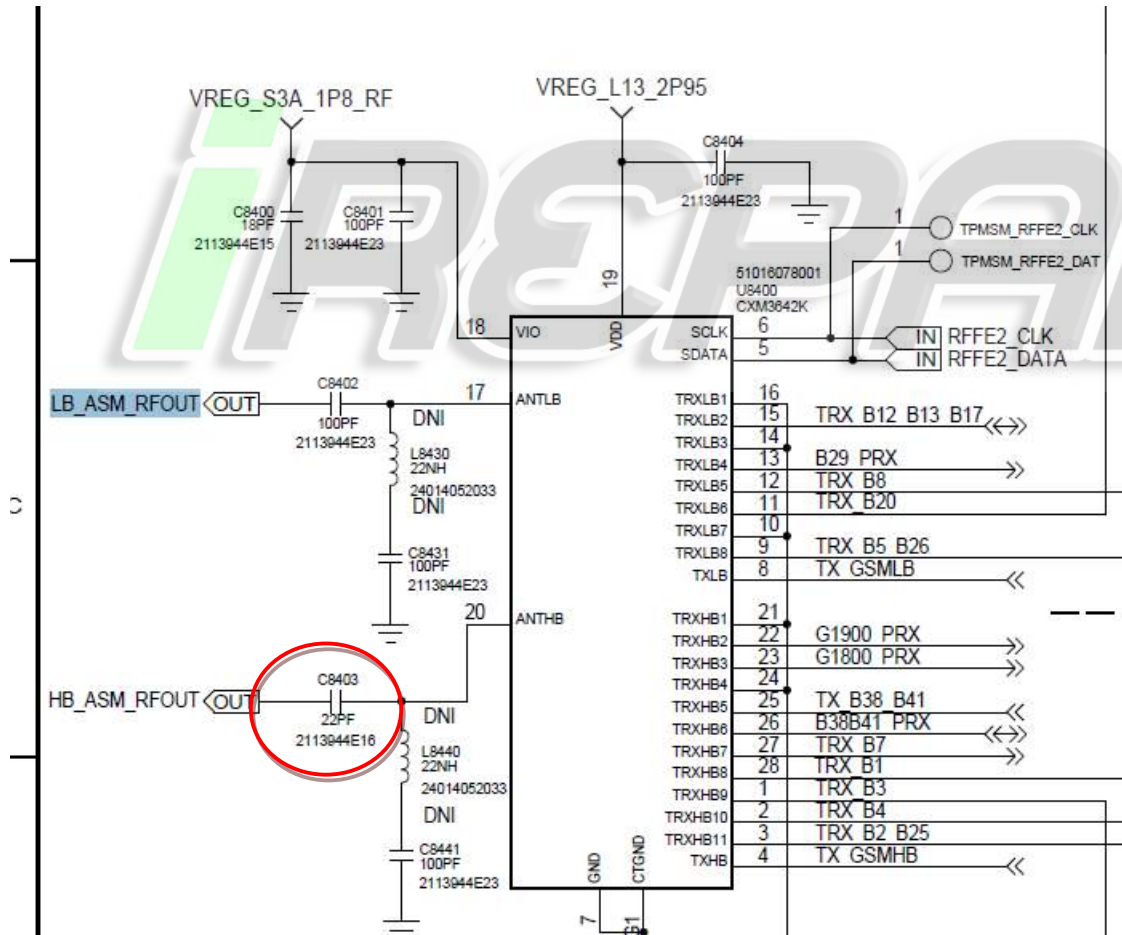
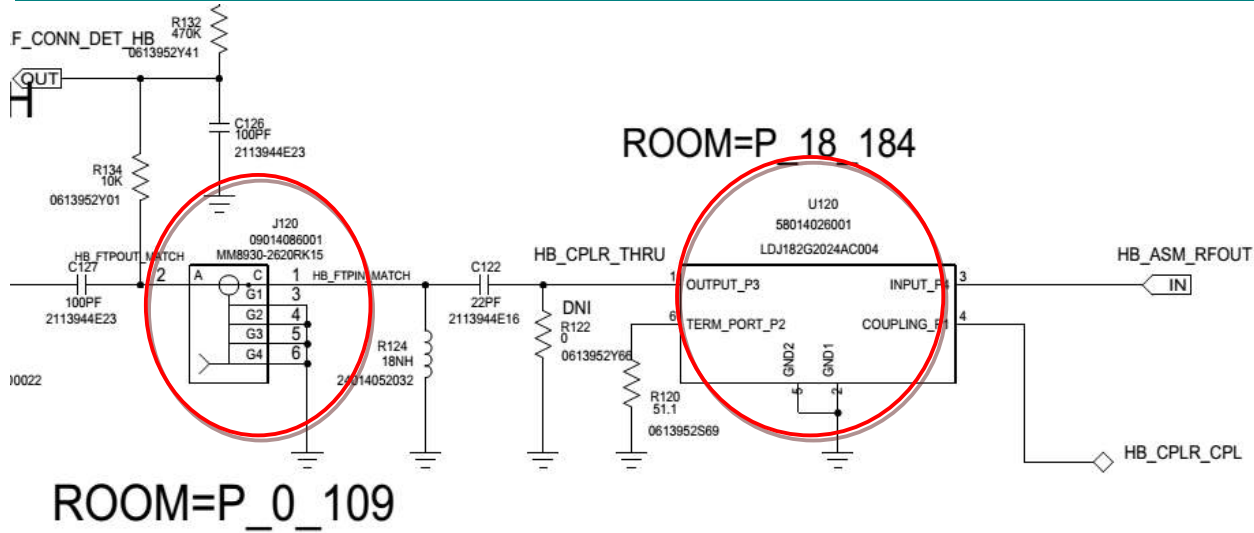


TITLE

MODEL

L3 Moto X RF Troubleshooting Guide


RF Test

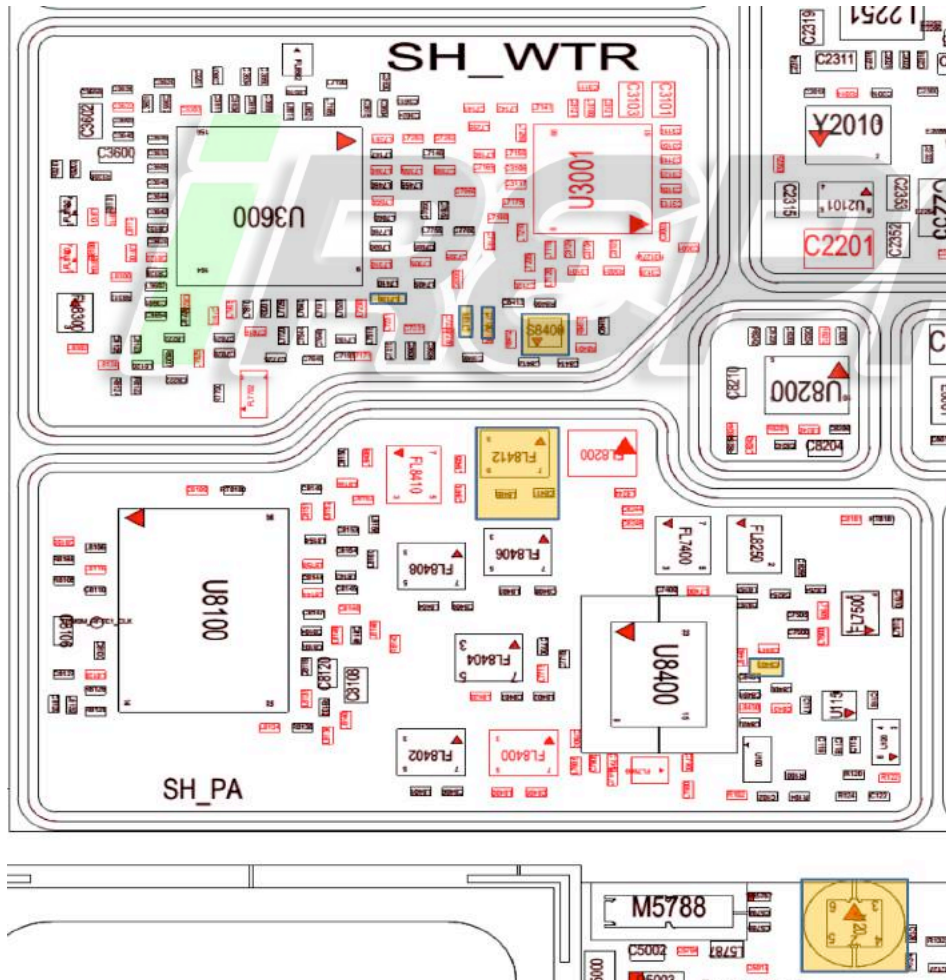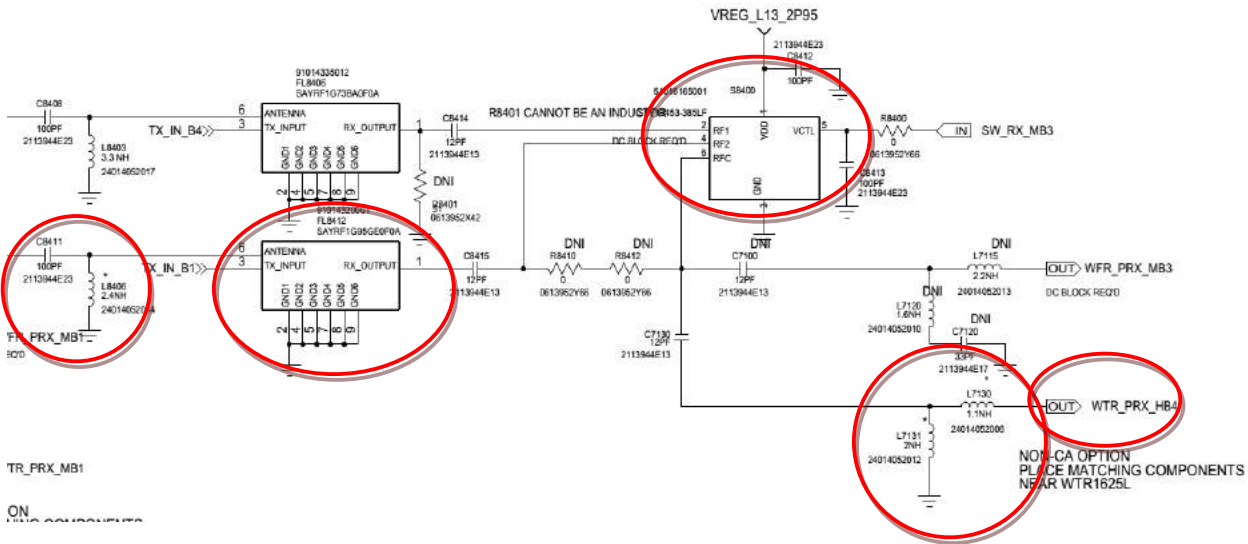

L3 Moto X RF Troubleshooting Guide

RF Test

LTE B1, WCDMA B1 C0 RX EU SKU


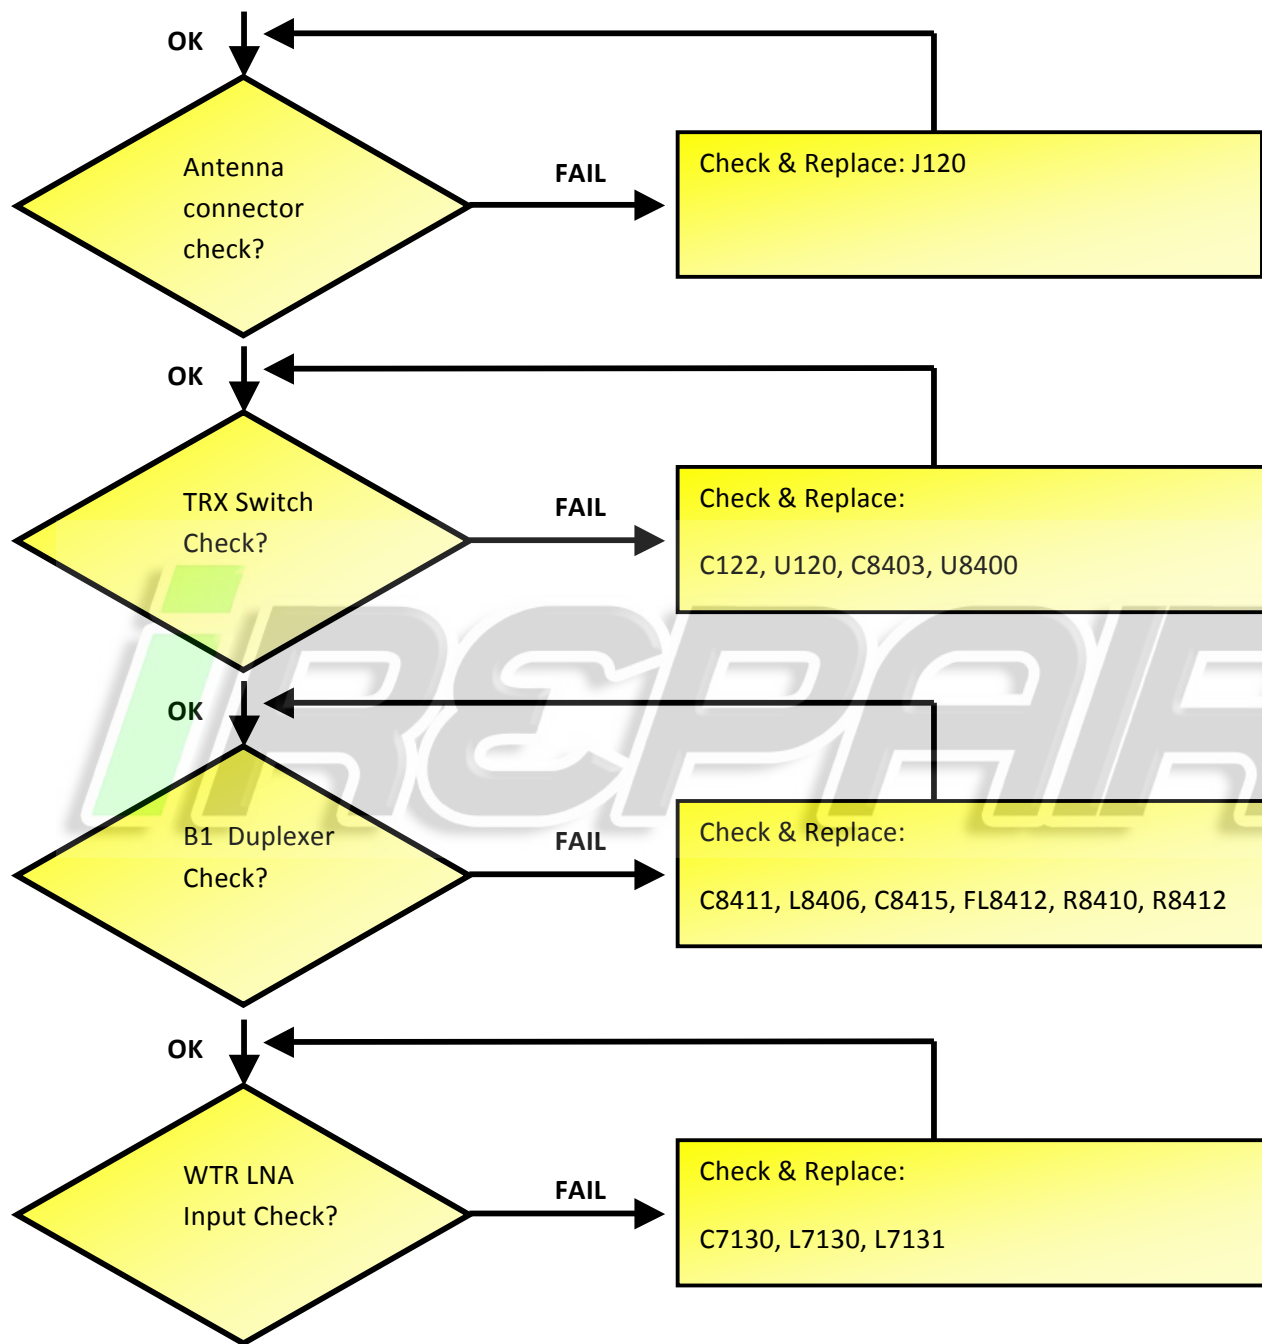


TITLE

MODEL

L3 Moto X RF Troubleshooting Guide

RF Test

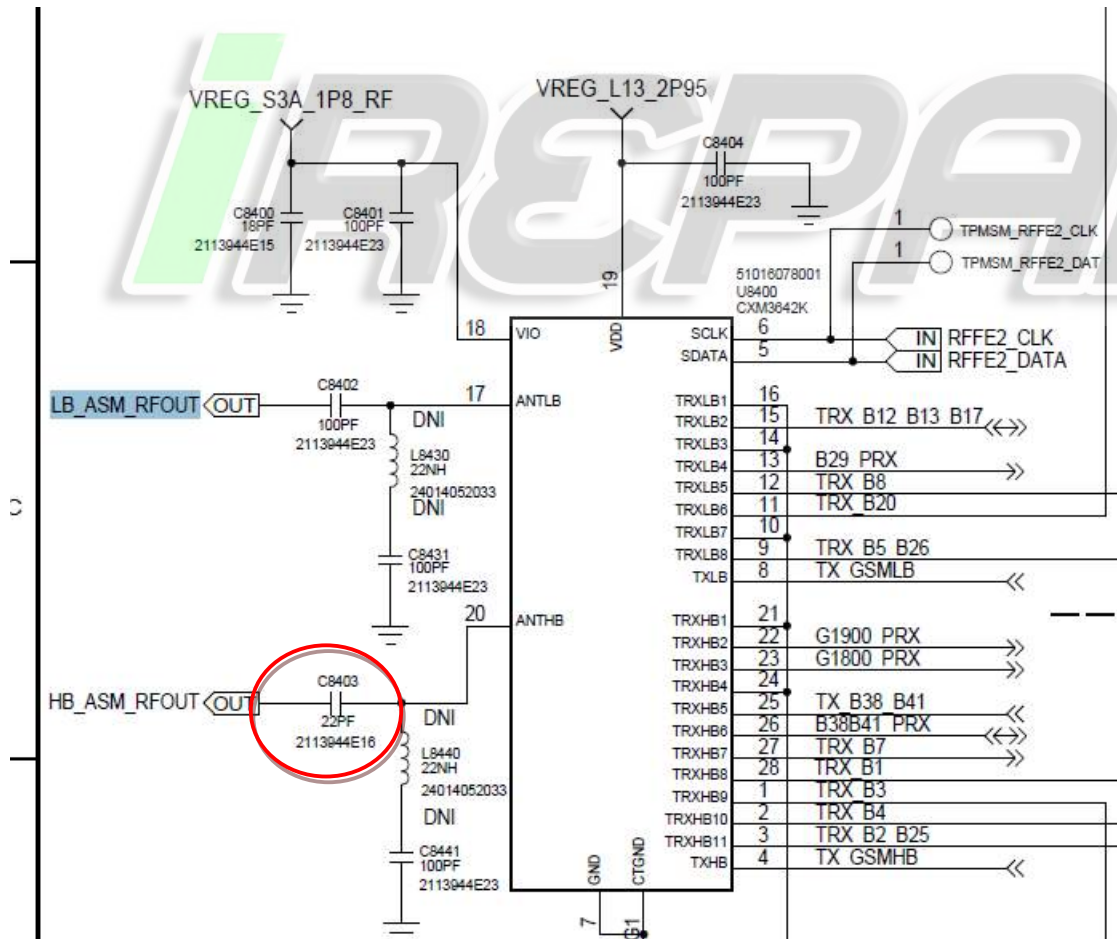
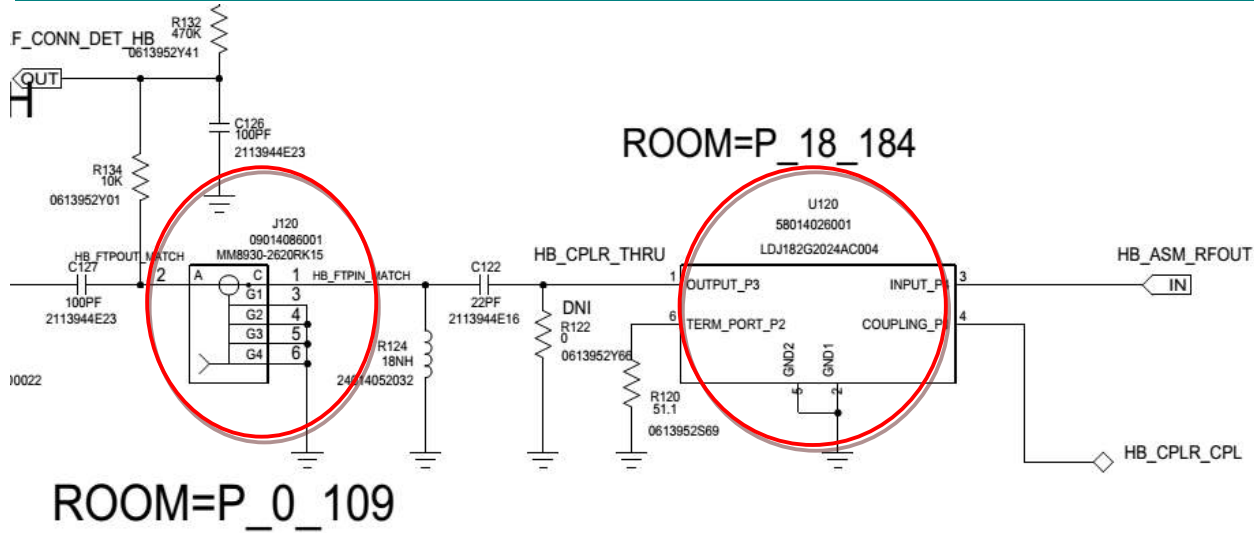


TITLE

MODEL


L3 Moto X RF Troubleshooting Guide

RF Test

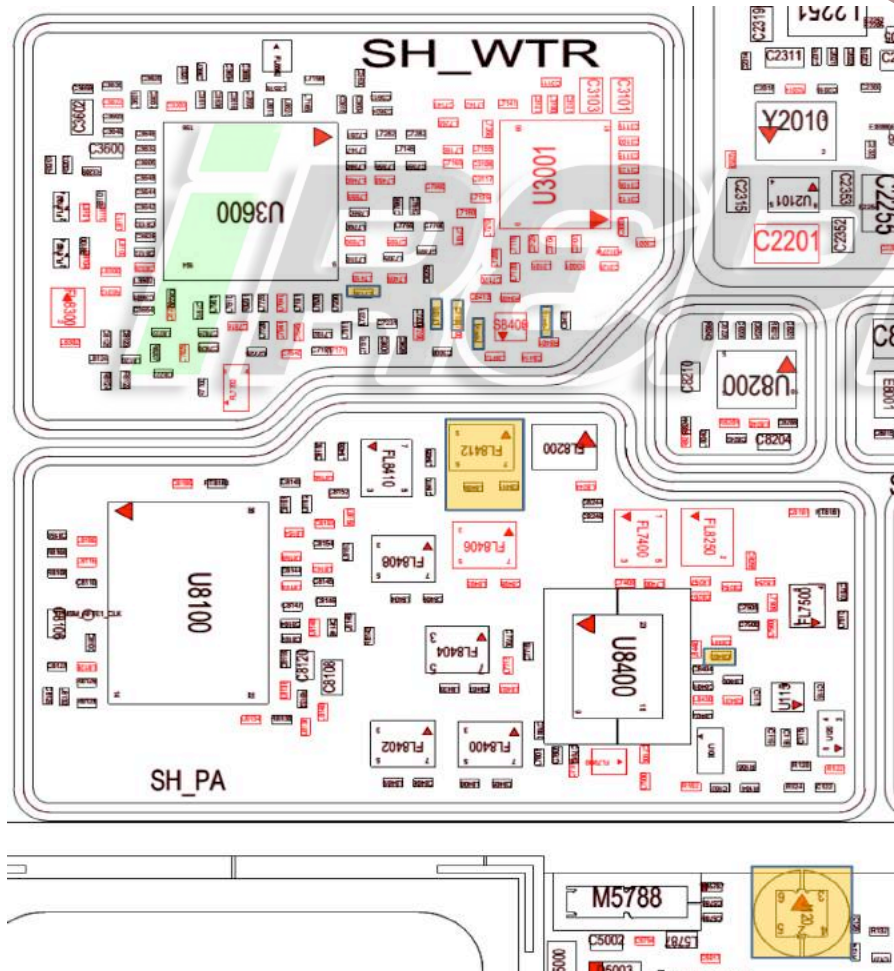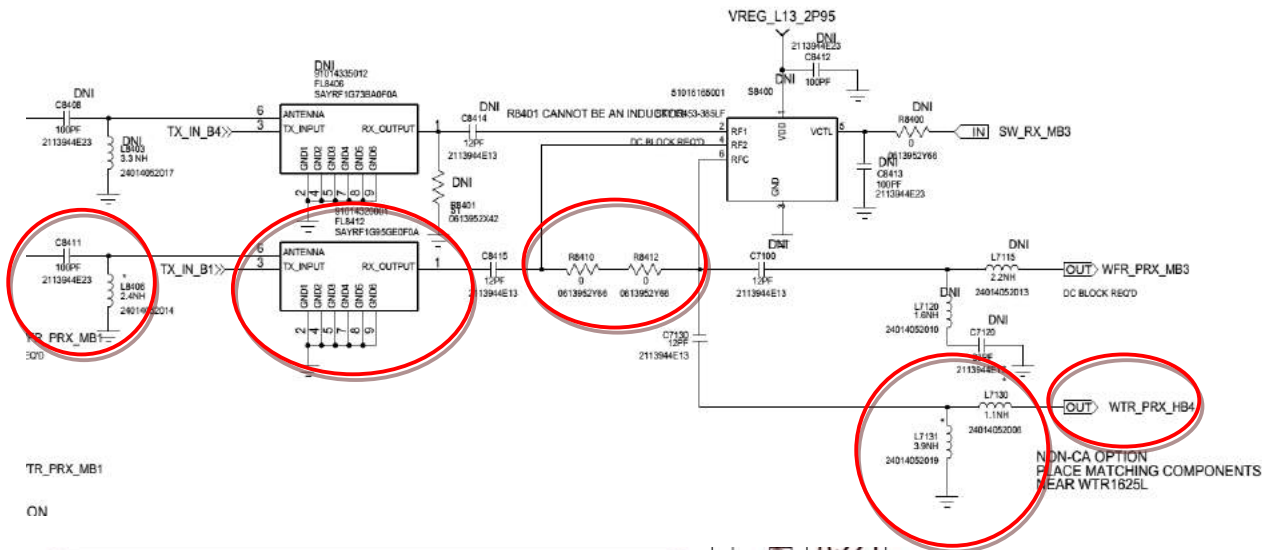

L3 Moto X RF Troubleshooting Guide

RF Test

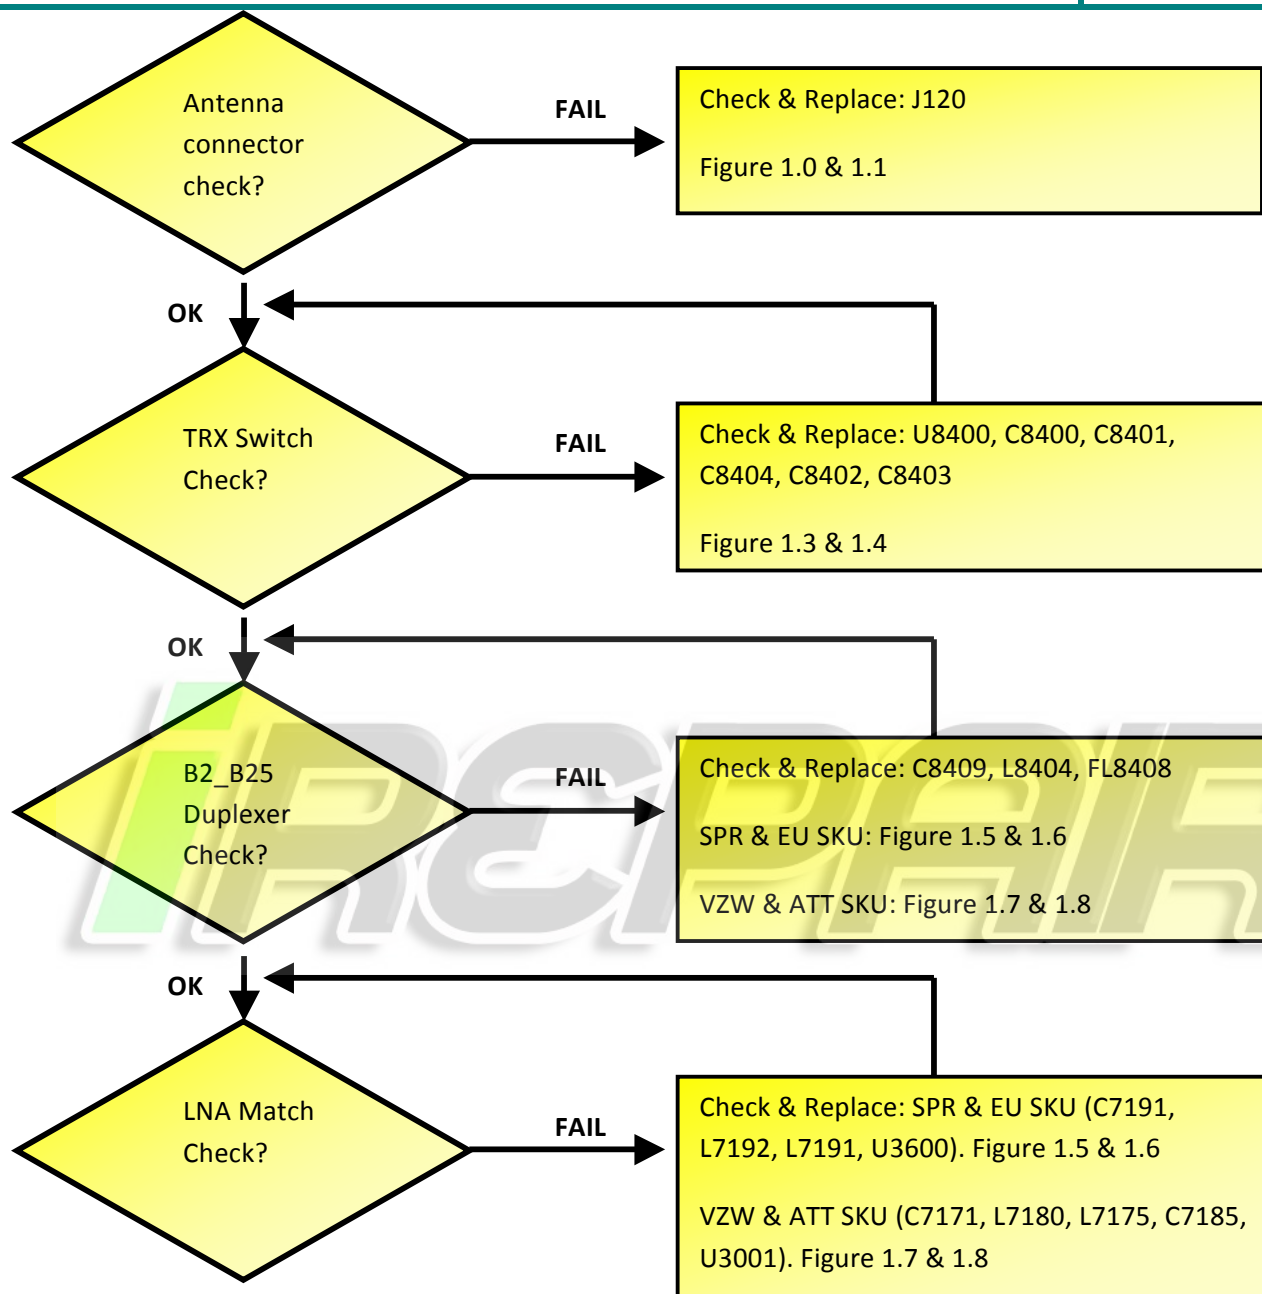

L3 Moto X RF Troubleshooting Guide

RF Test

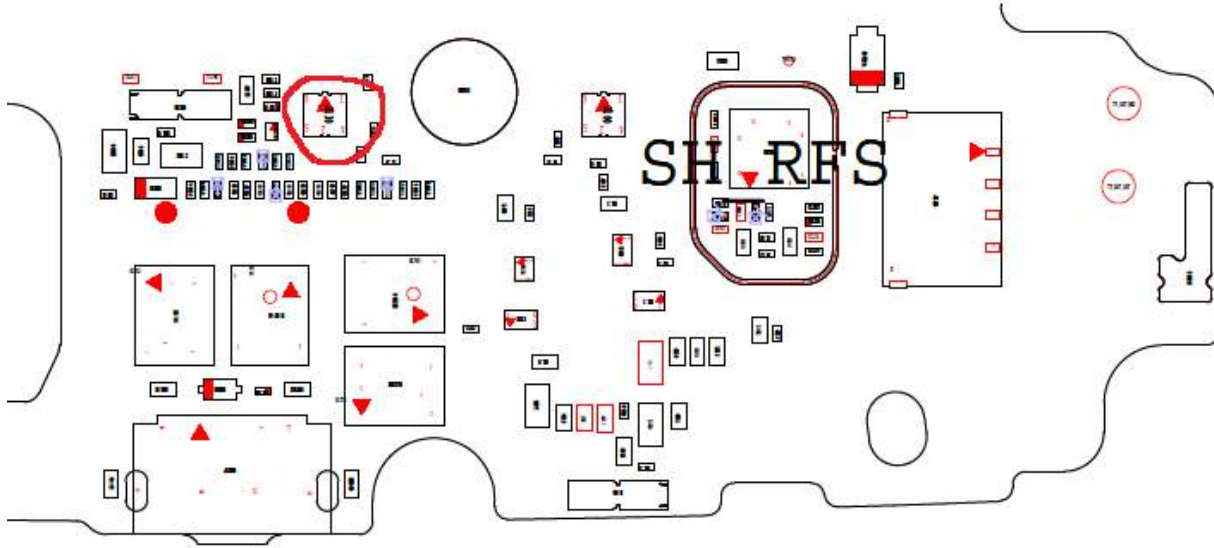


Figure 1.0

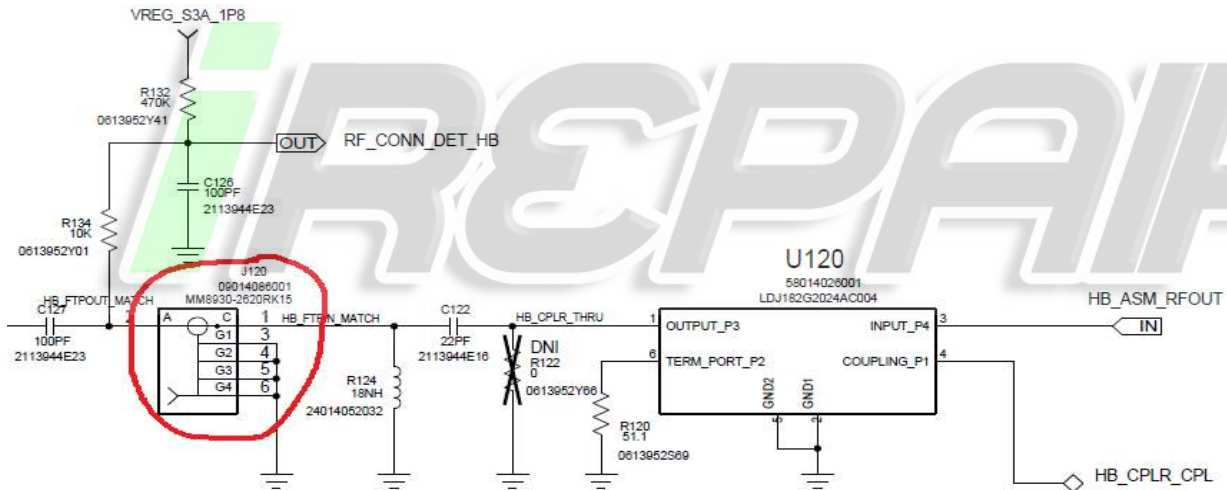


Figure 1.1

L3 Moto X RF Troubleshooting Guide

RF Test

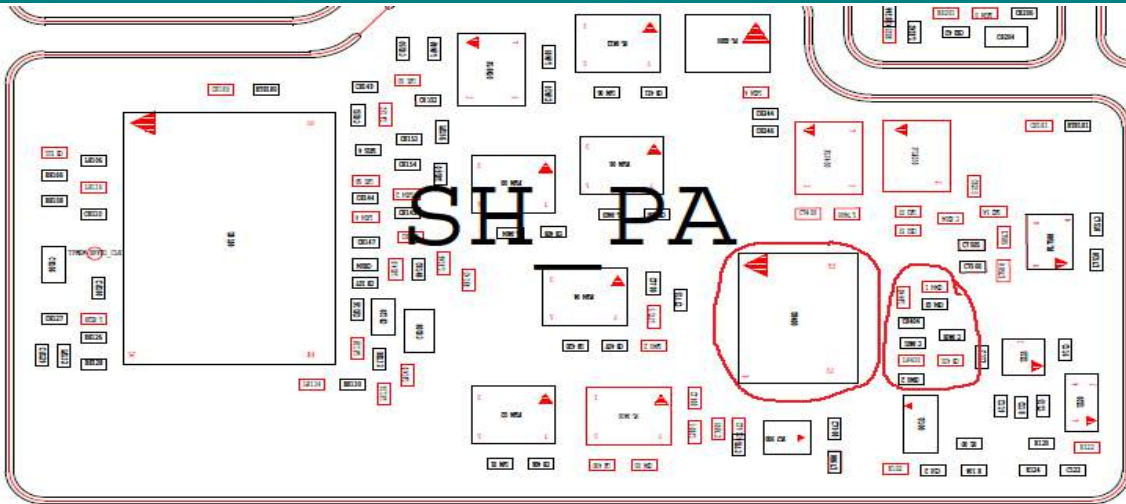


Figure 1.3

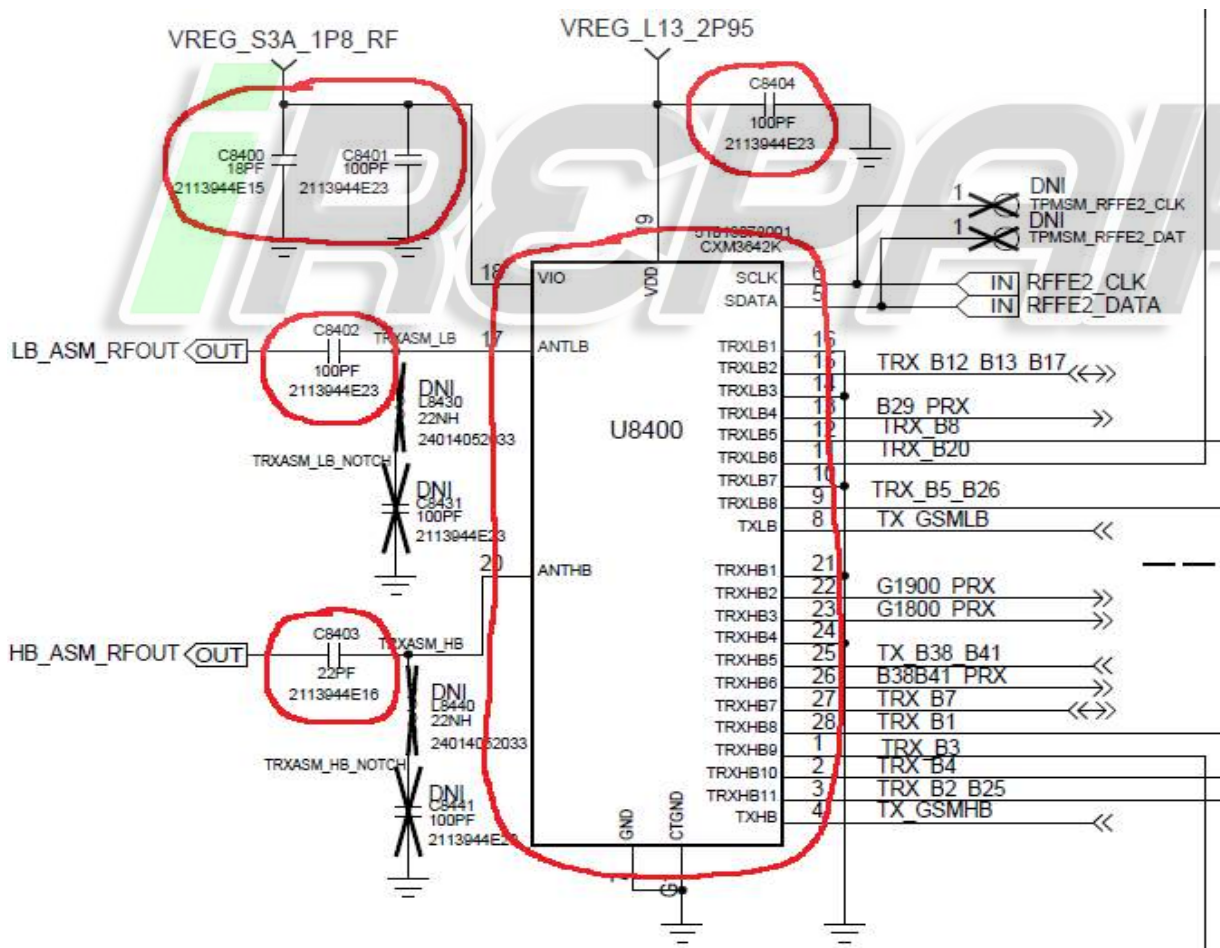


Figure 1.4

L3 Moto X RF Troubleshooting Guide

RF Test

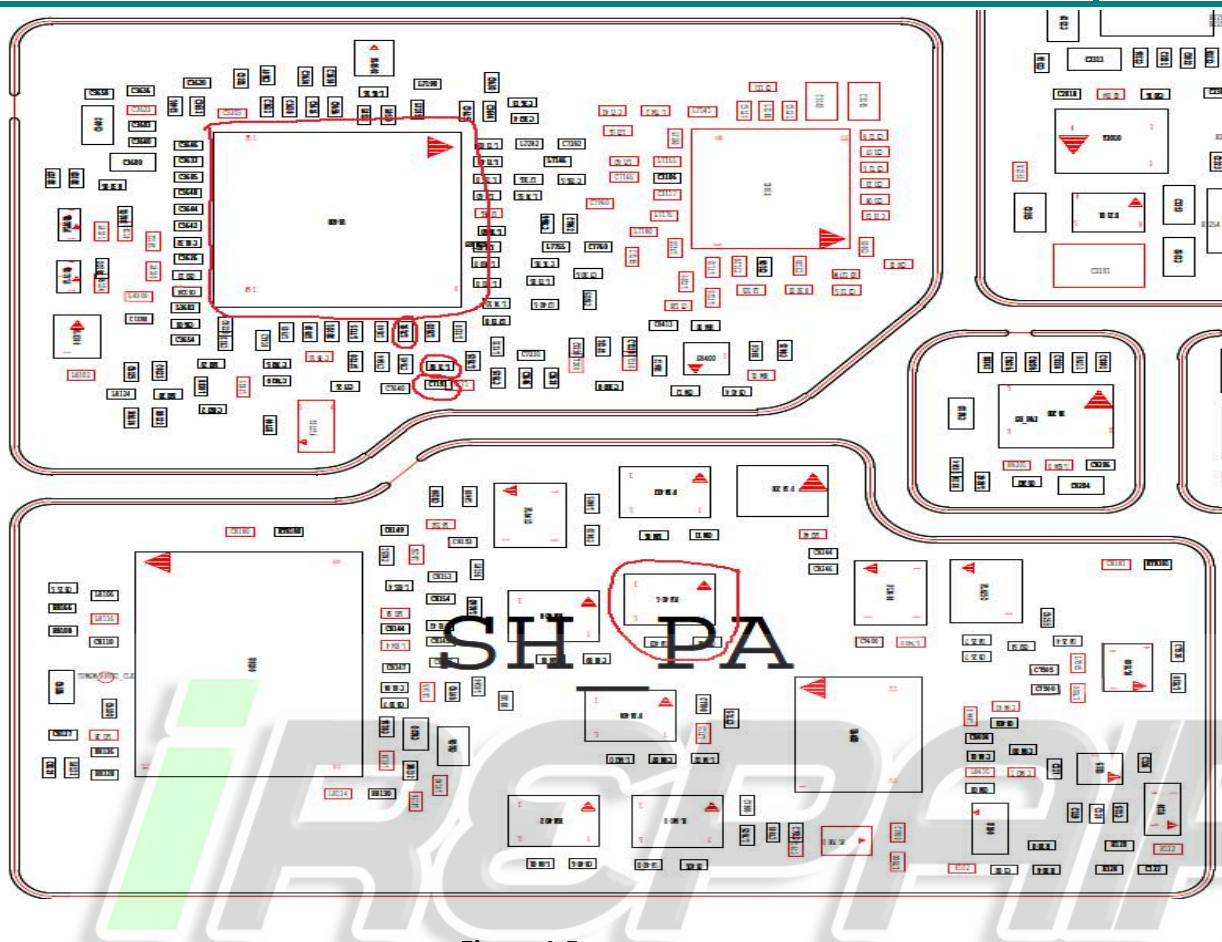


Figure 1.5

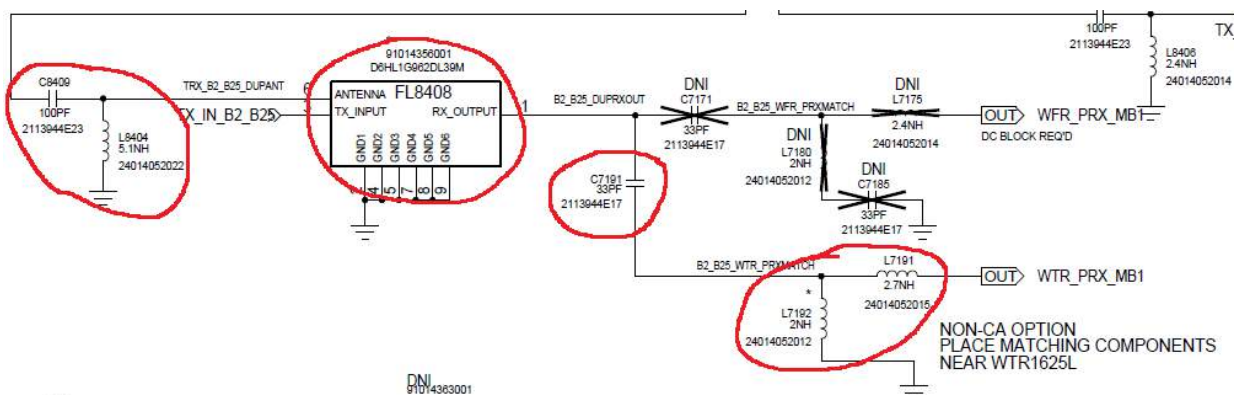


Figure 1.6

L3 Moto X RF Troubleshooting Guide

RF Test

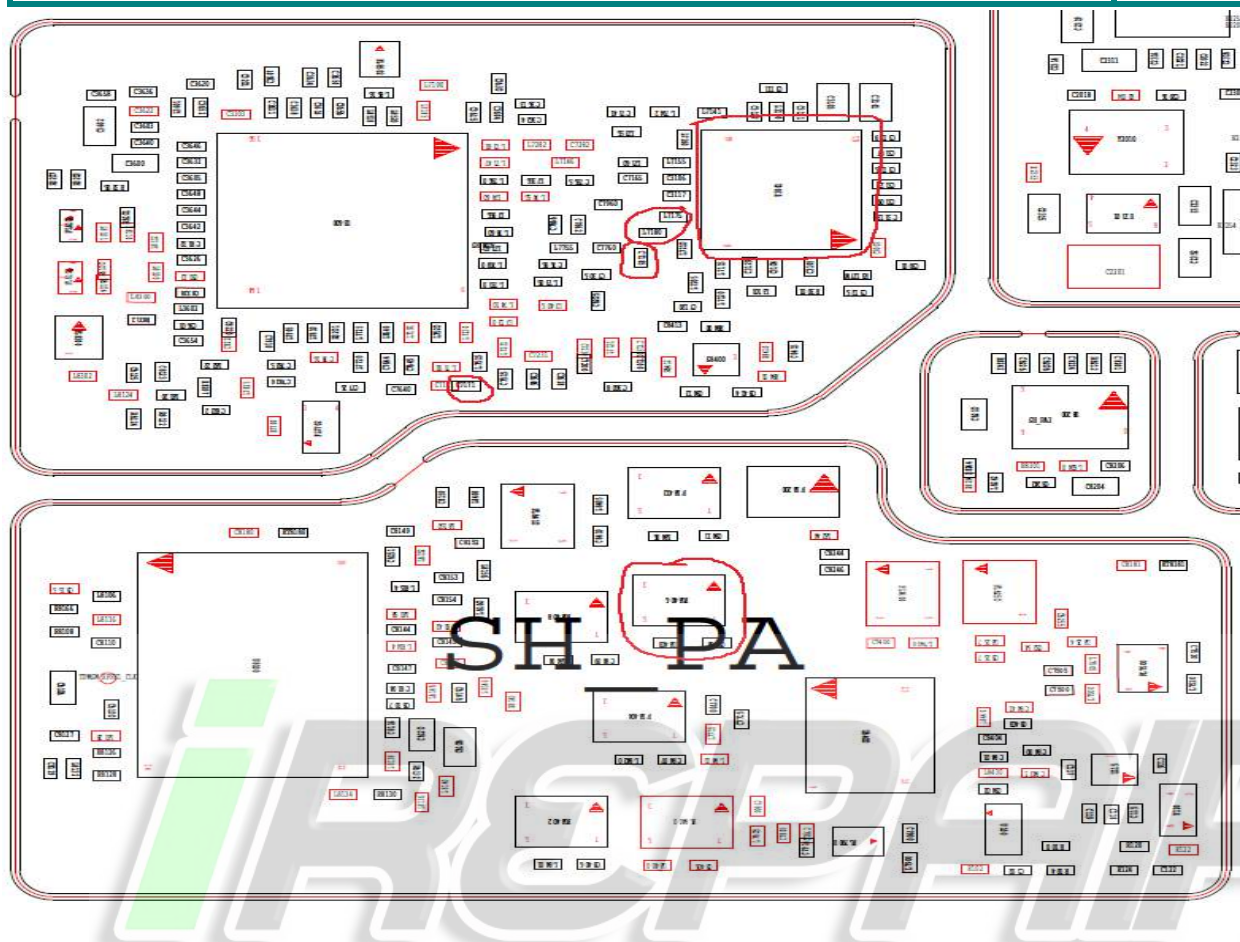


Figure 1.7


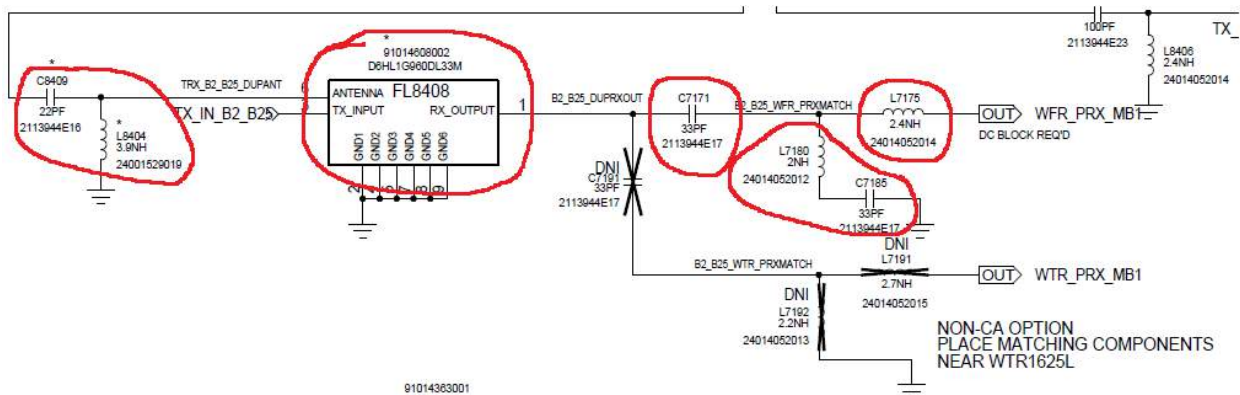


Figure 1.8

LTE B3 **C0** RX ATT & VZW SKUs




L3 Moto X RF Troubleshooting Guide

RF Test

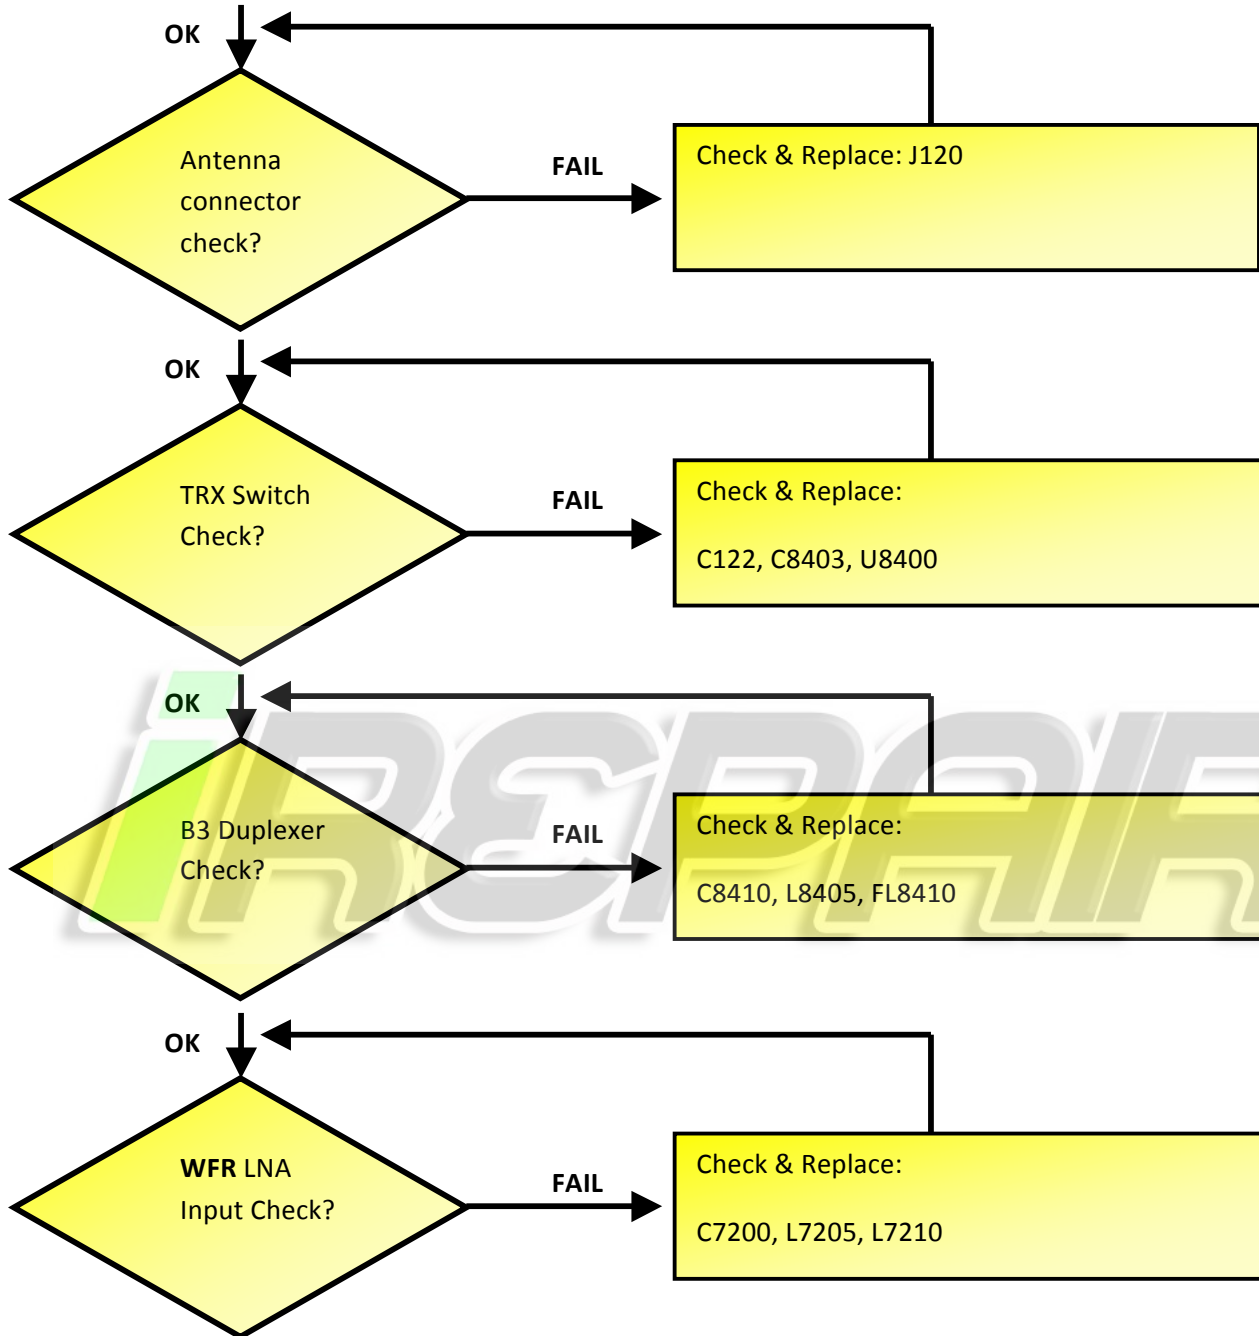


L3 Moto X RF Troubleshooting Guide

RF Test

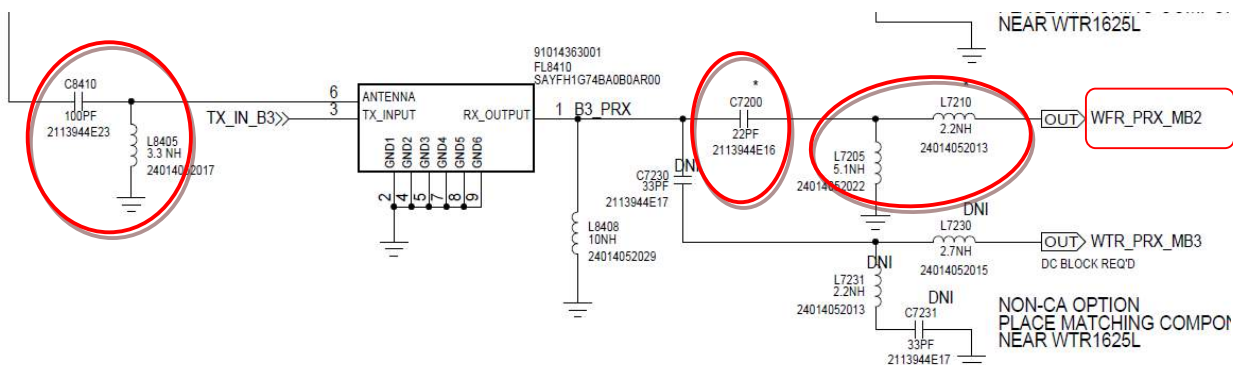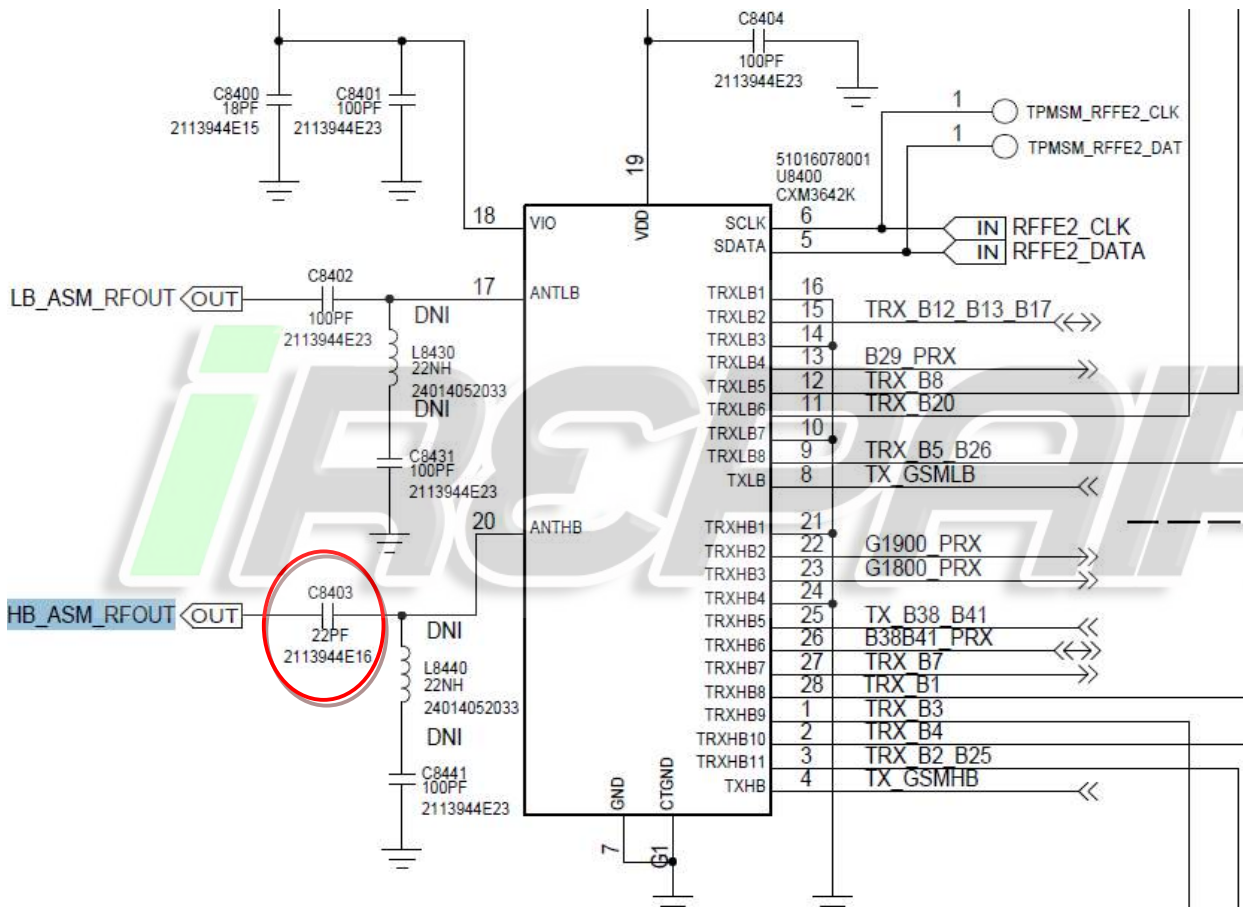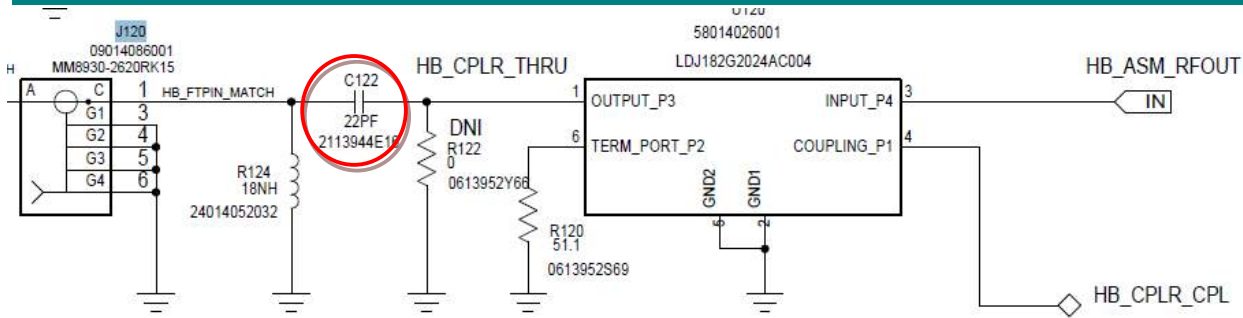


L3 Moto X RF Troubleshooting Guide

RF Test

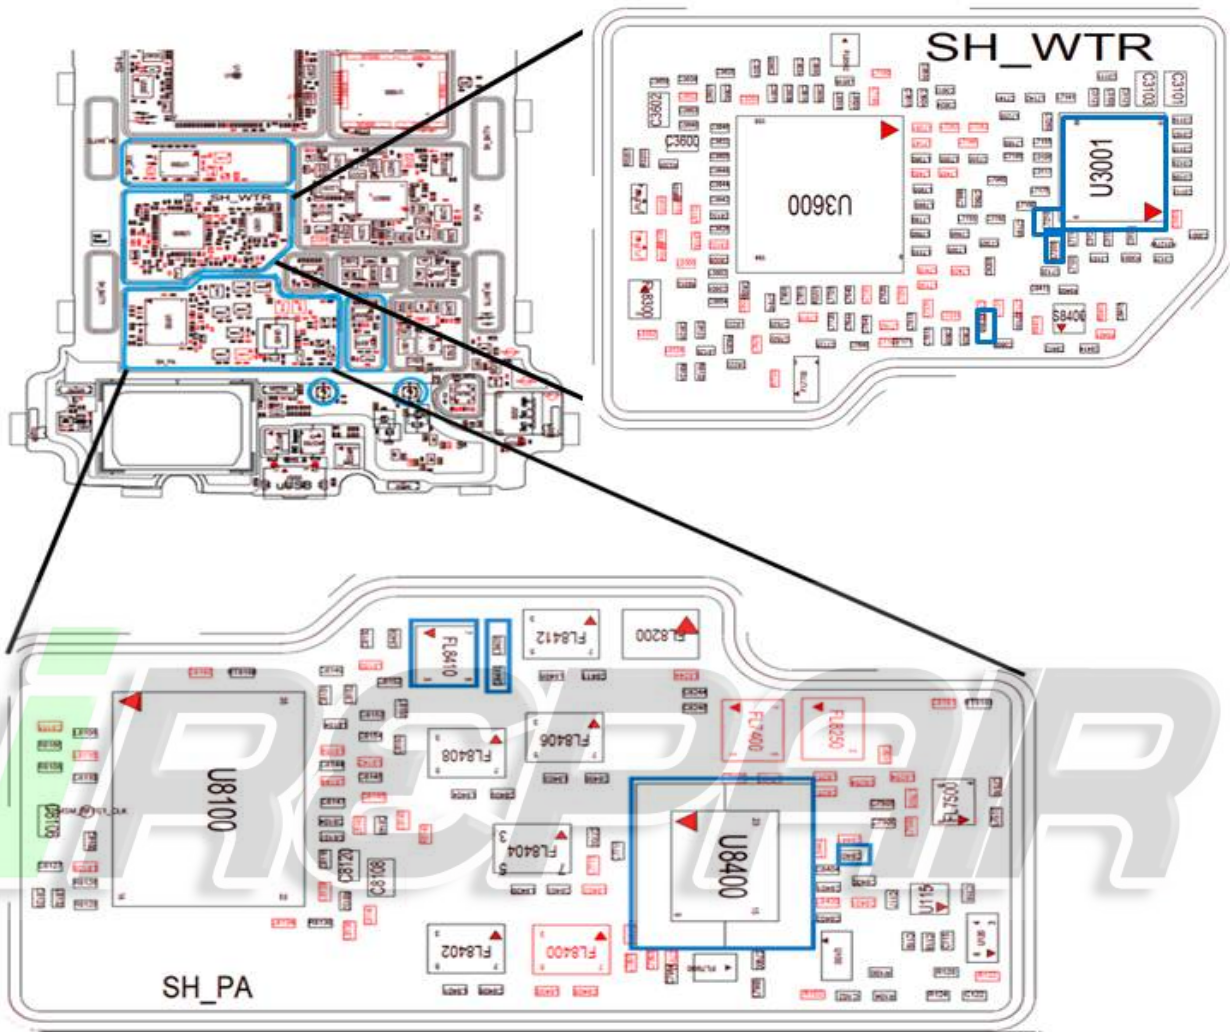


LTE & WCDMA B3 **C0** RX EU SKU

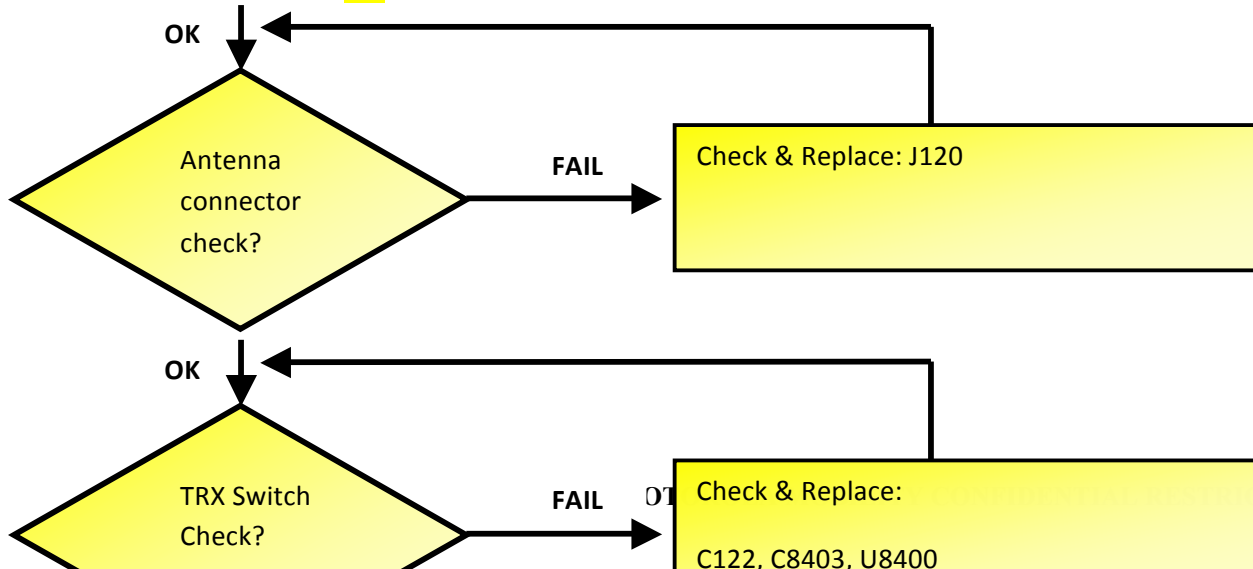


L3 Moto X RF Troubleshooting Guide

RF Test

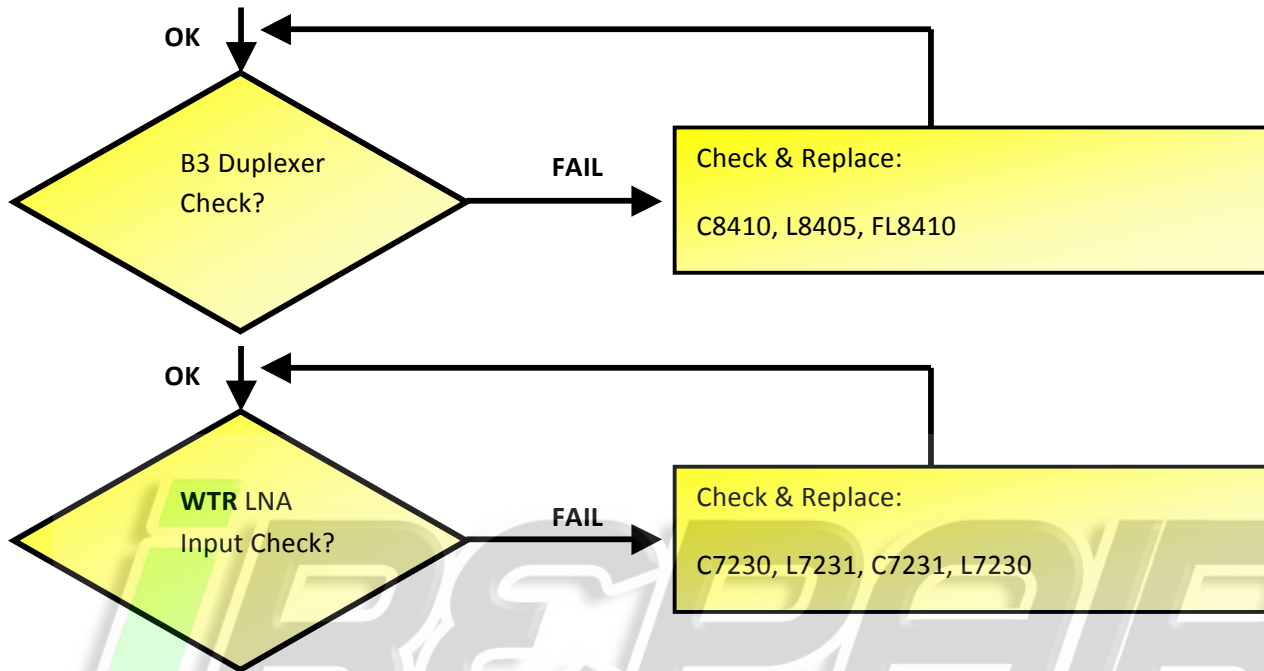


FAIL

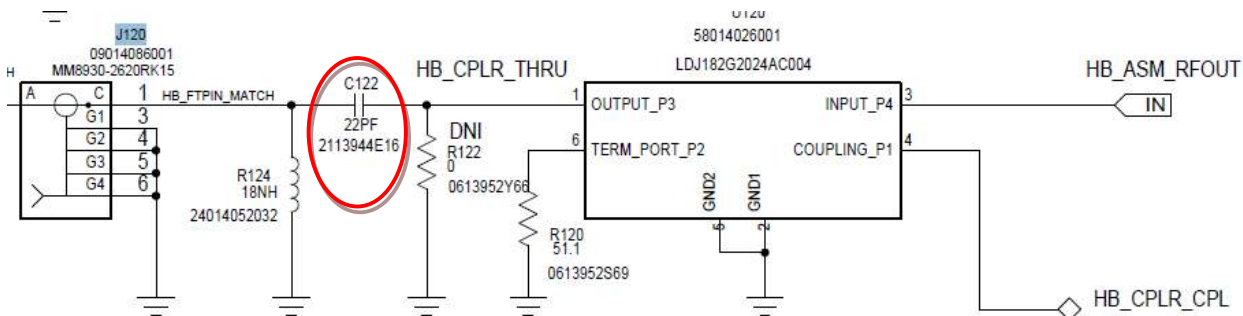



L3 Moto X RF Troubleshooting Guide

RF Test

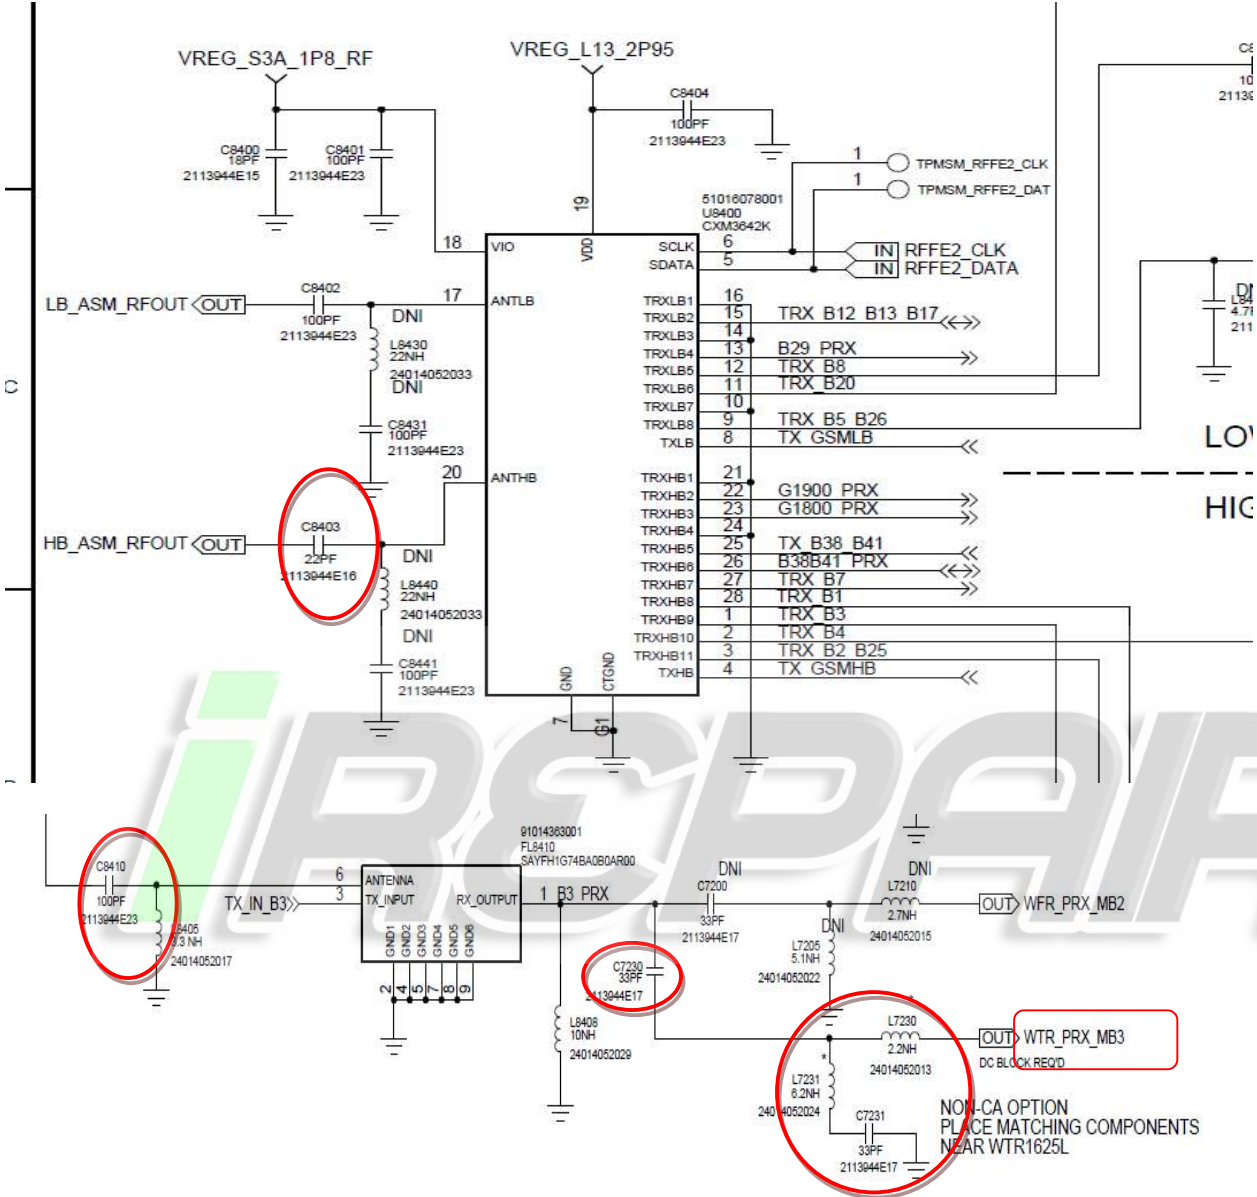



L3 Moto X RF Troubleshooting Guide

RF Test

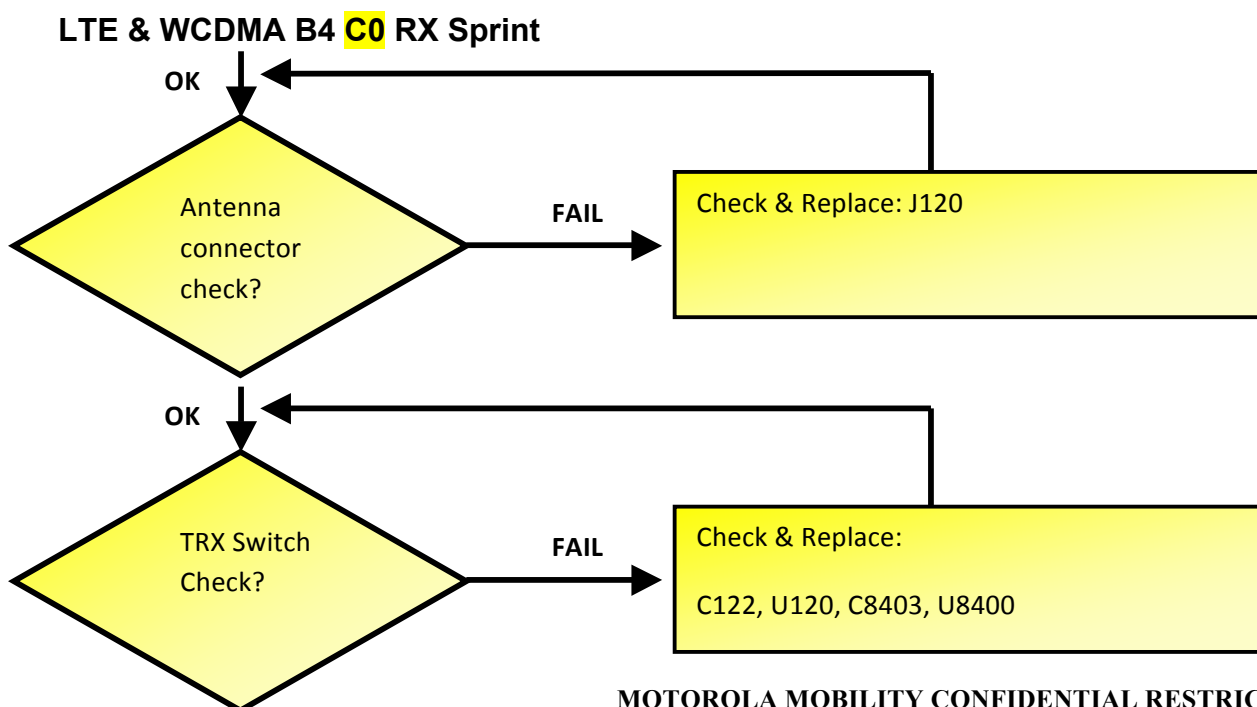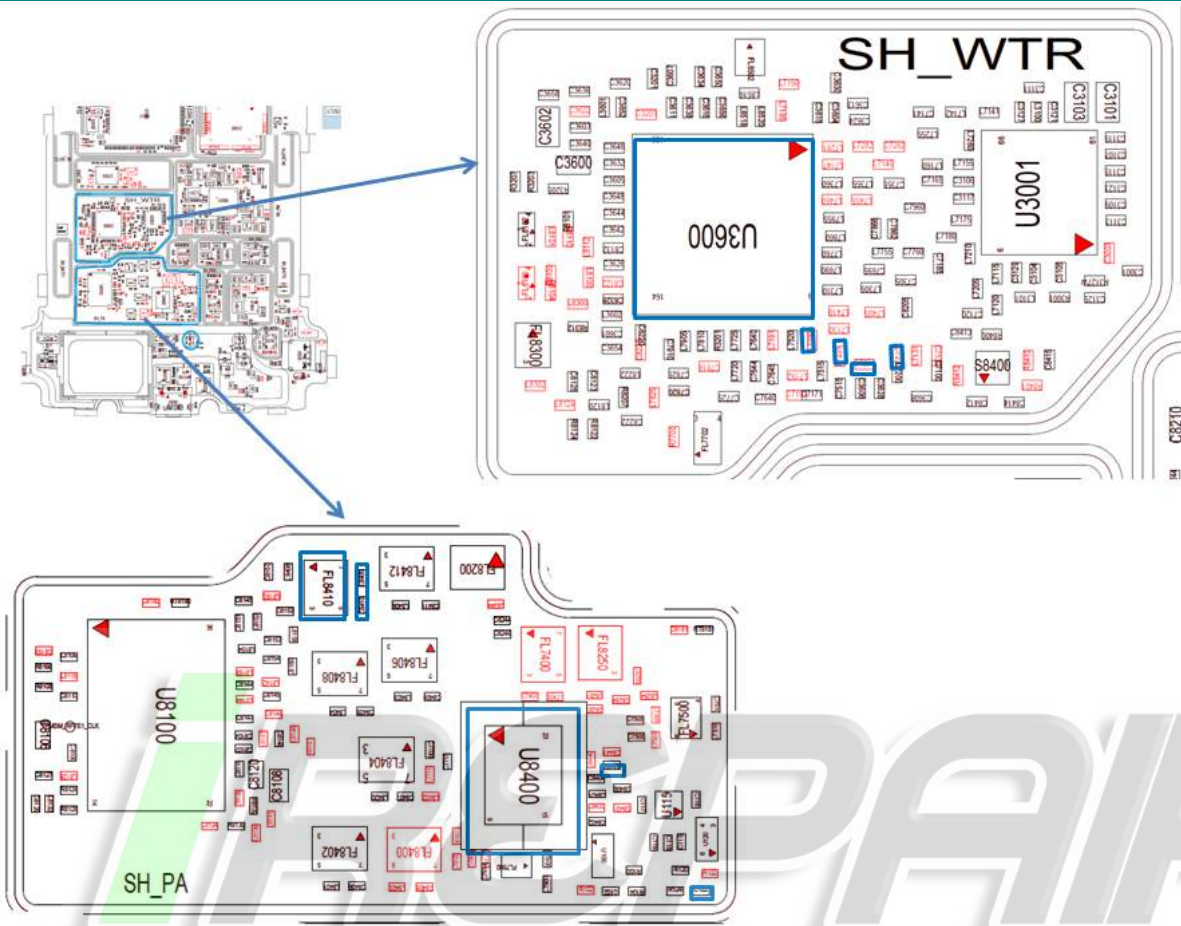


L3 Moto X RF Troubleshooting Guide

RF Test

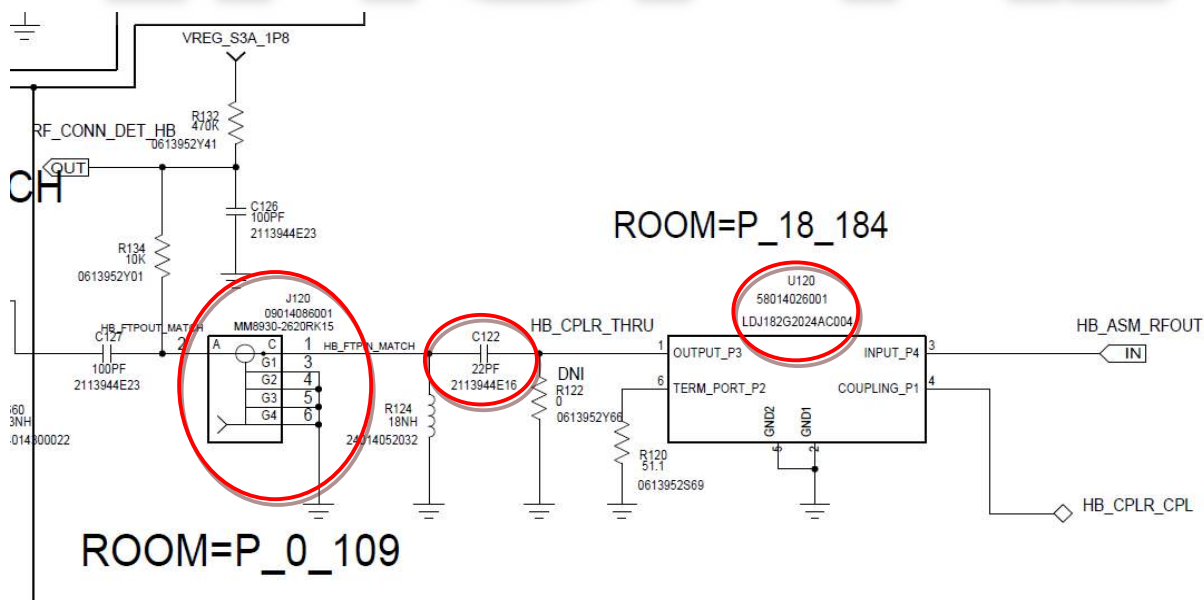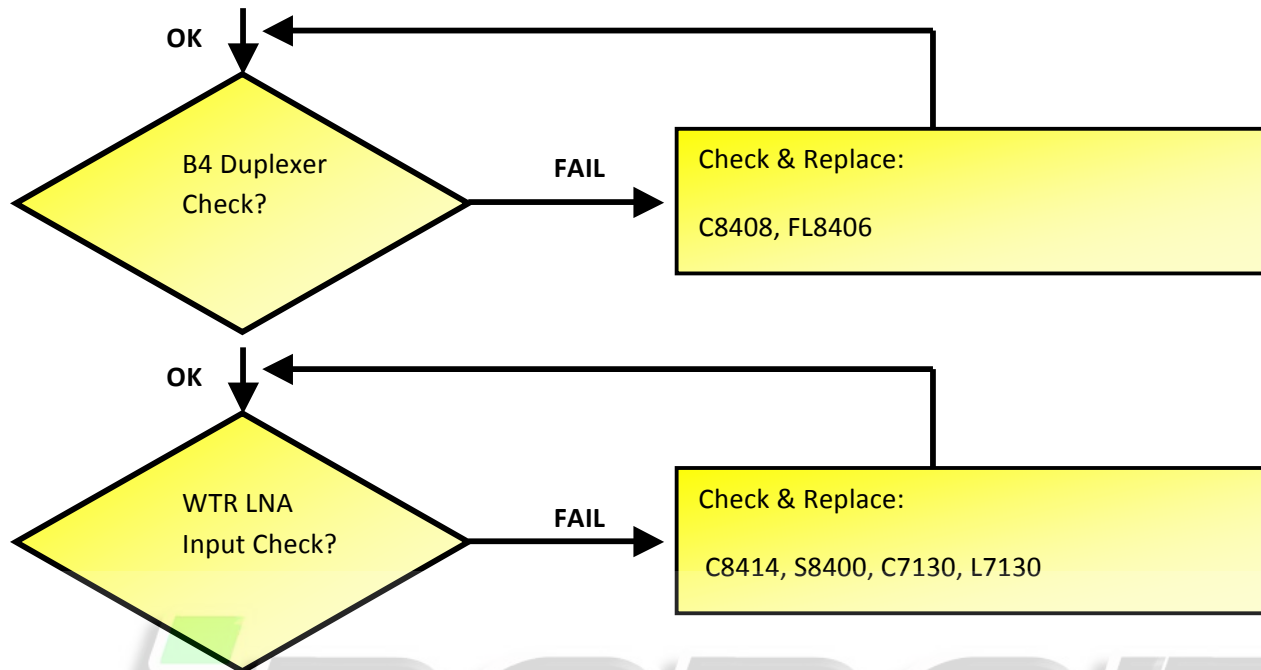


L3 Moto X RF Troubleshooting Guide

RF Test

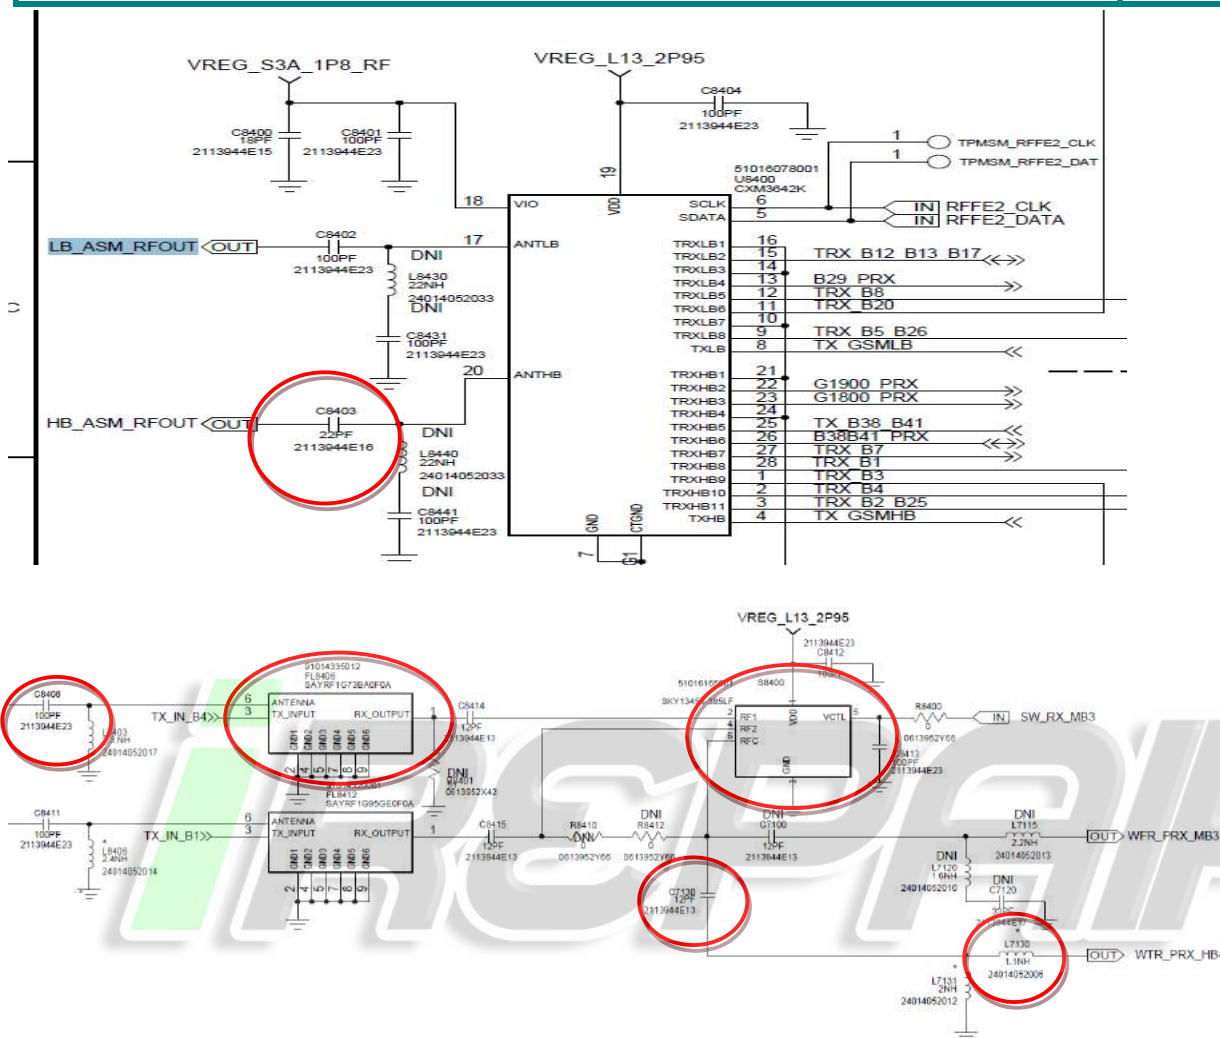

L3 Moto X RF Troubleshooting Guide

RF Test

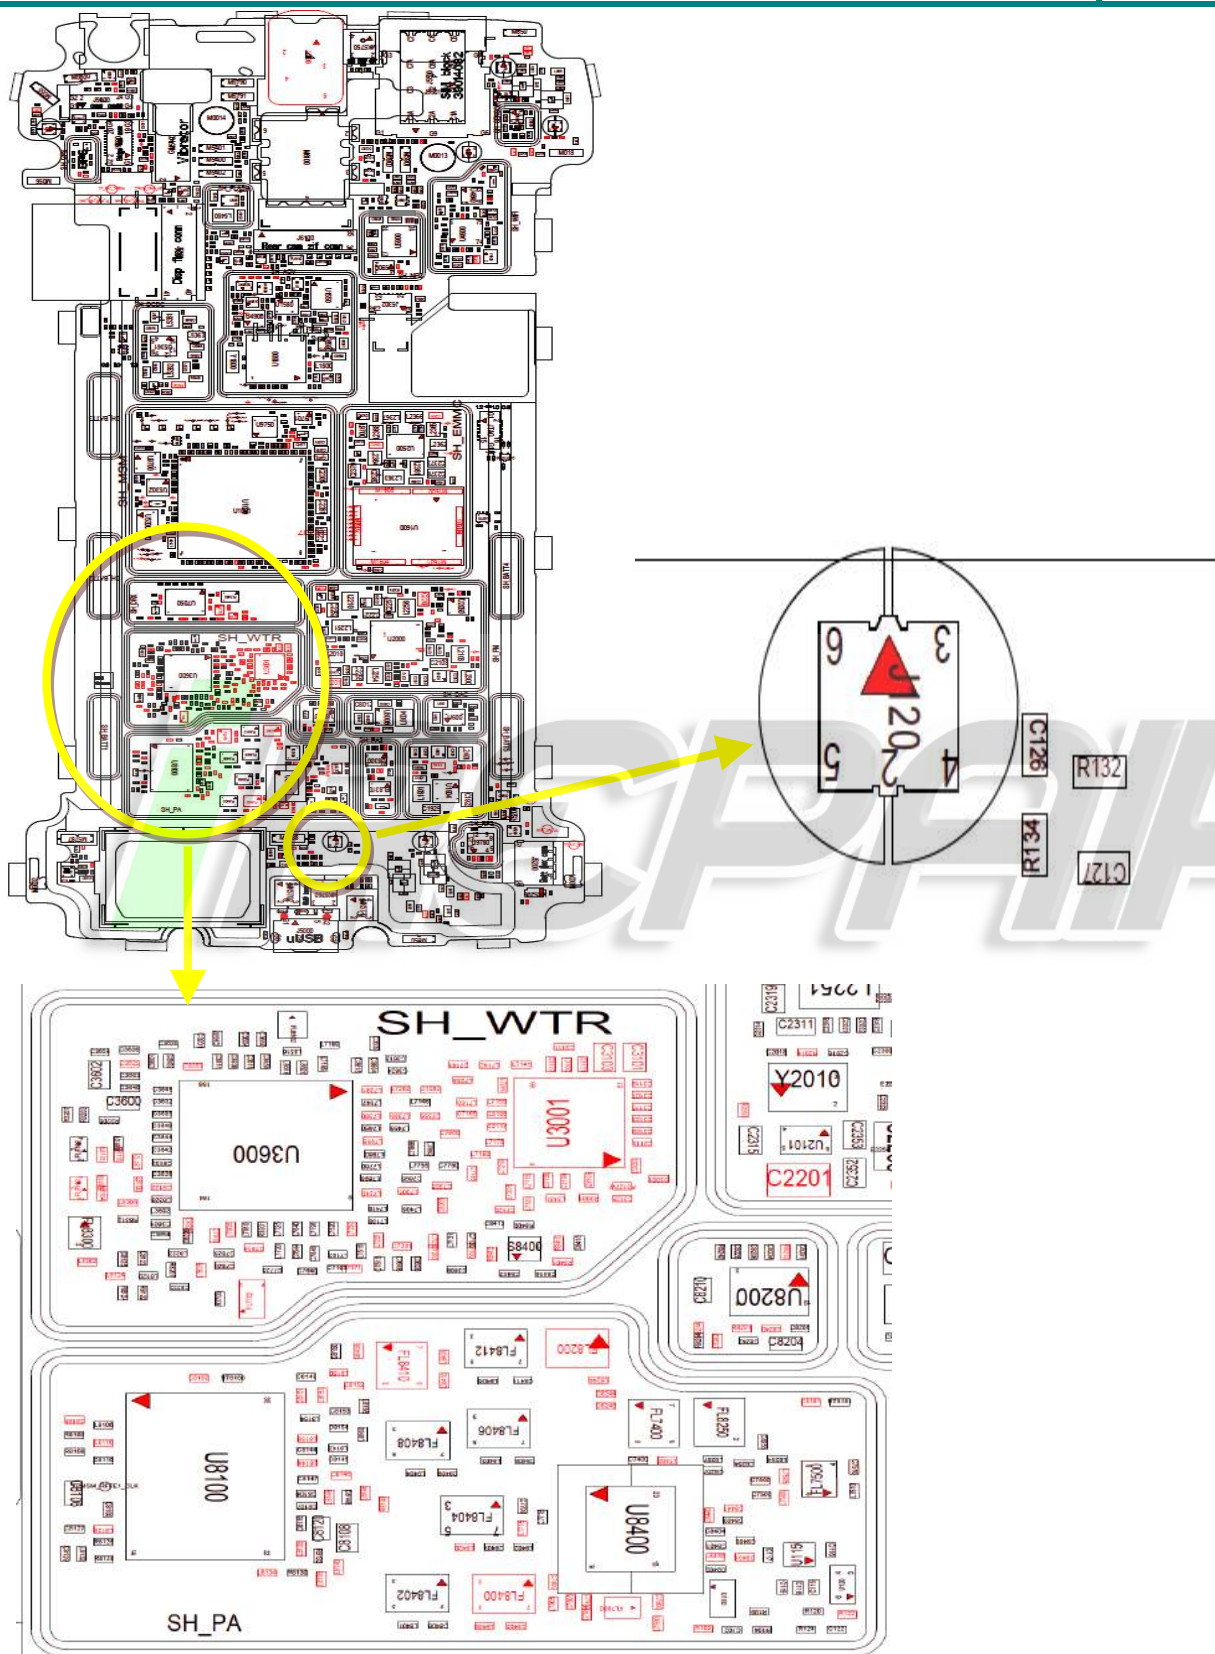


L3 Moto X RF Troubleshooting Guide

RF Test



LTE & WCDMA B4 C0 RX ATT VZW

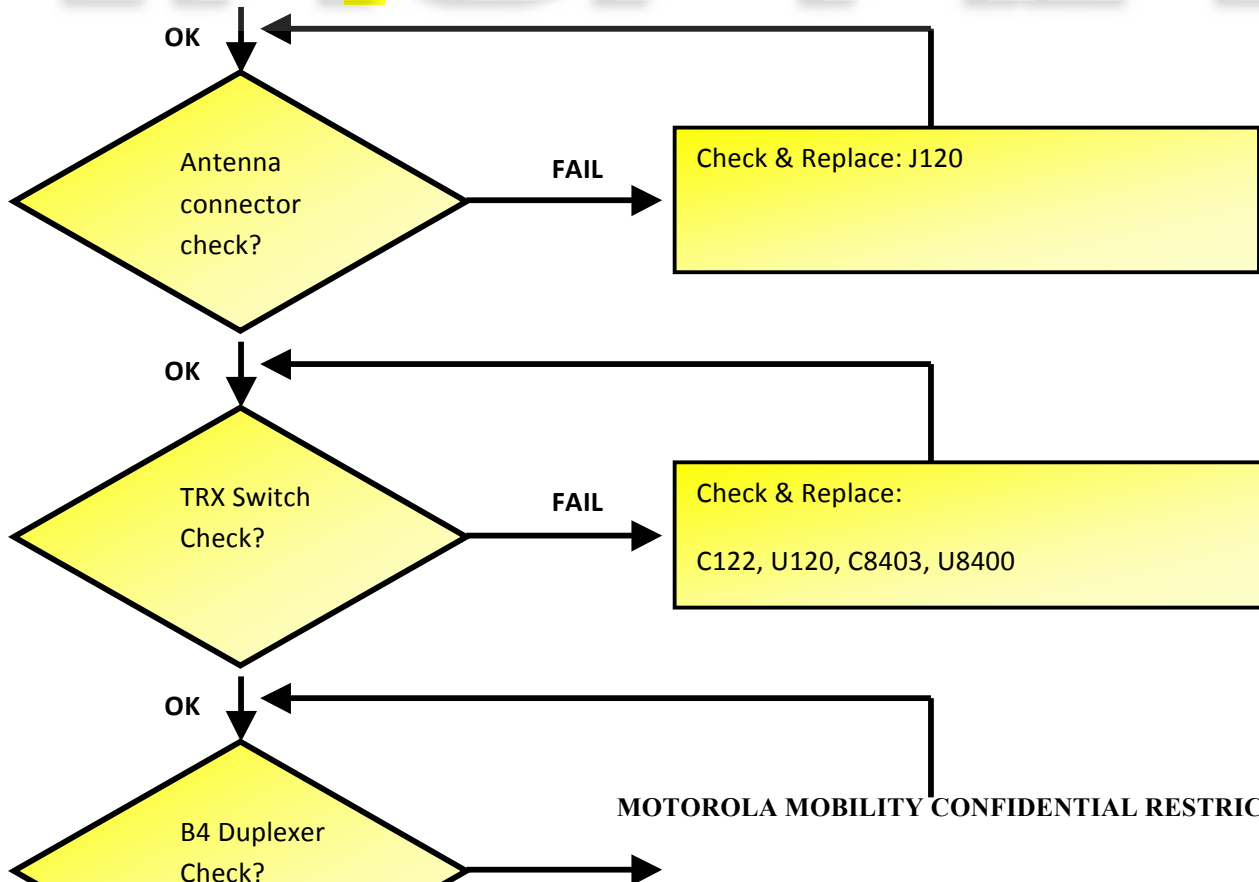

L3 Moto X RF Troubleshooting Guide

RF Test

FAIL

Check & Replace:

C8408, FL8406

OK


WFR LNA
Input Check?

FAIL

Check & Replace:


C8414, S8400, C7100, L7115

iREPAIR

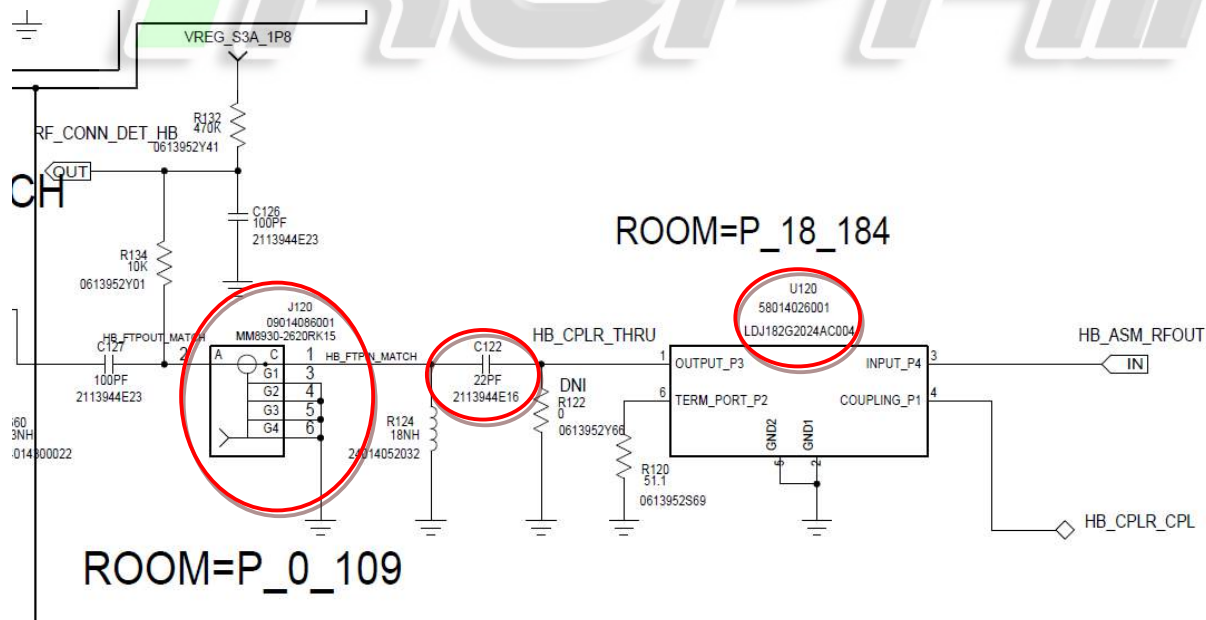


L3 Moto X RF Troubleshooting Guide

RF Test

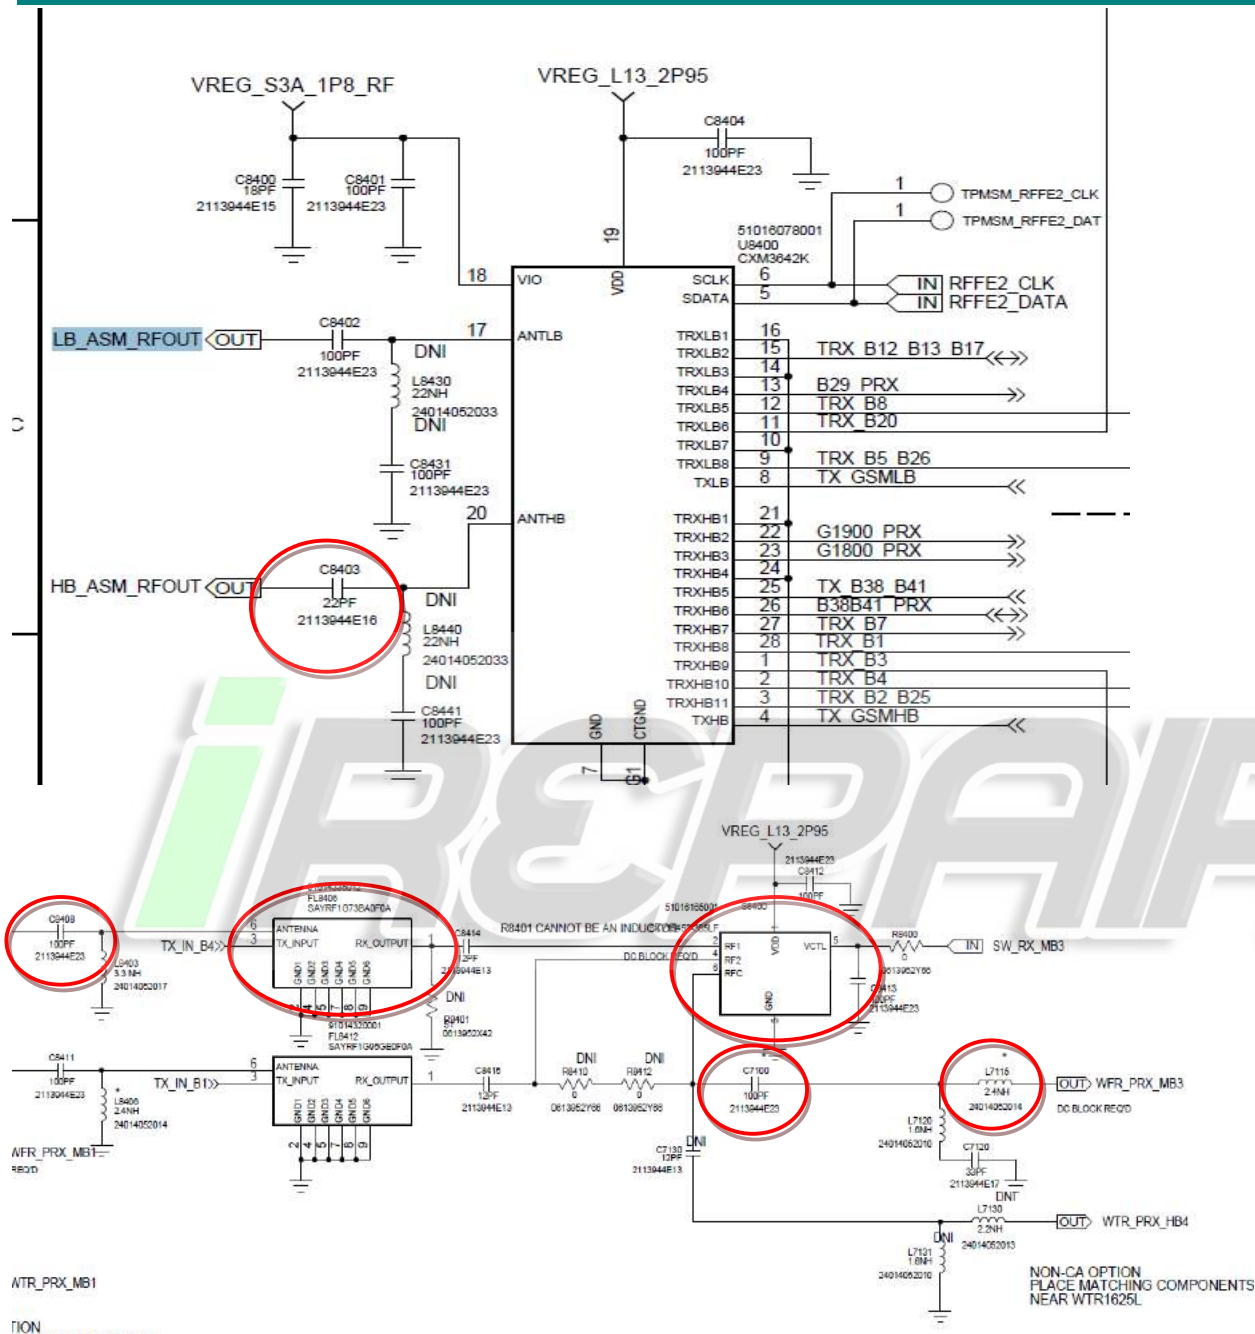


L3 Moto X RF Troubleshooting Guide

RF Test

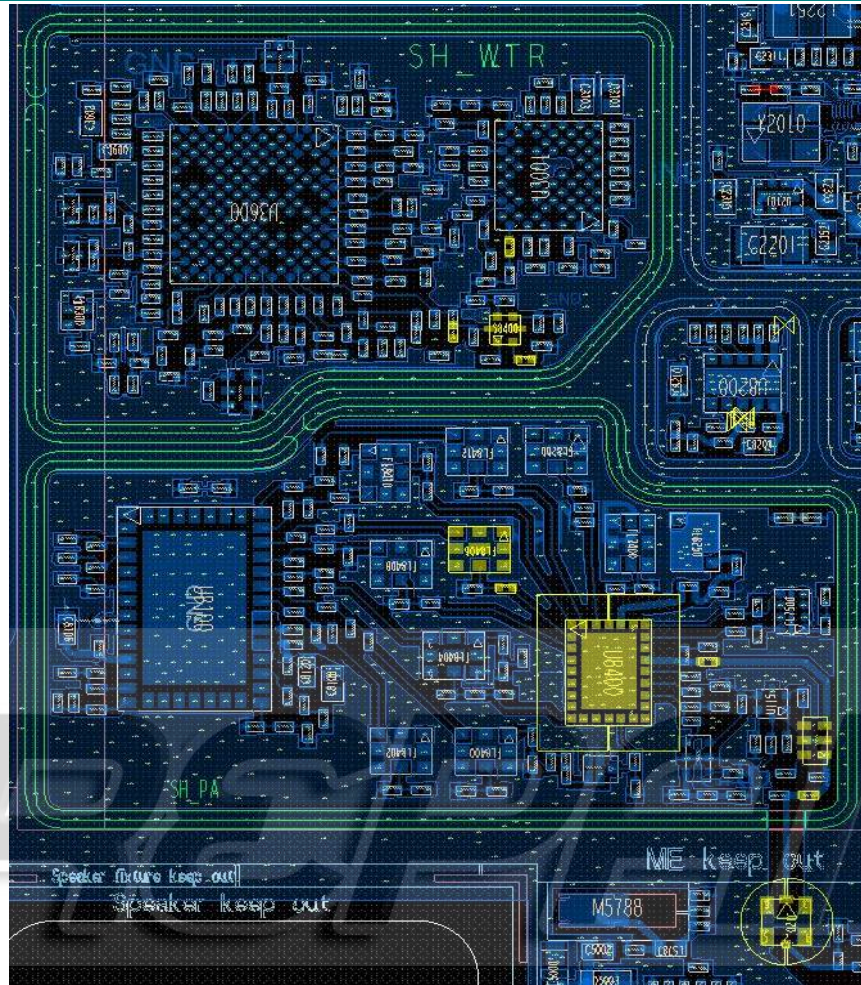


LTE B 5&26, WCDMA B5, CDMA BC0&BC10, GSM850 **C0** RX

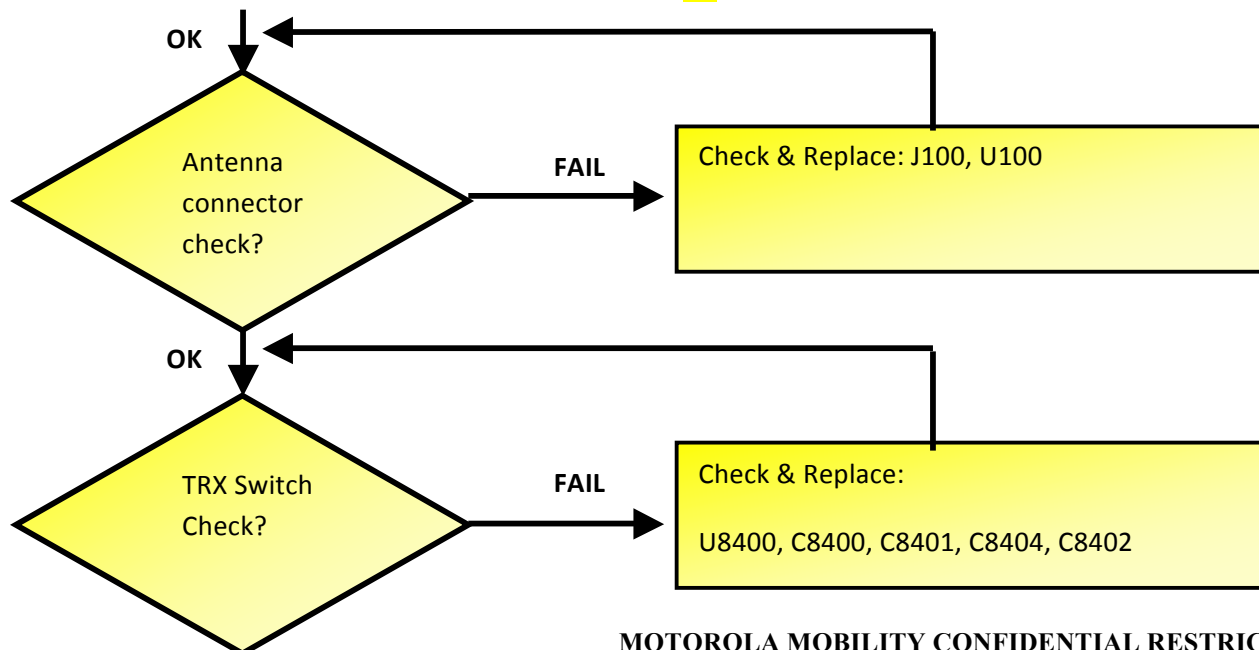

L3 Moto X RF Troubleshooting Guide



RF Test

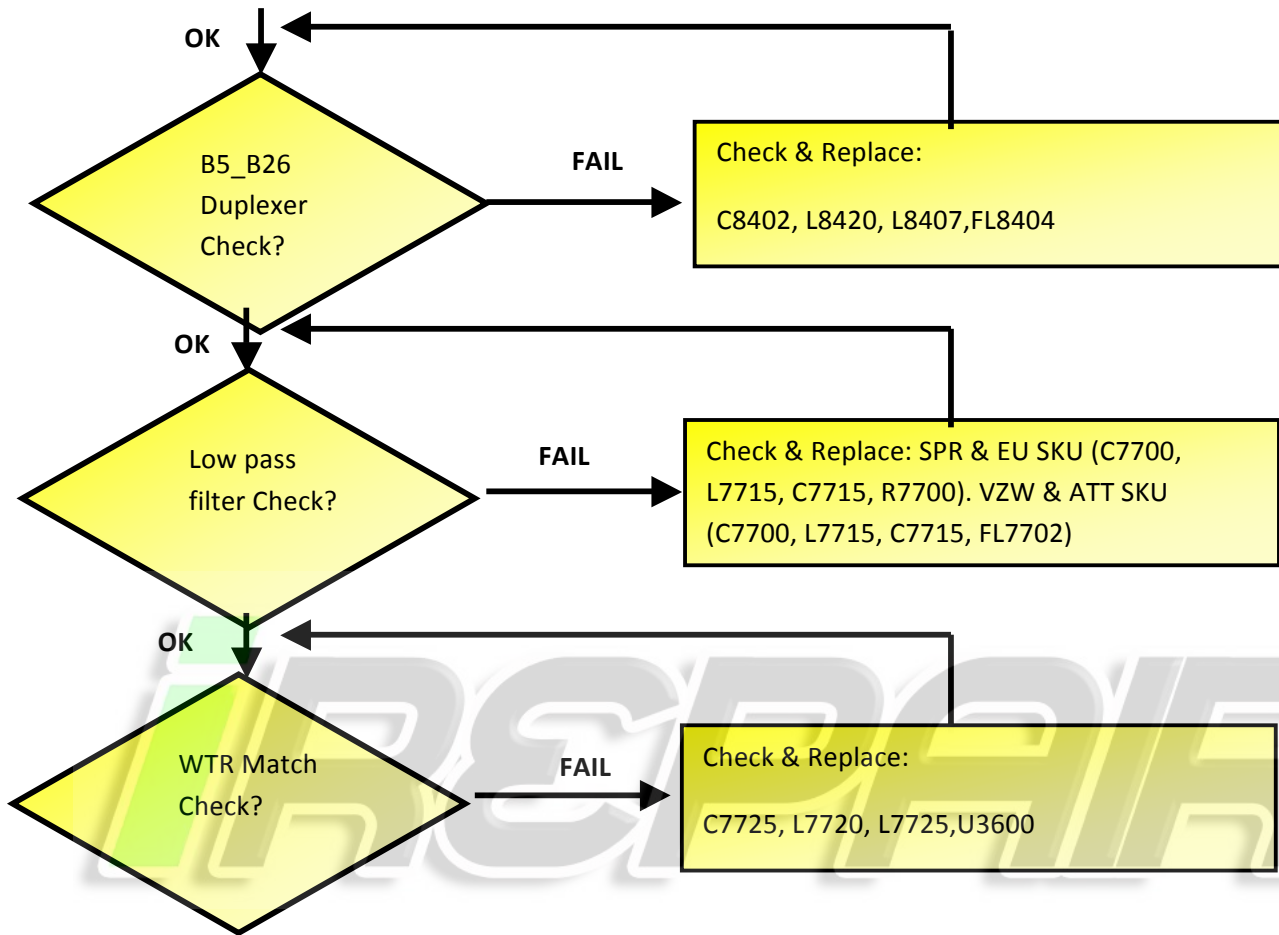

L3 Moto X RF Troubleshooting Guide


RF Test

CDMA 800 C0 RX, CDMA BC10 C0 RX, WCDMA 850 C0 RX, & LTE Band 5/26 C0 RX GSM 850 C0 RX

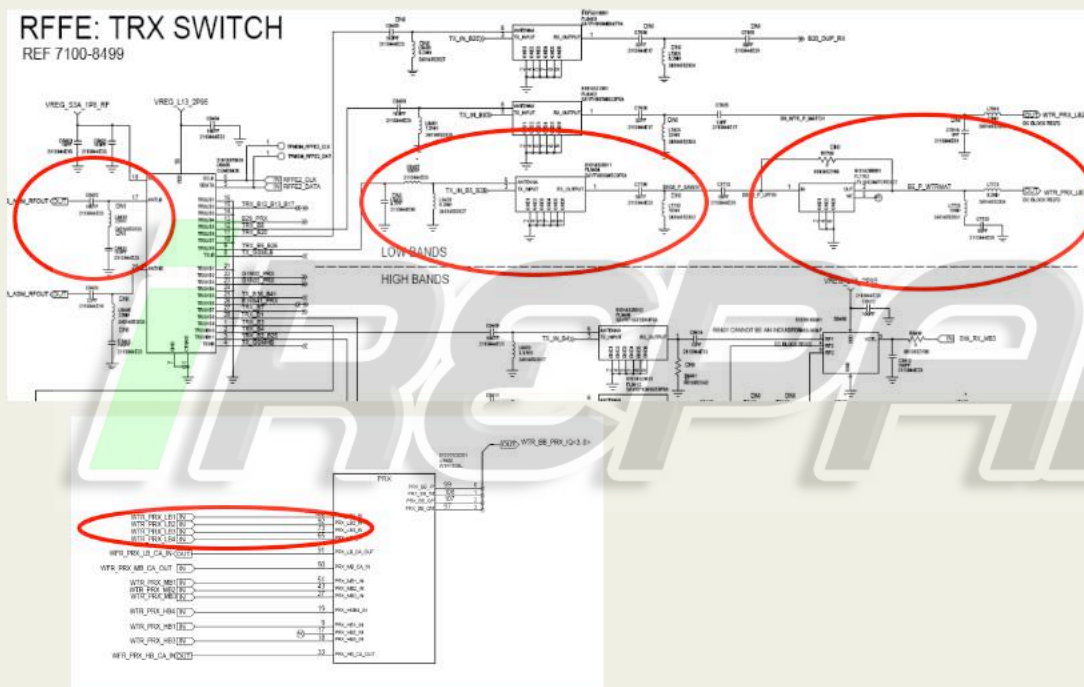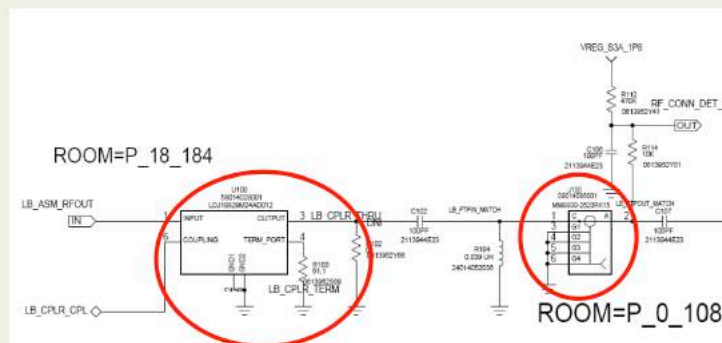


L3 Moto X RF Troubleshooting Guide

RF Test


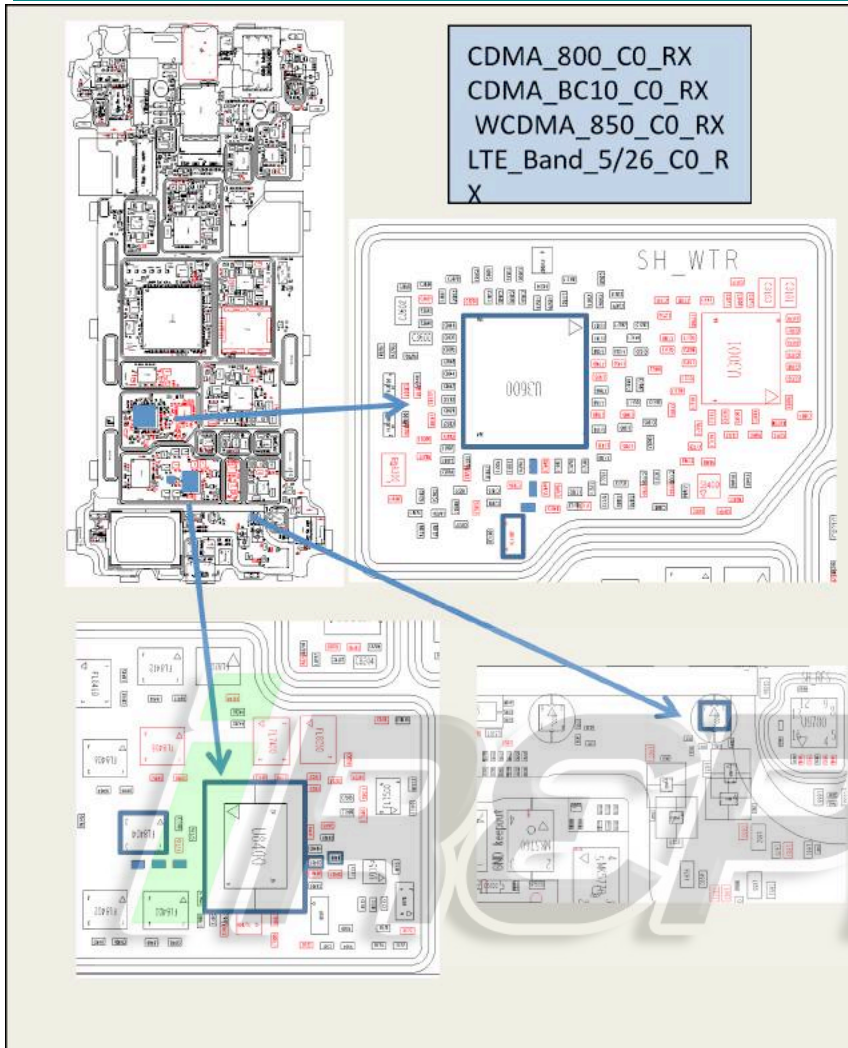


LTE B7 **C0** RX ATT & VZW & EU SKUs

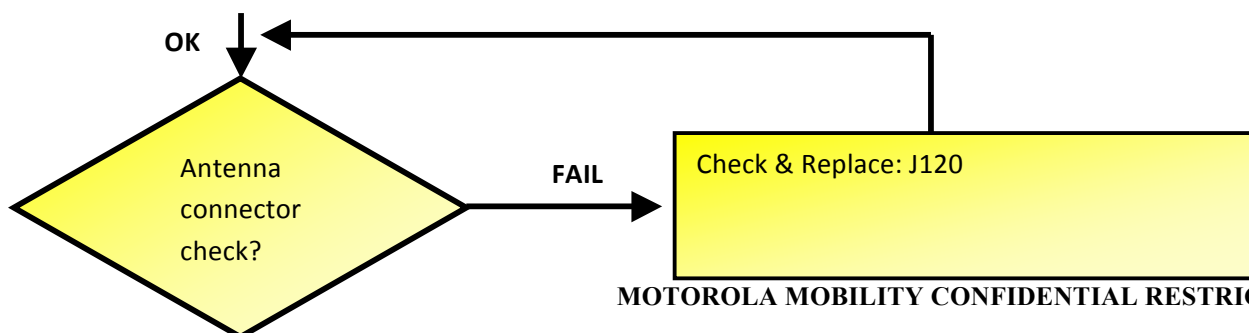


L3 Moto X RF Troubleshooting Guide

RF Test

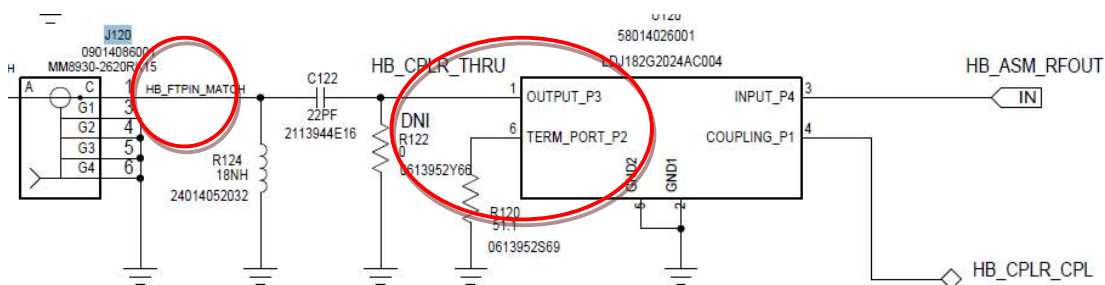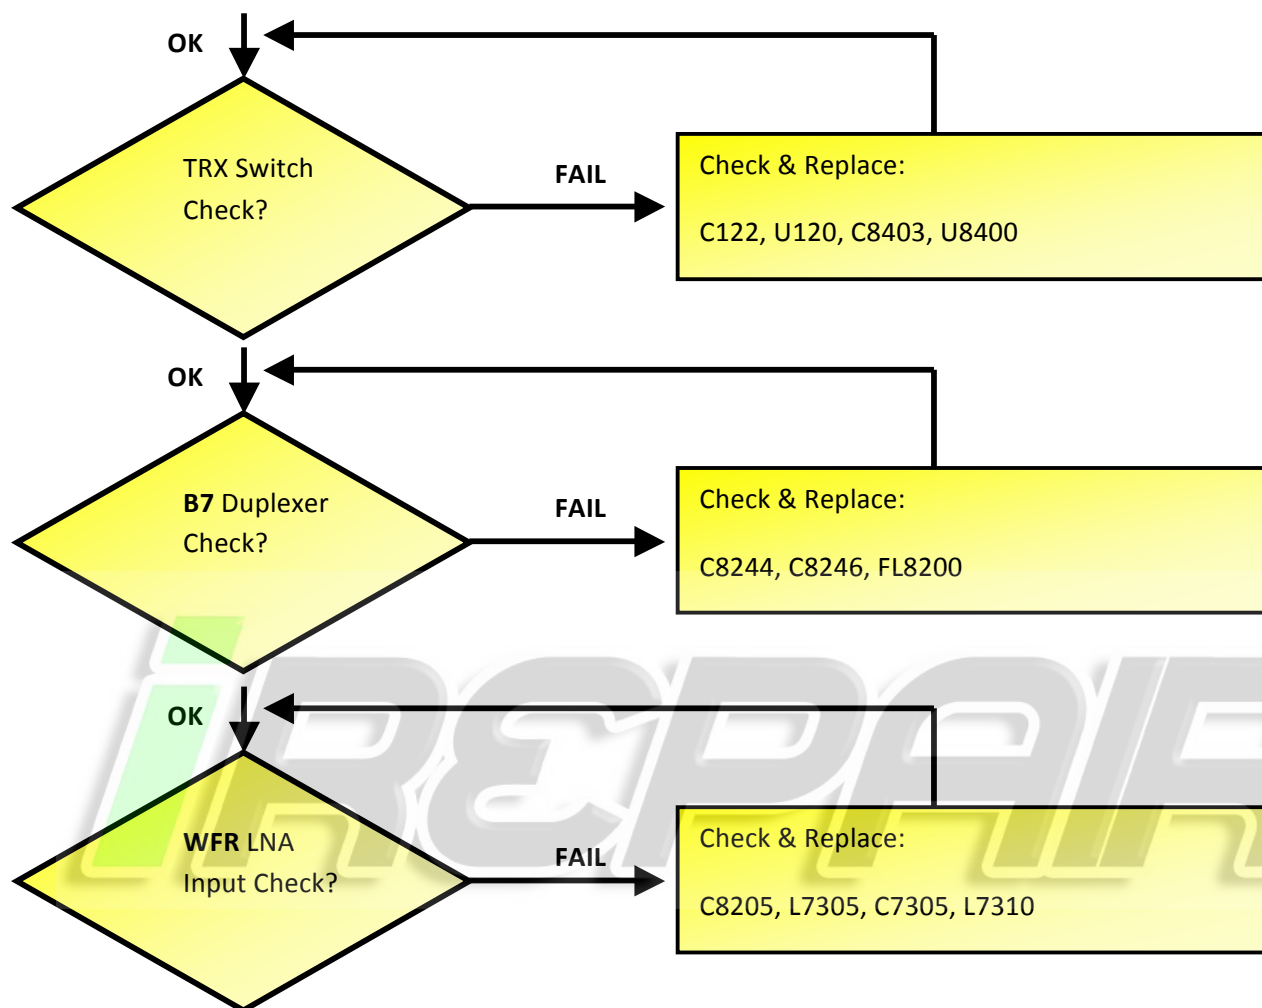

L3 Moto X RF Troubleshooting Guide


RF Test

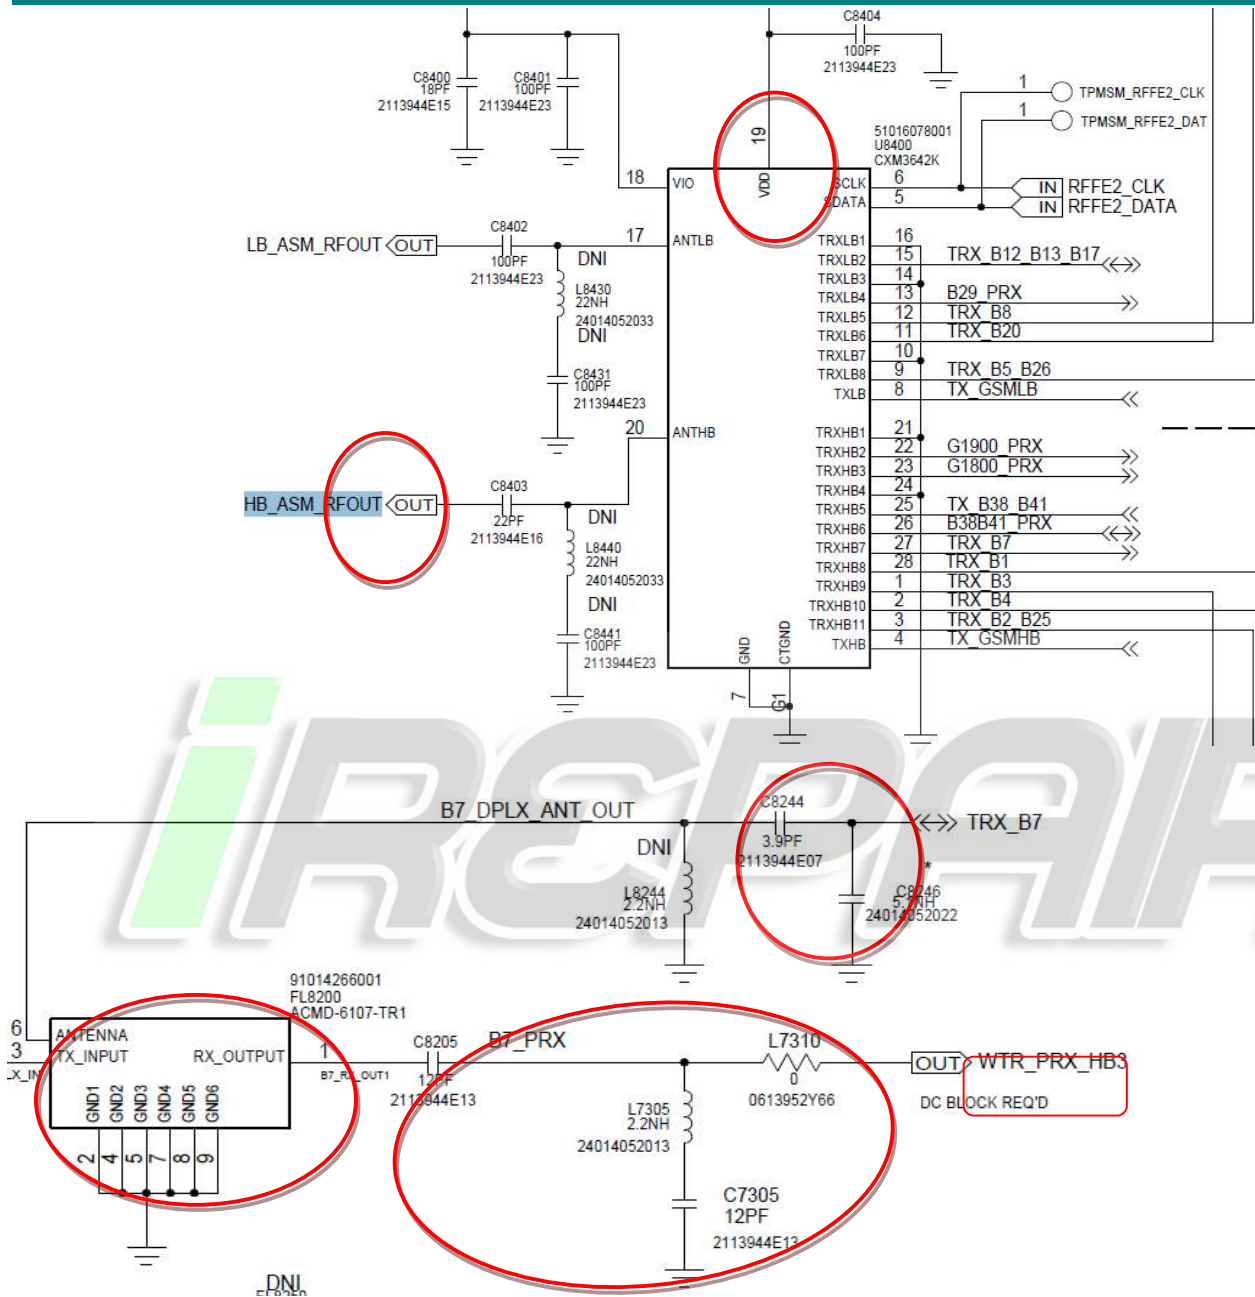

L3 Moto X RF Troubleshooting Guide

RF Test


LTE_B7_C0_PRx

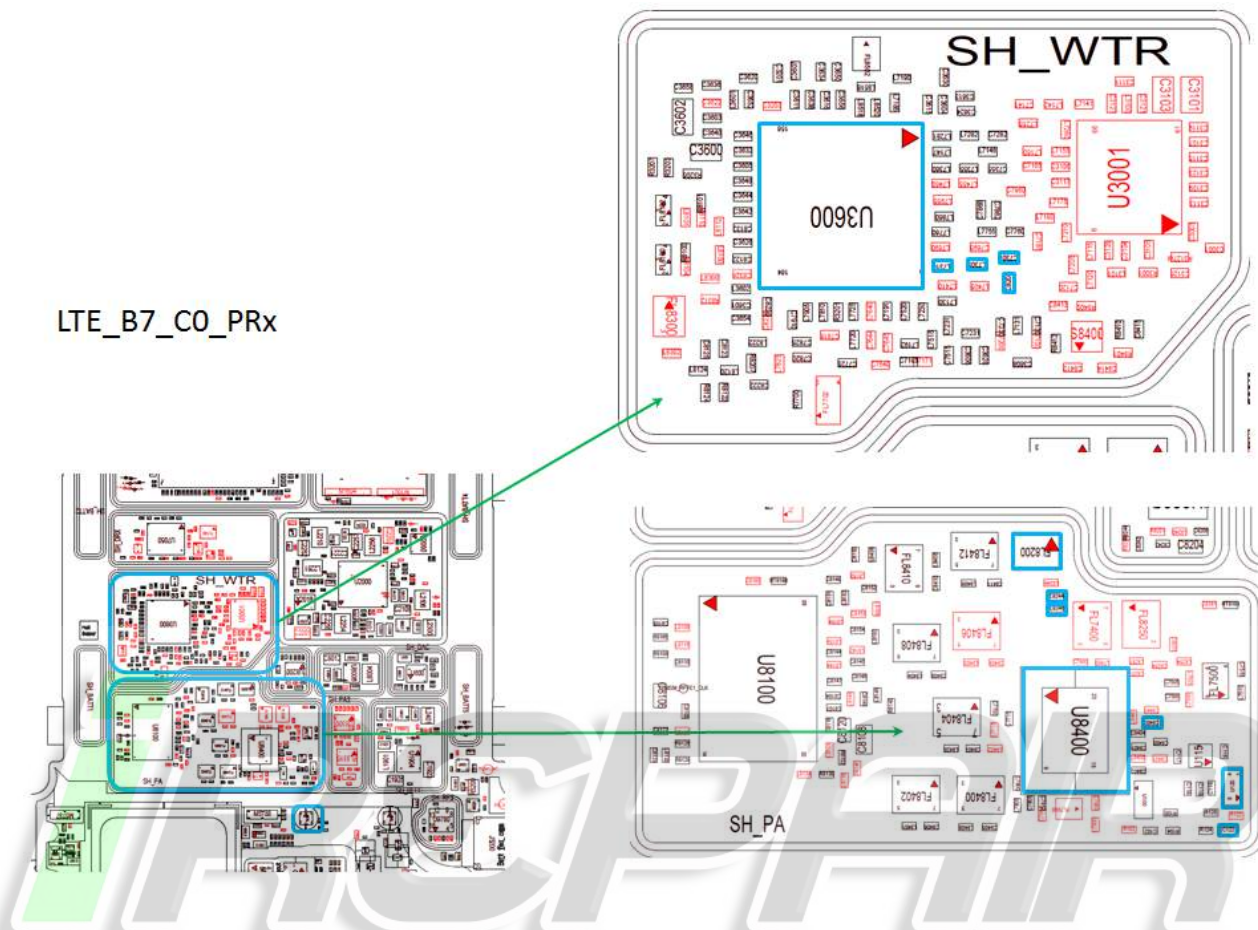

LTE & WCDMA B8, GSM900 **C0** RX



L3 Moto X RF Troubleshooting Guide

RF Test

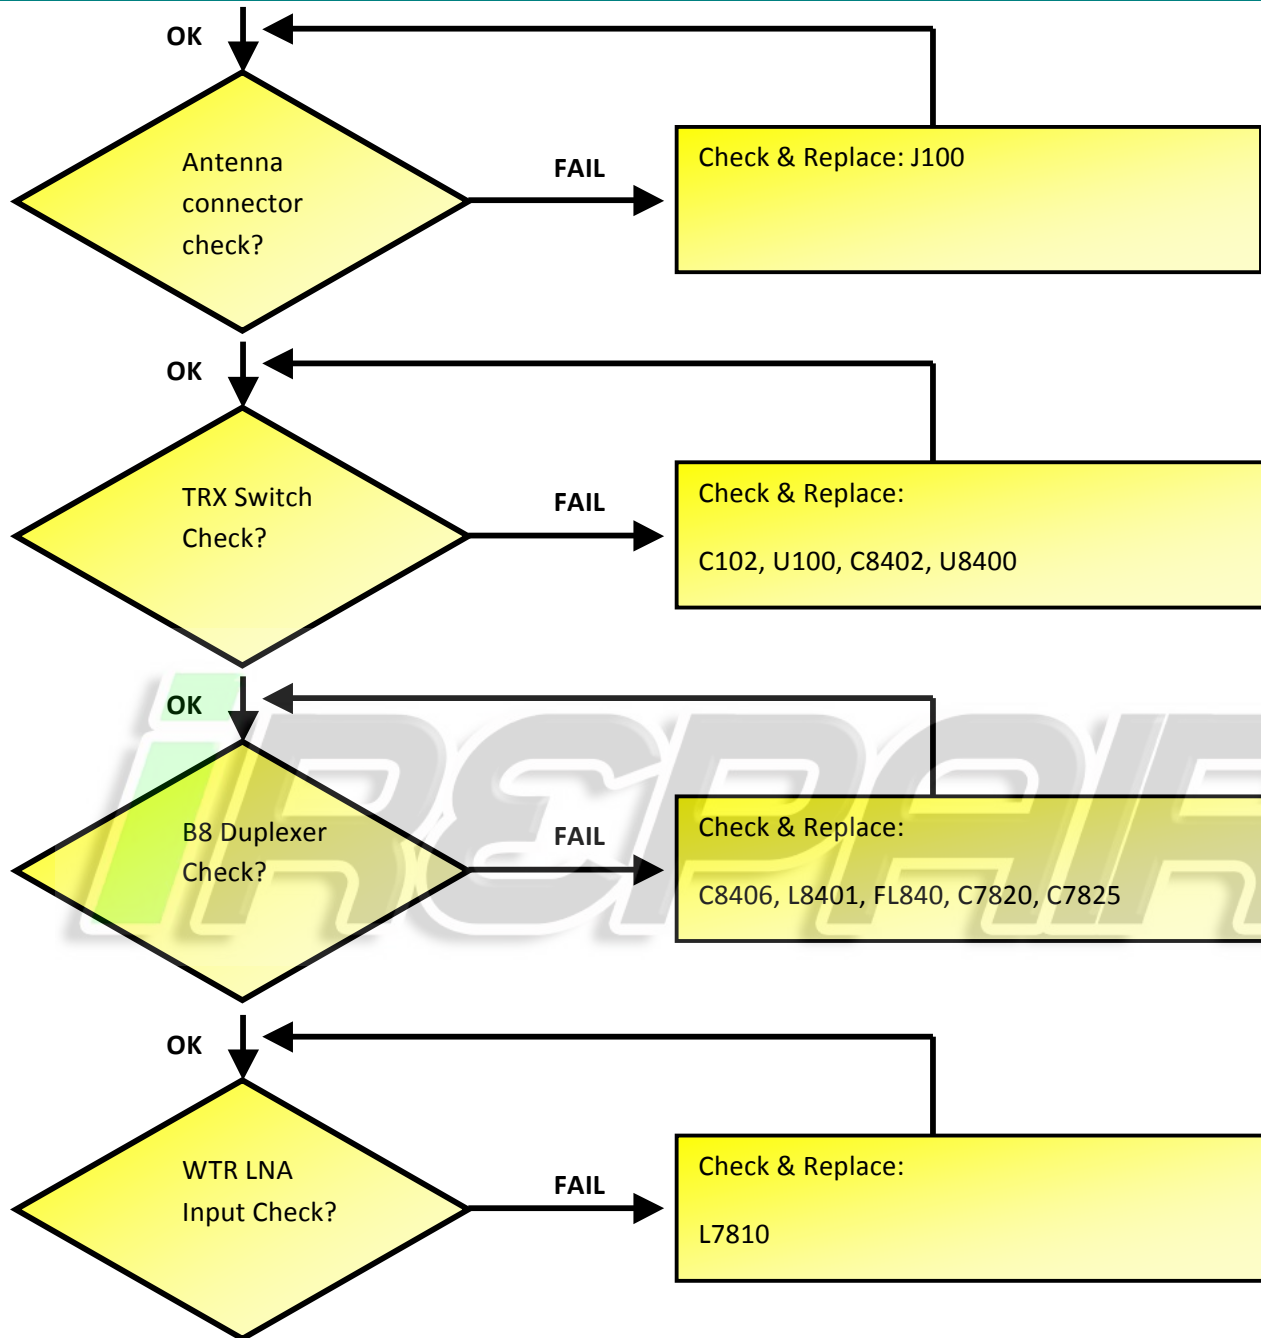



L3 Moto X RF Troubleshooting Guide

RF Test

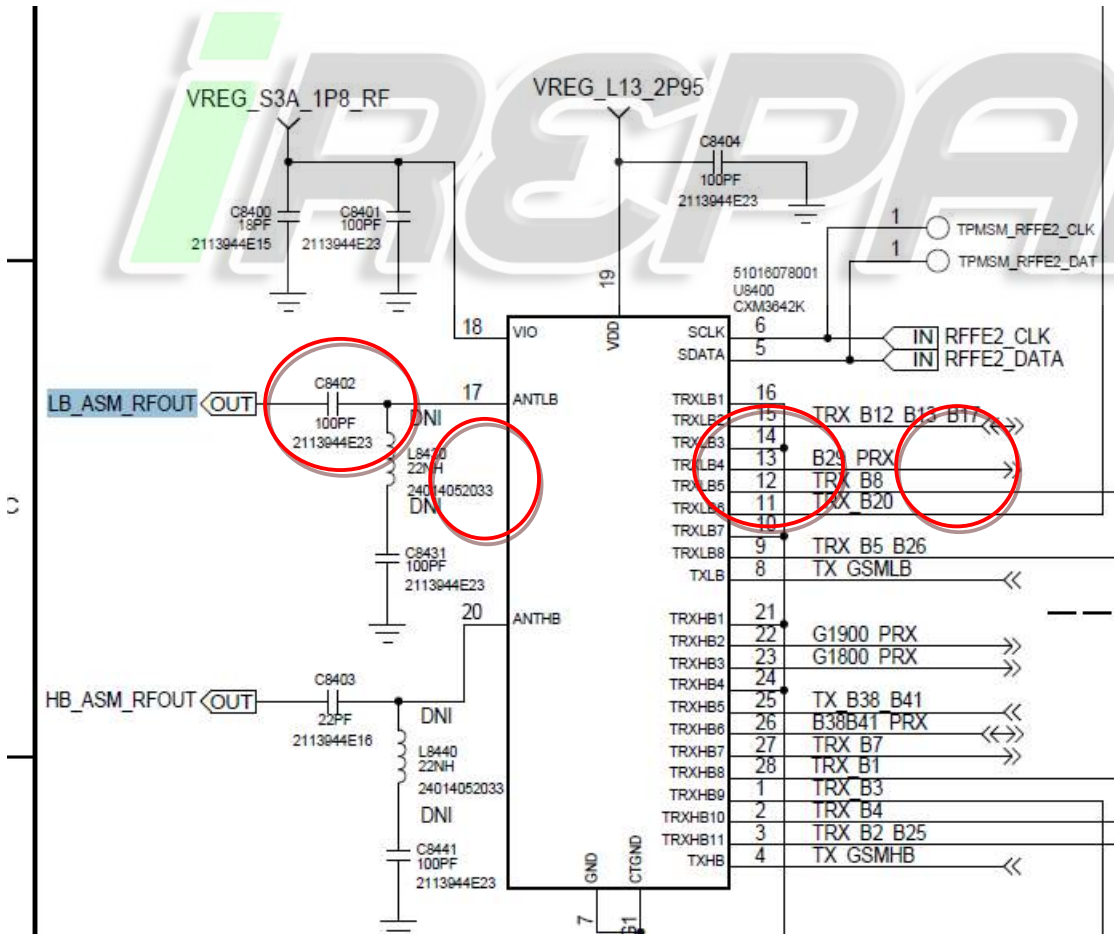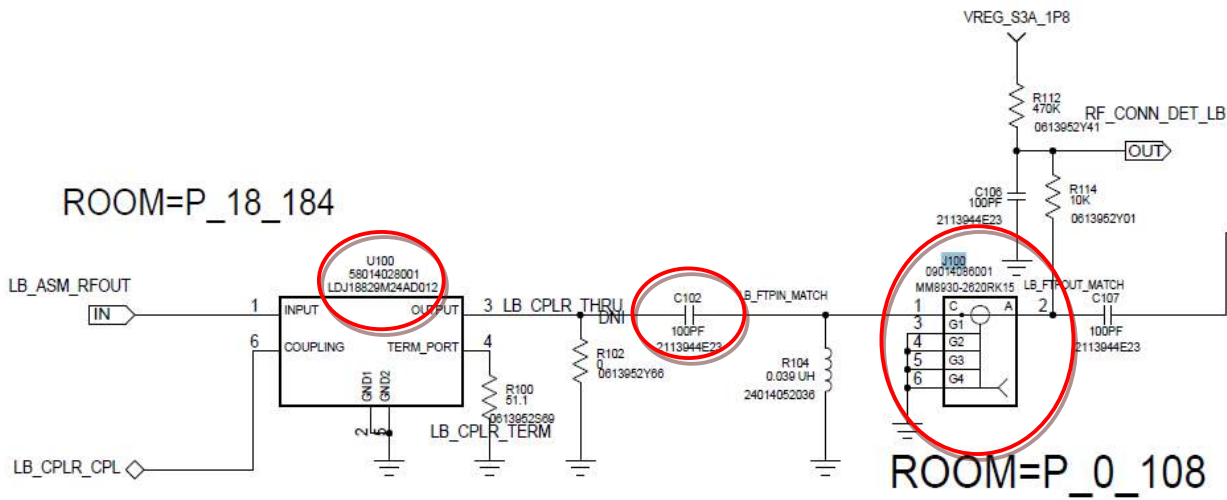

L3 Moto X RF Troubleshooting Guide

RF Test

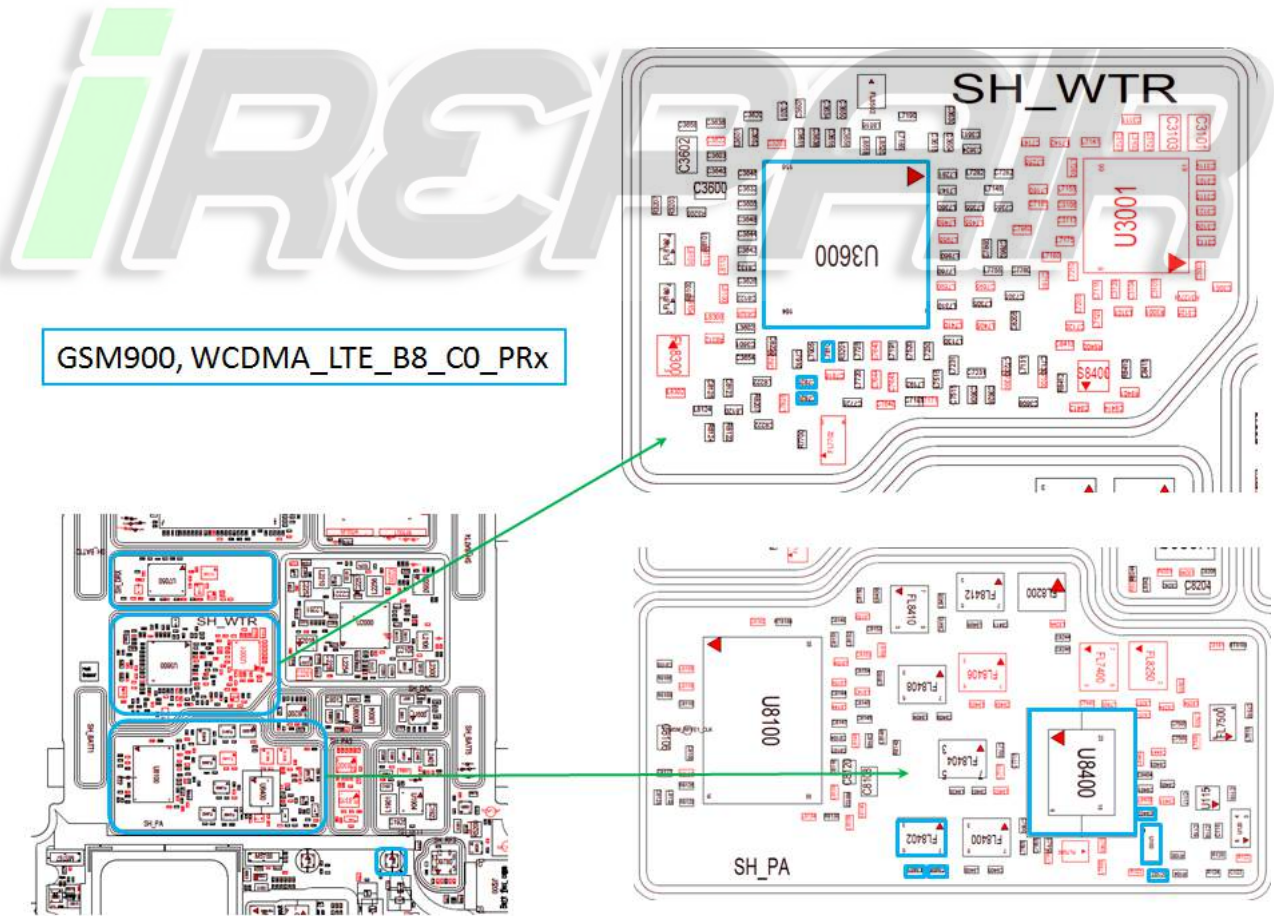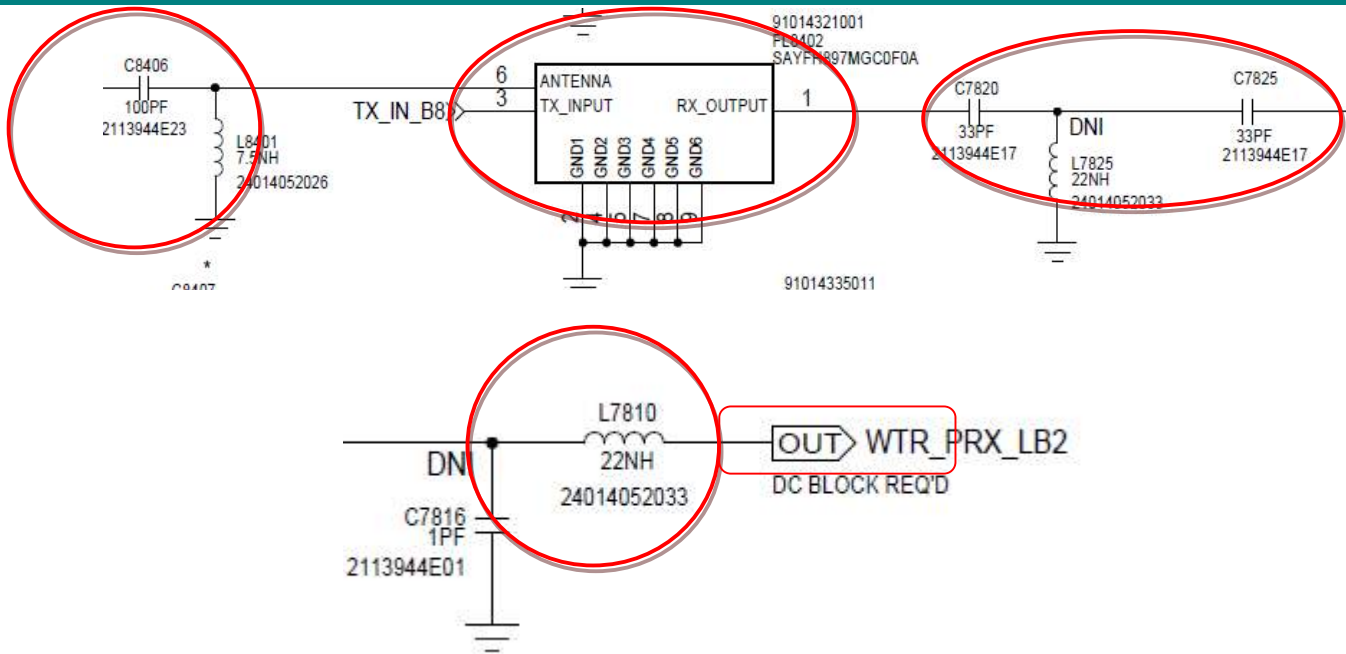


GSM900, WCDMA_LTE_B8_CO_PRx

L3 Moto X RF Troubleshooting Guide



RF Test

LTE B12 B13 B17 **C0** RX

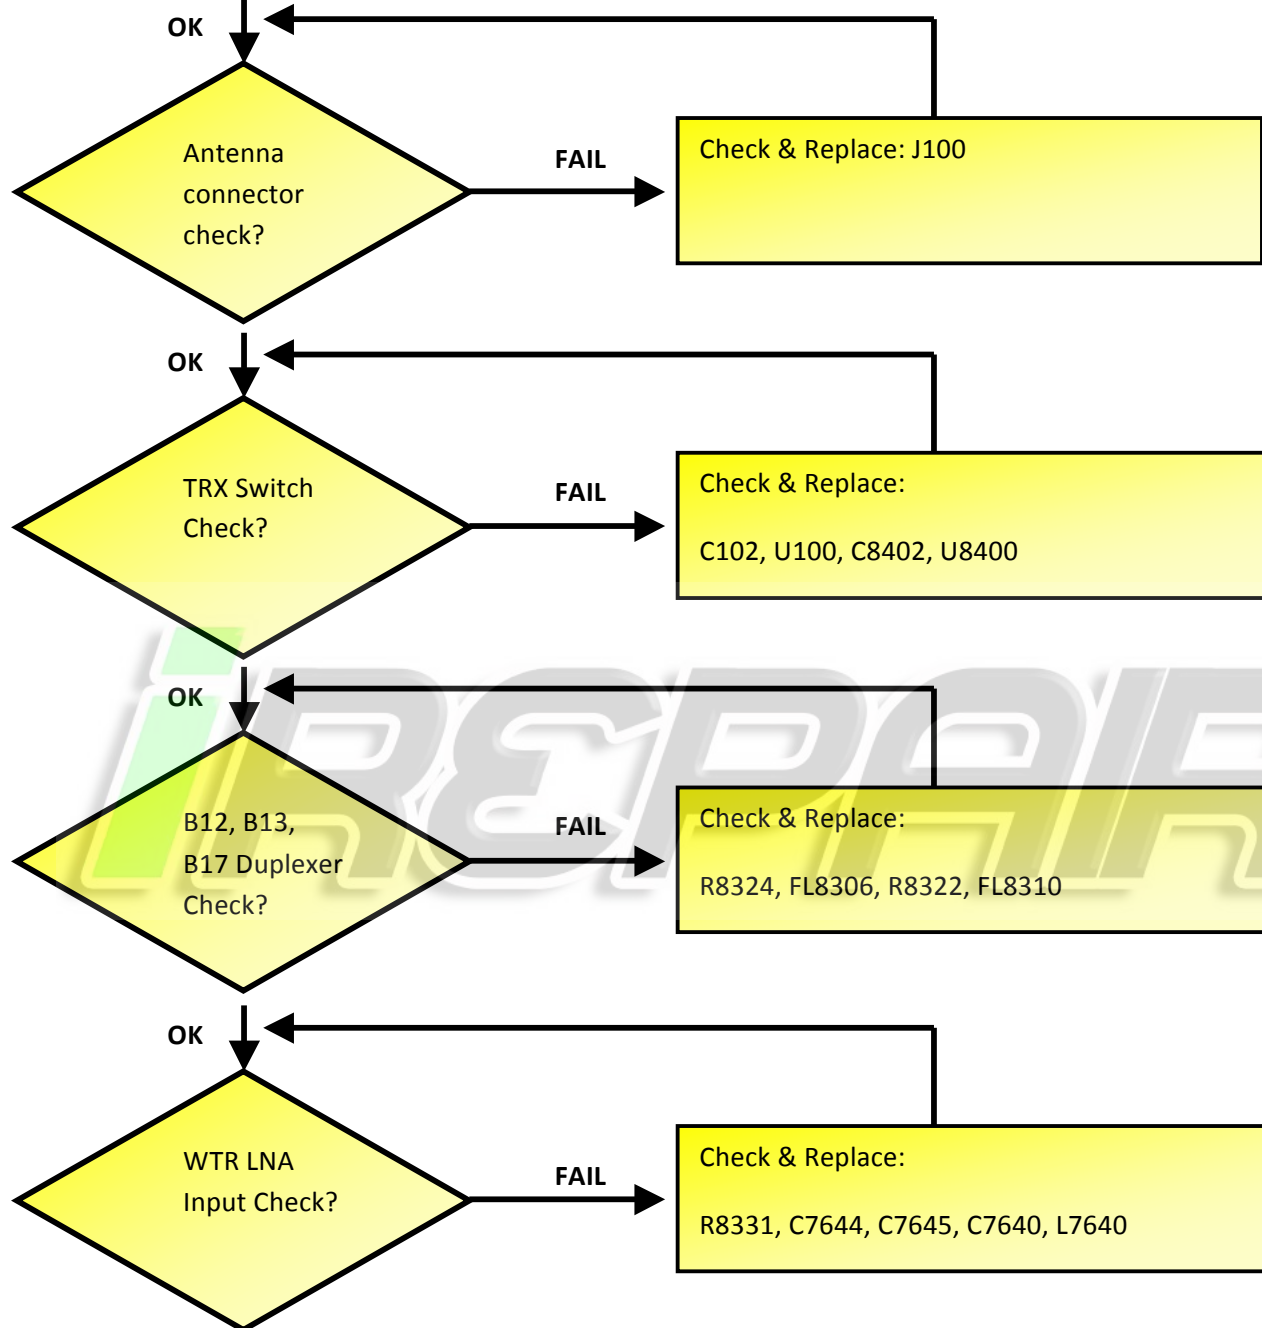


L3 Moto X RF Troubleshooting Guide

RF Test

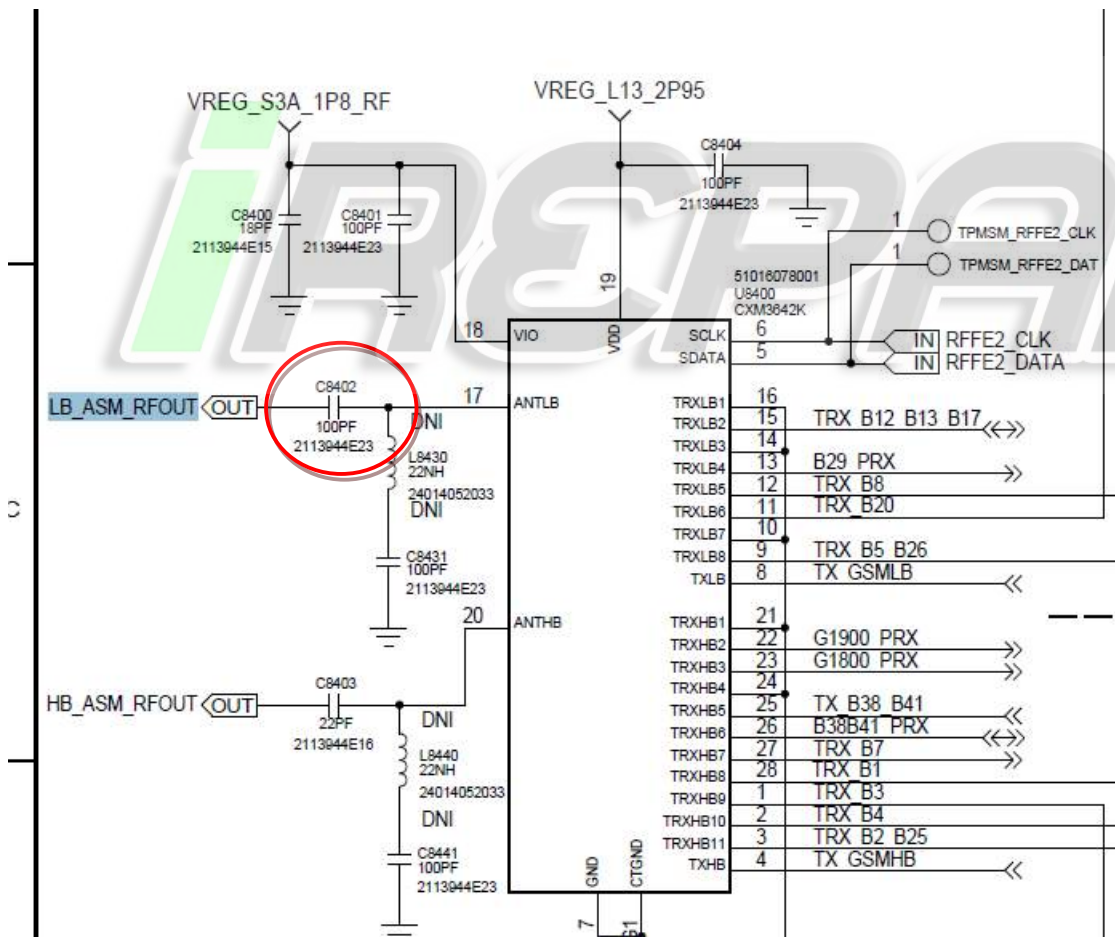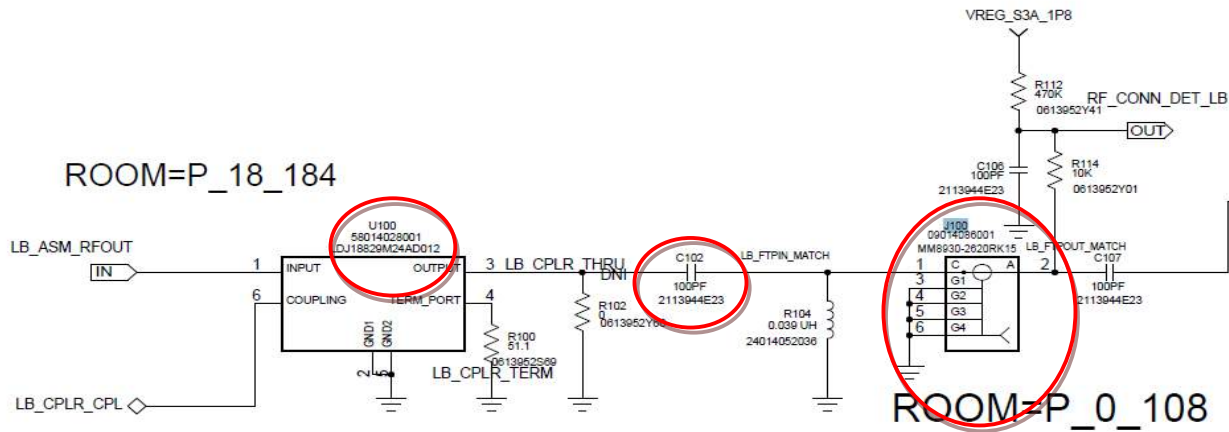


L3 Moto X RF Troubleshooting Guide

RF Test

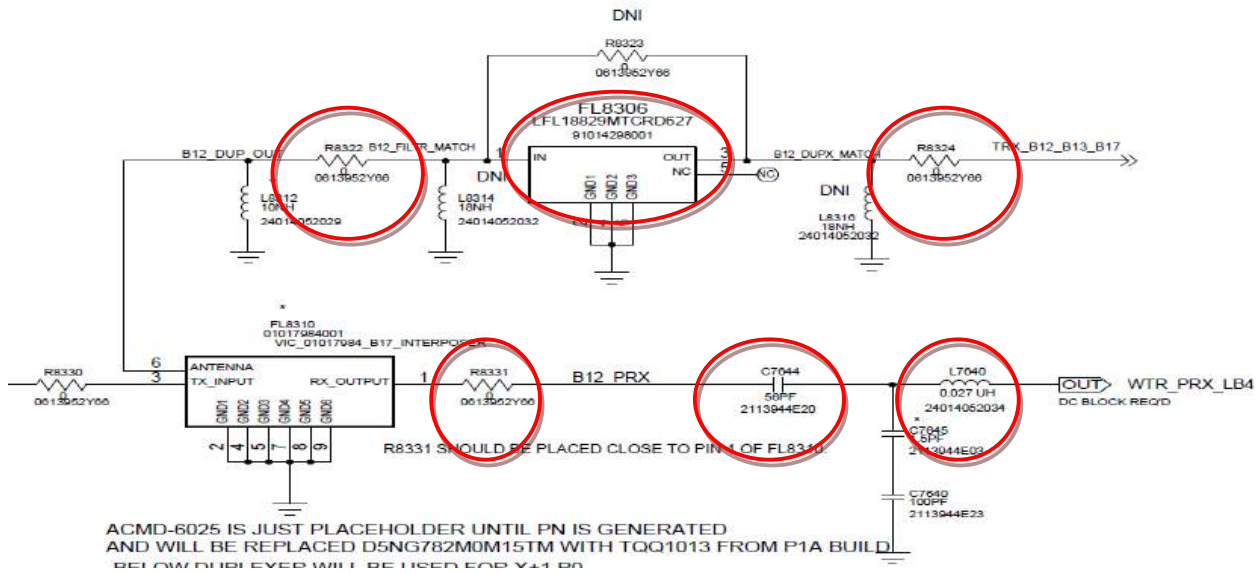


B12 Duplexer FL8310 P/N	91014374001
B13 Duplexer FL8310 P/N	91014377001
B17 Duplexer FL8310 P/N	01017984001

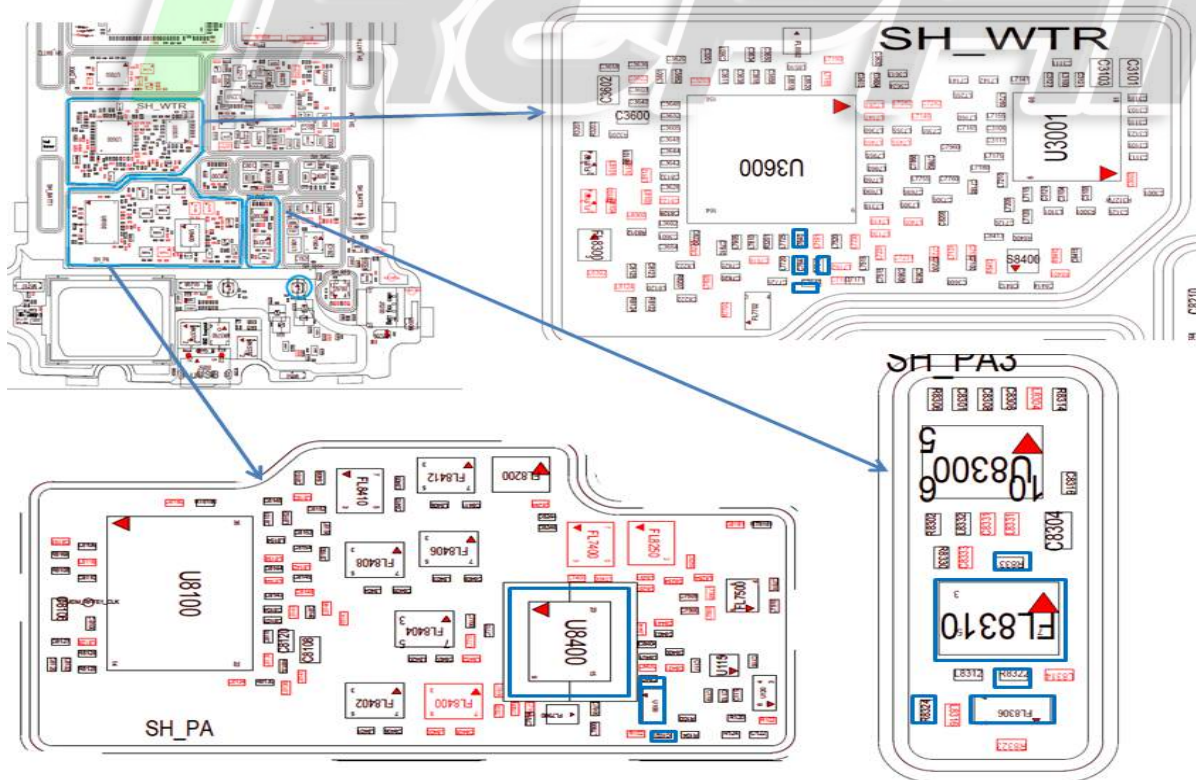

LTE B20 C0 RX



L3 Moto X RF Troubleshooting Guide

RF Test

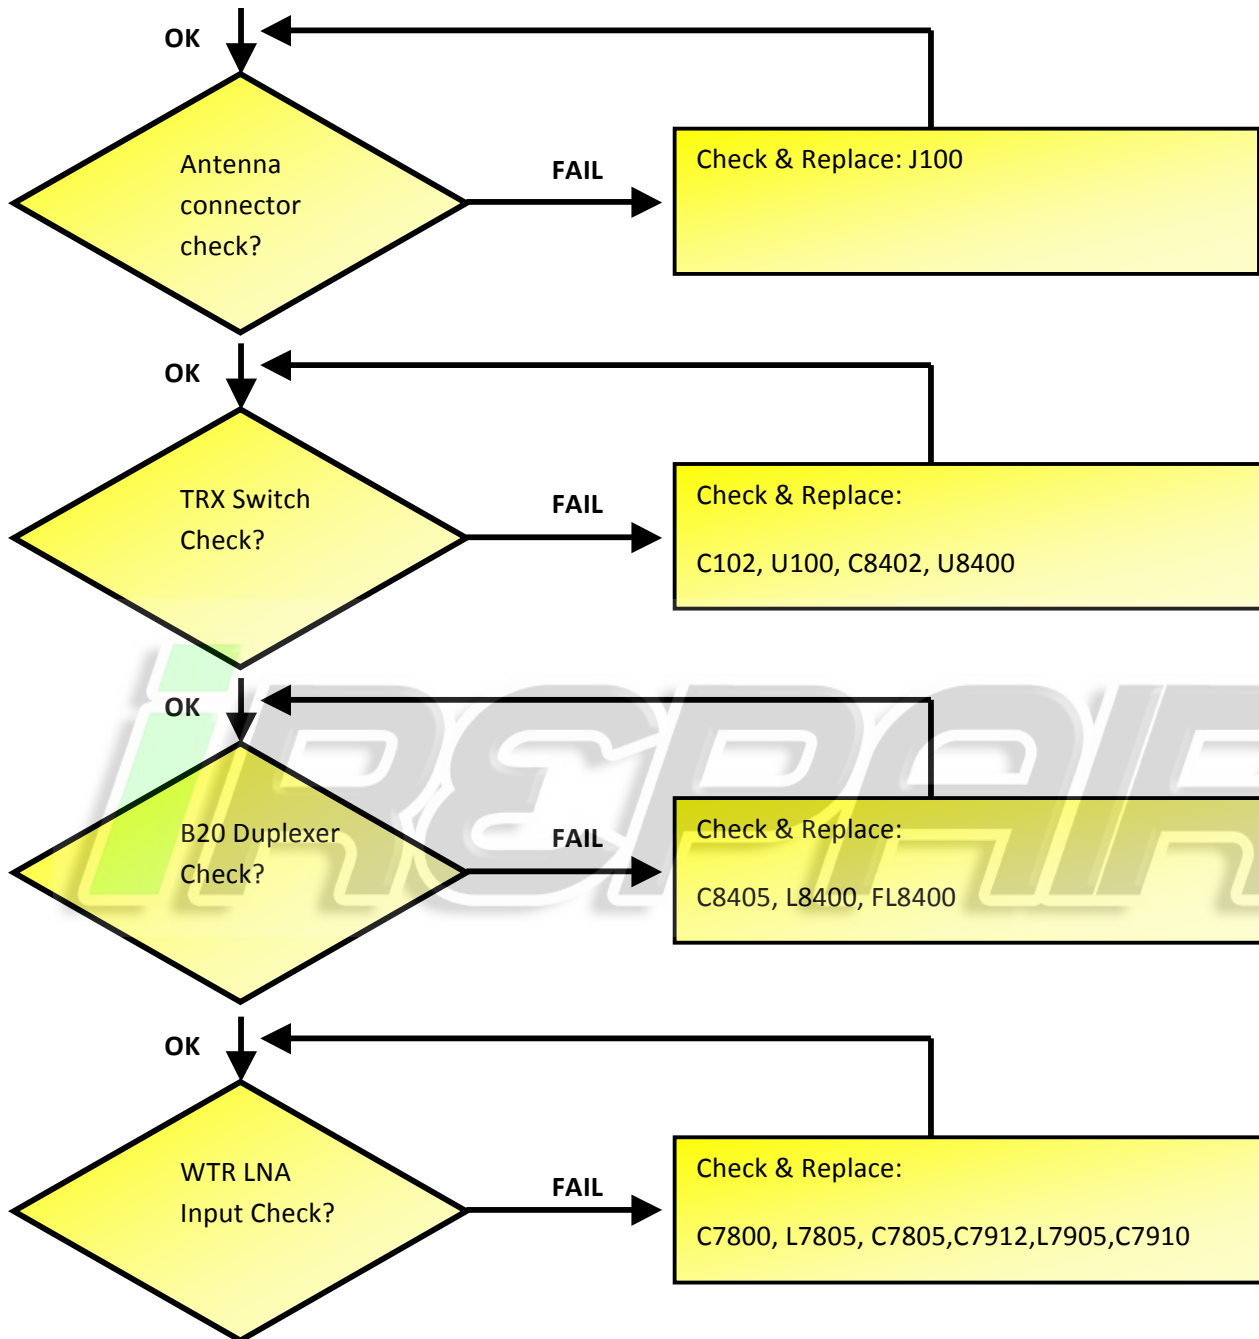


L3 Moto X RF Troubleshooting Guide

RF Test

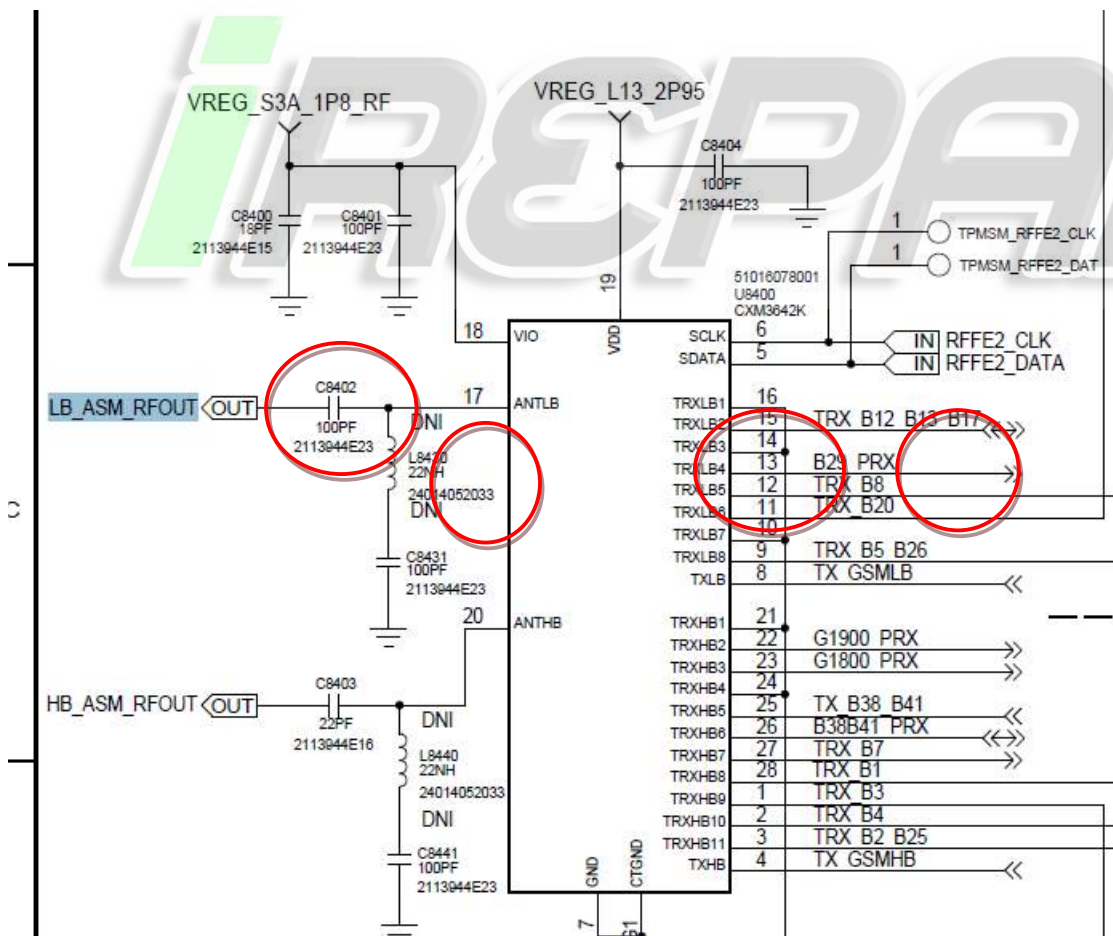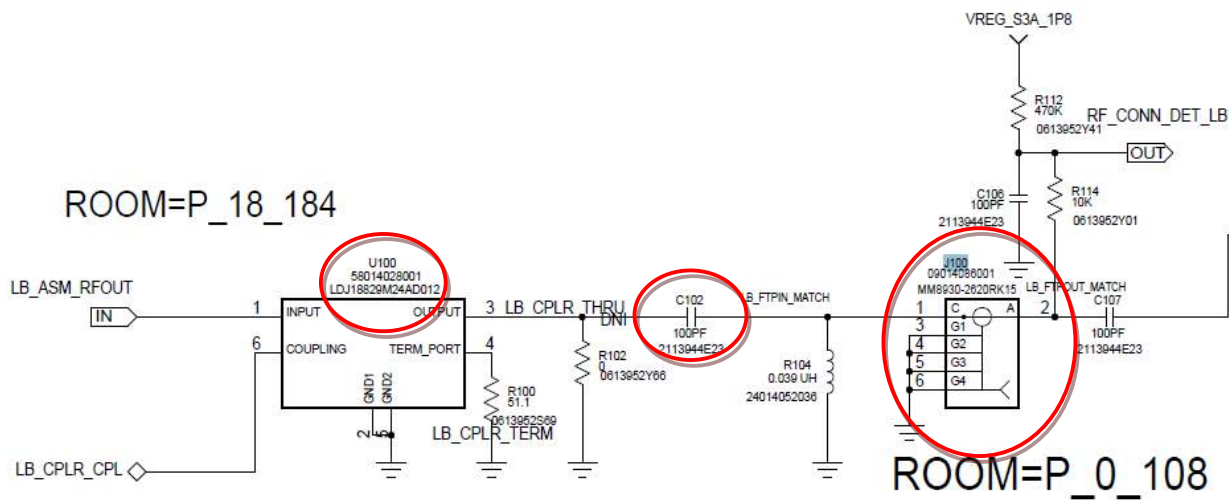

L3 Moto X RF Troubleshooting Guide


RF Test

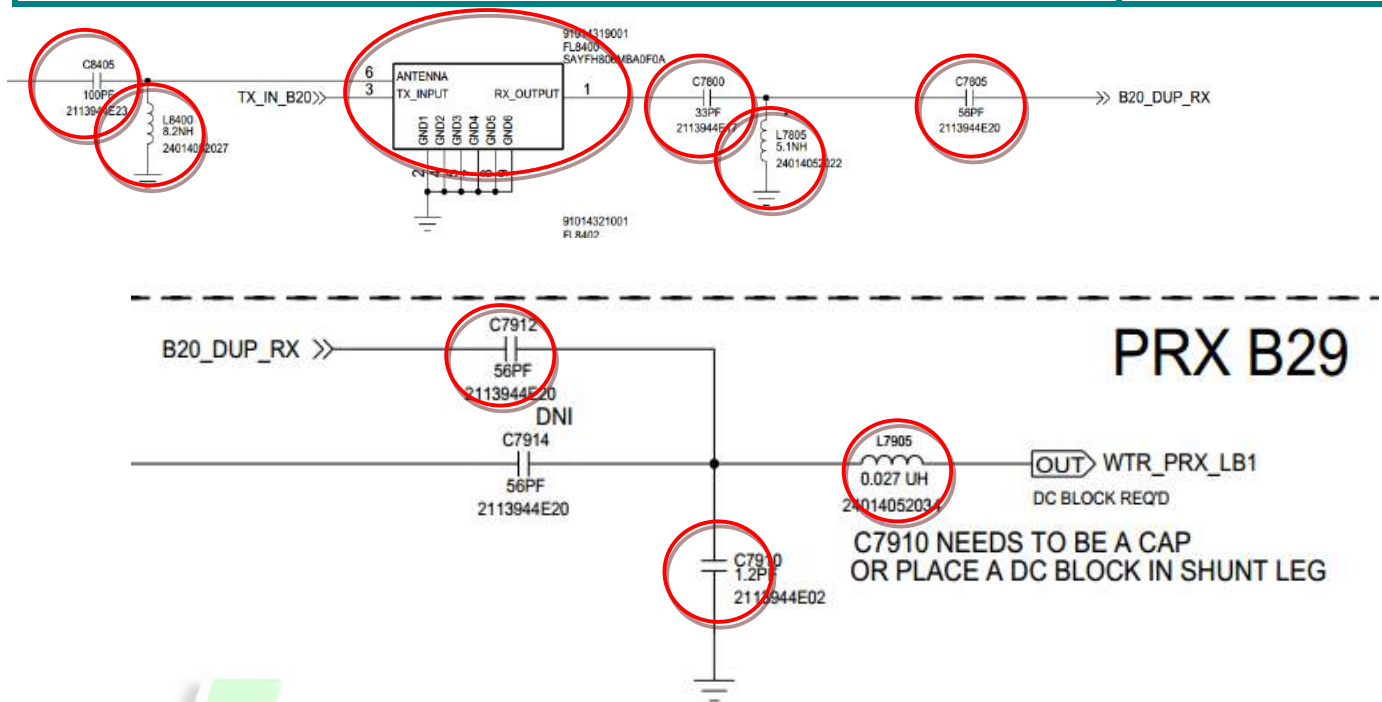

LTE B29 **C0** RX_SPRINT



L3 Moto X RF Troubleshooting Guide

RF Test

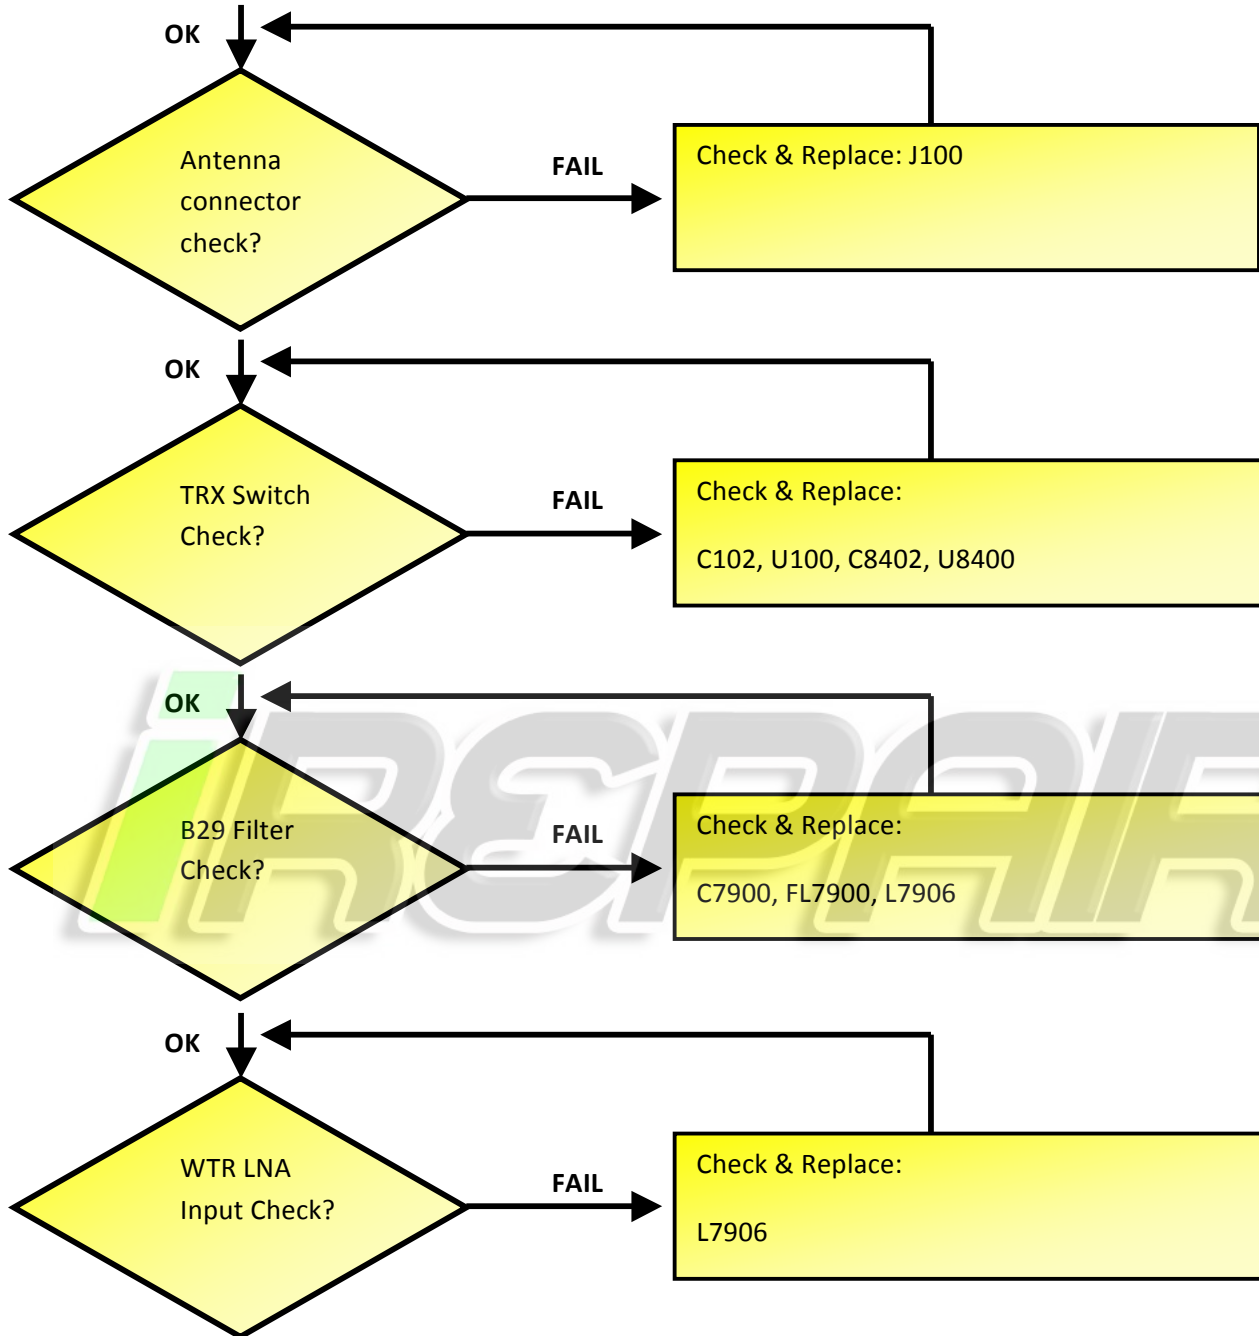

L3 Moto X RF Troubleshooting Guide

RF Test

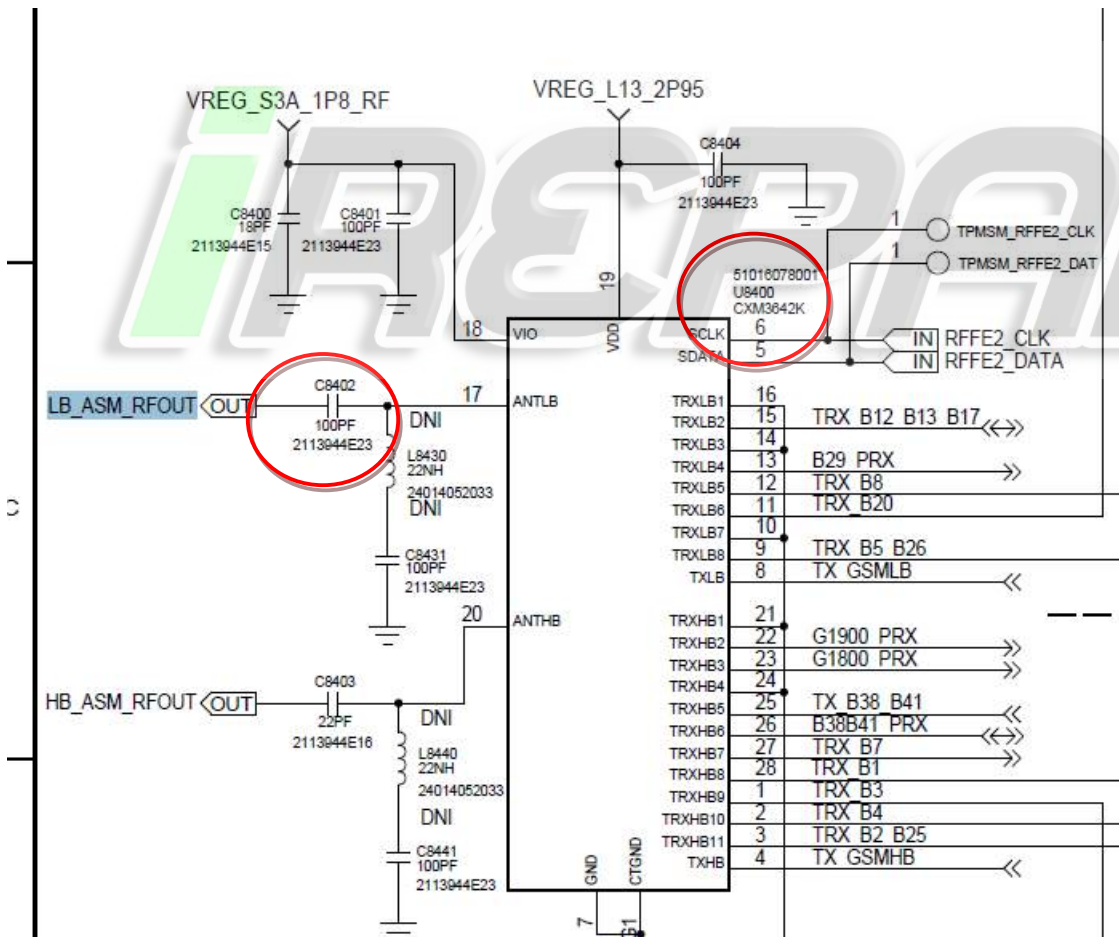
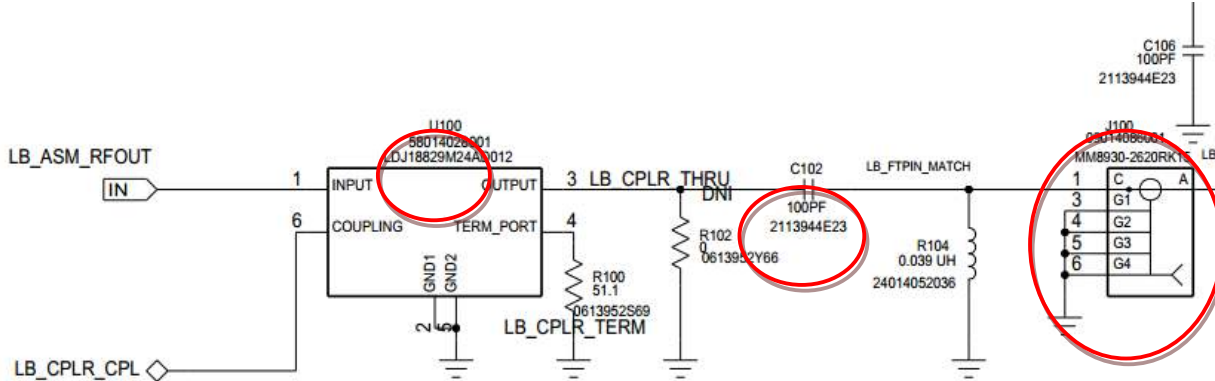


TITLE

MODEL

L3 Moto X RF Troubleshooting Guide

RF Test

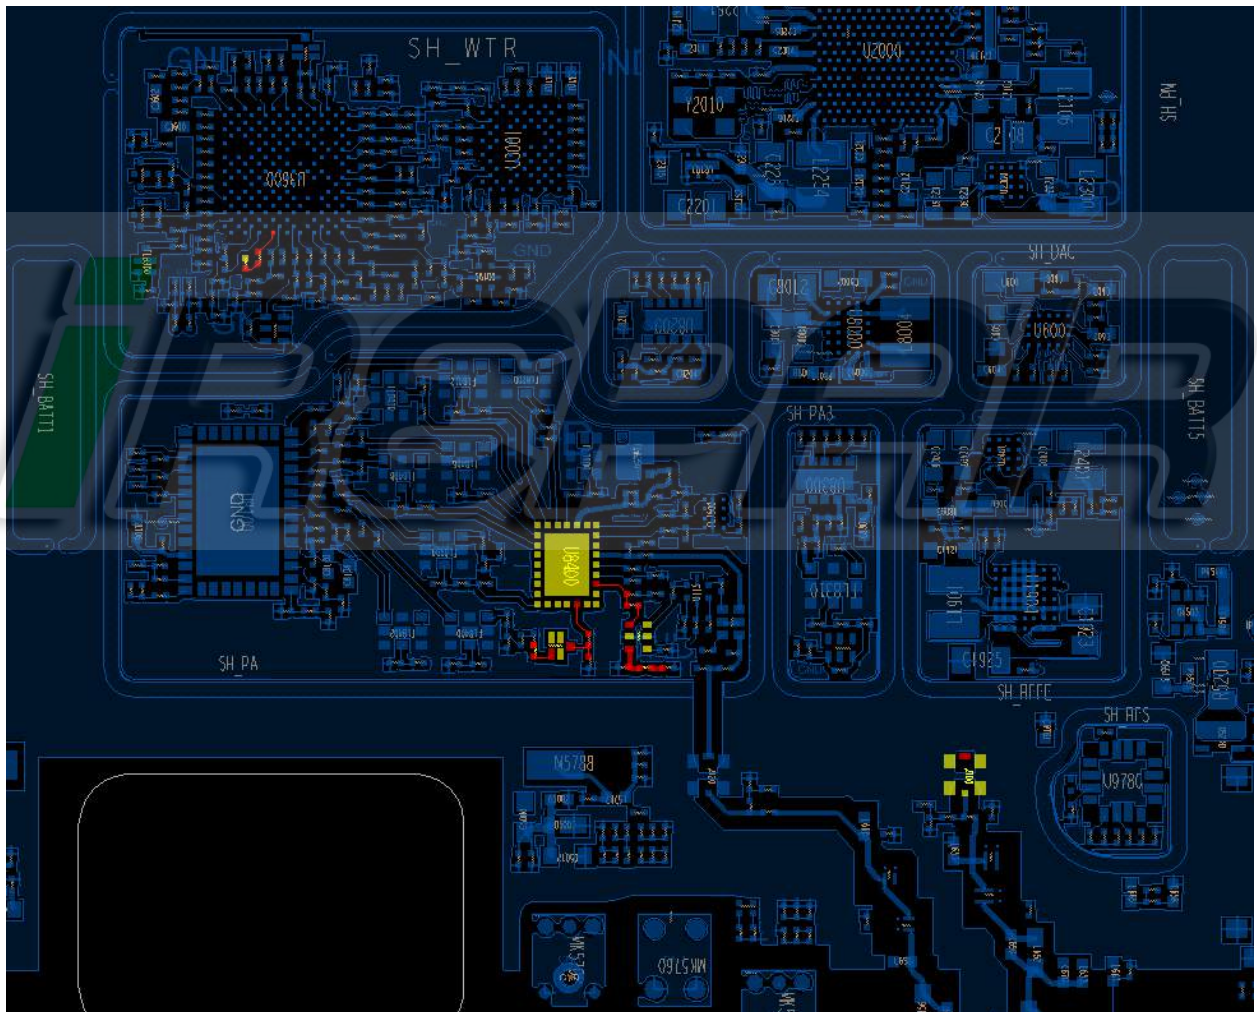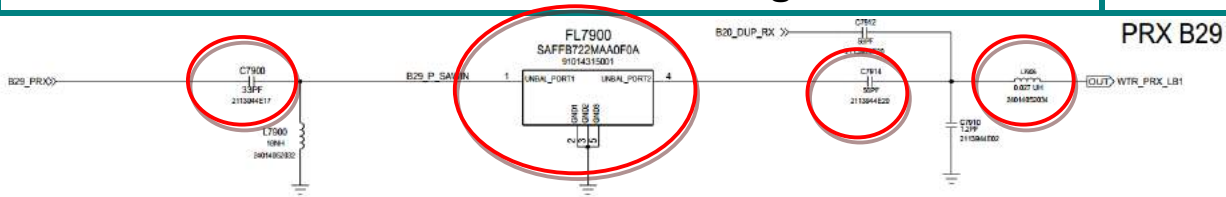


LTE B41 **C0** RX SPRINT

OK

L3 Moto X RF Troubleshooting Guide

RF Test


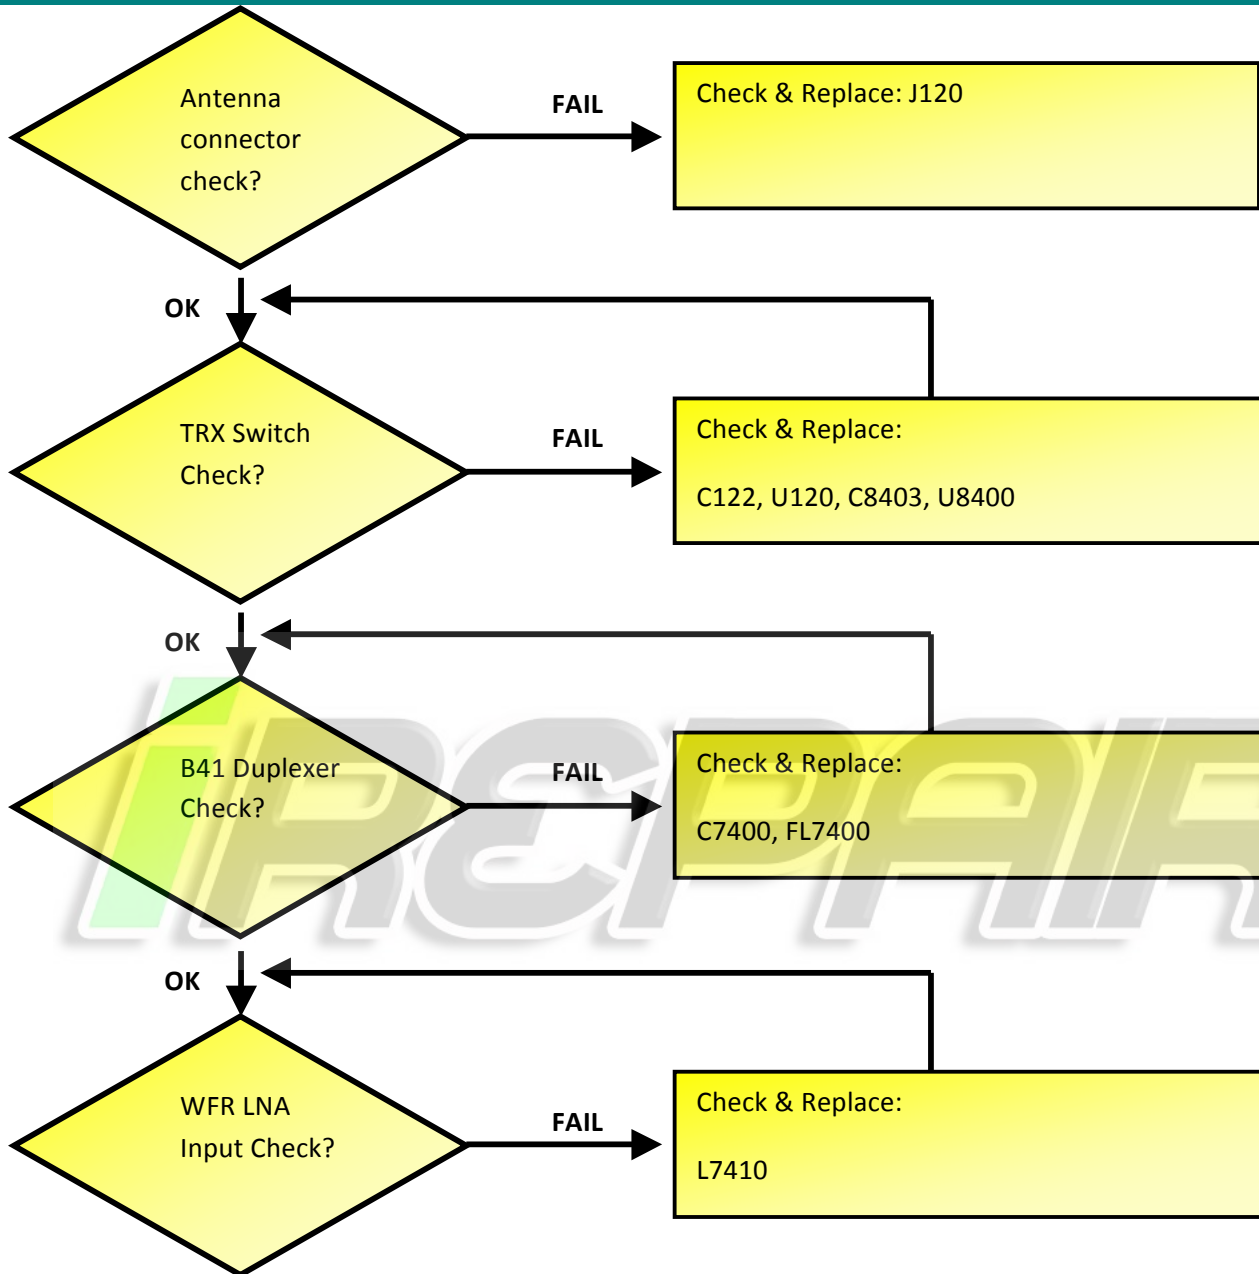


TITLE

MODEL

L3 Moto X RF Troubleshooting Guide

RF Test

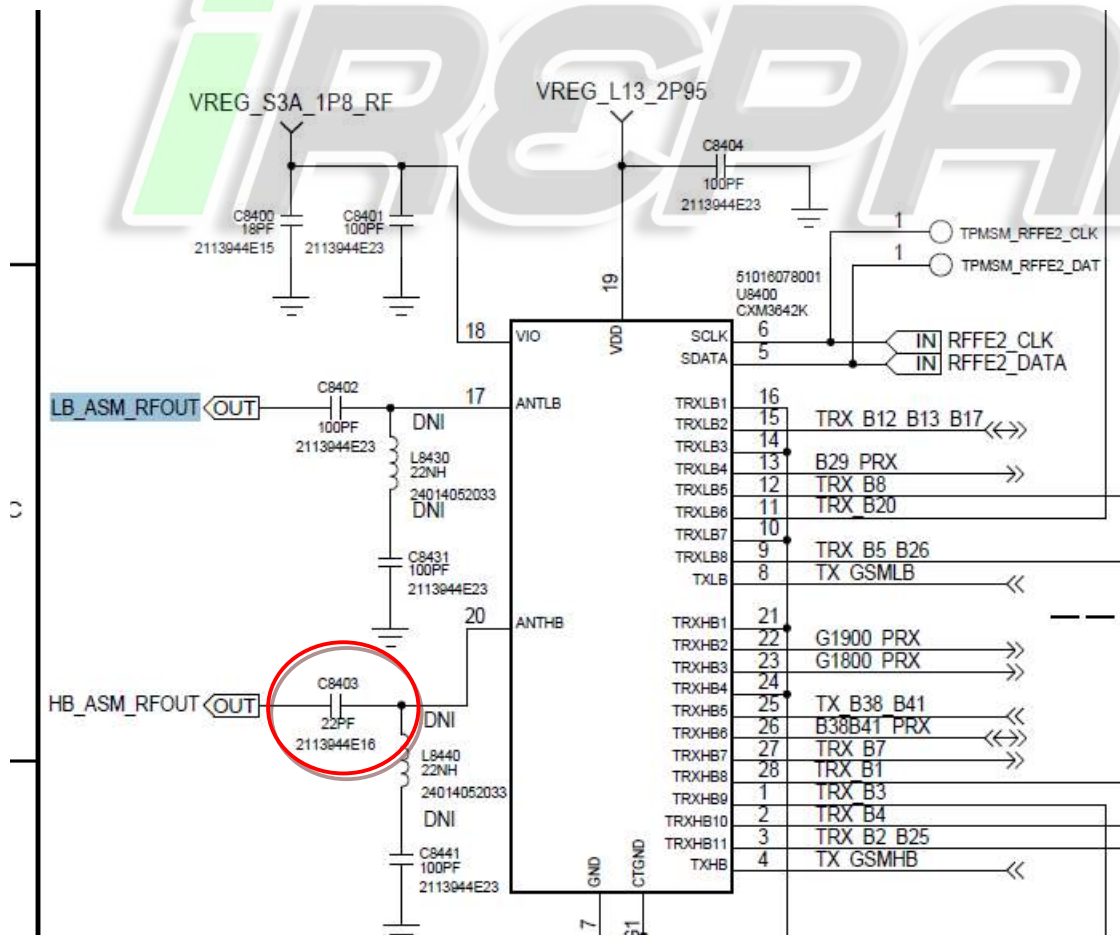
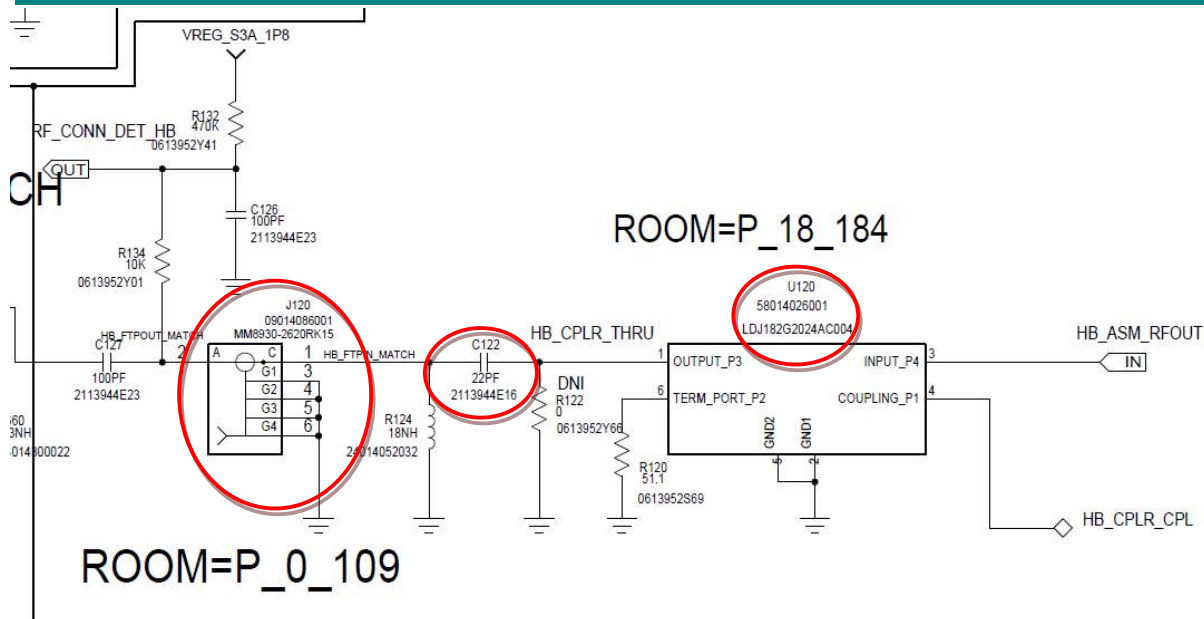


TITLE

MODEL

L3 Moto X RF Troubleshooting Guide


RF Test

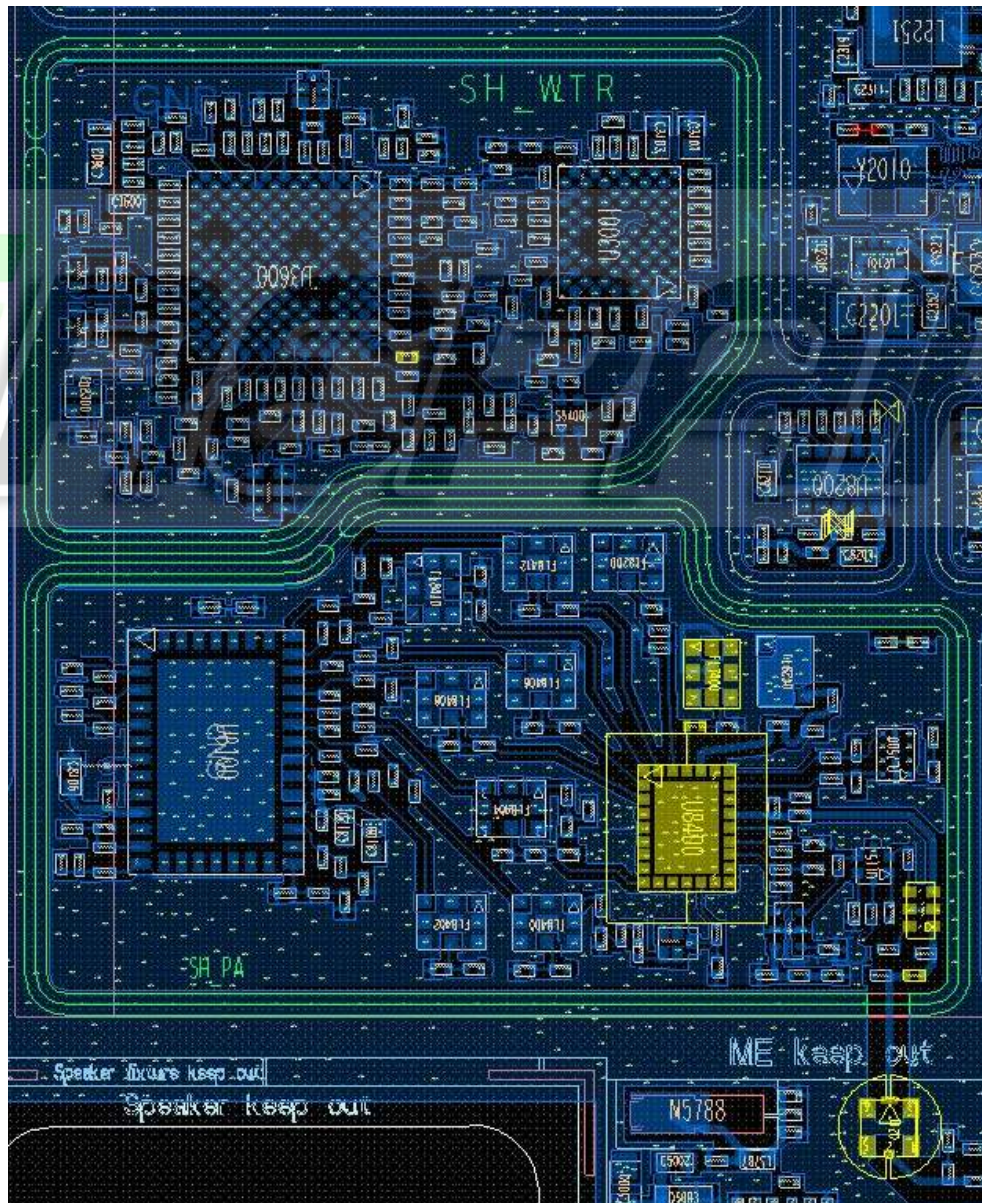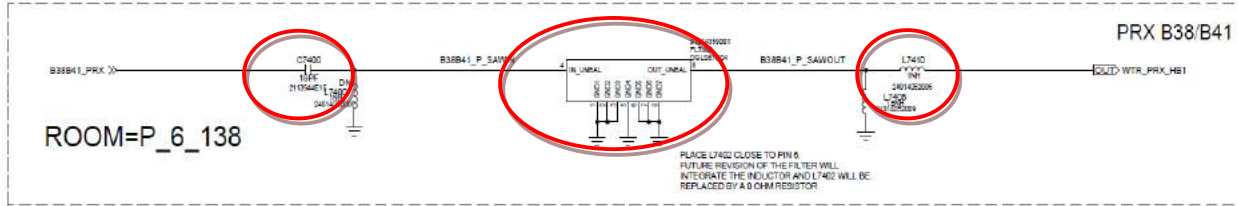

L3 Moto X RF Troubleshooting Guide

RF Test

LTE Bands 2&25, WCDMA Band 2, CDMA BC1 **C1** RX

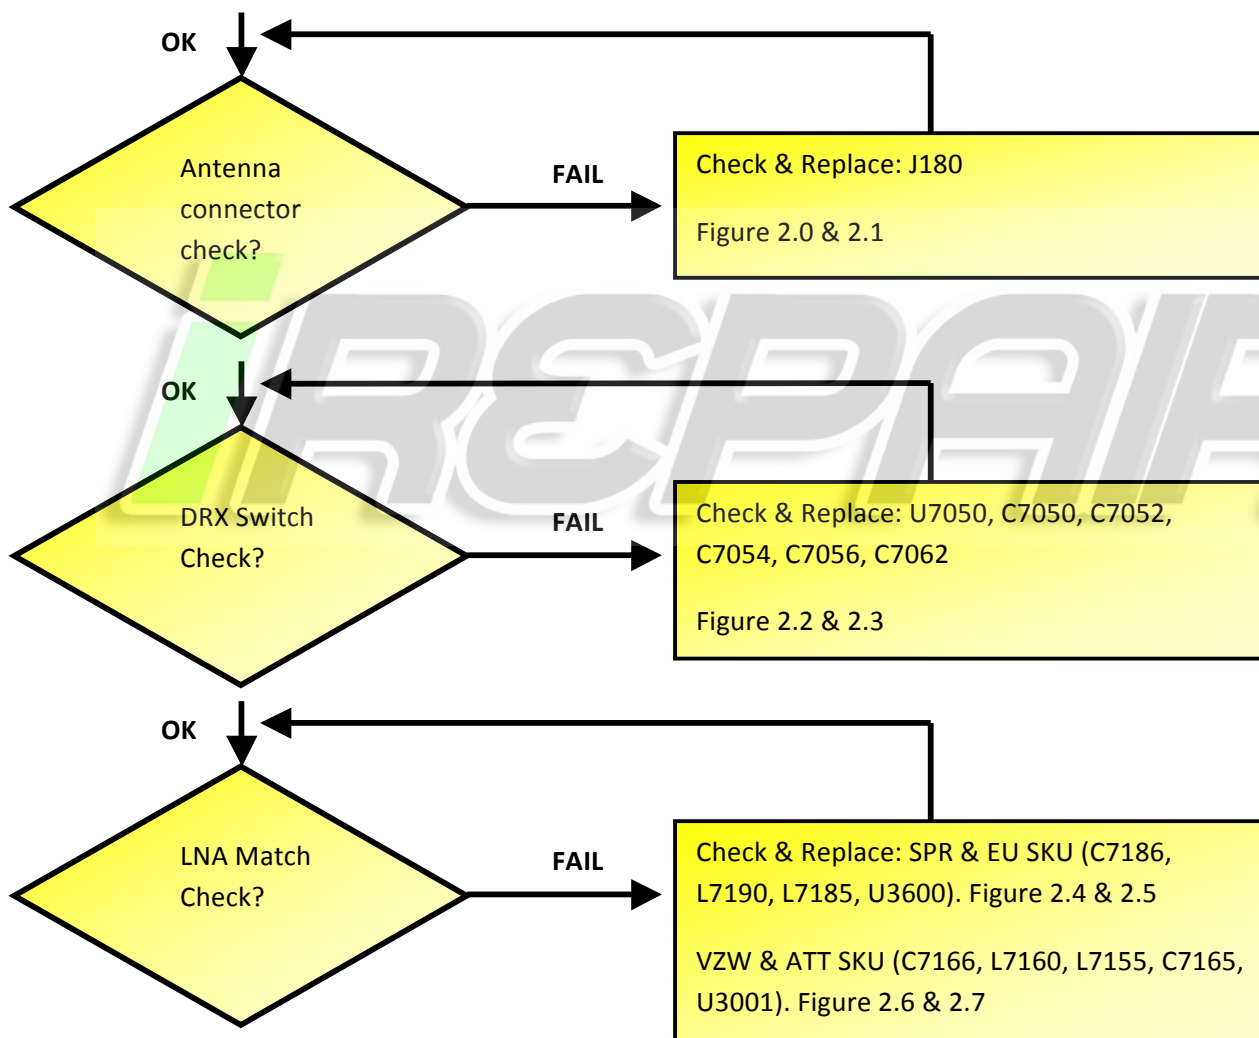

L3 Moto X RF Troubleshooting Guide

RF Test

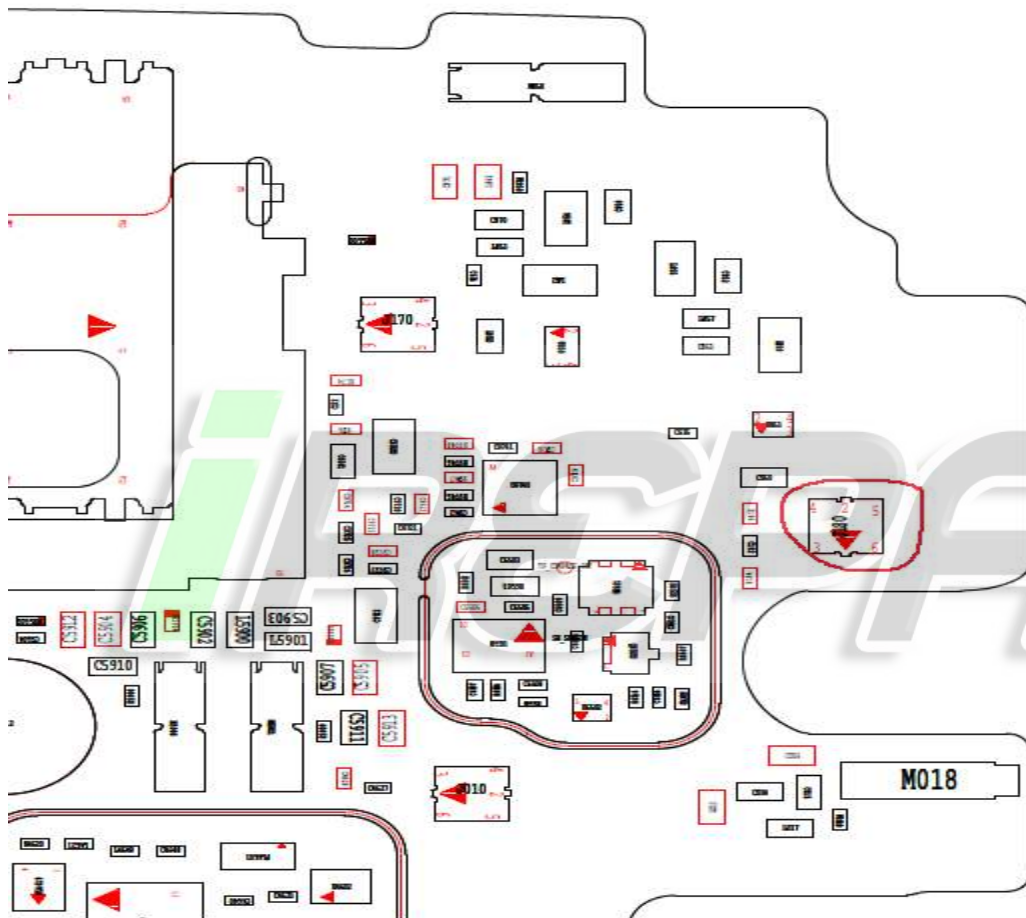


Figure 2.0

L3 Moto X RF Troubleshooting Guide

RF Test

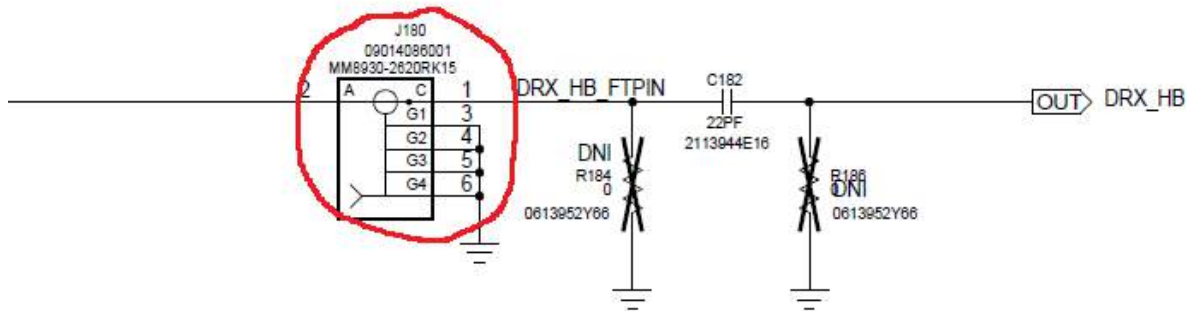


Figure 2.1

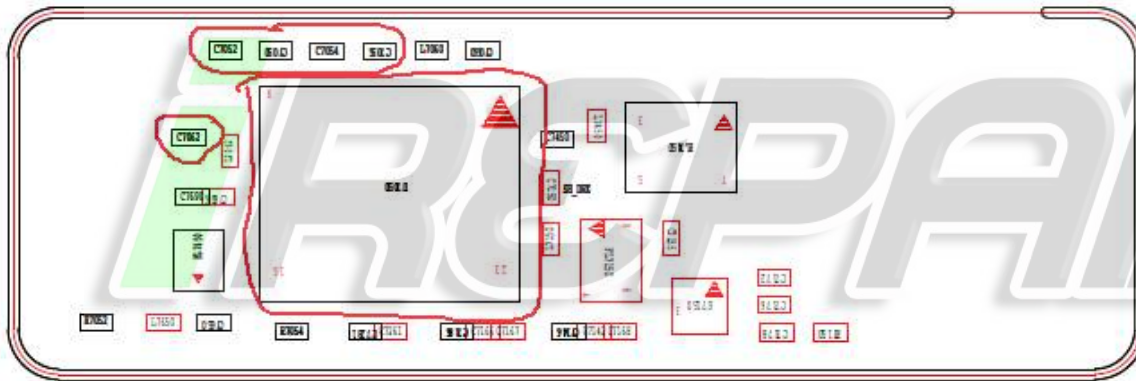


Figure 2.2

L3 Moto X RF Troubleshooting Guide

RF Test

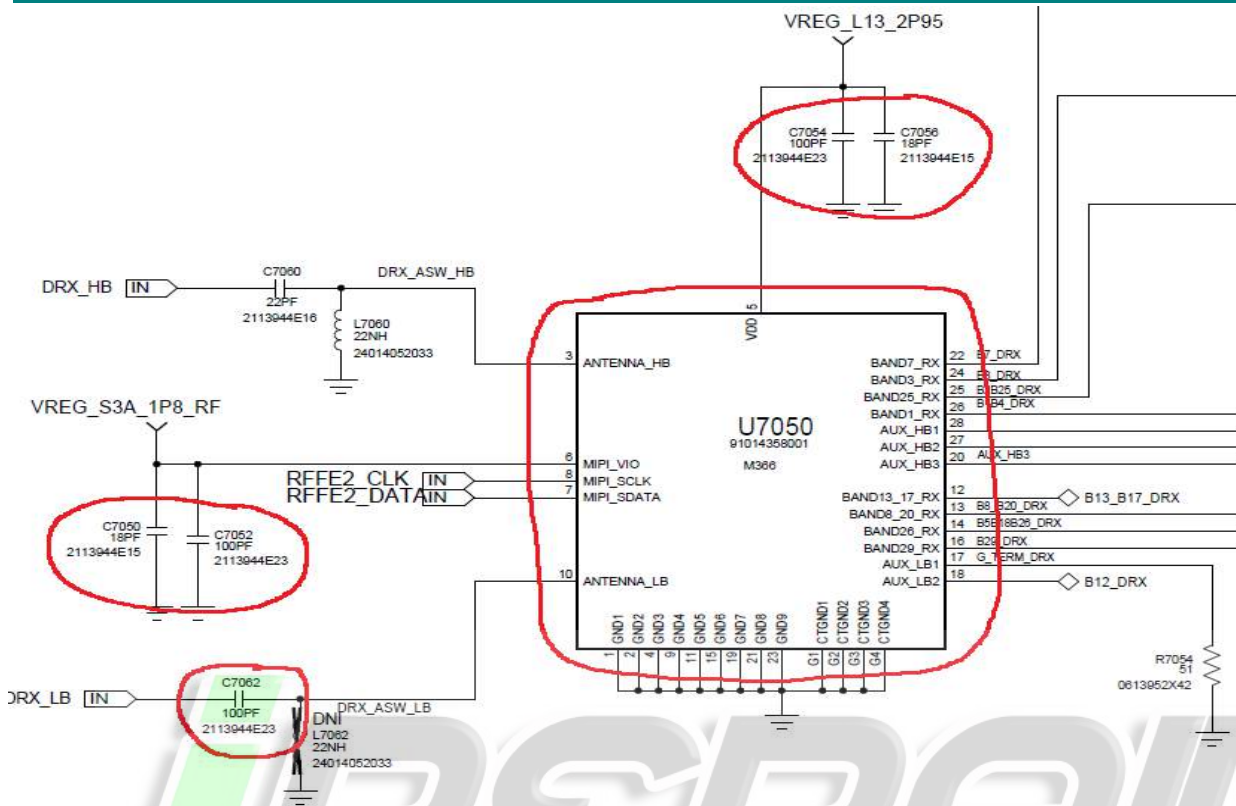


Figure 2.3

L3 Moto X RF Troubleshooting Guide

RF Test

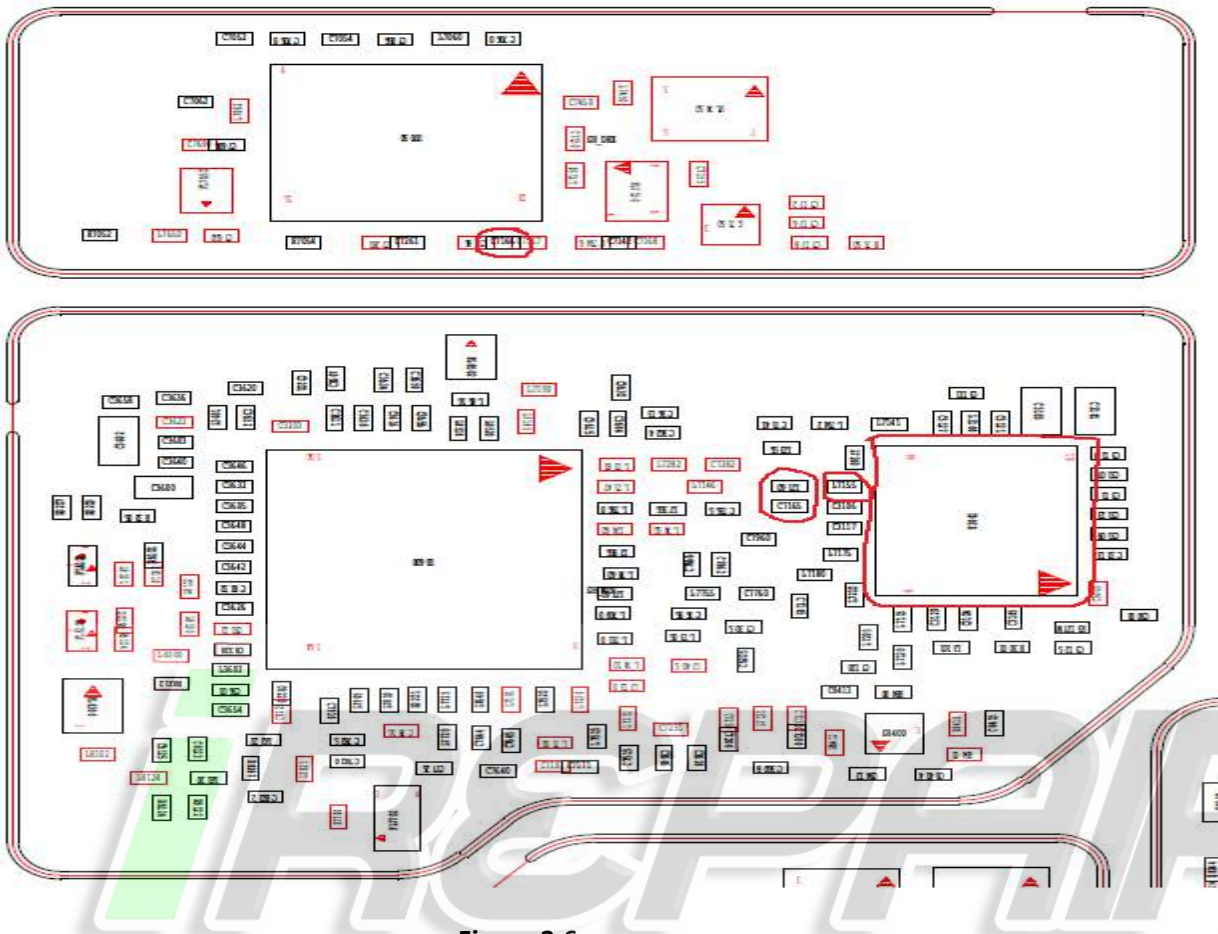


Figure 2.6

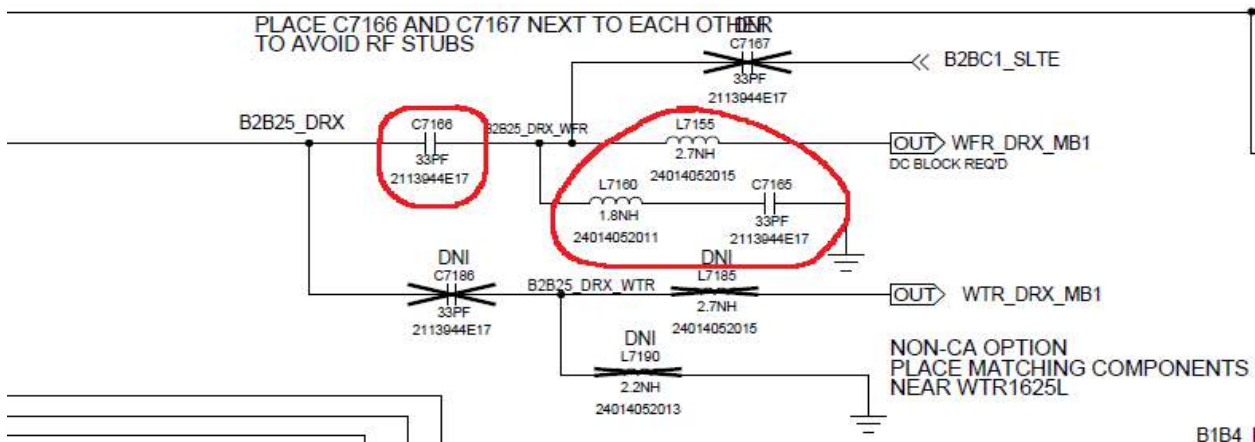



Figure 2.7

LTE B3 **C1** RX ATT & VZW SKUs

OK

L3 Moto X RF Troubleshooting Guide




RF Test

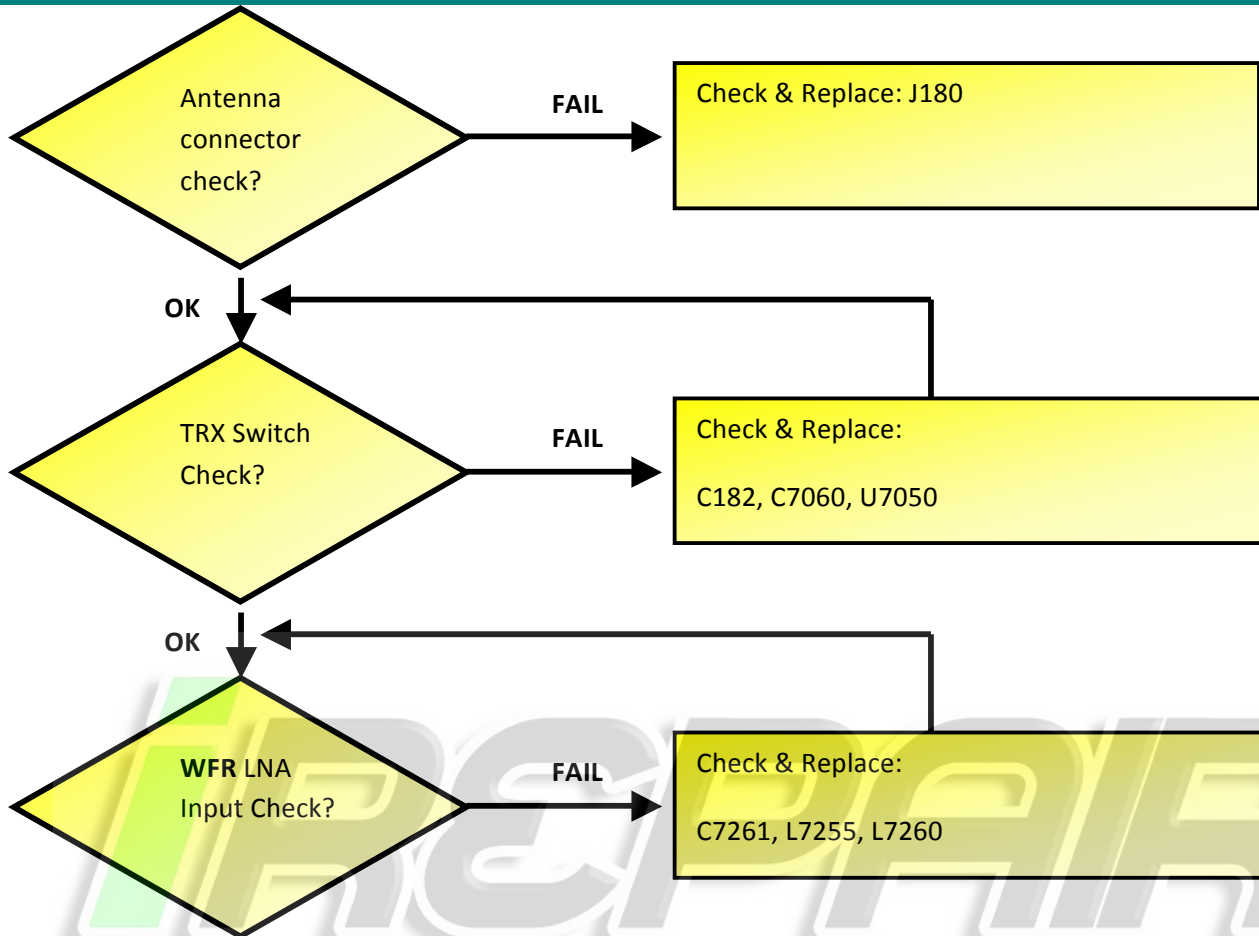

L3 Moto X RF Troubleshooting Guide


RF Test

ROOM=P_0_113

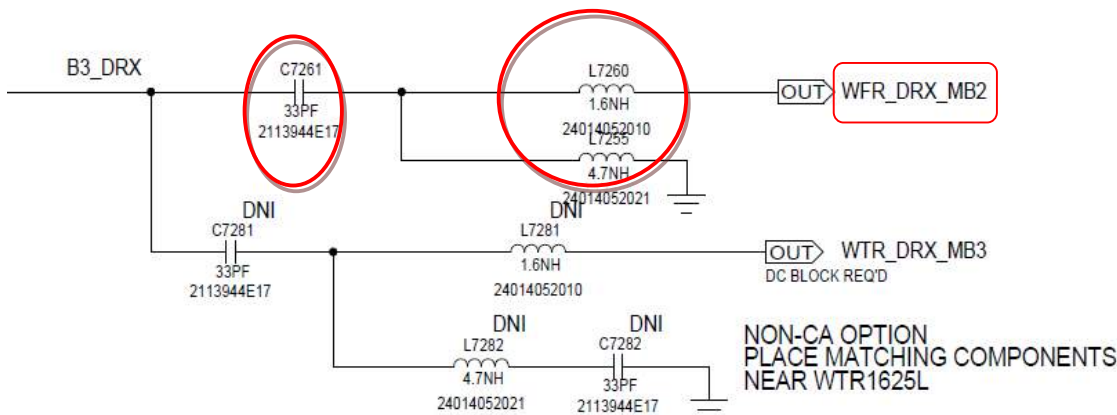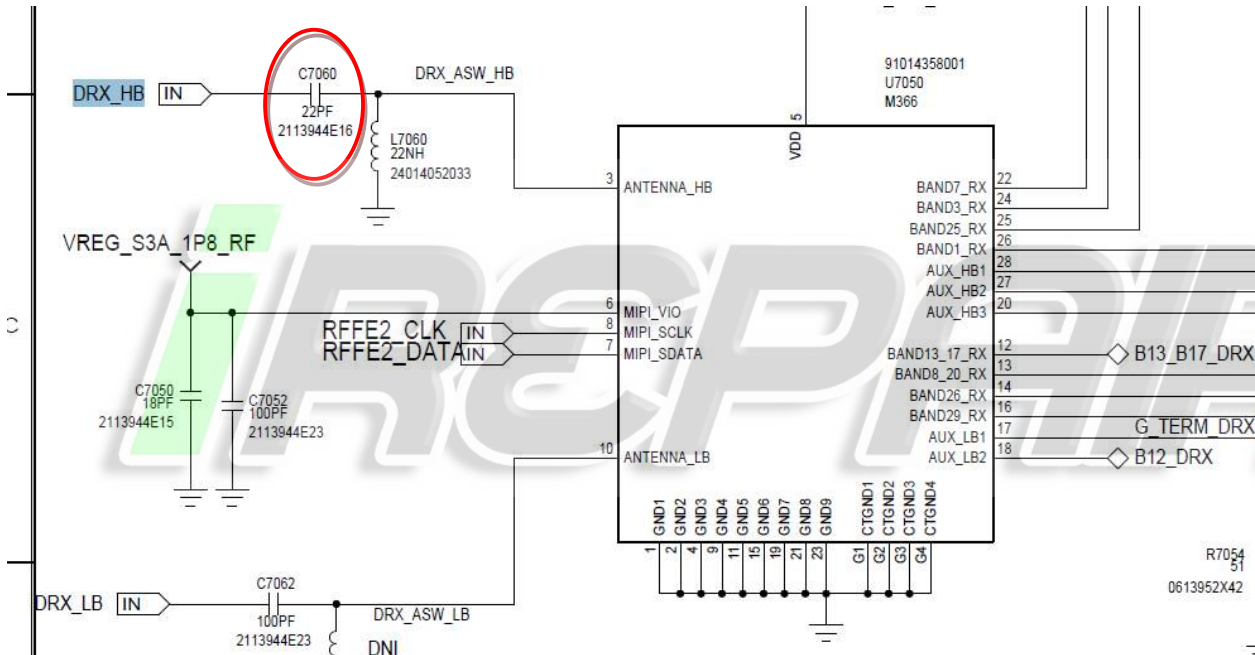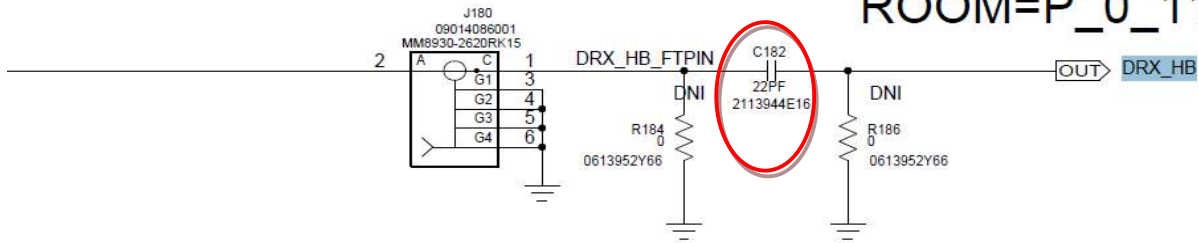


L3 Moto X RF Troubleshooting Guide

RF Test

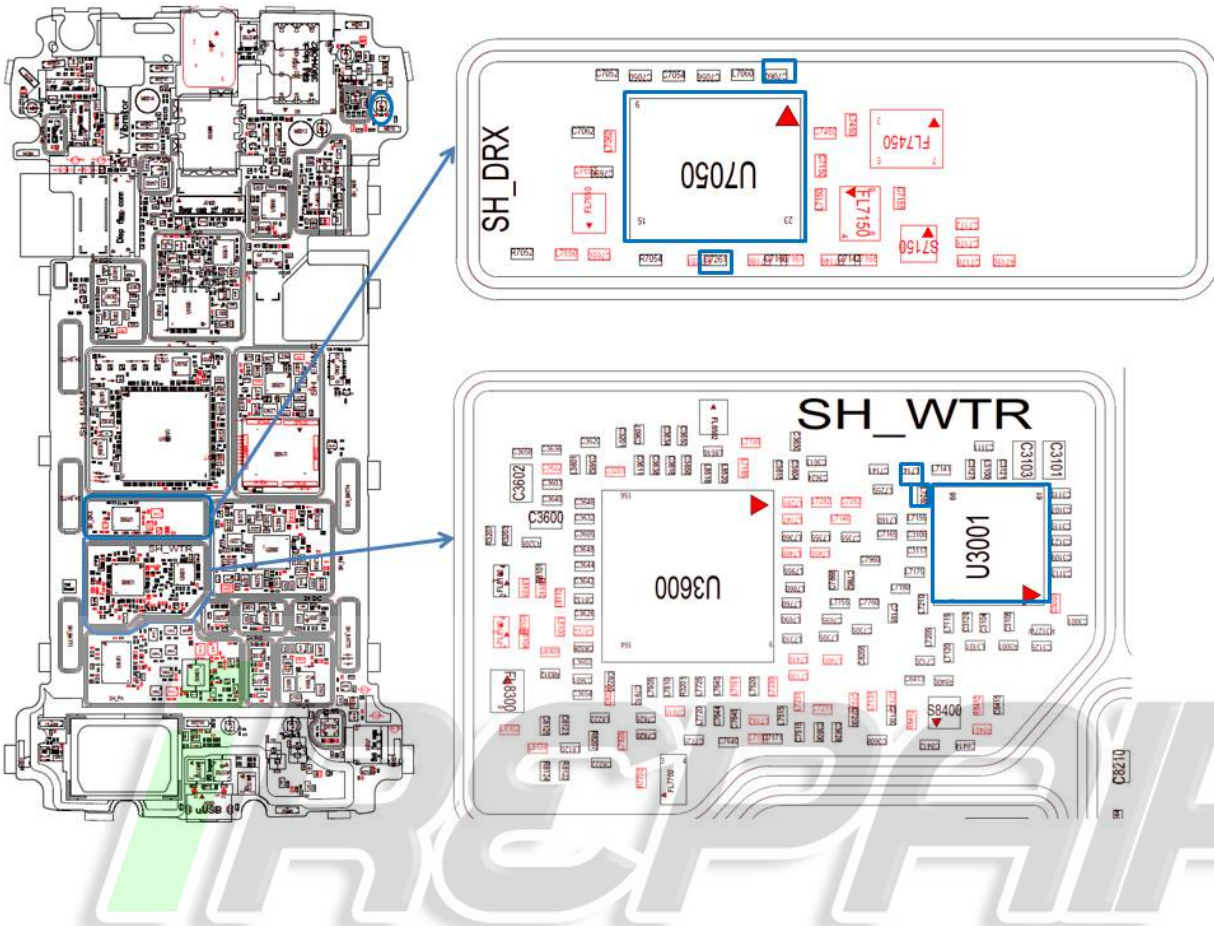


LTE & WCDMA B3 **C1** RX EU SKUs

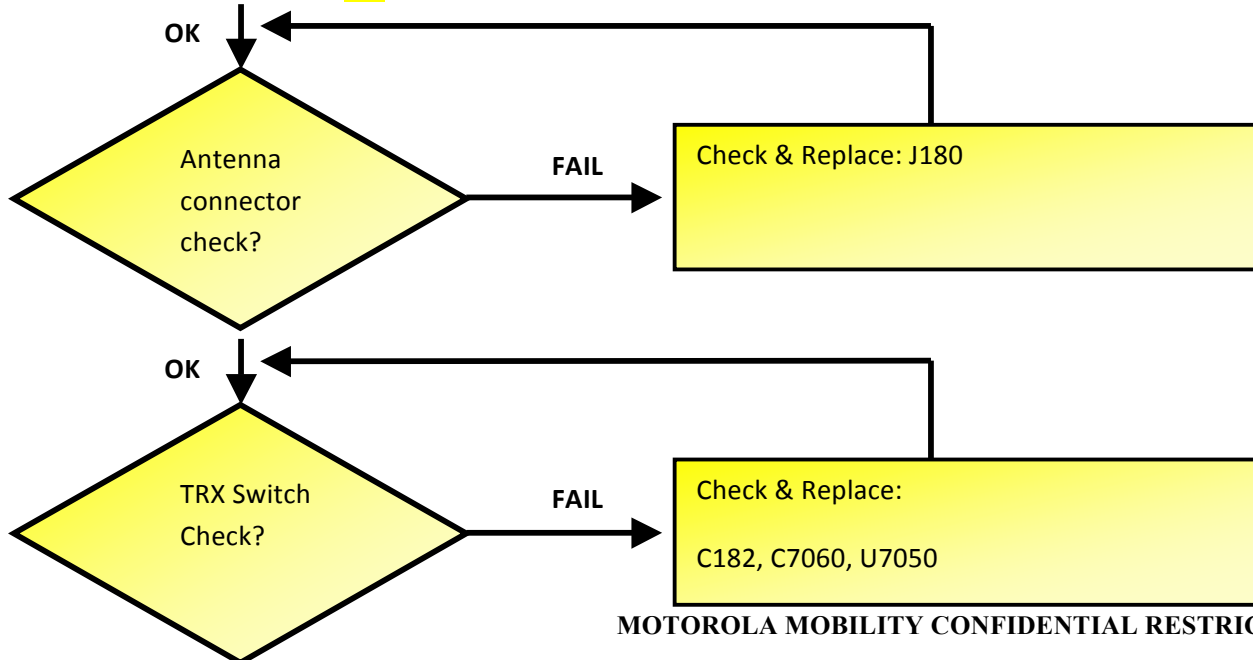


L3 Moto X RF Troubleshooting Guide

RF Test

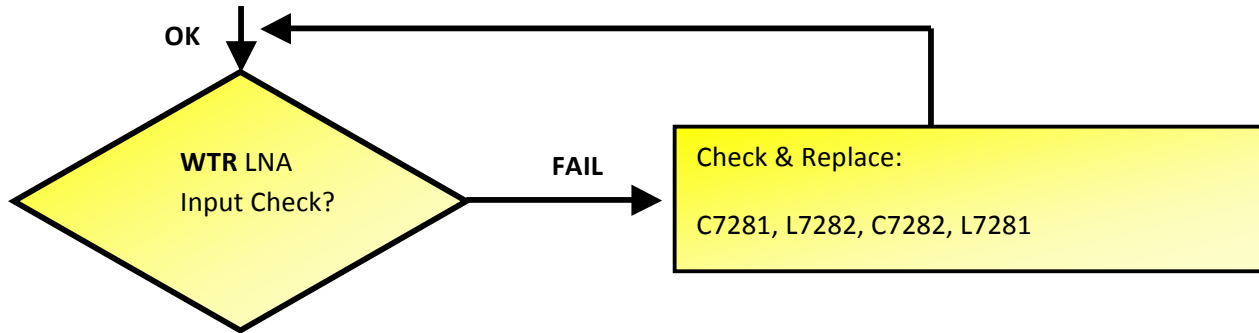

iREPAIR


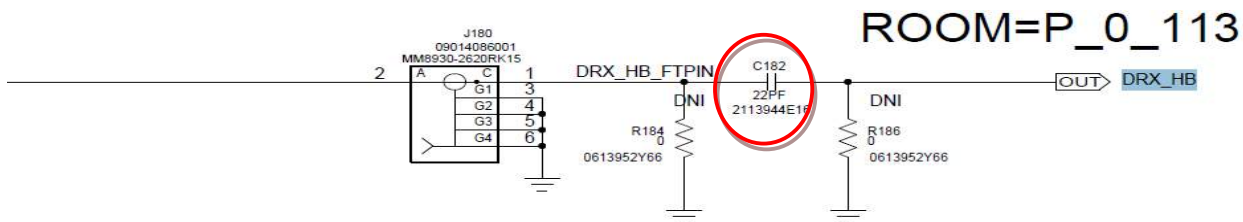


TITLE

MODEL


L3 Moto X RF Troubleshooting Guide

RF Test

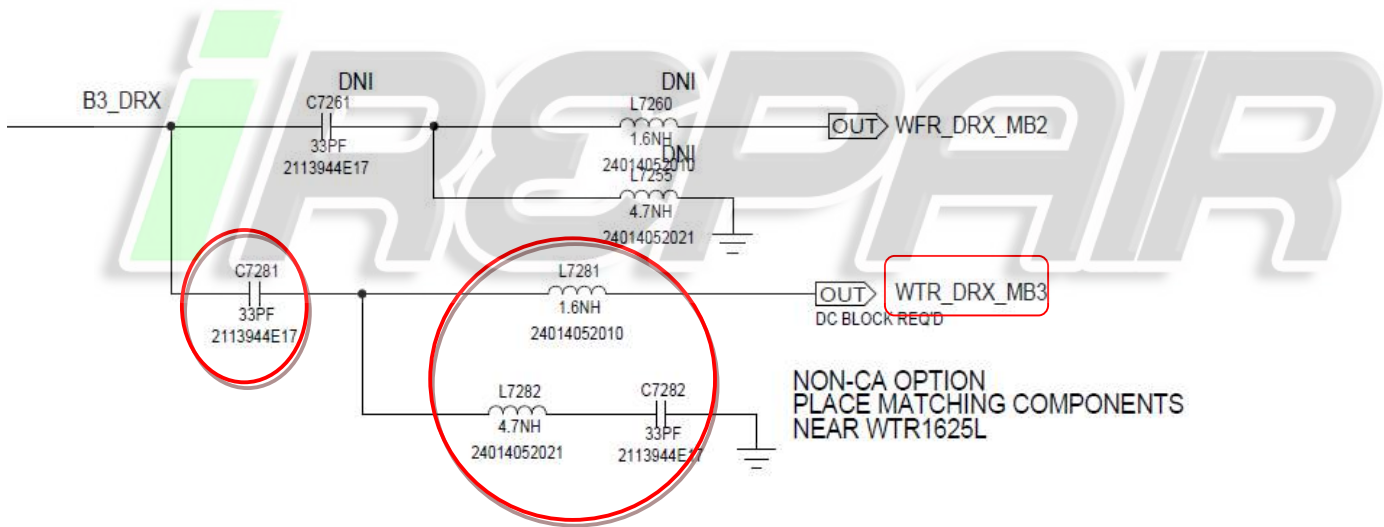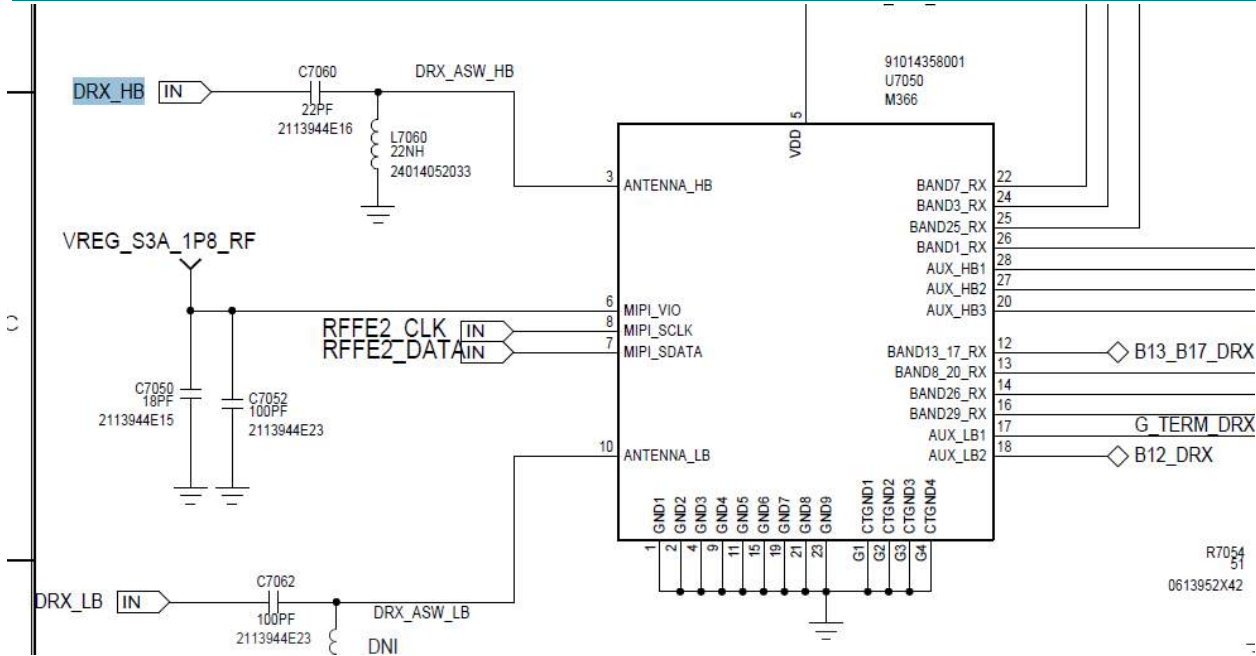

L3 Moto X RF Troubleshooting Guide

RF Test

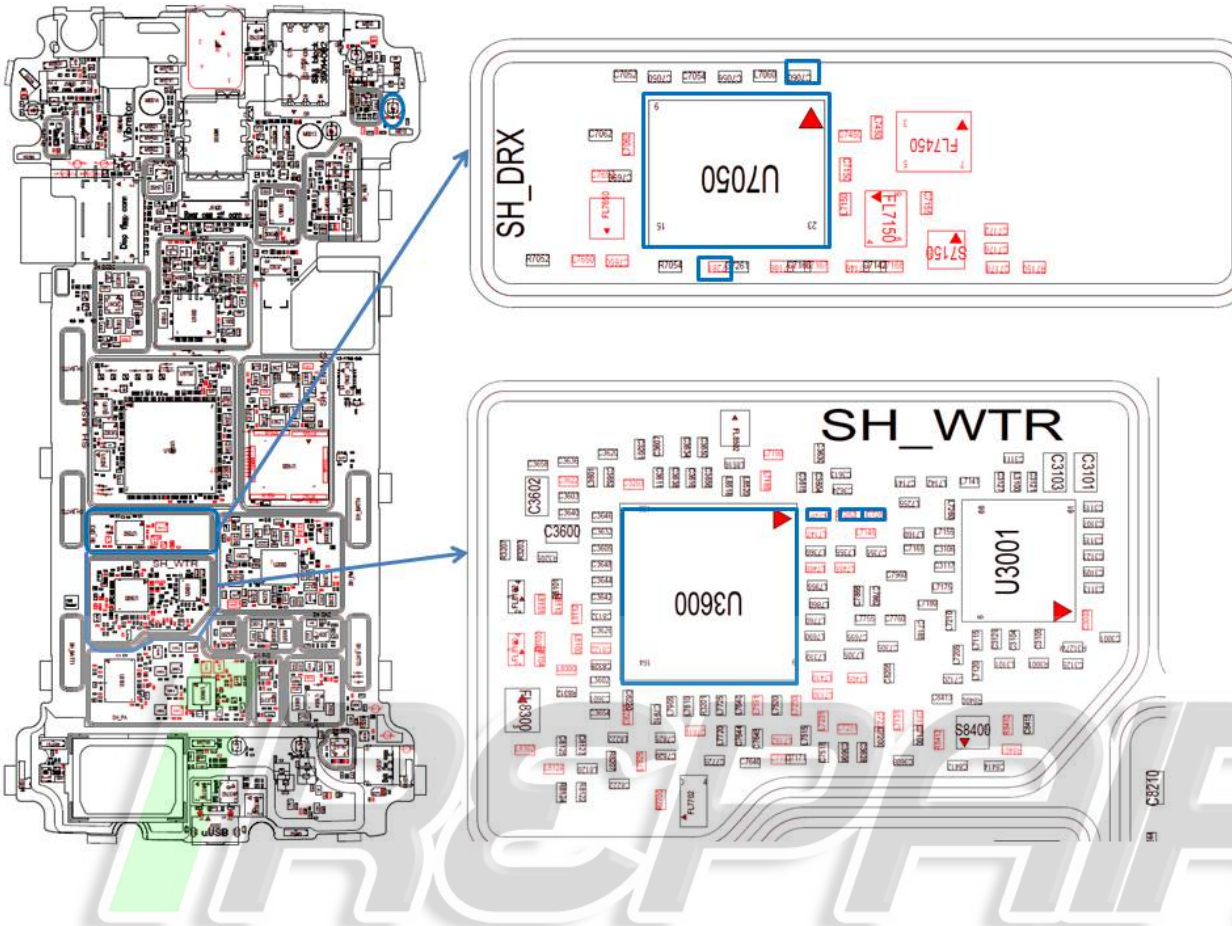

LTE & WCDMA B4 **C1** RX Sprint

OK

Antenna
connector
check?

FAIL

Check & Replace: J180


MOT

TED

v1.0

L3 Moto X RF Troubleshooting Guide

RF Test

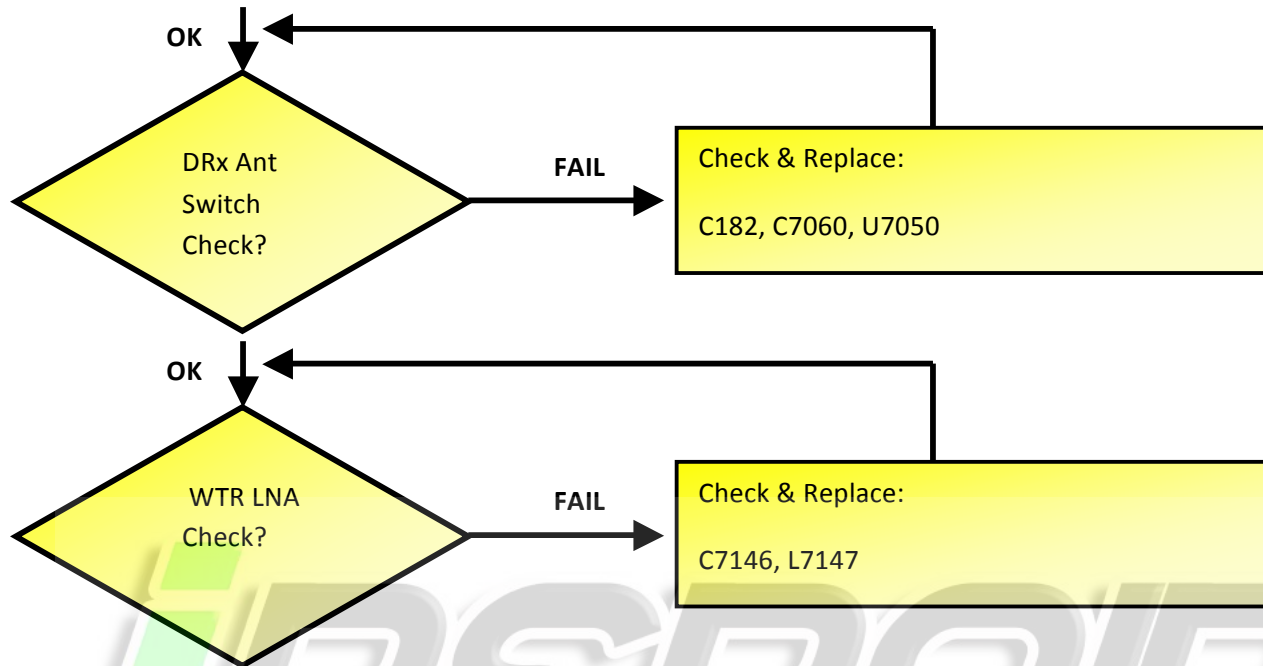

REPAIR

L3 Moto X RF Troubleshooting Guide

RF Test



DRX HIGH BAND ANTENNA

REF:180-189

DEVICE LOCATION - TOP LEFT

(GSM/UTMS/LTE)

ROOM=P 0 113

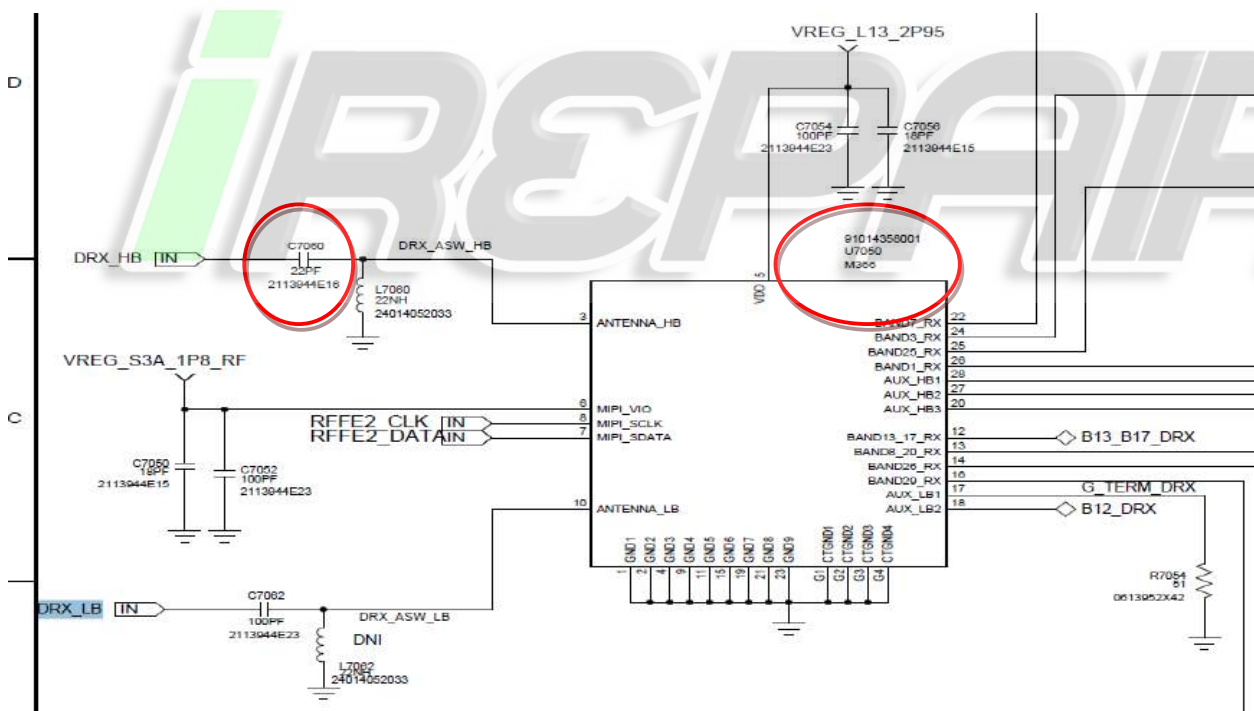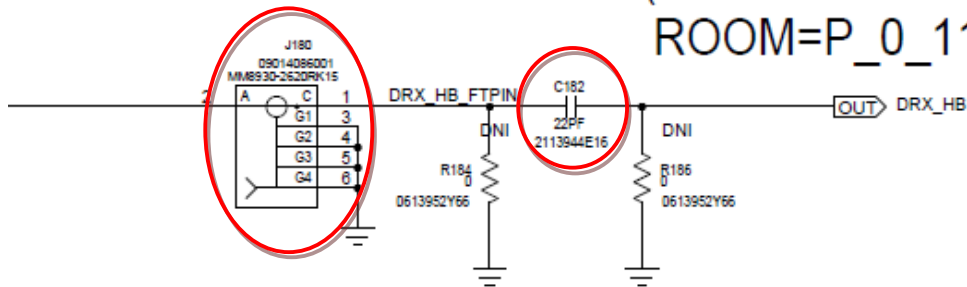

RF Test




L3 Moto X RF Troubleshooting Guide

RF Test

iREPAIR

LTE & WCDMA B4 **C1** RX ATT & VZW SKU

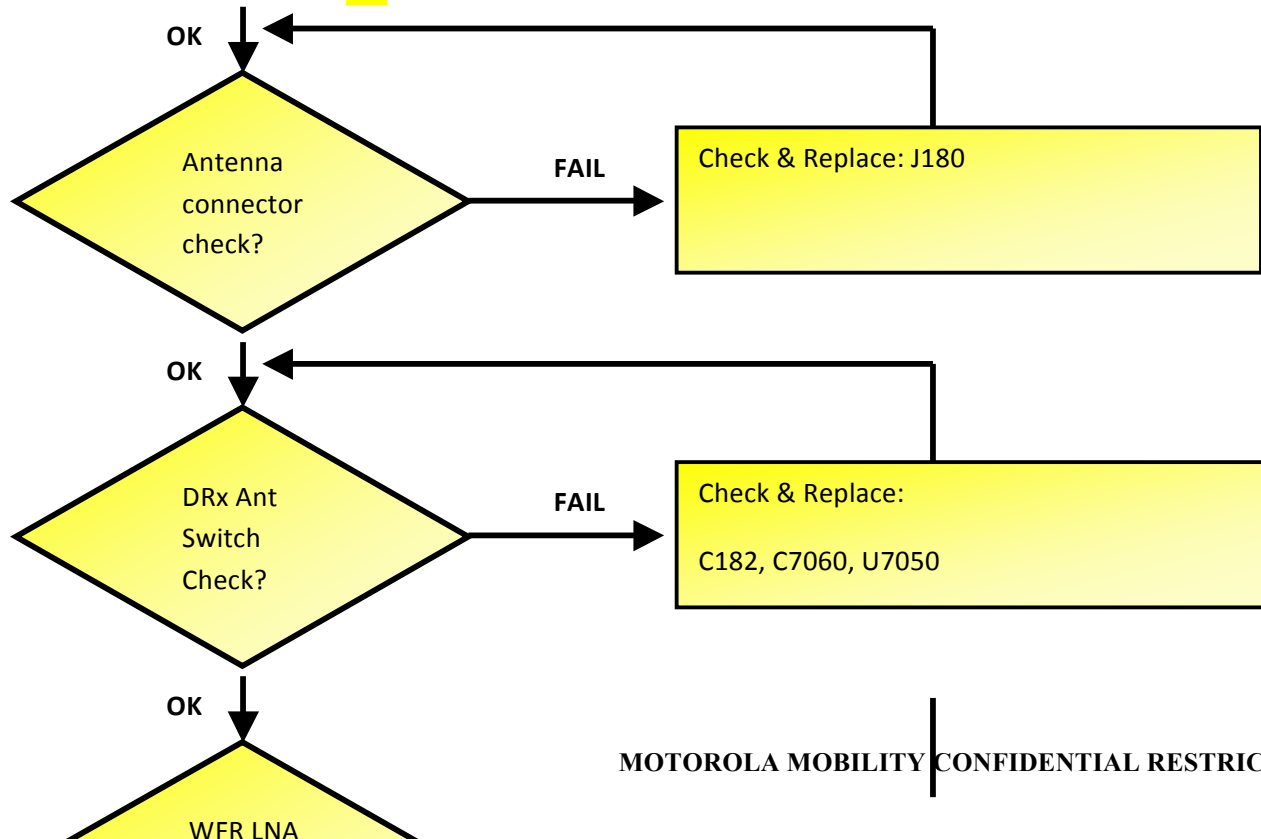

TITLE

L3 Moto X RF Troubleshooting Guide

MODEL

RF Test



FAIL

Check & Replace:

C7142, L7141

iREPAIR


DRX HIGH BAND ANTENNA

REF:180-189

DEVICE LOCATION - TOP LEFT


(GSM/UTMS/LTE)

ROOM=P_0_113

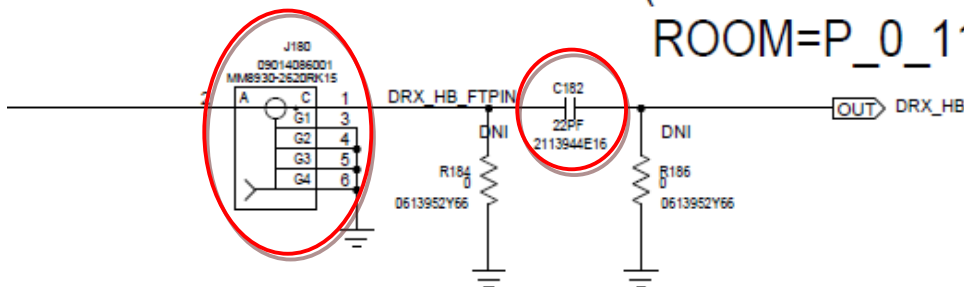


L3 Moto X RF Troubleshooting Guide

RF Test

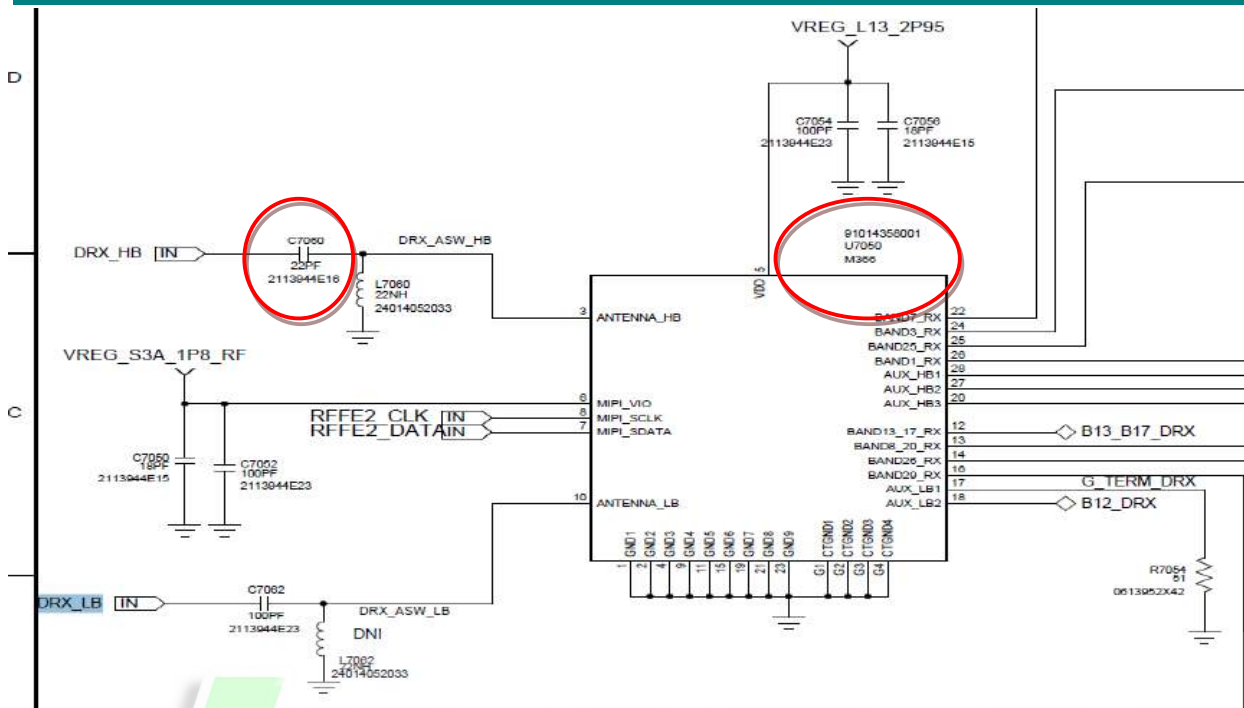


iREPAIR

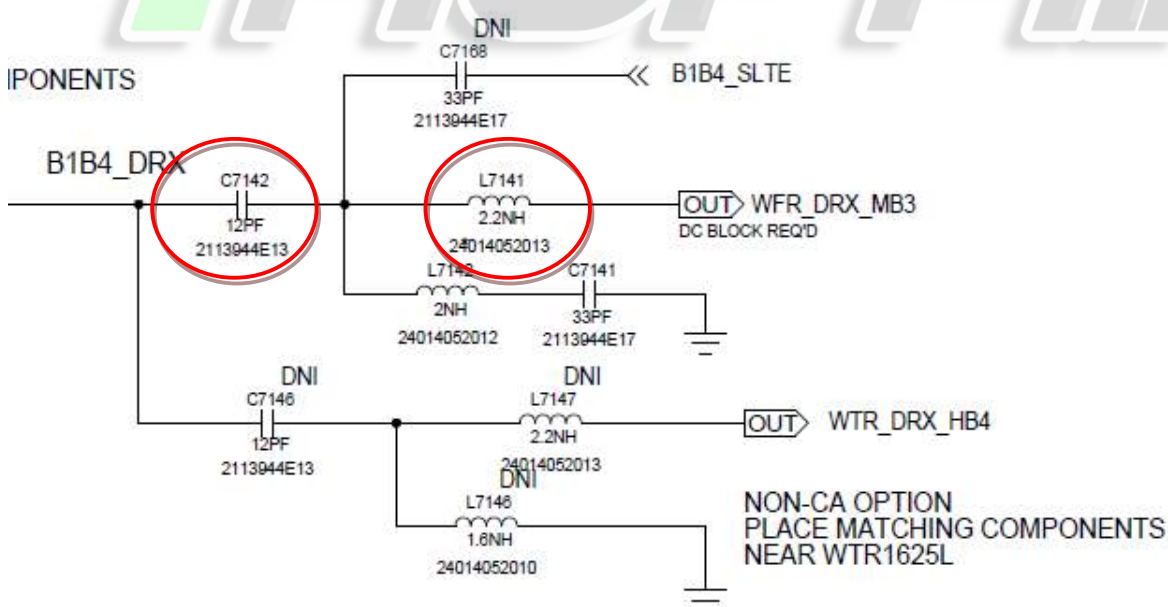

L3 Moto X RF Troubleshooting Guide


RF Test

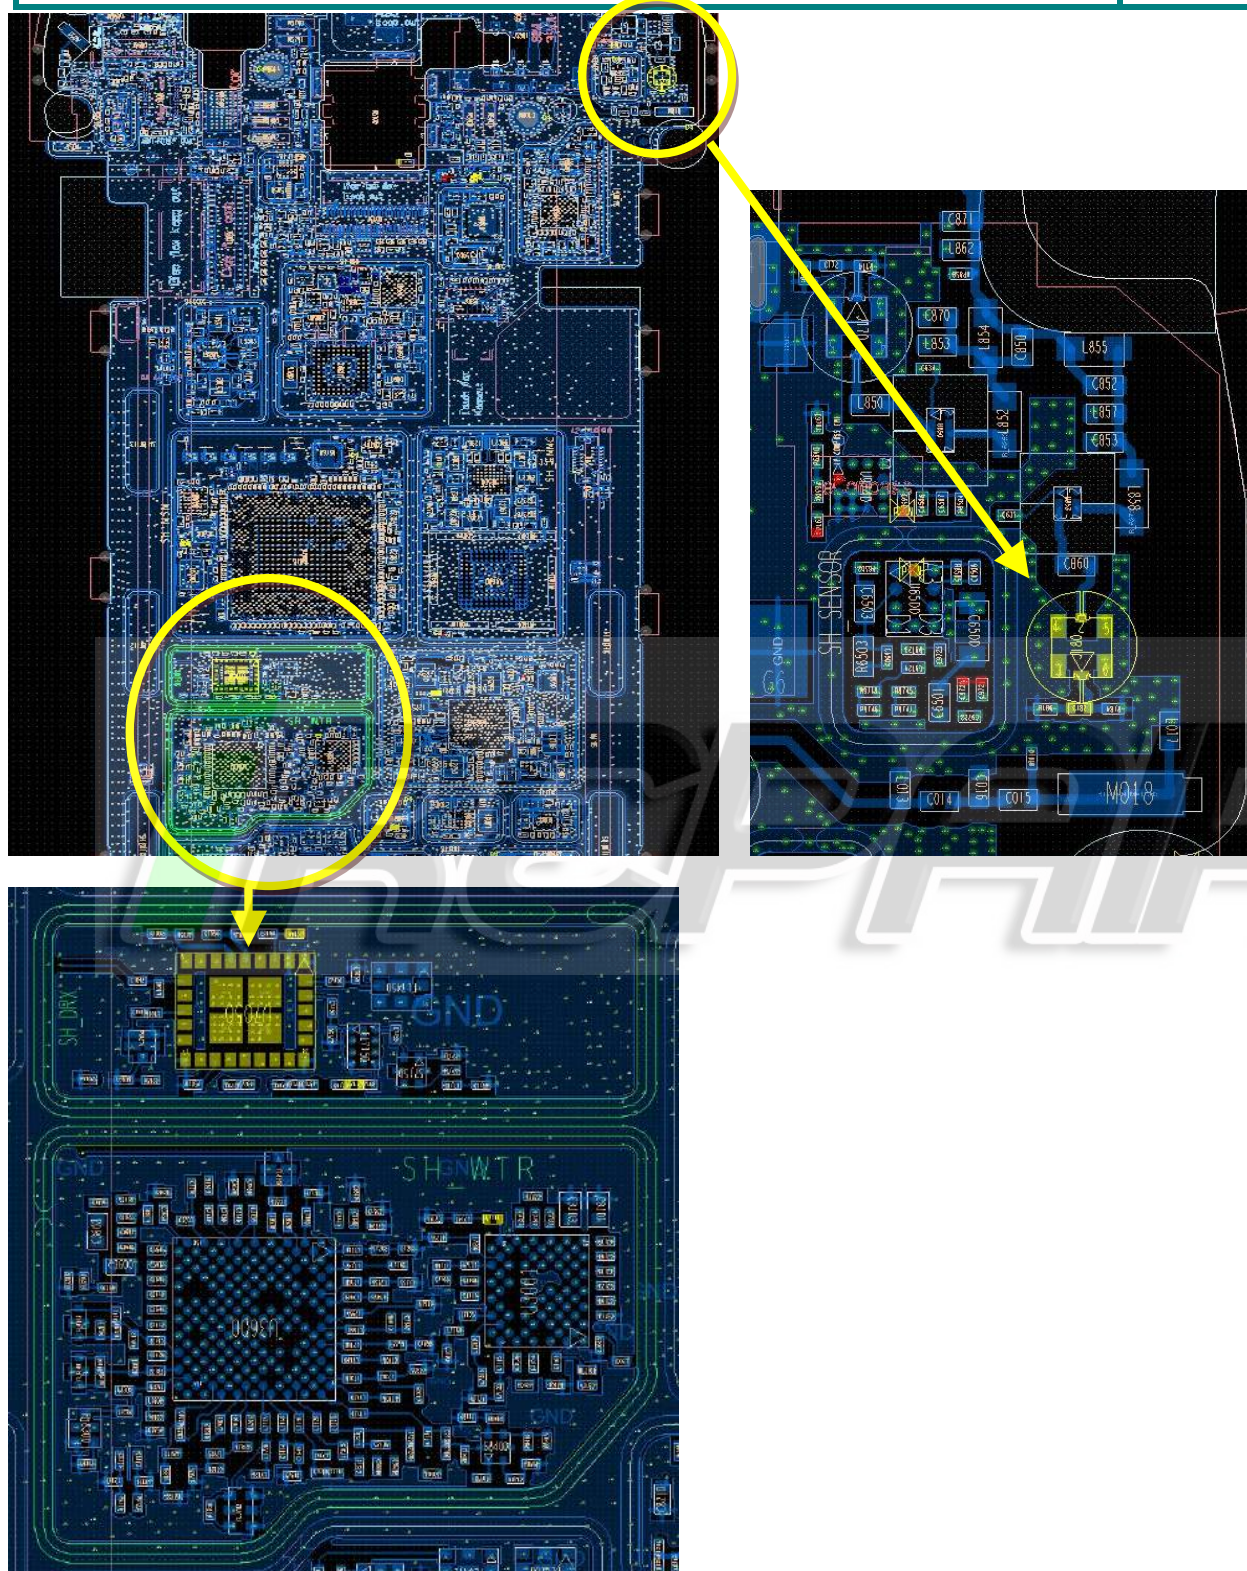

LTE B5&B26, WCDMA B5, CDMA BC0&BC10, GSM850 **C1** RX

L3 Moto X RF Troubleshooting Guide


RF Test

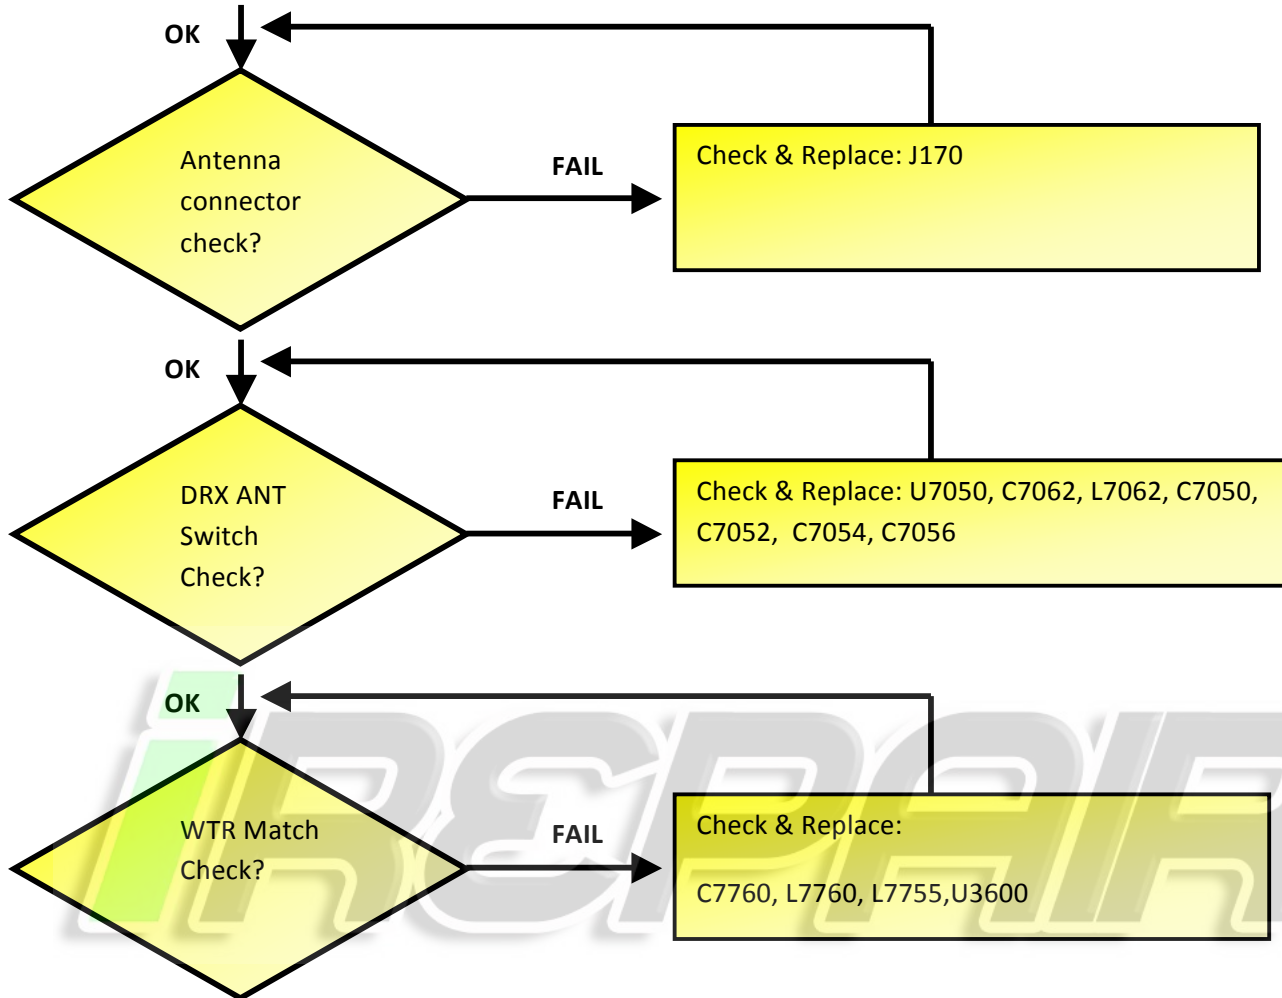

L3 Moto X RF Troubleshooting Guide



RF Test

CDMA_800_C1_RX, CDMA_BC10_C1_RX, WCDMA_850_C1_RX, &
LTE_Band_5/26_C1_RX

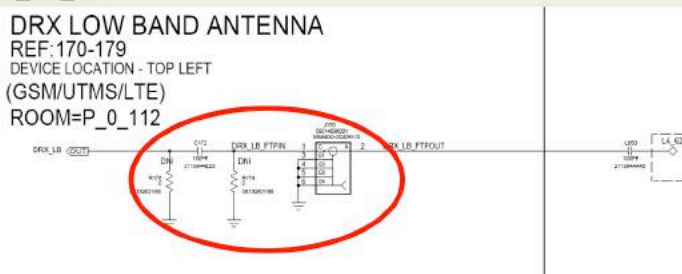


RFFE: DRX ANTENNA SWITCH

REF 7100-8499

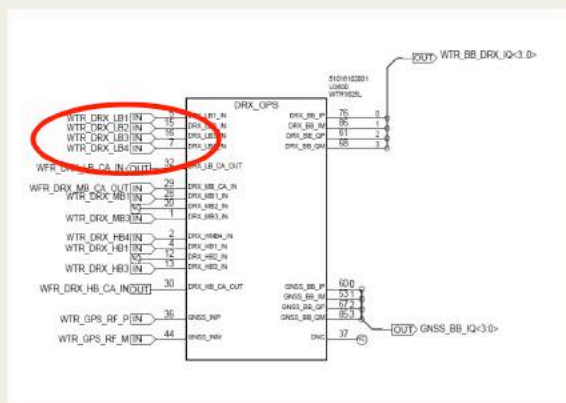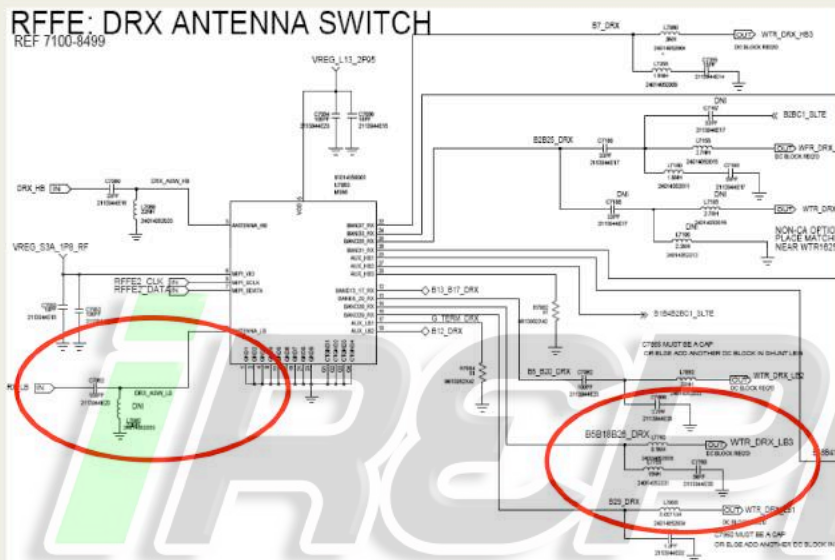


L3 Moto X RF Troubleshooting Guide

RF Test

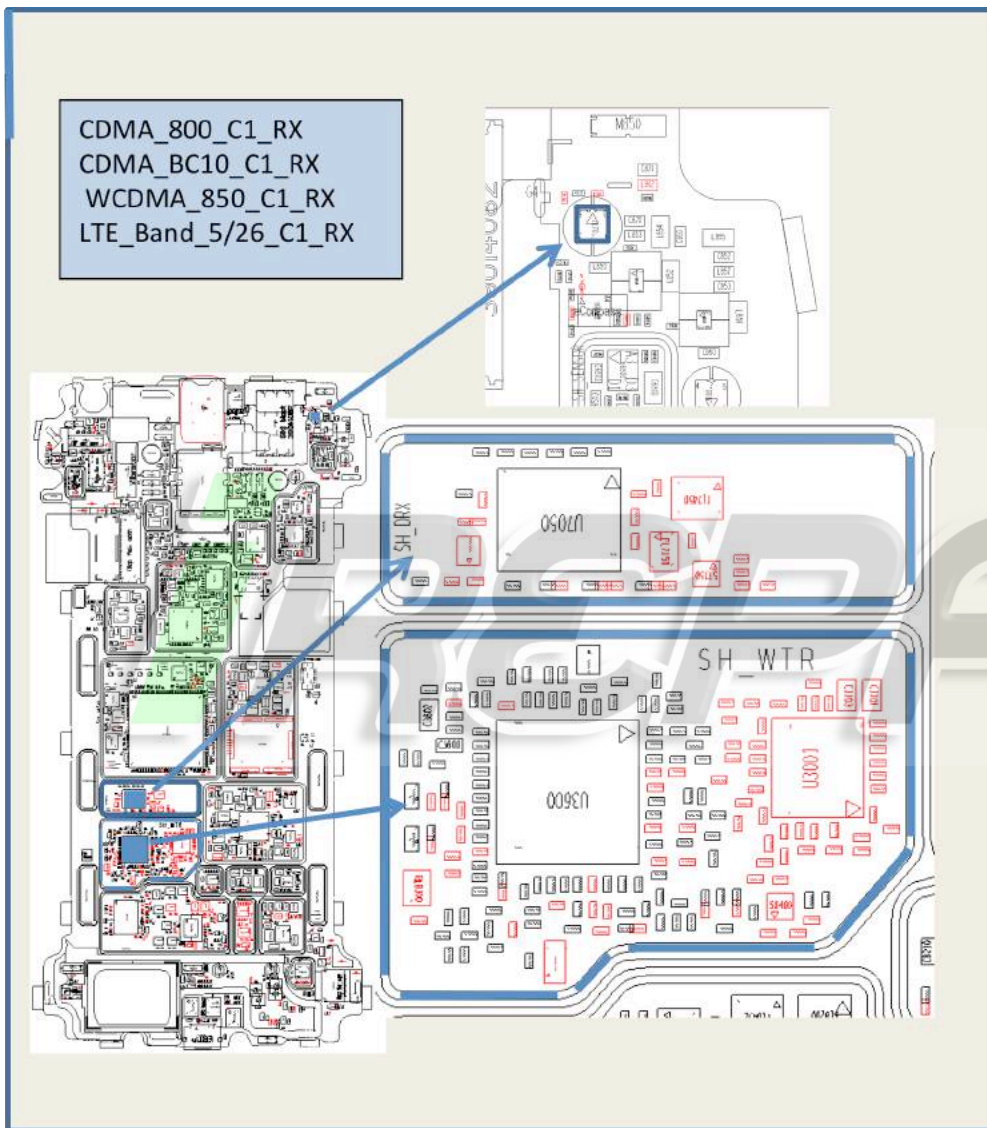


LTE B7 **C1** RX ATT & VZW & EU SKUs

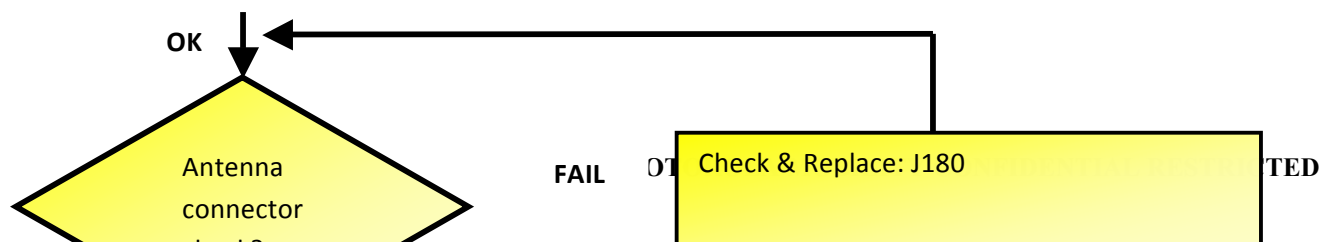

L3 Moto X RF Troubleshooting Guide




RF Test

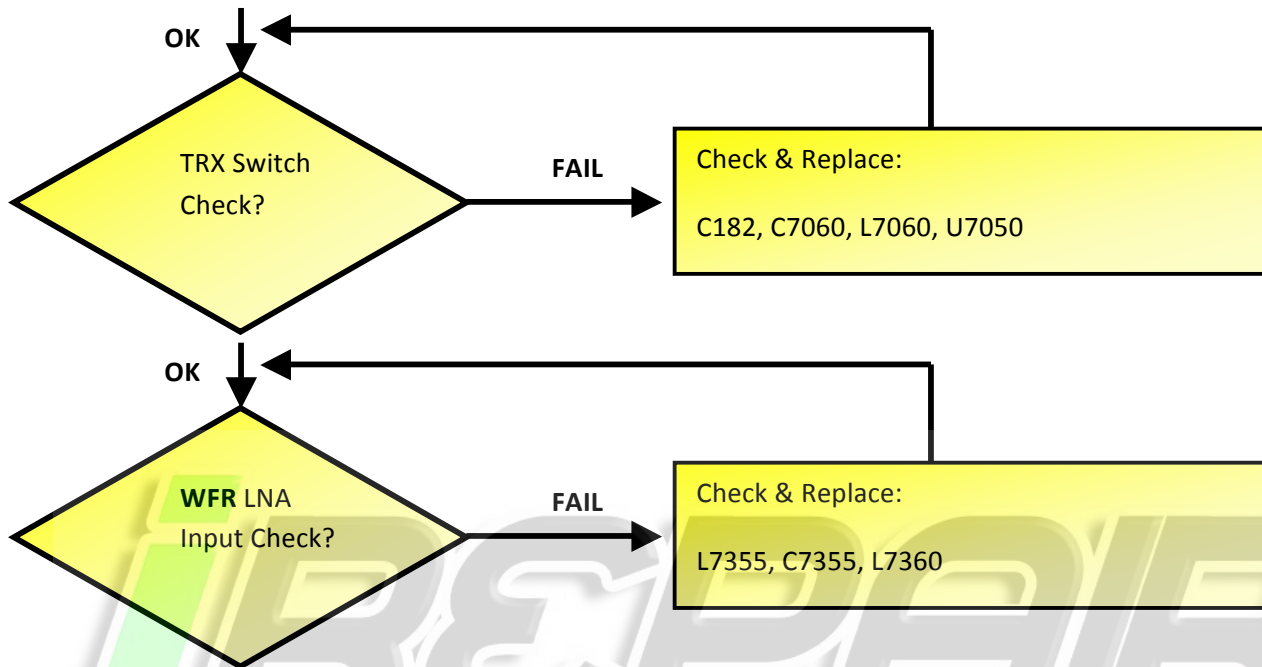

L3 Moto X RF Troubleshooting Guide

RF Test

ROOM=P_0_113

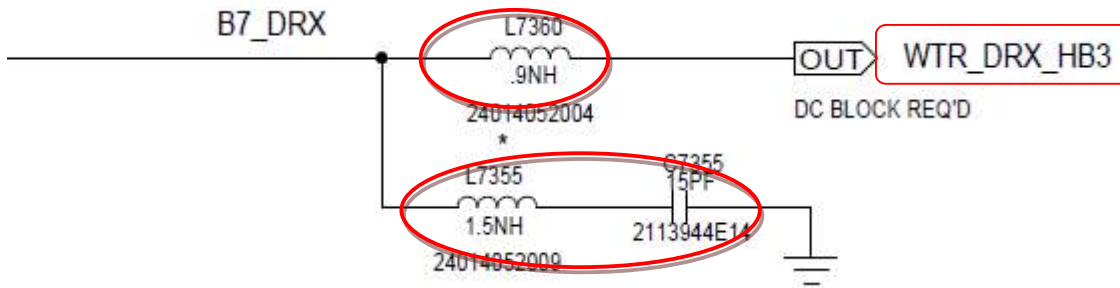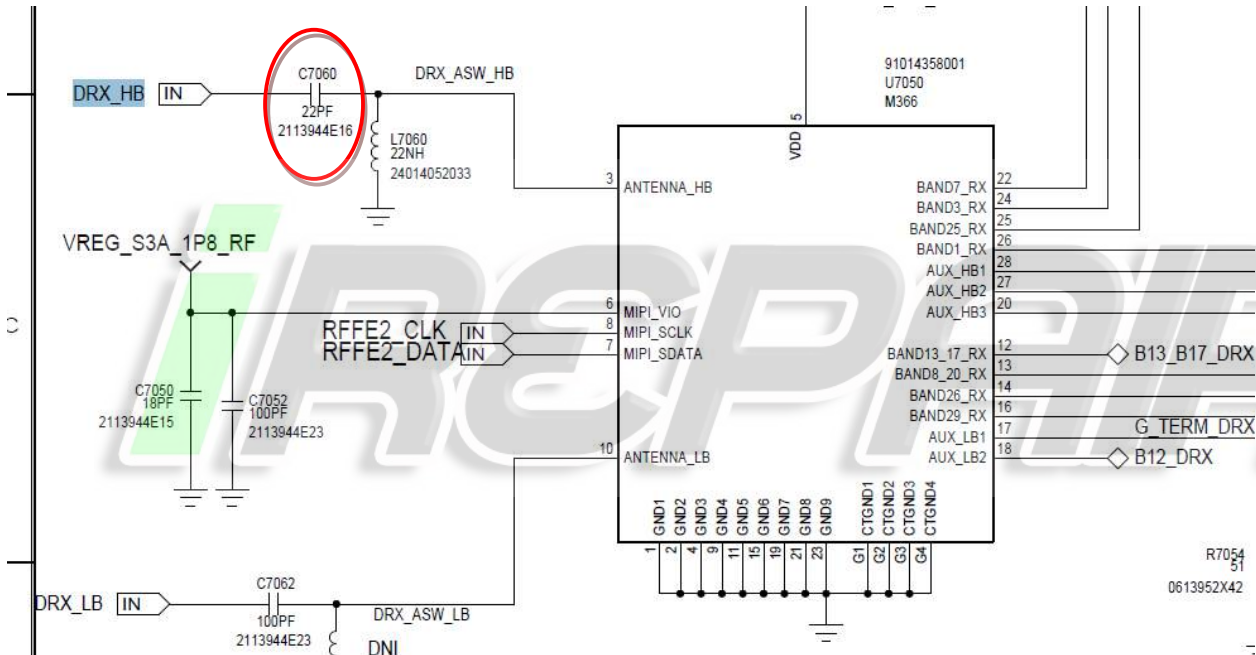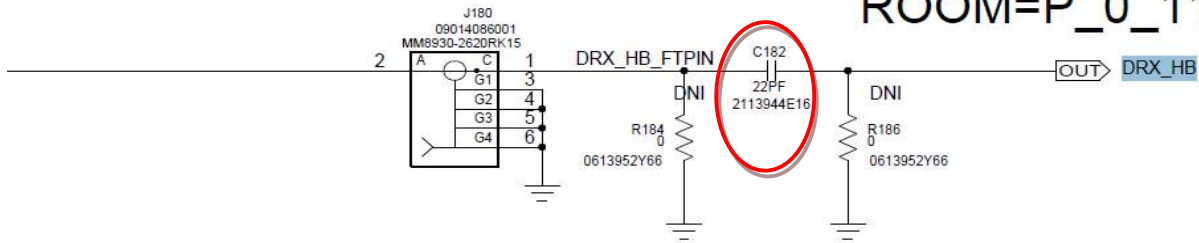


TITLE

MODEL

L3 Moto X RF Troubleshooting Guide

RF Test

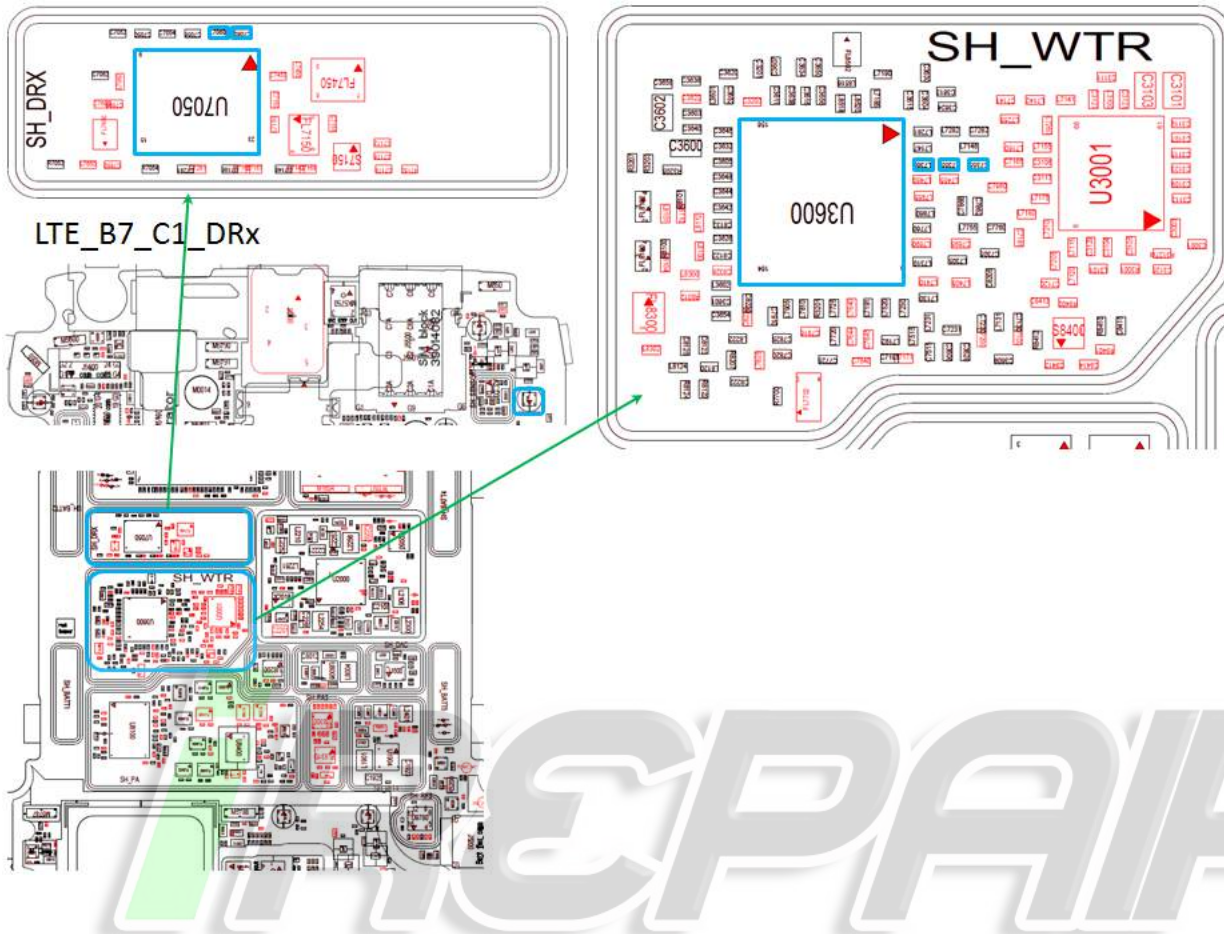

LTE B12 B13 B17 **C1** RX

OK

Antenna
connector
check?

FAIL

Check & Replace: J170


MOT

TED

v1.0

L3 Moto X RF Troubleshooting Guide

RF Test

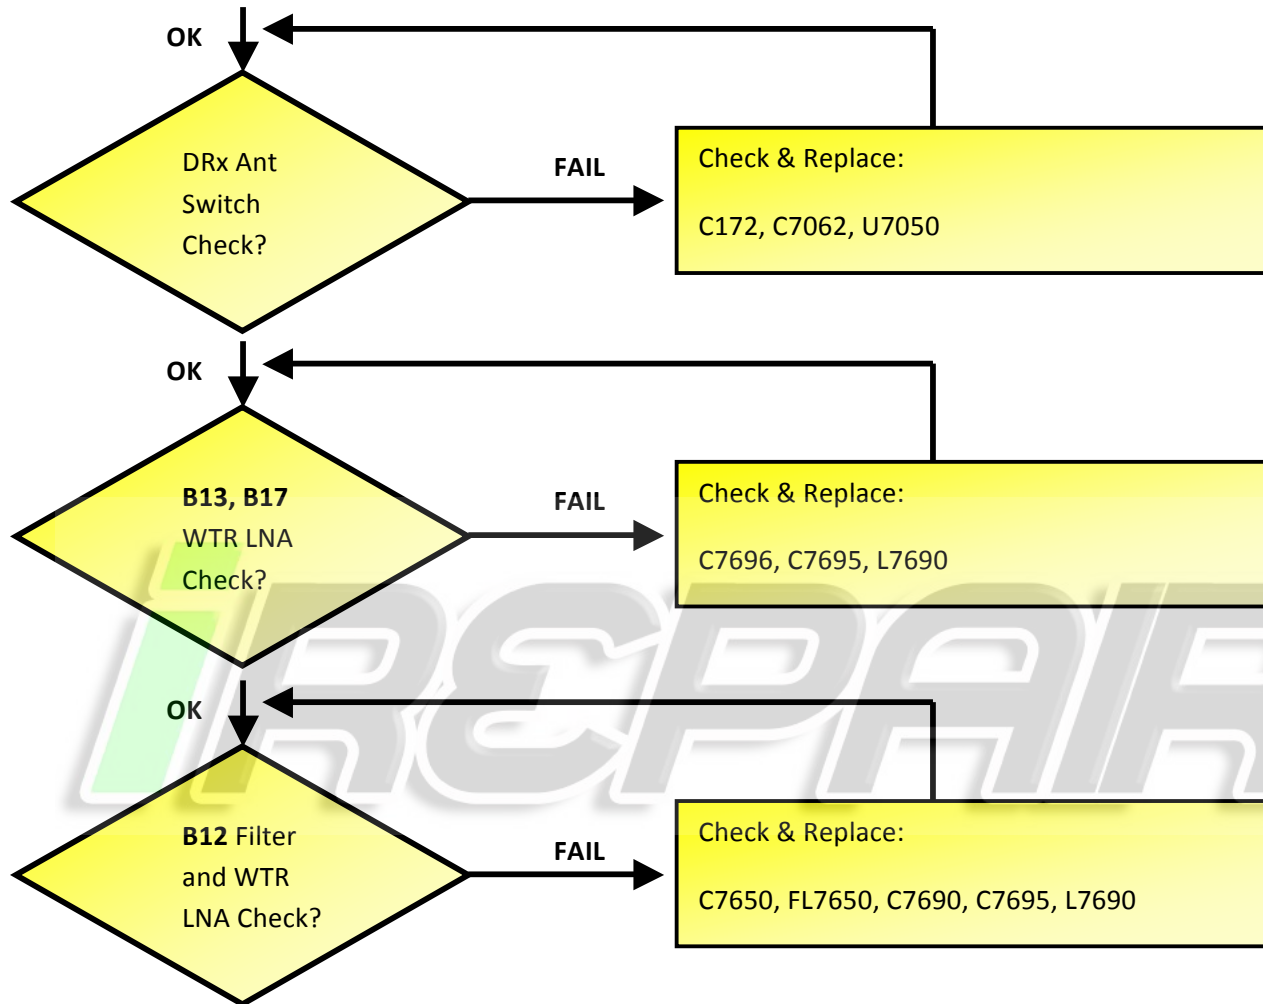

L3 Moto X RF Troubleshooting Guide

RF Test




DRX LOW BAND ANTENNA

REF:170-179

DEVICE LOCATION - TOP LEFT

(GSM/UTMS/LTE)

ROOM=P_0_112

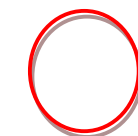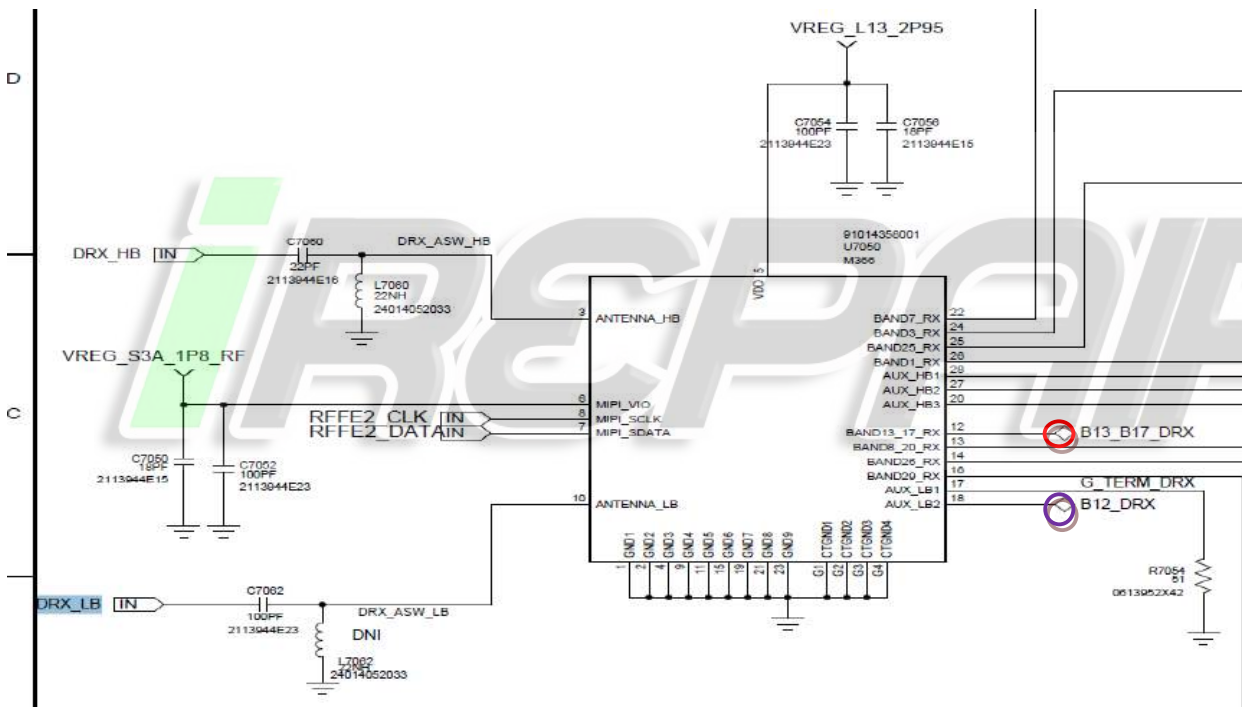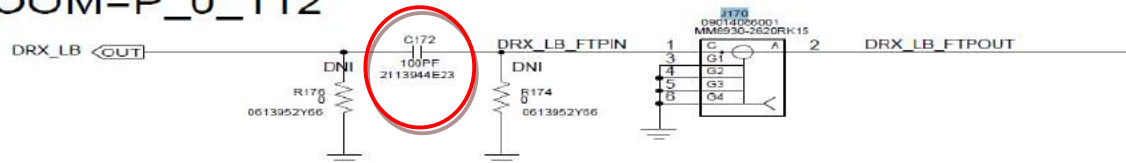


TITLE


MODEL

L3 Moto X RF Troubleshooting Guide


RF Test

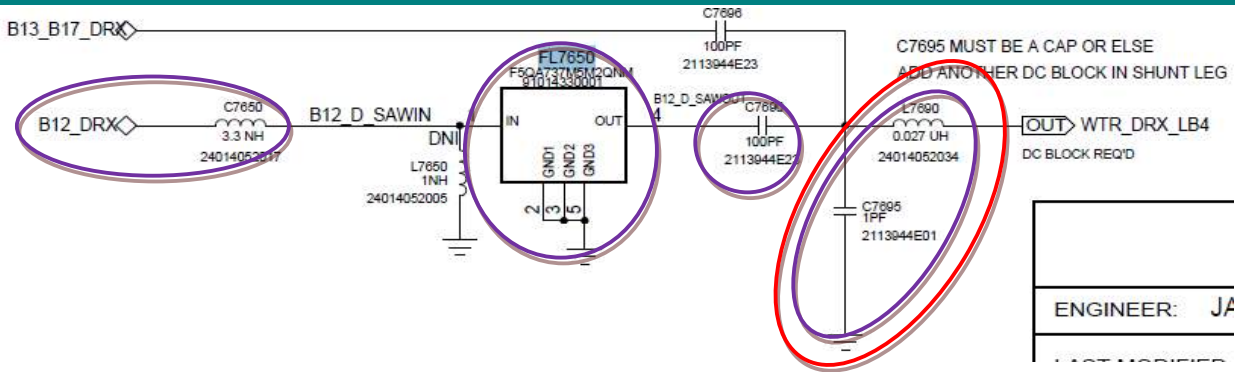

B12 highlighted in purple color

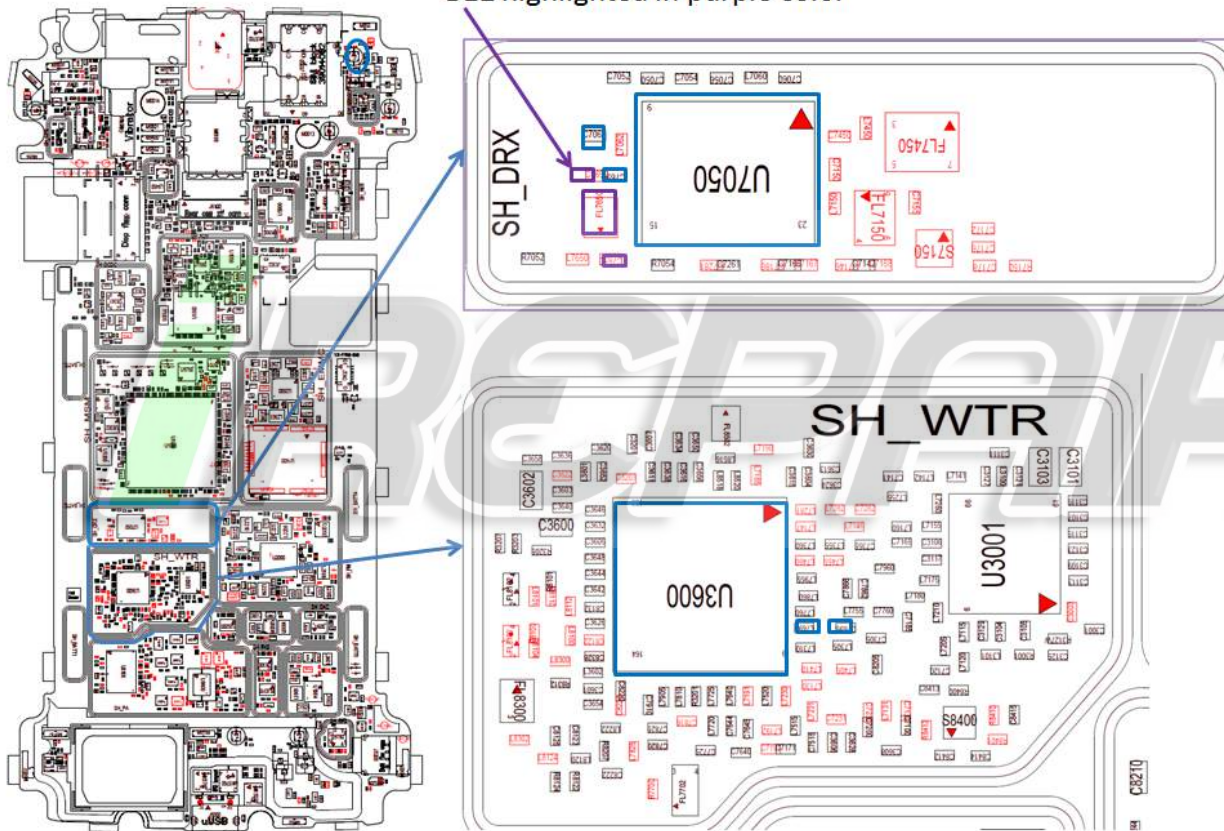


LTE B20&B8 **C1** RX

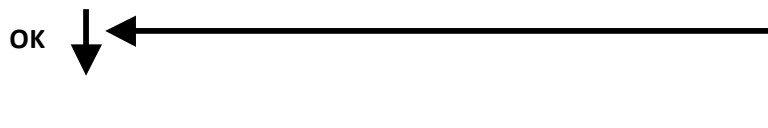

L3 Moto X RF Troubleshooting Guide

RF Test

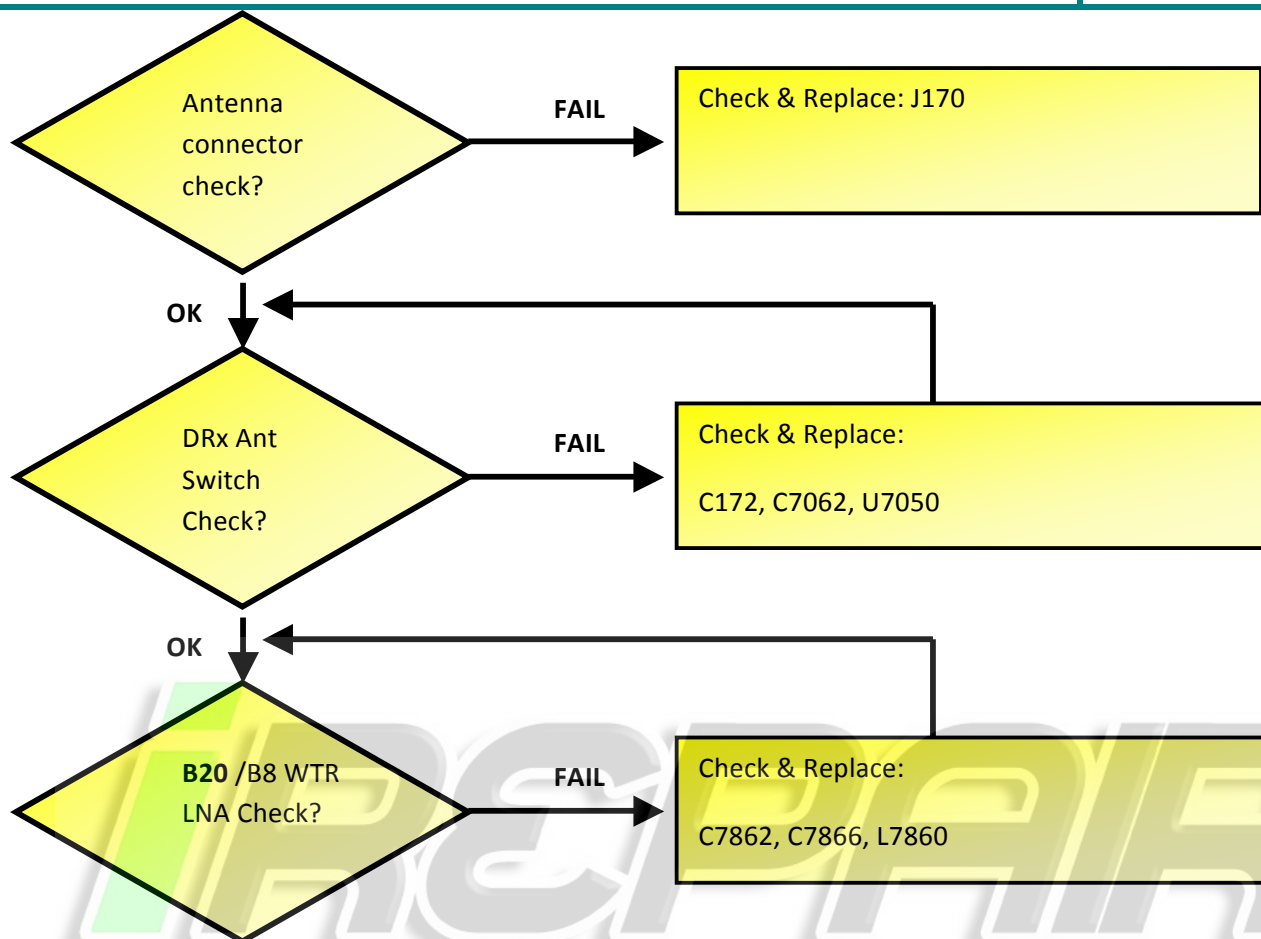

L3 Moto X RF Troubleshooting Guide

RF Test



DRX LOW BAND ANTENNA

REF:170-179

DEVICE LOCATION - TOP LEFT

(GSM/UTMS/LTE)

ROOM=P_0_112

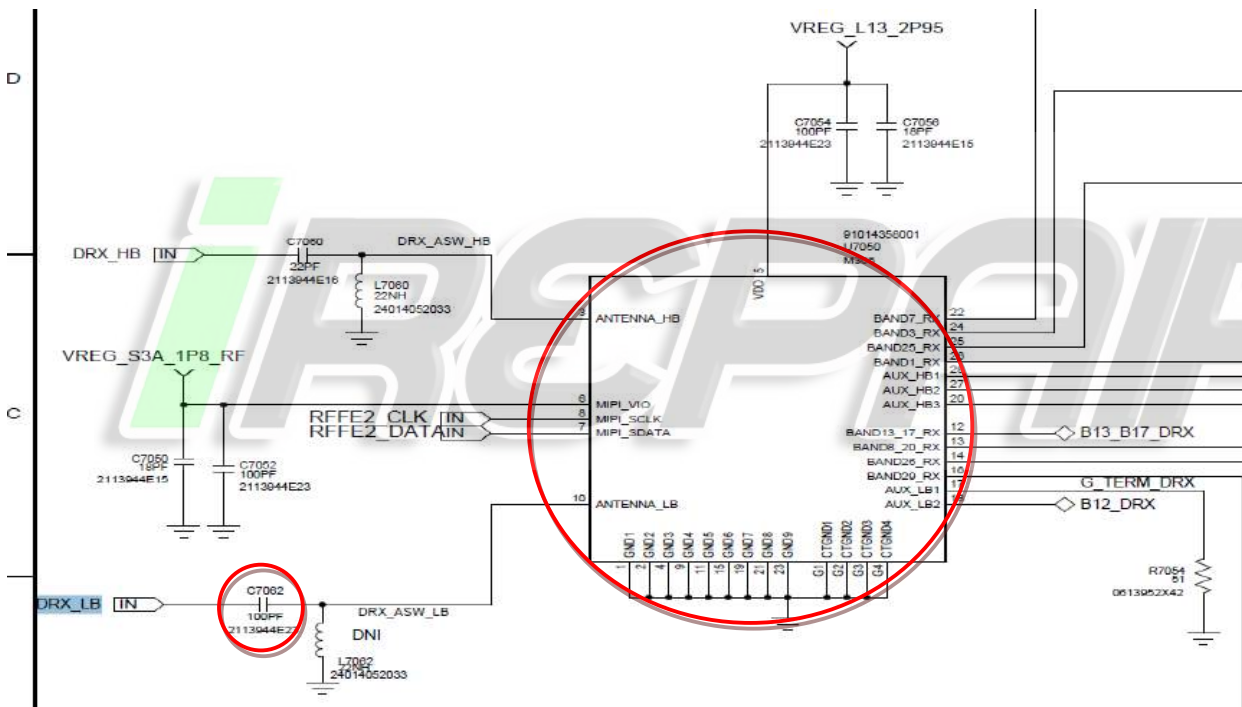
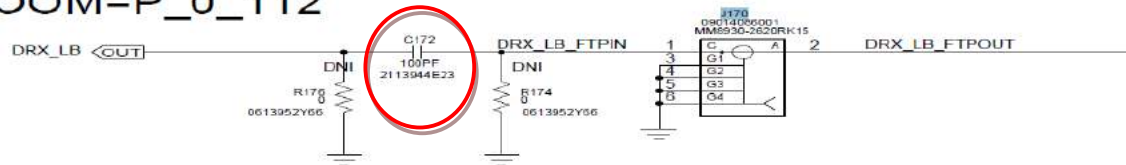


TITLE

MODEL

L3 Moto X RF Troubleshooting Guide


RF Test

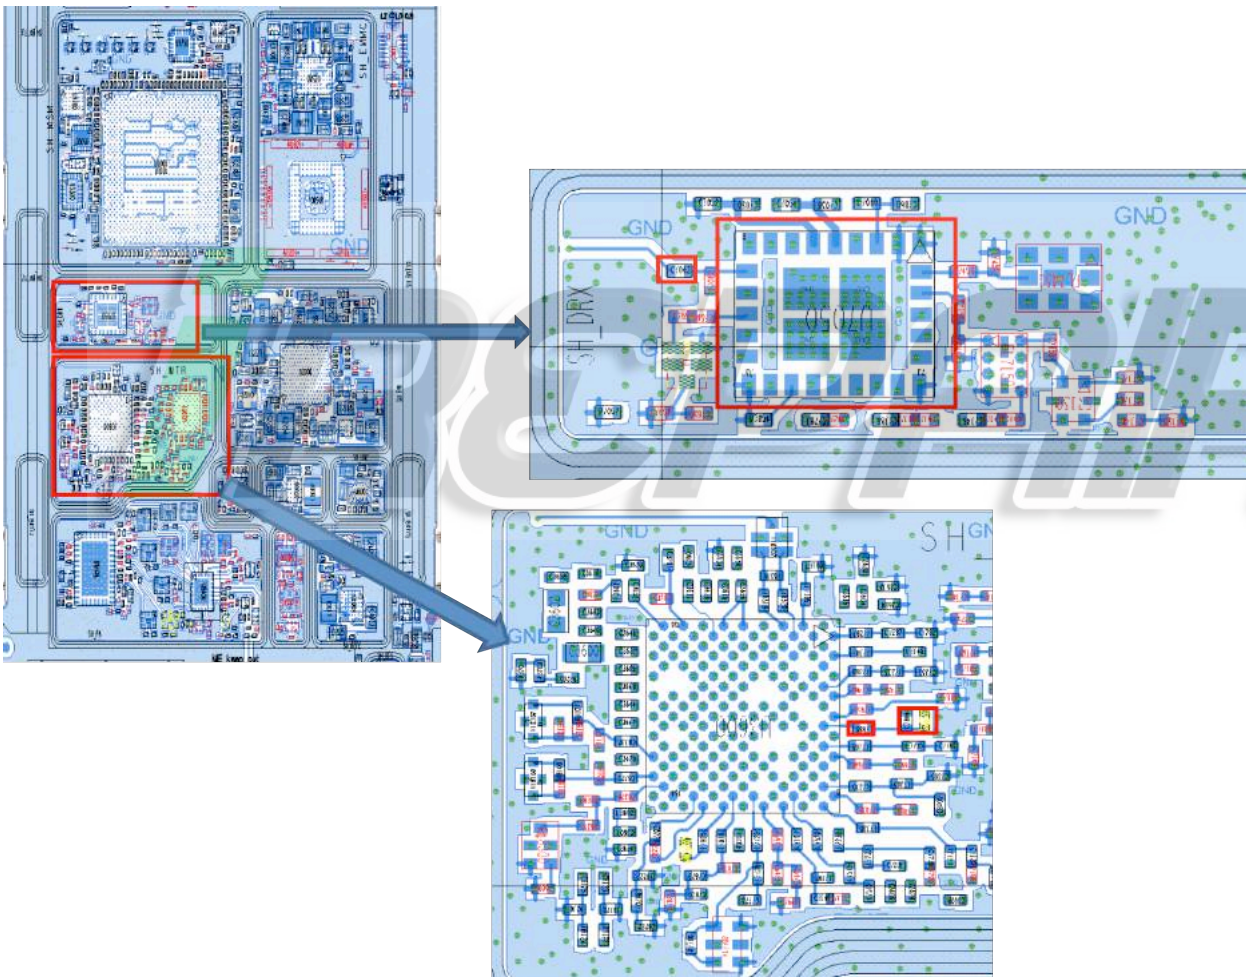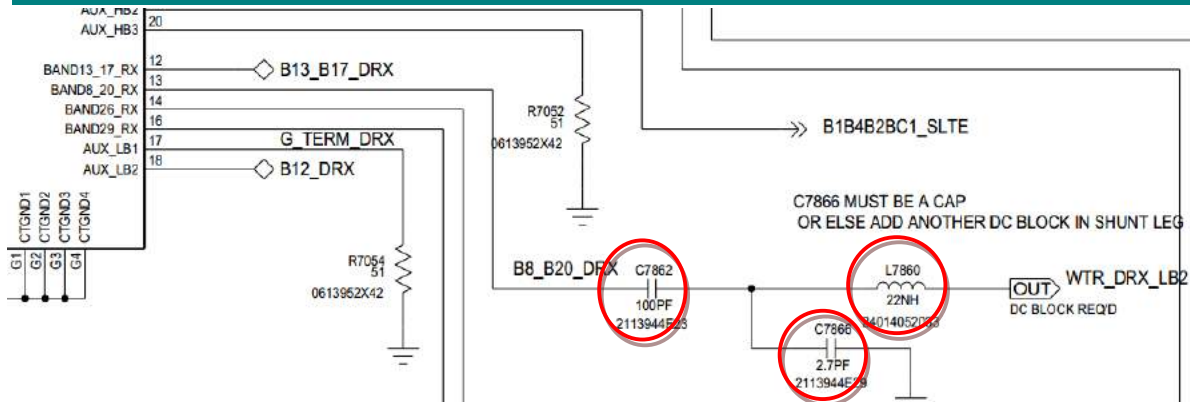

LTE B29 **C1** RX SPRINT


L3 Moto X RF Troubleshooting Guide

RF Test

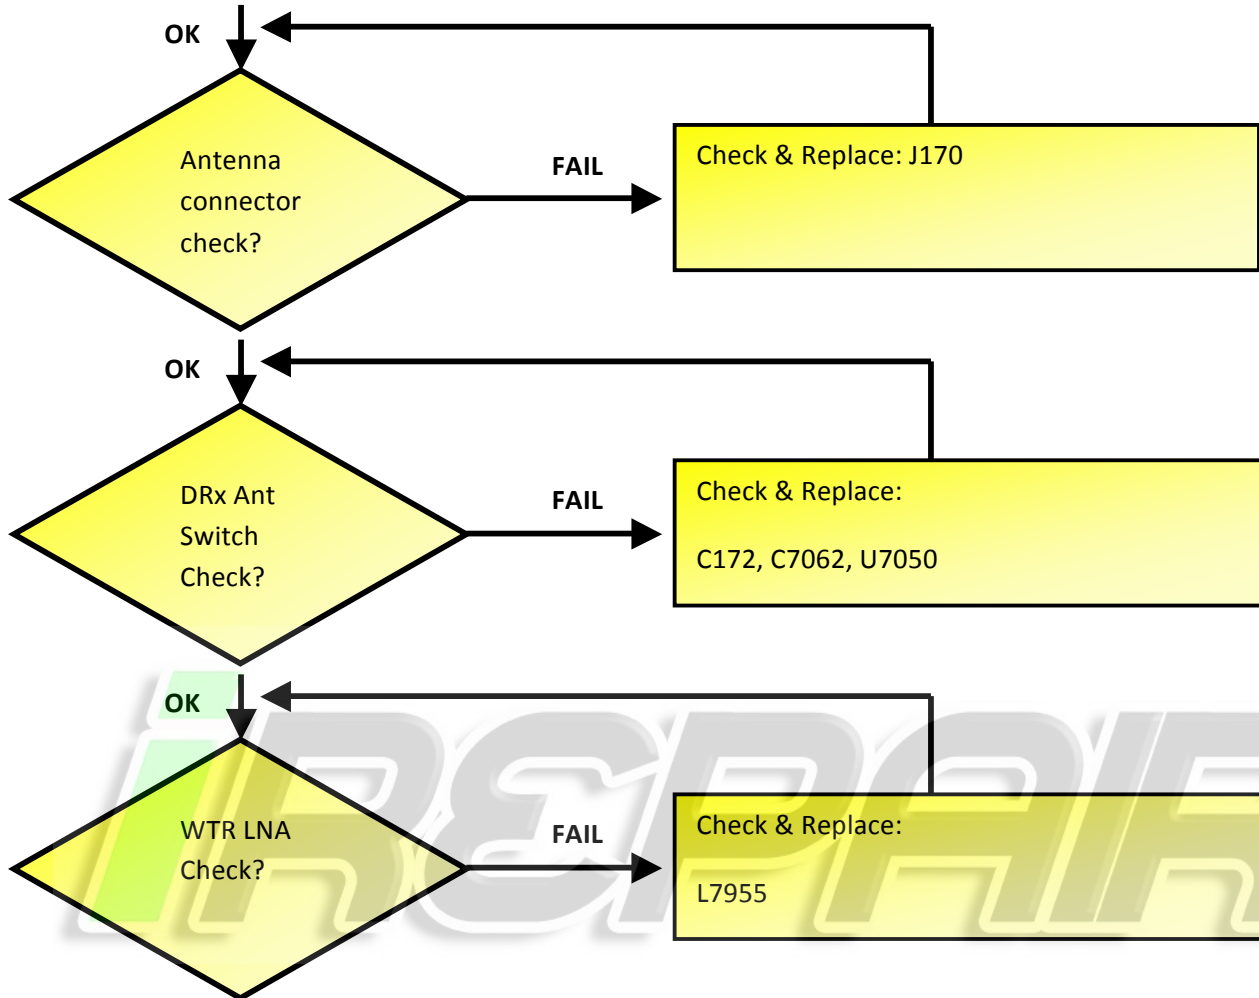

L3 Moto X RF Troubleshooting Guide

RF Test



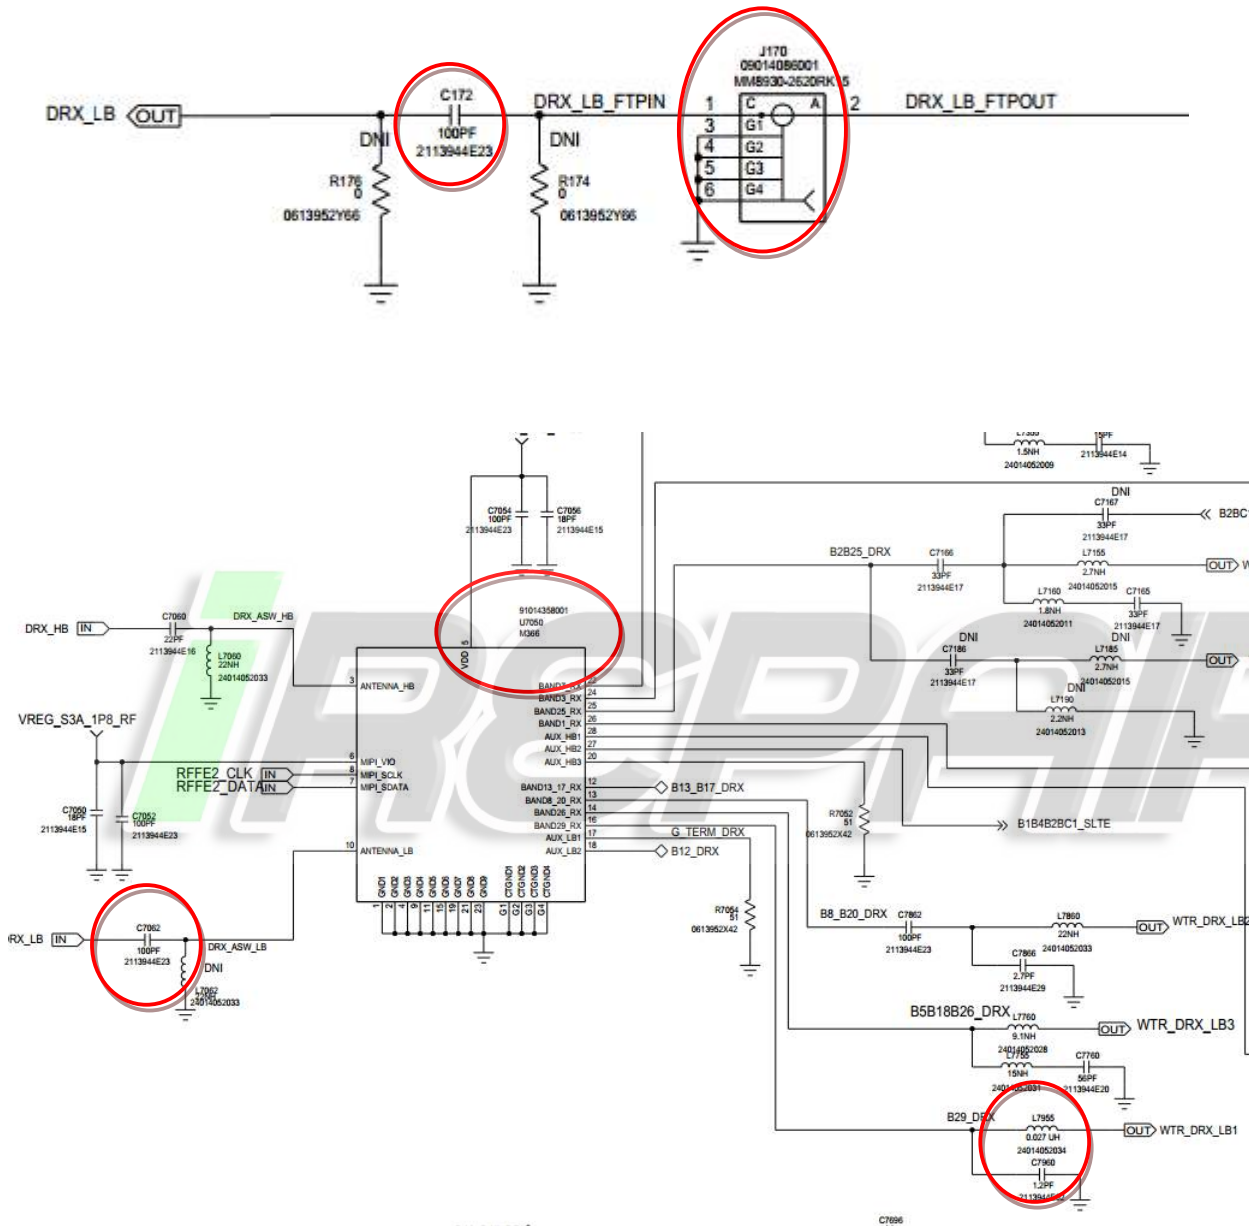


TITLE

MODEL

L3 Moto X RF Troubleshooting Guide

RF Test

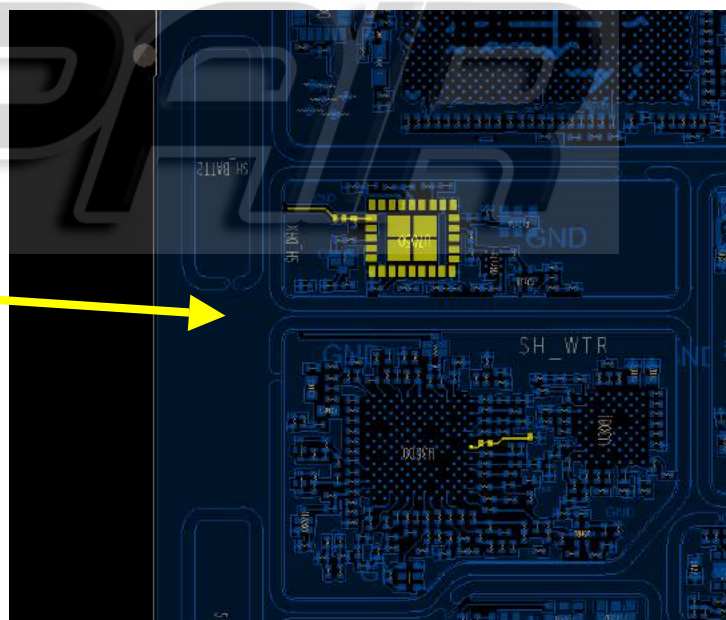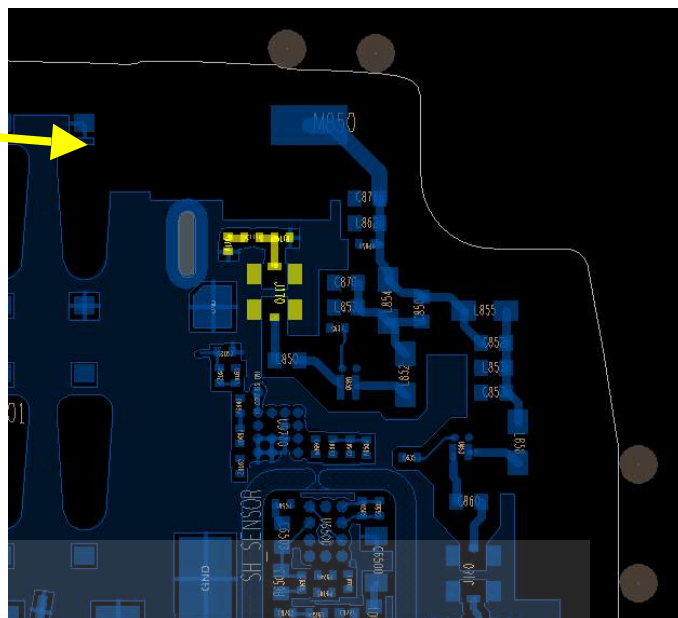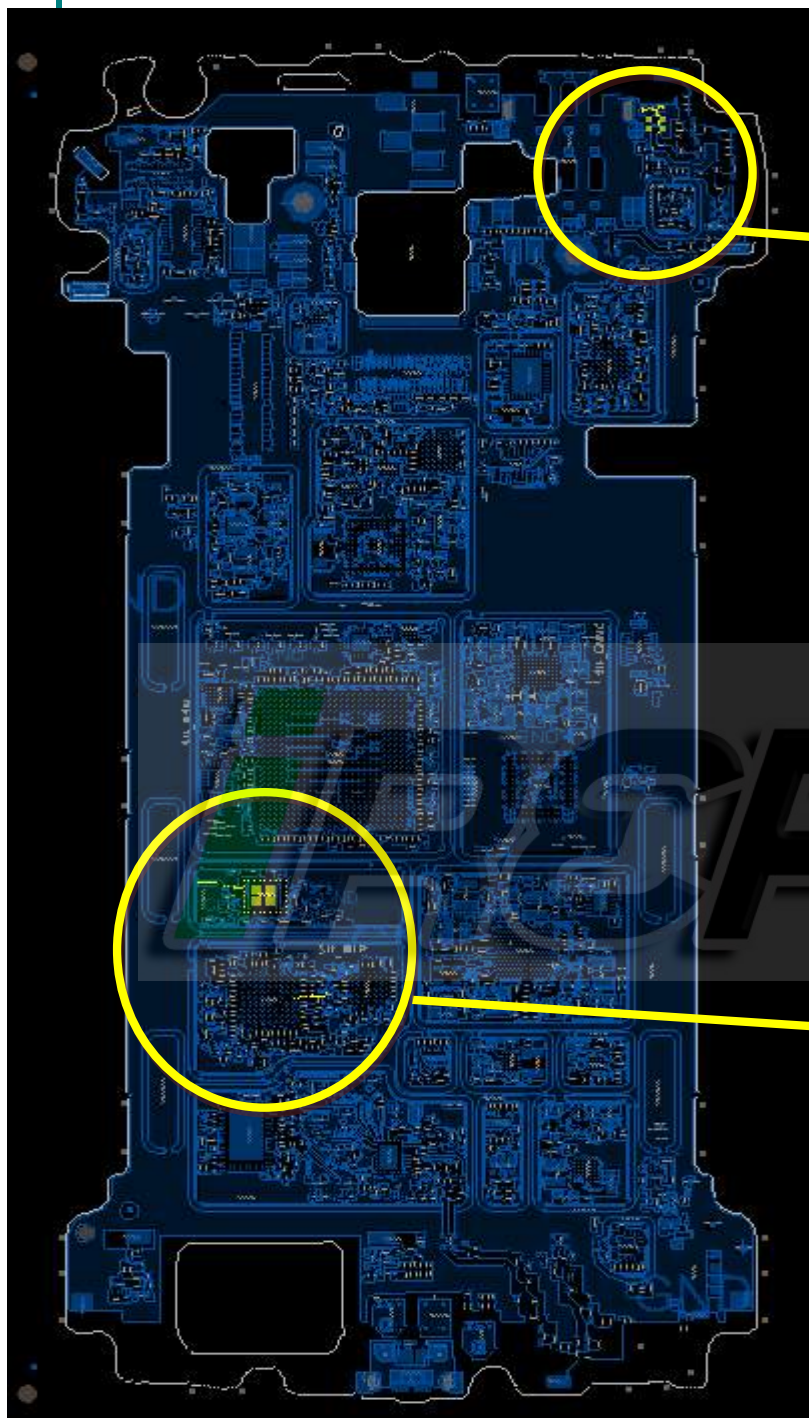


LTE B41 C1 RX SPRINT

OK

L3 Moto X RF Troubleshooting Guide

RF Test

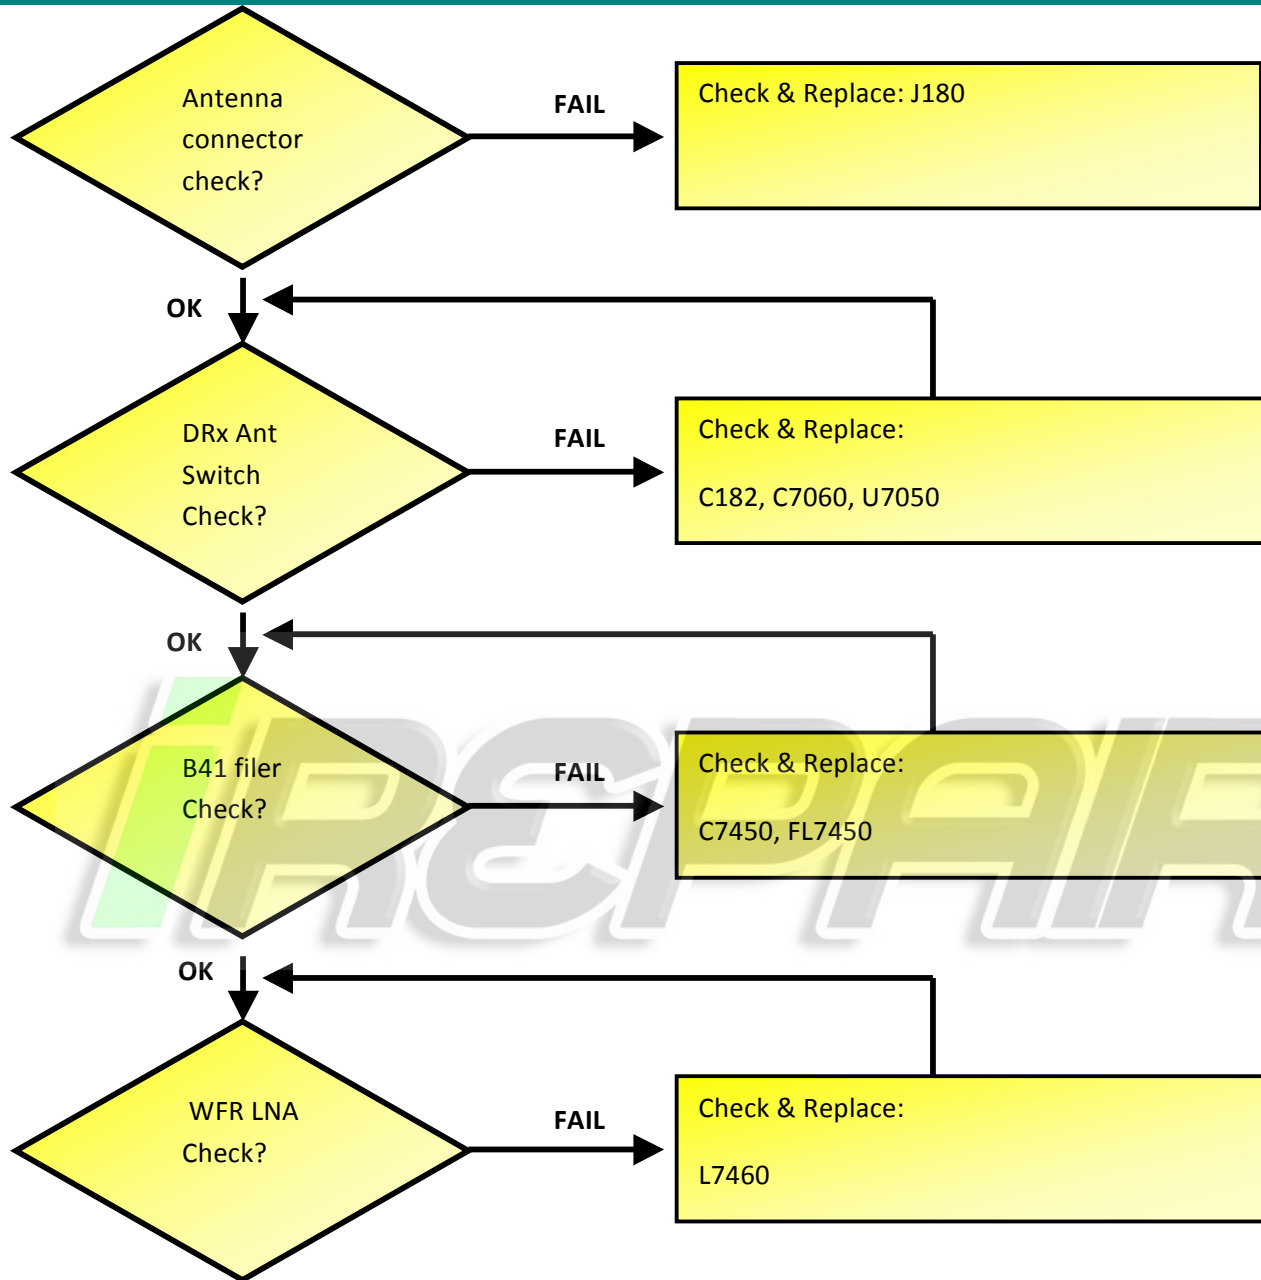


RF Test

REF:180-189

DEVICE LOCATION - TOP LEFT

(GSM/UTMS/LTE)

ROOM=P 0 113

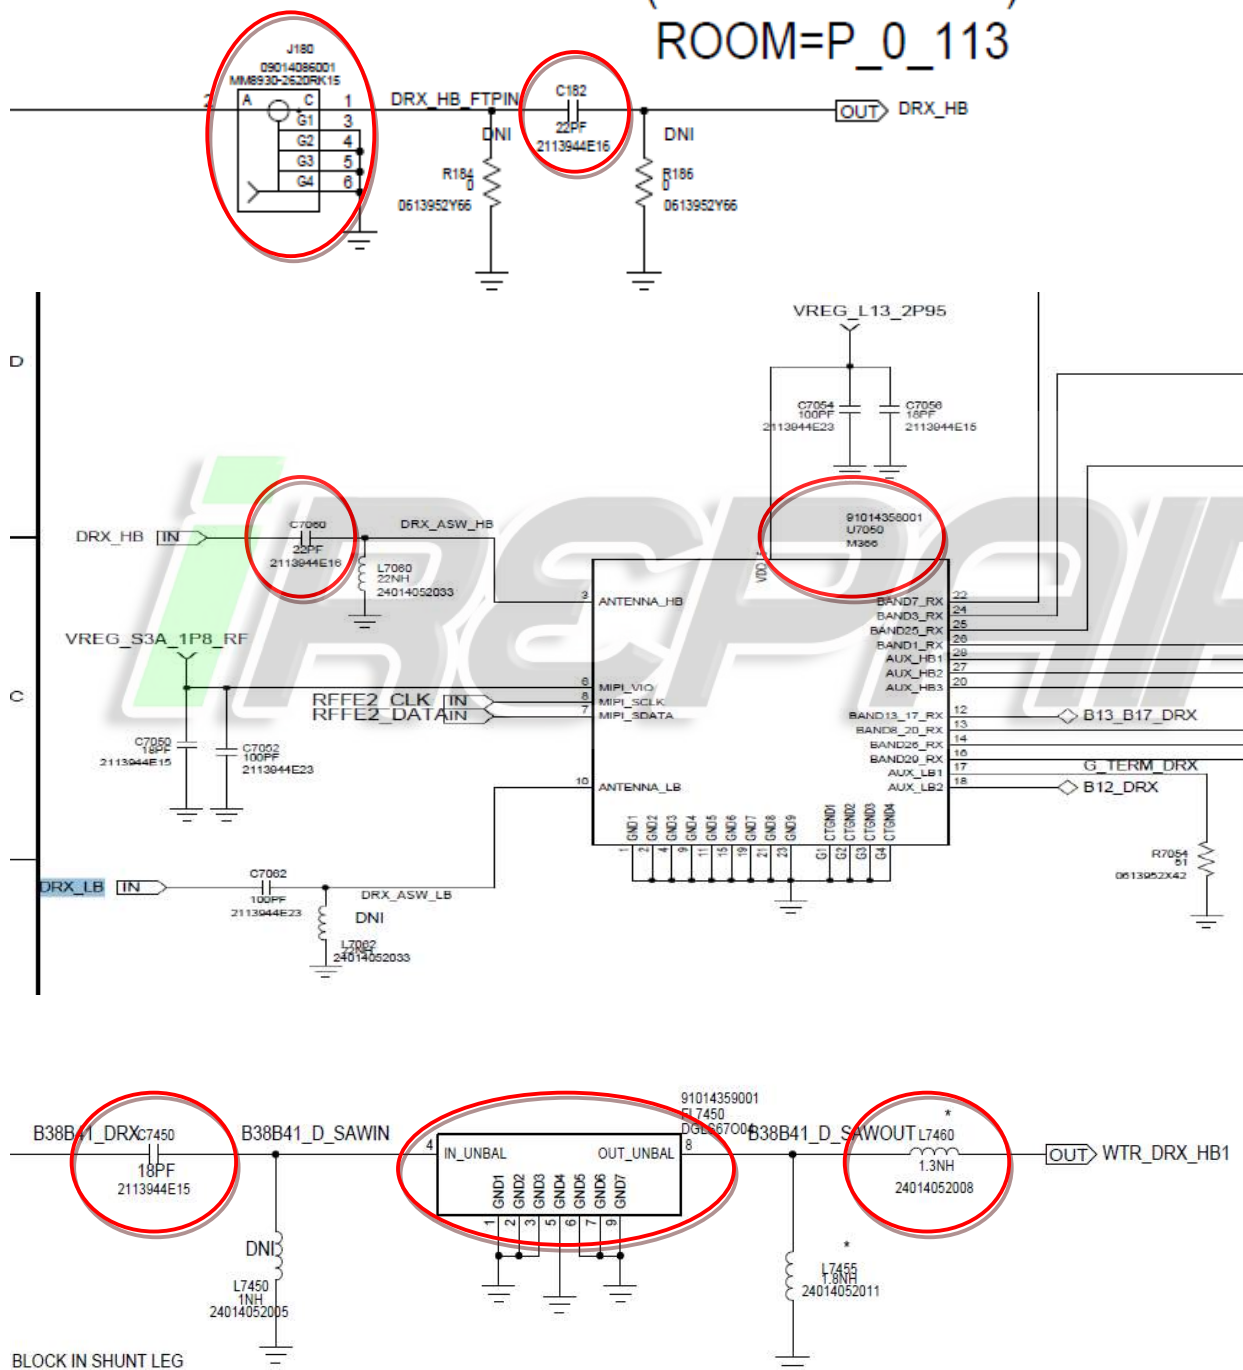

L3 Moto X RF Troubleshooting Guide

RF Test

