

Lenovo

Moto E7 Plus



Lenovo Moto E7 Plus Level 2 – Service and Repair Manual

REVISION HISTORY

<i>Revision</i>	<i>Date</i>	<i>Notes</i>
1	08/28/2020	Initial Release.
2	09/24/2020	Battery Assembly and Disassembly update.



TABLE OF CONTENTS

Revision History	2
List of Tables	7
Table of Figures	7
Safety Information	8
Cautions and Warnings	8
Battery Safety Guidelines	8
Introduction	9
External Views	9
Main Exploded Views	11
Disassembly and Recovery	14
Disassembly and Recovery Map	14
Tools Required for Disassembly	15
SIM Tray Removal	17
Sim Tray Silicone Ring Removal	18
IMEI Label Removal	19
Water Detection Label Inspection	20
Battery Cover Removal	21
Screw Tampering Label Inspection	24
Rear-Housing Upper Waterproof Removal	25
Side Key FPC Waterproof Removal	26
Top Bracket Upper Waterproof Film Removal	27
Top Bracket Removal	28
Water Detection Label Inspection	30
Primary MIC Dust Net Foam Removal	31
Speaker Dust Filter Removal	32
Speaker Box Waterproof Sticker 1 Removal	33
Speaker Box Waterproof Sticker 2 Removal	34
Speaker Box Removal	35
Water Detection Label Inspection	36
Shrapnel Speaker Removal	37
Speaker Insulated Mylar Removal	38
Speaker Sealing Foam Removal	39
Fingerprint Sensor Flex Removal	40
Flash Cover Sealed PET Removal	41
Flash Cover Foam Removal	42
Front-Facing Camera Conductive Foam Removal	43
Front-Facing Camera Copper Foil Removal	44

Lenovo Moto E7 Plus

Level 2 – Service and Repair Manual

Front-Facing Camera Removal	45
Main PCB Removal	46
Receiver Insulated Mylar Removal	49
Receiver Removal	50
2M Macro Rear-Facing Camera Removal	51
Rear-Facing Camera Conductive Adhesive Removal	52
48M Rear-Facing Camera Removal	53
Audio Jack Grommet Removal	54
Secondary MIC Waterproof Foam Removal	55
Speaker Box Conductive Foam Removal	56
Sub Board Removal	57
Primary MIC Waterproof Foam Removal	58
Vibrator Removal	59
Coax Cable Removal	60
Battery Removal	61
Battery Foam Removal	63
Main FPC Removal	64
Rear-Facing Camera Lens Removal	65
Fingerprint Sensor Conductive Foam Removal	66
Side Key FPC Removal	67
Side Key Waterproof Foam Removal	68
Receiver Sealed Foam Net Removal	69
Silicon Light Guide Removal	70
Sub Board Adhesive Removal	71
Sim Tray Grommet Removal	72
Parts Refresh	73
Tools Required for Parts Refresh	73
Battery Cover Cleaning	74
Front Housing Cleaning	75
Top Bracket Cleaning	76
Assembly	77
Assembly Map	77
Tools Required for Assembly	78
Sim Tray Hole Grommet Assembly	79
Side Key FPC Waterproof Foam Assembly	80
Side Key Assembly	81
Silicone Light Guide Assembly	82
Water Detection Label Assembly	83
Speaker Box Conductive Foam Assembly	84


Lenovo Moto E7 Plus

Level 2 – Service and Repair Manual

Vibrator Assembly	85
Water Detection Label Assembly	86
Receiver Sealed Foam Net Assembly	87
Receiver Assembly	88
Receiver Insulated Adhesive Assembly	89
Receiver Inspection Assembly	90
Audio Jack Assembly	91
Water Detection Label Assembly	92
48M Rear-Facing Camera Assembly	93
Flash Cover Sealed PET Assembly	94
Flash Cover Foam Assembly	95
Main PCB Assembly	96
Rear-Facing Camera Conductive Adhesive Assembly	97
2M Macro Rear-Facing Camera Assembly	98
Primary MIC Waterproof Foam Assembly	99
Sub Board Adhesive Assembly	100
Sub Board Assembly	101
Main FPC Assembly	102
Battery Foam Assembly	105
Coax Cable Assembly	106
Front-Facing Camera Assembly	108
Front-Facing Camera Copper Foil Assembly	109
Front-Facing Camera Conductive Foam Assembly	110
Battery Assembly	111
Fingerprint Sensor Assembly	113
Rear-Facing Camera Lens Assembly	114
FPS Ground Conductive Cloth Assembly	115
Top Bracket Assembly	116
Screw Tampering Label Assembly	117
Top Bracket Waterproof Film Assembly	118
Rear-Housing Upper Waterproof Assembly	119
Side Key FPC Waterproof Assembly	120
Speaker Sealing Foam Assembly	121
Shrapnel Speaker Assembly	122
Speaker Insulated Mylar Assembly	123
Speaker Box Assembly	124
Speaker Box Waterproof Sticker 1 Assembly	125
Speaker Box Waterproof Sticker 2 Assembly	126
Primary MIC Dust Net Foam Assembly	127

Lenovo Moto E7 Plus
Level 2 – Service and Repair Manual

Speaker Dust Filter Assembly	128
Camera lens Adhesive Assembly	129
FPS Adhesive Assembly	130
Battery Cover Assembly	131
IMEI Label Assembly	132
Sim Tray Silicone Ring Assembly	133
Sim Tray Assembly	134
Assembly Quality check	135
Battery Quality Check	135
Grommet and Connectors Quality Check	136
Screws Graphite Quality Check	137

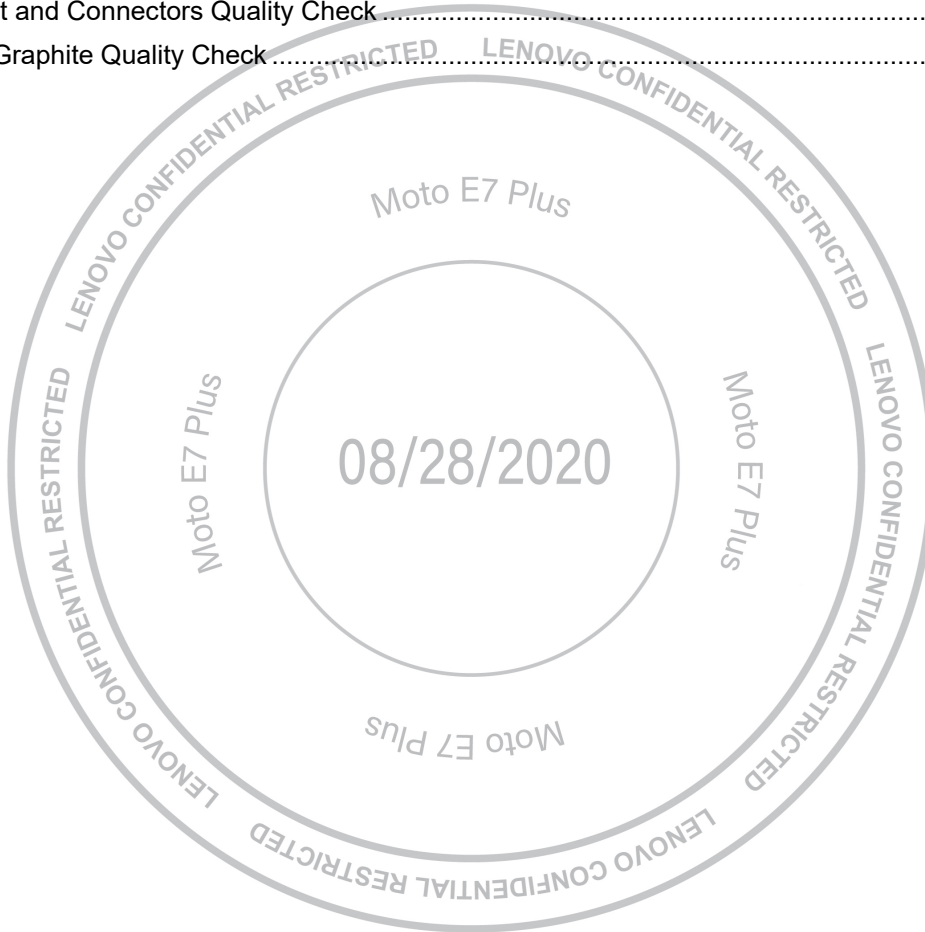

LIST OF TABLES


Table 1. External Views Parts List..... 10

Table 2. Assembly Exploded View Parts List 11

TABLE OF FIGURES

Figure 1. External Views..... 9

Figure 2. Assembly Exploded View 11

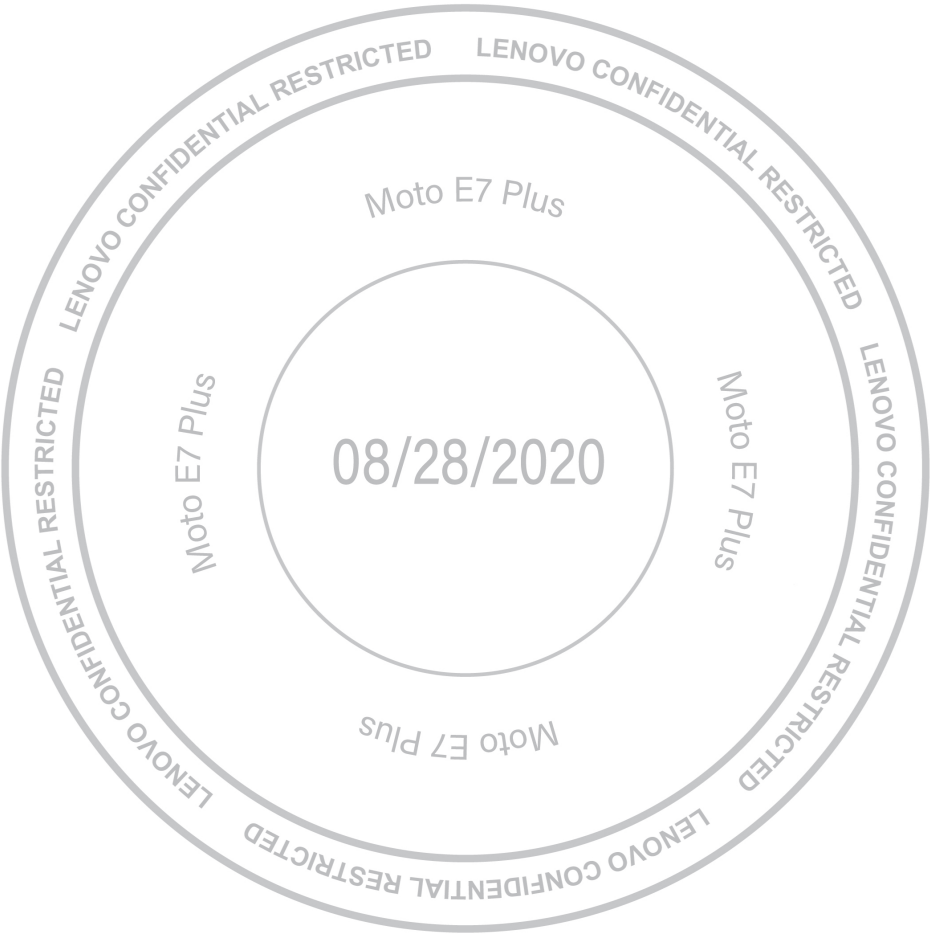

SAFETY INFORMATION

Cautions and Warnings

Electrostatic Discharge

The phone components may be damaged by electrostatic discharge (ESD). Always use an ESD mat and ground strap when working with internal components.

Battery Safety Guidelines

Handle Battery with care. Ensure Battery edges and surfaces are not dented or deformed. If the Battery Pack is dropped to the floor, it may be internally damaged and must be scrapped.

Ensure all surfaces, fixtures, and phone components contacting the Battery are smooth and clean.

Ensure Battery and its insulation are not damaged (e.g. scratched, dented, punctured) prior to and throughout assembly.

Prior to assembly, ensure Battery edges and surfaces are not dented or deformed, and that fixtures and parts that will contact the Battery are free of foreign material.

Ensure screws and screwdrivers do not contact the Battery.

Failure to adhere to Safety Critical Note(s) may increase risk of rupture, burning, or failure to function safely when used by the customer.

INTRODUCTION

External Views



Figure 1. External Views

Table 1. External Views Parts List

<i>Reference #</i>	<i>Description</i>
1	Front-Facing Camera
2	Google Key
3	Volume Key
4	Power Key
5	Camera Deco
6	Camera Lens
7	Flash Lens
8	FPS
9	FPS Bezel
10	Speaker Mesh
11	USB Port
12	MIC
13	Main Lens
14	Battery Cover
15	Front Ring
16	Sim-Door
17	Receiver

Main Exploded Views

Figure 2. Assembly Exploded View

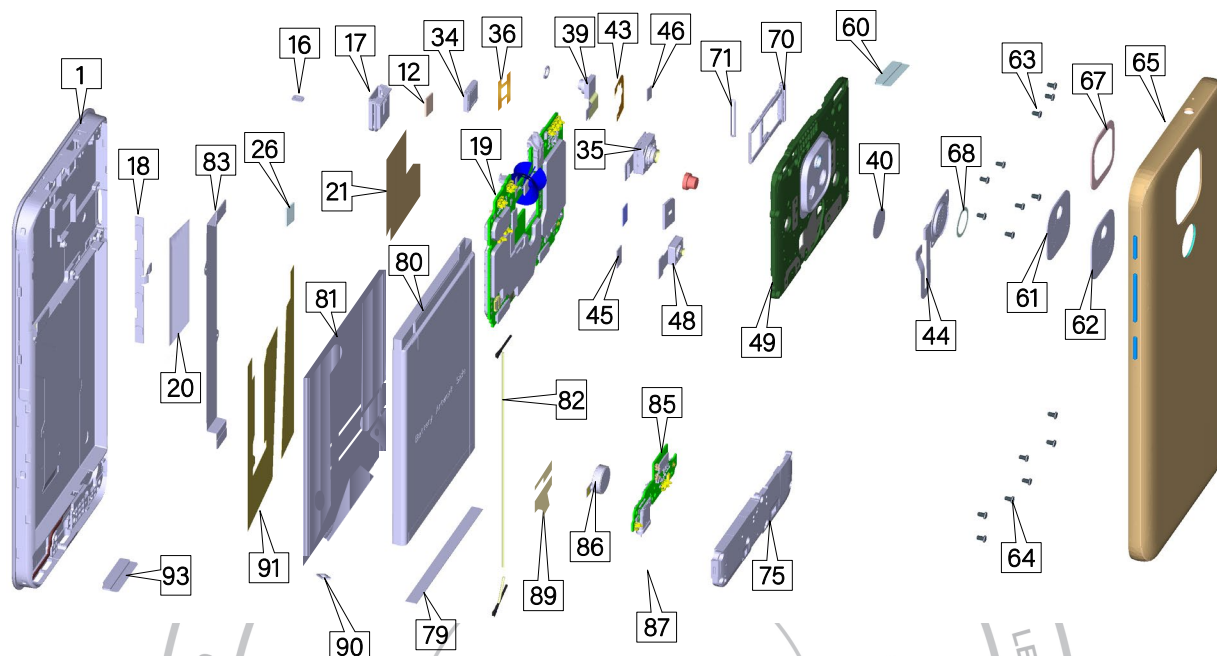


Table 2. Assembly Exploded View Parts List

Reference #	Description	Recovery Part
1	Guam+ TP LCM ASSY&S101-BQF130-000CS Guam+ TP LCM_IN&S101-BQF131-000CS	Yes
12	TNM709-BQE001-010+sealed foam net	No
16	TNM709-BQE001-009+Main MIC dust net foam	No
17	TNM716-BQE001-000+silicone cover	Yes
18	TNN105-BQEB00-000+FPC_Sidekey_2_V0.2	No
19	XT2083-1 MB 4+64G DS&F00BQF3-000-000CS XT2083-1 MB 4+64G SS&F00BQF3-000-300CS XT2083-3 MB 4+64G DS&F00BQF3-000-100CS XT2083-4 MB 4+64G DS&F00BQF3-000-200CS XT2083-1 MB 4+64G AR&F00BQF3-000-600CS XT2083-3 MB 4+64G IN&F00BQF3-000-700CS ASSY,BD KIT,Guam+20 4+64 DS BR	Yes
20	TNM701-BQE000-005+P270AE waterproof MEM	No
21	TNM721-BQF000-003+P370AEBBgraphite sheet	No
26	TNM716-BQF001-001+P370AE Thermal silica	No
34	TNN502-BQF000-010+shrapnel earpiece	Yes
35	MDL,CAMR,48M,after;LGM1AA0;O-FILM,AF:Gua	Yes
36	TNM701-BQE001-004+receiver insulated adh	No
39	MDL,CAMR,8M,FF,Titan20;8M;L4H7FP0;Ofilm	Yes

Lenovo Moto E7 Plus
Level 2 – Service and Repair Manual

<i>Reference #</i>	<i>Description</i>	<i>Recovery Part</i>
40	TNM717-BQE001-000+ground conductive cloth	No
41	TNM709-BQF001-000+Posterior adhesive	No
42	MDL,CAMR,2M,Rear,Nairobi,tacoma;FOV;Ofil	Yes
43	TNM719-BQE001-001+ground copper foil	No
44	FINGERPRT SCANNER,FPC1520,Dark Blue,Ofil	Yes
45	TNM715-BQF001-002+conductive adhesive	No
46	TNM709-BQF001-004+proactive 8M foam	No
48	MDL,CAMR,2MAF,Guam/Borneo/Odessa,L02BA00	Yes
49	XT2083-1 Rear Cover_BG&S101-BQF030-000CS XT2083-1 Rear Cover_BE&S101-BQF420-000CS XT2083-1 Rear Cover_SP&S101-BQF104-000CS XT2083-3 Rear Cover_BG&S101-BQF034-000CS XT2083-3 Rear Cover_BE&S101-BQF421-000CS XT2083-3 Rear Cover_SP&S101-BQF100-000CS	Yes
60	TNM701-BQE001-002+waterproof film	No
61	TNM715-BQE000-004+rear lens back	No
62	TNM205-BQE130-000+rear lens	Yes
63	TNM501-211102-020+round head screw	No
64	TNM501-211103-011+round head screw	No
65	XT2083-1 Batt Cover_BE&S101-BQF422-000CS XT2083-1 Batt Cover_BG&S101-BQF032-000CS XT2083-1 Batt Cover_SP&S101-BQF102-000CS XT2083-3 Batt Cover_BE&S101-BQF423-000CS XT2083-3 Batt Cover_BG&S101-BQF033-000CS XT2083-3 Batt Cover_SP&S101-BQF103-000CS XT2083-4 Batt Cover_EB&S101-BQF426-000CS Guam+ Etch COV_EB_BR&S101-BQF425-000CS Guam+ Etch COV_EG_BR&S101-BQF036-000CS Guam+ Etch COV_SP_BR&S101-BQF106-000CS	Yes
67	TNM715-BQE001-012+rear camera sealant	No
68	TNM715-BQE000-018+ADH_D15.1xD12.7x0.15	No
70	TNEI30-BQE020-000P270AE_Sim card tray	Yes
71	TNM716-BQE001-007+P270AE silicone ring	Yes
75	Guam+ Speaker BOX&N506-BQF001-000CS	Yes
79	TNM709-BQE001-032+Battery buffer foam	No
80	ACCY,BAT,5000mAh,JK50,ATL486585,ATL,BIS	No
82	TNEI06-320813-000+RF coaxial cable	Yes
83	TNN800-BQE000-000+MAINFPC_V0.2	No


Lenovo Moto E7 Plus
Level 2 – Service and Repair Manual

<i>Reference #</i>	<i>Description</i>	<i>Recovery Part</i>
85	XT2083-1 Sub Board&S102-BQF000-000CS XT2083-3 Sub Board&S102-BQF001-000CS ASSY,DTR BRD,Guam+20 4+64 DS BR XT2083-4 sub board&S102-BQF002-000CS	Yes
86	TNN901-BQF000-010+Coin Vibrator_JX	No
87	TNM716-BQF001-000+sealed silicone sleeve	Yes
89	TNM715-BQE000-003+fixed adhesive	No
90	TNM709-BQE000-027+waterproof foam	No
91	TNM715-BQE001-005+battery adhesive	No
93	TNM711-BQE000-100+speaker dust filter	No
-	TNM501-211105-004+round head screw	No
-	TNM721-BQF001-002+P370AE graphite sheet	No
-	TNP316-096000-100+Water label	No
-	TNM709-BQE000-001 + conductive sponge	No
-	TNM709-BQE000-028+Waterproof foam	No
-	TNM716-BQE002-006+CHARGEThermal silica	No
-	TNM701-BQF000-001+waterproof sticker	No
-	TNM701-BQF000-002+WAT STI 1 (33x3.4x0.05	No
-	TNM701-BQF000-003+STI 2_22.6x12.7x0.05	No
-	TNM716-BQE000-002+silicone light guide	Yes
-	TNM716-BQE001-003+silicone sheet	No
-	TNM715-BQE001-010+silicone adhesive	No
-	TNP316-000000-100+label	No
-	TNM501-211105-006+round head screw_LJT	No
-	TNM701-BQE000-003+Speaker insulationtape	No
-	TNM709-BQE000-030+Flash cover foam	No
-	TNM702-BQE000-000+Flash cover sealed PET	Yes
-	TNN501-BQF000-010+shrapnel speaker	Yes
-	TNM709-BQE000-012+Front sealing foam	No

DISASSEMBLY AND RECOVERY




Disassembly and Recovery Map

*Shaded parts may be eligible for parts recovery.

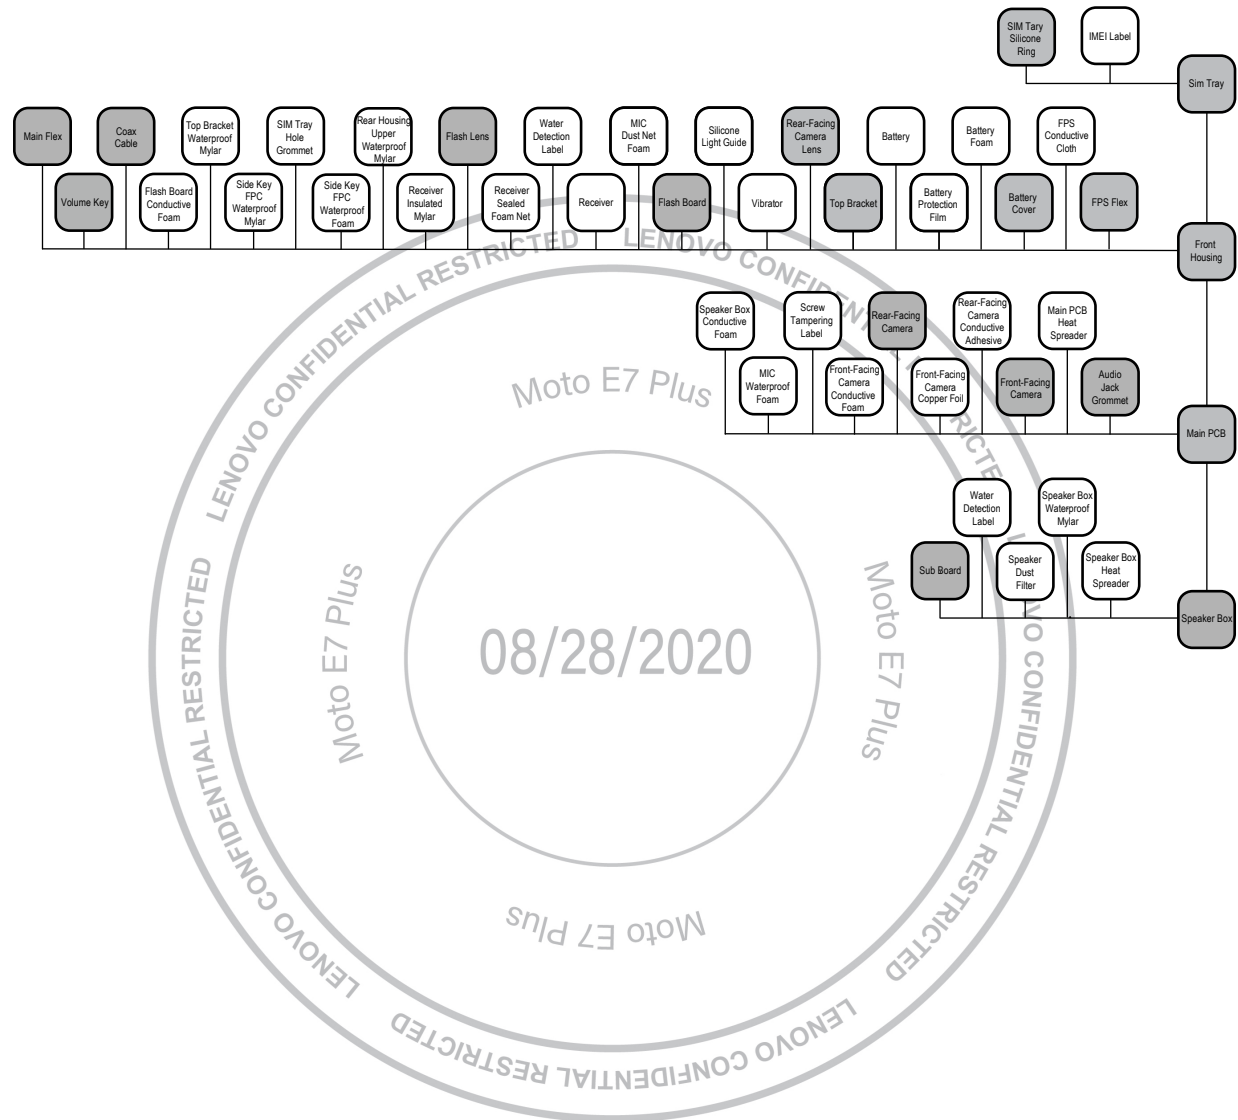

Tools Required for Disassembly

The following tools are required to disassemble the Moto E7 Plus phone.
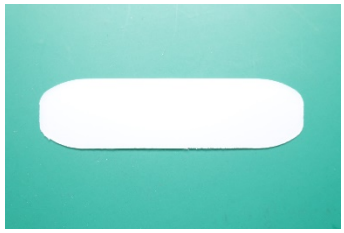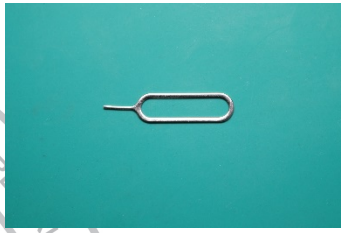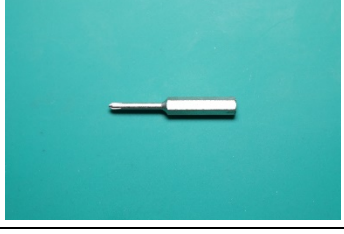
<i>Description</i>	<i>Part #</i>	<i>Picture/Drawing</i>
Thin Plastic Spudger	0-00-00-40826	
SIM/SD Tray Removal Tool	--	
Black Stick	--	
Torque Driver	--	
Shim	4-00-5L-10000	
PH00 Bit	--	
Plastic Tweezers	--	--
ESD Mat	--	--

Lenovo Moto E7 Plus
Level 2 – Service and Repair Manual

<i>Description</i>	<i>Part #</i>	<i>Picture/Drawing</i>
Wrist Strap	--	--
Gloves	--	--




SIM Tray Removal

NOTE


The SIM Tray can be recovered and reused after removal.



1. Power off the device before beginning with the procedure. Use the SIM Tray Removal pin to push into the SIM Tray hole.
2. Press the SIM Tray removal tool to make it pop-out as shown.

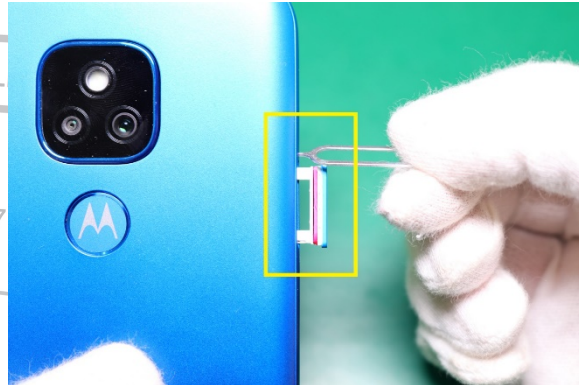

3. Use fingers to take out the SIM Tray.

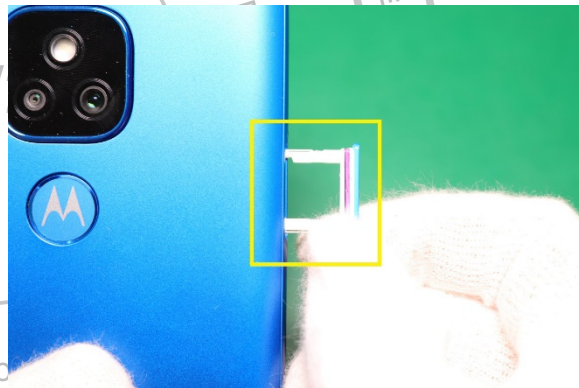



Sim Tray Silicone Ring Removal

NOTE

The Sim Tray Silicone Ring can be recovered and reused after removal.



Use the Plastic Tweezer to remove the Sim Tray Silicone Ring from the SIM tray.

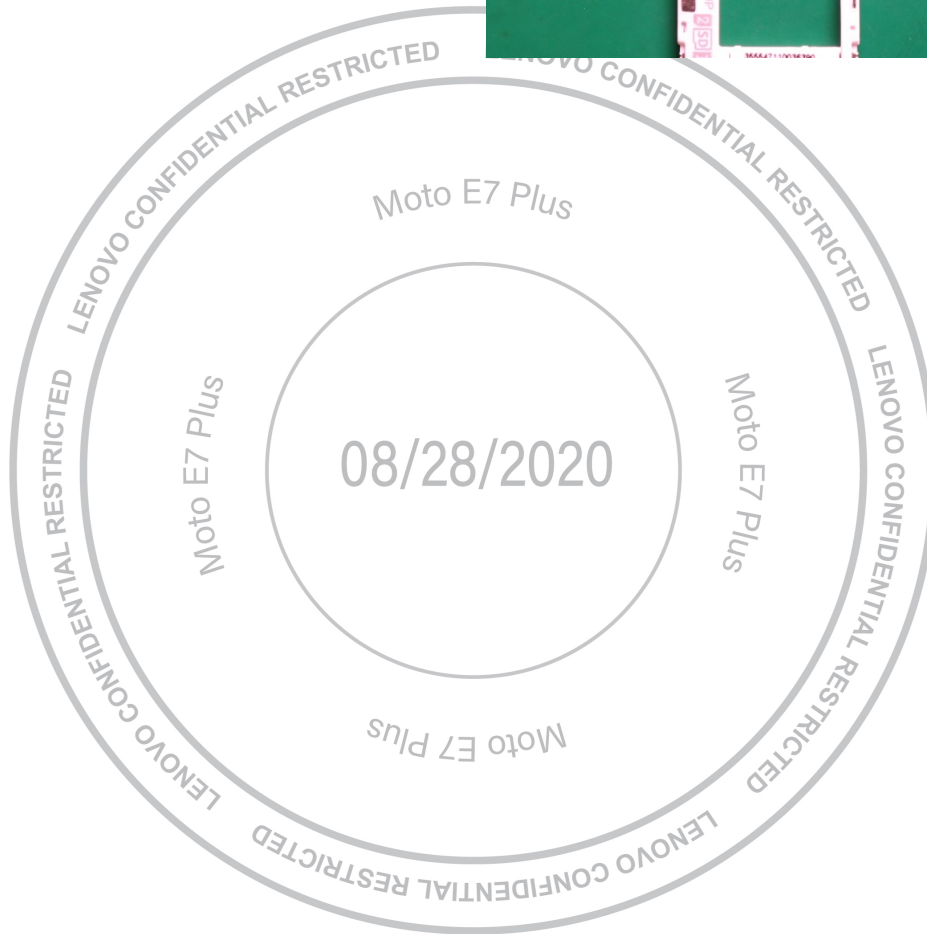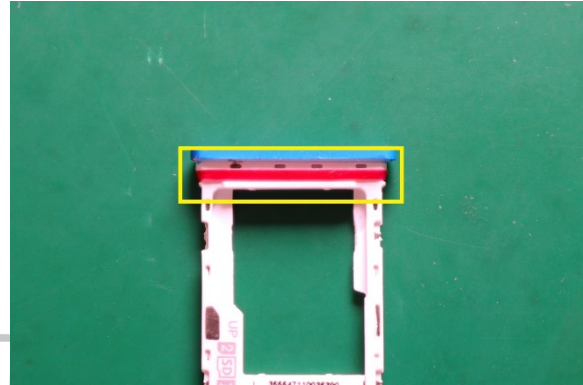



IMEI Label Removal

NOTE

Remove the IMEI Label only if necessary. After you remove it, you cannot reuse it.



Use the Plastic Tweezer to remove the IMEI Label from the SIM tray.

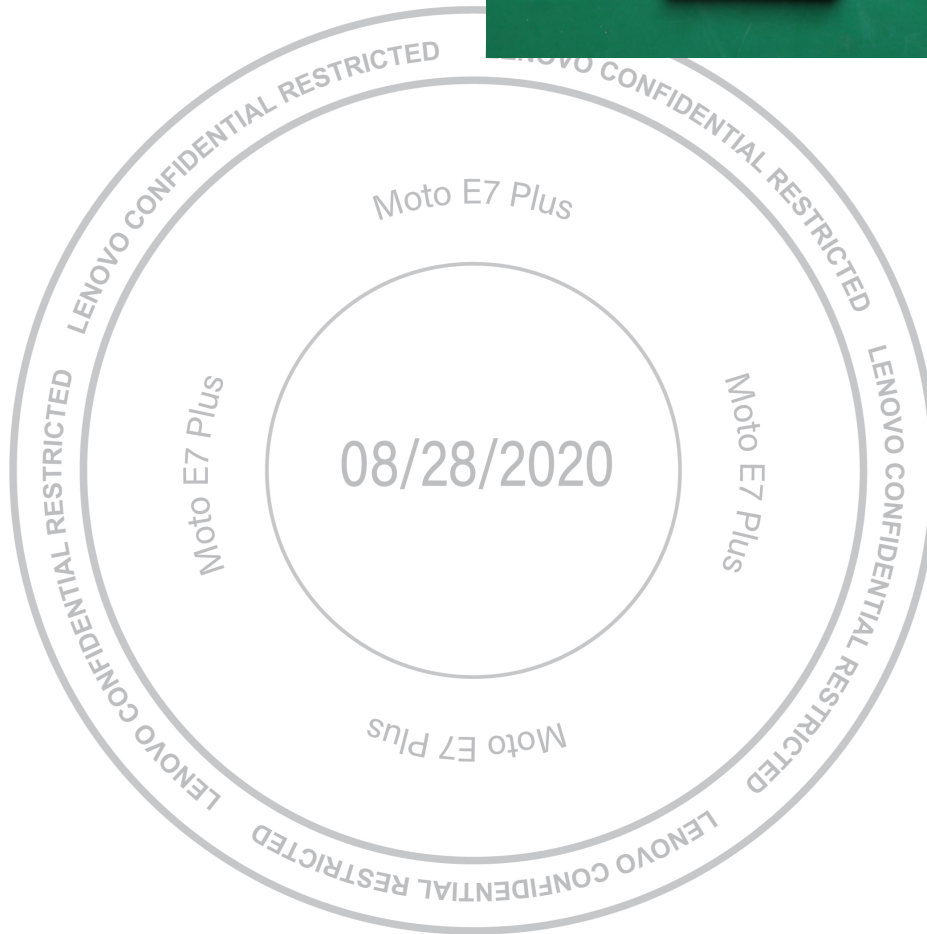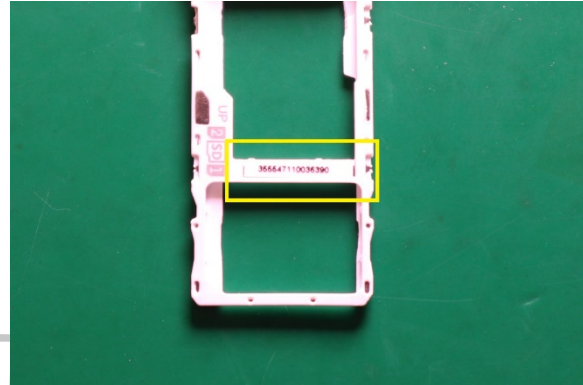


Water Detection Label Inspection

NOTE

If the Water Detection Label (WDL) has been activated, the phone's warranty no longer applies.

Inspect the WDL inside the SIM Tray Slot for signs of activation. Use external light if needed.

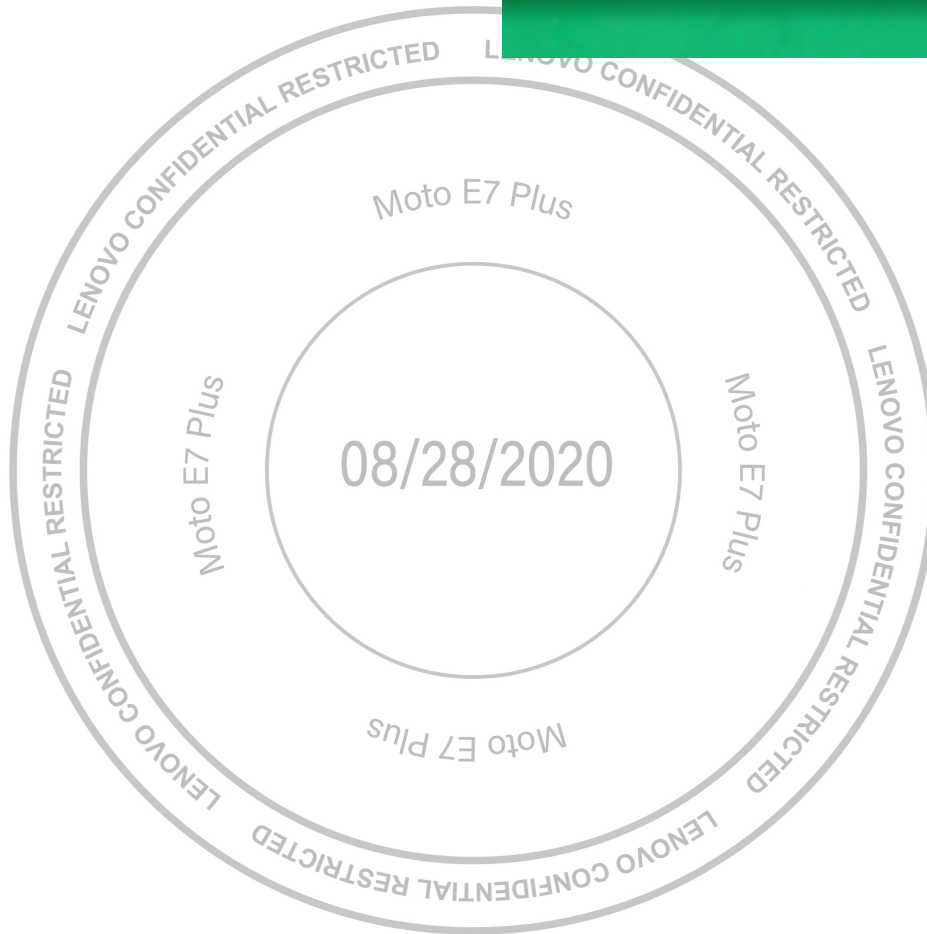

Battery Cover Removal

NOTE


The Battery Cover can be recovered and reused after removal if it is undamaged.



1. Use the Shim to create a gap between the Battery Cover and the Front-Housing.

NOTE


Make sure to start at the Side Key position as shown.

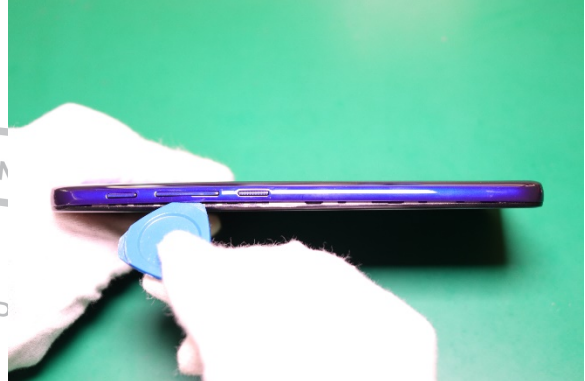

2. Use the Shim to create a gap between the Battery Cover and the Front-Housing.



3. Use the Shim to create a gap between the Battery Cover and the Front-Housing.

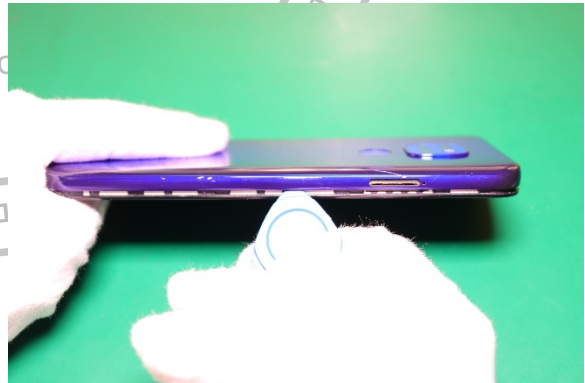

Lenovo Moto E7 Plus

Level 2 – Service and Repair Manual

4. Use the Shim to create a gap between the Battery Cover and the Front-Housing.



5. The highlighted frame is a forbidden area. Do not disassemble at this location.

NOTE


Care not to slide the Shim to avoid damaging the Front-Housing.

NOTE

Care while removing the Battery Cover with Shim do not scratch the Battery Cover and Front rim.

NOTE

Care not to break the MIC1 Grommet on the bottom side and MIC2 Grommet on the top side.

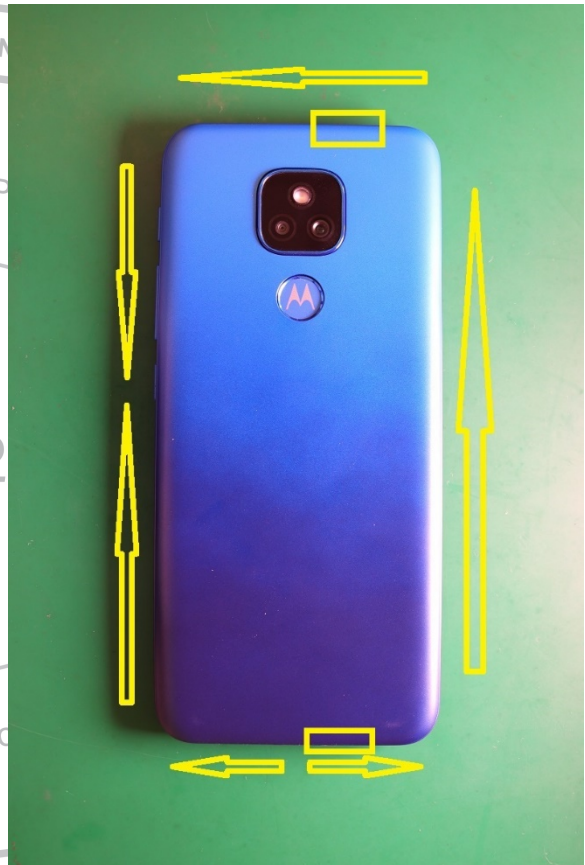

6. Use fingers to push out the Fingerprint Sensor from the location as shown.

/// WARNING ///


Use care not to disconnect the Fingerprint Sensor (FPS) Flex from the Battery Cover when removing the Front Housing.




Lenovo Moto E7 Plus

Level 2 – Service and Repair Manual

7. Care need strong force to pull to disengage Battery Cover from the adhesive as shown.

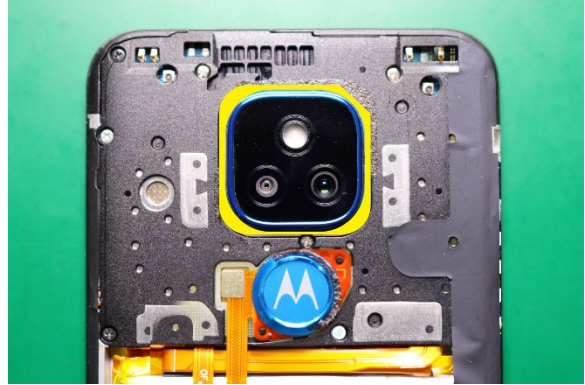

8. Split the Battery Cover from the Front-Housing as shown.

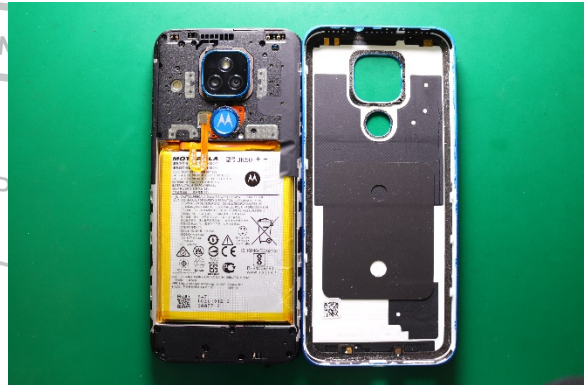


Screw Tampering Label Inspection

NOTE

If a Screw Tampering Label is damaged, the phone's warranty no longer applies.

Inspect the Screw Tampering Labels located on the Top Bracket as shown. Verify they are correctly placed and examine them for signs of tampering.

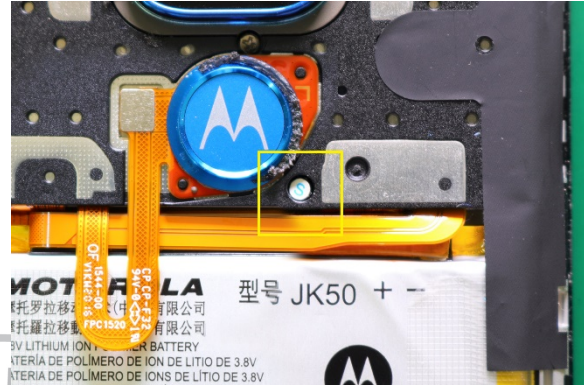


Rear-Housing Upper Waterproof Removal

NOTE

After you remove the Rear-Housing Upper Waterproof, you cannot reuse it.



Use the Plastic Tweezer to remove the Rear-Housing Upper Waterproof from the location as shown.

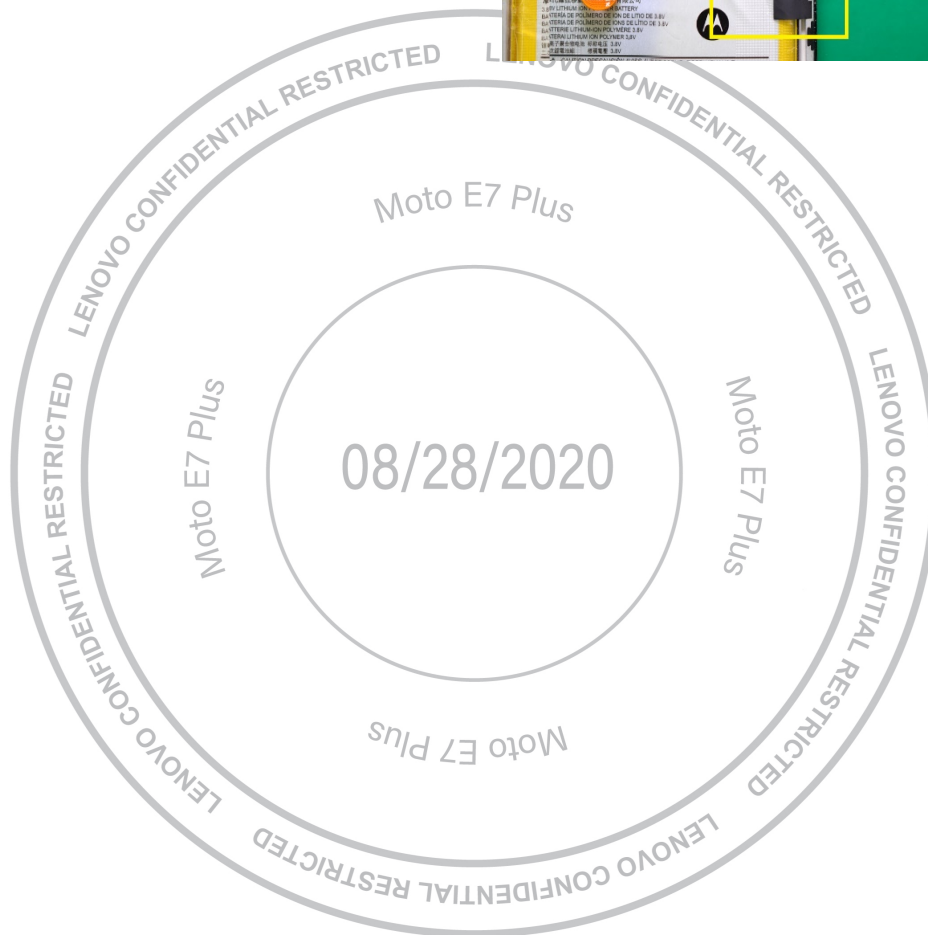


Side Key FPC Waterproof Removal

NOTE

After you remove the Side Key FPC Waterproof, you cannot reuse it.



Use the Plastic Tweezer to remove the Side Key FPC Waterproof from the location as shown.

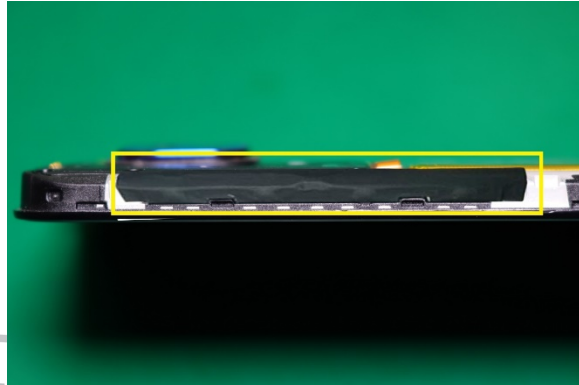


Top Bracket Upper Waterproof Film Removal

NOTE

After you remove the Top Bracket Upper Waterproof Film, you cannot reuse it.



Use the Plastic Tweezer to remove the Top Bracket Upper Waterproof Film from the location as shown.

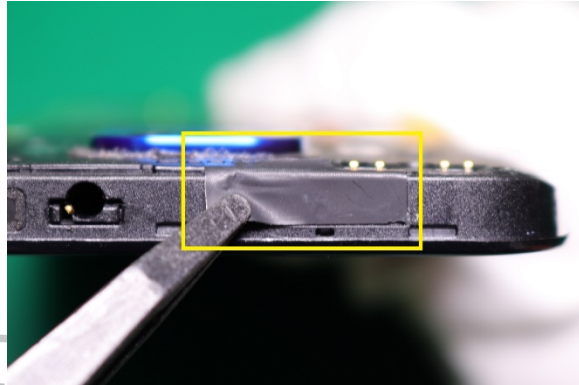

Top Bracket Removal

NOTE

The Top Bracket can be recovered and reused after removal.



1. Use the flat end of the Black Stick to disengage Fingerprint Sensor from the location as shown.




2. Use the Plastic Tweezer to remove the Fingerprint Sensor from the location as shown.



3. Use the Torque Driver with PH00 Bit to remove the nine screws as shown.

/// WARNING ///



The screws cannot be reused after removal.

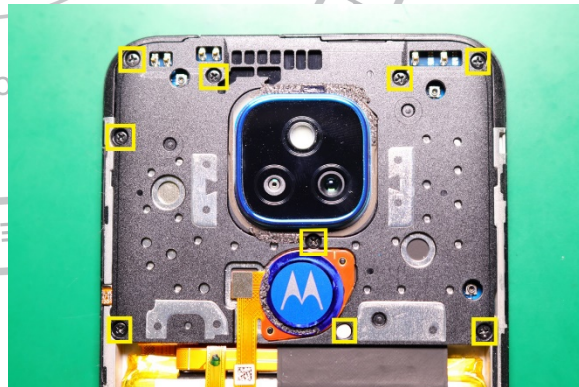

Lenovo Moto E7 Plus

Level 2 – Service and Repair Manual

4. Use the flat end of the Black Stick to lift the Top Bracket from the location as shown.

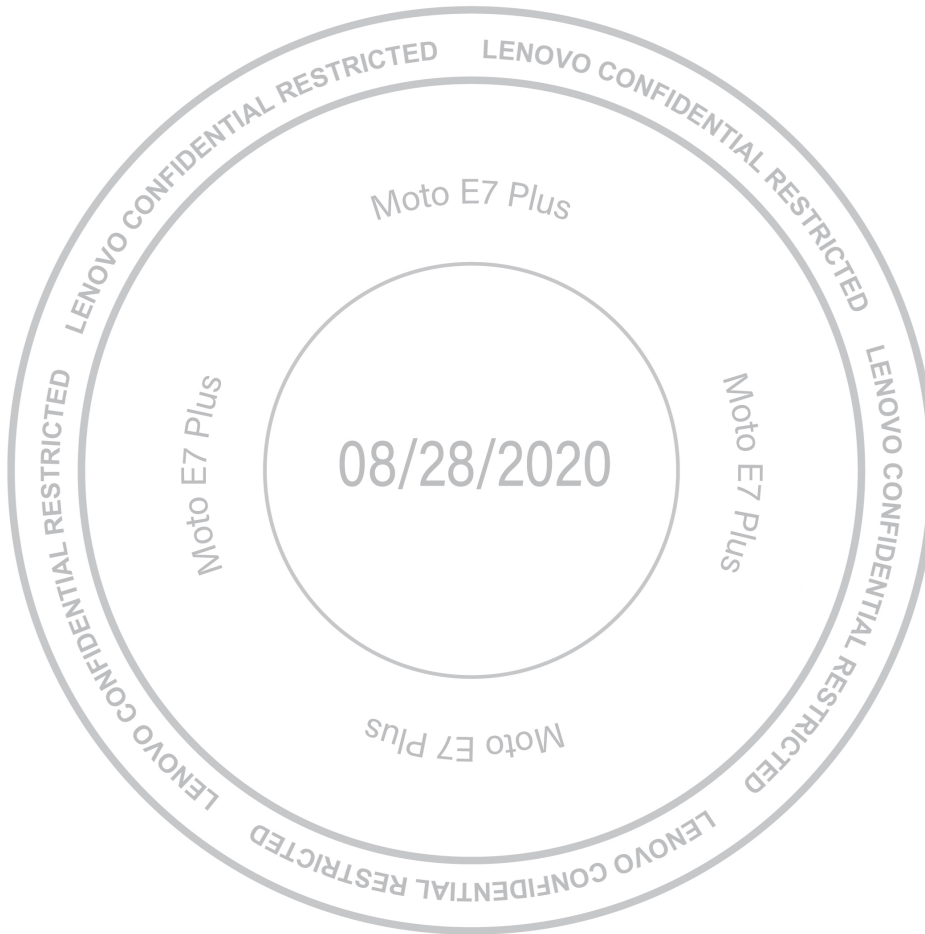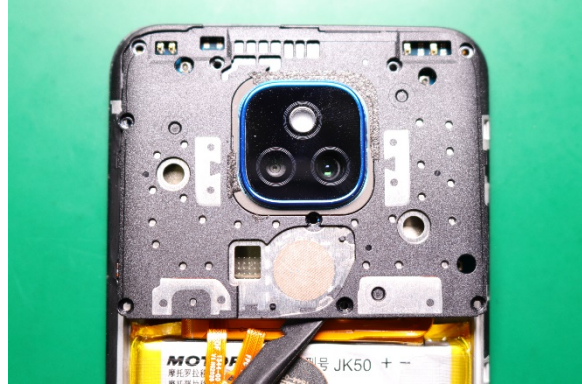

Water Detection Label Inspection

NOTE

If the Water Detection Label (WDL) has been activated, the phone's warranty no longer applies.

Inspect the WDL, which is visible on the Main PCB. Examine it for signs of activation.




Primary MIC Dust Net Foam Removal

NOTE

After you remove the Primary MIC Dust Net Foam, you cannot reuse it.



Use the Plastic Tweezer to remove the Primary MIC Dust Net Foam from the location as shown.

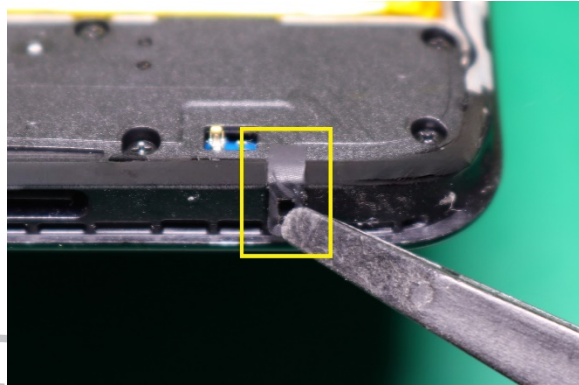


Speaker Dust Filter Removal

NOTE

After you remove the Speaker Dust Filter, you cannot reuse it.



Use the Plastic Tweezer to remove the Speaker Dust Filter from the location as shown.

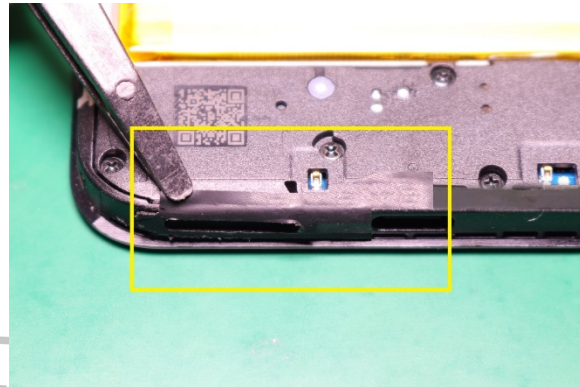



Speaker Box Waterproof Sticker 1 Removal

NOTE

After you remove the Speaker Box Waterproof Sticker 1, you cannot reuse it.



Use the Plastic Tweezer to remove the Speaker Box Waterproof Sticker 1 from the location as shown.

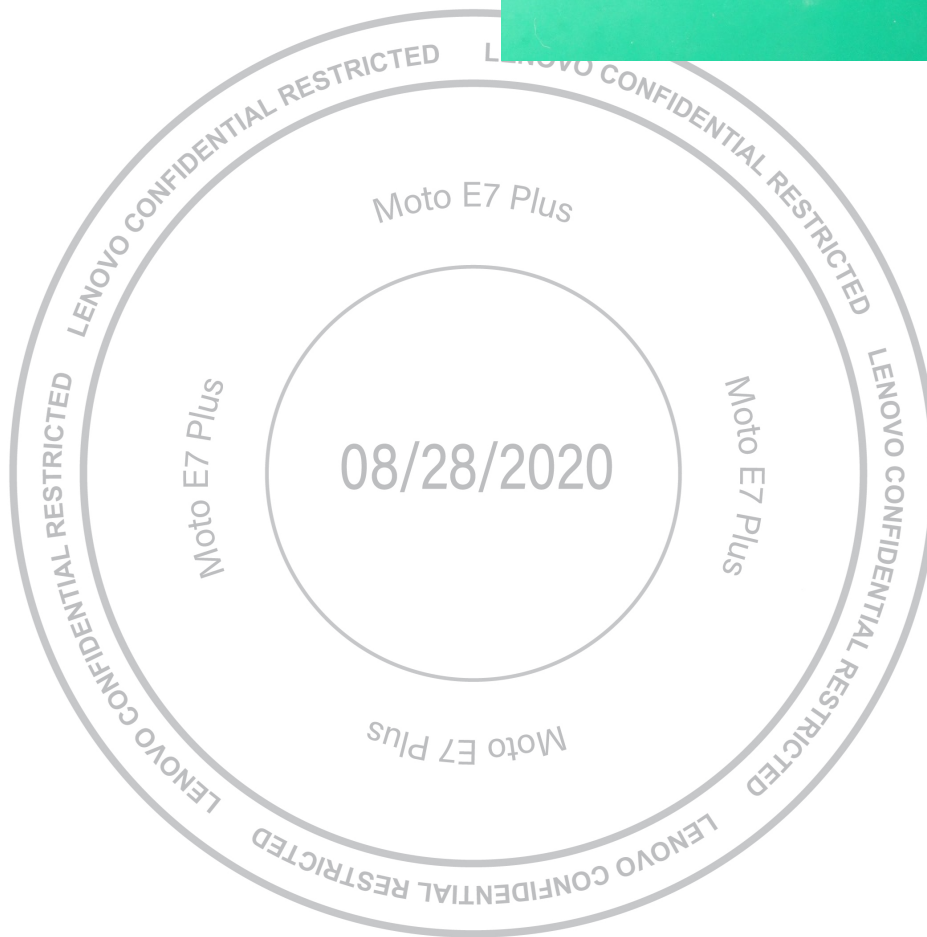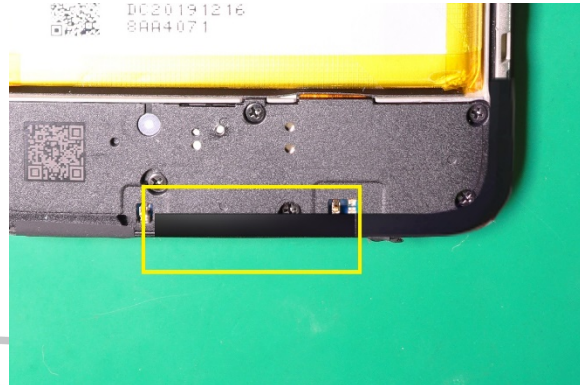



Speaker Box Waterproof Sticker 2 Removal

NOTE

After you remove the Speaker Box Waterproof Sticker 2, you cannot reuse it.



Use the Plastic Tweezer to remove the Speaker Box Waterproof Sticker 2 from the location as shown.

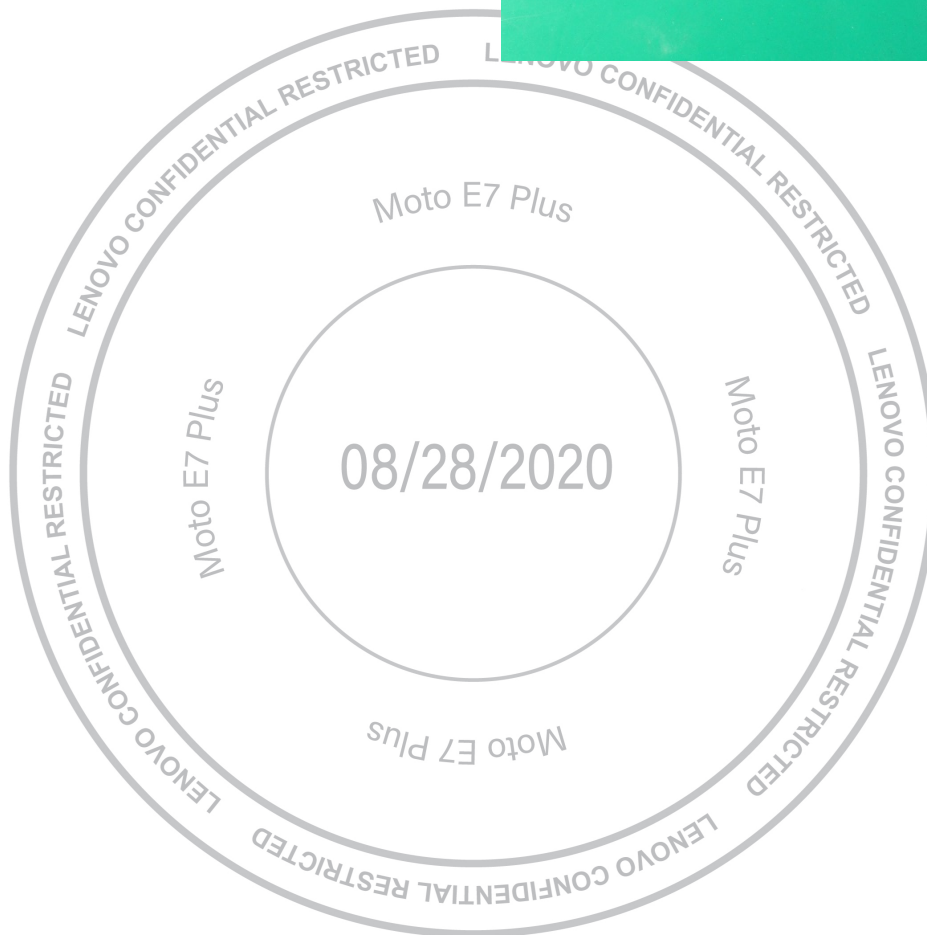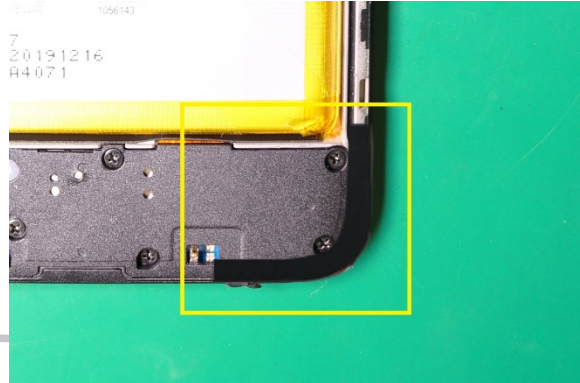

Speaker Box Removal

NOTE

The Speaker Box can be recovered and reused after removal.




1. Use the Torque Driver with PH00 Bit to remove the seven screws as shown.

/// WARNING ///

The screws cannot be reused after removal.

2. Use the flat end of the Black Stick to lift the Speaker Box as shown.

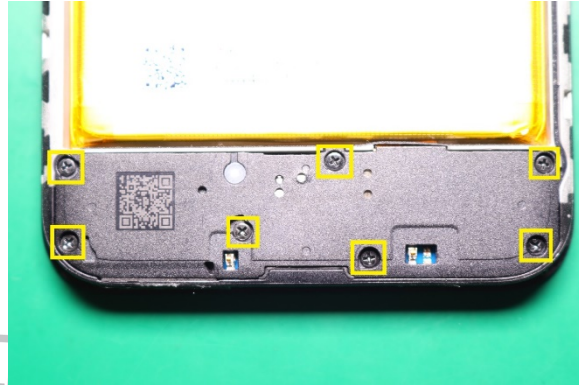


Water Detection Label Inspection

NOTE

If the Water Detection Label (WDL) has been activated, the phone's warranty no longer applies.

Inspect the WDL, which is visible on the Sub Board. Examine it for signs of activation.

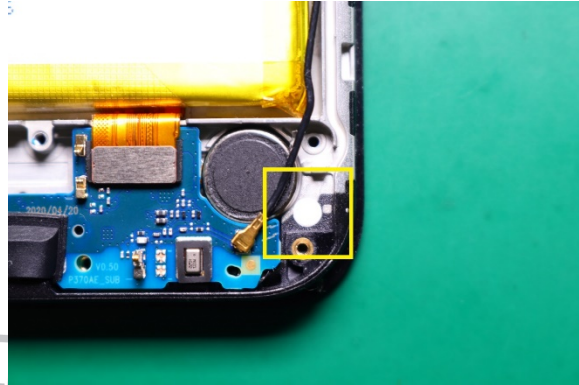


Shrapnel Speaker Removal

NOTE

The Shrapnel Speaker can be recovered and reused after removal.



Use the flat end of the Black Stick to remove the Shrapnel Speaker from the location as shown.

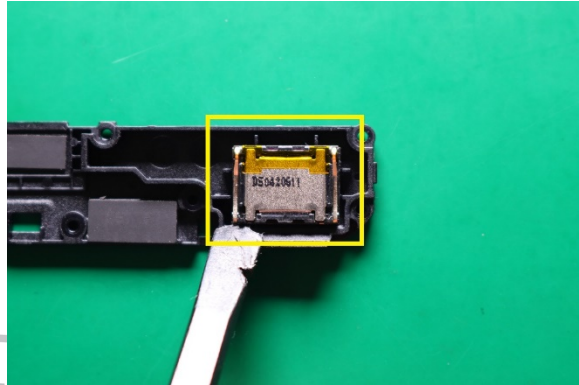


Speaker Insulated Mylar Removal

NOTE

After you remove the Speaker Insulated Mylar, you cannot reuse it.



Use the Plastic Tweezer to remove the Speaker Insulated Mylar from the location as shown.

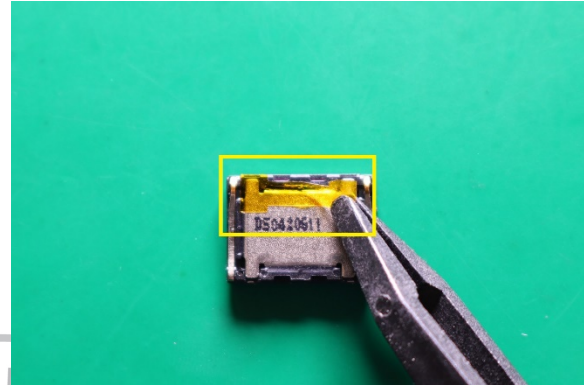


Speaker Sealing Foam Removal

NOTE

After you remove the Speaker Sealing Foam, you cannot reuse it.



Use the Plastic Tweezer to remove the Speaker Sealing Foam from the location as shown.

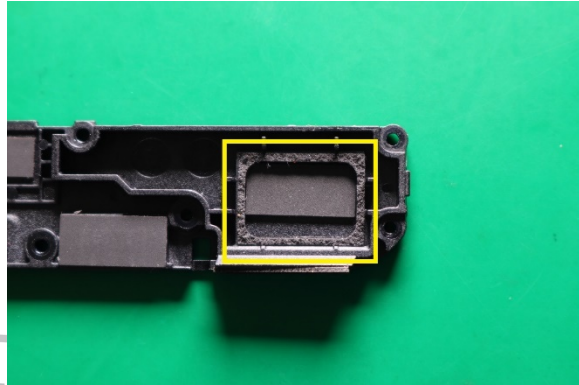


Fingerprint Sensor Flex Removal

NOTE

The Fingerprint Sensor Flex can be recovered and reused after removal.



Use fingers to remove the Fingerprint Sensor Flex from the location as shown.

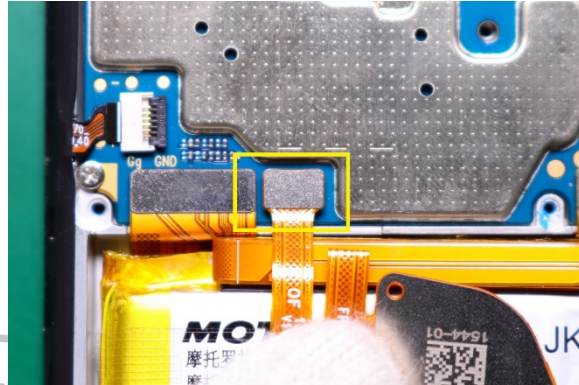


Flash Cover Sealed PET Removal

NOTE

After you remove the Flash Cover Sealed PET, you cannot reuse it.



Use the flat end of the Black Stick to remove the Flash Cover Sealed PET from the location as shown.

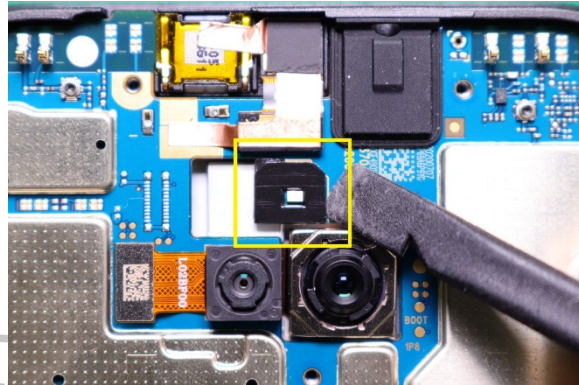



Flash Cover Foam Removal

NOTE

After you remove the Flash Cover Foam, you cannot reuse it.



Use fingers to remove Flash Cover Foam from the location as shown.

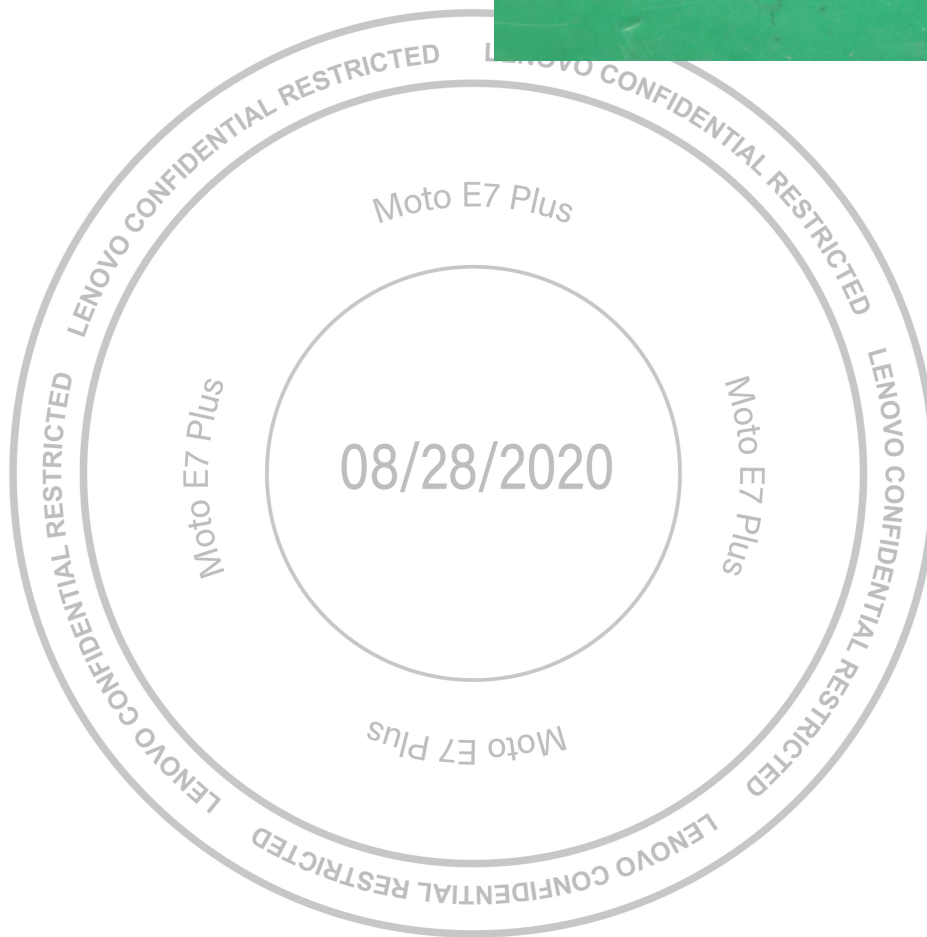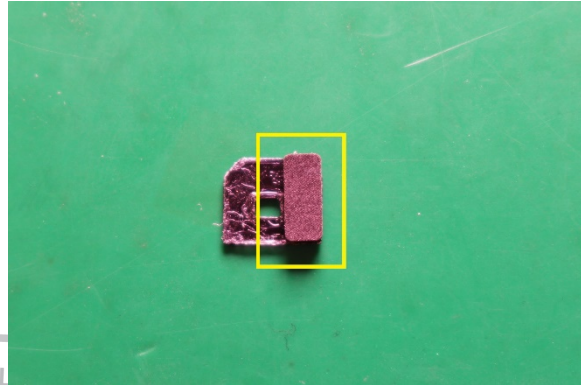


Front-Facing Camera Conductive Foam Removal

NOTE

After you remove the Front-Facing Camera Conductive Foam, you cannot reuse it.



Use the Plastic Tweezer to remove the Front-Facing Camera Conductive Foam from the location as shown.

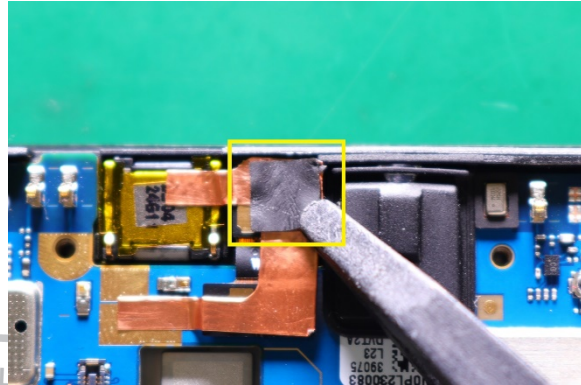


Front-Facing Camera Copper Foil Removal

NOTE

After you remove the Front-Facing Camera Copper Foil, you cannot reuse it.



Use the Plastic Tweezer to remove the Front-Facing Camera Copper Foil from the location as shown.

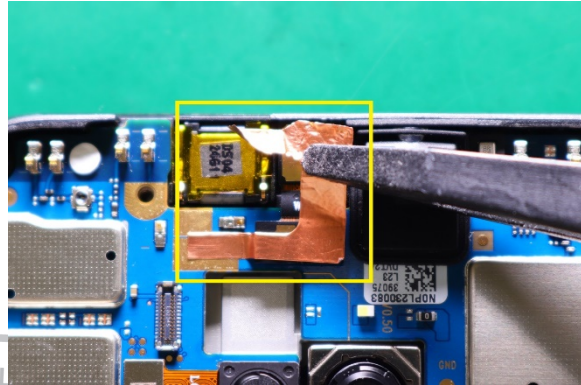


Front-Facing Camera Removal

NOTE

The Front-Facing Camera can be recovered and reused after removal.



Use fingers to remove the Front-Facing Camera from the Main PCB as shown.

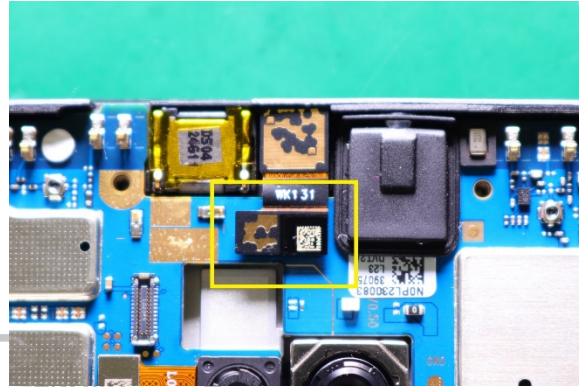


Main PCB Removal

NOTE


The Main PCB can be recovered and reused after removal.




1. Use the Plastic Tweezer to remove the Coax Cable from the location as shown.

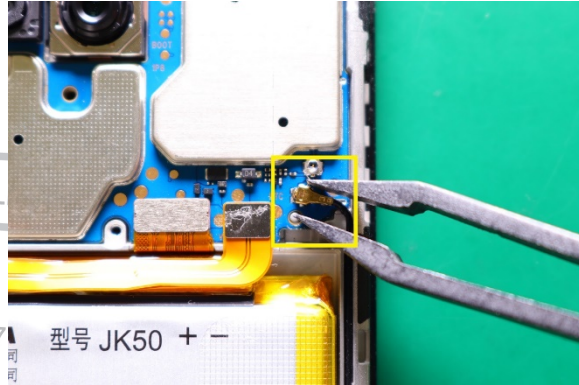

2. Use fingers to disengage Battery BtB Connector from the location as shown.

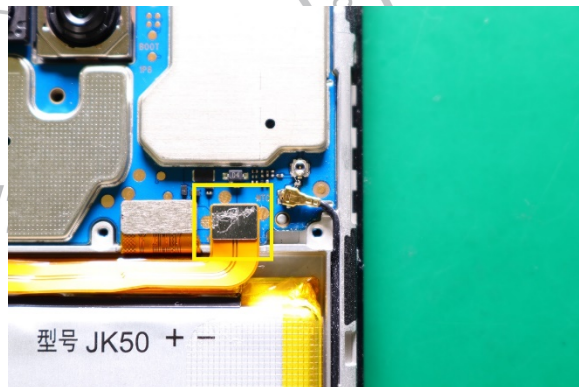


3. Use fingers to disengage Main Flex BtB Connector from the location as shown.

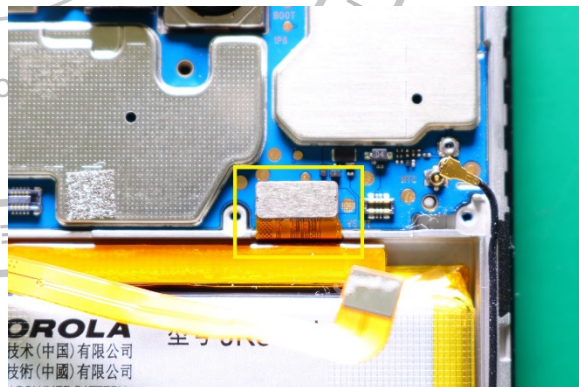


Lenovo Moto E7 Plus

Level 2 – Service and Repair Manual


4. Use fingers to disengage Display BtB Connector from the location as shown.

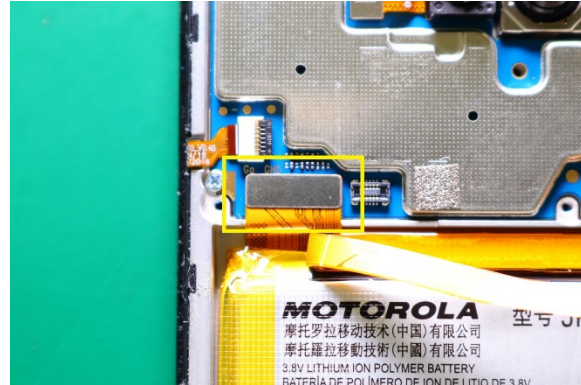

5. Use the flat end of the Black Stick to disengage the Side Key Flex from the location as shown.

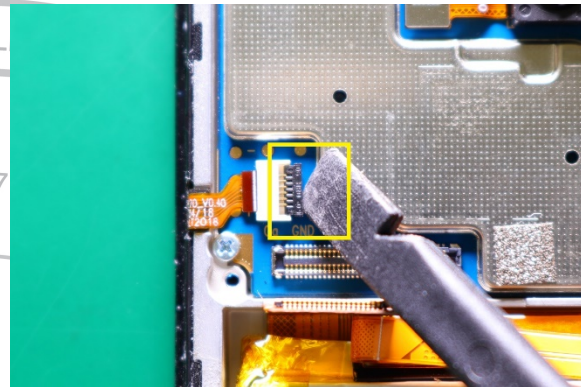


6. Use fingers to remove the Side Key from the location as shown.

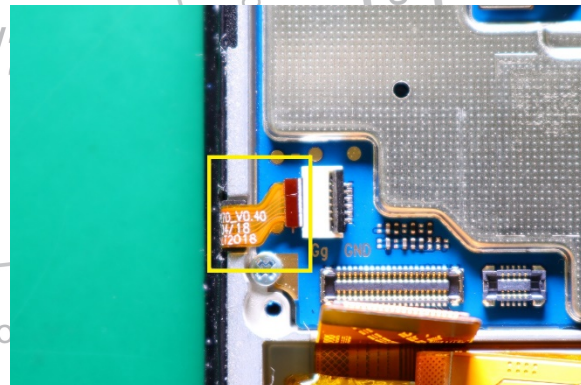

7. Use the Torque Driver with PH00 Bit to remove the two screws as shown.


/// WARNING ///

The screw cannot be reused after removal.

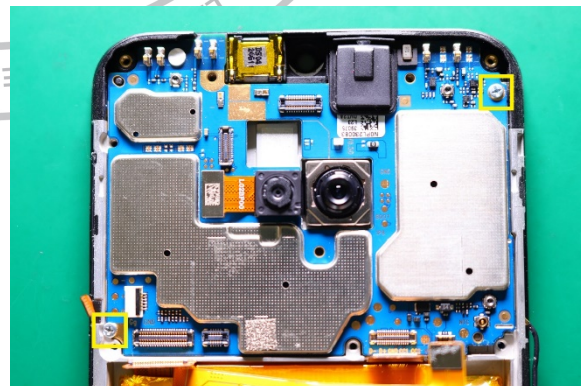

Lenovo Moto E7 Plus
Level 2 – Service and Repair Manual

8. Use the pointed end of the Black Stick to lift the Main PCB from the location as shown.

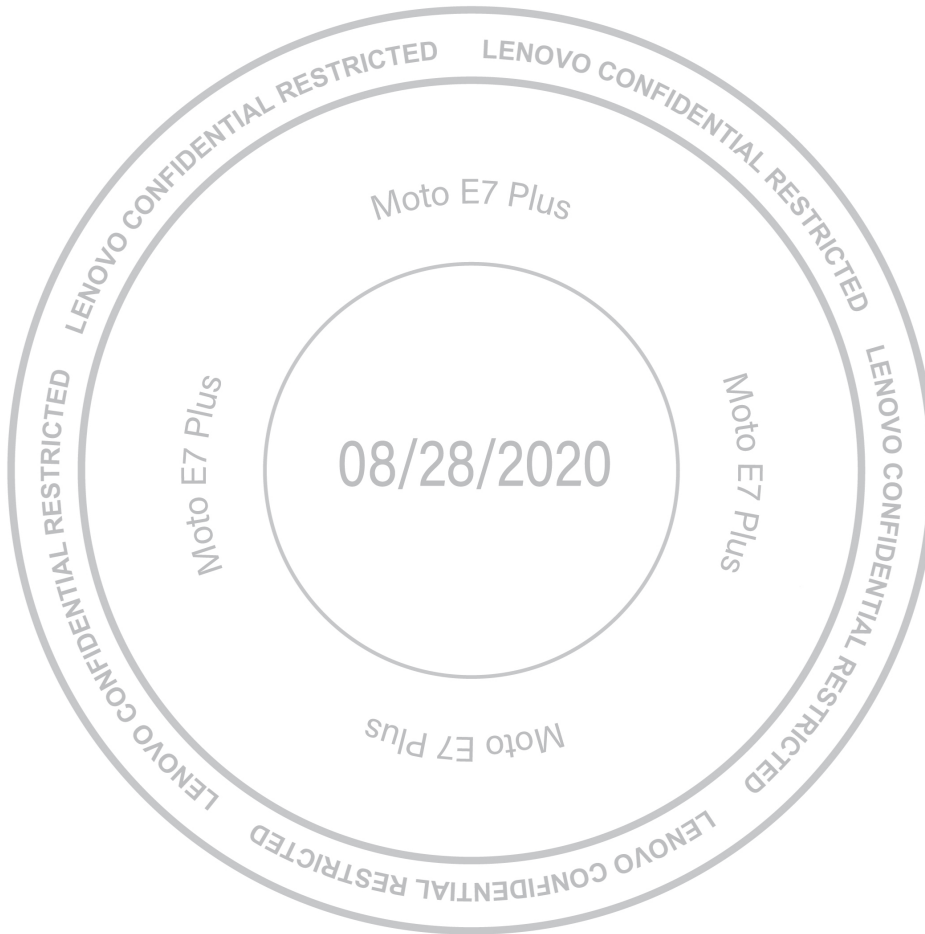


Receiver Insulated Mylar Removal

NOTE

After you remove the Receiver Insulated Mylar, you cannot reuse it.



Use the Plastic Tweezer to remove the Receiver Insulated Mylar from the location as shown.

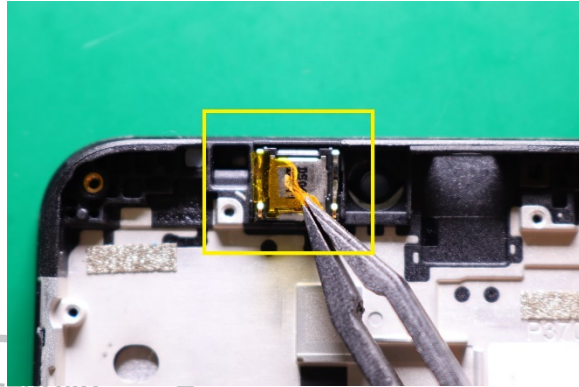


Receiver Removal

NOTE

The Receiver can be recovered and reused after removal.



1. Use the flat end of the Black Stick to lift the Receiver from the location as shown.
2. Remove the Receiver from the phone.
3. Inspect if the Receiver is undamaged.

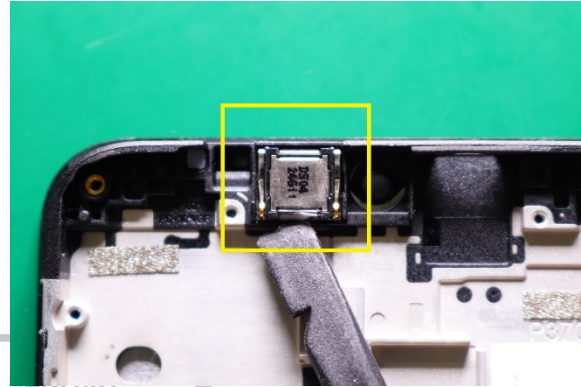


2M Macro Rear-Facing Camera Removal

NOTE

The 2M Macro Rear-Facing Camera can be recovered and reused after removal.




1. Use fingers to remove the 2M Macro Rear-Facing Camera from the location as shown.

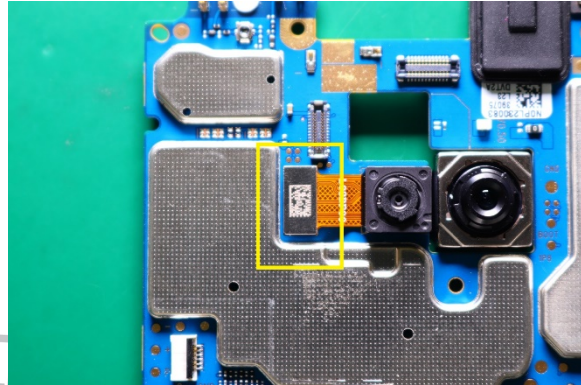

2. Use flat end of the Black Stick to remove the 2M Macro Rear-Facing Camera from the Main PCB as shown.

NOTE

Care the camera has back conductive adhesive.

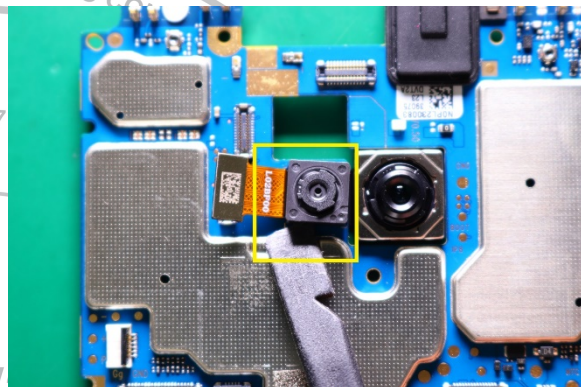


Rear-Facing Camera Conductive Adhesive Removal

NOTE

After you remove the Rear-Facing Camera Conductive Adhesive, you cannot reuse it.



Use fingers to remove the Rear-Facing Camera Conductive Adhesive from the location as shown.

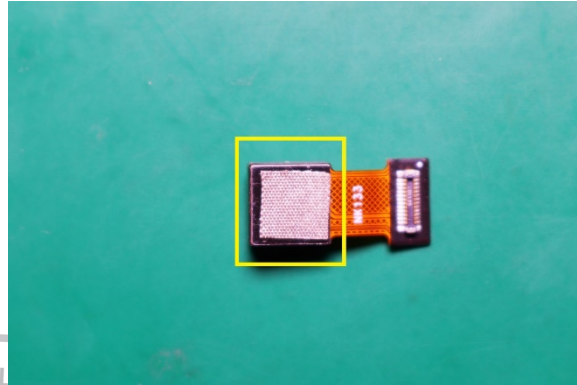


48M Rear-Facing Camera Removal

NOTE

The 48M Rear-Facing Camera can be recovered and reused after removal.



Use fingers to remove the 48M Rear-Facing Camera from the location as shown.

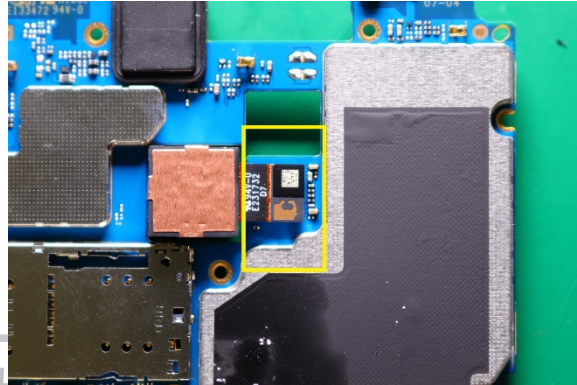


Audio Jack Grommet Removal

NOTE

The Audio Jack Grommet can be recovered and reused after removal.



Use the Plastic Tweezer to remove the Audio Jack Grommet from the location as shown.

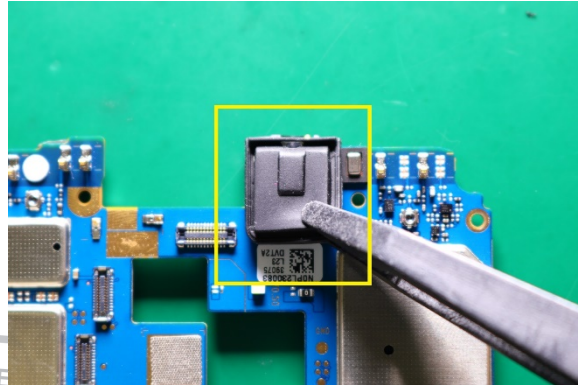


Secondary MIC Waterproof Foam Removal

NOTE

After you remove the Secondary MIC Waterproof Foam, you cannot reuse it.



Use the Plastic Tweezer to remove the Secondary MIC Waterproof Foam from the location as shown.

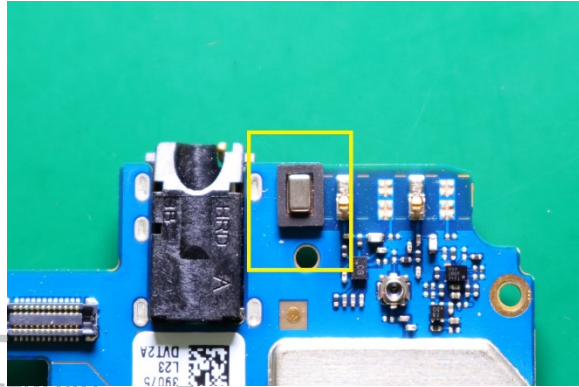


Speaker Box Conductive Foam Removal

NOTE

After you remove the Speaker Box Conductive Foam, you cannot reuse it.



Use the Plastic Tweezer to remove the Speaker Box Conductive Foam from the location as shown.

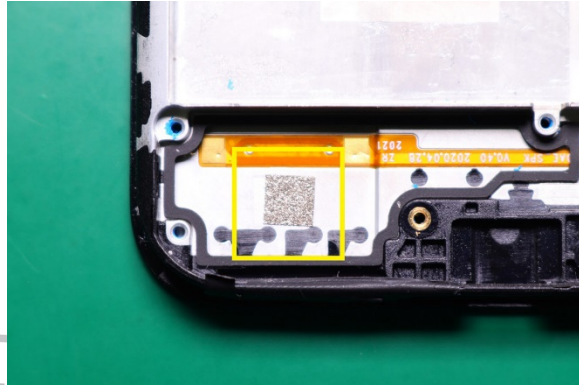


Sub Board Removal

NOTE


The Sub Board can be recovered and reused after removal.




1. Use the Plastic Tweezer to remove the Coax Cables as shown.

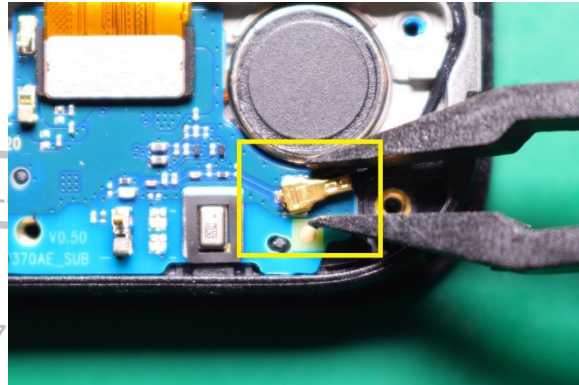

2. Use fingers to carefully disengage the Main Flex BtB Connector from the location on the Sub Board as shown.

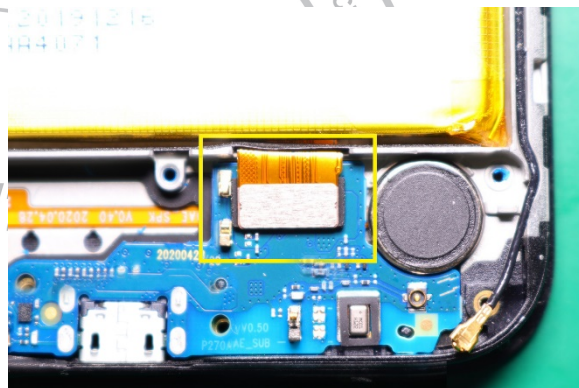

3. Use the flat end of the Black Stick to gently lift the Sub Board from the location as shown.

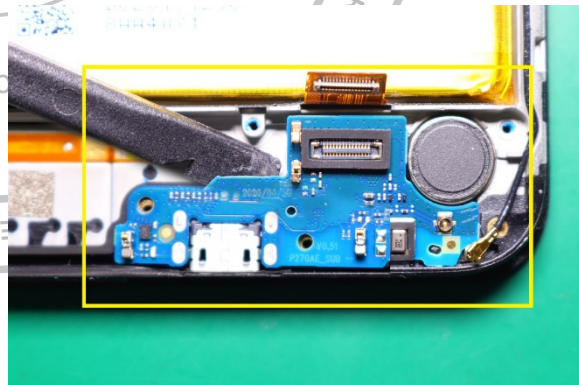



Primary MIC Waterproof Foam Removal

NOTE

After you remove the Primary MIC Waterproof Foam, you cannot reuse it.



Use the Plastic Tweezer to remove the Primary MIC Waterproof Foam from the location as shown.

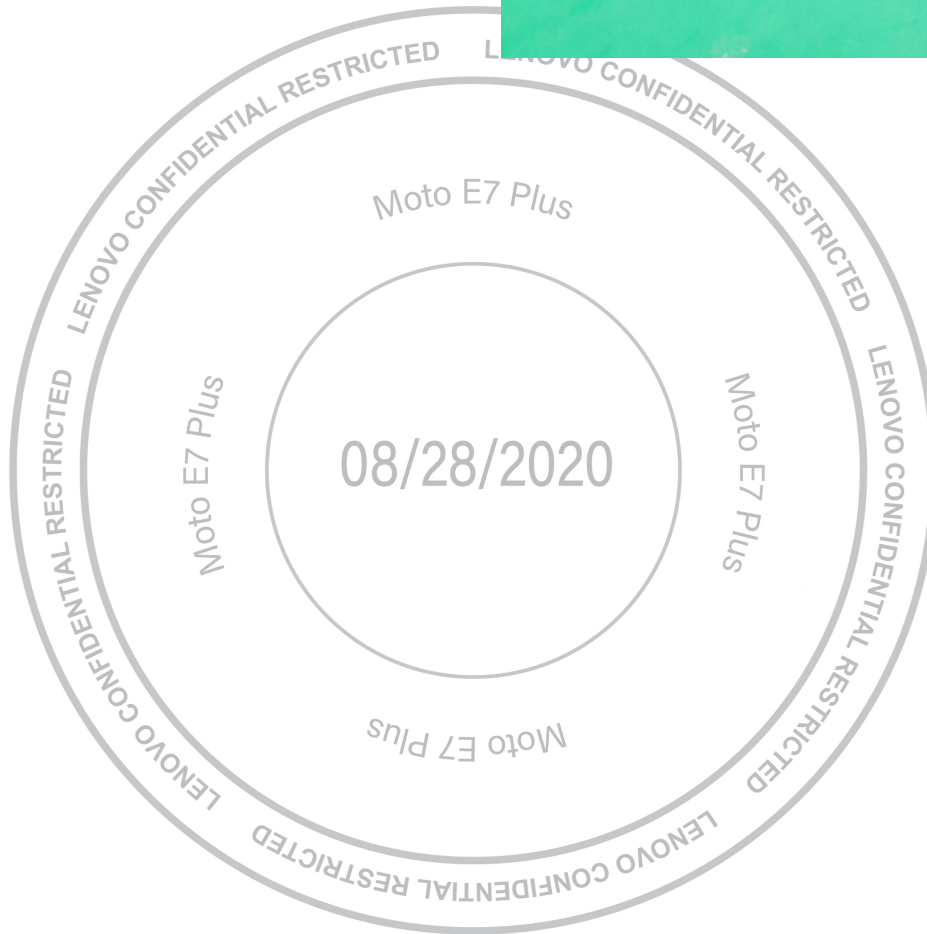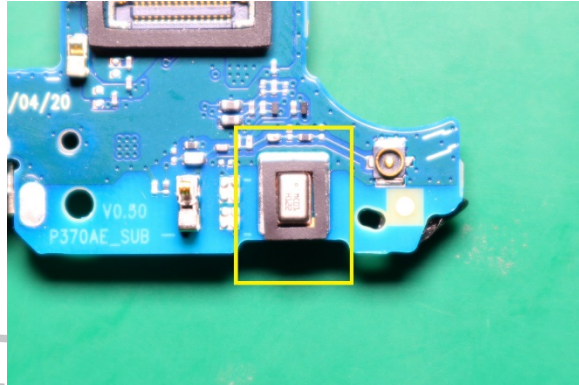


Vibrator Removal

NOTE

Remove the Vibrator only if necessary.
After you remove it, you cannot reuse it.




Use the flat end of the Black Stick to gently disengage the Vibrator from the location as shown.

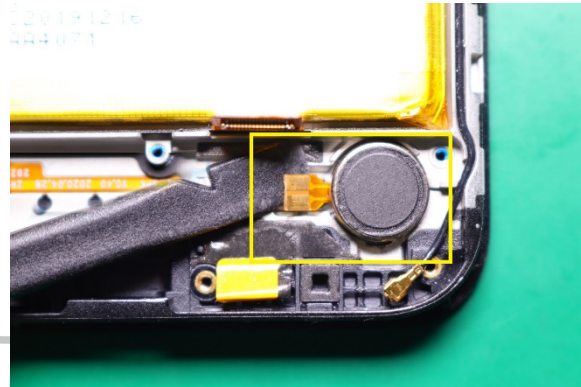


Coax Cable Removal

NOTE

The Coax Cables can be recovered and reused after removal.

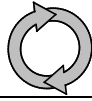

Use the Plastic Tweezer to remove the Coax Cable from the location as shown.

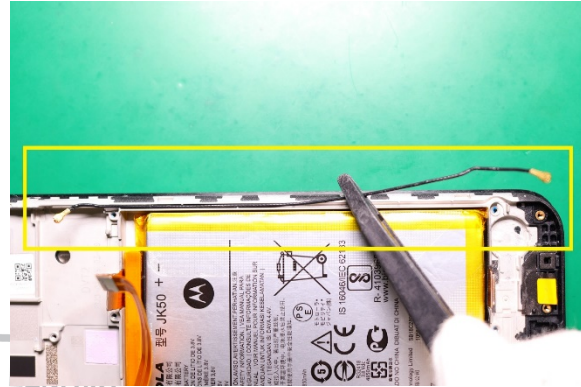

Battery Removal

/// WARNING ///

Failure to adhere to Safety Critical Note(s) may increase risk of rupture, burning, or failure to function safely when used by the customer. Refer to the Battery Safety Guidelines.

NOTE

After you remove the Battery, you cannot reuse it.



// CAUTION //

Handle the Battery Pack with care. If dropped on the floor, it may be internally damaged and must be scrapped.

Ensure Battery and its insulation are not damaged (e.g. scratched, dented, punctured) prior to and through assembly.

Prior to assembly, ensure Battery edges and surfaces are not dented or deformed, and that fixtures and parts that will contact the Battery are free of foreign material.

Ensure screws and screwdrivers do not contact the Battery.

1. Use the thin Plastic Spudger to cut adhesive from the top of the Battery.




2. Use the thin Plastic Spudger to cut adhesive from the sides of the Battery.



Lenovo Moto E7 Plus
Level 2 – Service and Repair Manual

3. Use fingers to pull out the Battery protection film and remove the Battery as shown.

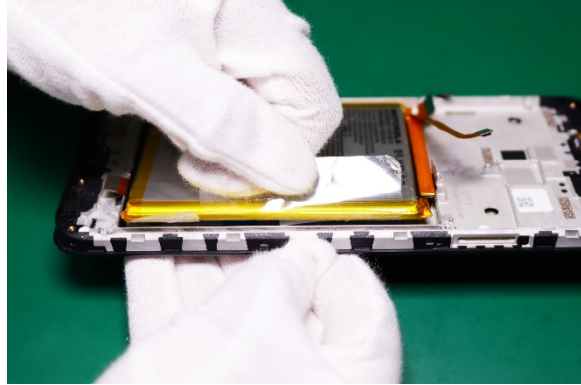


Battery Foam Removal

NOTE

After you remove the Battery Foam, you cannot reuse it.



Use the Plastic Tweezer to remove the Battery Foam from the location as shown.

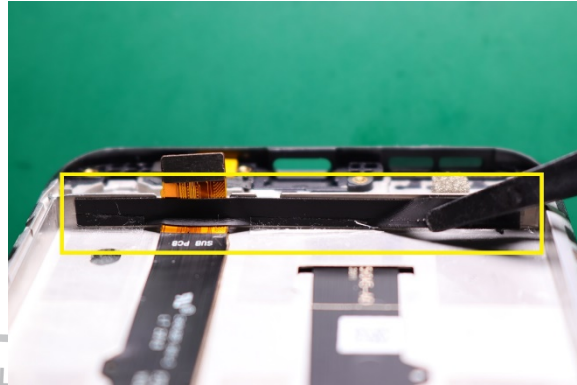


Main FPC Removal

NOTE

After you remove the Main Flex you cannot reuse it.



Use fingers to gently peel off the Main Flex as shown.

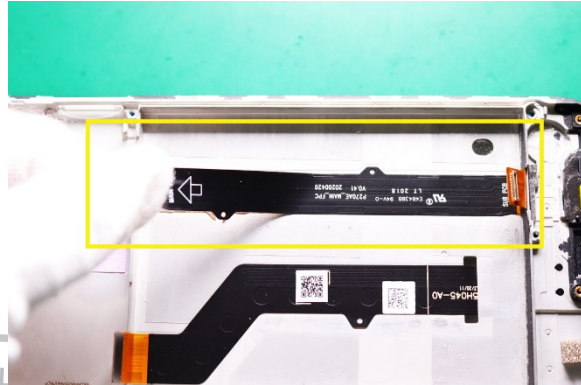


Rear-Facing Camera Lens Removal

NOTE

Remove the Rear-Facing Camera Lens only if it is defective or damaged.



Use the pointed end of the Black Stick to carefully disengage and push out the Rear-Facing Camera Lens from the location as shown.

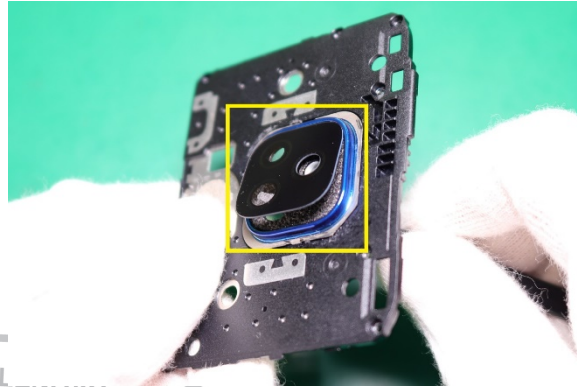



Fingerprint Sensor Conductive Foam Removal

NOTE

After you remove the Fingerprint Sensor Conductive Foam, you cannot reuse it.



Use the Plastic Tweezer to remove the Fingerprint Sensor Conductive Foam from the location as shown.

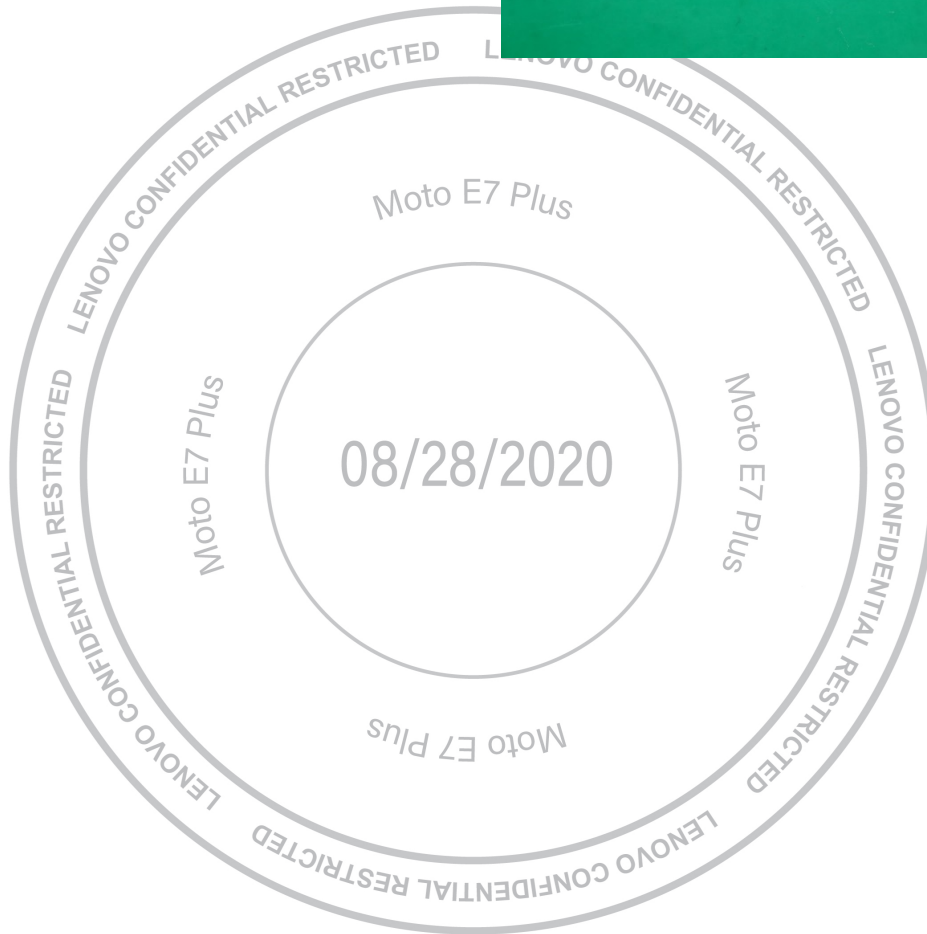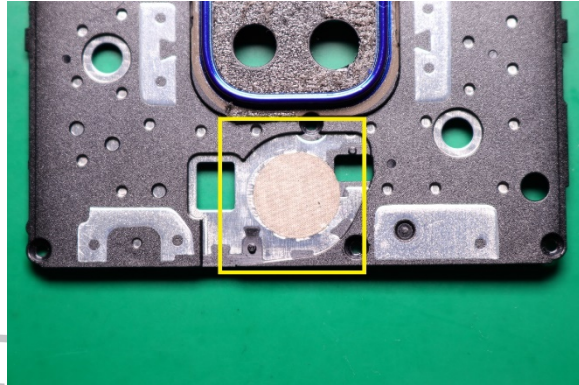


Side Key FPC Removal

NOTE

After you remove the Side Key FPC, you cannot reuse it.



Use the Plastic Tweezer to remove the Side Key FPC from the location as shown.

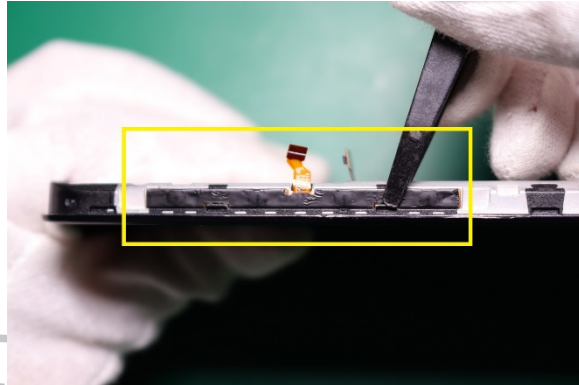


Side Key Waterproof Foam Removal

NOTE

After you remove the Side Key Waterproof Foam, you cannot reuse it.



Use the Plastic Tweezer to remove the Side Key Waterproof Foam from the location as shown.

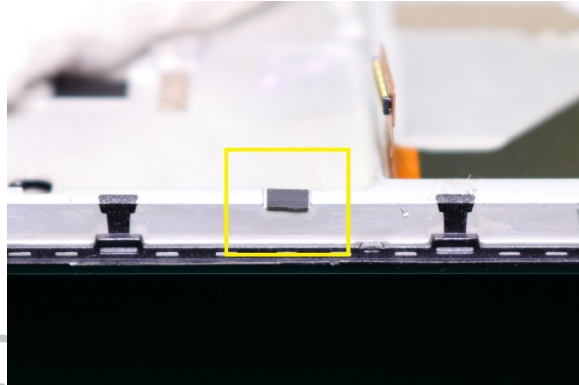


Receiver Sealed Foam Net Removal

NOTE

After you remove the Receiver Sealed Foam Net, you cannot reuse it.



Use the Plastic Tweezer to remove the Receiver Sealed Foam Net from the location as shown.

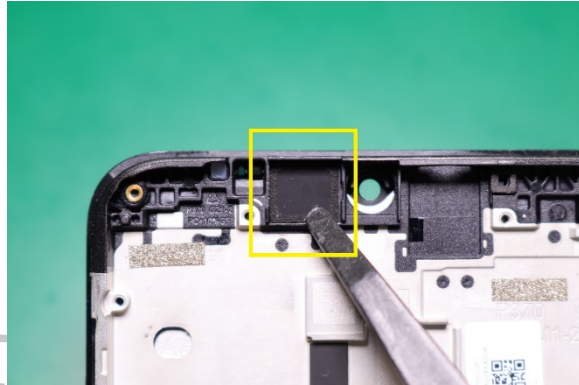


Silicon Light Guide Removal

NOTE

The Silicon Light Guide can be recovered and reused after removal.



Use the Plastic Tweezer to remove the Silicon Light Guide from the location as shown.

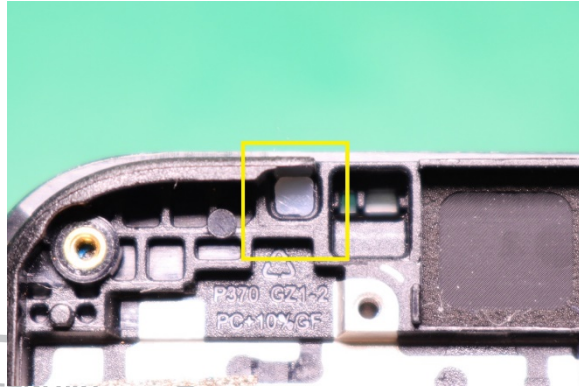


Sub Board Adhesive Removal

NOTE

After you remove the Sub Board Adhesive, you cannot reuse it.



Use the Plastic Tweezer to remove the Sub Board Adhesive from the location as shown.

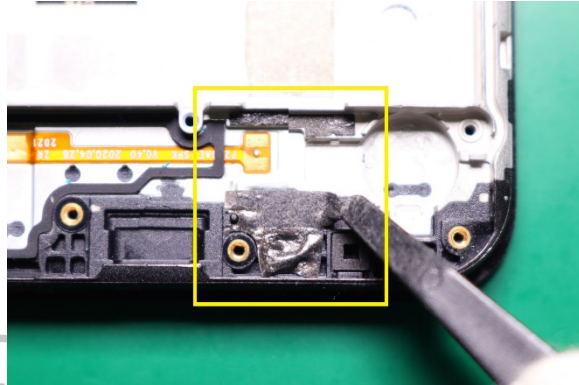


Sim Tray Grommet Removal

NOTE

After you remove the Sim Tray Grommet, you cannot reuse it.




Use the Plastic Tweezer to remove the Sim Tray Grommet from the location as shown.

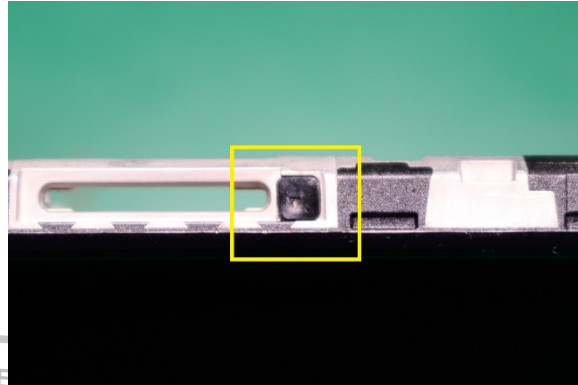

PARTS REFRESH

Tools Required for Parts Refresh

The following tools are required for parts refresh of the Moto E7 Plus phone.


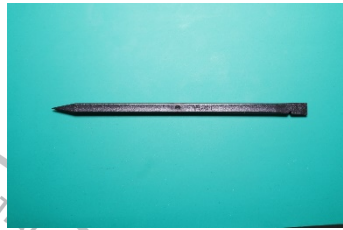
<i>Description</i>	<i>Part #</i>	<i>Image</i>
Plastic Tweezers	--	--
Black Stick	--	
ESD Mat	--	--
Wrist Strap	--	--
Isopropyl (ISP) Alcohol	--	--
Cotton Swabs	--	--
Cleaning Pads	--	--
Gloves or Finger Collets	--	--

Battery Cover Cleaning

Use the ISP Alcohol and Cotton Swabs to remove all the adhesives on the Battery Cover as shown.



/// CAUTION ///

Remove the adhesive carefully to avoid damage to the Battery Cover.

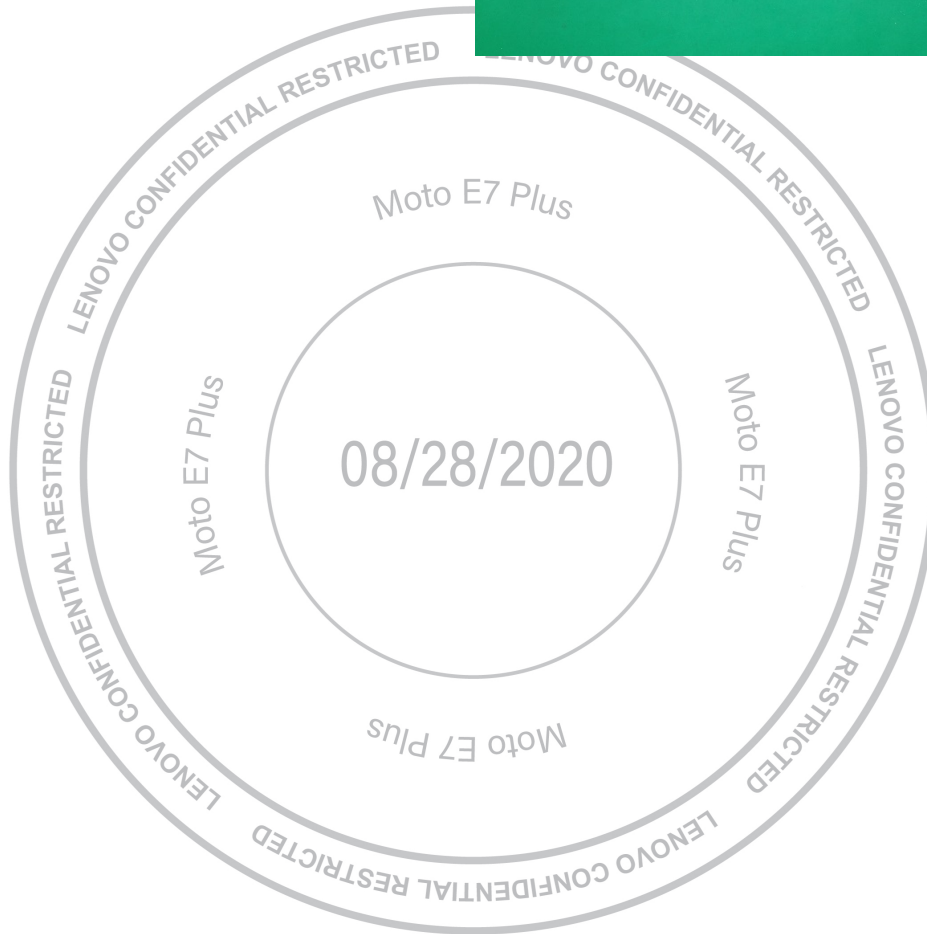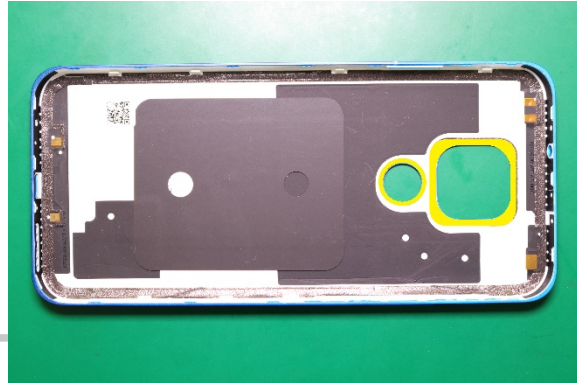



Front Housing Cleaning

Use the Cotton Swabs with ISP Alcohol to remove all the adhesives from the location as shown.

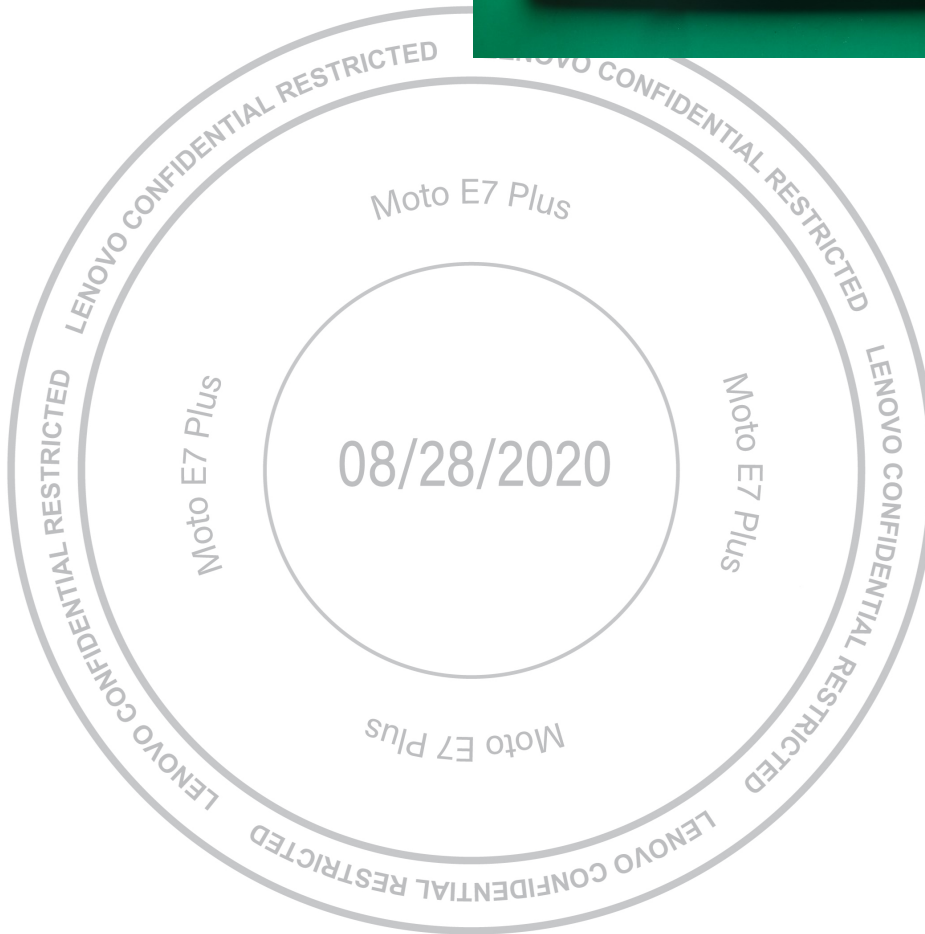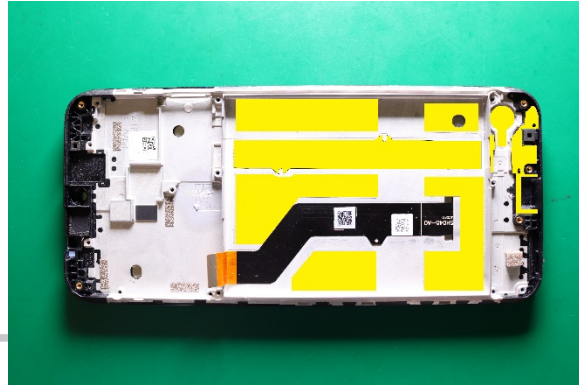


Top Bracket Cleaning

Use the Cotton Swabs with ISP Alcohol to remove all the adhesives from the location as shown.

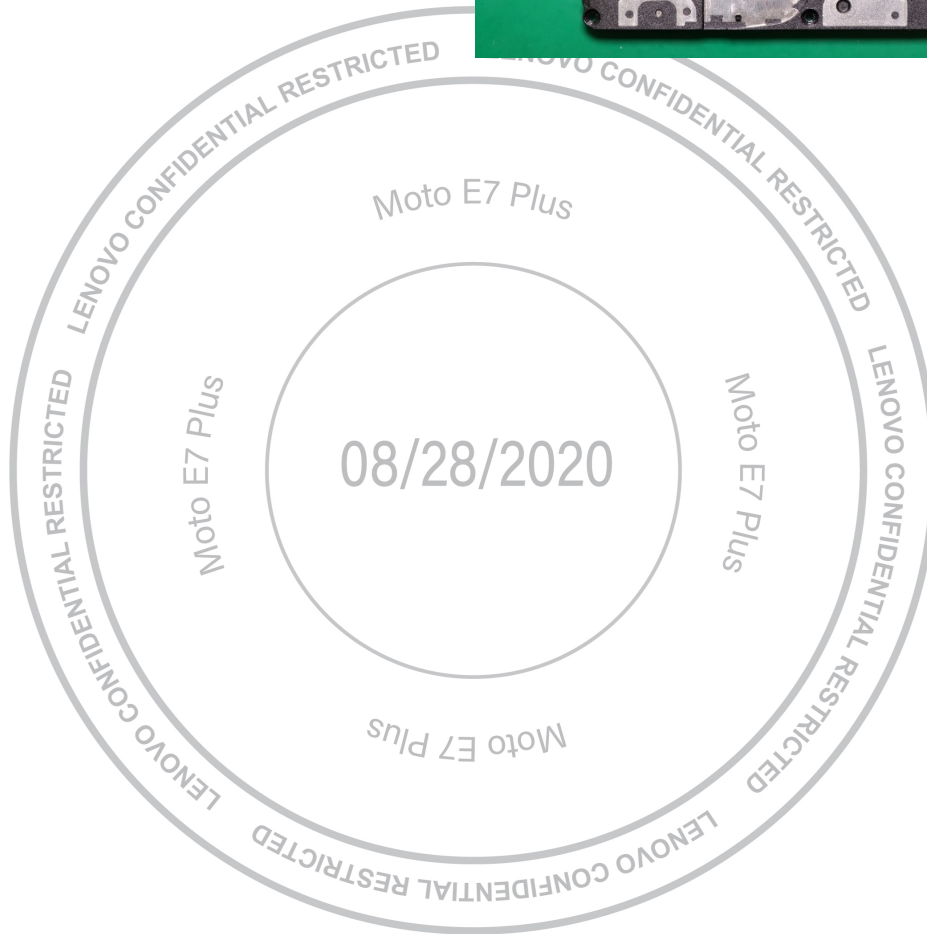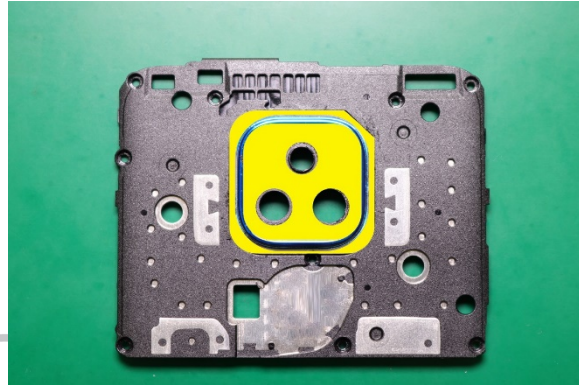



ASSEMBLY

Assembly Map

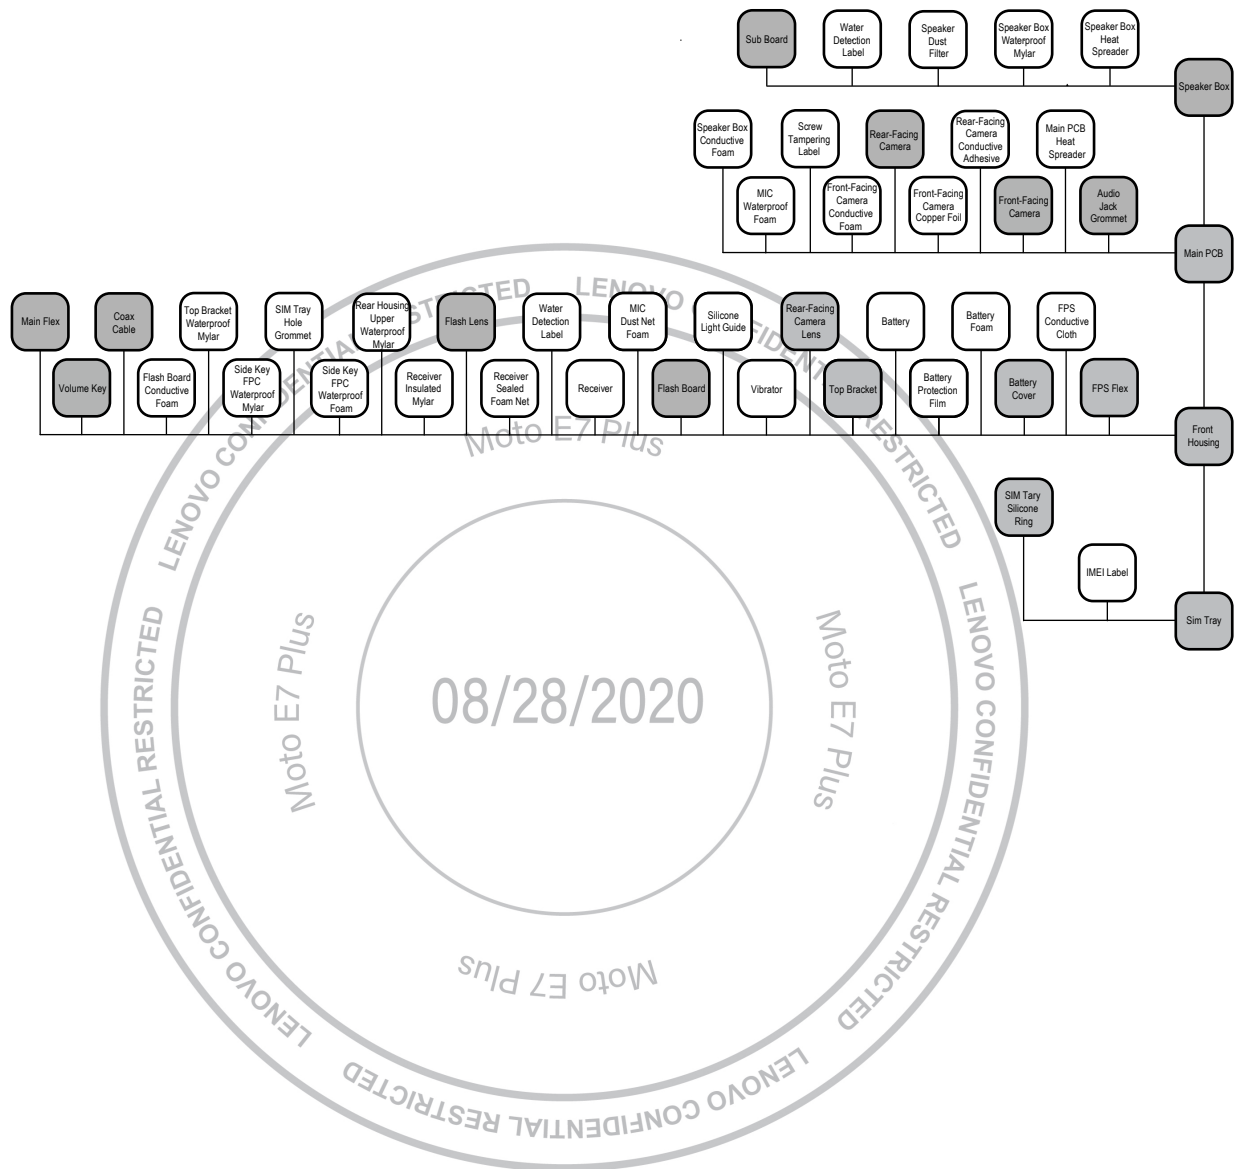

Tools Required for Assembly


The following tools are required to assemble the Moto E7 Plus phone.
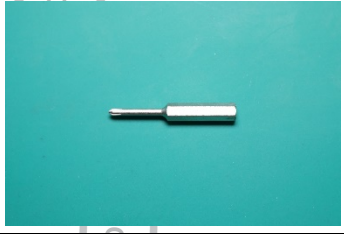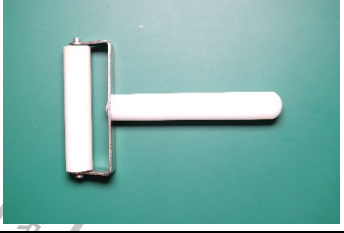
<i>Description</i>	<i>Part #</i>	<i>Picture/Drawing</i>
Black Stick	--	
Torque Driver	--	
PH00 Bit	--	
Manual Roller	--	
Plastic Tweezers	--	--
Tweezers	--	--
Gloves or Finger Collets	--	--


Sim Tray Hole Grommet Assembly

Description	Reference #
Guam+ TP LCM ASSY&S101-BQF130-000CS Guam+ TP LCM_IN&S101-BQF131-000CS	1
TNM716-BQE001-003+silicone sheet	-
TNM715-BQE001-010+silicone adhesive	-

1. Use Plastic Tweezer to place the Sim Tray Hole Grommet adhesive on the Front Housing as shown and peel off the liner.

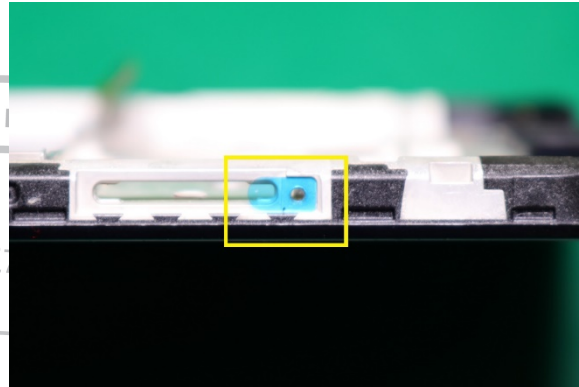


2. Use Plastic Tweezer to place the Sim Tray Hole Grommet on the Front Housing as shown.

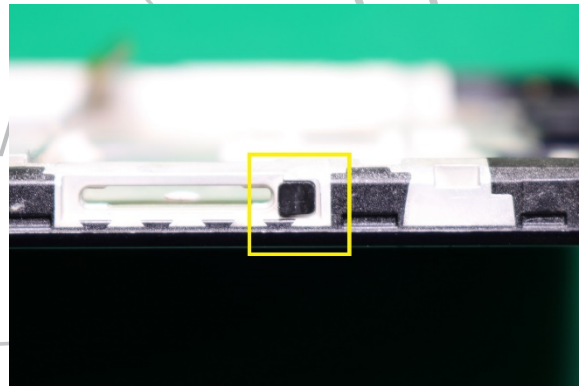

Side Key FPC Waterproof Foam Assembly

Description	Reference #
Guam+ TP LCM ASSY&S101-BQF130-000CS Guam+ TP LCM_IN&S101-BQF131-000CS	1
TNM709-BQE000-028+Waterproof foam	-



Use the Plastic Tweezer to place the Side Key FPC Waterproof Foam on the location as shown.

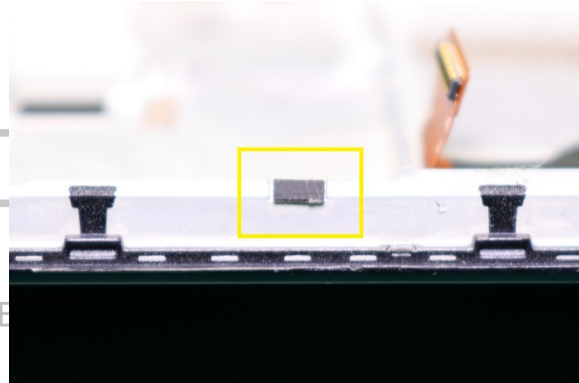

Side Key Assembly

Description	Reference #
Guam+ TP LCM ASSY&S101-BQF130-000CS Guam+ TP LCM_IN&S101-BQF131-000CS	1
TNN105-BQEB00-000+FPC_Sidekey_2_V0.2	18


Use the Plastic Tweezer to place the Side Key on the location as shown.

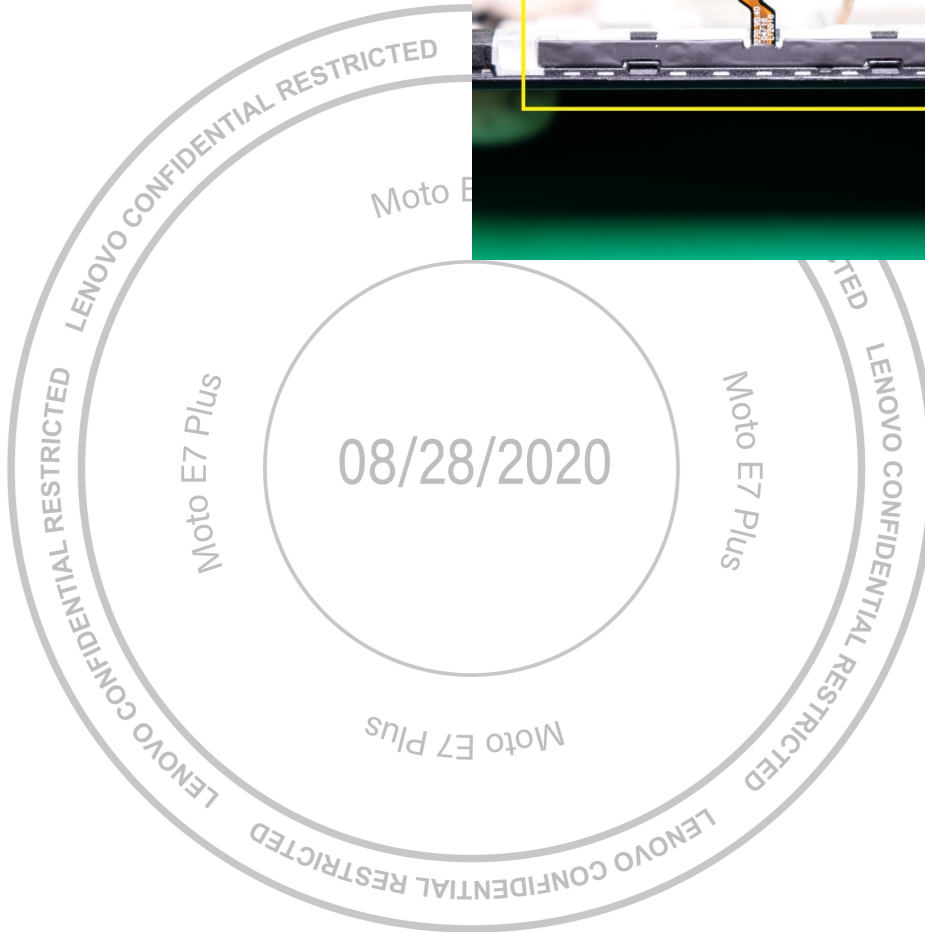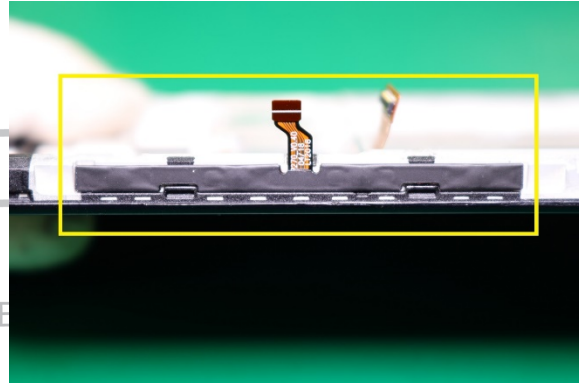

Silicone Light Guide Assembly

Description	Reference #
Guam+ TP LCM ASSY&S101-BQF130-000CS Guam+ TP LCM_IN&S101-BQF131-000CS	1
TNM716-BQE000-002+silicone light guide	-


1. Use new Silicone Light Guide as shown.

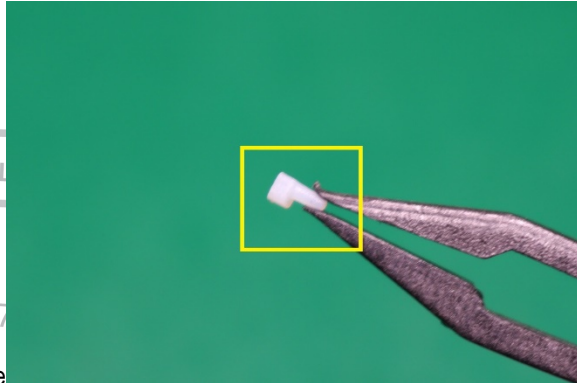

2. Use the Plastic Tweezer to place the Silicone Light Guide on the location as shown.

NOTE



The Silicone Light Guide is installed with the wide end facing down.

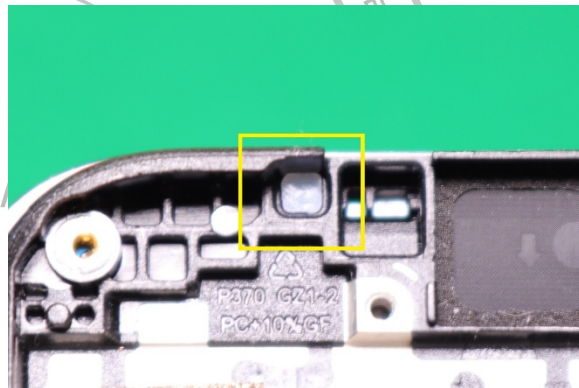

Water Detection Label Assembly

Description	Reference #
Guam+ TP LCM ASSY&S101-BQF130-000CS Guam+ TP LCM_IN&S101-BQF131-000CS	1
TNP316-096000-100+Water label	-


Use the Plastic Tweezer to place the Water Detection Label (WDL) on the Front-Housing as shown.

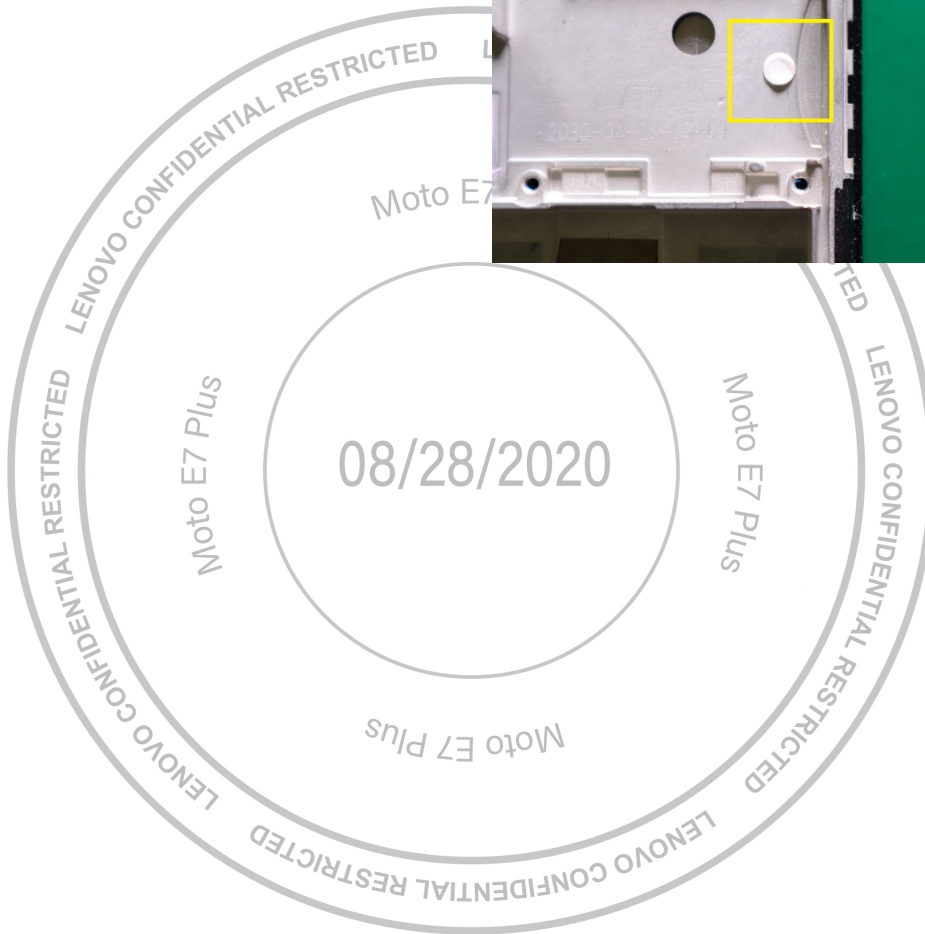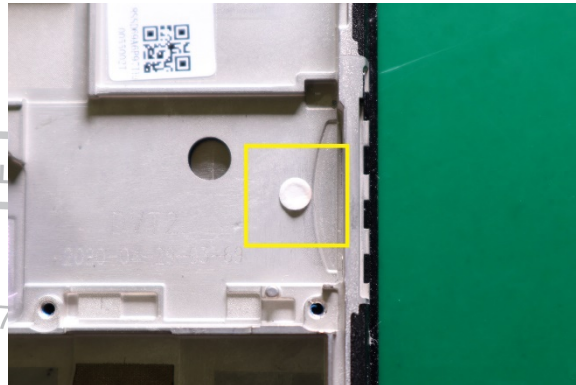

Speaker Box Conductive Foam Assembly

Description	Reference #
Guam+ TP LCM ASSY&S101-BQF130-000CS Guam+ TP LCM_IN&S101-BQF131-000CS	1
TNM709-BQE000-001 + conductive sponge	-


Use the Plastic Tweezer to place the Speaker Box Conductive Foam on the location as shown.

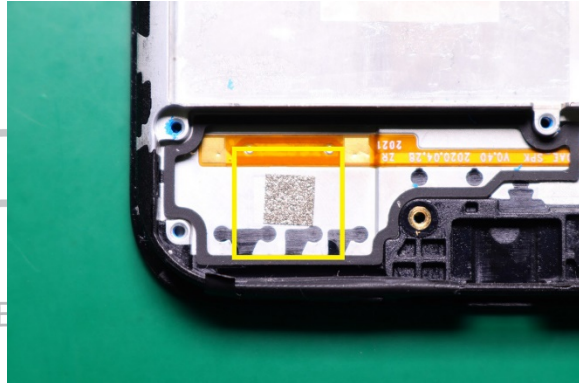

Vibrator Assembly

Description	Reference #
Guam+ TP LCM ASSY&S101-BQF130-000CS Guam+ TP LCM_IN&S101-BQF131-000CS	1
TNN901-BQF000-010+Coin Vibrator_JX	86


Use the Plastic Tweezer to place and secure the Vibrator on the location as shown.

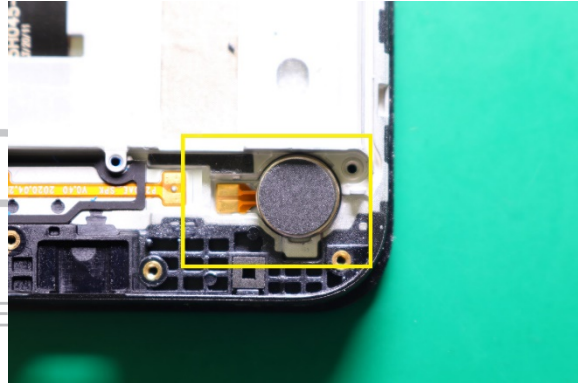

Water Detection Label Assembly

Description	Reference #
Guam+ TP LCM ASSY&S101-BQF130-000CS Guam+ TP LCM_IN&S101-BQF131-000CS	1
TNP316-096000-100+Water label	-



Use the Plastic Tweezer to place the Water Detection Label (WDL) on the Front-Housing as shown.

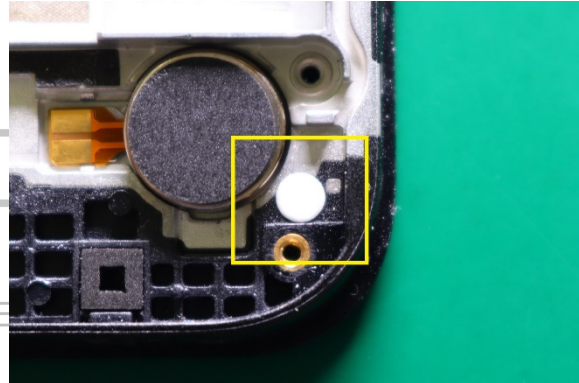

Receiver Sealed Foam Net Assembly

Description	Reference #
Guam+ TP LCM ASSY&S101-BQF130-000CS Guam+ TP LCM_IN&S101-BQF131-000CS	1
TNM709-BQE001-010+sealed foam net	12



Use the Plastic Tweezer to place the Receiver Sealed Foam Net on the location as shown and peel off the liner.

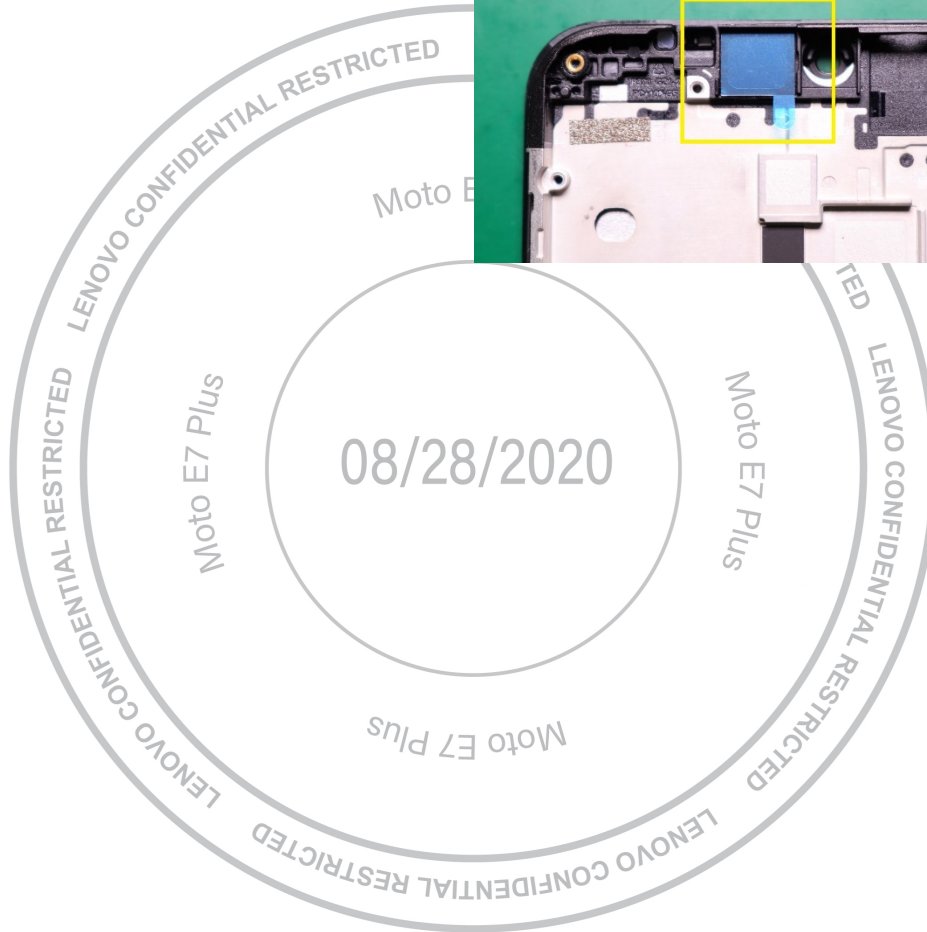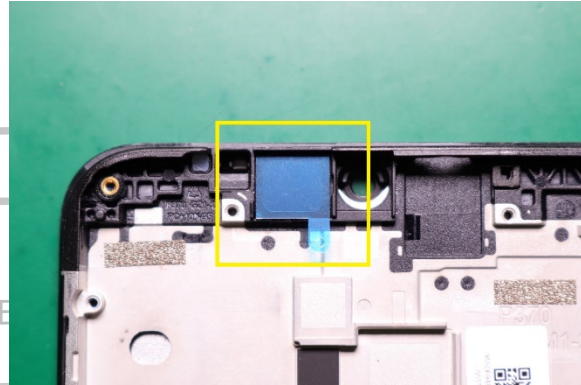

Receiver Assembly

Description	Reference #
Guam+ TP LCM ASSY&S101-BQF130-000CS Guam+ TP LCM_IN&S101-BQF131-000CS	1
TNN502-BQF000-010+shrapnel earpiece	34


Use the Plastic Tweezer to place the Receiver on the location aligning with the pins as shown.

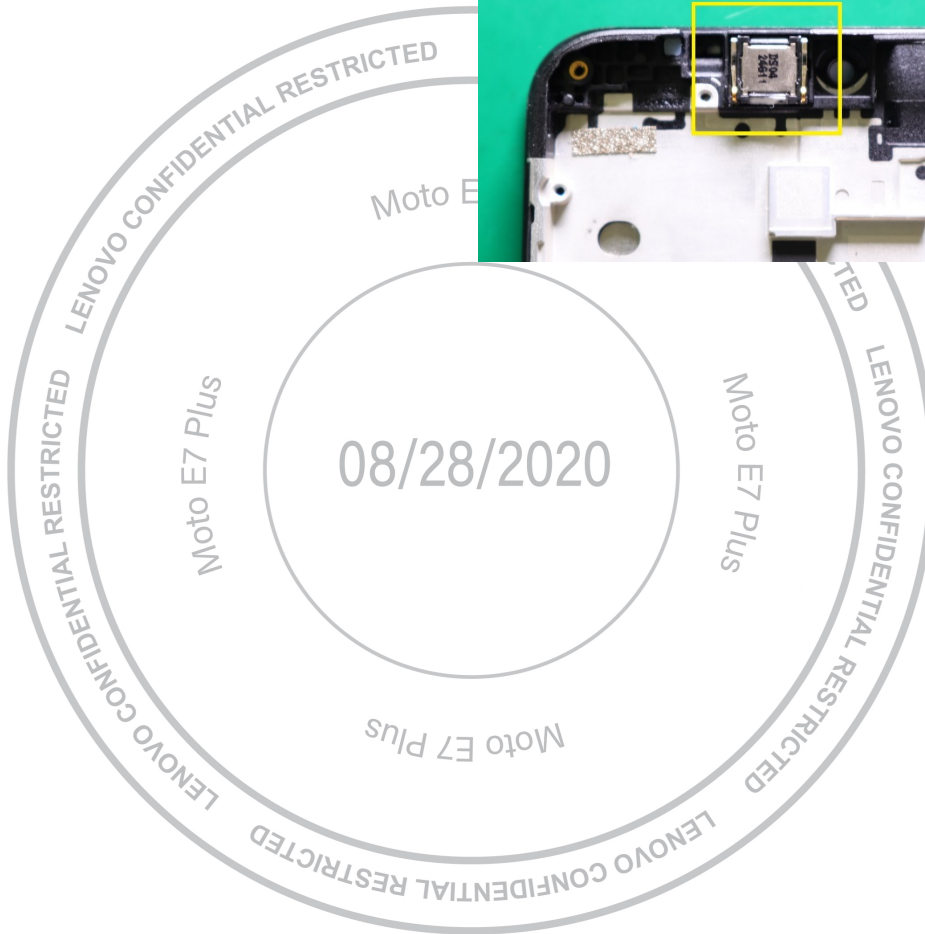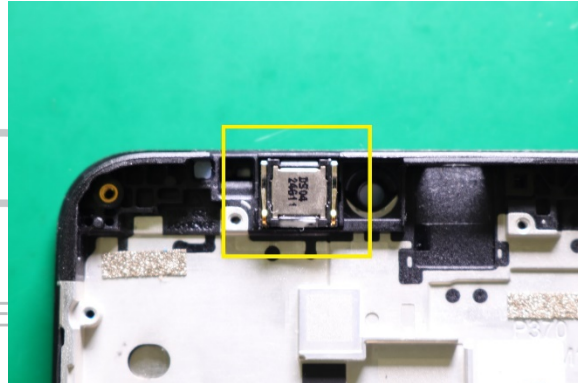

Receiver Insulated Adhesive Assembly

Description	Reference #
Guam+ TP LCM ASSY&S101-BQF130-000CS Guam+ TP LCM_IN&S101-BQF131-000CS	1
TNN502-BQF000-010+shrapnel earpiece	34
TNM701-BQE001-004+receiver insulated adh	36

Use the Plastic Tweezer to place the Receiver Insulated adhesive on the location as shown.

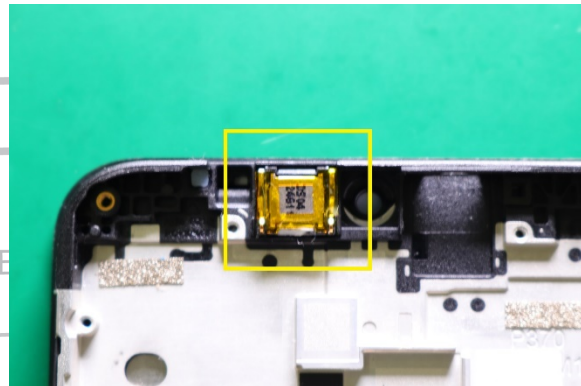

Receiver Inspection Assembly

Description	Reference #
Guam+ TP LCM ASSY&S101-BQF130-000CS Guam+ TP LCM_IN&S101-BQF131-000CS	1
TNN502-BQF000-010+shrapnel earpiece	34
TNM701-BQE001-004+receiver insulated adh	36


Inspect the insulating tape is assembled to the appropriate position.

NOTE

Make sure that insulating tape is completely covered on the both sides of the receiver as marked in yellow.

NOTE


Make sure that insulating tape does not cover the metal part as marked in red.

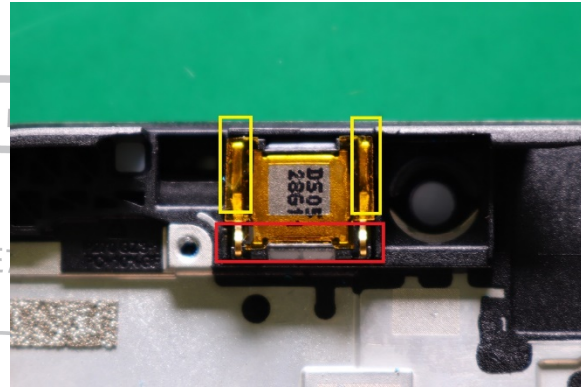

Audio Jack Assembly

Description	Reference #
XT2083-1 MB 4+64G DS&F00BQF3-000-000CS XT2083-1 MB 4+64G SS&F00BQF3-000-300CS XT2083-3 MB 4+64G DS&F00BQF3-000-100CS XT2083-4 MB 4+64G DS&F00BQF3-000-200CS XT2083-1 MB 4+64G AR&F00BQF3-000-600CS XT2083-3 MB 4+64G IN&F00BQF3-000-700CS ASSY,BD KIT,Guam+20 4+64 DS BR	19
TNM716-BQE001-000+silicone cover	17


Use the Plastic Tweezer to place the Audio Jack on the location as shown.

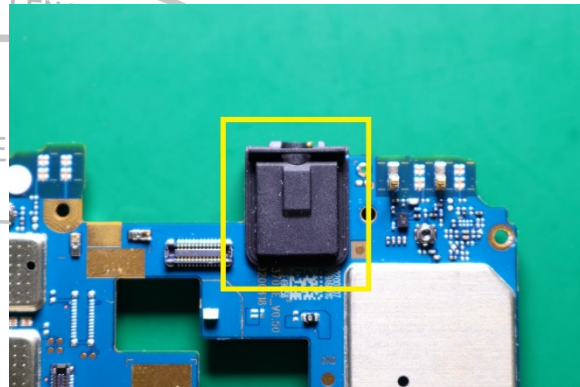

Water Detection Label Assembly

Description	Reference #
XT2083-1 MB 4+64G DS&F00BQF3-000-000CS XT2083-1 MB 4+64G SS&F00BQF3-000-300CS XT2083-3 MB 4+64G DS&F00BQF3-000-100CS XT2083-4 MB 4+64G DS&F00BQF3-000-200CS XT2083-1 MB 4+64G AR&F00BQF3-000-600CS XT2083-3 MB 4+64G IN&F00BQF3-000-700CS ASSY,BD KIT,Guam+20 4+64 DS BR	19
TNP316-096000-100+Water label	-


Use the Plastic Tweezer to place the Water Detection Label (WDL) on the Main PCB as shown.

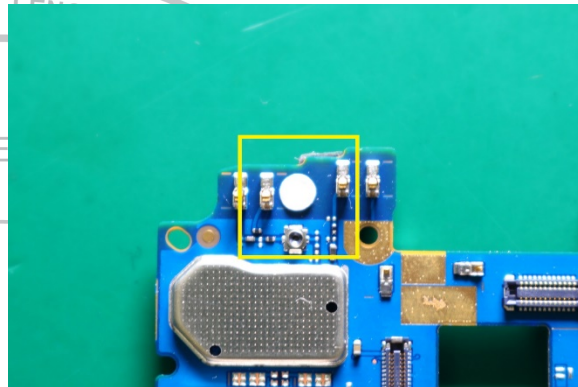

48M Rear-Facing Camera Assembly

Description	Reference #
XT2083-1 MB 4+64G DS&F00BQF3-000-000CS XT2083-1 MB 4+64G SS&F00BQF3-000-300CS XT2083-3 MB 4+64G DS&F00BQF3-000-100CS XT2083-4 MB 4+64G DS&F00BQF3-000-200CS XT2083-1 MB 4+64G AR&F00BQF3-000-600CS XT2083-3 MB 4+64G IN&F00BQF3-000-700CS ASSY,BD KIT,Guam+20 4+64 DS BR	19
MDL,CAMR,48M,after;LGM1AA0;O-FILM,AF:Gua	35


Use fingers to place and secure the 48M Rear-Facing Camera on the Main PCB as shown.

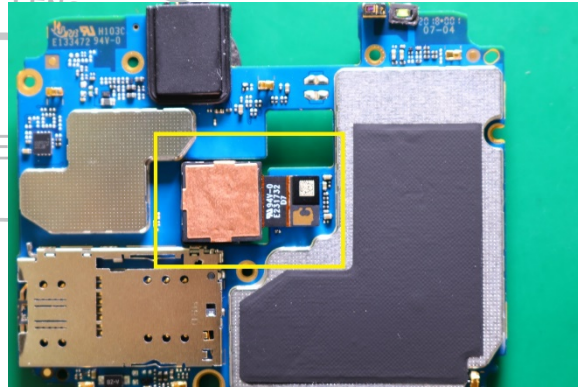

Flash Cover Sealed PET Assembly

Description	Reference #
XT2083-1 MB 4+64G DS&F00BQF3-000-000CS XT2083-1 MB 4+64G SS&F00BQF3-000-300CS XT2083-3 MB 4+64G DS&F00BQF3-000-100CS XT2083-4 MB 4+64G DS&F00BQF3-000-200CS XT2083-1 MB 4+64G AR&F00BQF3-000-600CS XT2083-3 MB 4+64G IN&F00BQF3-000-700CS ASSY,BD KIT,Guam+20 4+64 DS BR	19
TNM702-BQE000-000+Flash cover sealed PET	35


Use fingers to place and secure the Flash Cover Sealed PET on the Main PCB as shown.

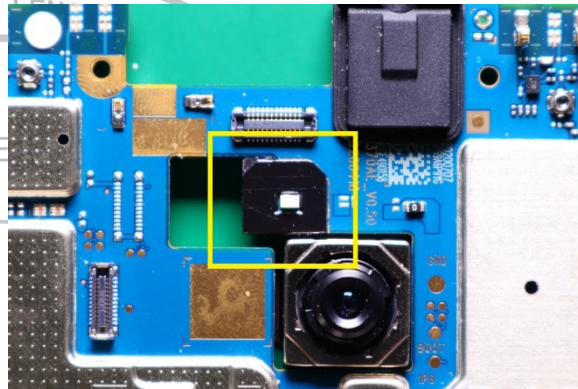

Flash Cover Foam Assembly

Description	Reference #
XT2083-1 MB 4+64G DS&F00BQF3-000-000CS XT2083-1 MB 4+64G SS&F00BQF3-000-300CS XT2083-3 MB 4+64G DS&F00BQF3-000-100CS XT2083-4 MB 4+64G DS&F00BQF3-000-200CS XT2083-1 MB 4+64G AR&F00BQF3-000-600CS XT2083-3 MB 4+64G IN&F00BQF3-000-700CS ASSY,BD KIT,Guam+20 4+64 DS BR	19
TNM709-BQE000-030+Flash cover foam	35


Use fingers to place and secure the Flash Cover Foam on the Main PCB as shown.

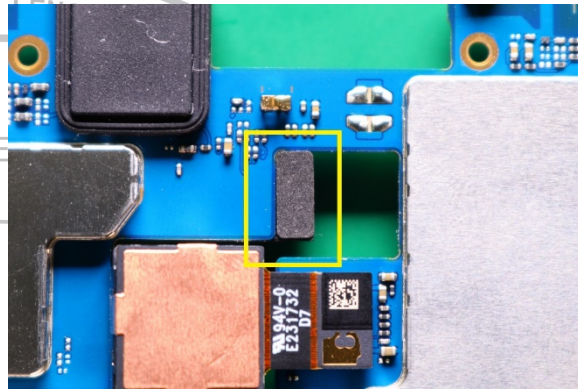


Main PCB Assembly

Description	Reference #
Guam+ TP LCM ASSY&S101-BQF130-000CS Guam+ TP LCM_IN&S101-BQF131-000CS	1
XT2083-1 MB 4+64G DS&F00BQF3-000-000CS XT2083-1 MB 4+64G SS&F00BQF3-000-300CS XT2083-3 MB 4+64G DS&F00BQF3-000-100CS XT2083-4 MB 4+64G DS&F00BQF3-000-200CS XT2083-1 MB 4+64G AR&F00BQF3-000-600CS XT2083-3 MB 4+64G IN&F00BQF3-000-700CS ASSY,BD KIT,Guam+20 4+64 DS BR	19
TNM501-211103-011+round head screw	-

1. Use fingers to place the Main PCB on the location as shown.

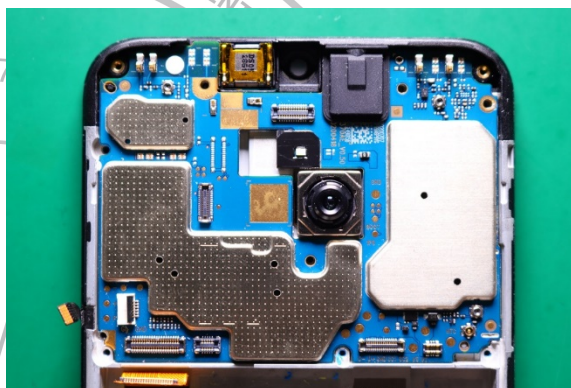


2. Use the Torque Driver with PH00 Bit to tighten the two screws as shown (0.6 ± 0.1 kgf.cm).

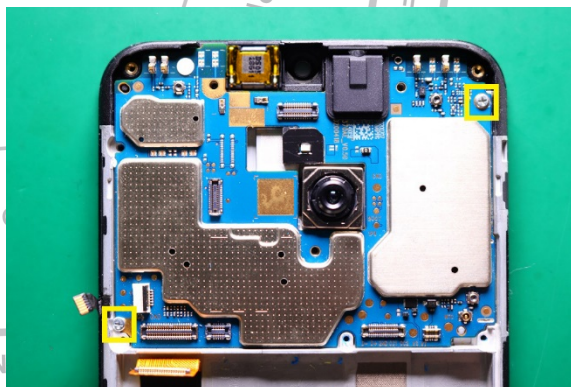

Rear-Facing Camera Conductive Adhesive Assembly

<i>Description</i>	<i>Reference #</i>
MDL,CAMR,2M,Rear,Nairobi,tacoma;FOV;Ofil	42
TNM709-BQF001-000+Posterior adhesive	41


Use fingers to place and secure the Rear-Facing Camera Conductive Adhesive on the location as shown and peel off the liner.

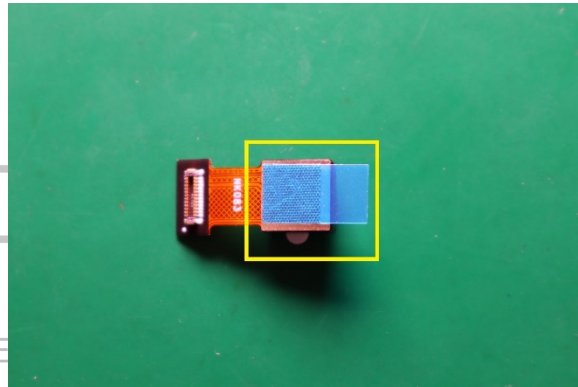

2M Macro Rear-Facing Camera Assembly

Description	Reference #
Guam+ TP LCM ASSY&S101-BQF130-000CS Guam+ TP LCM_IN&S101-BQF131-000CS	1
XT2083-1 MB 4+64G DS&F00BQF3-000-000CS XT2083-1 MB 4+64G SS&F00BQF3-000-300CS XT2083-3 MB 4+64G DS&F00BQF3-000-100CS XT2083-4 MB 4+64G DS&F00BQF3-000-200CS XT2083-1 MB 4+64G AR&F00BQF3-000-600CS XT2083-3 MB 4+64G IN&F00BQF3-000-700CS ASSY,BD KIT,Guam+20 4+64 DS BR	19
TNM709-BQF001-000+Posterior adhesive	41
MDL,CAMR,2M,Rear,Nairobi,tacoma;FOV;Ofil	42


Use fingers to place and secure the 2M Macro Rear-Facing Camera on the Main PCB as shown.

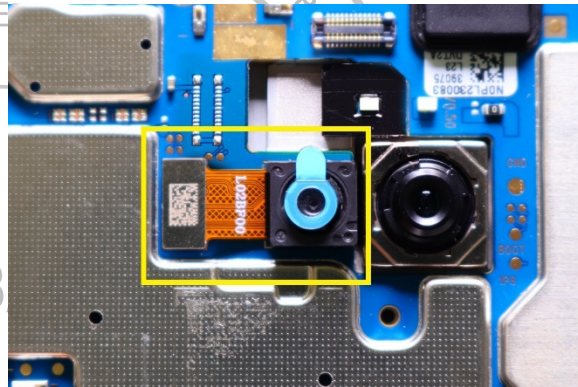

Primary MIC Waterproof Foam Assembly

Description	Reference #
XT2083-1 Sub Board&S102-BQF000-000CS XT2083-3 Sub Board&S102-BQF001-000CS ASSY,DTR BRD,Guam+20 4+64 DS BR XT2083-4 sub board&S102-BQF002-000CS	85
TNM709-BQE000-027+waterproof foam	90


Use the Plastic Tweezer to place the Primary
MIC Waterproof Foam on the location as shown.

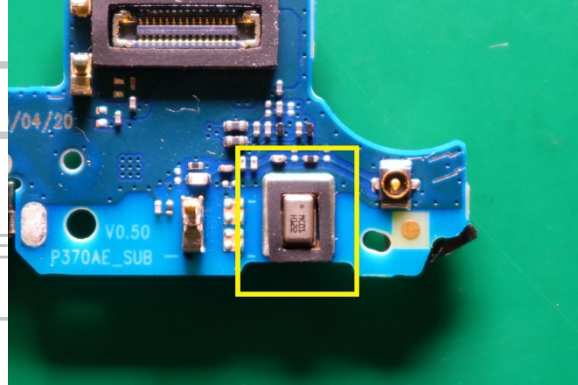

Sub Board Adhesive Assembly

Description	Reference #
Guam+ TP LCM ASSY&S101-BQF130-000CS Guam+ TP LCM_IN&S101-BQF131-000CS	1
TNM715-BQE000-003+fixed adhesive	89


Use the Plastic Tweezer to place and secure the Sub Board Adhesive on the location as shown and peel off the liner.

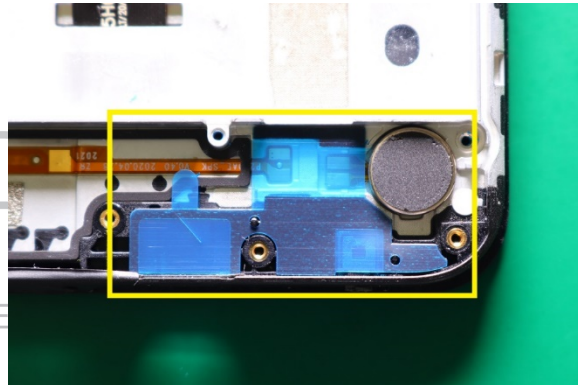

Sub Board Assembly

Description	Reference #
Guam+ TP LCM ASSY&S101-BQF130-000CS Guam+ TP LCM_IN&S101-BQF131-000CS	1
XT2083-1 Sub Board&S102-BQF000-000CS XT2083-3 Sub Board&S102-BQF001-000CS ASSY,DTR BRD,Guam+20 4+64 DS BR XT2083-4 sub board&S102-BQF002-000CS	85


Use fingers to place the Sub Board on the location as shown.

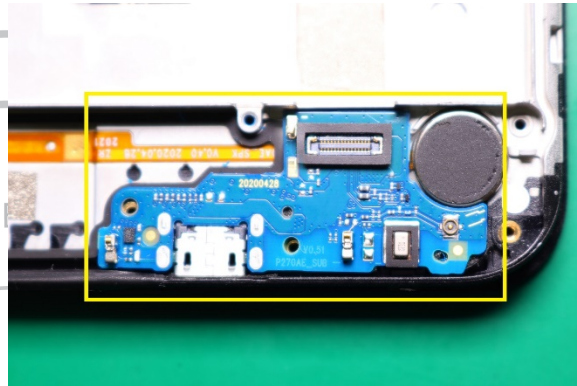


Main FPC Assembly

Description	Reference #
Guam+ TP LCM ASSY&S101-BQF130-000CS Guam+ TP LCM_IN&S101-BQF131-000CS	1
XT2083-1 MB 4+64G DS&F00BQF3-000-000CS XT2083-1 MB 4+64G SS&F00BQF3-000-300CS XT2083-3 MB 4+64G DS&F00BQF3-000-100CS XT2083-4 MB 4+64G DS&F00BQF3-000-200CS XT2083-1 MB 4+64G AR&F00BQF3-000-600CS XT2083-3 MB 4+64G IN&F00BQF3-000-700CS ASSY,BD KIT,Guam+20 4+64 DS BR	19
TNN800-BQE000-000+MAINFPC_V0.2	83
XT2083-1 Sub Board&S102-BQF000-000CS XT2083-3 Sub Board&S102-BQF001-000CS ASSY,DTR BRD,Guam+20 4+64 DS BR XT2083-4 sub board&S102-BQF002-000CS	85

1. Use fingers to place and secure the Main Flex BtB Connector on the Sub Board as shown.

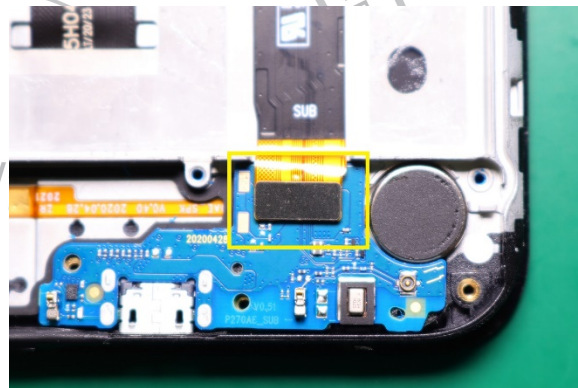


2. Use the Plastic Tweezer to peel off the liner from the bottom of the Main FPC as shown.

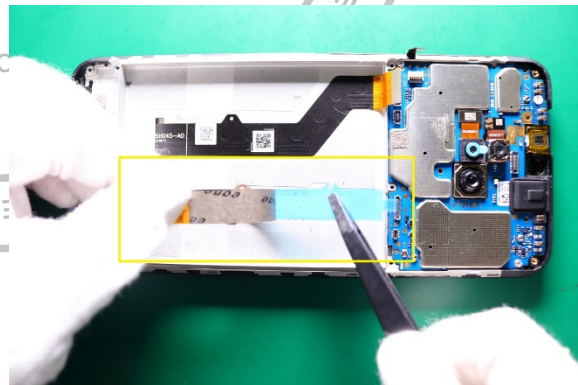

Lenovo Moto E7 Plus

Level 2 – Service and Repair Manual


3. Use fingers to place and secure the Main Flex BtB Connector on the Main PCB as shown.

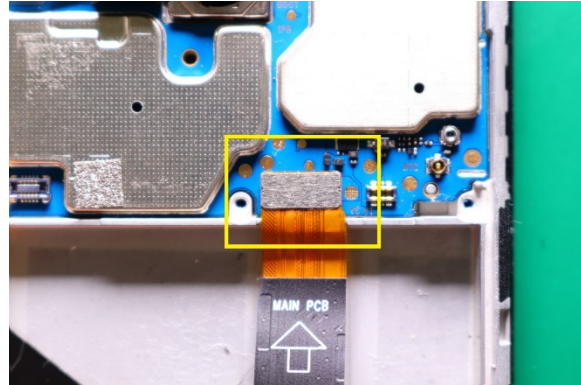


4. Use fingers to carefully place the Main Flex on the phone as shown, sticky side down.

NOTE


Be sure the printing on the Main Flex is oriented in relation to the Front Housing as shown.

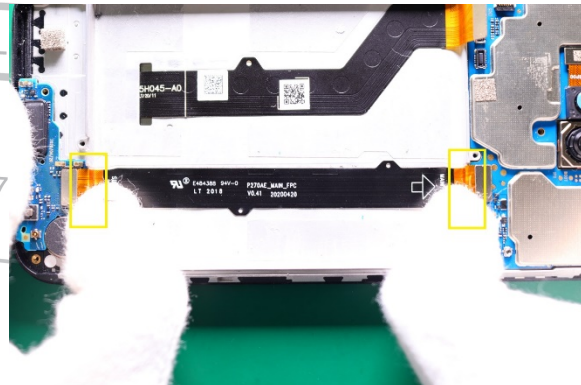

5. Use fingers to place the Display BtB Connector on the Main PCB as shown.

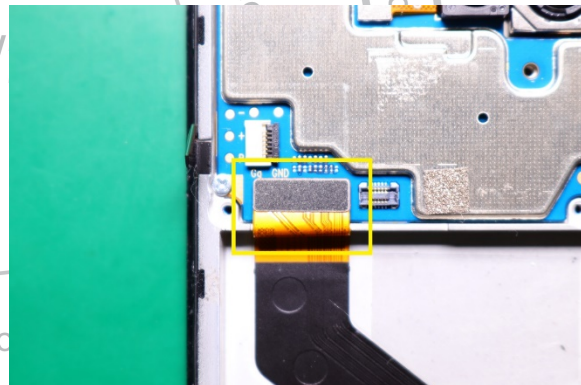


6. Use the Plastic Tweezer to place the Side Key BtB Connector on the Main PCB as shown.

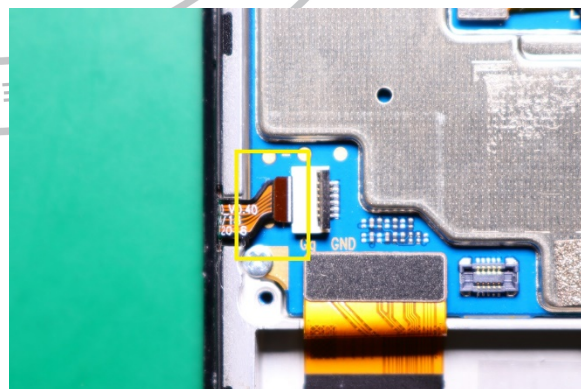

Lenovo Moto E7 Plus

Level 2 – Service and Repair Manual


7. Use fingers to press and secure the Side Key FPC lock as shown.

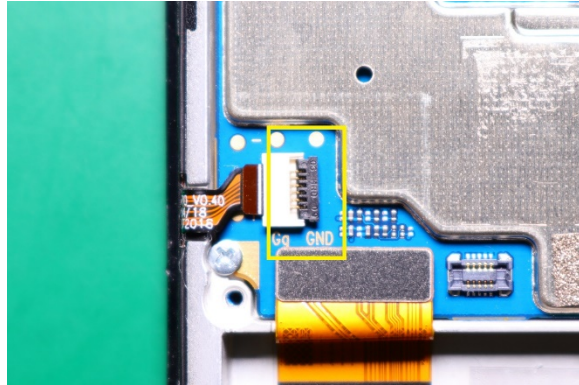

Battery Foam Assembly

<i>Description</i>	<i>Reference #</i>
Guam+ TP LCM ASSY&S101-BQF130-000CS Guam+ TP LCM_IN&S101-BQF131-000CS	1
TNM709-BQE001-032+Battery buffer foam	79


Use the Plastic Tweezer to place and secure the Battery Foam on the location as shown.

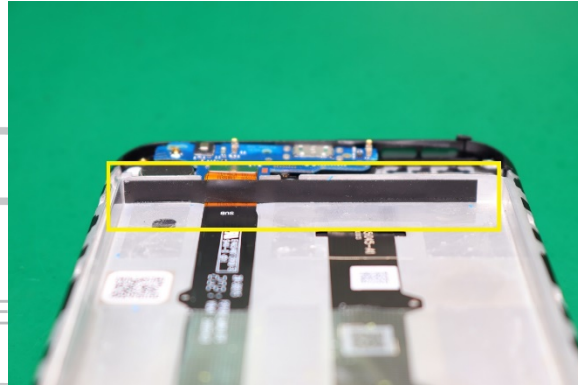


Coax Cable Assembly

Description	Reference #
Guam+ TP LCM ASSY&S101-BQF130-000CS Guam+ TP LCM_IN&S101-BQF131-000CS	1
XT2083-1 MB 4+64G DS&F00BQF3-000-000CS XT2083-1 MB 4+64G SS&F00BQF3-000-300CS XT2083-3 MB 4+64G DS&F00BQF3-000-100CS XT2083-4 MB 4+64G DS&F00BQF3-000-200CS XT2083-1 MB 4+64G AR&F00BQF3-000-600CS XT2083-3 MB 4+64G IN&F00BQF3-000-700CS ASSY,BD KIT,Guam+20 4+64 DS BR	19
TNEI06-320813-000+RF coaxial cable	82
XT2083-1 Sub Board&S102-BQF000-000CS XT2083-3 Sub Board&S102-BQF001-000CS ASSY,DTR BRD,Guam+20 4+64 DS BR XT2083-4 sub board&S102-BQF002-000CS	85

1. Use the Plastic Tweezer to place the Coax Cable on the Main PCB as shown.

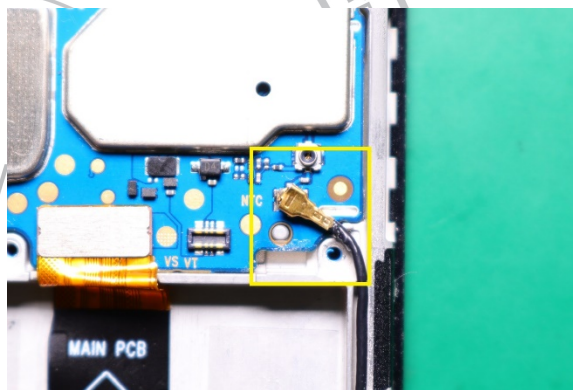


2. Use the Plastic Tweezer to place the Coax Cable on the Sub Board as shown.

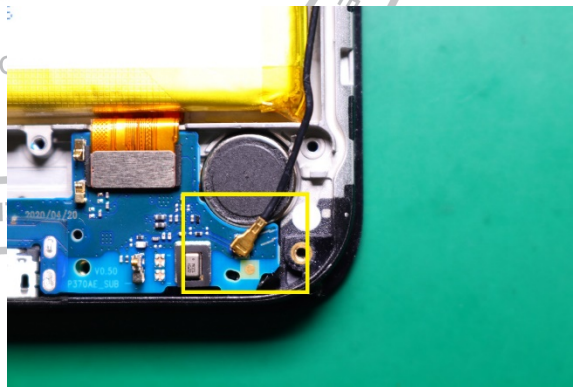


Lenovo Moto E7 Plus

Level 2 – Service and Repair Manual

3. Use fingers to place and secure the Coax Cable in the pocket on the recess of the phone.

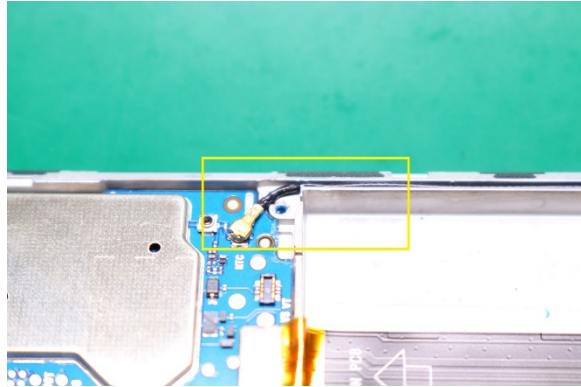


4. Use fingers to place and secure the Coax Cable in the pocket on the recess of the phone.

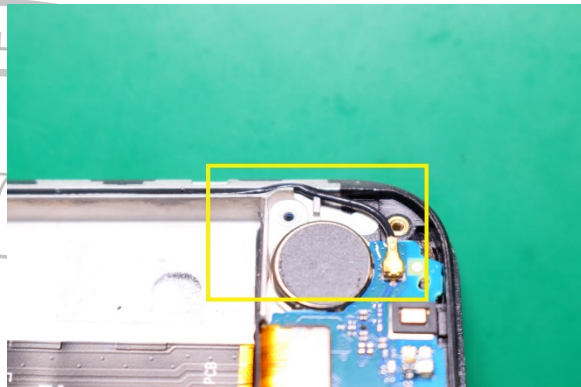

Front-Facing Camera Assembly

Description	Reference #
Guam+ TP LCM ASSY&S101-BQF130-000CS Guam+ TP LCM_IN&S101-BQF131-000CS	1
XT2083-1 MB 4+64G DS&F00BQF3-000-000CS XT2083-1 MB 4+64G SS&F00BQF3-000-300CS XT2083-3 MB 4+64G DS&F00BQF3-000-100CS XT2083-4 MB 4+64G DS&F00BQF3-000-200CS XT2083-1 MB 4+64G AR&F00BQF3-000-600CS XT2083-3 MB 4+64G IN&F00BQF3-000-700CS ASSY,BD KIT,Guam+20 4+64 DS BR	19
MDL,CAMR,8M,FF,Titan20;8M;L4H7FP0;Ofilm	39

Use fingers to place and secure the Front-Facing Camera on the Main PCB as shown.

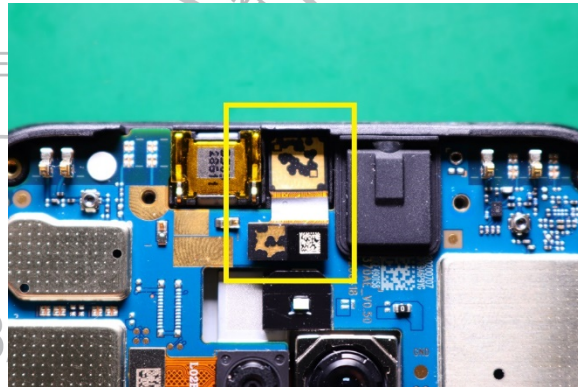


Front-Facing Camera Copper Foil Assembly

Description	Reference #
Guam+ TP LCM ASSY&S101-BQF130-000CS Guam+ TP LCM_IN&S101-BQF131-000CS	1
XT2083-1 MB 4+64G DS&F00BQF3-000-000CS XT2083-1 MB 4+64G SS&F00BQF3-000-300CS XT2083-3 MB 4+64G DS&F00BQF3-000-100CS XT2083-4 MB 4+64G DS&F00BQF3-000-200CS XT2083-1 MB 4+64G AR&F00BQF3-000-600CS XT2083-3 MB 4+64G IN&F00BQF3-000-700CS ASSY,BD KIT,Guam+20 4+64 DS BR	19
TNM719-BQE001-001+ground copper foil	43

Use the Plastic Tweezer to place and secure the Front-Facing Camera Copper Foil on the location as shown.

NOTE


Make sure that upper part of Front-Facing Camera Foil is attached to the opening position of the insulating tape on the receiver and the lower part should be assembled aligning with PCBA line.

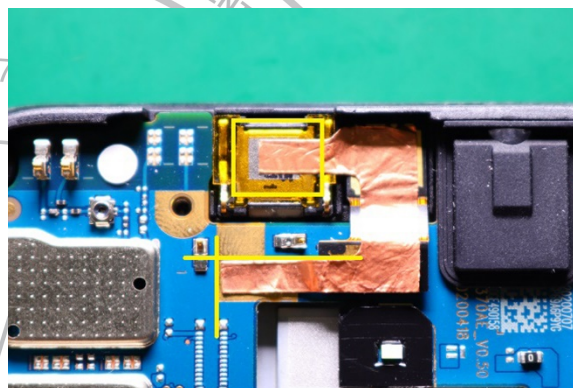

Front-Facing Camera Conductive Foam Assembly

Description	Reference #
Guam+ TP LCM ASSY&S101-BQF130-000CS Guam+ TP LCM_IN&S101-BQF131-000CS	1
XT2083-1 MB 4+64G DS&F00BQF3-000-000CS XT2083-1 MB 4+64G SS&F00BQF3-000-300CS XT2083-3 MB 4+64G DS&F00BQF3-000-100CS XT2083-4 MB 4+64G DS&F00BQF3-000-200CS XT2083-1 MB 4+64G AR&F00BQF3-000-600CS XT2083-3 MB 4+64G IN&F00BQF3-000-700CS ASSY,BD KIT,Guam+20 4+64 DS BR	19
TNM709-BQF001-004+proactive 8M foam	46

Use the Plastic Tweezer to place and secure the Front-Facing Camera Conductive Foam on the location as shown.

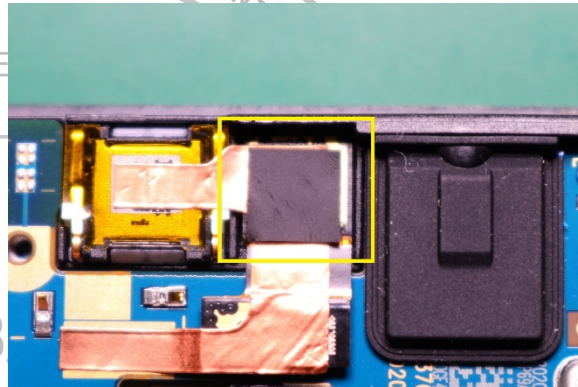

Battery Assembly

Description	Reference #
Guam+ TP LCM ASSY&S101-BQF130-000CS Guam+ TP LCM_IN&S101-BQF131-000CS	1
XT2083-1 MB 4+64G DS&F00BQF3-000-000CS XT2083-1 MB 4+64G SS&F00BQF3-000-300CS XT2083-3 MB 4+64G DS&F00BQF3-000-100CS XT2083-4 MB 4+64G DS&F00BQF3-000-200CS XT2083-1 MB 4+64G AR&F00BQF3-000-600CS XT2083-3 MB 4+64G IN&F00BQF3-000-700CS ASSY,BD KIT,Guam+20 4+64 DS BR	19
ACCY,BAT,5000mAh,JK50,ATL486585,ATL,BIS	80
TNM715-BQE001-005+battery adhesive	91

/// WARNING ///

Failure to adhere to Safety Critical Note(s) may increase risk of rupture, burning, or failure to function safely when used by the customer. Refer to the Battery Safety Guidelines.

// CAUTION //


Handle the Battery Pack with care. If dropped to the floor, it may be internally damaged and must be scrapped.

Ensure Battery and its insulation are not damaged (e.g. scratched, dented, punctured) prior to and throughout assembly.

Prior to assembly, ensure Battery edges and surfaces are not dented or deformed, and that fixtures and parts that will contact the Battery are free of foreign material.


Ensure screws and screwdrivers do not contact the Battery.

1. Place the Battery Adhesive on the location as shown and peel off the liner.

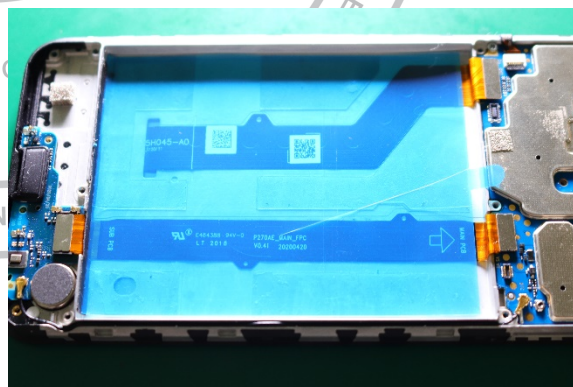

Lenovo Moto E7 Plus Level 2 – Service and Repair Manual

2. Use fingers to place the Battery on the Front Housing as shown.

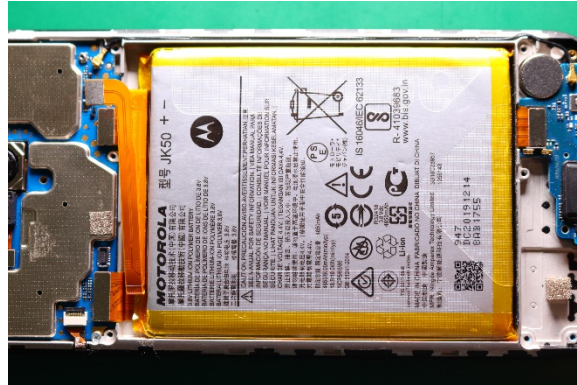

3. Use fingers to press and secure the Battery BtB Connector as shown.



4. Use the Manual Roller to roll over the Battery for 10 cycles to secure the Battery as shown.

NOTE

For each cycle roll the Manual Roller from top to bottom of the Battery and vice versa.

NOTE


Each cycle should last for 3 seconds.



Fingerprint Sensor Assembly

Description	Reference #
Guam+ TP LCM ASSY&S101-BQF130-000CS Guam+ TP LCM_IN&S101-BQF131-000CS	1
XT2083-1 MB 4+64G DS&F00BQF3-000-000CS XT2083-1 MB 4+64G SS&F00BQF3-000-300CS XT2083-3 MB 4+64G DS&F00BQF3-000-100CS XT2083-4 MB 4+64G DS&F00BQF3-000-200CS XT2083-1 MB 4+64G AR&F00BQF3-000-600CS XT2083-3 MB 4+64G IN&F00BQF3-000-700CS ASSY,BD KIT,Guam+20 4+64 DS BR	19
FINGERPRT SCANNER,GF3658,Dark Green,Kerr FINGERPRT SCANNER,ELEC blue,GF3658,krr FINGERPRT SCANNER,SPR pink,GF3658,kerr	44

Use fingers to place and secure the Fingerprint sensor on the location as shown.

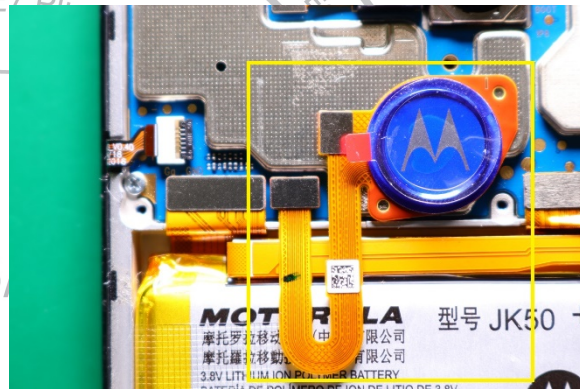


Rear-Facing Camera Lens Assembly

Description	Reference #
XT2083-1 Rear Cover_BG&S101-BQF030-000CS XT2083-1 Rear Cover_BE&S101-BQF420-000CS XT2083-1 Rear Cover_SP&S101-BQF104-000CS XT2083-3 Rear Cover_BG&S101-BQF034-000CS XT2083-3 Rear Cover_BE&S101-BQF421-000CS XT2083-3 Rear Cover_SP&S101-BQF100-000CS	49
TNM715-BQE000-004+rear lens back	61
TNM205-BQE130-000+rear lens	62

1. Use the Plastic Tweezer to place the Rear-Facing Camera Lens adhesive on the location as shown and peel off the liner.




2. Use the Plastic Tweezer to place the Rear-Facing Camera Lens on the location as shown.

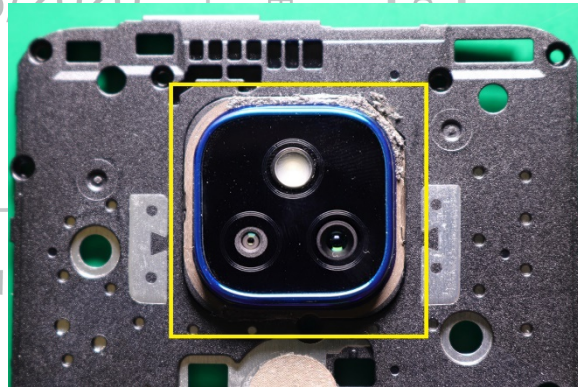

FPS Ground Conductive Cloth Assembly

Description	Reference #
XT2083-1 Rear Cover_BG&S101-BQF030-000CS XT2083-1 Rear Cover_BE&S101-BQF420-000CS XT2083-1 Rear Cover_SP&S101-BQF104-000CS XT2083-3 Rear Cover_BG&S101-BQF034-000CS XT2083-3 Rear Cover_BE&S101-BQF421-000CS XT2083-3 Rear Cover_SP&S101-BQF100-000CS	49
TNM717-BQE001-000+ground conductivecloth	40

Use the Plastic Tweezer to place and secure the FPS Ground Conductive Cloth on the location as shown.

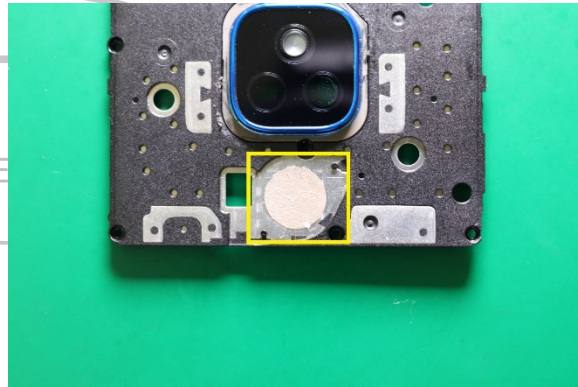

Top Bracket Assembly

Description	Reference #
Guam+ TP LCM ASSY&S101-BQF130-000CS Guam+ TP LCM_IN&S101-BQF131-000CS	1
XT2083-1 Rear Cover_BG&S101-BQF030-000CS XT2083-1 Rear Cover_BE&S101-BQF420-000CS XT2083-1 Rear Cover_SP&S101-BQF104-000CS XT2083-3 Rear Cover_BG&S101-BQF034-000CS XT2083-3 Rear Cover_BE&S101-BQF421-000CS XT2083-3 Rear Cover_SP&S101-BQF100-000CS	49
TNM501-211102-020+round head screw	64
TNM501-211105-006+round head screw_LJT	-

1. Use fingers to place the Top Bracket on the location as shown.




2. Use fingers to place the FPS on the Top Bracket aligning with the pins as shown.



3. Use the Torque Driver with PH00 Bit to tighten the nine screws as shown (0.6 ± 0.1 kgf.cm).

Note


The screw used at this position would have two different types as shown. Black screws are marked in yellow and silver in red. Be careful to use the same color screw while repairing the phones.

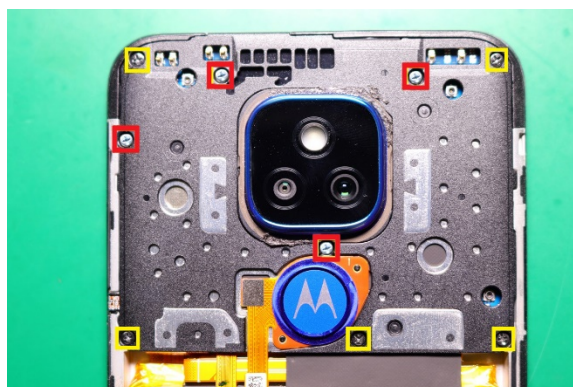

Screw Tampering Label Assembly

Description	Reference #
Guam+ TP LCM ASSY&S101-BQF130-000CS Guam+ TP LCM_IN&S101-BQF131-000CS	1
XT2083-1 Rear Cover_BG&S101-BQF030-000CS XT2083-1 Rear Cover_BE&S101-BQF420-000CS XT2083-1 Rear Cover_SP&S101-BQF104-000CS XT2083-3 Rear Cover_BG&S101-BQF034-000CS XT2083-3 Rear Cover_BE&S101-BQF421-000CS XT2083-3 Rear Cover_SP&S101-BQF100-000CS	49
TNP316-000000-100+label	-



Use the Plastic Tweezer to place and secure the Screw Tampering Label on the location as shown.

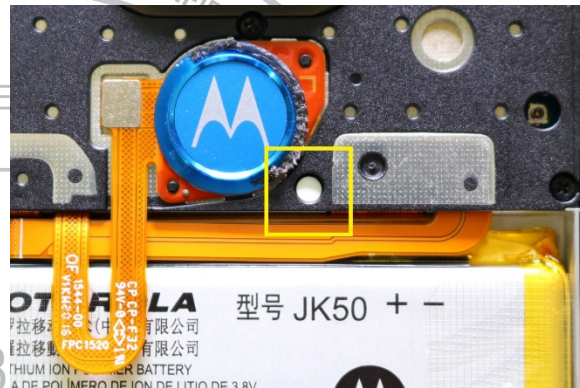

Top Bracket Waterproof Film Assembly

Description	Reference #
Guam+ TP LCM ASSY&S101-BQF130-000CS Guam+ TP LCM_IN&S101-BQF131-000CS	1
TNM701-BQE001-002+waterproof film	60

Use the Plastic Tweezer to place and secure the Top Bracket Waterproof Film on the location as shown.

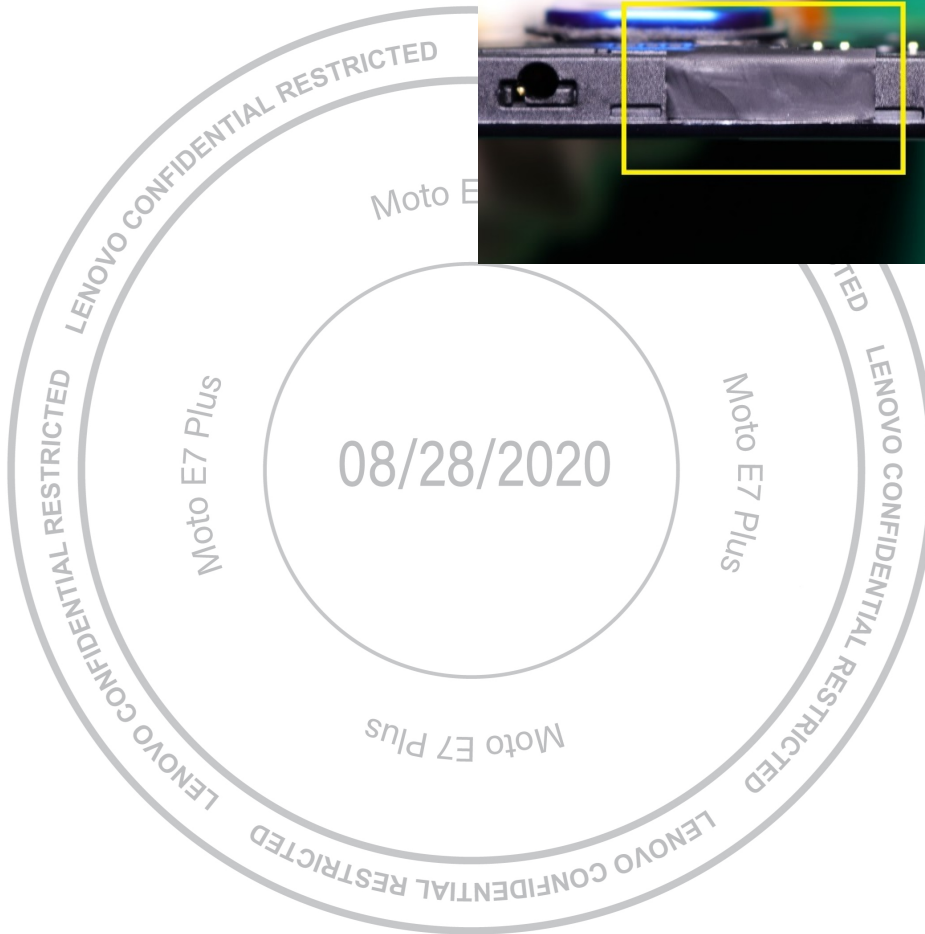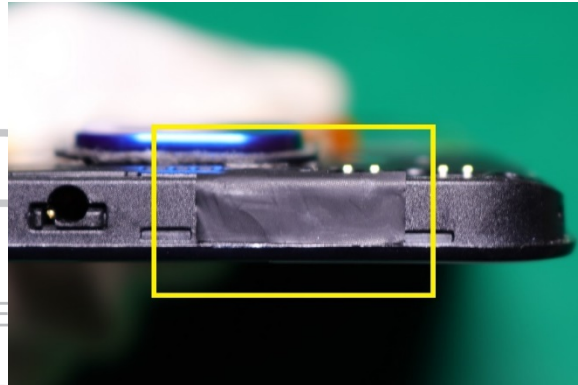

Rear-Housing Upper Waterproof Assembly

Description	Reference #
Guam+ TP LCM ASSY&S101-BQF130-000CS Guam+ TP LCM_IN&S101-BQF131-000CS	1
XT2083-1 Rear Cover_BG&S101-BQF030-000CS XT2083-1 Rear Cover_BE&S101-BQF420-000CS XT2083-1 Rear Cover_SP&S101-BQF104-000CS XT2083-3 Rear Cover_BG&S101-BQF034-000CS XT2083-3 Rear Cover_BE&S101-BQF421-000CS XT2083-3 Rear Cover_SP&S101-BQF100-000CS	49
TNM701-BQF000-001+waterproof sticker	-



Use the Plastic Tweezer to place and secure the Rear-Housing Upper Waterproof on the location as shown.



Side Key FPC Waterproof Assembly

Description	Reference #
Guam+ TP LCM ASSY&S101-BQF130-000CS Guam+ TP LCM_IN&S101-BQF131-000CS	1
TNM701-BQE000-005+P270AE waterproof MEM	20



Use the Plastic Tweezer to place and secure the Side Key FPC Waterproof on the location as shown.

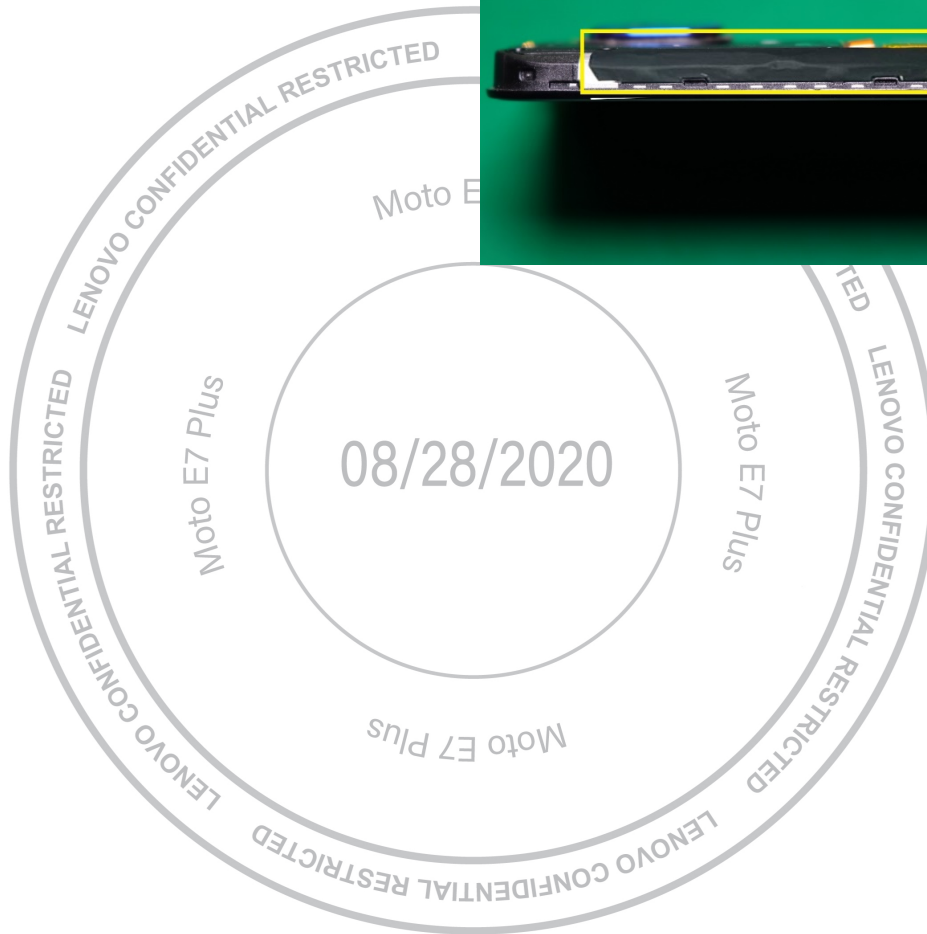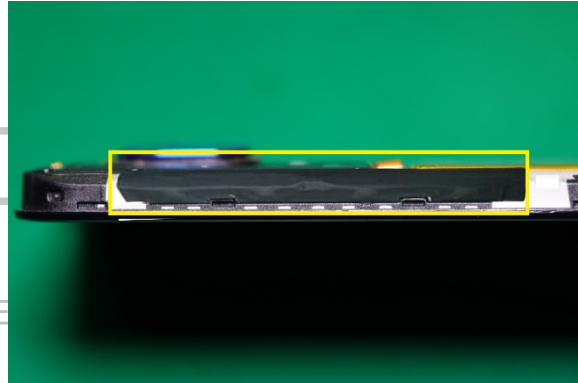

Speaker Sealing Foam Assembly

Description	Reference #
Guam+ Speaker BOX&N506-BQF001-000CS	75
TNM709-BQE000-012+Front sealing foam	-



Use the Plastic Tweezer to place and secure the Speaker Sealing Foam on the location as shown.

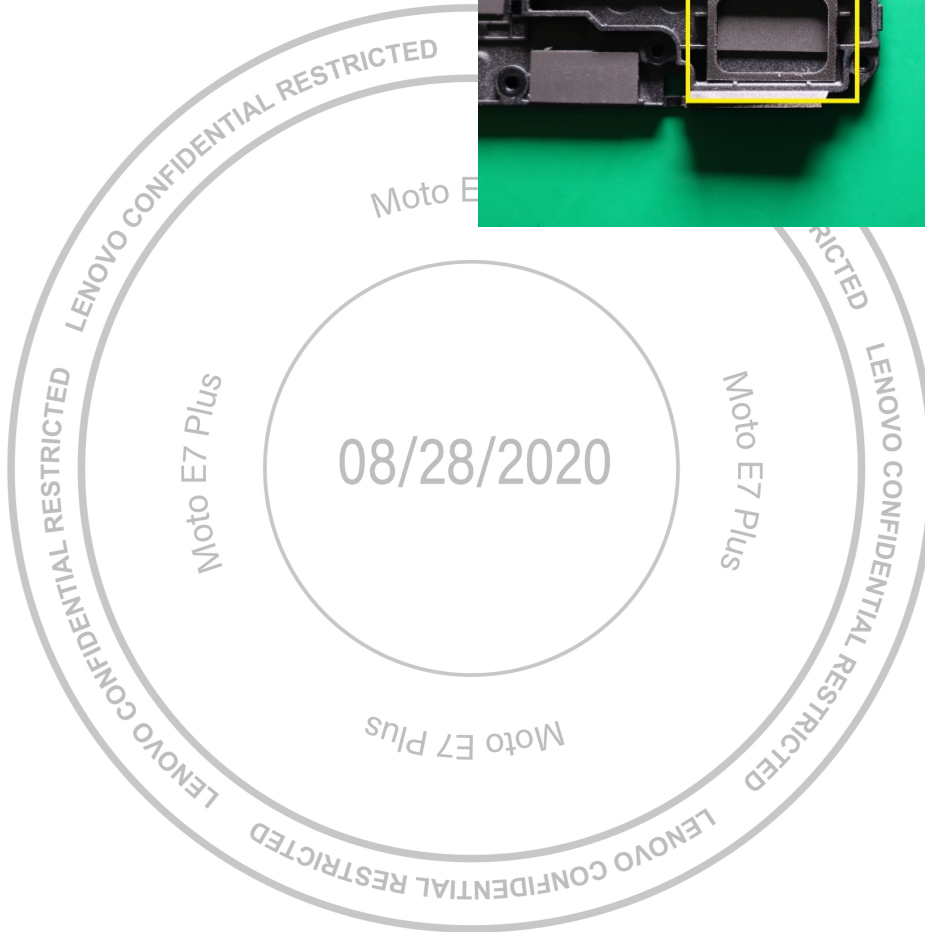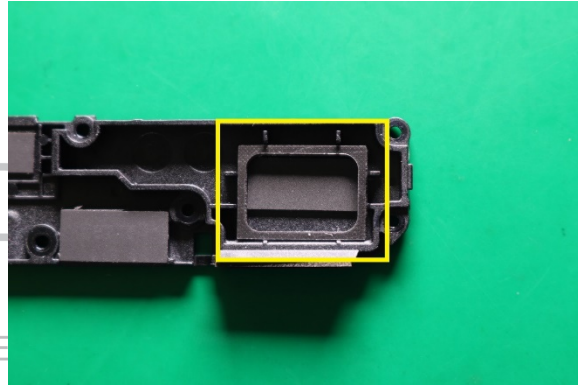

Shrapnel Speaker Assembly

Description	Reference #
Guam+ Speaker BOX&N506-BQF001-000CS	75
TNN501-BQF000-010+shrapnel speaker	-


Use the Plastic Tweezer to place and secure the Shrapnel Speaker on the location as shown.

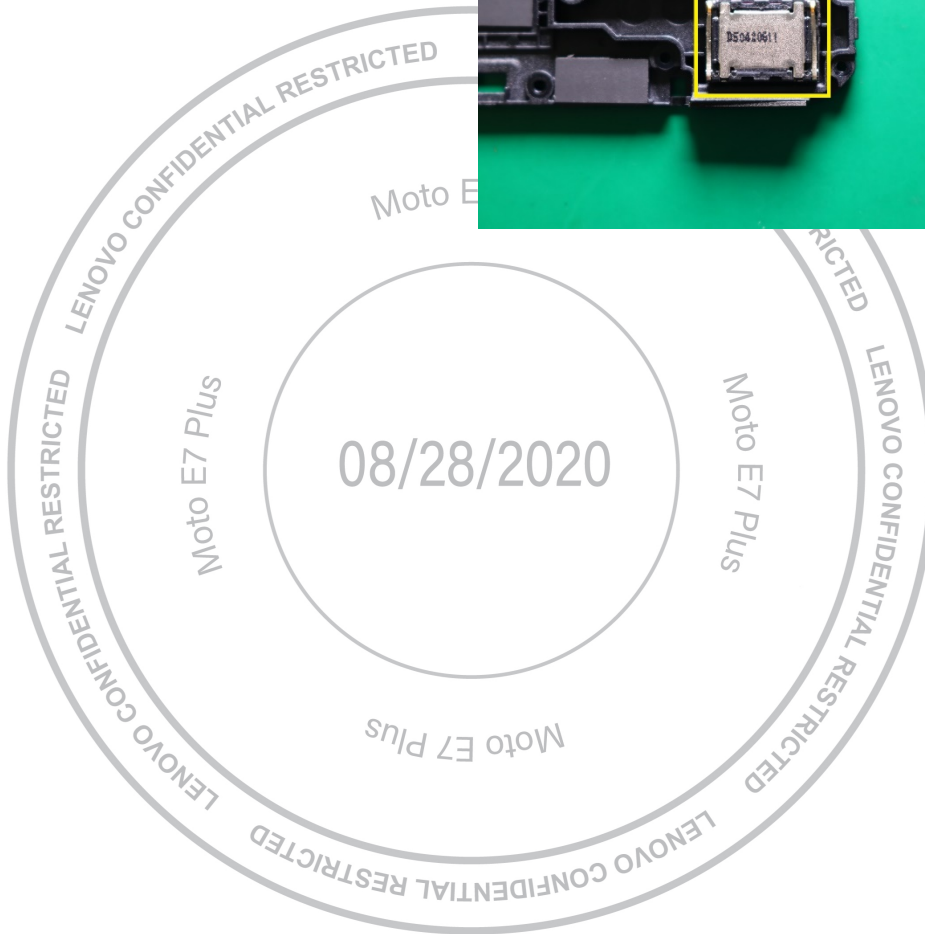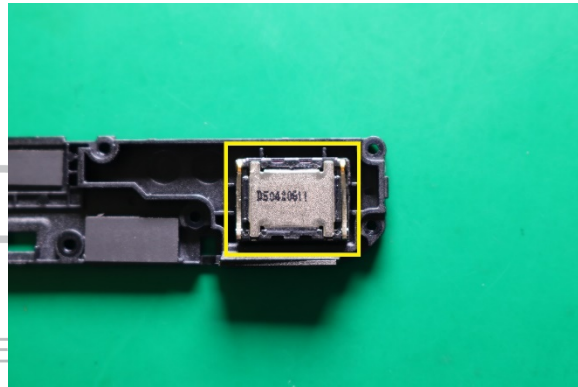

Speaker Insulated Mylar Assembly

Description	Reference #
Guam+ Speaker BOX&N506-BQF001-000CS	75
TNM701-BQE000-003+Speaker insulationtape	-


Use the Plastic Tweezer to place and secure the Speaker Insulated Mylar on the location as shown.

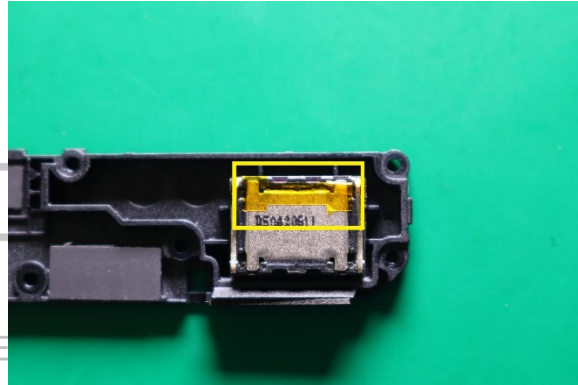


Speaker Box Assembly

Description	Reference #
Guam+ TP LCM ASSY&S101-BQF130-000CS Guam+ TP LCM_IN&S101-BQF131-000CS	1
TNM501-211102-020+round head screw	63
Guam Speaker Bracket_BE&S101-BQE021-000CS	-

1. Use fingers to place the Speaker Box on the location as shown.

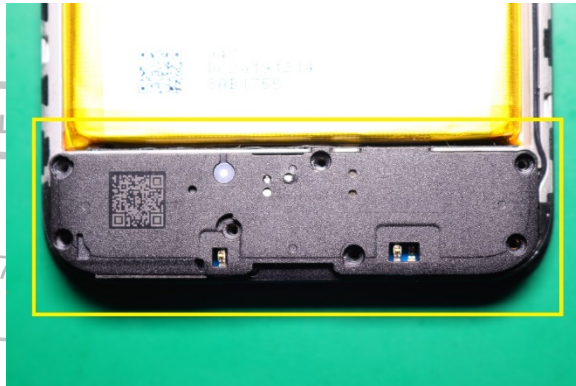


2. Use Torque Driver with PH00 Bit to tighten the seven screws as shown (0.6 ± 0.1 kgf.cm).

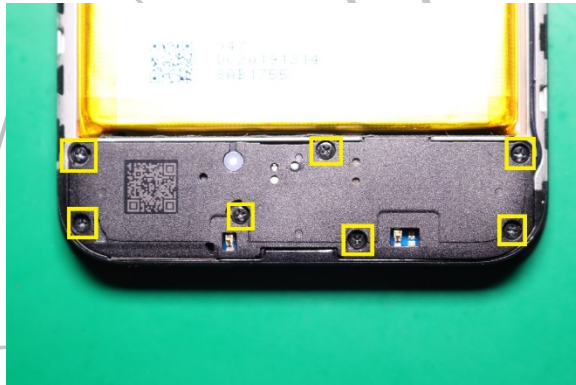

Speaker Box Waterproof Sticker 1 Assembly

Description	Reference #
Guam+ TP LCM ASSY&S101-BQF130-000CS Guam+ TP LCM_IN&S101-BQF131-000CS	1
Guam Speaker Bracket_BE&S101-BQE021-000CS	-
TNM701-BQF000-002+WAT STI 1 (33x3.4x0.05	-



Use the Plastic Tweezer to place and secure the Speaker Box Waterproof Sticker 1 on the location as shown.

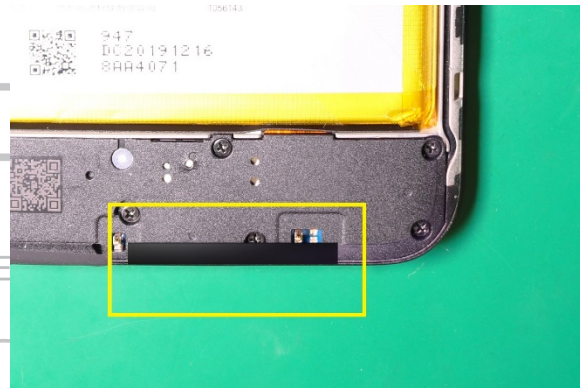

Speaker Box Waterproof Sticker 2 Assembly

Description	Reference #
Guam+ TP LCM ASSY&S101-BQF130-000CS Guam+ TP LCM_IN&S101-BQF131-000CS	1
Guam Speaker Bracket_BE&S101-BQE021-000CS	-
TNM701-BQF000-003+STI 2_22.6x12.7x0.05	-


Use the Plastic Tweezer to place and secure the Speaker Box Waterproof Sticker 2 on the location as shown.

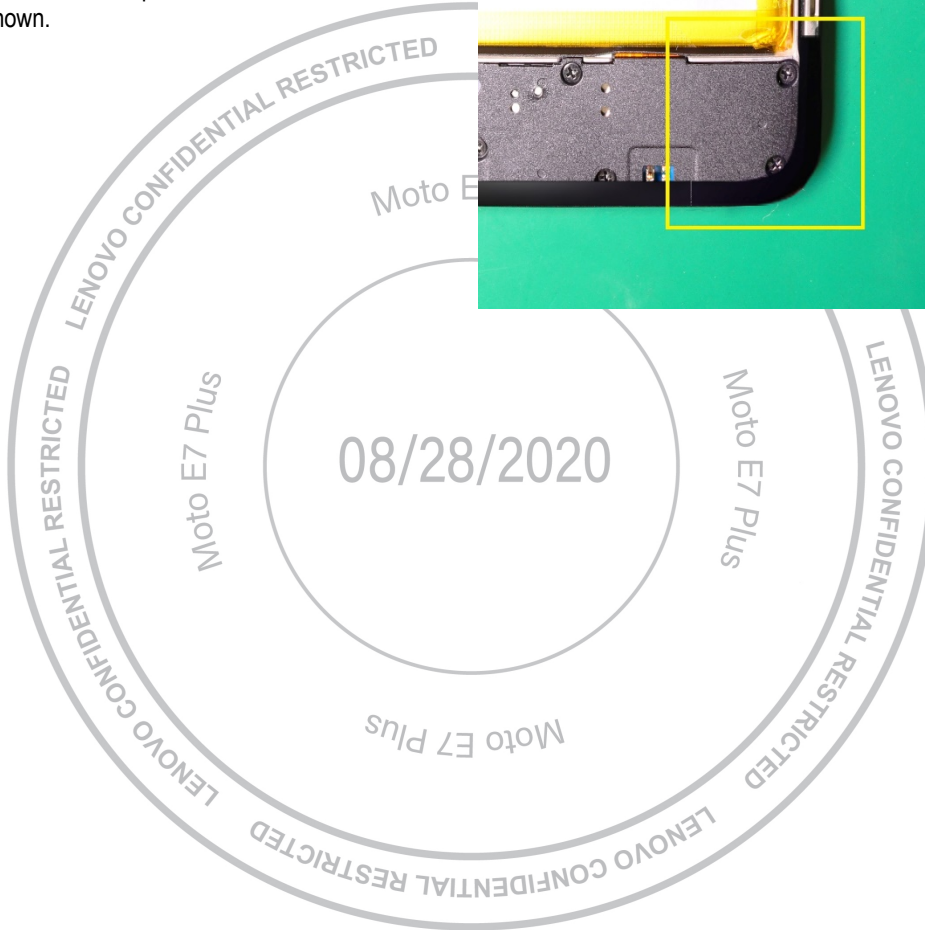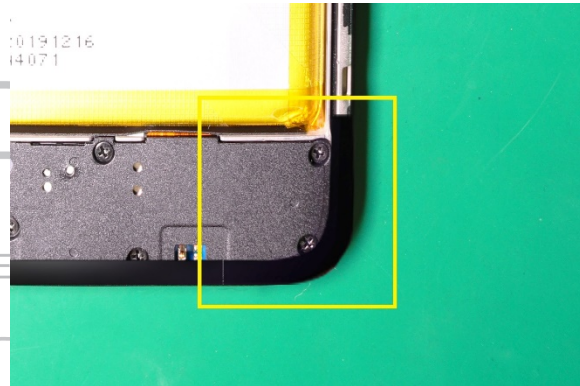

Primary MIC Dust Net Foam Assembly

Description	Reference #
Guam+ TP LCM ASSY&S101-BQF130-000CS Guam+ TP LCM_IN&S101-BQF131-000CS	1
TNM709-BQE001-009+Main MIC dust net foam	16


Use the Plastic Tweezer to place and secure the Primary MIC Dust Net Foam on the location as shown.

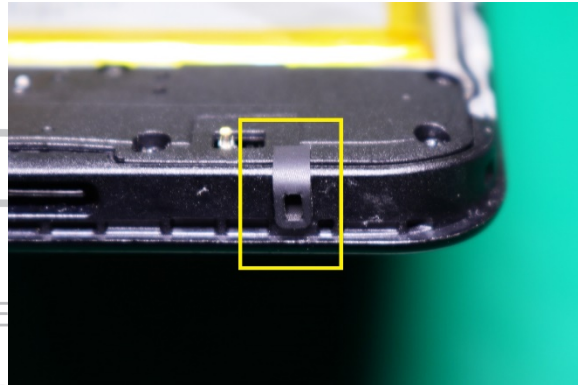

Speaker Dust Filter Assembly

Description	Reference #
Guam+ TP LCM ASSY&S101-BQF130-000CS Guam+ TP LCM_IN&S101-BQF131-000CS	1
TNM711-BQE000-100+speaker dust filter	93


Use the Plastic Tweezer to place and secure the Speaker Dust Filter on the location as shown.

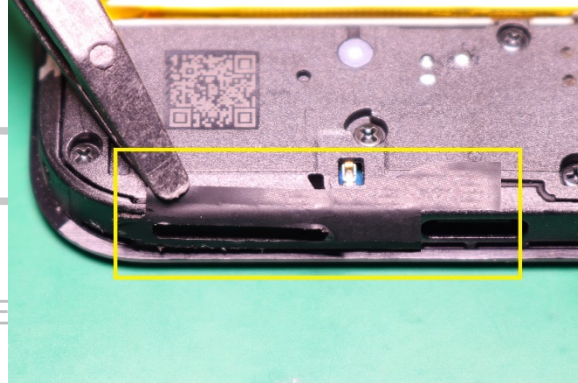

Camera lens Adhesive Assembly

Description	Reference #
XT2083-1 Batt Cover_BE&S101-BQF422-000CS XT2083-1 Batt Cover_BG&S101-BQF032-000CS XT2083-1 Batt Cover_SP&S101-BQF102-000CS XT2083-3 Batt Cover_BE&S101-BQF423-000CS XT2083-3 Batt Cover_BG&S101-BQF033-000CS XT2083-3 Batt Cover_SP&S101-BQF103-000CS XT2083-4 Batt Cover_EB&S101-BQF426-000CS Guam+ Etch COV_EB_BR&S101-BQF425-000CS Guam+ Etch COV_EG_BR&S101-BQF036-000CS Guam+ Etch COV_SP_BR&S101-BQF106-000CS	65
TNM715-BQE001-012+rear camera sealant	67


Use the Plastic Tweezer to place and secure the Camera Lens adhesive on the location as shown and peel off the liner.

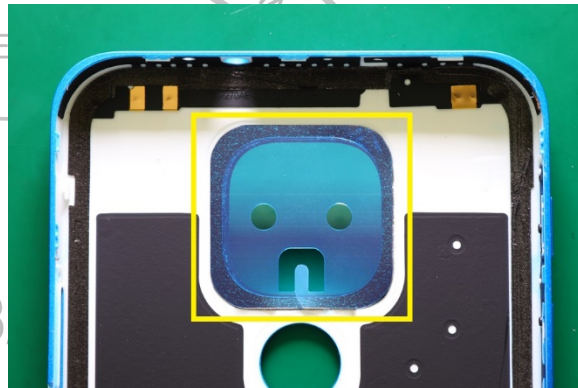

FPS Adhesive Assembly

Description	Reference #
XT2083-1 Batt Cover_BE&S101-BQF422-000CS XT2083-1 Batt Cover_BG&S101-BQF032-000CS XT2083-1 Batt Cover_SP&S101-BQF102-000CS XT2083-3 Batt Cover_BE&S101-BQF423-000CS XT2083-3 Batt Cover_BG&S101-BQF033-000CS XT2083-3 Batt Cover_SP&S101-BQF103-000CS XT2083-4 Batt Cover_EB&S101-BQF426-000CS Guam+ Etch COV_EB_BR&S101-BQF425-000CS Guam+ Etch COV_EG_BR&S101-BQF036-000CS Guam+ Etch COV_SP_BR&S101-BQF106-000CS	65
TNM715-BQE000-018+ADH_D15.1xD12.7x0.15	68

Use the Plastic Tweezer to place and secure the FPS adhesive on the location as shown and peel off the liner.

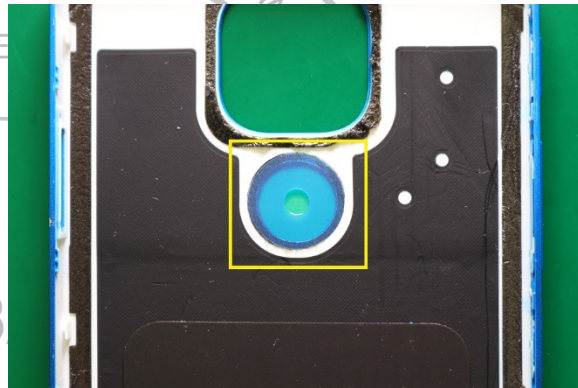

Battery Cover Assembly

<i>Description</i>	<i>Reference #</i>
Guam+ TP LCM ASSY&S101-BQF130-000CS Guam+ TP LCM_IN&S101-BQF131-000CS	1
XT2083-1 Batt Cover_BE&S101-BQF422-000CS XT2083-1 Batt Cover_BG&S101-BQF032-000CS XT2083-1 Batt Cover_SP&S101-BQF102-000CS XT2083-3 Batt Cover_BE&S101-BQF423-000CS XT2083-3 Batt Cover_BG&S101-BQF033-000CS XT2083-3 Batt Cover_SP&S101-BQF103-000CS XT2083-4 Batt Cover_EB&S101-BQF426-000CS Guam+ Etch COV_EB_BR&S101-BQF425-000CS Guam+ Etch COV_EG_BR&S101-BQF036-000CS Guam+ Etch COV_SP_BR&S101-BQF106-000CS	65


Use fingers to place the Battery Cover on the Front Housing and press it on all side to secure it as shown.



IMEI Label Assembly

Description	Reference #
TNEI30-BQE020-000P270AE_Sim card tray	70
TNP316-000000-100+label	-

Use the Plastic Tweezer to place and secure the IMEI Label on the location as shown.

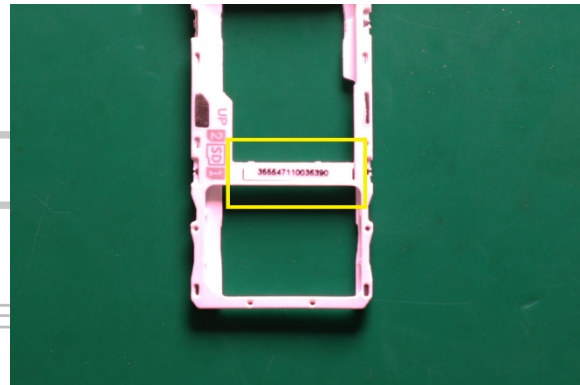

Sim Tray Silicone Ring Assembly

Description	Reference #
TNEI30-BQE020-000P270AE_Sim card tray	70
TNM716-BQE001-007+P270AE silicone ring	71


Use the Plastic Tweezer to place and secure the Sim Tray Silicone Ring on the location as shown.

Note

Make the Silicone Ring is fully assembled onto the Sim Tray groove.

Note


Make sure the Silicone Ring is assembled in correct direction, the larger diameter out and small diameter in.

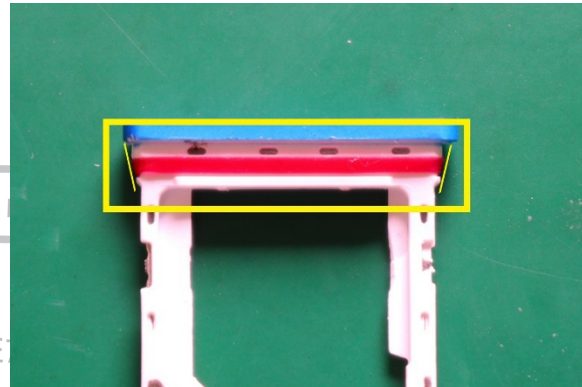

Sim Tray Assembly

Description	Reference #
Guam+ TP LCM ASSY&S101-BQF130-000CS Guam+ TP LCM_IN&S101-BQF131-000CS	1
XT2083-1 Batt Cover_BE&S101-BQF422-000CS XT2083-1 Batt Cover_BG&S101-BQF032-000CS XT2083-1 Batt Cover_SP&S101-BQF102-000CS XT2083-3 Batt Cover_BE&S101-BQF423-000CS XT2083-3 Batt Cover_BG&S101-BQF033-000CS XT2083-3 Batt Cover_SP&S101-BQF103-000CS XT2083-4 Batt Cover_EB&S101-BQF426-000CS Guam+ Etch COV_EB_BR&S101-BQF425-000CS Guam+ Etch COV_EG_BR&S101-BQF036-000CS Guam+ Etch COV_SP_BR&S101-BQF106-000CS	65
TNEI30-BQE020-000P270AE_Sim card tray	70

1. Insert the SIM Tray in the transceiver as shown.

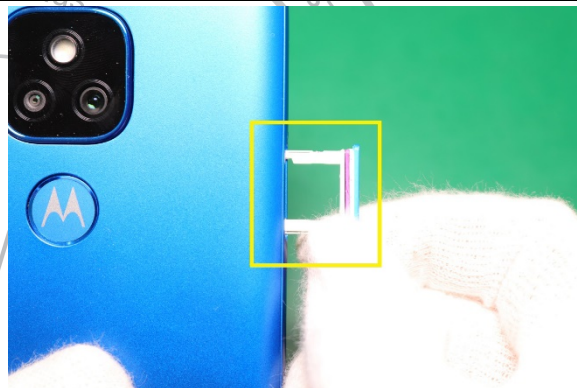

2. Use finger to press the SIM Tray until it secures into the transceiver.


ASSEMBLY QUALITY CHECK

Battery Quality Check



Check if battery adhesive is reused or
with residue from the old one

Grommet and Connectors Quality Check

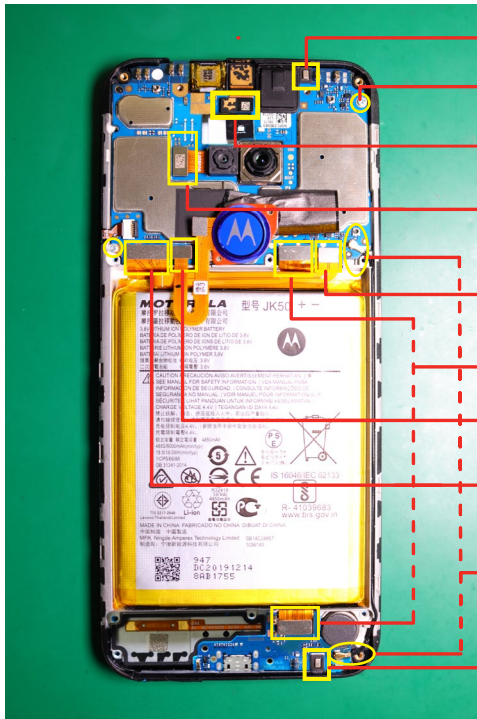

- Check if the secondary mic waterproof foam is well-seated and there's no sign of damage.
- Check if any missing/unseated screws.
- Check if the front facing camera connector is well-seated and there's no sign of damage.
- Check if the rear facing camera connector is well-seated and there's no sign of damage.
- Check if the battery connector is well-seated and there's no sign of damage.
- Check if the main flex connector is well-seated and there's no sign of damage.
- Check if the FPS connector is well-seated and there's no sign of damage.
- Check if the display flex connector is well-seated and there's no sign of damage.
- Check if the coax cable connector is well-seated and there's no sign of damage.
- Check if the primary mic grommet is well-seated and there's no sign of damage.

Screws Graphite Quality Check



Check if any missing/unseated screws.

Check if any missing/misaligned waterproof.

Check if any missing/misaligned waterproof.

Check if any missing/unseated screws.