



8. Level 3 Repair

8-1. Components Layout

Main board top view

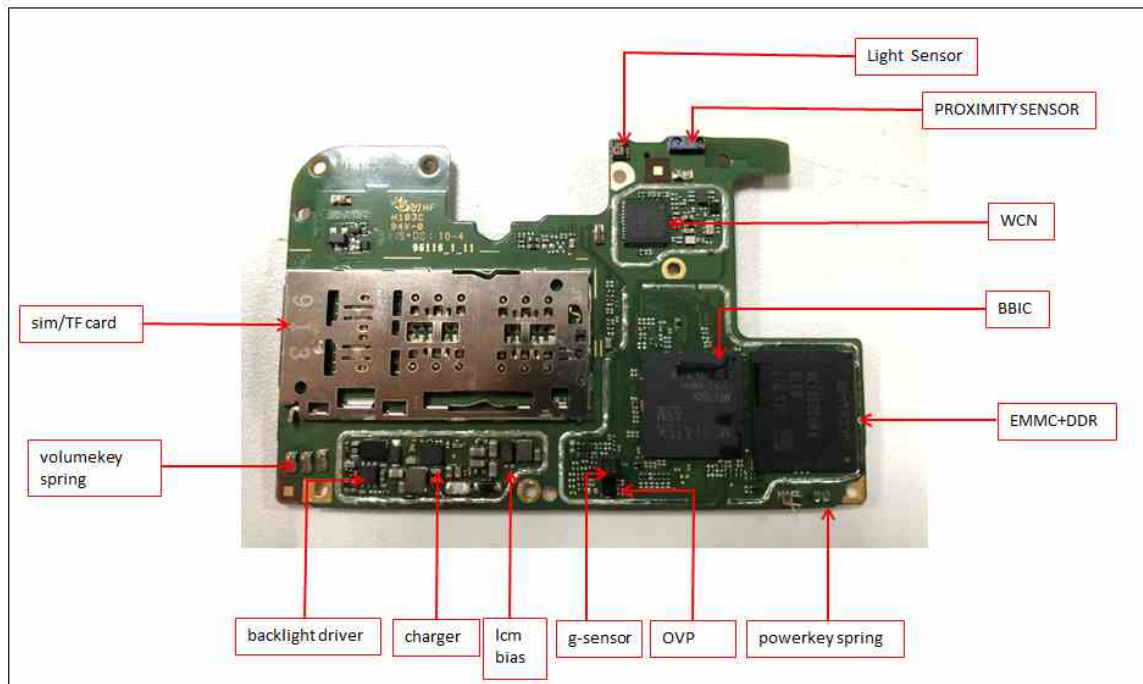


Main board bot view

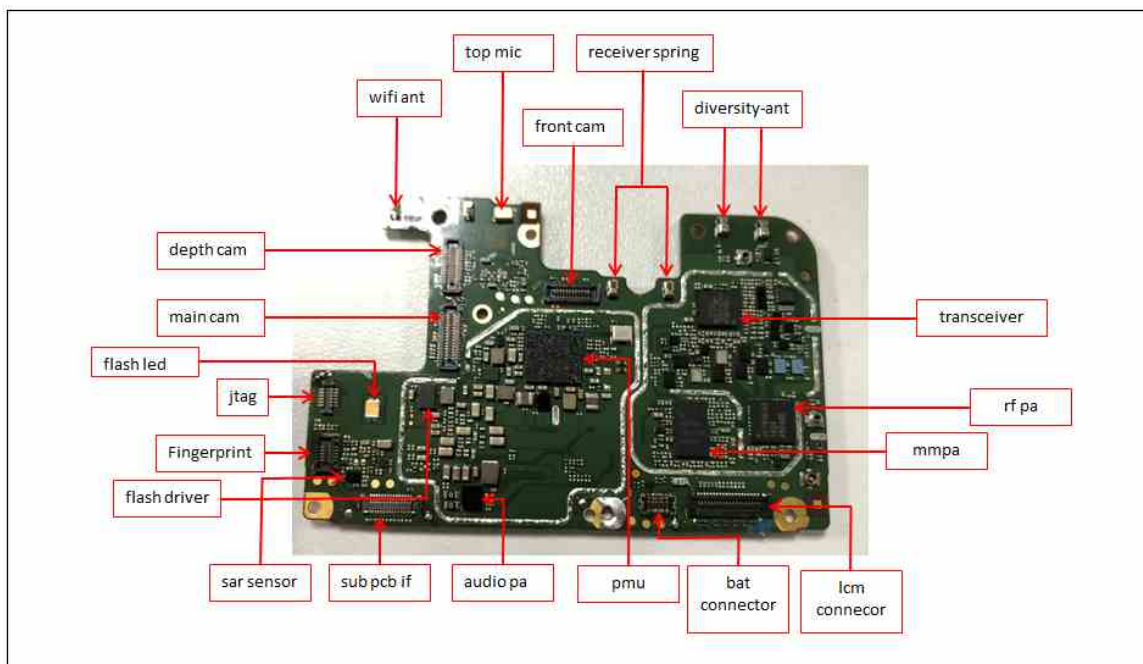


8. Level 3 Repair

Sub board

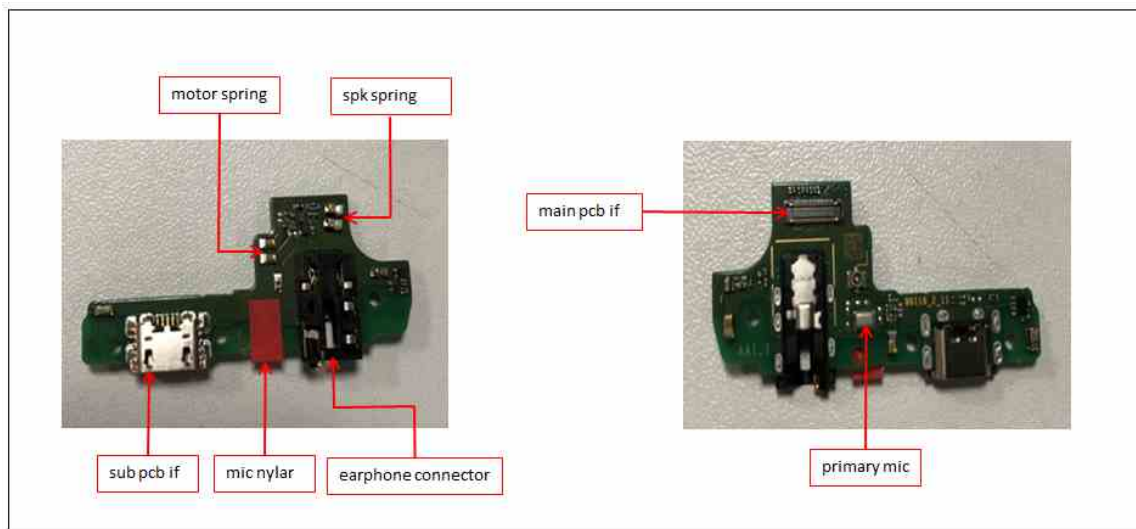


Reference map Mb top view

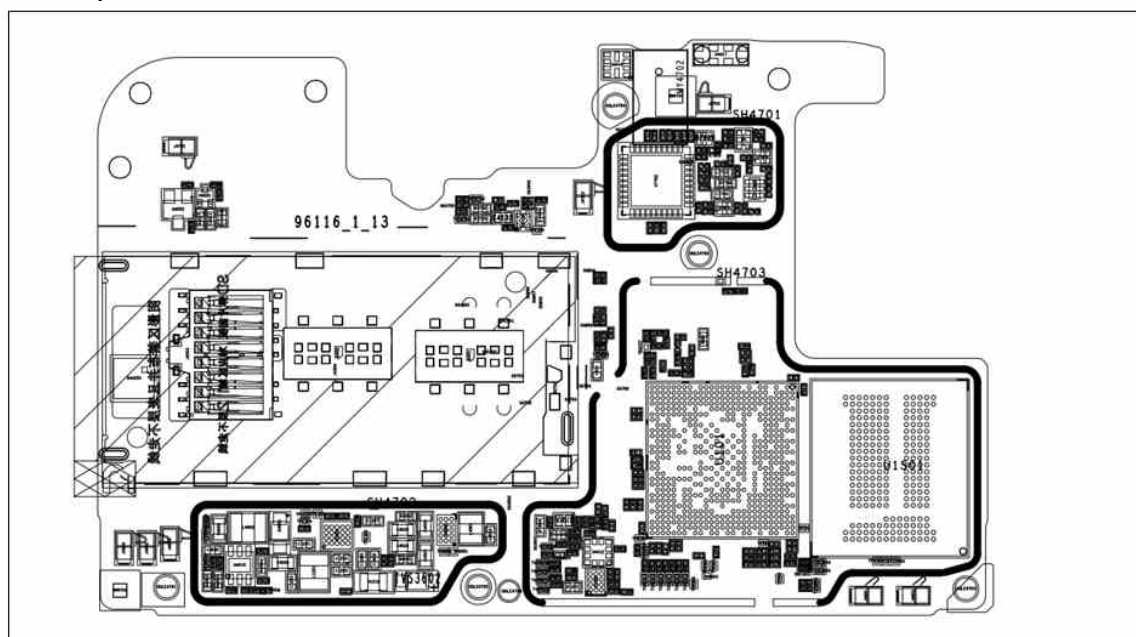


8. Level 3 Repair

Mb bot view

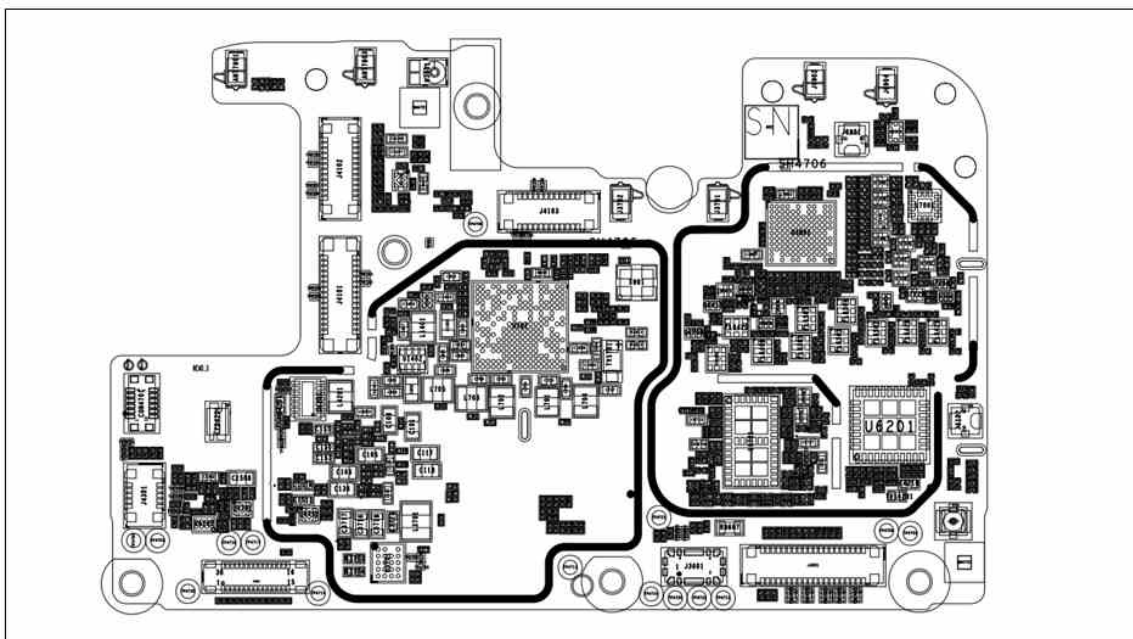


Sub top view

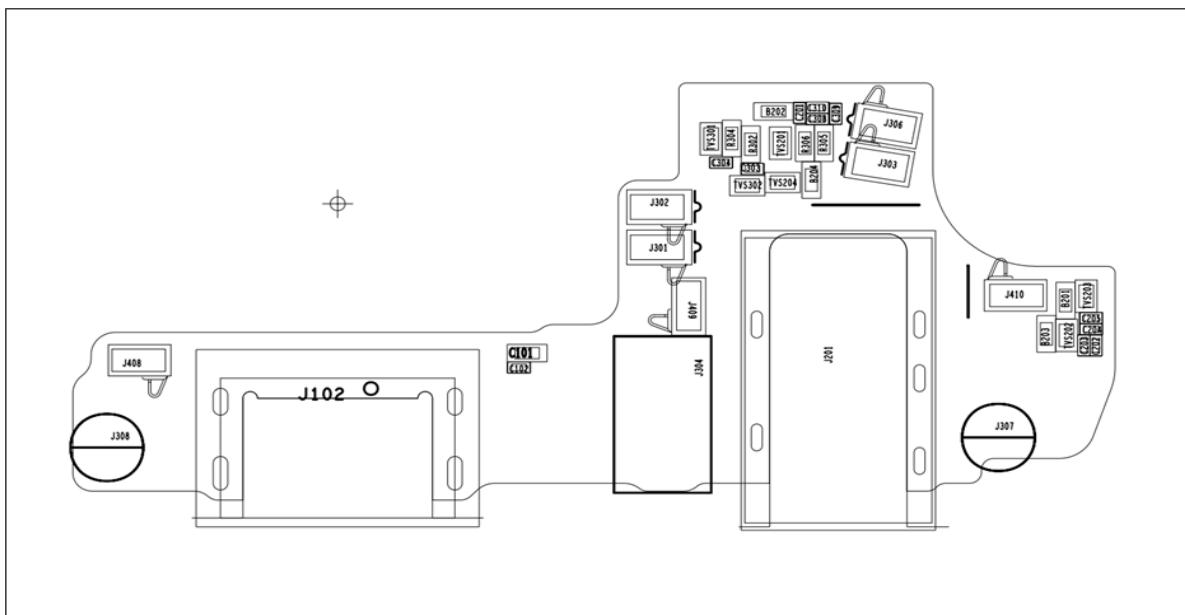


8. Level 3 Repair


Sub bot view

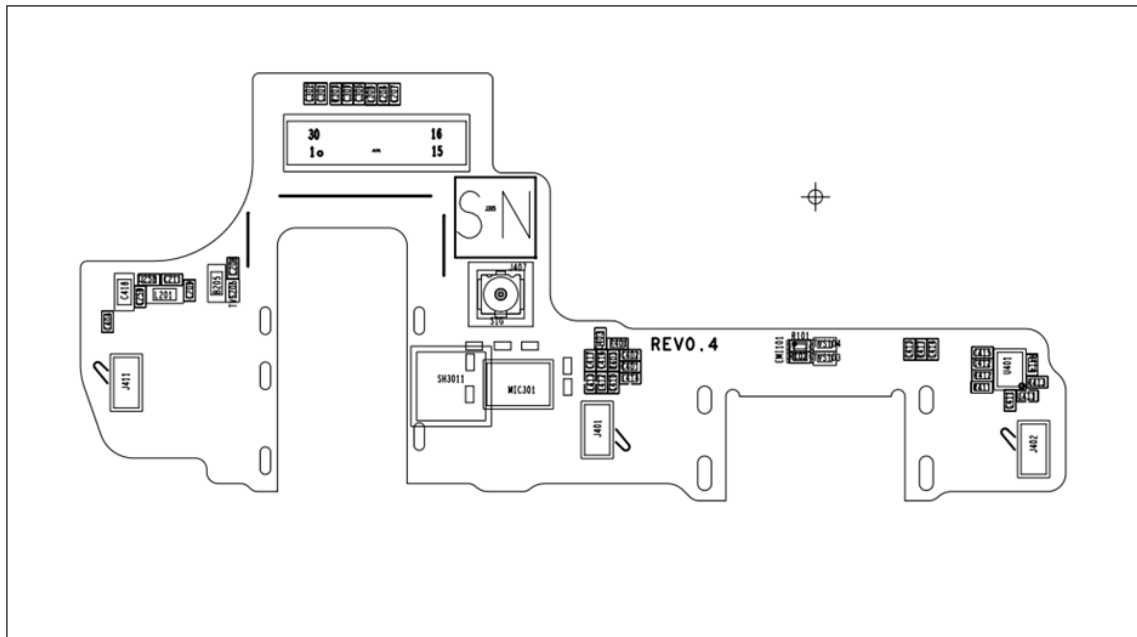

8. Level 3 Repair

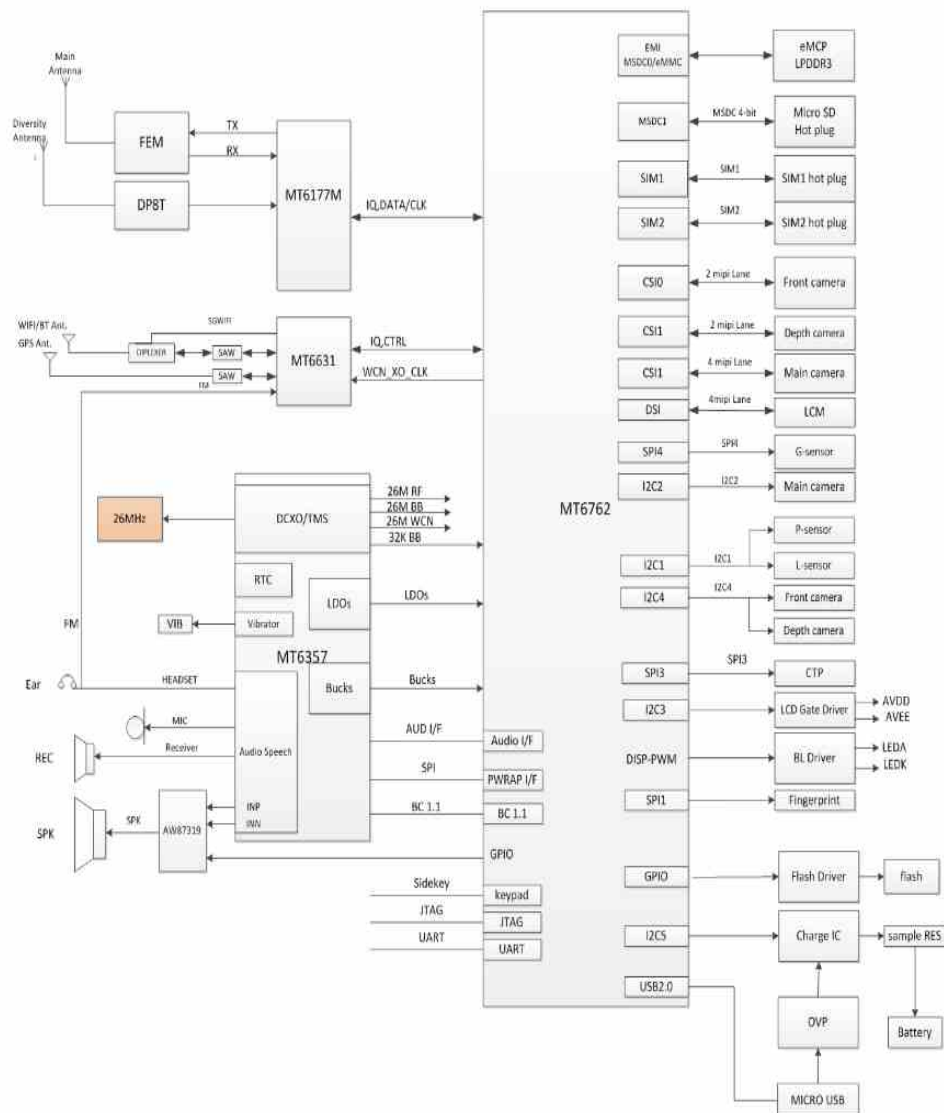


8. Level 3 Repair

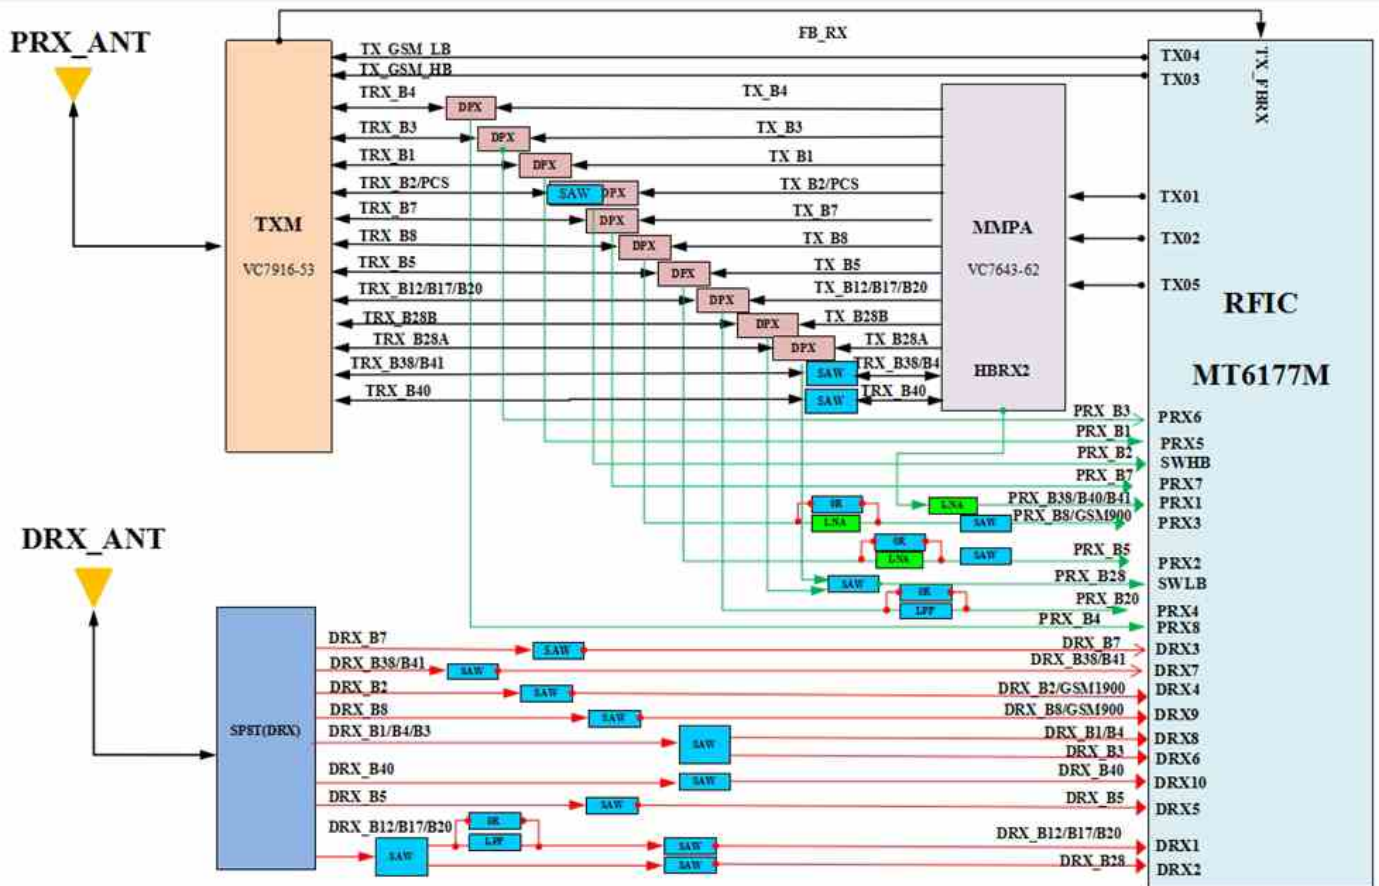

8. Level 3 Repair

8-3. Flow chart of Troubleshooting.

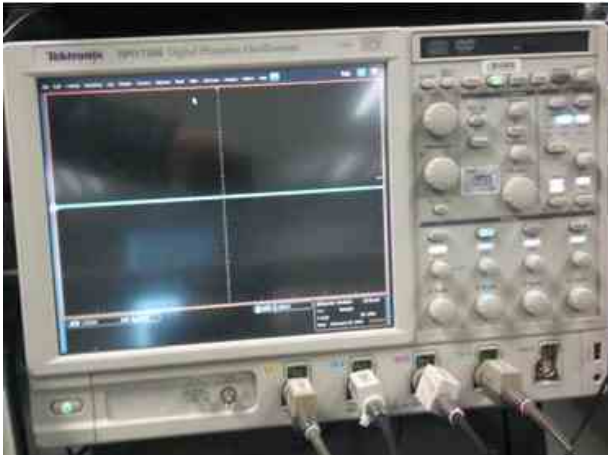


Oscilloscope




Digital multimeter



Power Supply

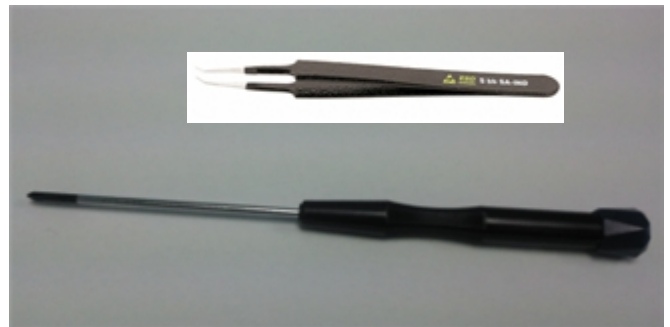

+ driver, ESD Safe Tweezer

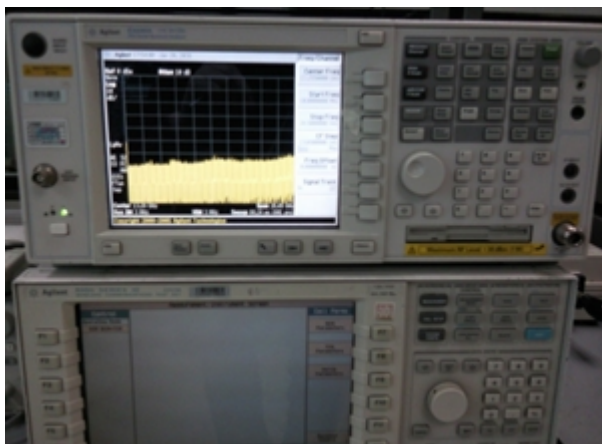

8960 & Spectrum Analyzer




Soldering iron

8. Level 3 Repair

8-4-1. Power On


: Checking Power signal (LCM, PMU, Clock)

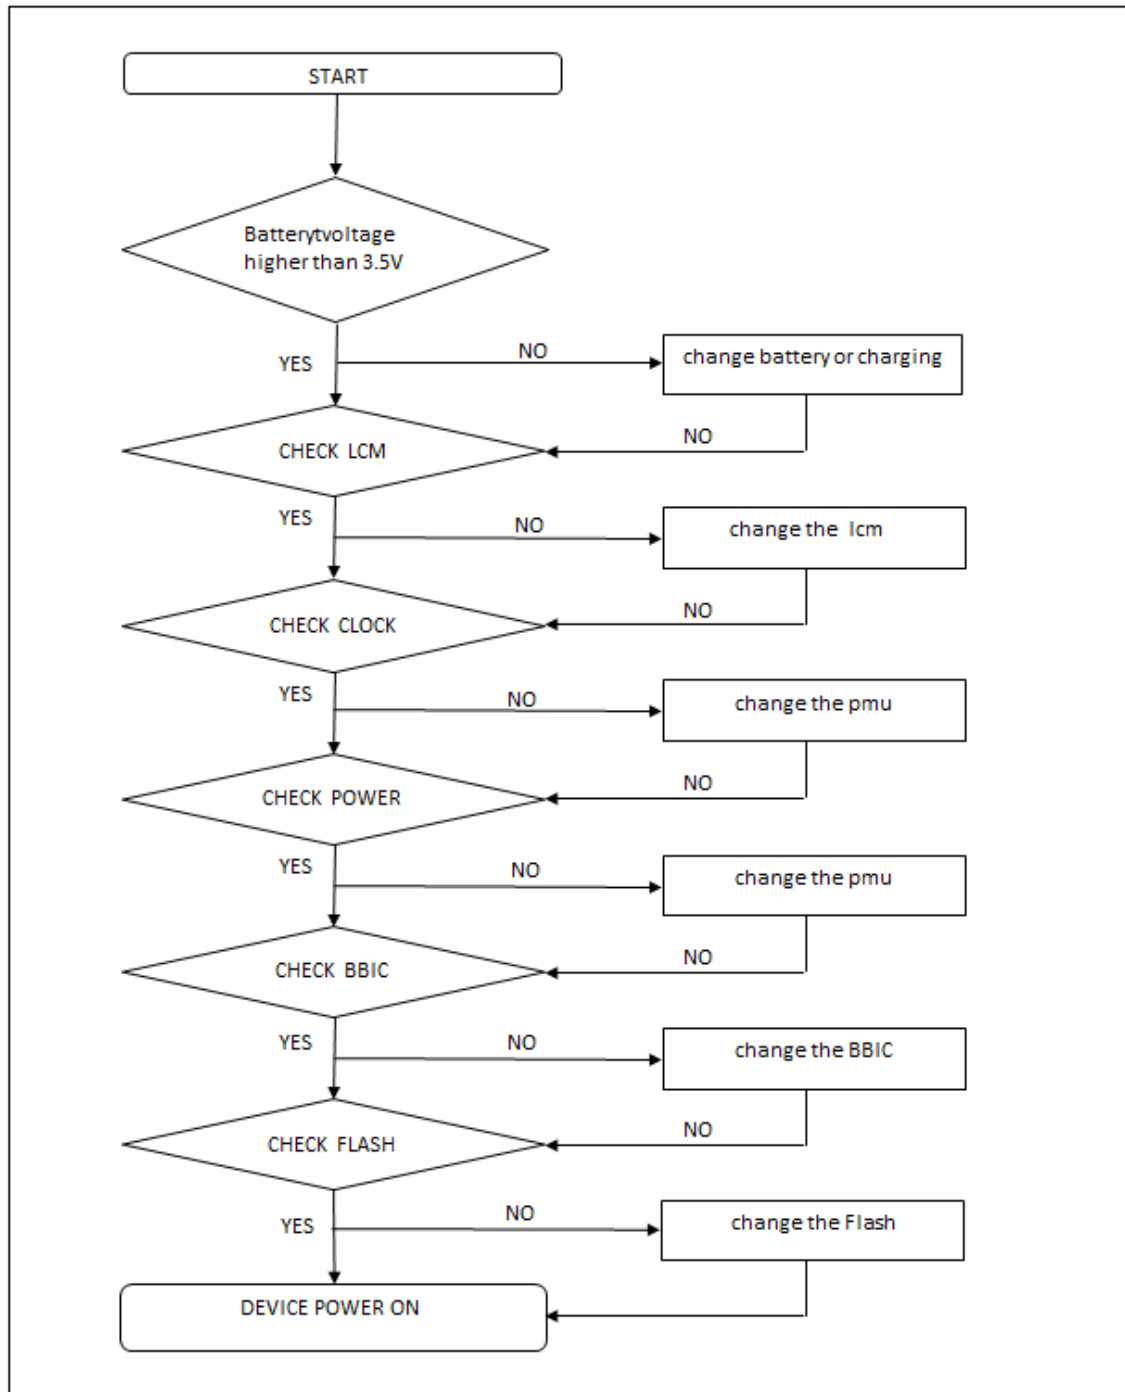

8. Level 3 Repair

8-4-2. Charging


: The charging controlled by third charger chip

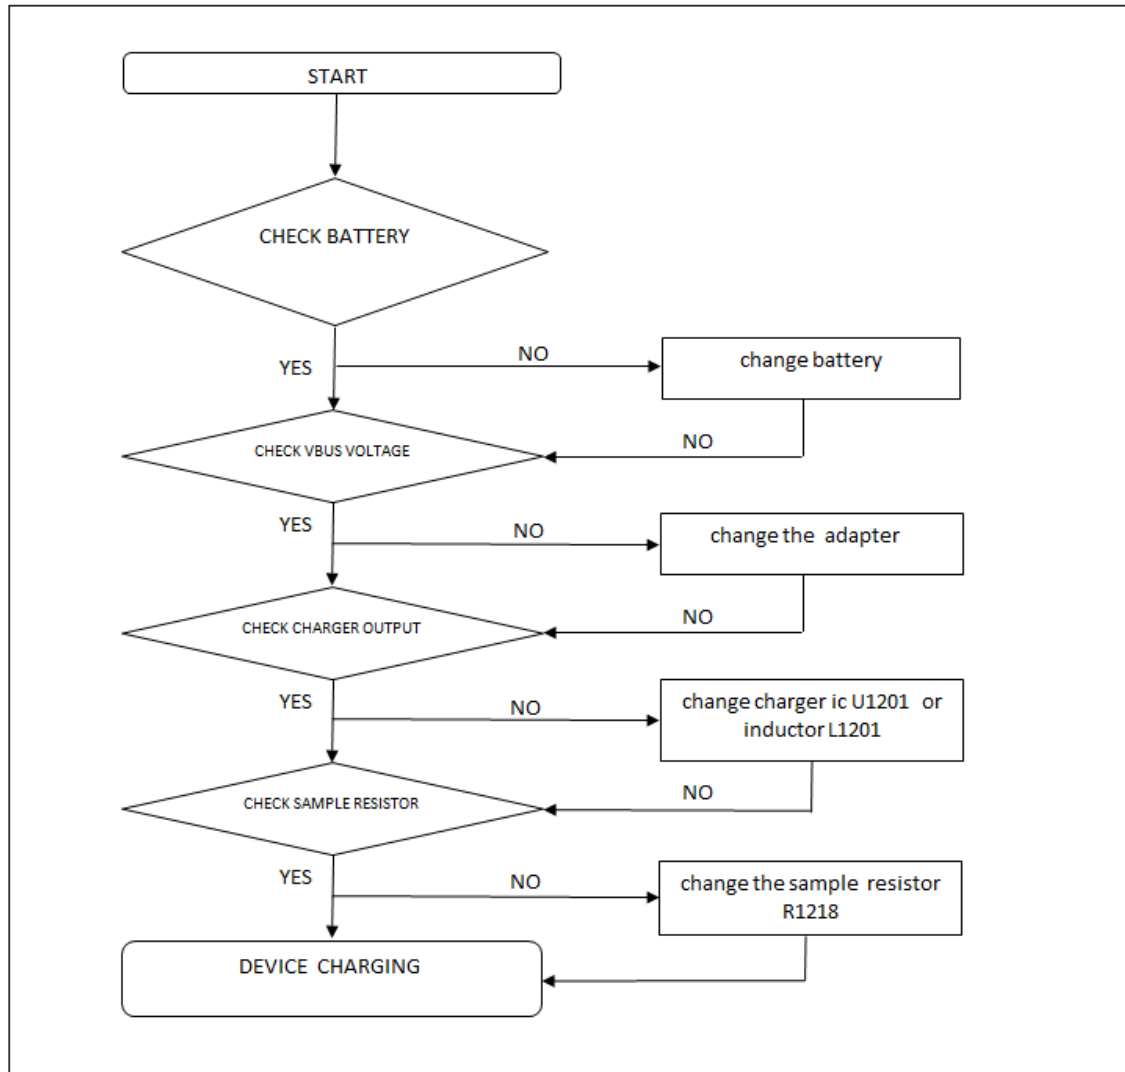

8. Level 3 Repair

8-4-3. Audio speaker


: The Speaker control signals are generated by MT6357 (U701) and PA AW87319 (U3701), the chip, PA and the speaker are to be checked out.

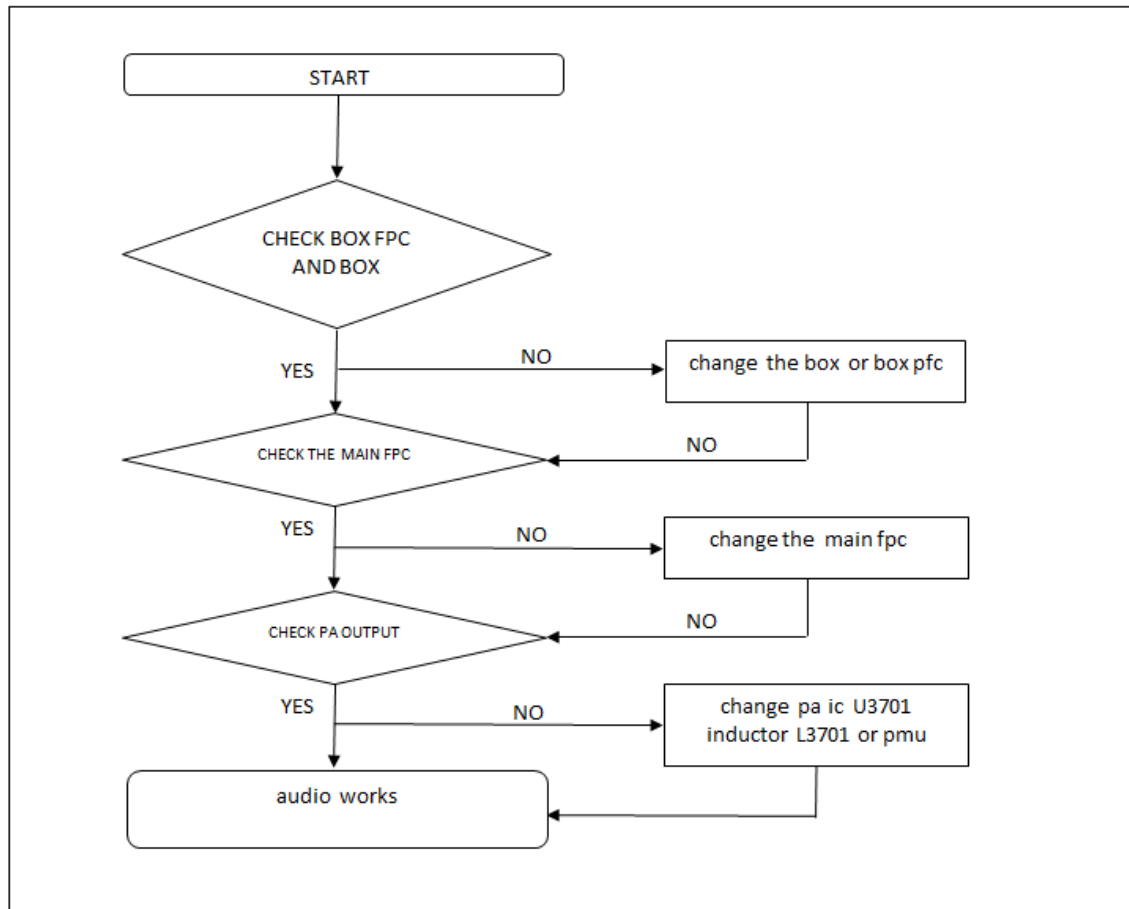

8. Level 3 Repair

8-4-4. Audio Main MIC


: The MIC control signals are generated by PMU chip MT6357 (U701), the PMU chip and the MIC are to be checked out.

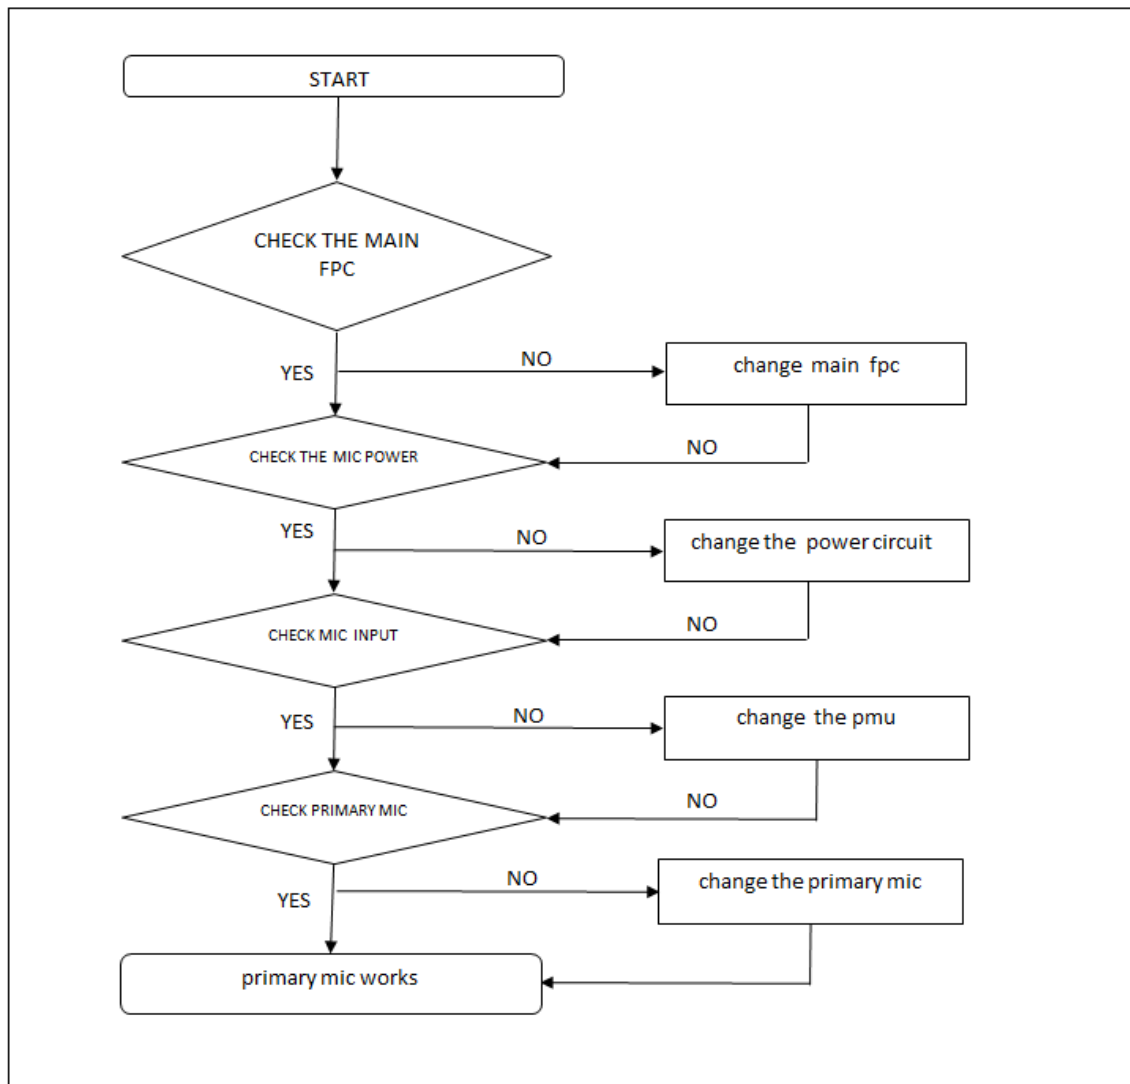

8. Level 3 Repair

8-4-5. Sub MIC


: The MIC control signals are generated by PMU chip MT6357 (U701), the PMU chip and the MIC are to be checked out.

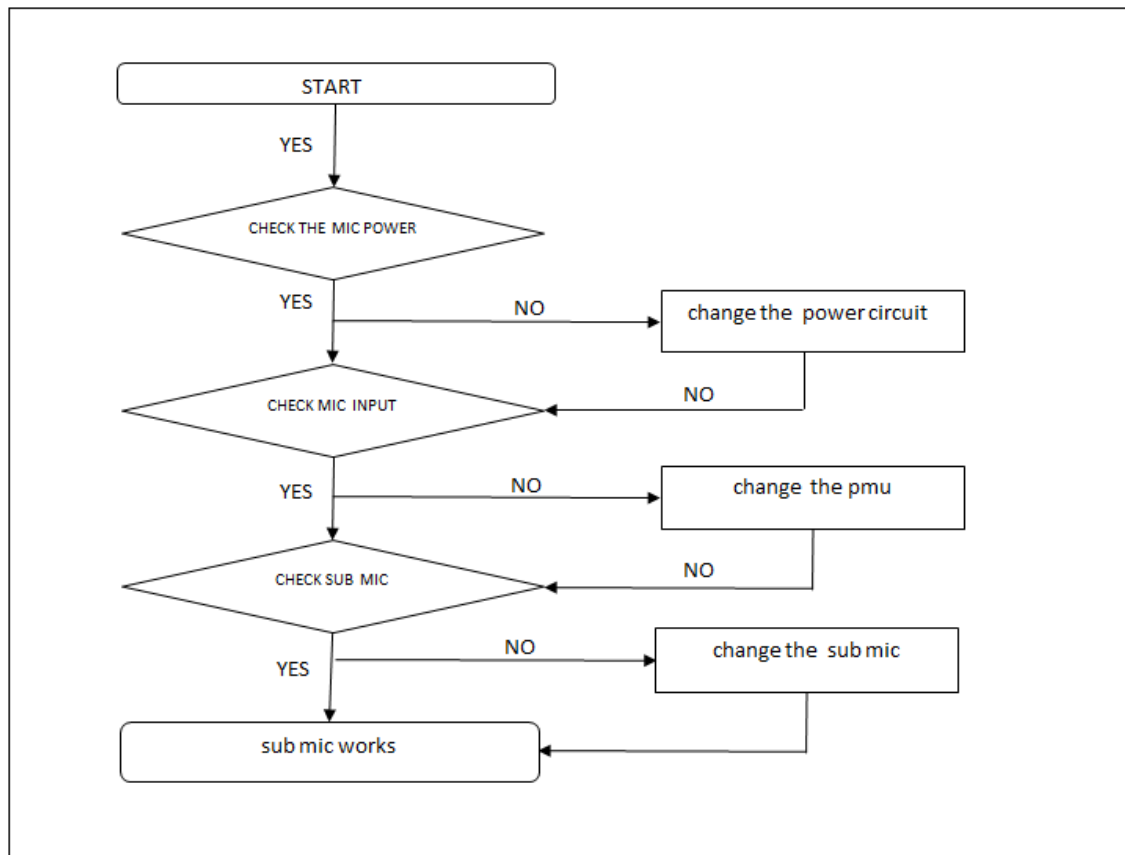

8. Level 3 Repair

8-4-6. Accelerometer sensor


: The Accelerometer sensor is calibrated by using SW algorithm.

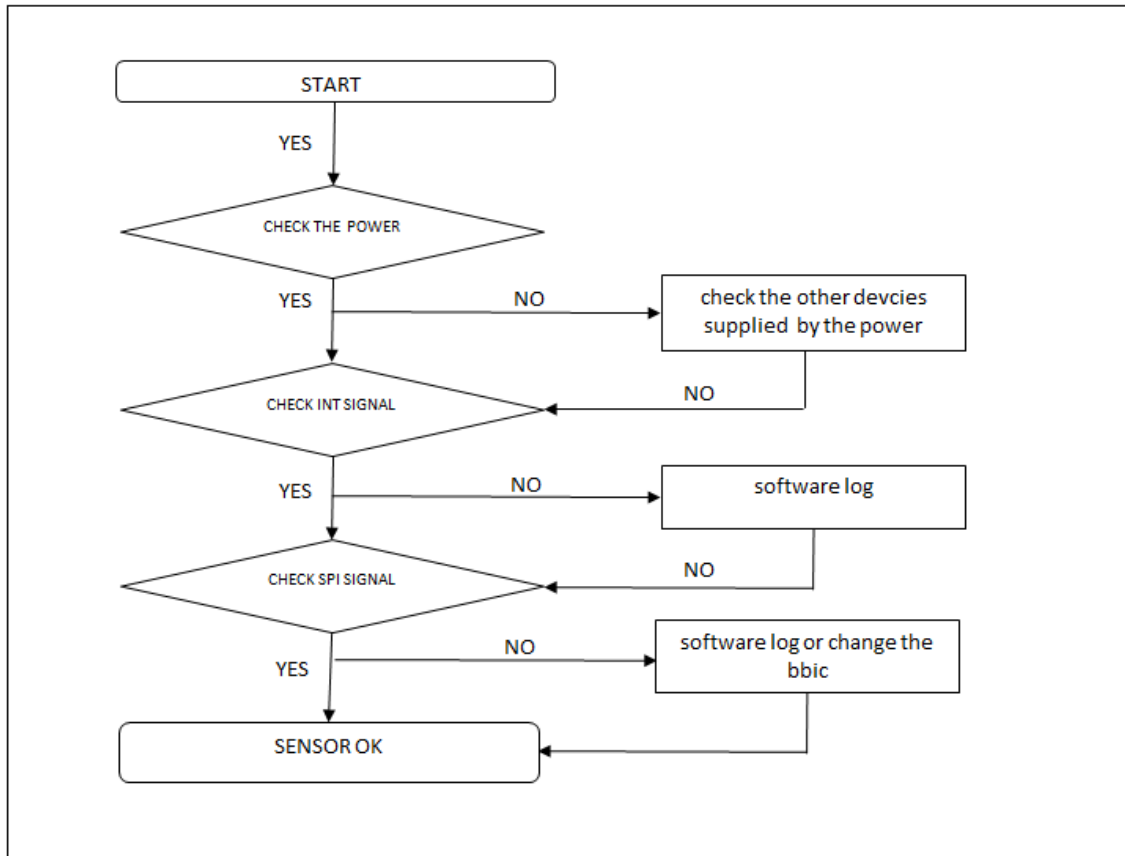

8. Level 3 Repair

8-4-7. Proximity and light sensor


: Proximity (U4417) and Light Sensor (U4416) is worked as below: Control the screen's on/off operation automatically while making phone calls, and adjust the screen brightness according to ambient light.

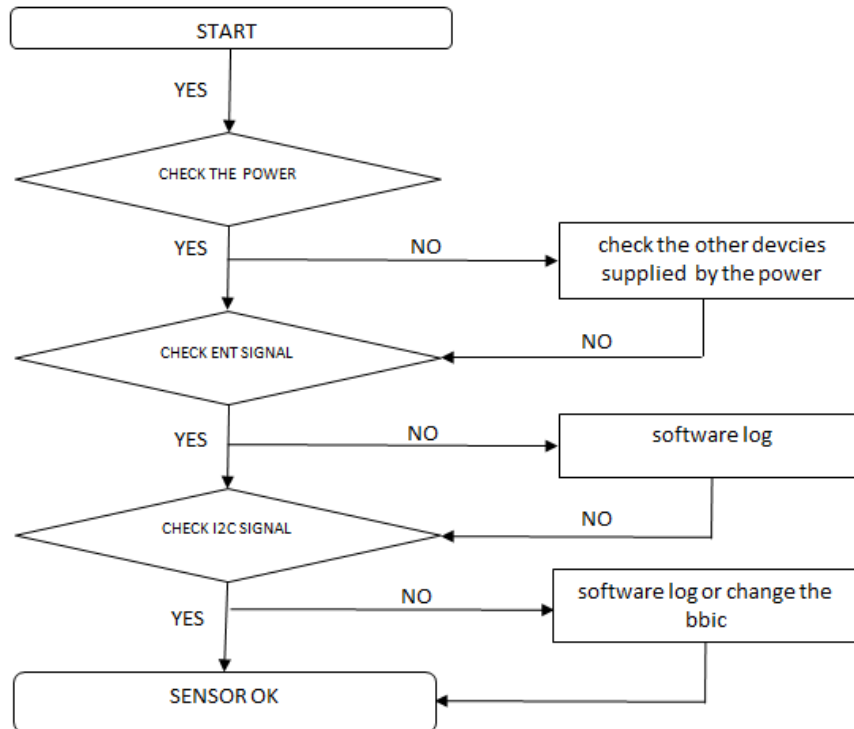

8. Level 3 Repair

8-4-8. TOUCH SCREEN AND DISPLAY


: The Touch control signals are generated by MT6762. It is assembled with LCD.

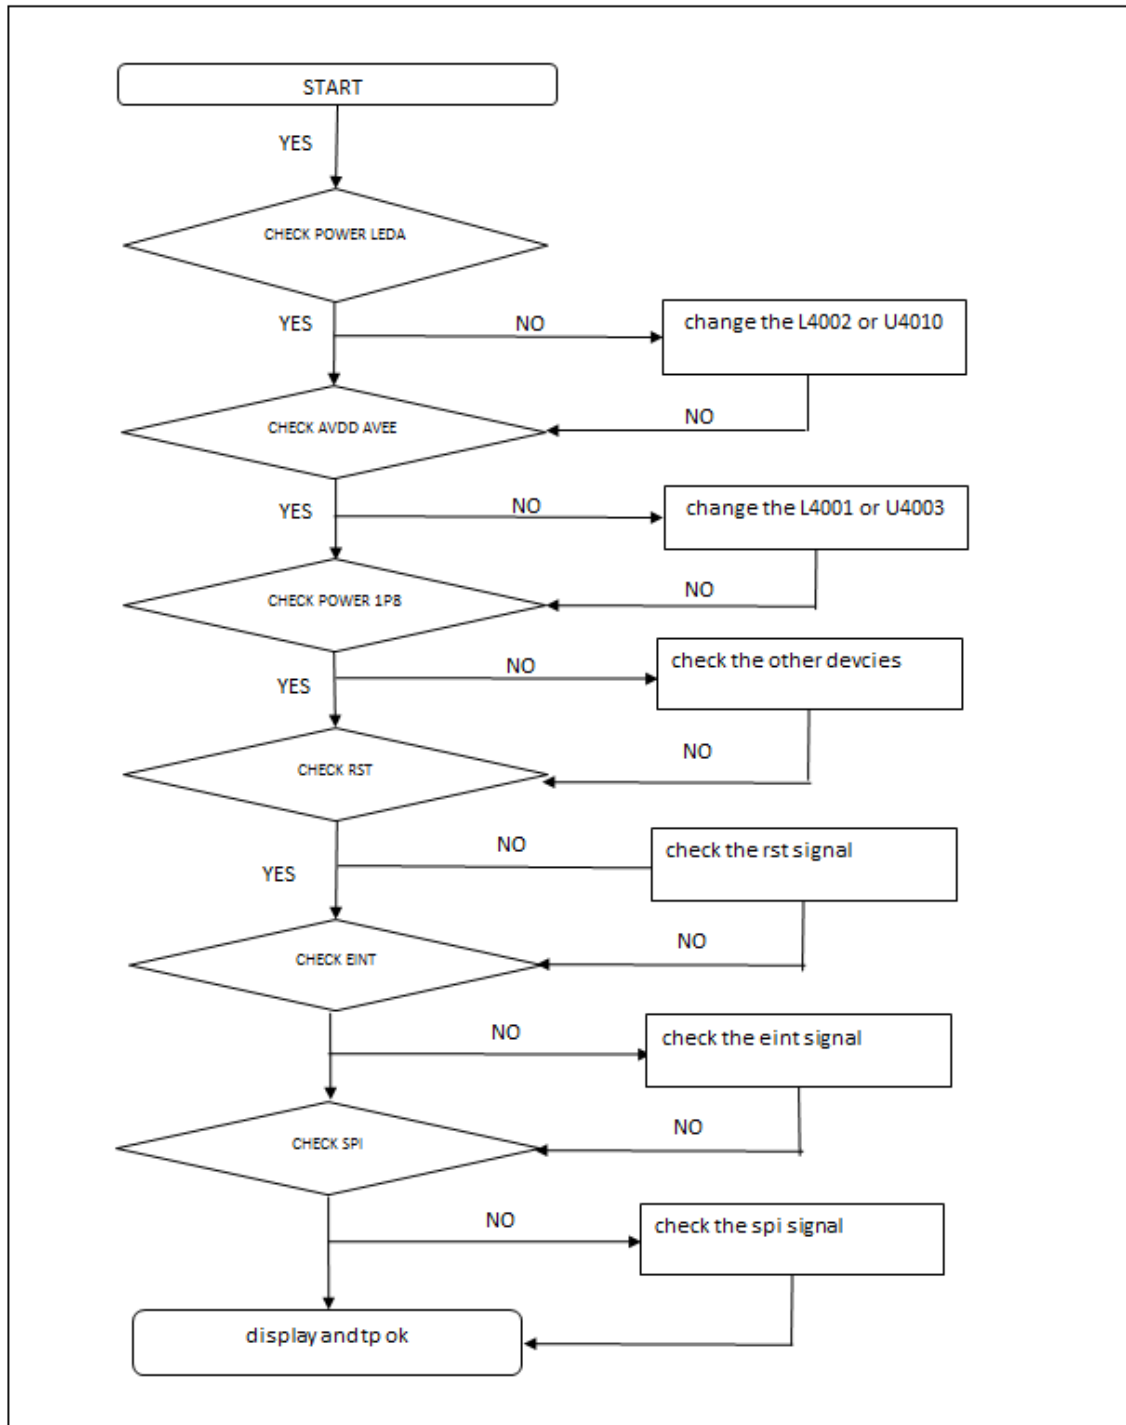

8. Level 3 Repair

8-4-9. Vibrator


: The Vibrator control signals are generated by MT6357.

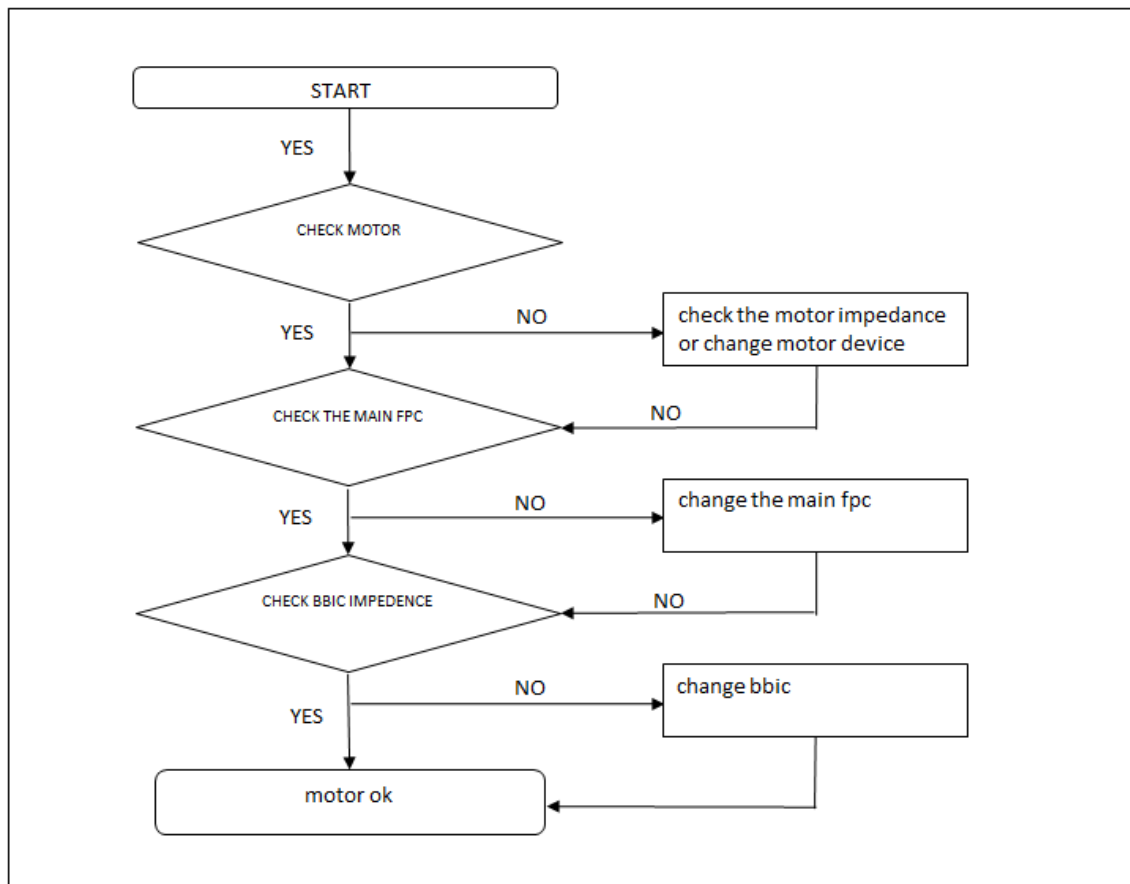

8. Level 3 Repair

8-4-10. Rear Camera


: The Camera control signals are generated by MT6762.

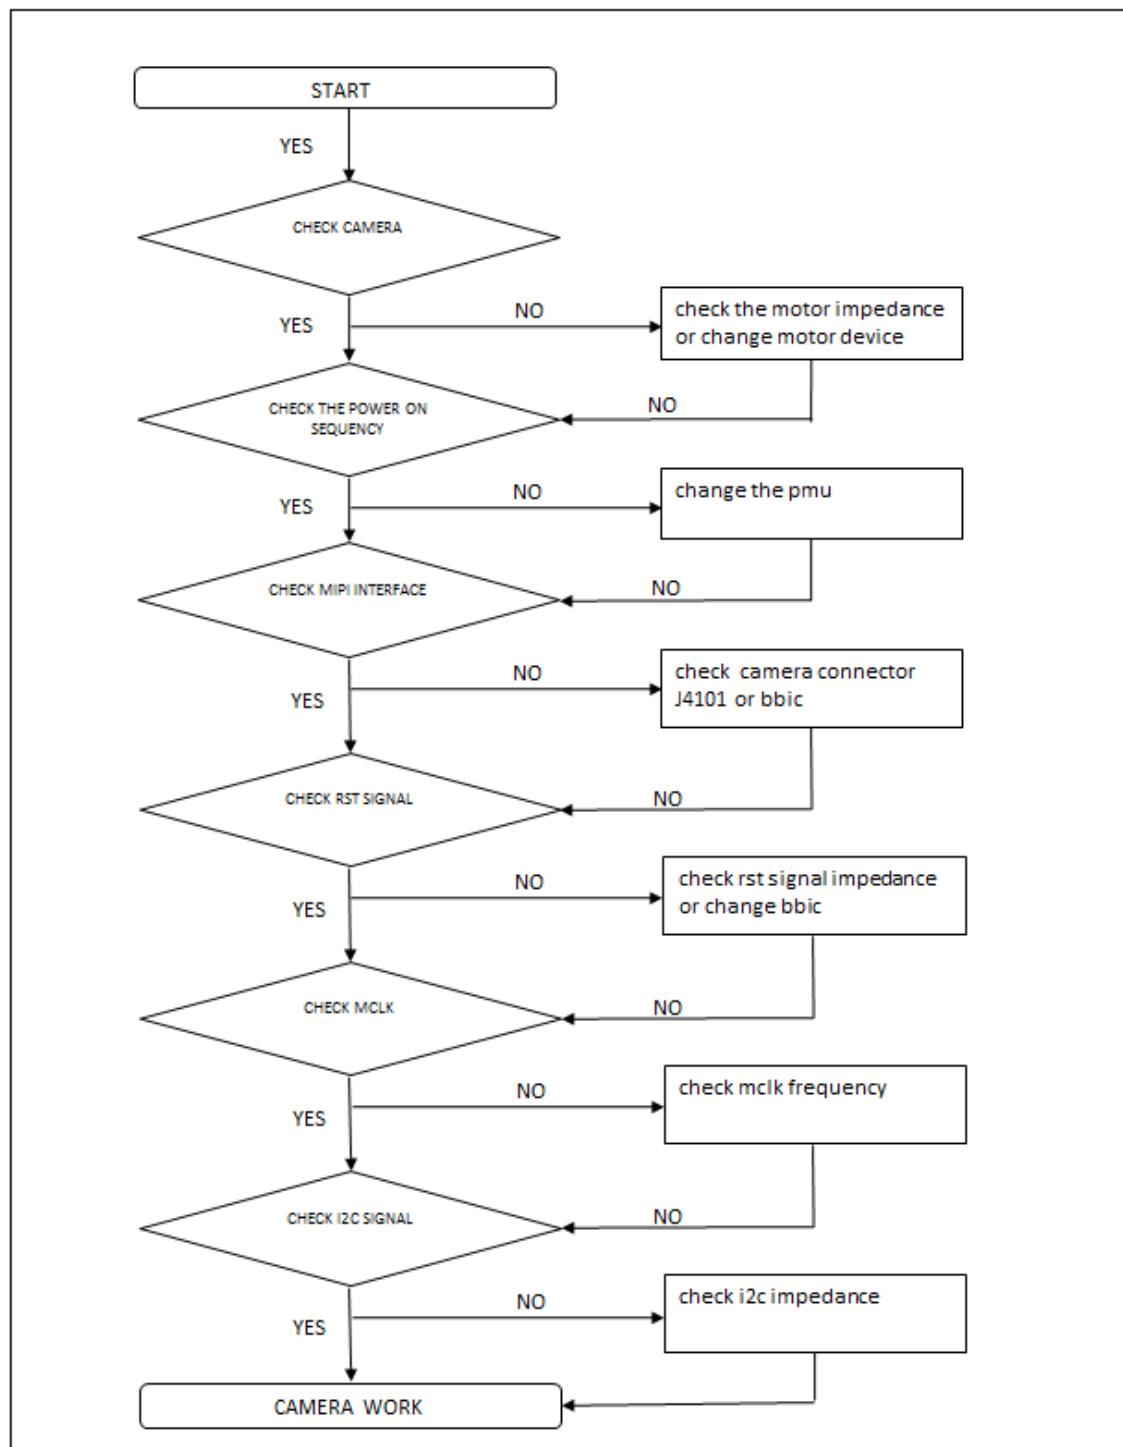

8. Level 3 Repair

8-4-11. Front Camera


The Camera control signals are generated by MT6762.

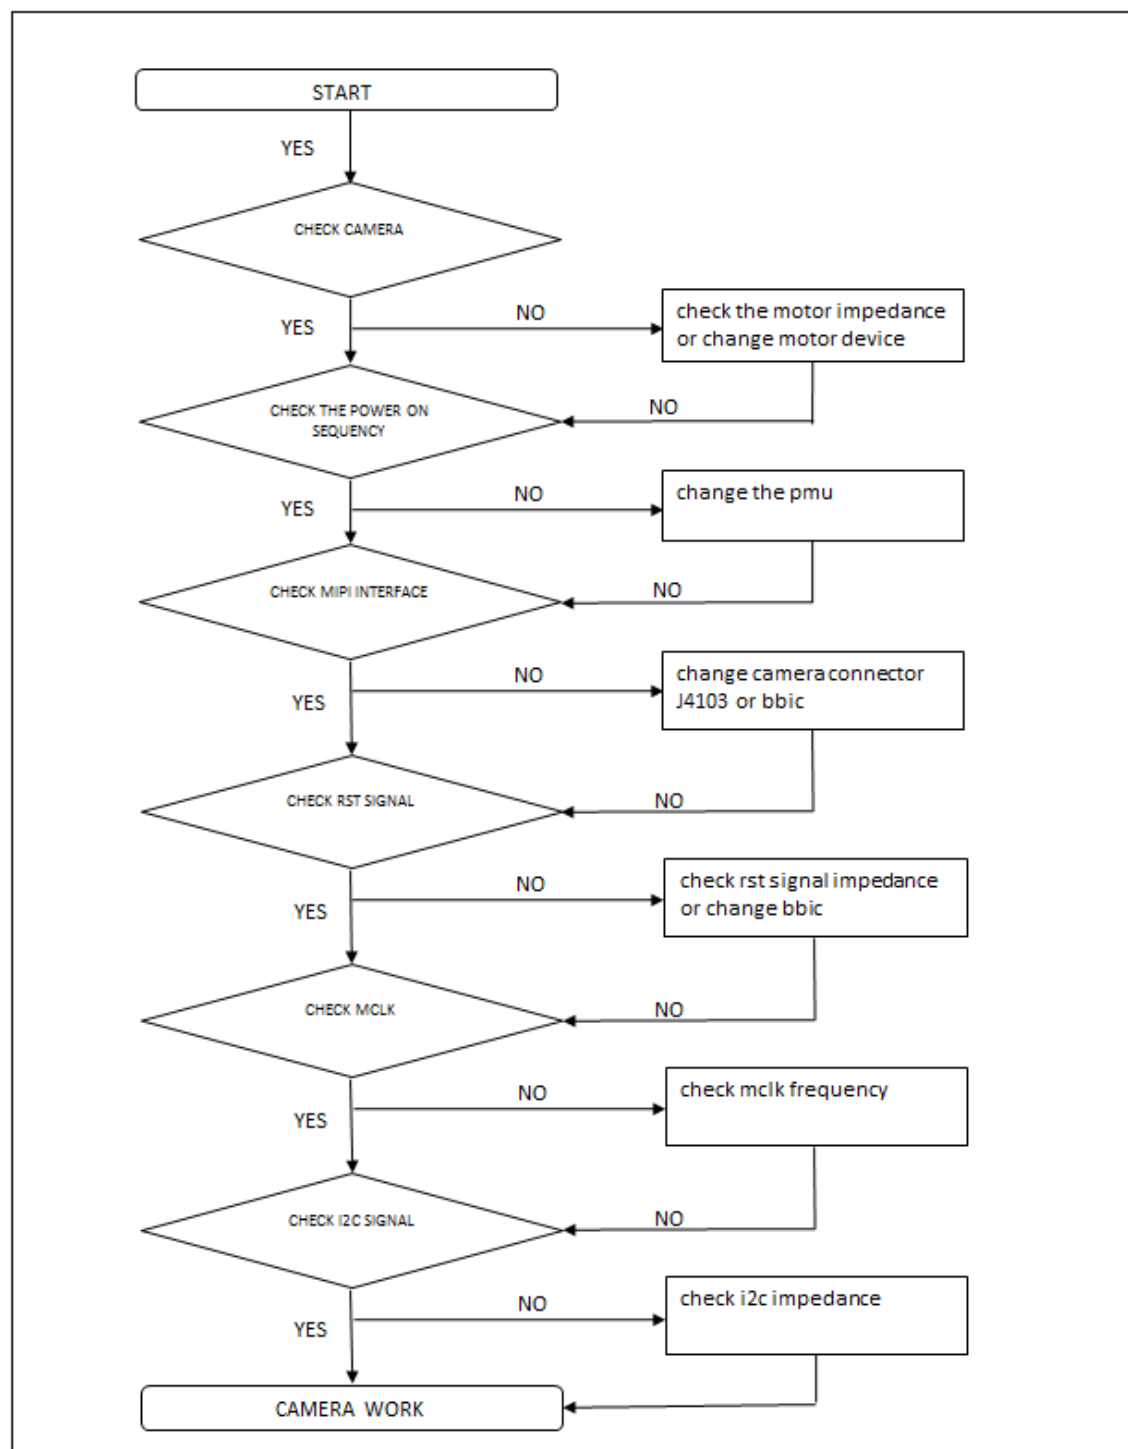

8. Level 3 Repair

8-4-12. Depth Camera

: The depth Camera control signals are generated by MT6762.

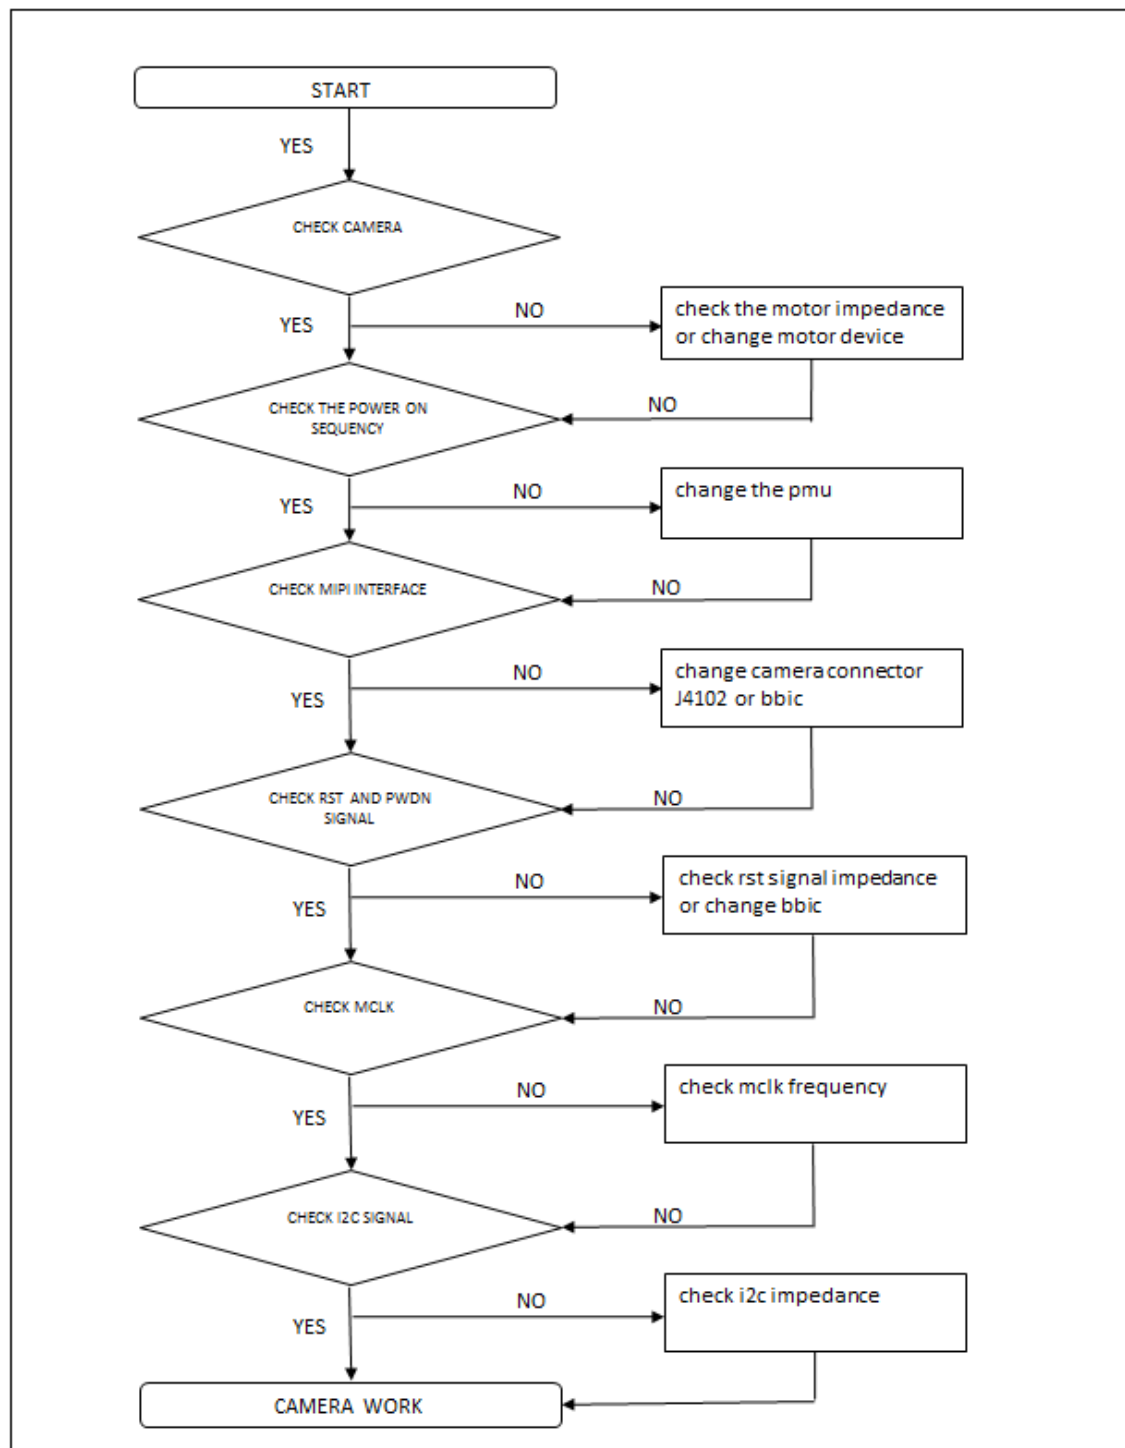

- U101_MT6762_BB chip IC , Digital *Baseband Processor*(Top)

Figure 2-1. Ball map view