

Agenda

- Overview
- LTE Function Placement
- FA issue

Agenda

- Overview
- LTE Function Placement
- FA issue


ZB501KL Band_EU

ZB501KL


2G: 850/900/1800/1900 3G: 1/5/8

FDD-LTE: 1/3/7/8/20

ZB501KL RF Overview

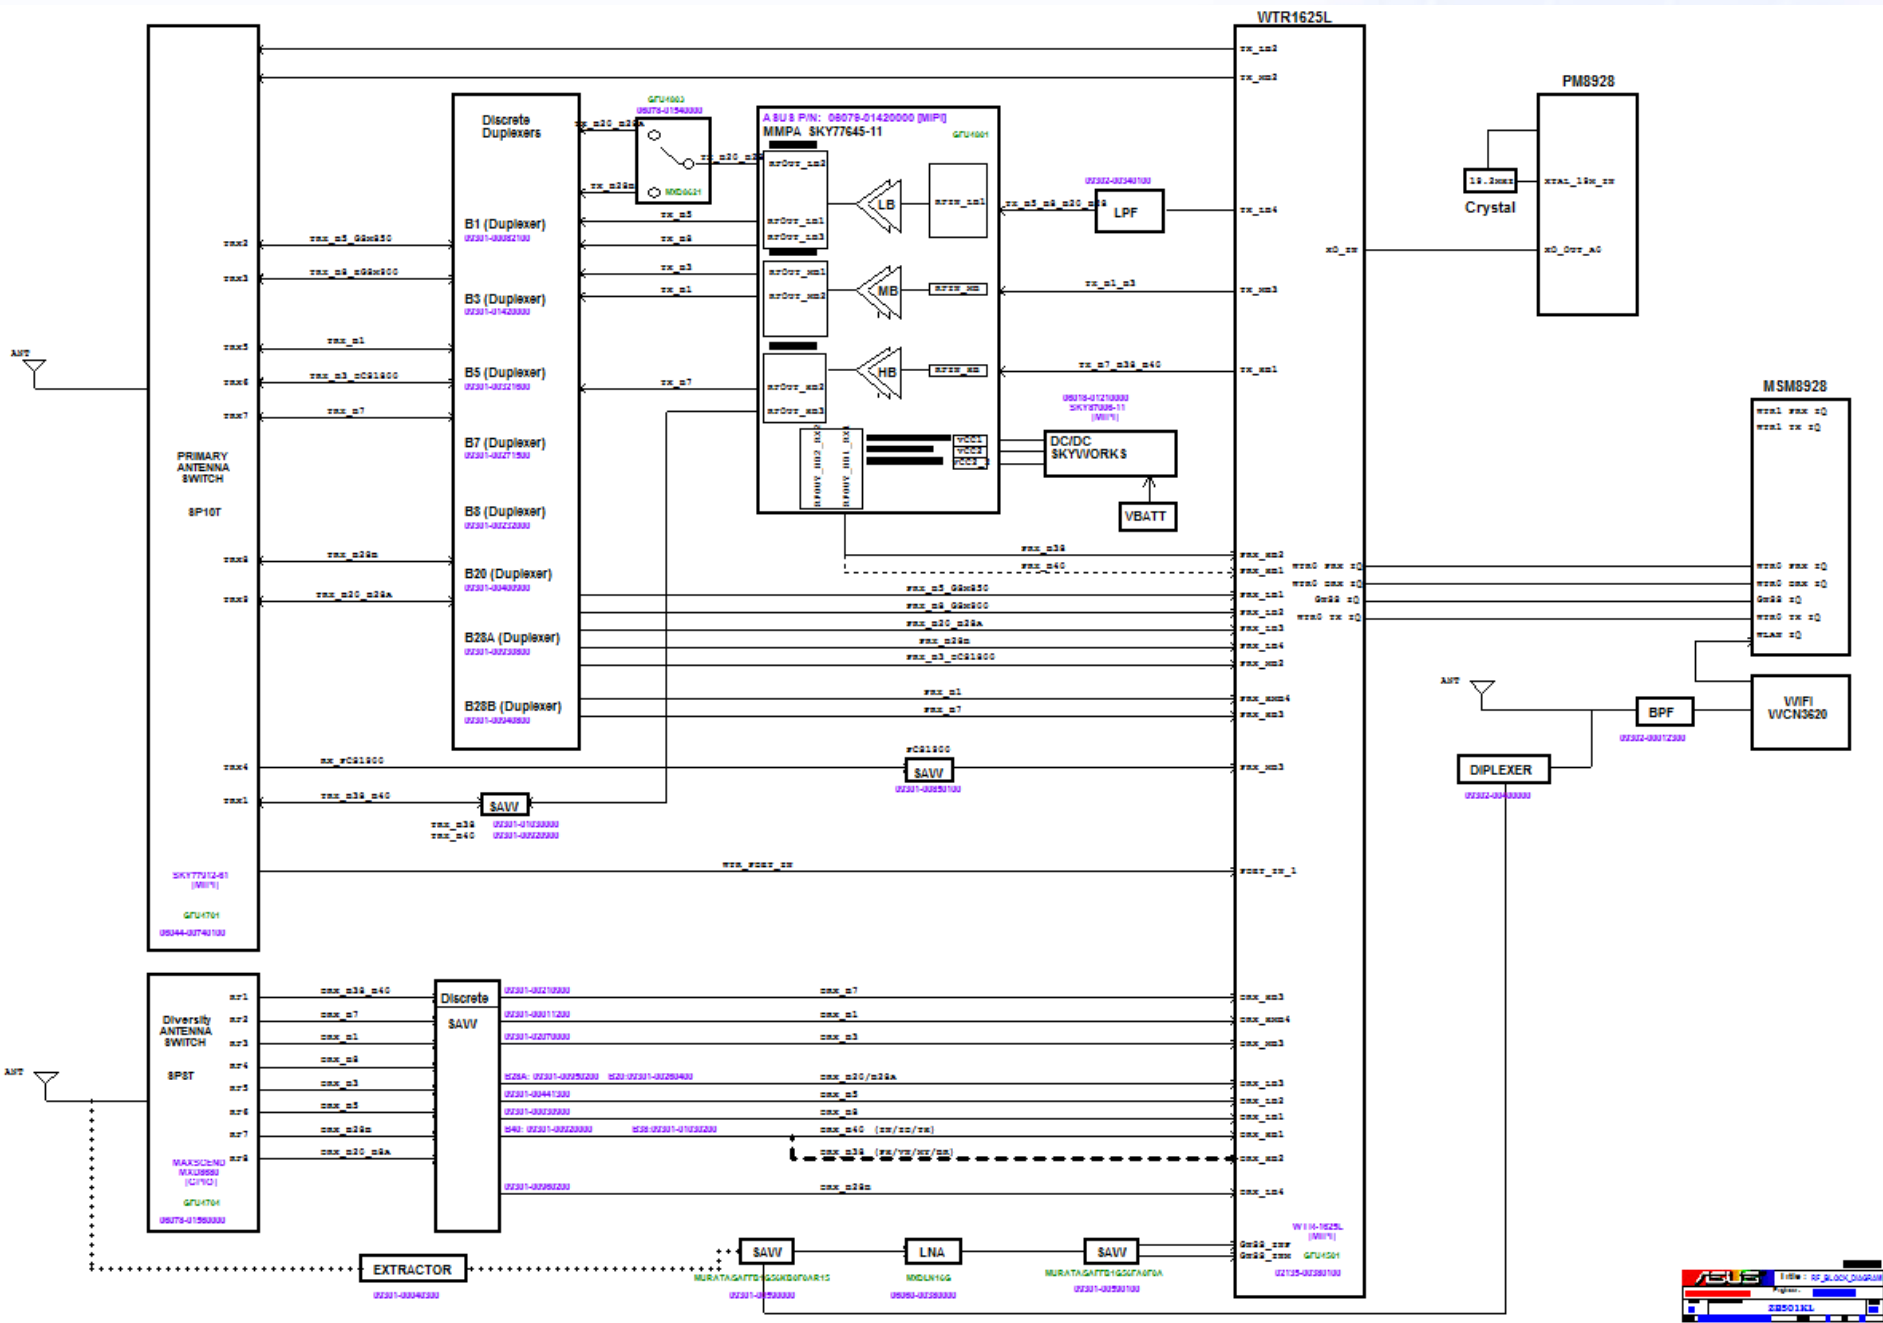


ZB501KL Placement

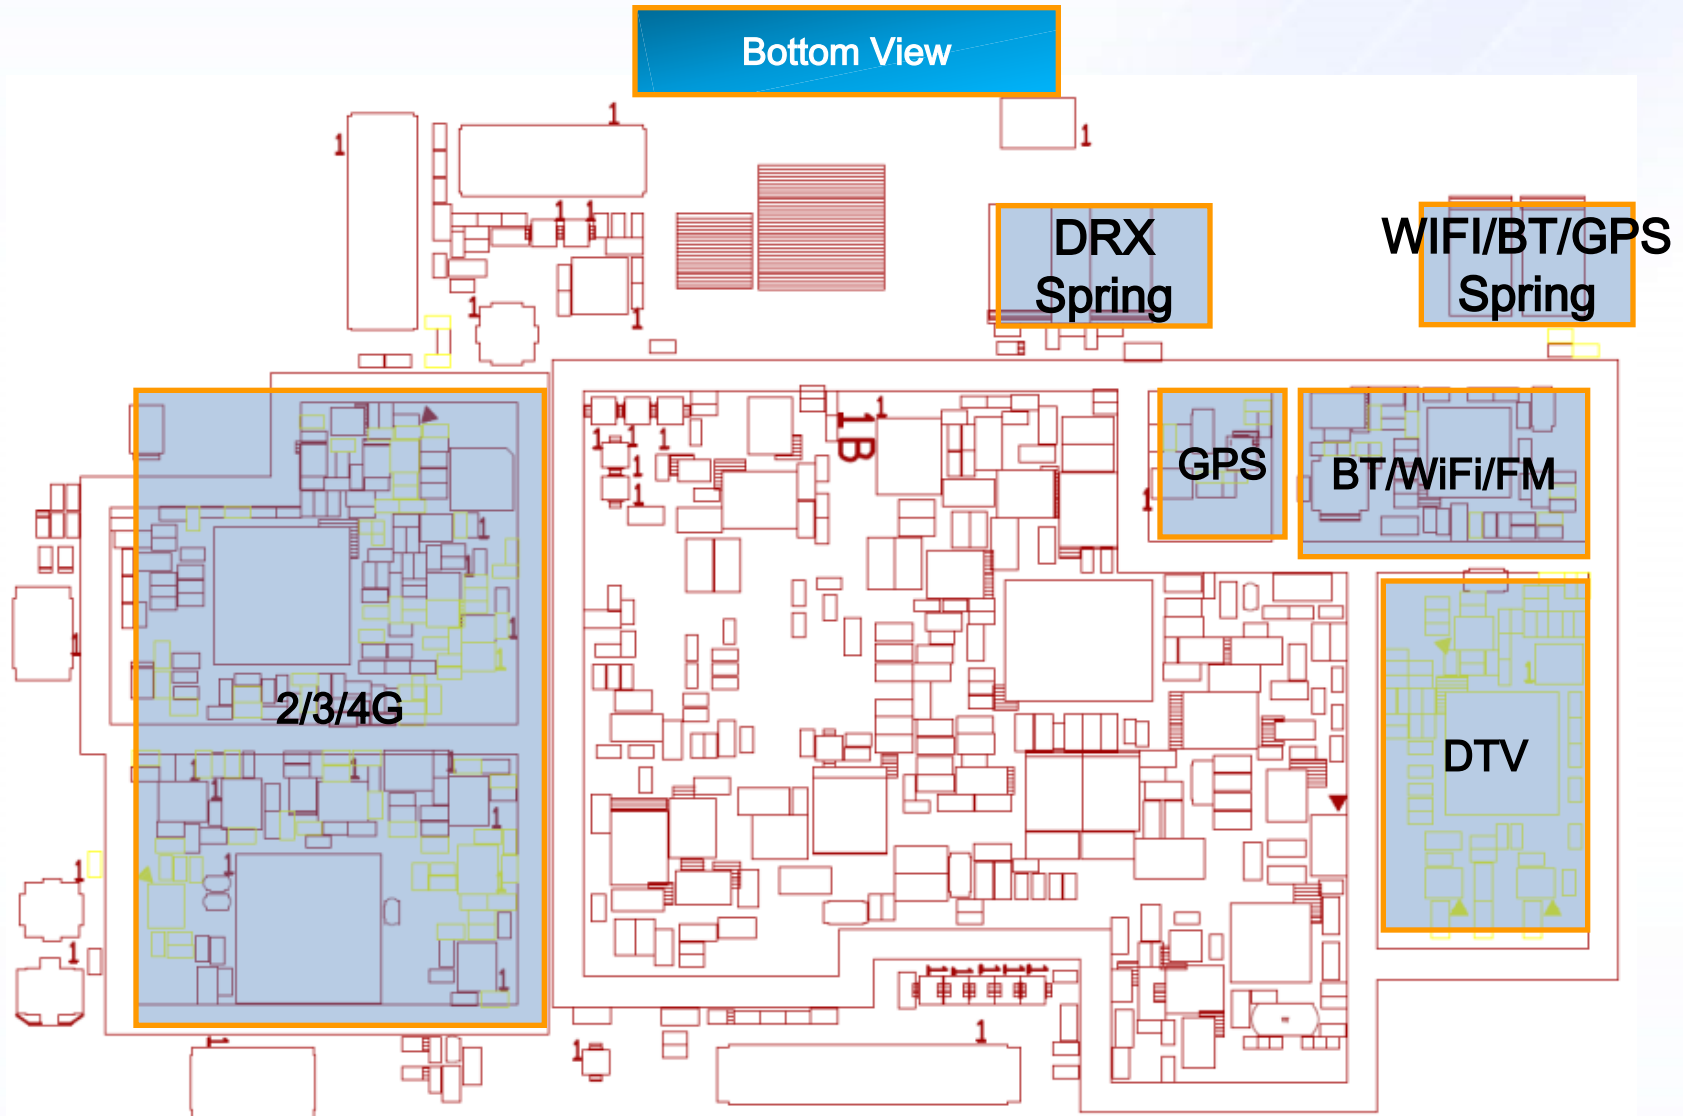


ZB501KL Placement

Top View

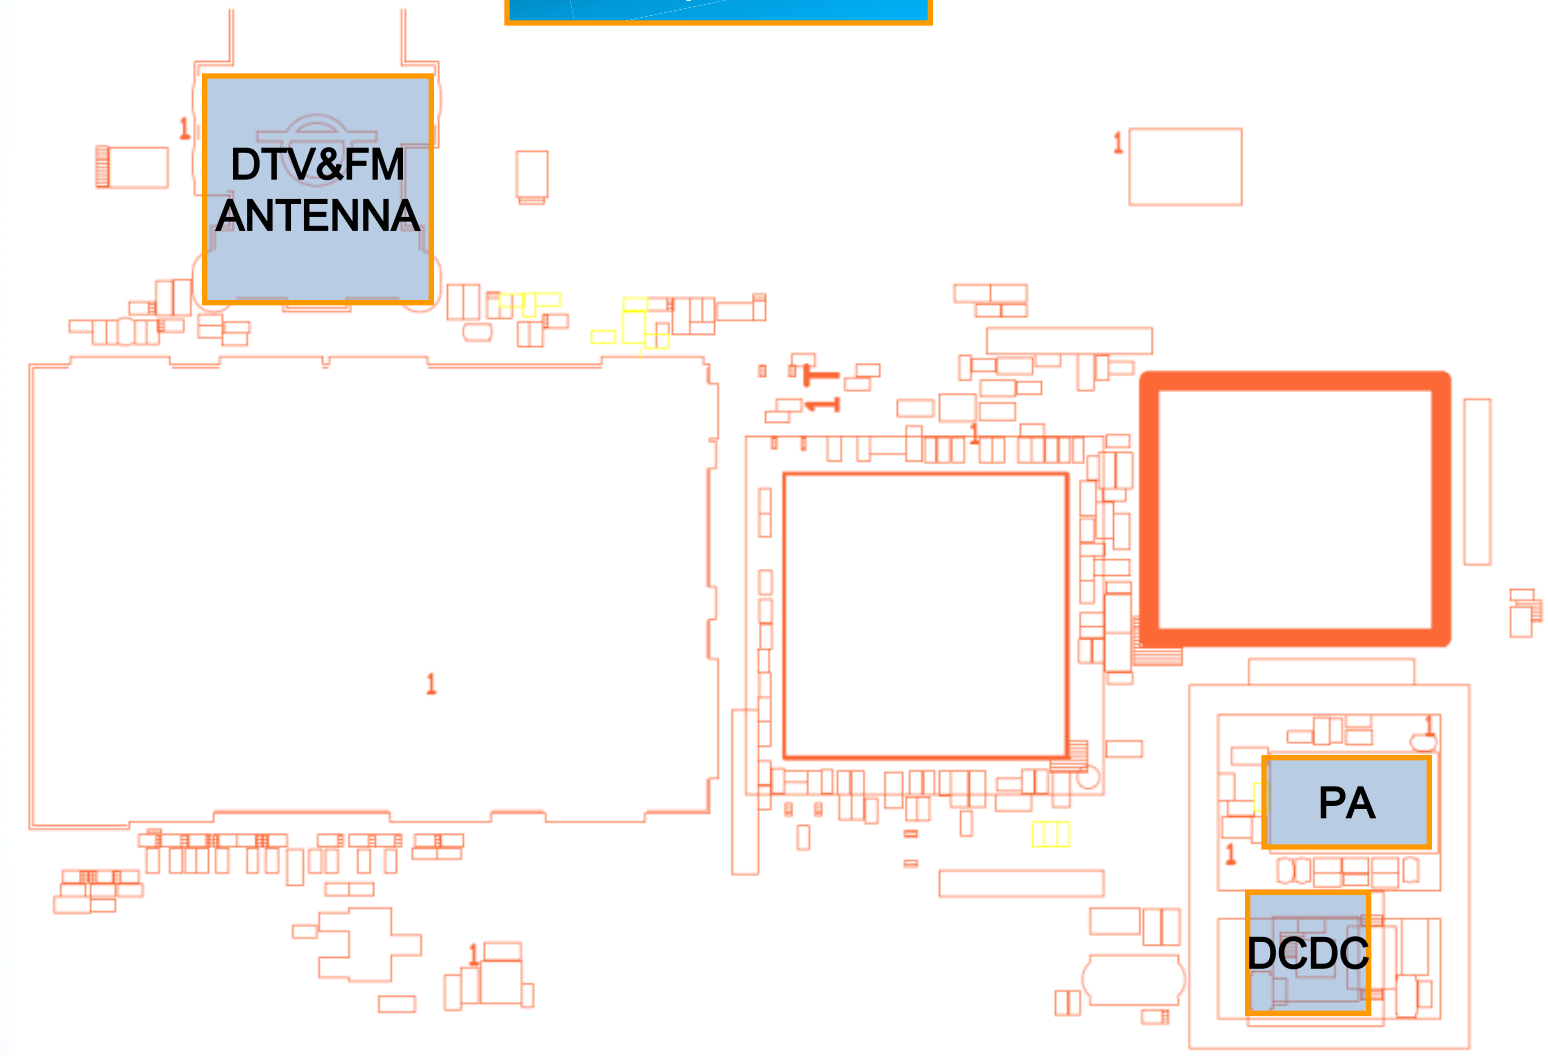



Key Components Location

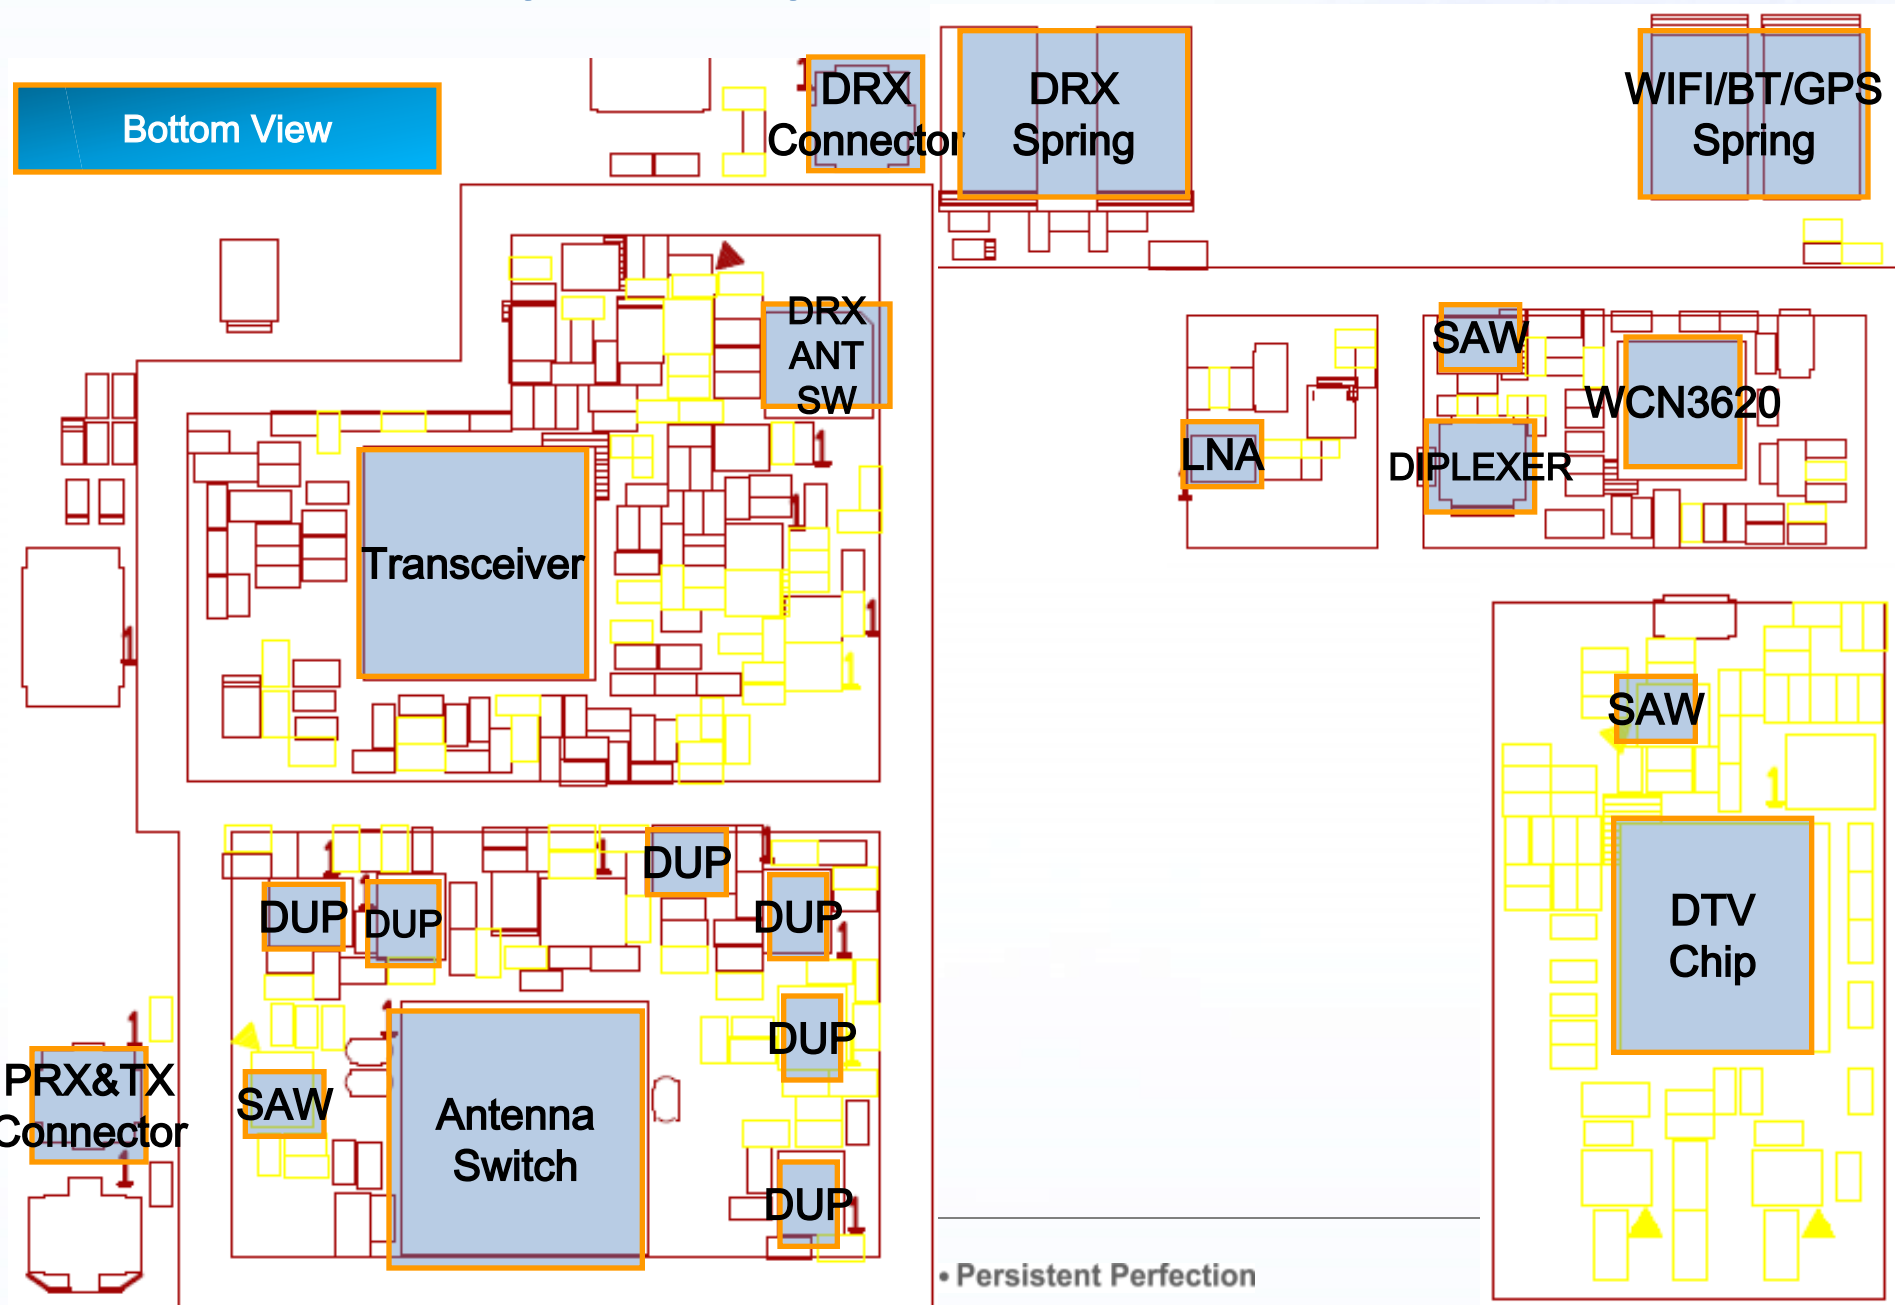



Agenda

- Overview
- **LTE** Function Placement
- FA issue



LTE/WCDMA B1 TX

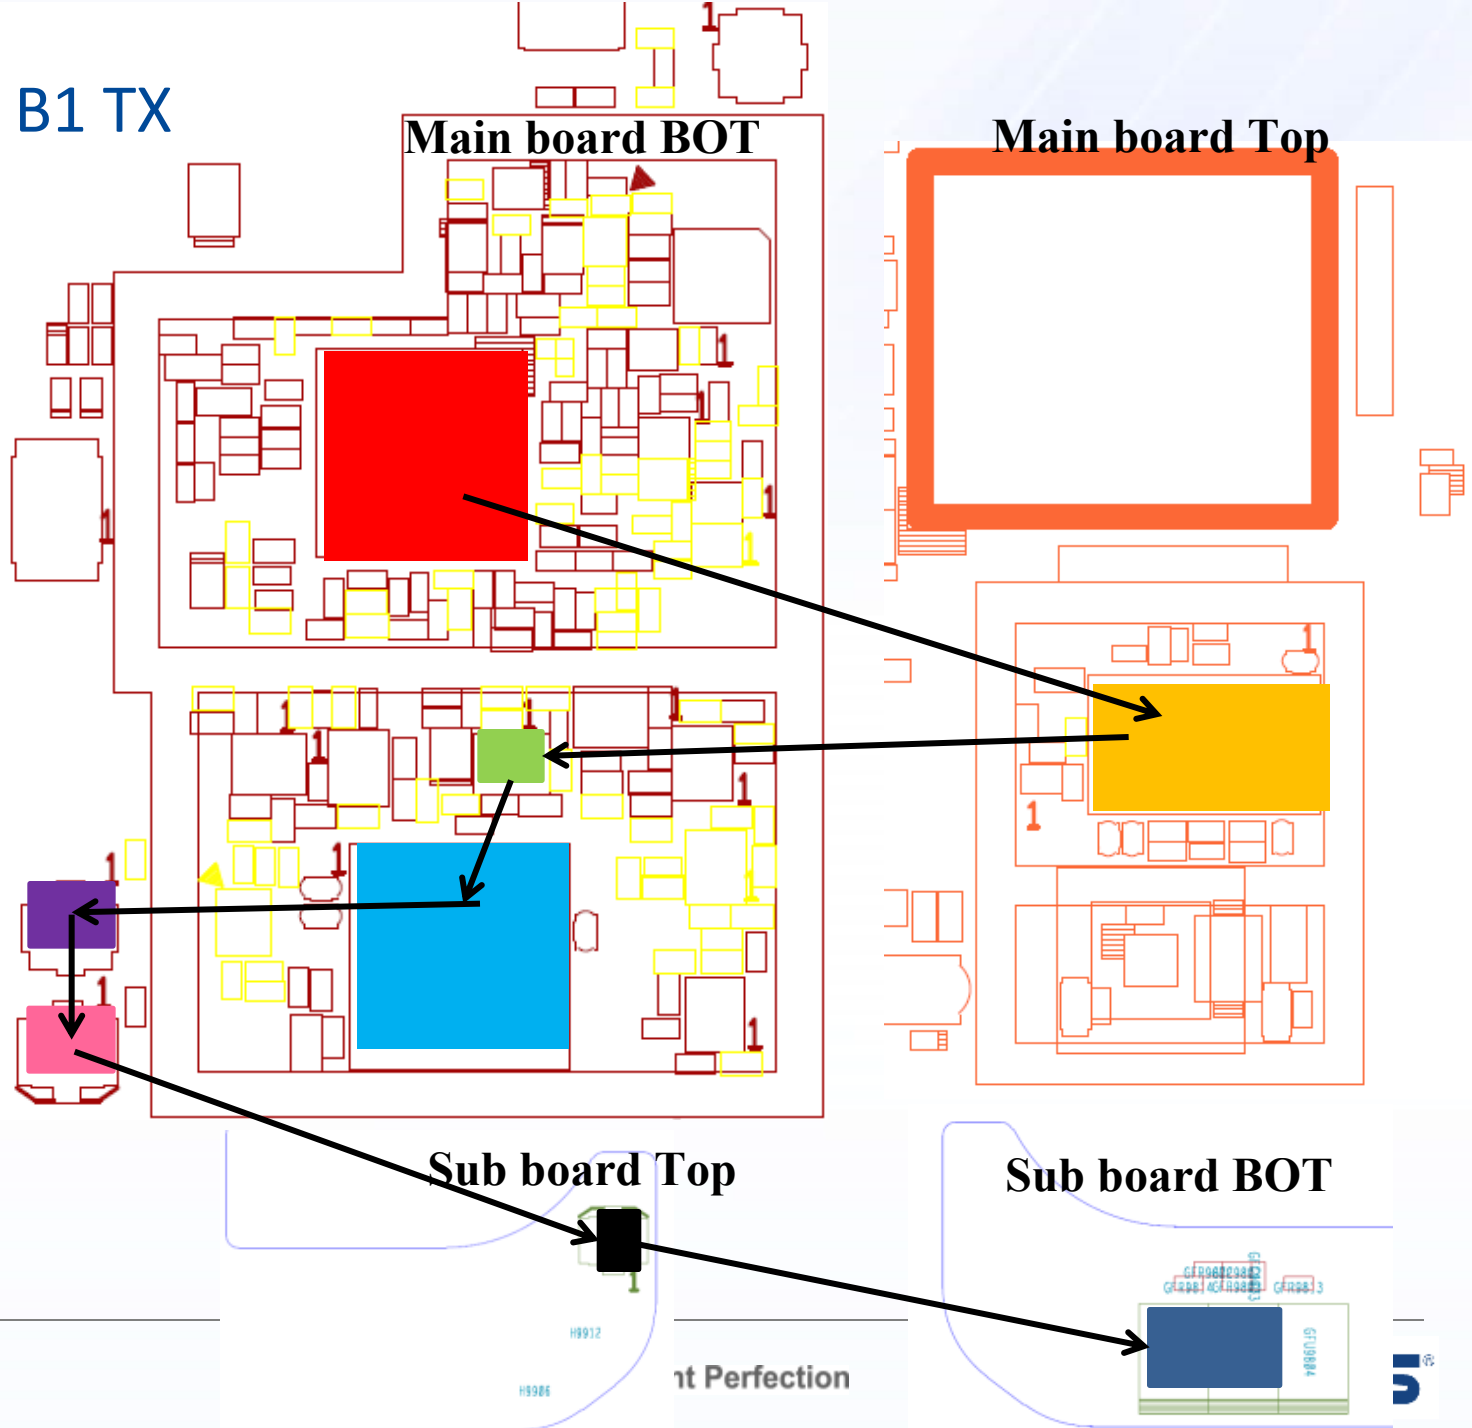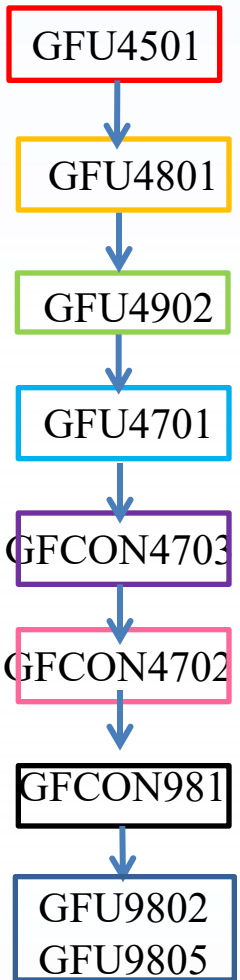



LTE/WCDMA B1 PRX

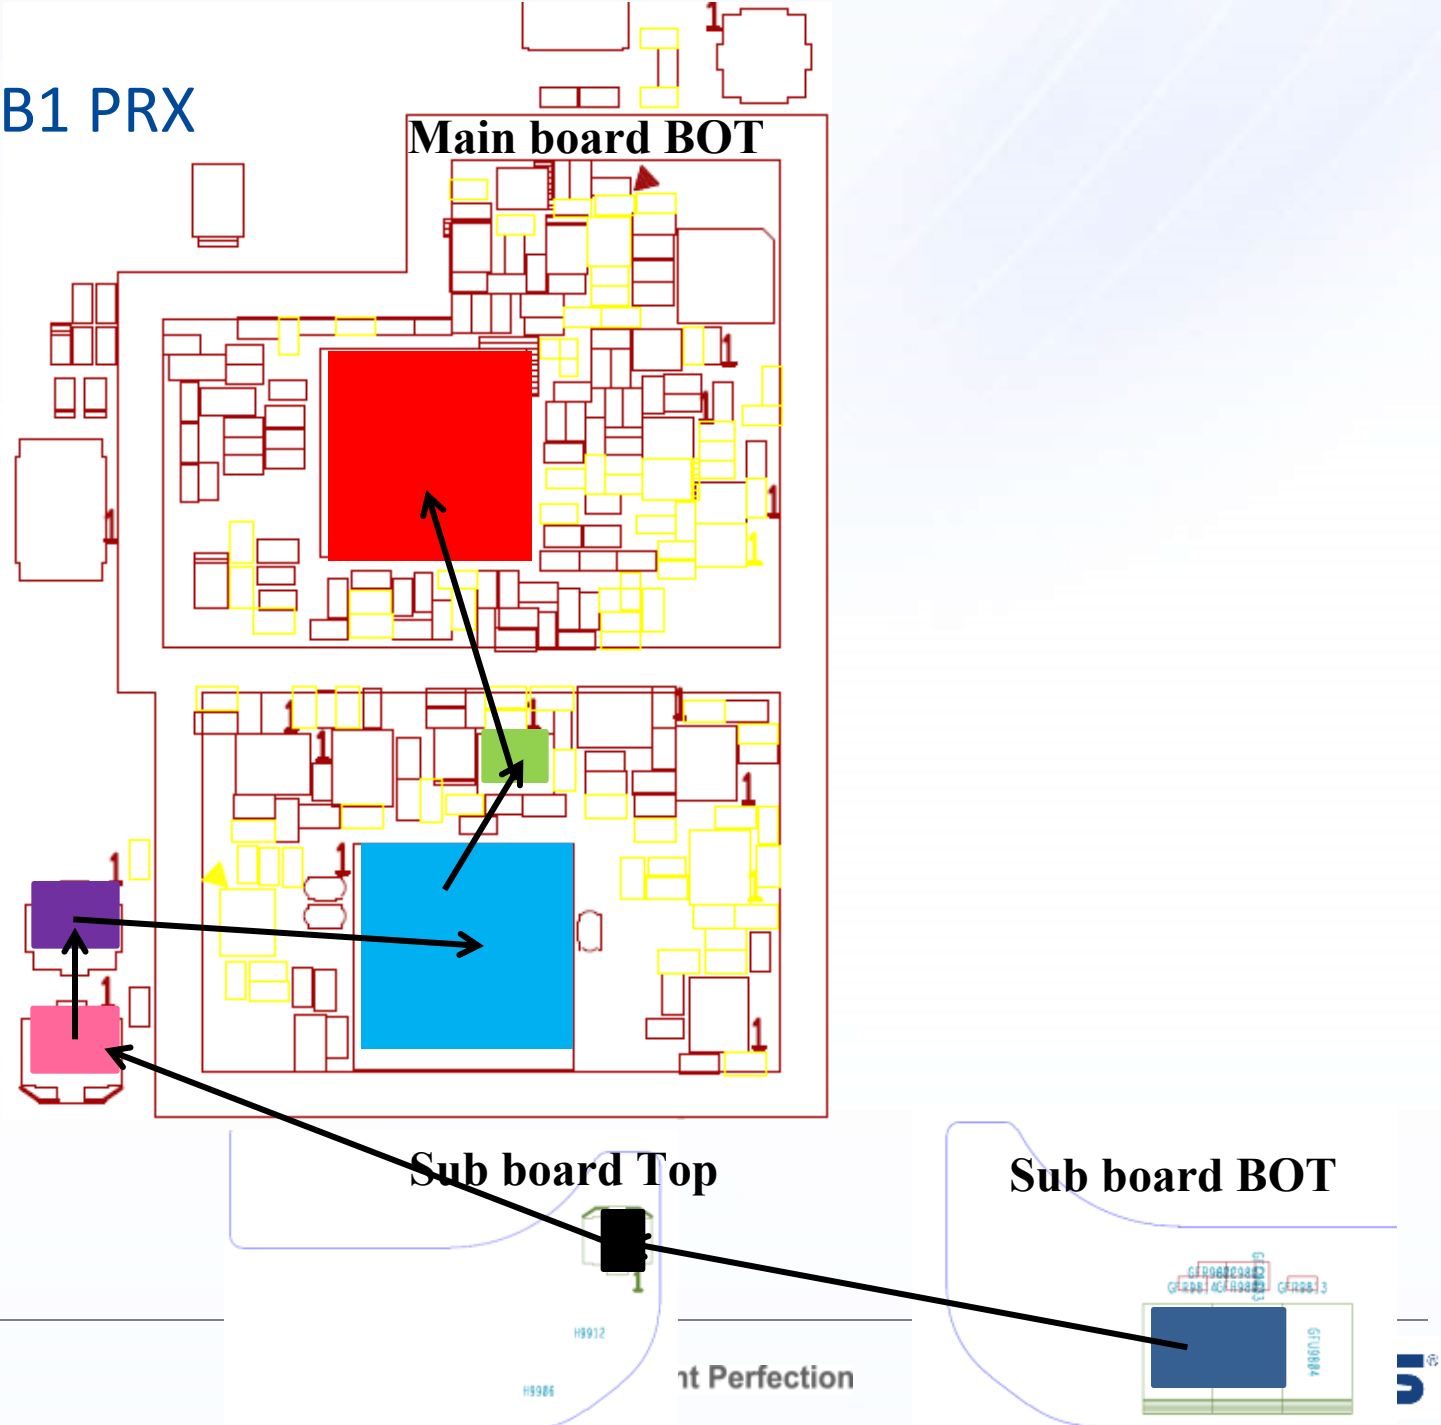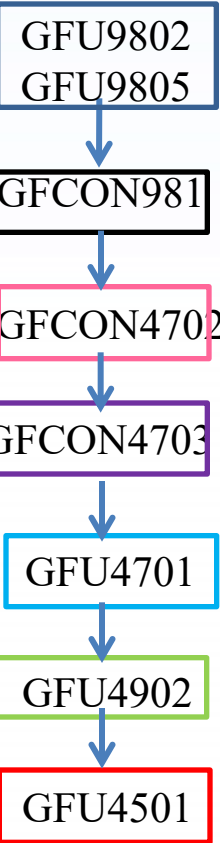




LTE/WCDMA B1 DRX

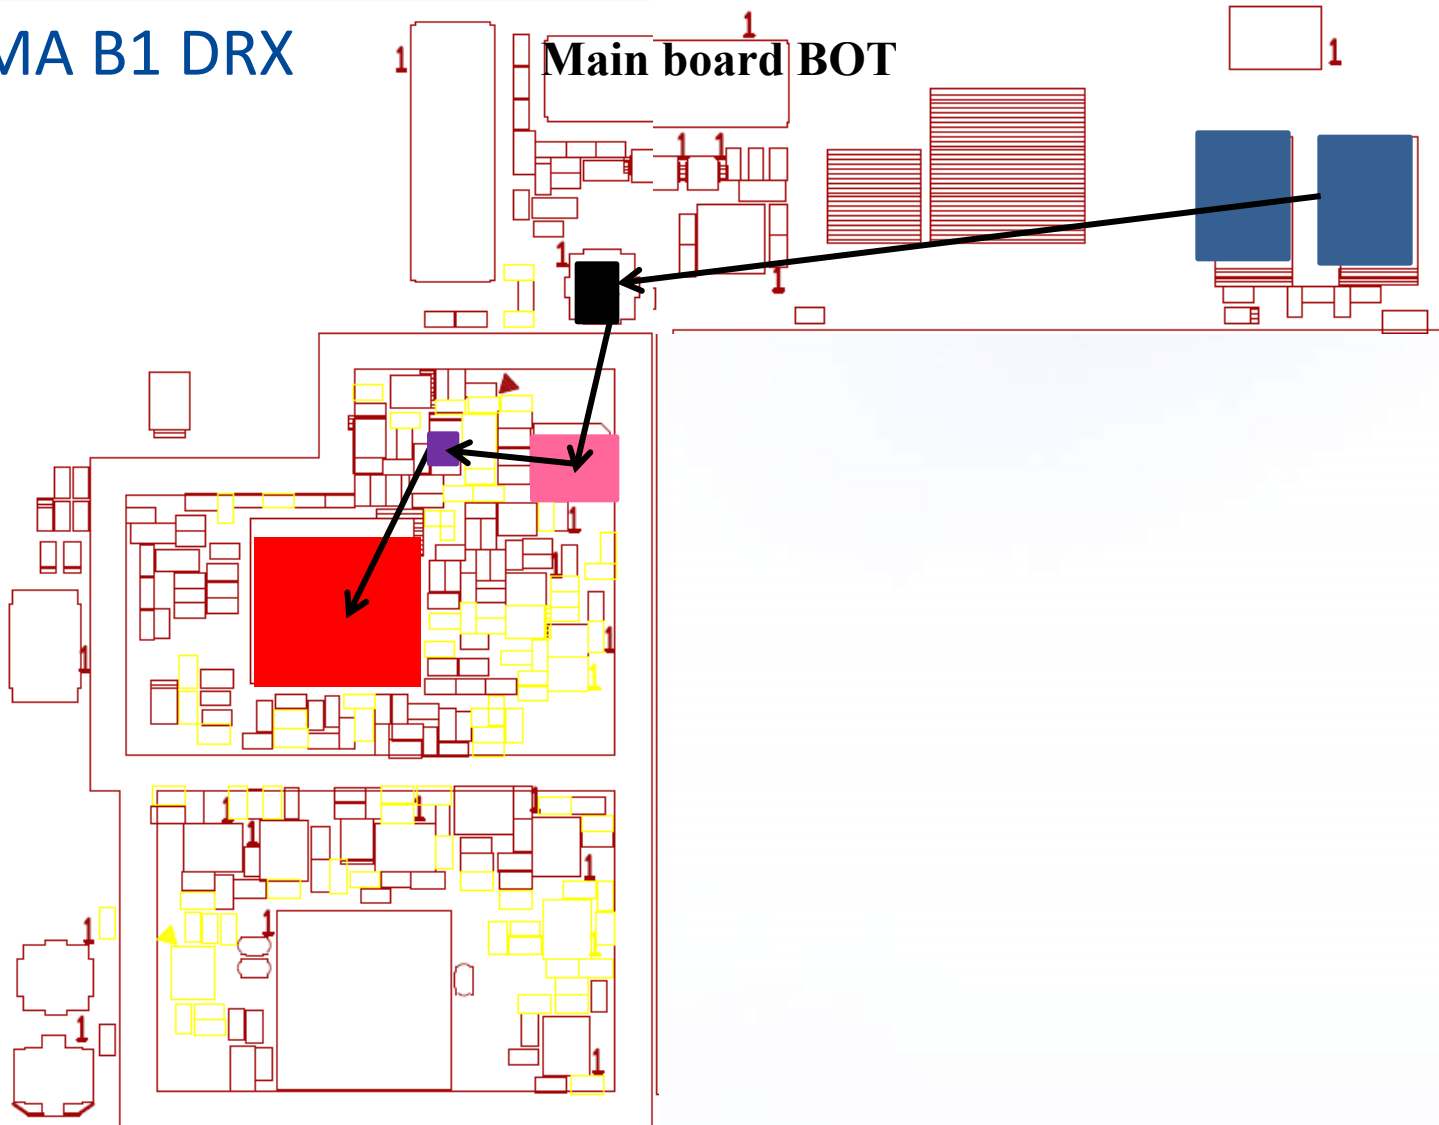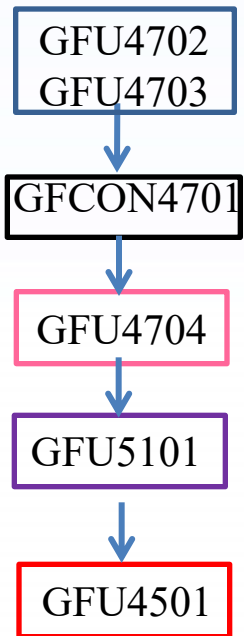



WCDMA B5 TX

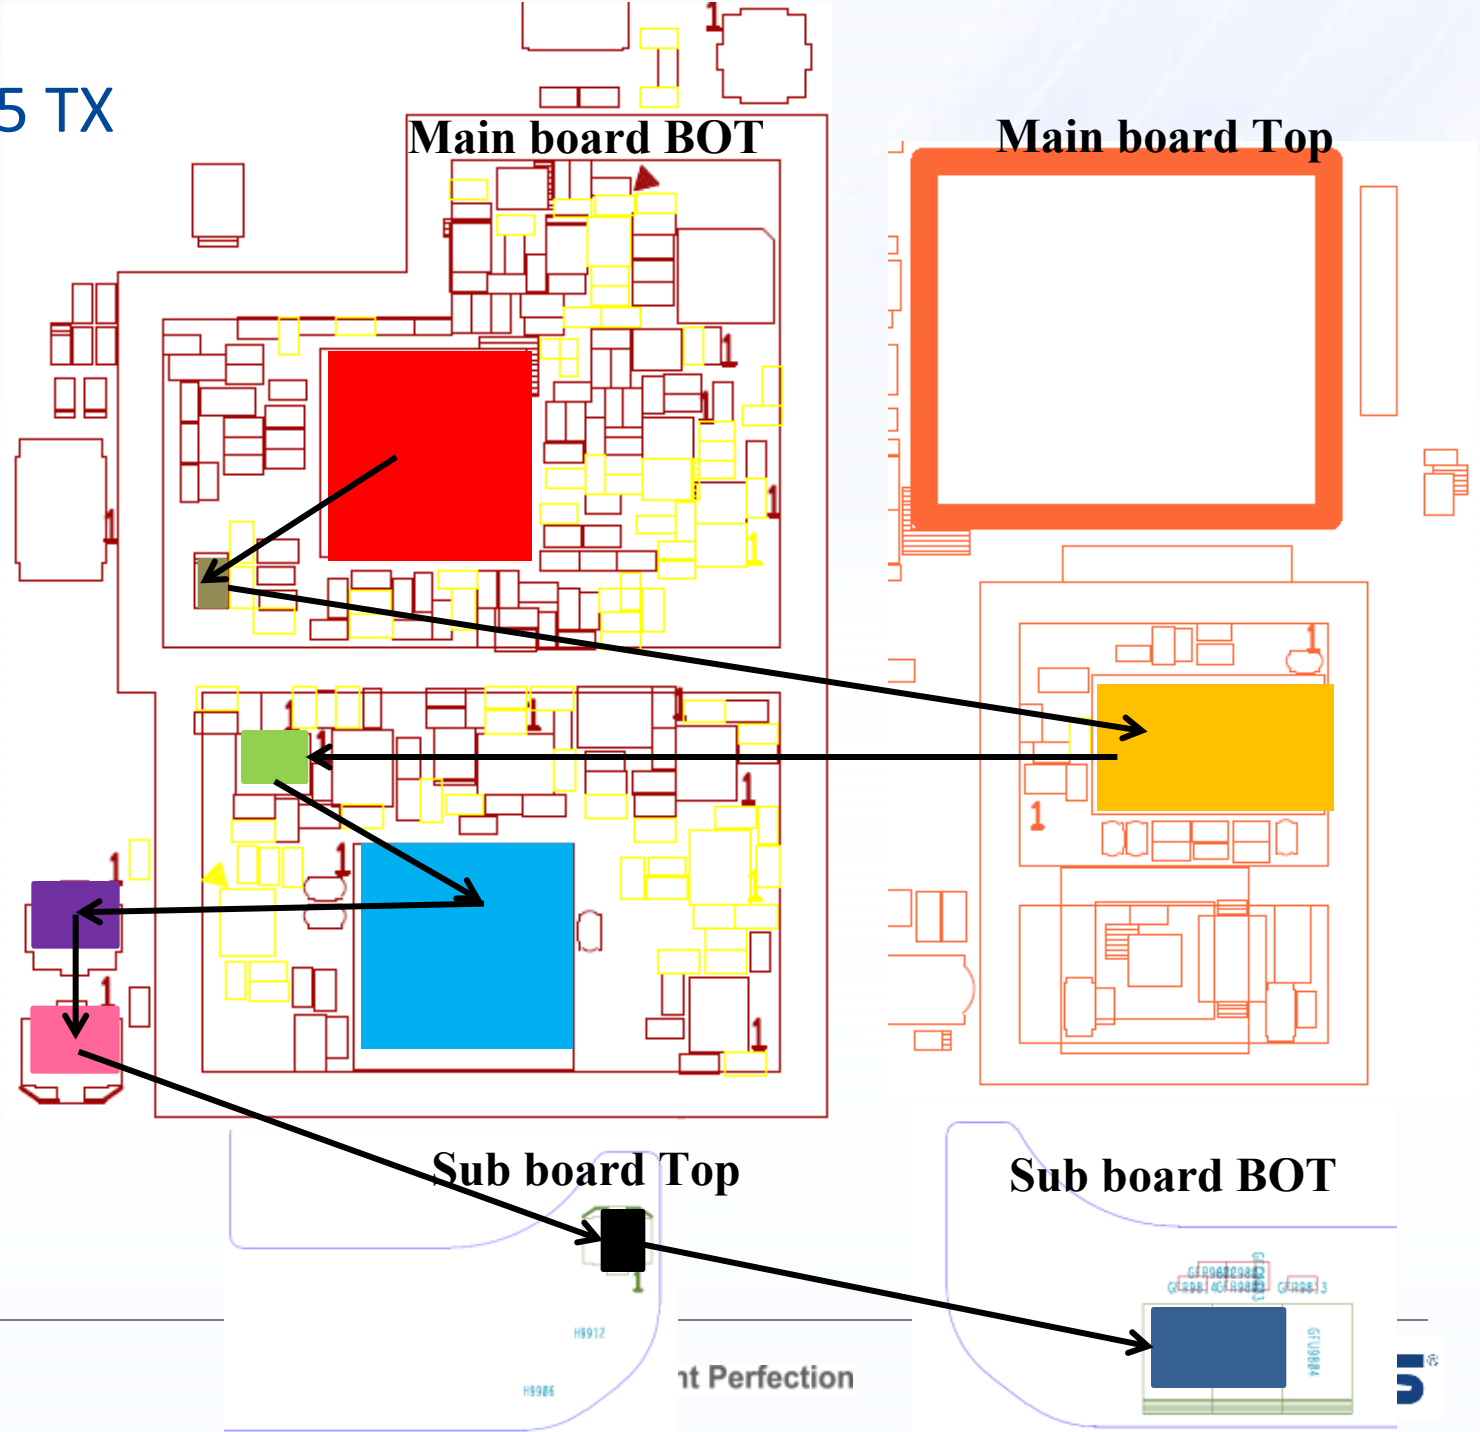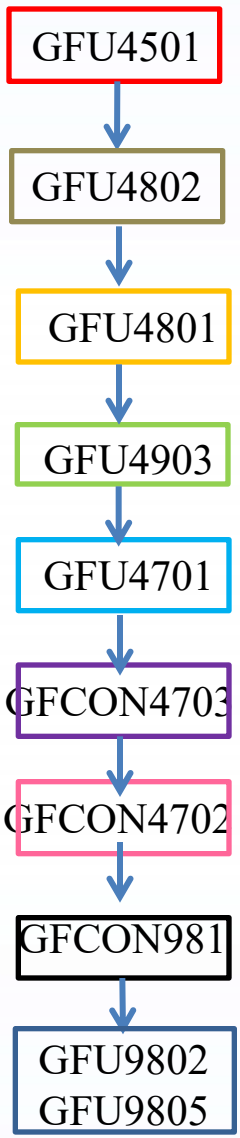



WCDMA B5 PRX

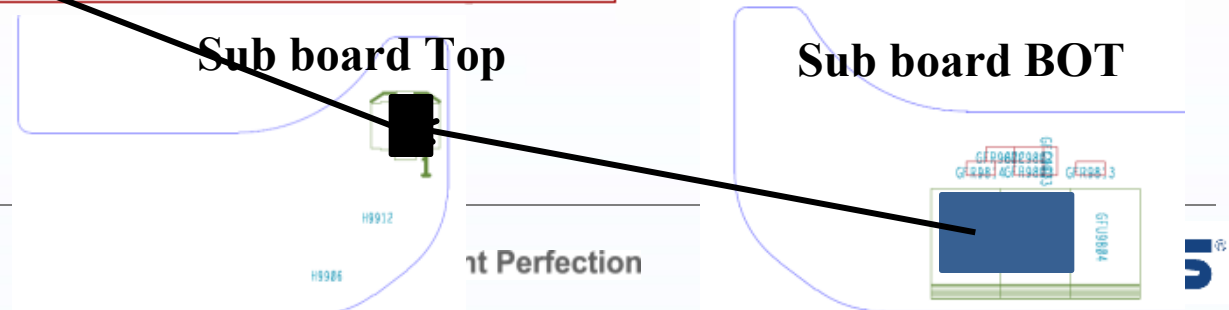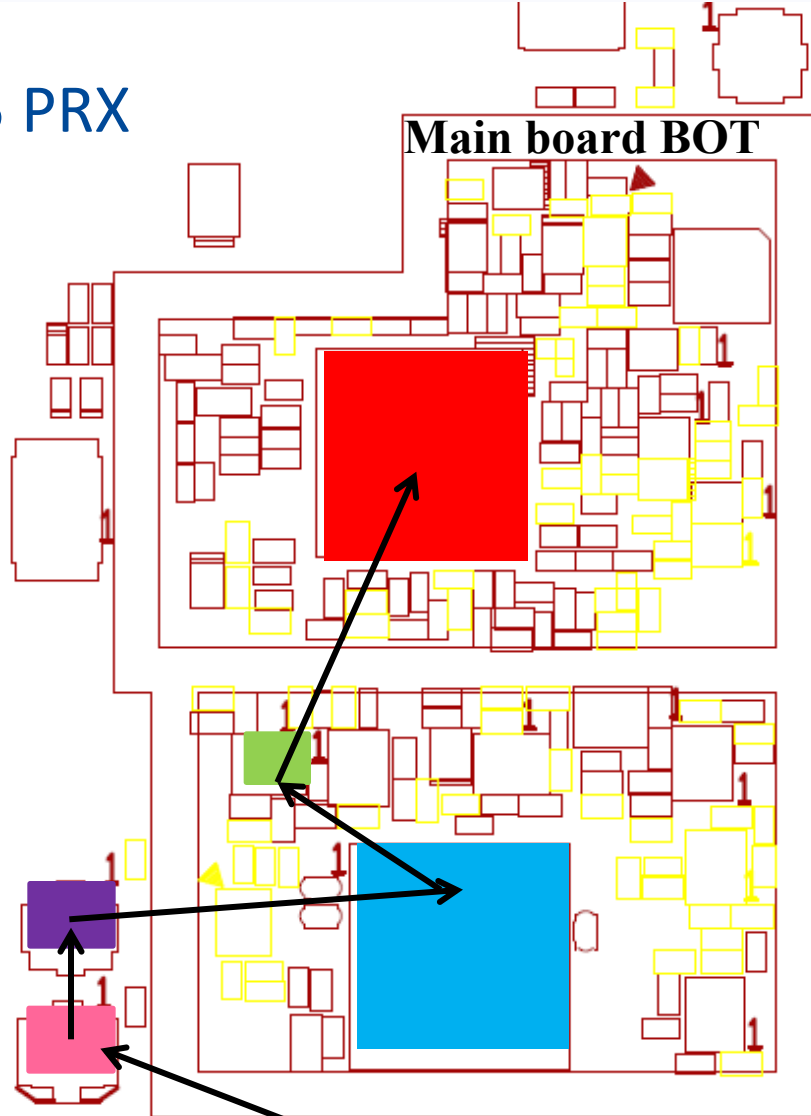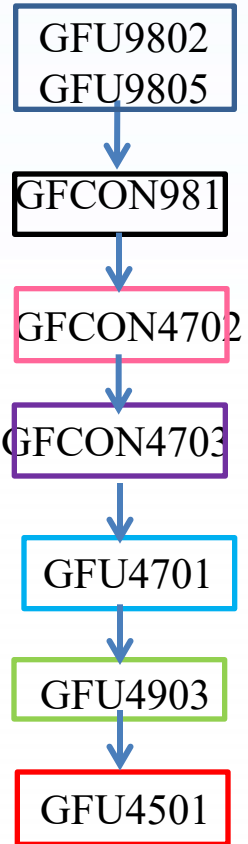



WCDMA B5 DRX

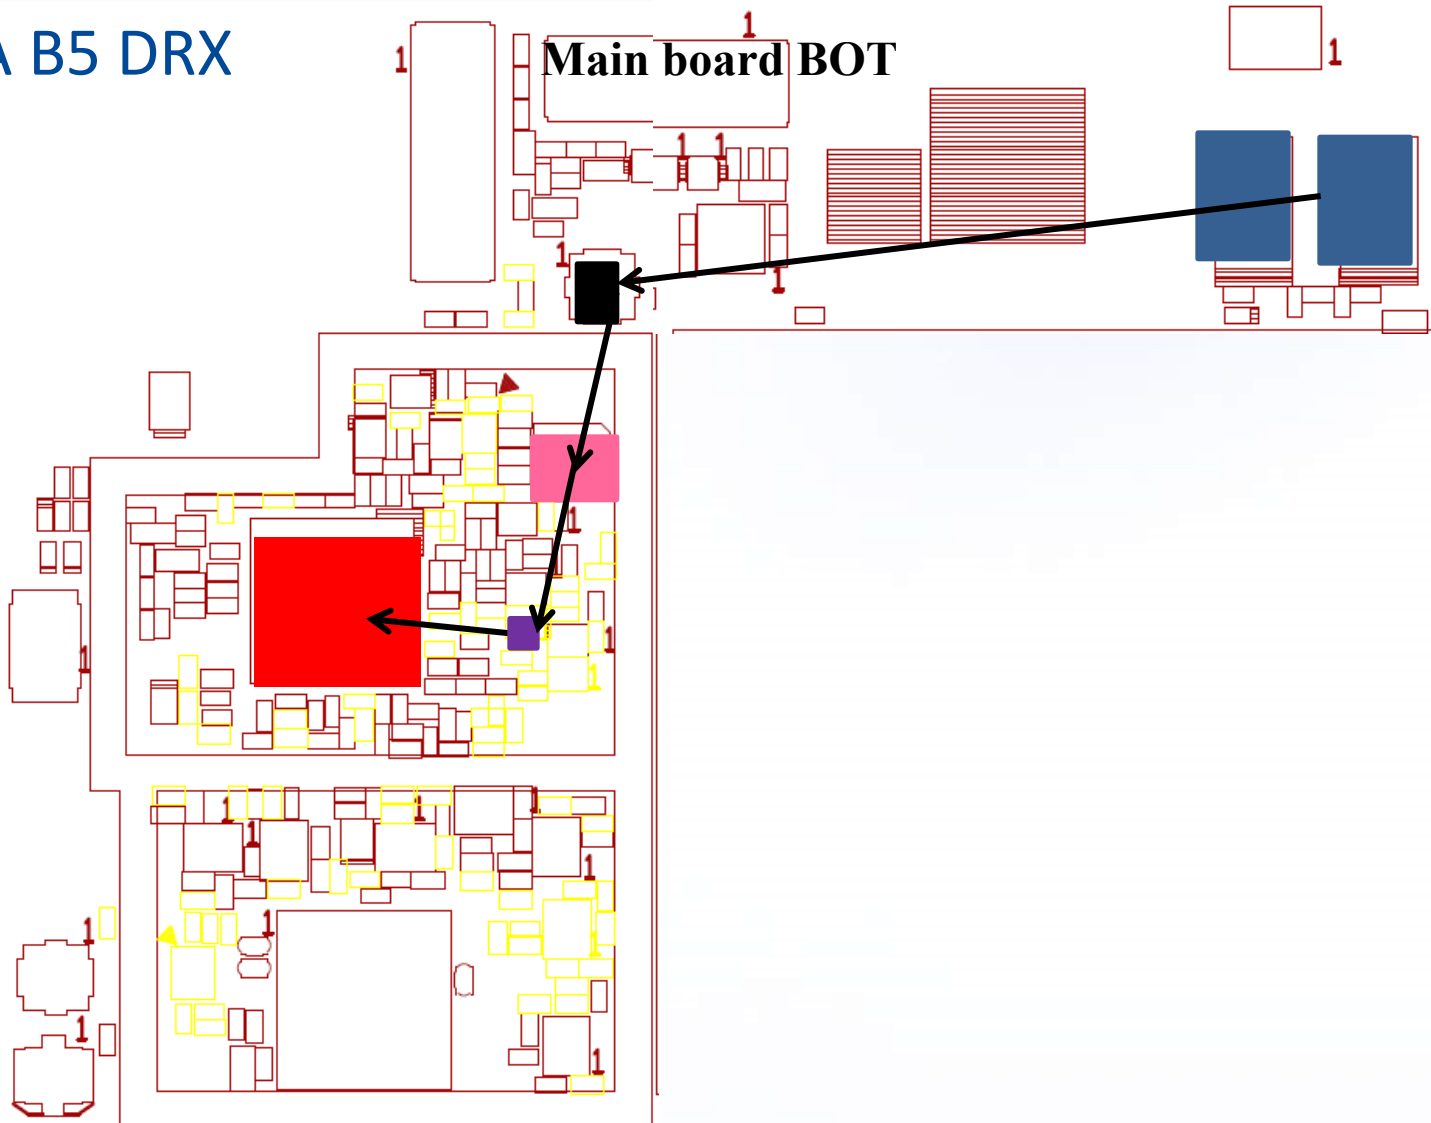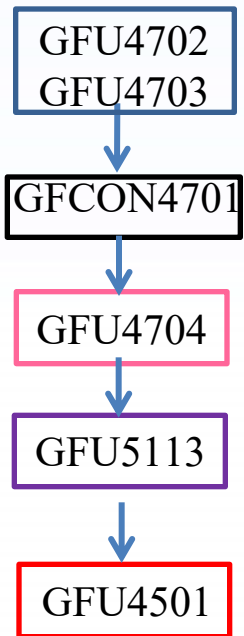



LTE/WCDMA B8 TX

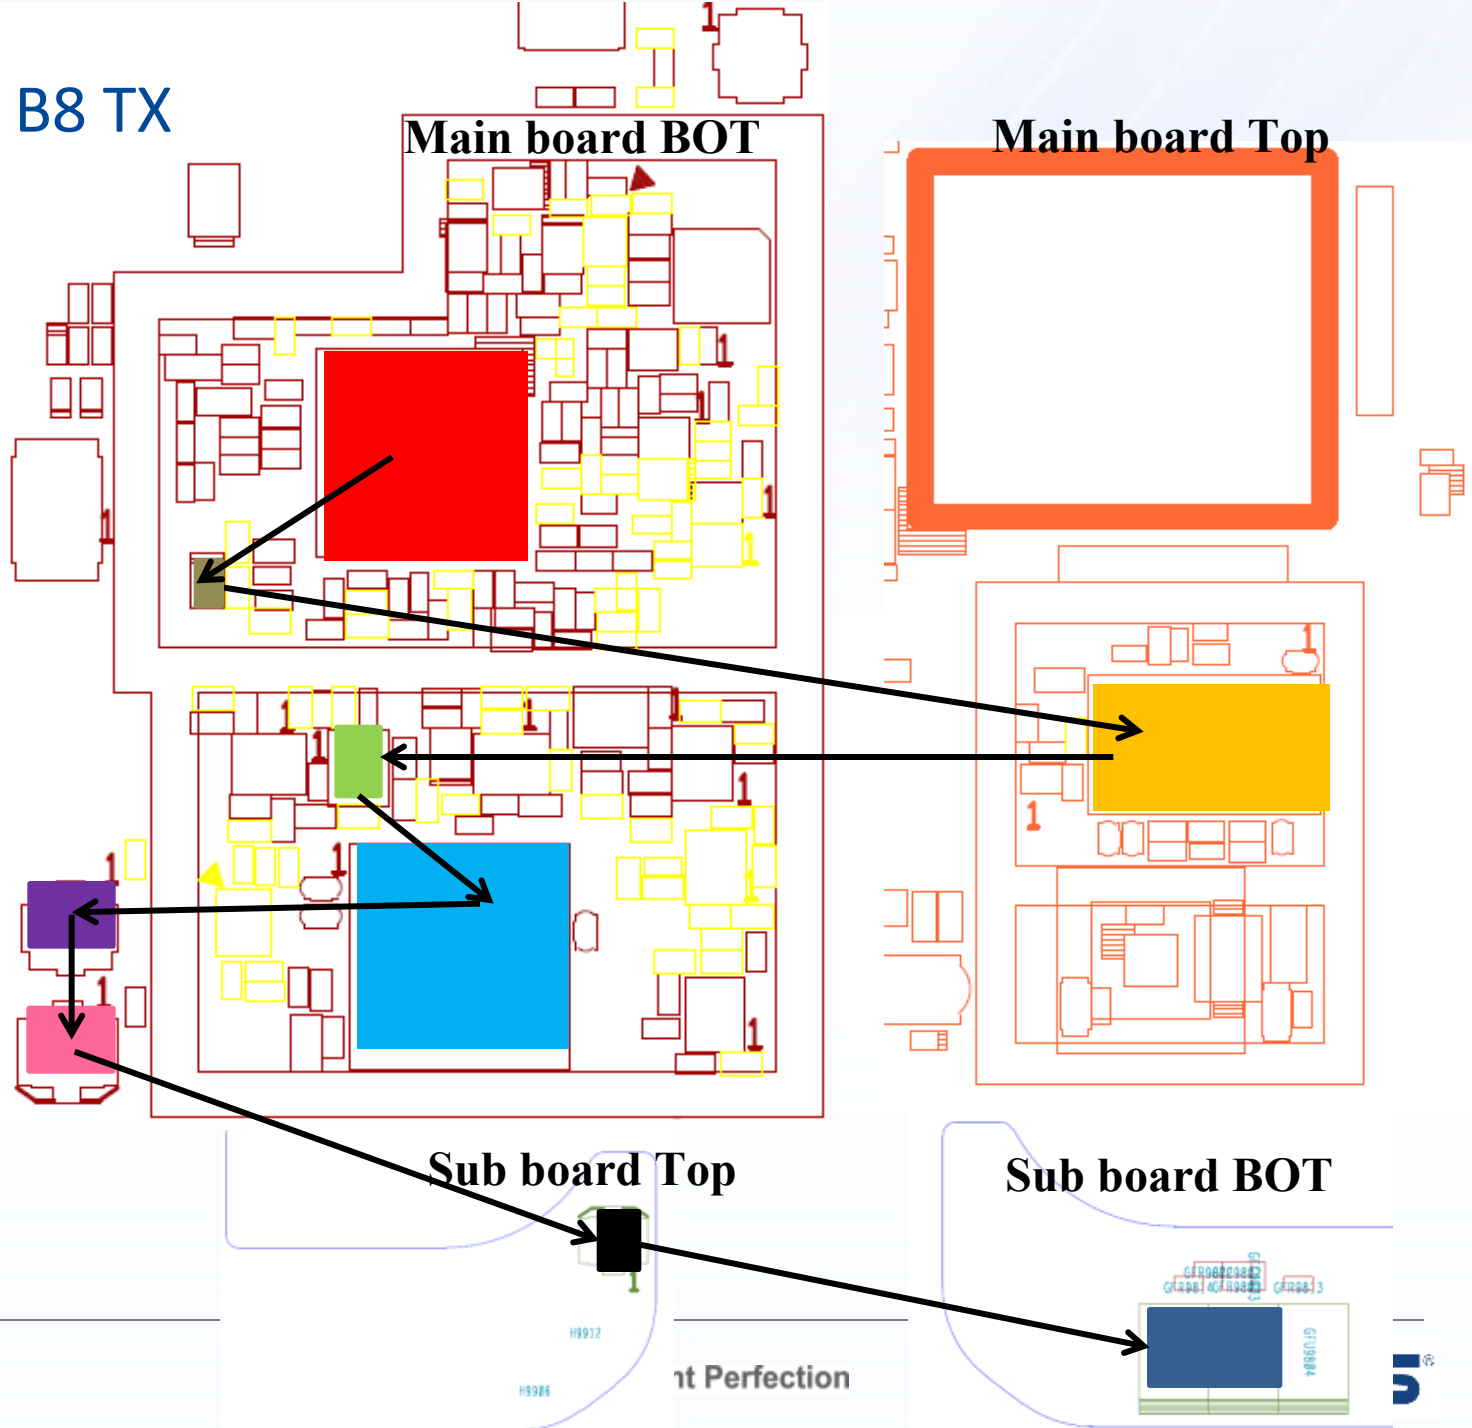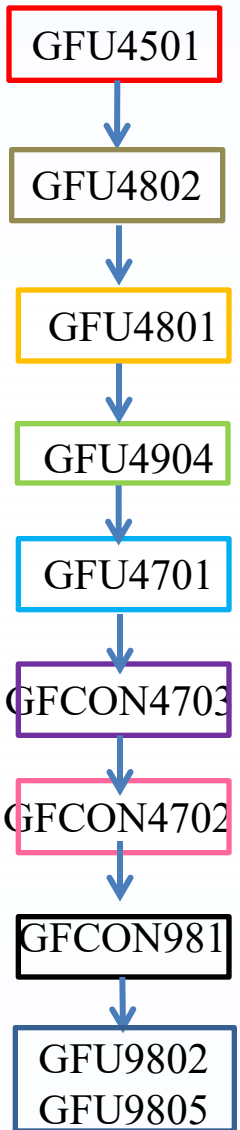





LTE/WCDMA B8 PRX

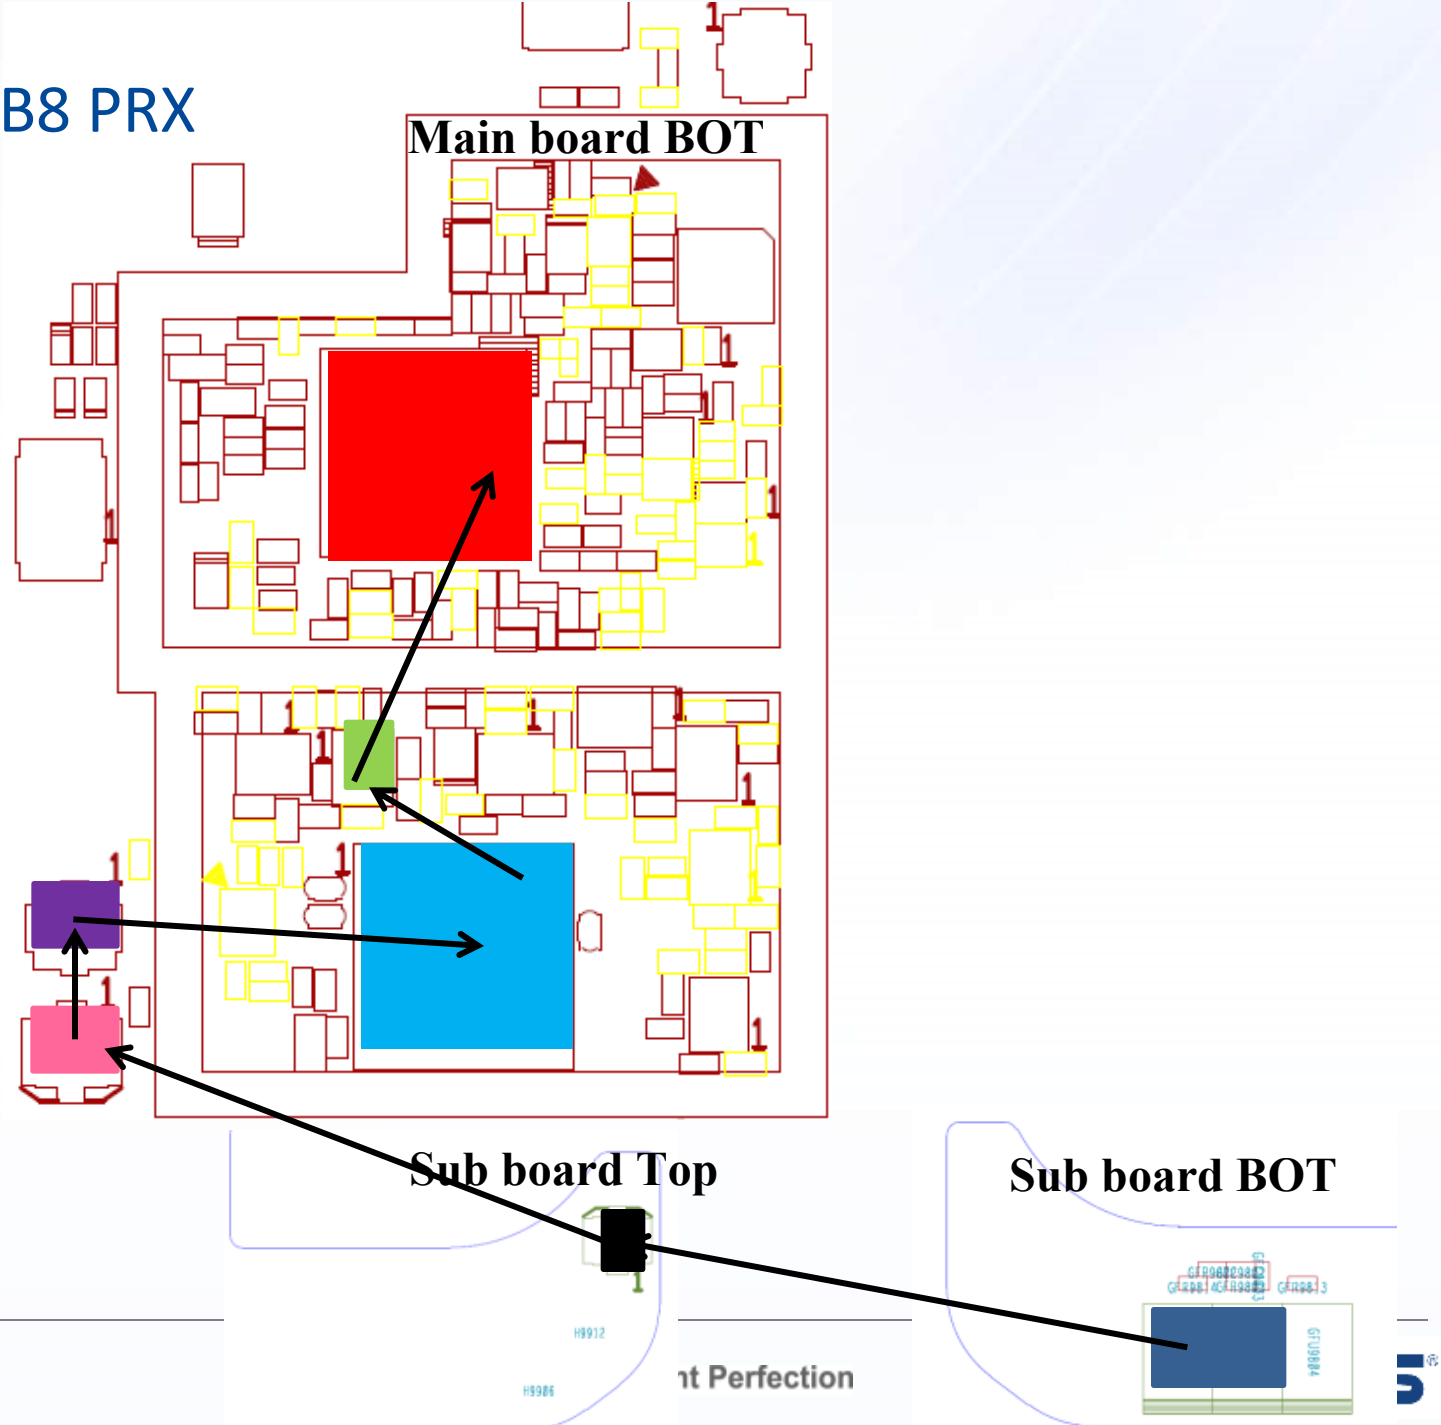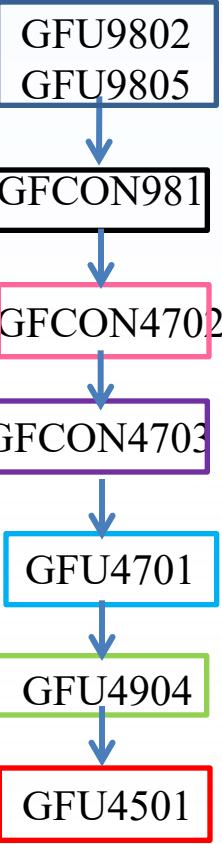



LTE/WCDMA B8 DRX

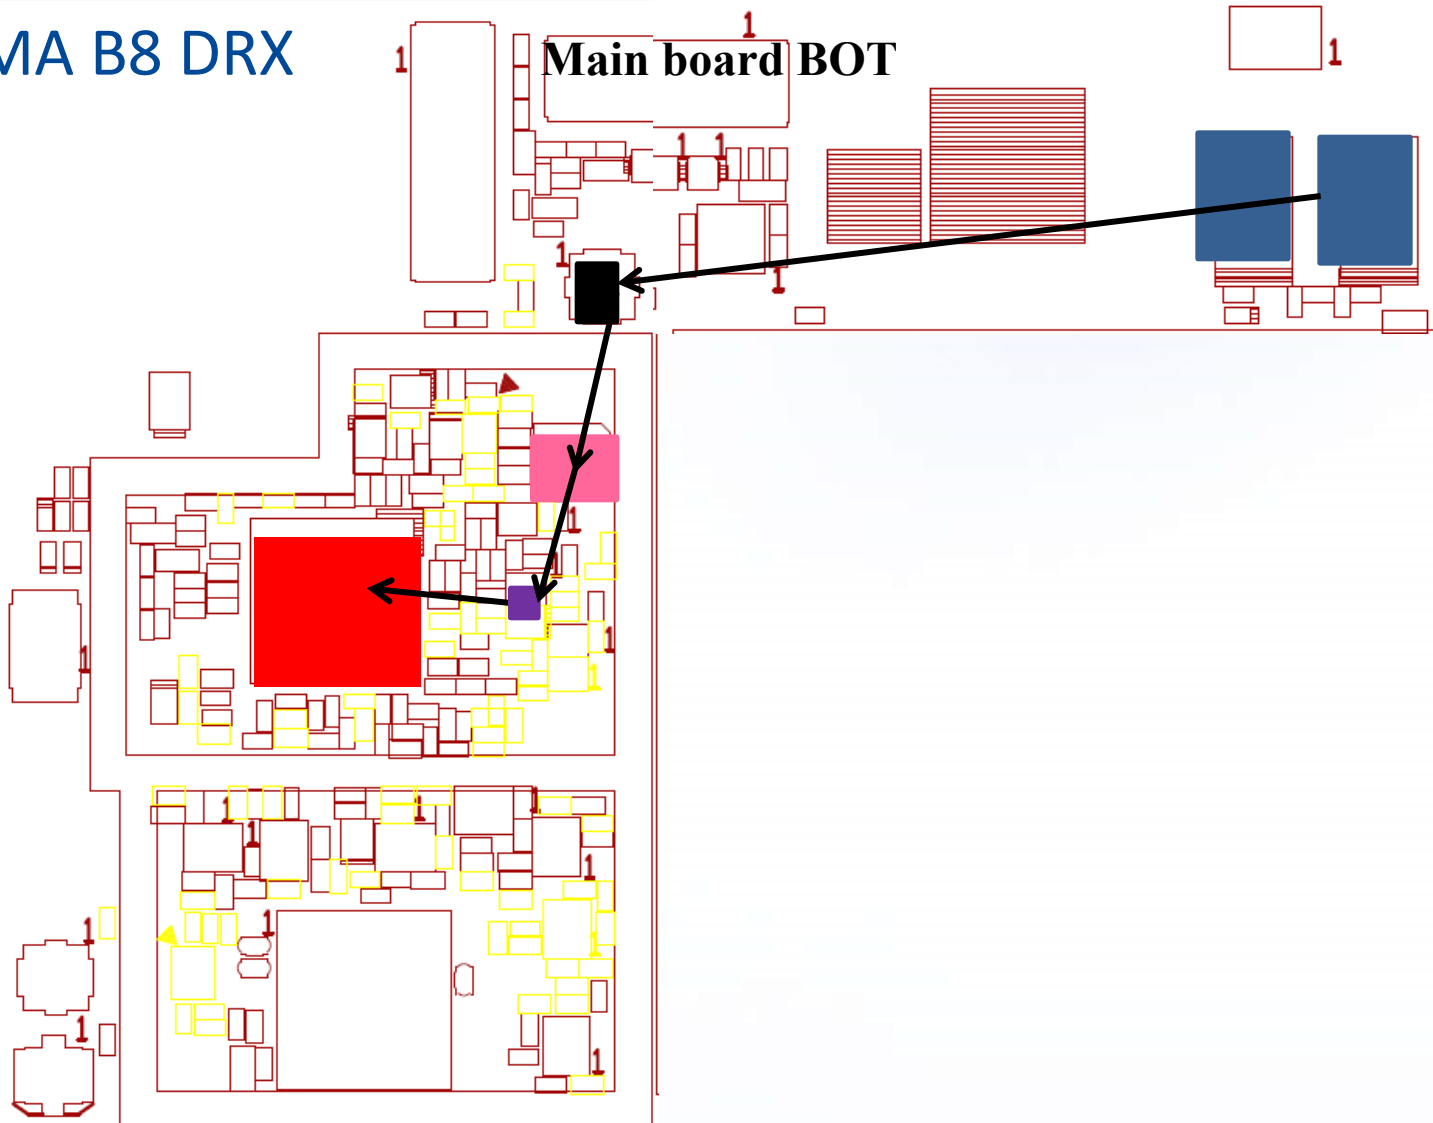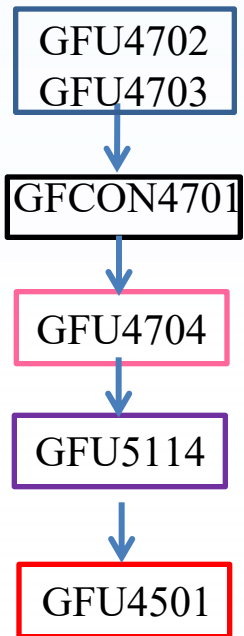


LTE B3 PRX

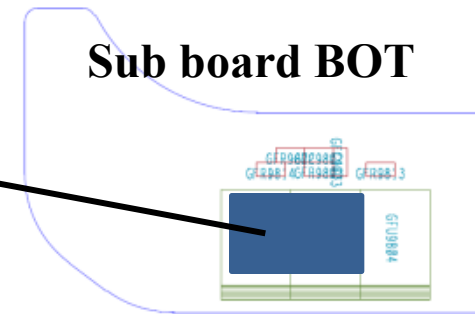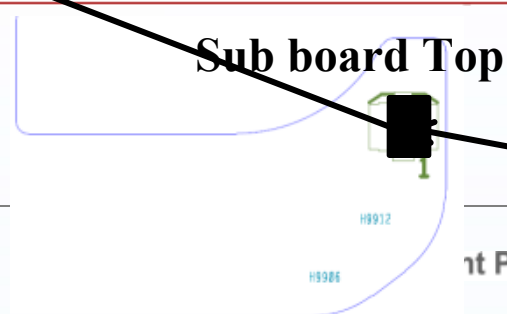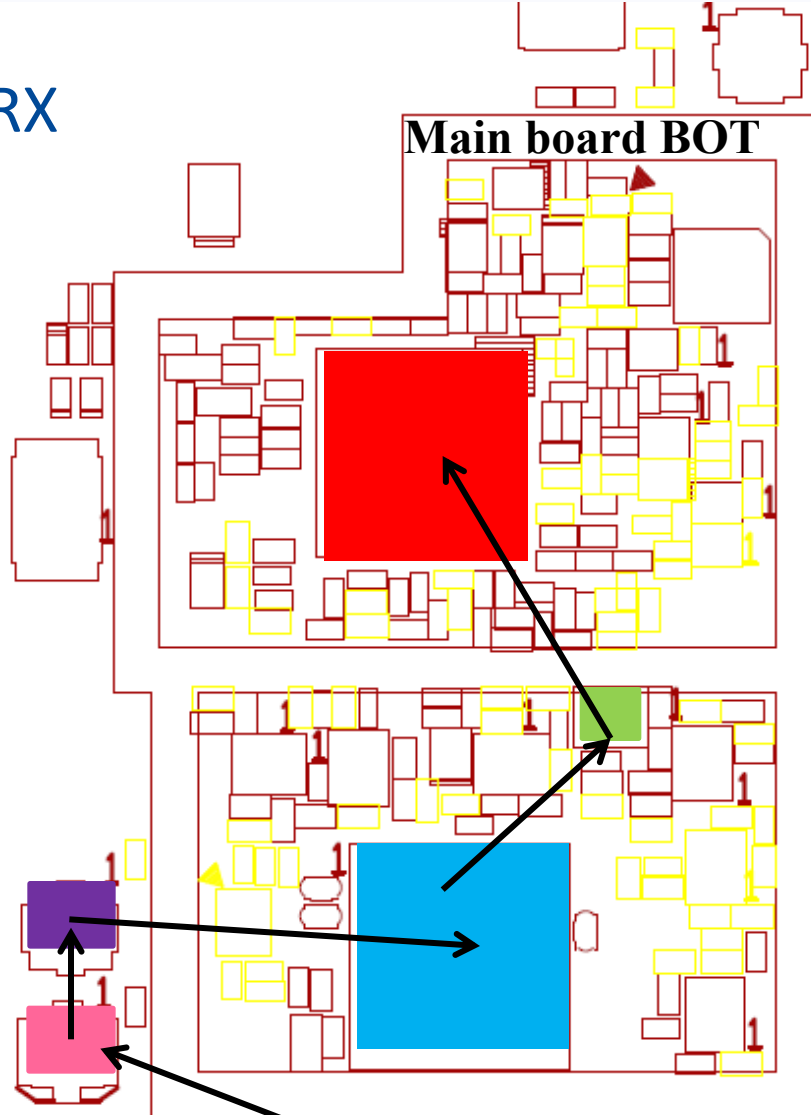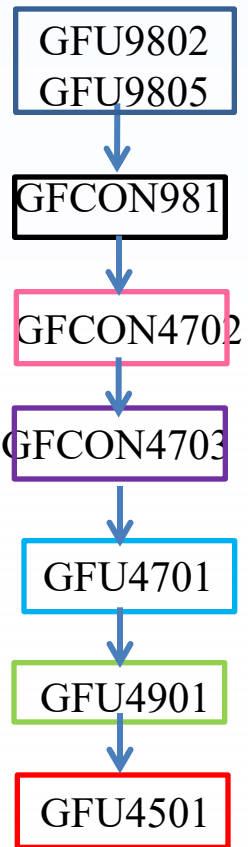





LTE B3 DRX

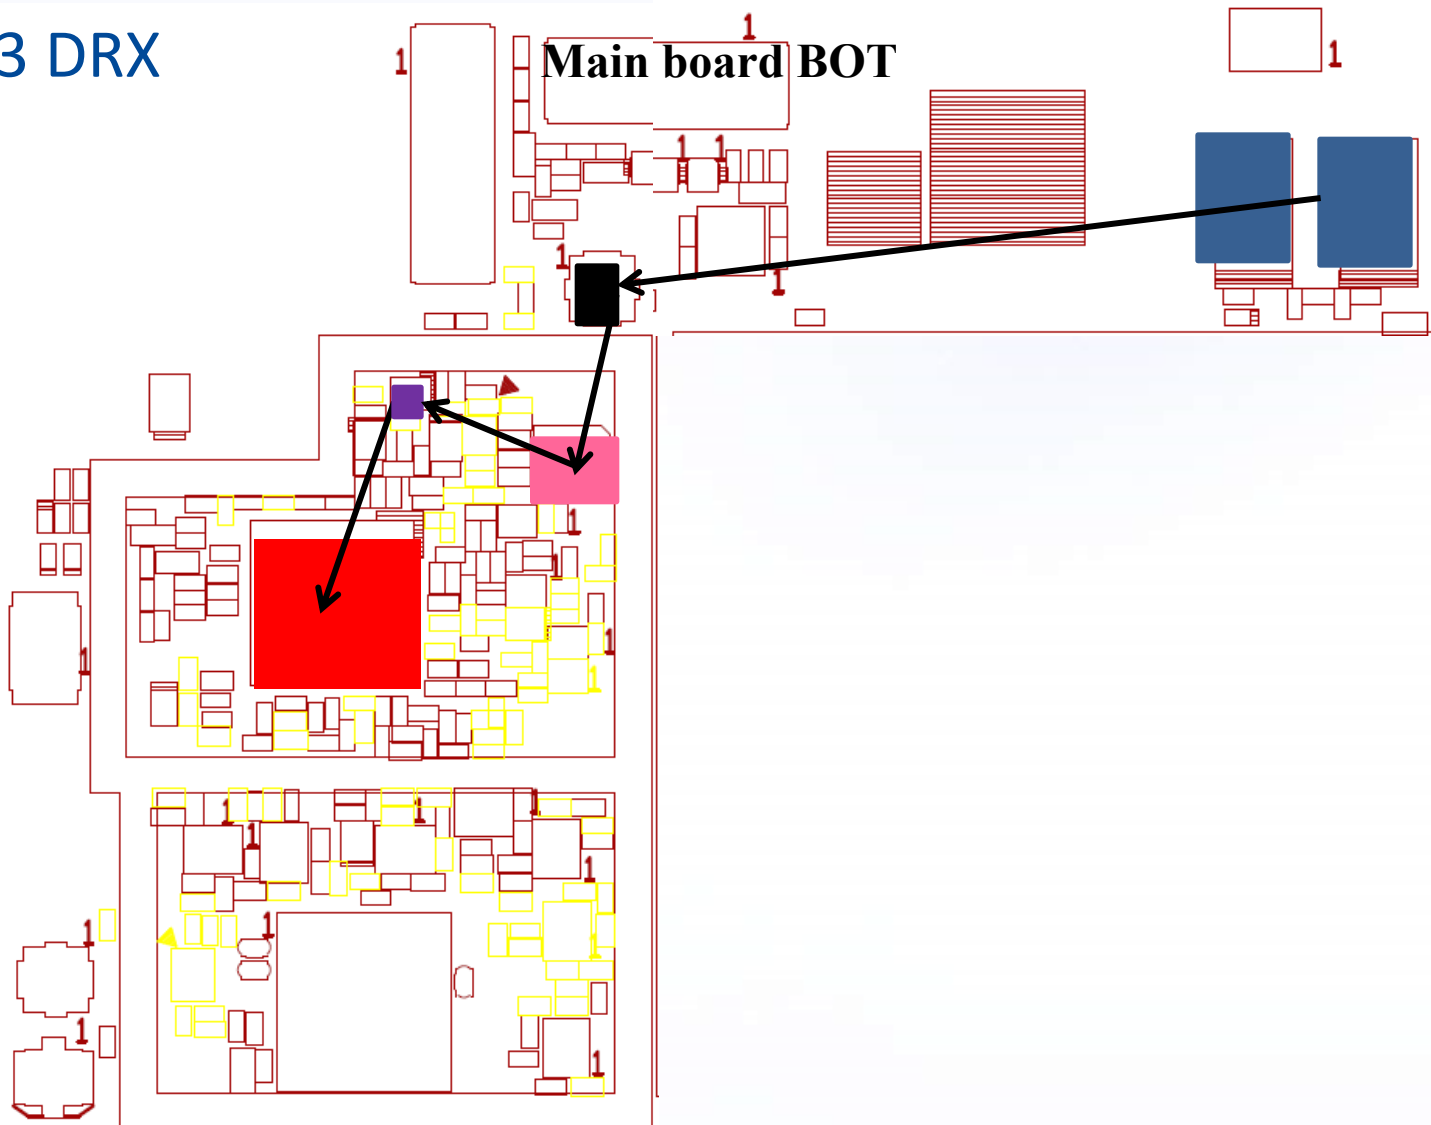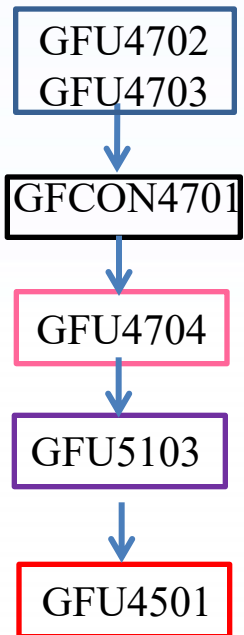



Main board BOT

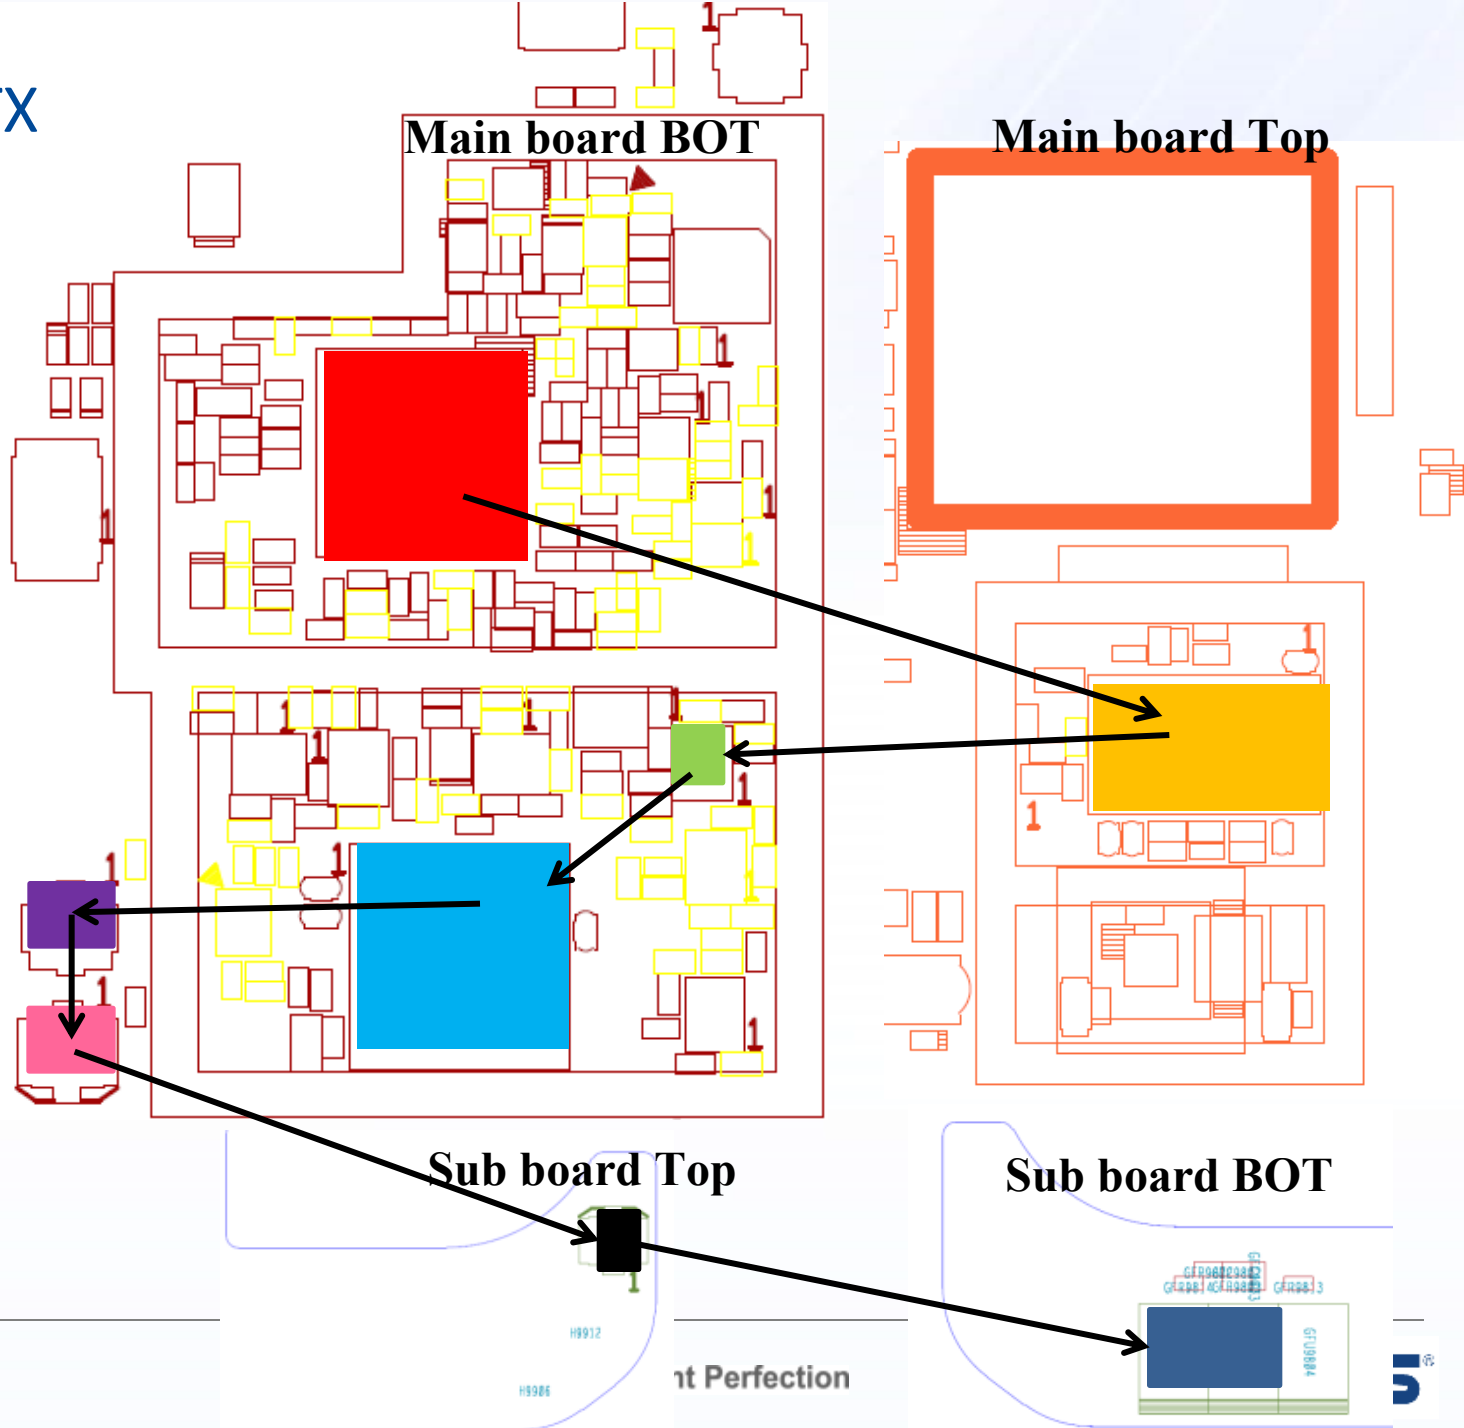



LTE B7 PRX

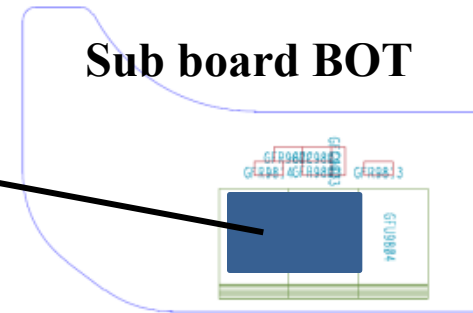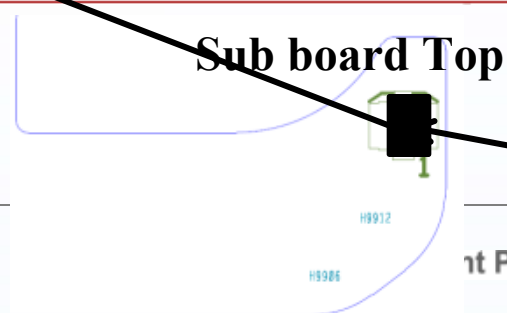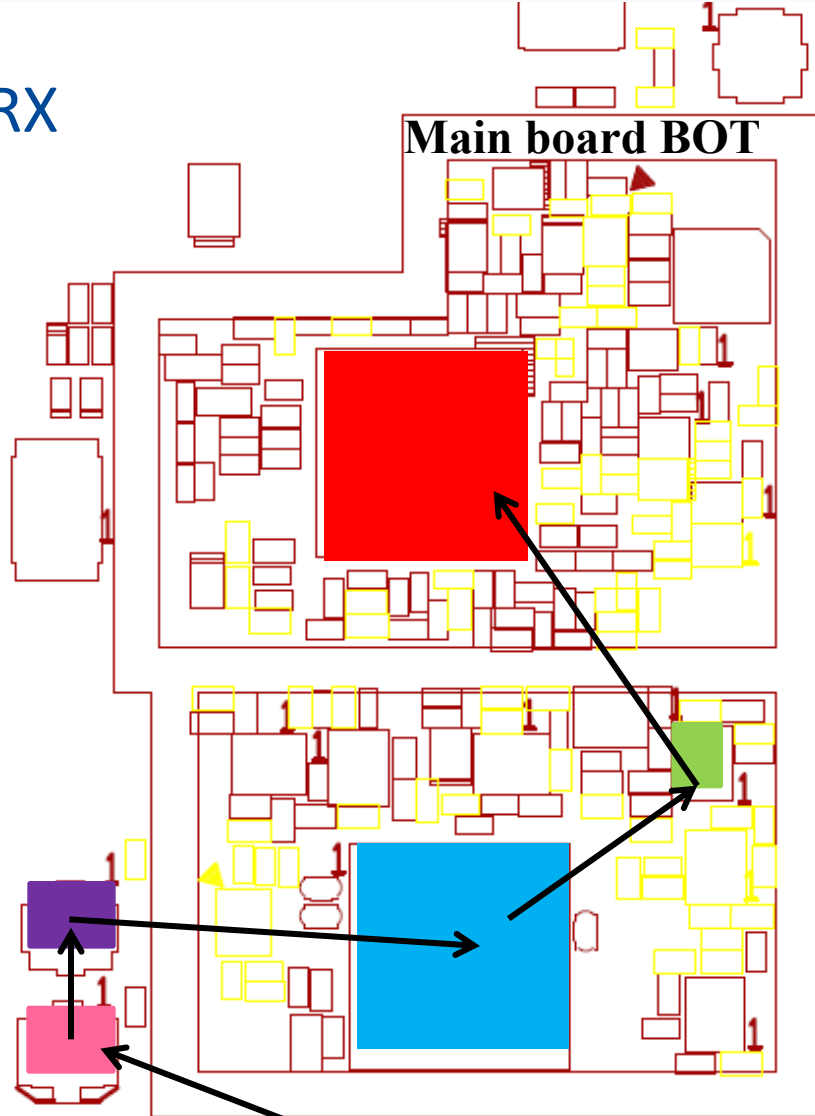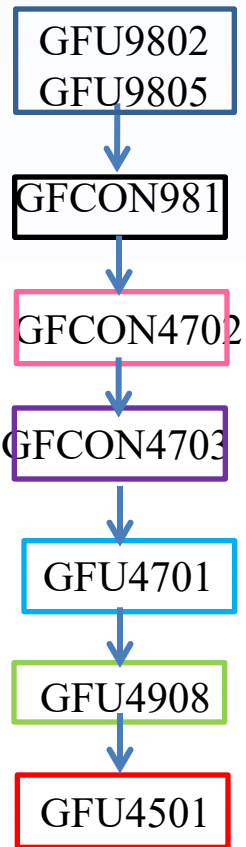





LTE B7 DRX

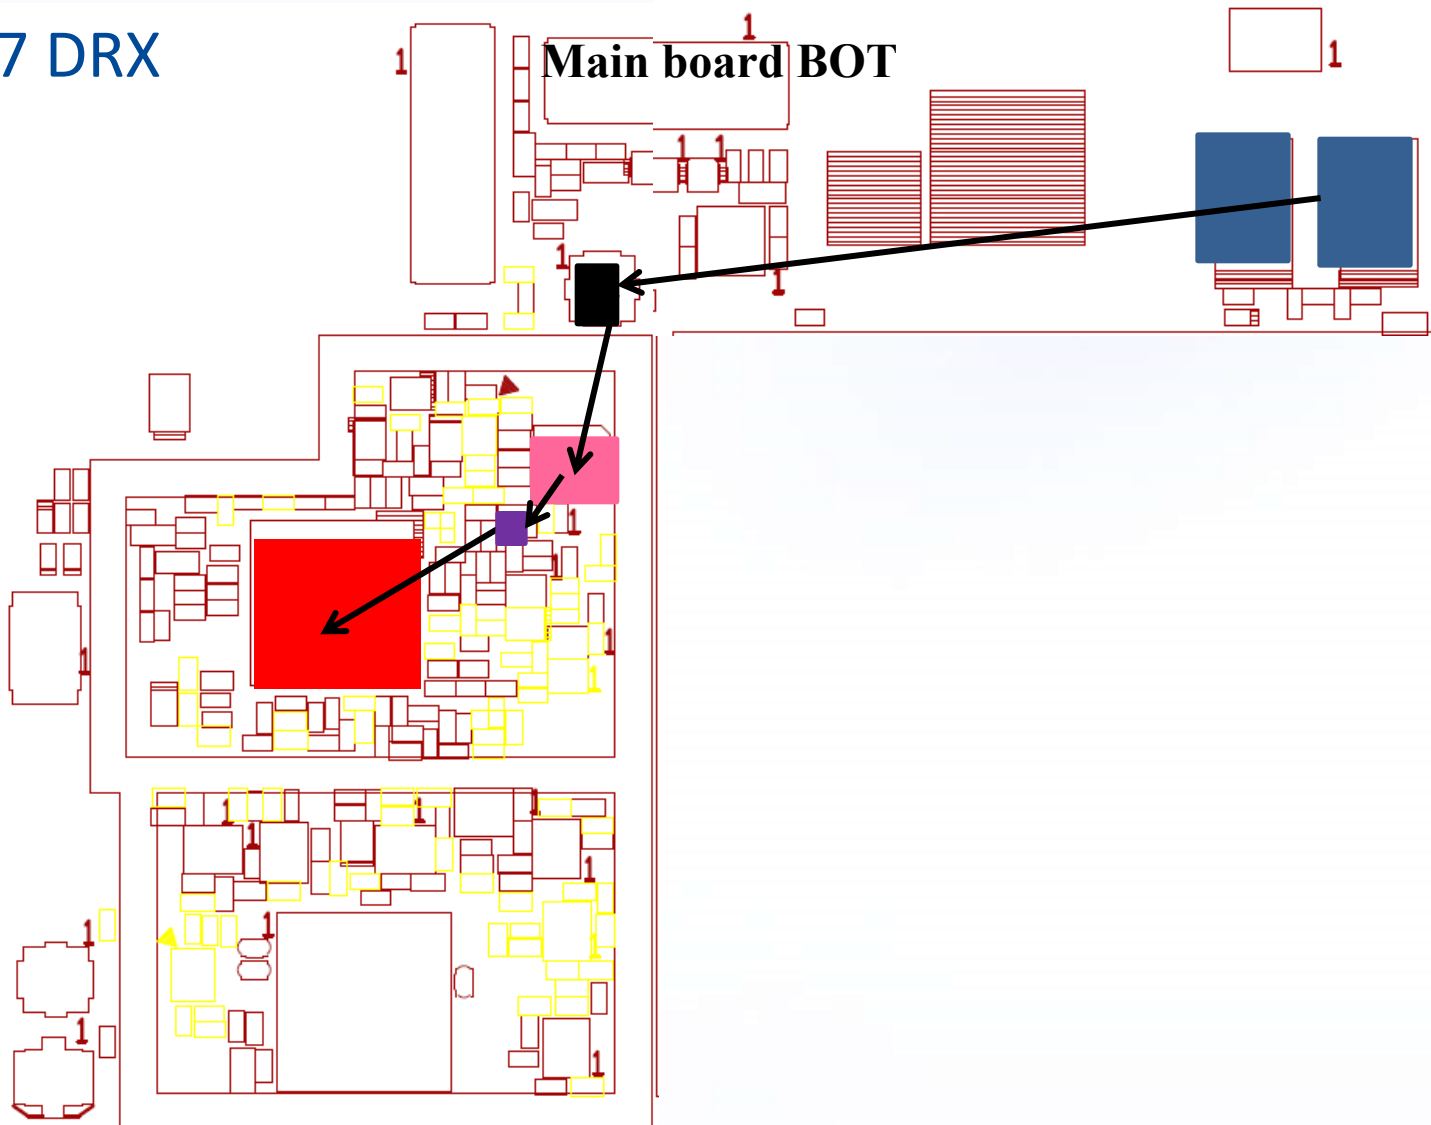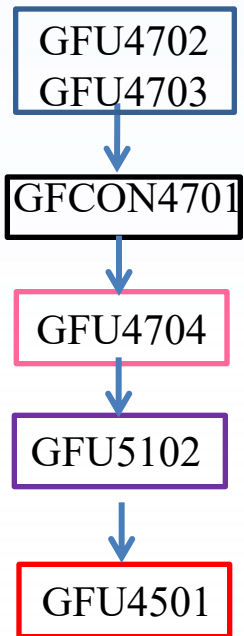



LTE B20 TX

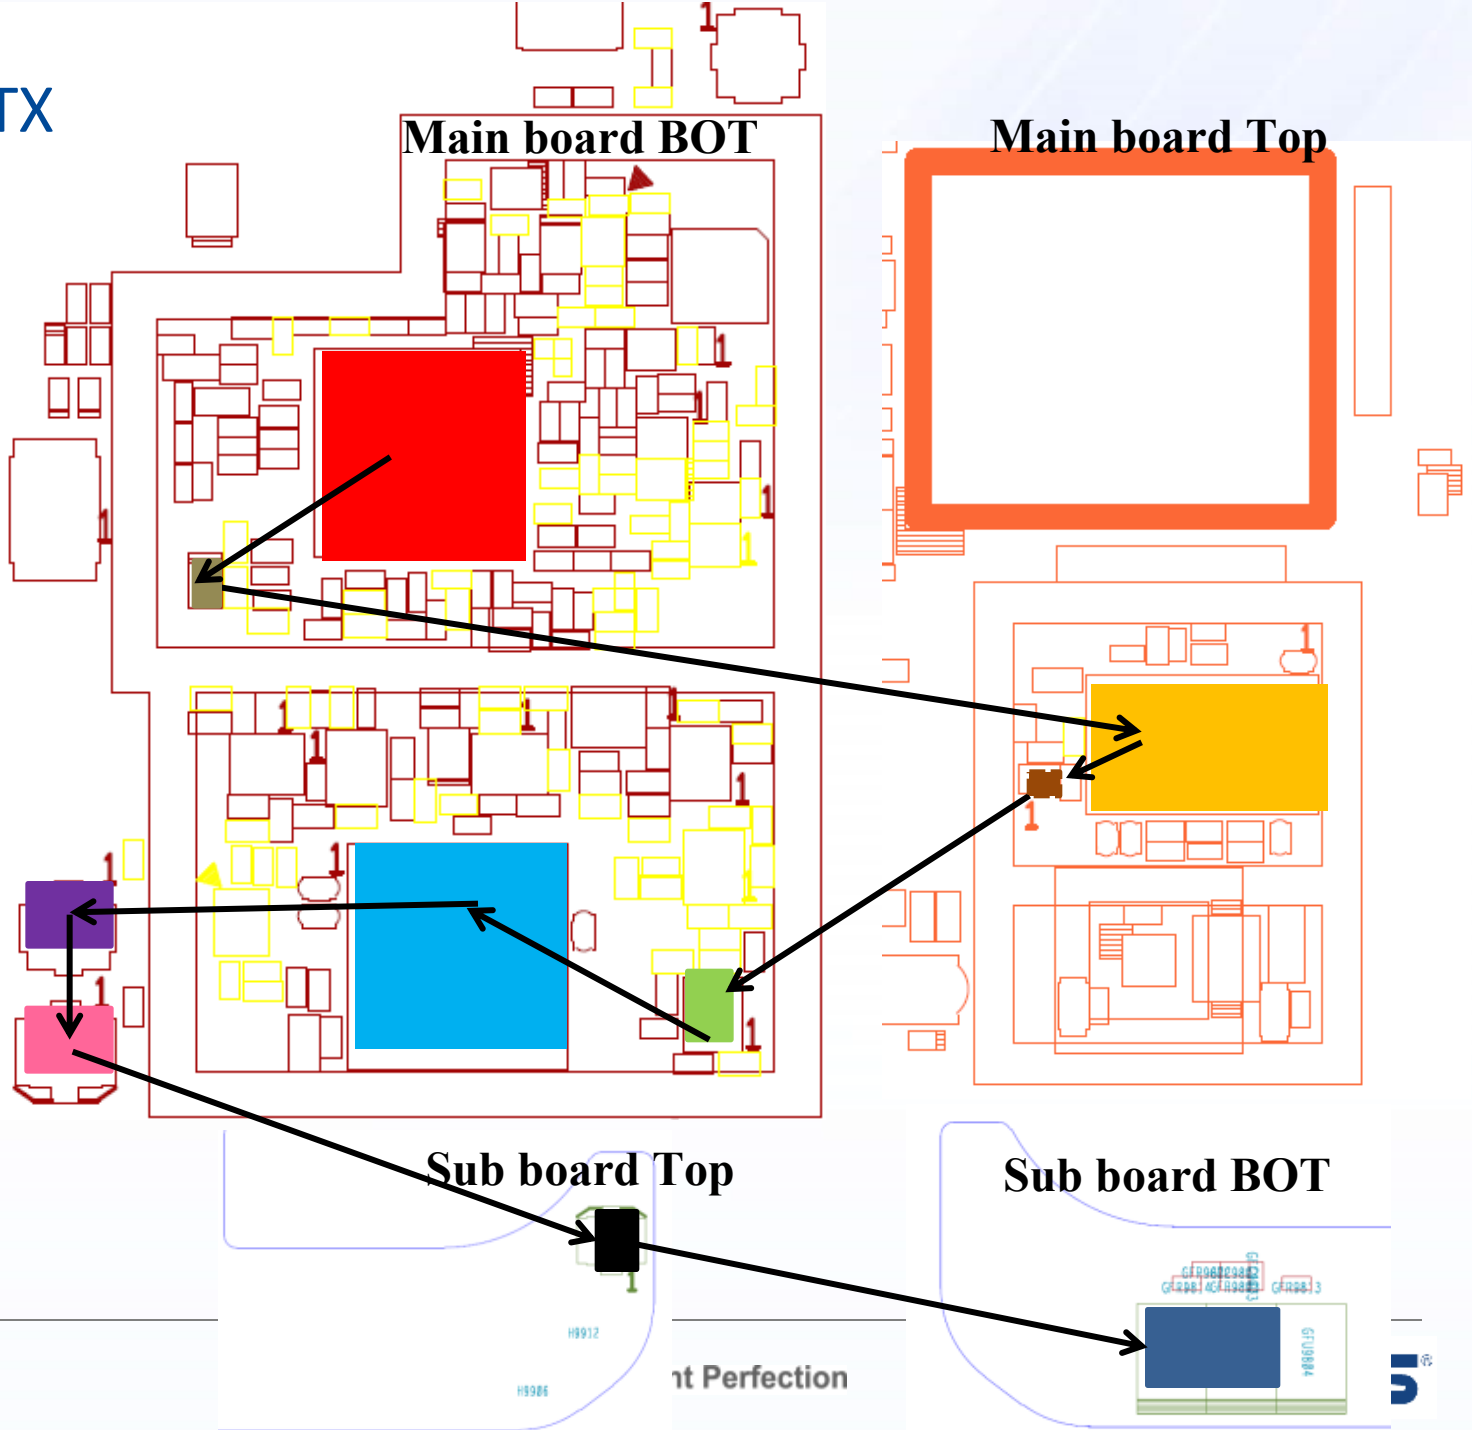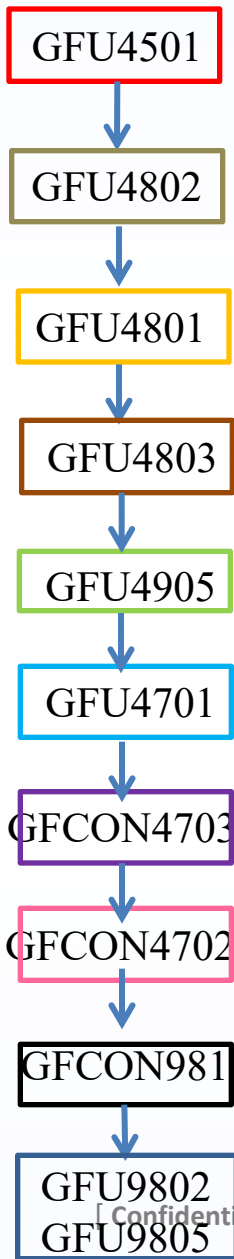

LTE B20 PRX

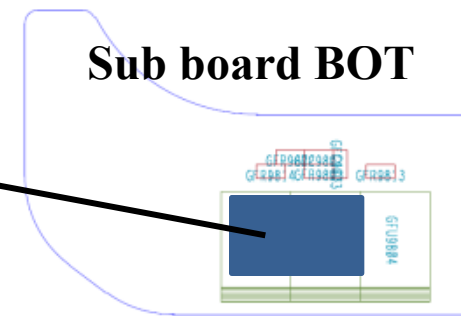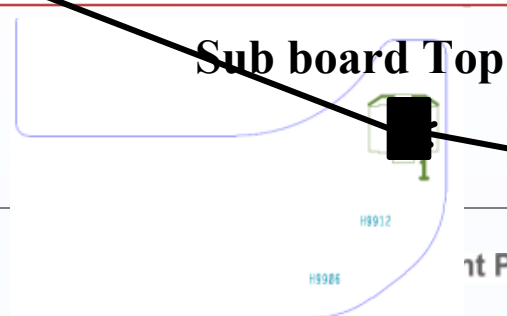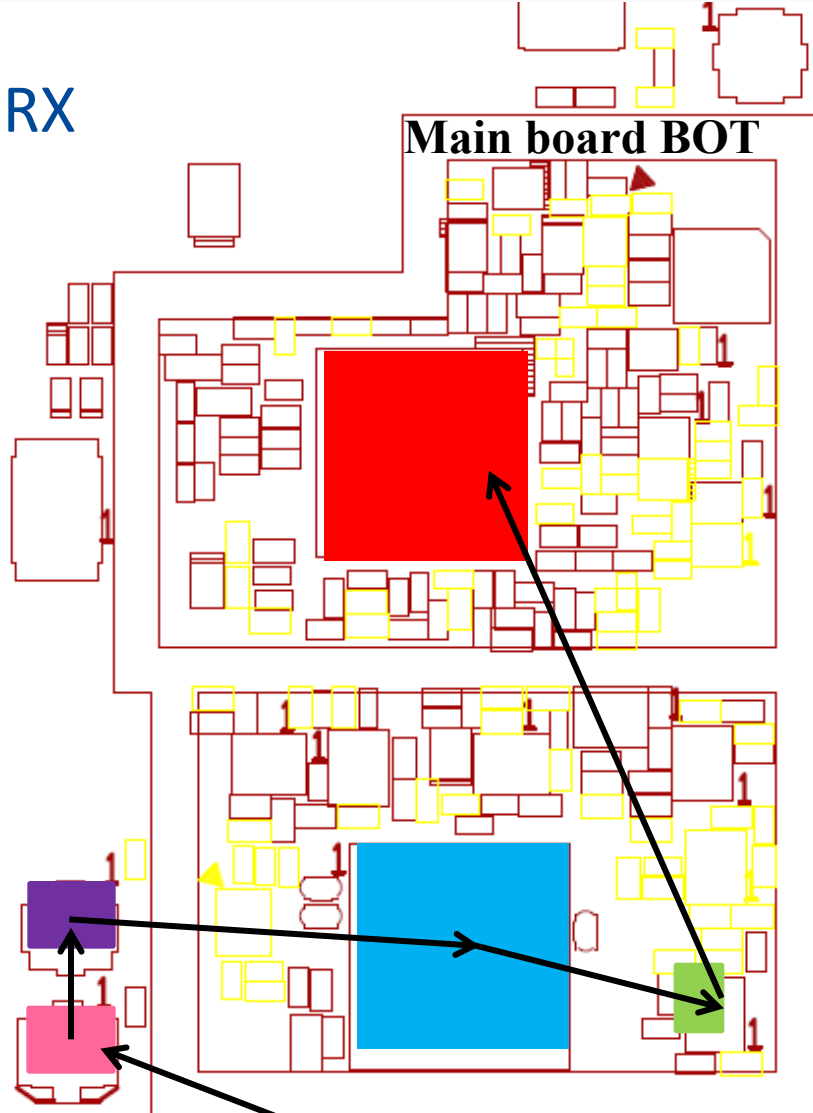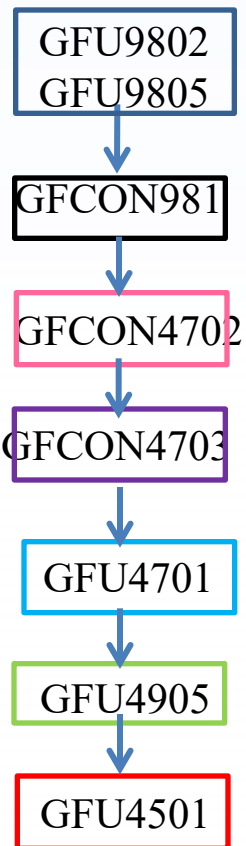


LTE B20 DRX

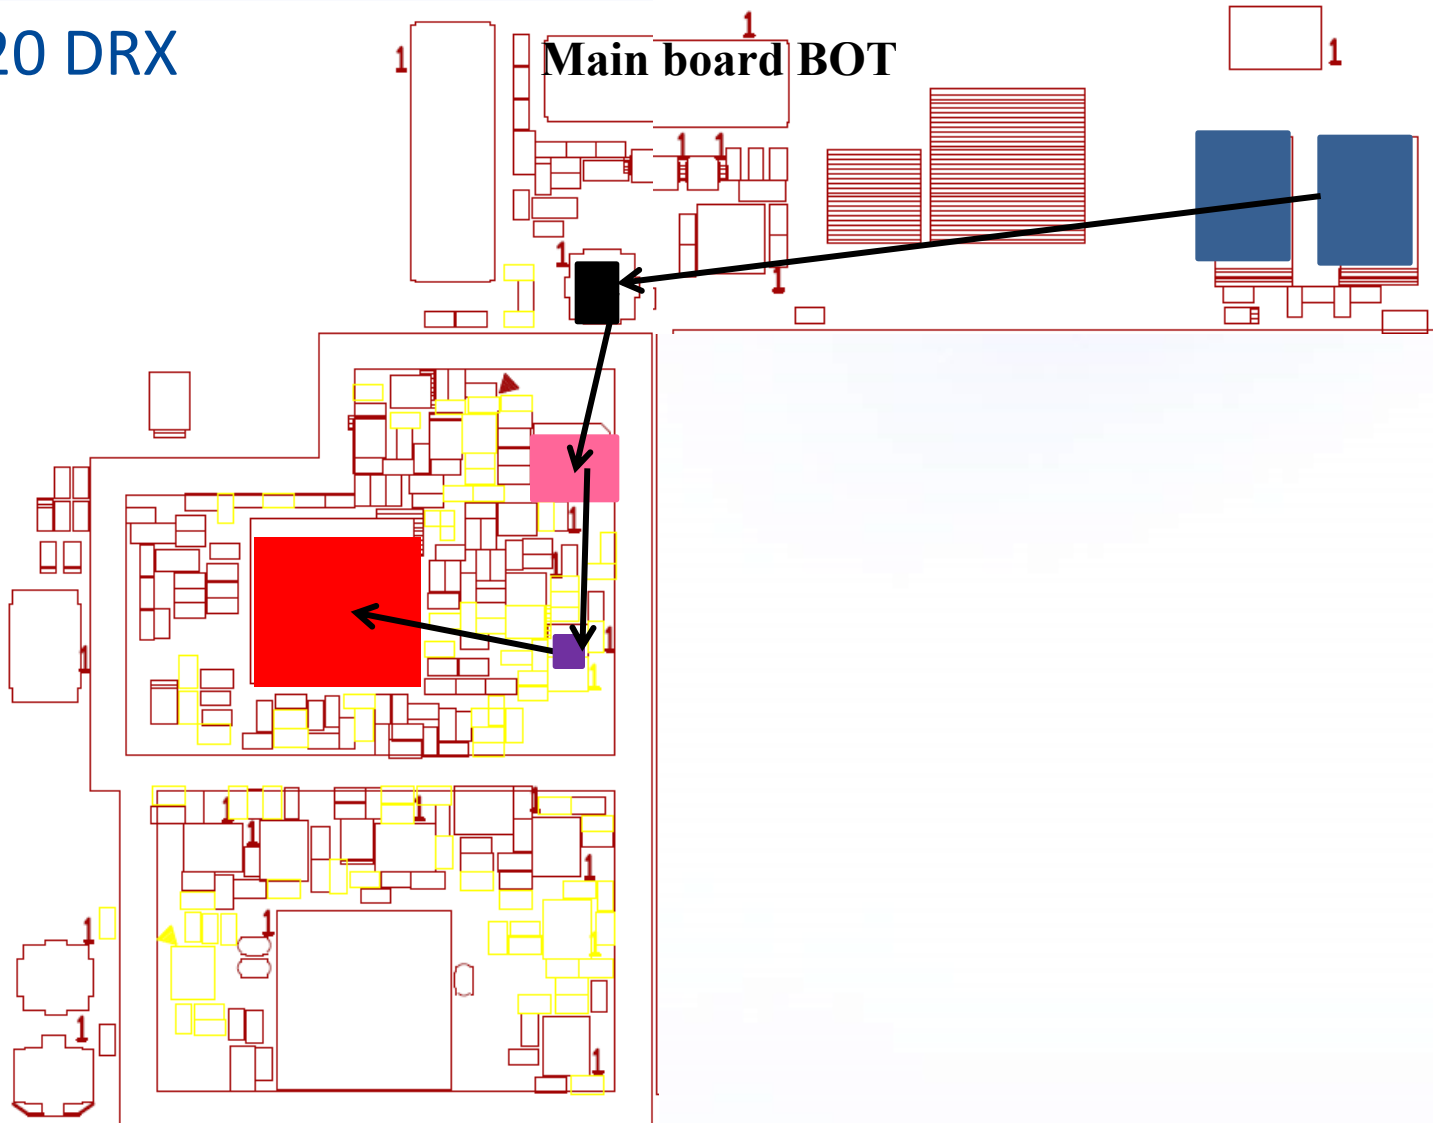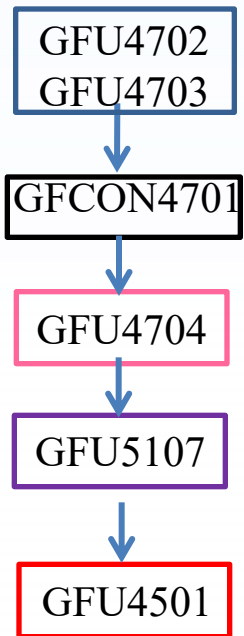


- ACLR-

- Check GFL4809 Voltage.
- Check RLC around GFU4601 and GFU4801.


DCDC SKY87006-11

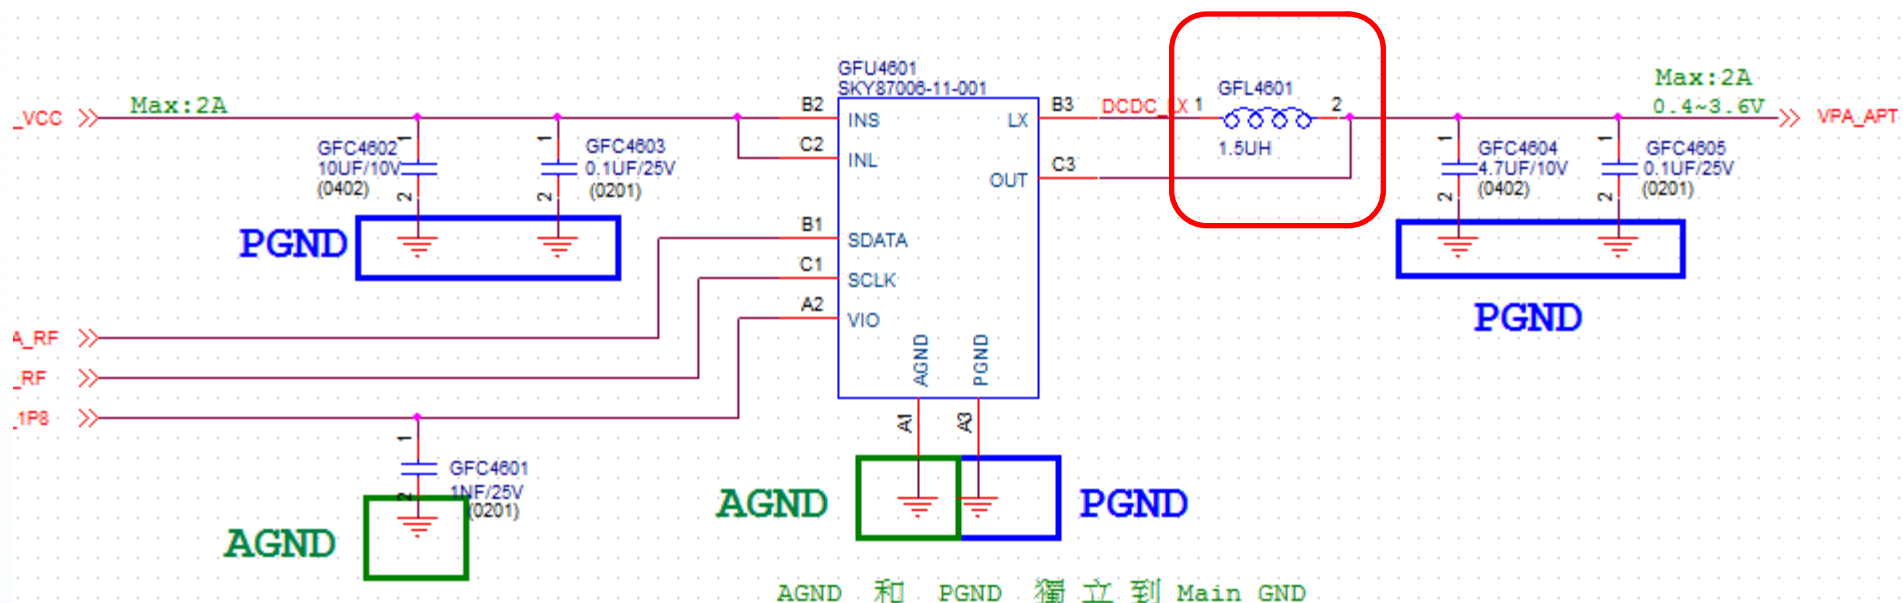





Main board BOT

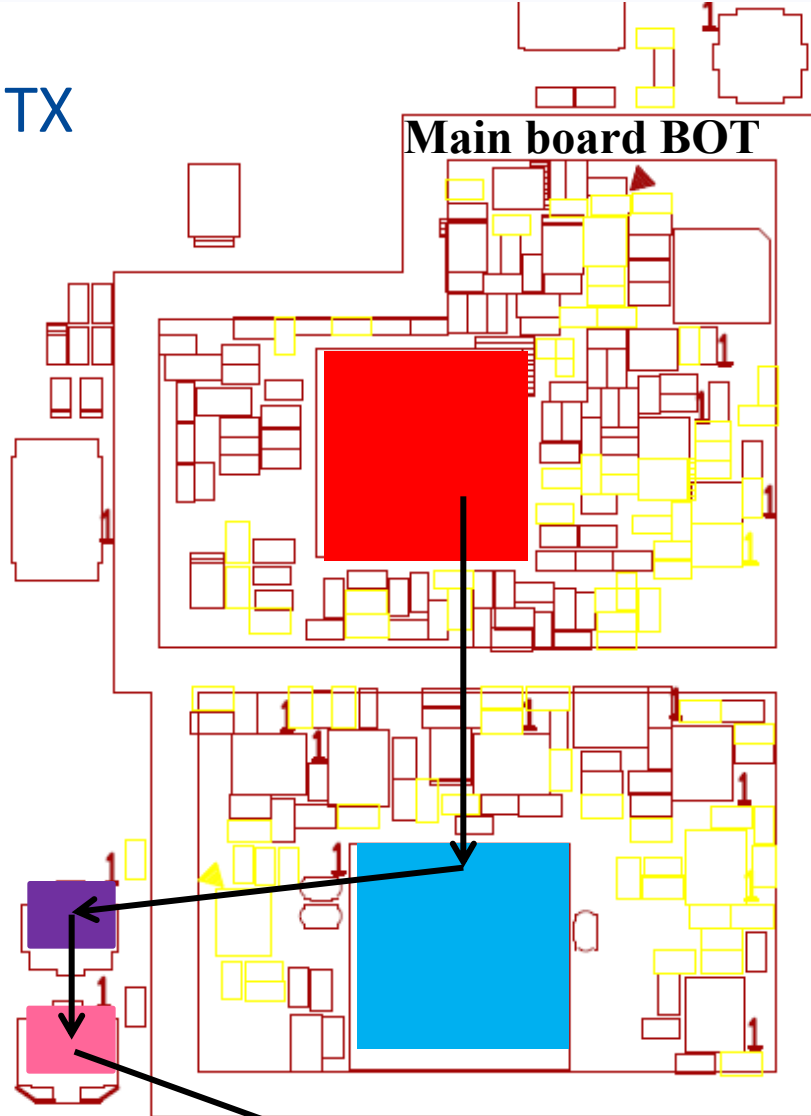

Sub board BOT

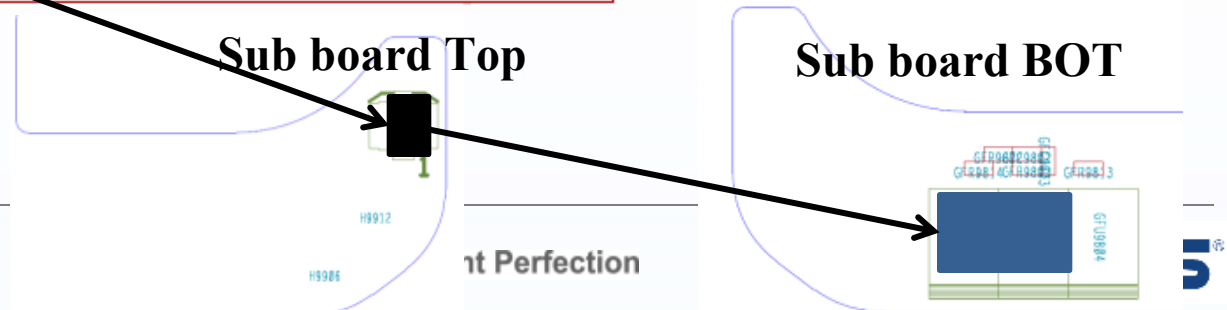

GSM 850 PRX

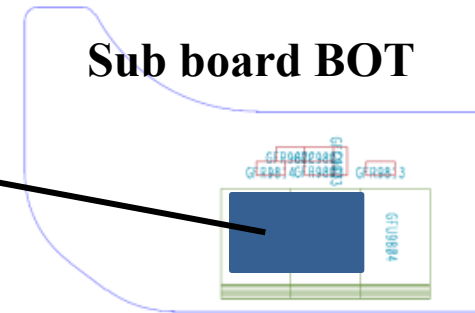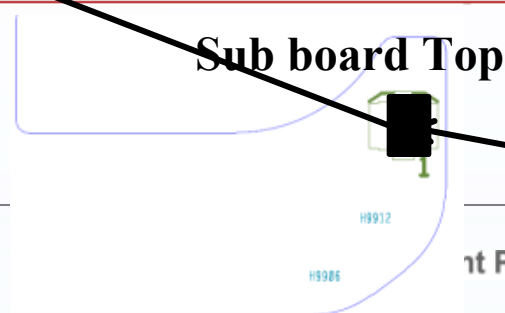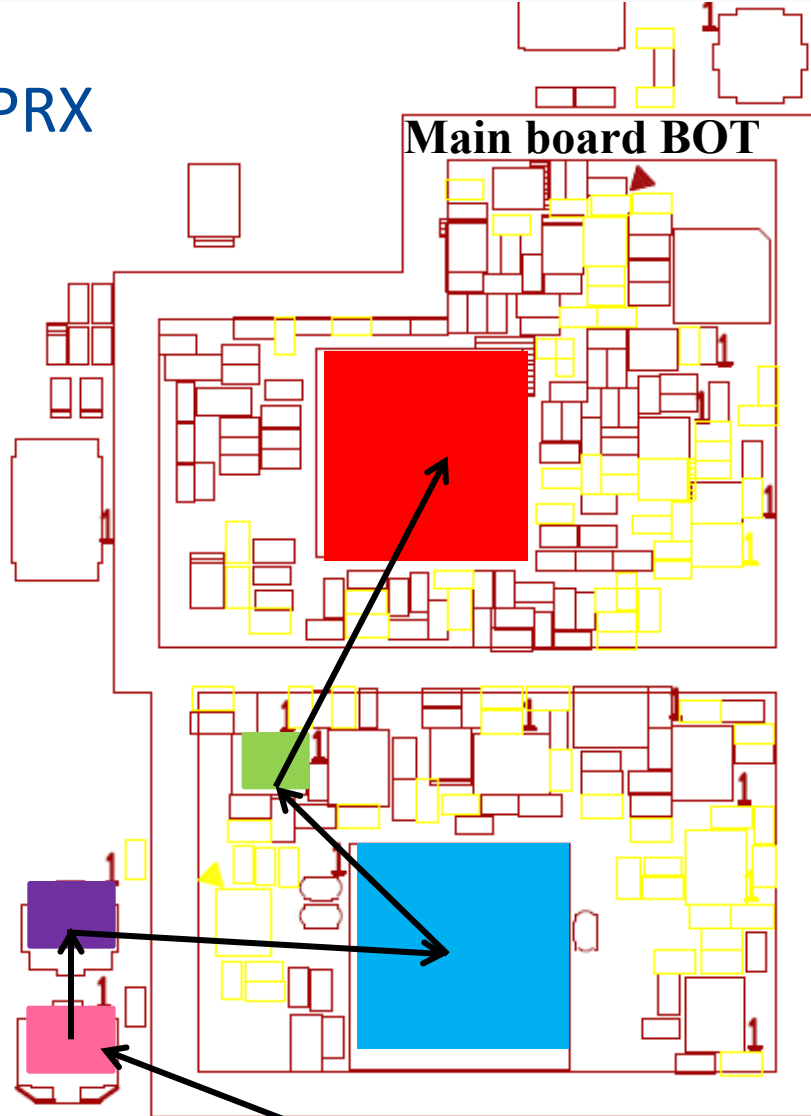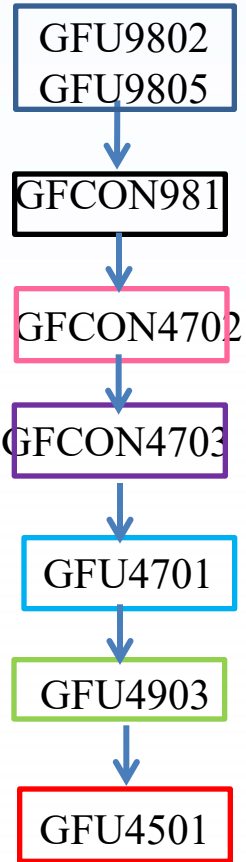

[illegible][illegible][illegible][illegible][illegible][illegible]

GSM 900 TX

GFU4501
↓
GFU4701
↓
GFCON4703
↓
GFCON4702
↓
GFCON981
↓
GFU9802
GFU9805

Main board BOT

Sub board Top

Sub board BOT

[Confidential]

The diagram illustrates the signal path for GSM 900 TX. It starts with a vertical sequence of components: GFU4501 (red box), GFU4701 (blue box), GFCON4703 (purple box), GFCON4702 (pink box), GFCON981 (black box), GFU9802 (dark blue box), and GFU9805 (light blue box). Arrows indicate a downward flow between these components. A black arrow points from the bottom of this sequence to a small purple component on the left side of the Main board BOT. Another black arrow points from the top of the Main board BOT to a small pink component below it. A third black arrow points from the bottom of the Main board BOT to a black component on the Sub board Top. Finally, a fourth black arrow points from the Sub board Top to a blue component on the Sub board BOT. The Main board BOT is a large circuit board with a red square and a blue square. The Sub board Top and Sub board BOT are smaller boards connected to the Main board BOT via arrows.

GSM 900 TX

GFU4501
↓
GFU4701
↓
GFCON4703
↓
GFCON4702
↓
GFCON981
↓
GFU9802
GFU9805

Main board BOT

Sub board Top

Sub board BOT

[Confidential]

```
graph TD; A[GFU4501] --> B[GFU4701]; B --> C[GFCON4703]; C --> D[GFCON4702]; D --> E[GFCON981]; E --> F["GFU9802<br/>GFU9805"]; F --> G[Main board BOT]; G --> H[Sub board Top]; H --> I[Sub board BOT]
```

[illegible]

GSM 900 TX

GFU4501
↓
GFU4701
↓
GFCON4703
↓
GFCON4702
↓
GFCON981
↓
GFU9802
GFU9805

Main board BOT

Sub board Top





Sub board BOT

[Confidential]





```
graph TD; A[GFU4501] --> B[GFU4701]; B --> C[GFCON4703]; C --> D[GFCON4702]; D --> E[GFCON981]; E --> F["GFU9802<br/>GFU9805"]; F --> G[Main board BOT]; G --> H[Sub board Top]; H --> I[Sub board BOT]
```

[illegible][illegible][illegible]




GSM 900 PRX

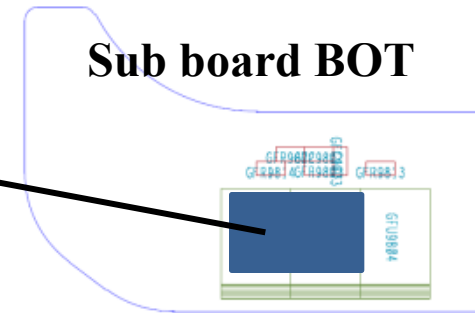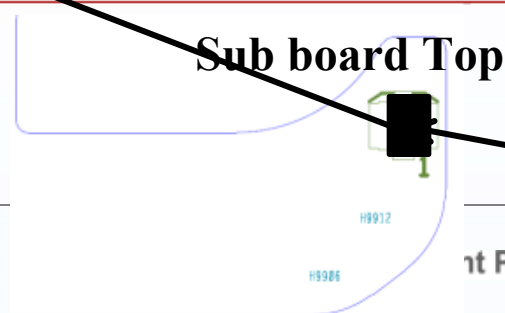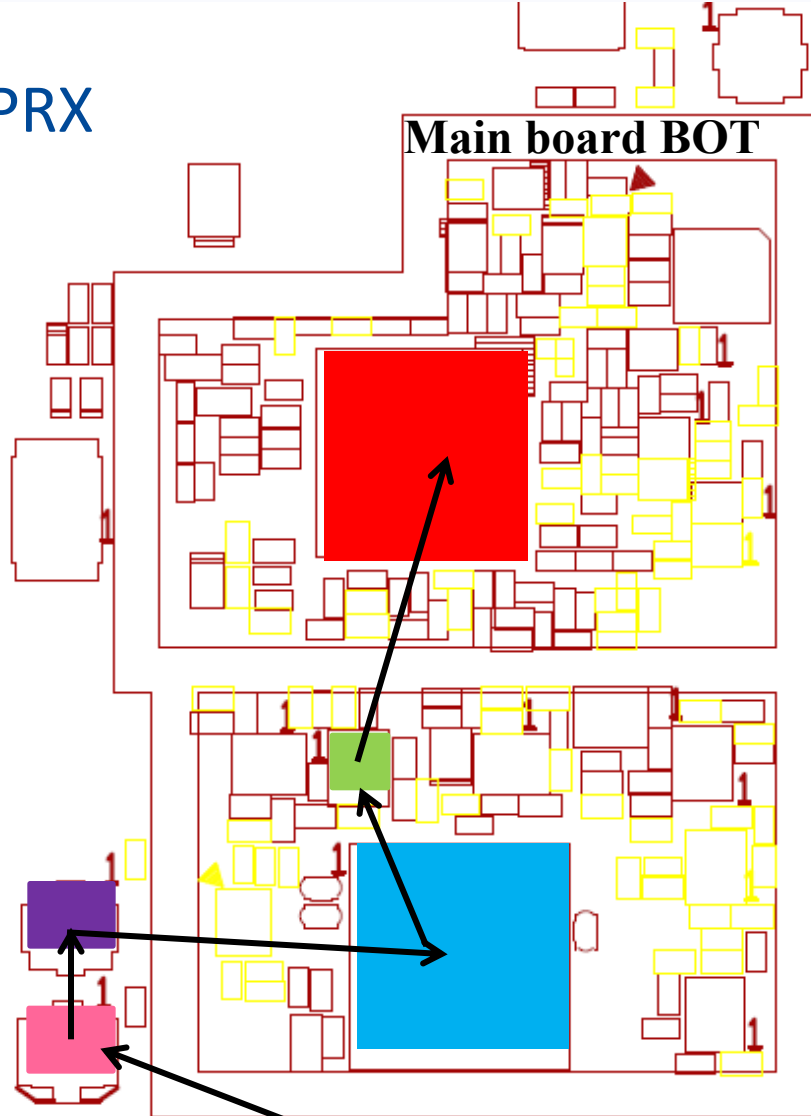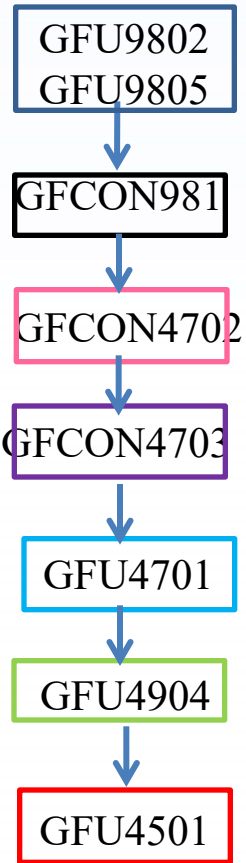





GSM 1800 TX

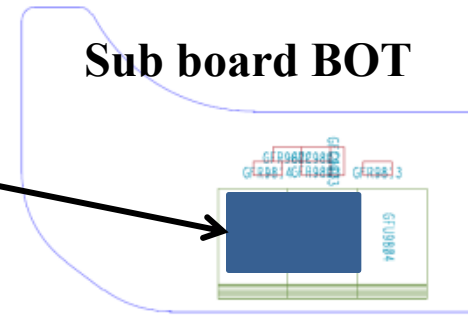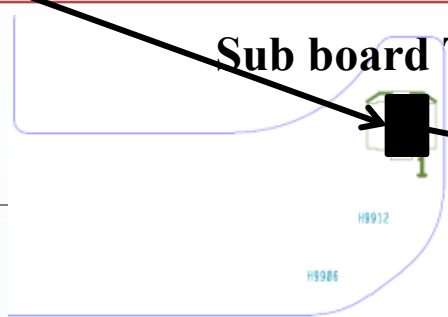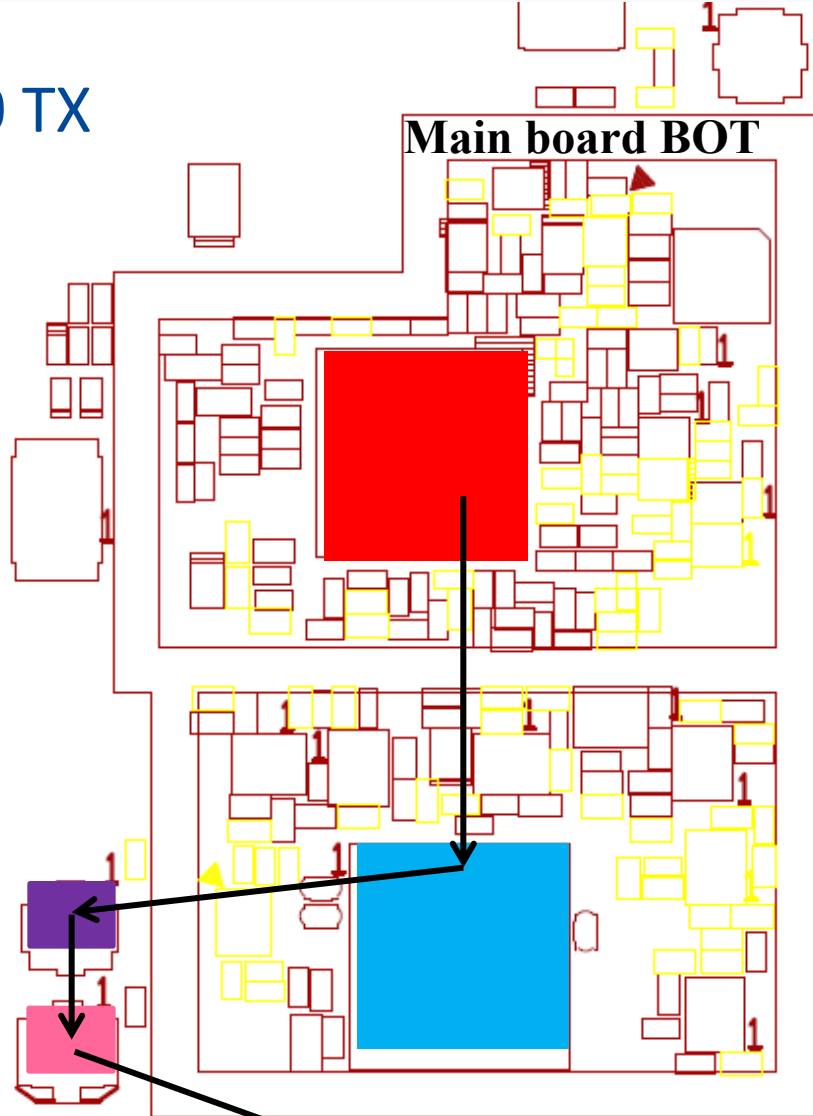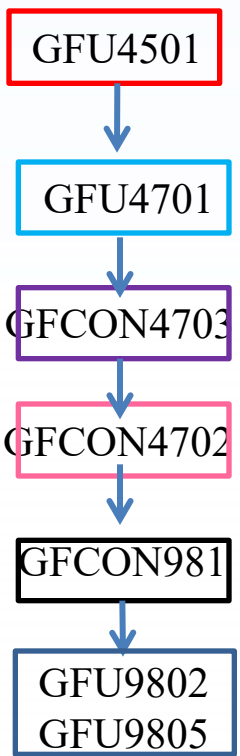




GSM 1800 PRX

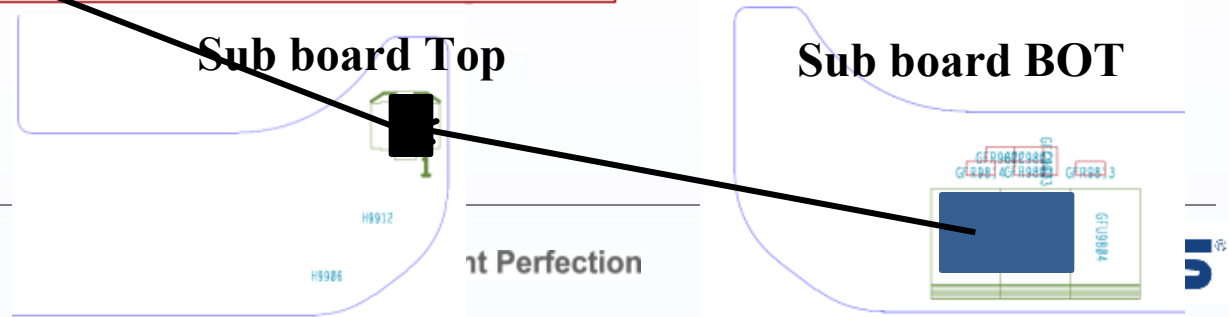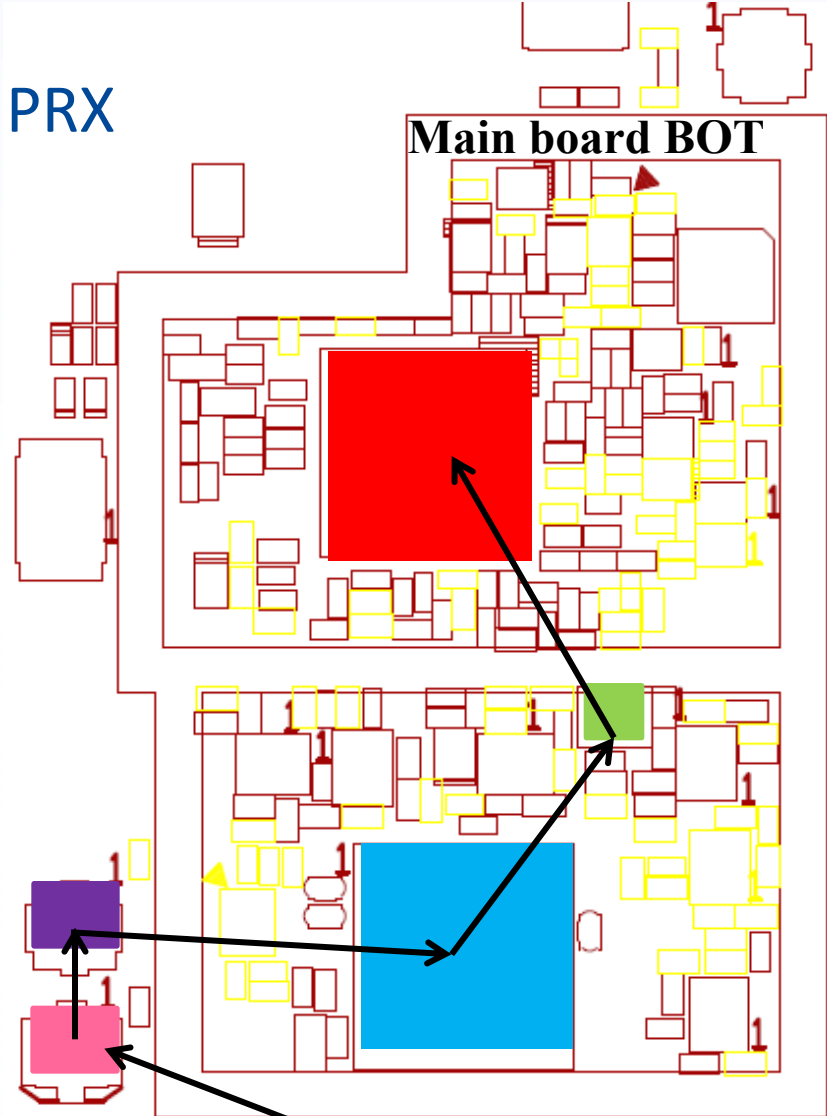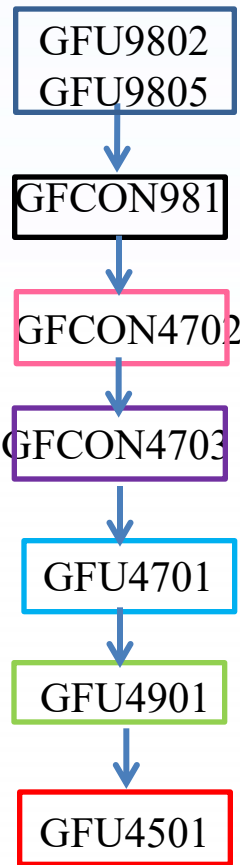

GSM 1900 TX

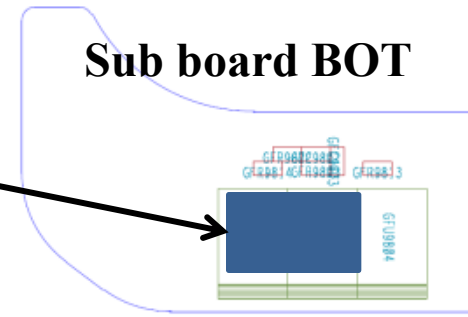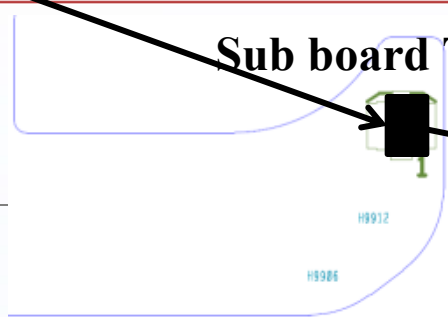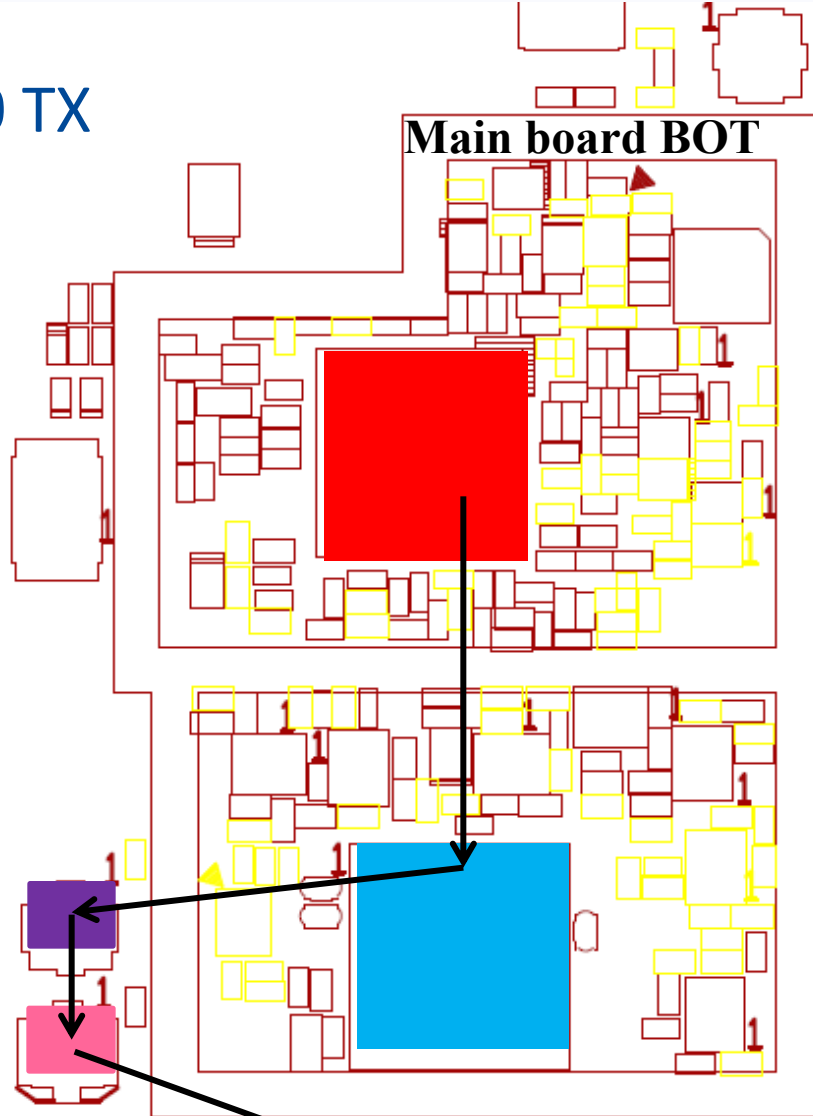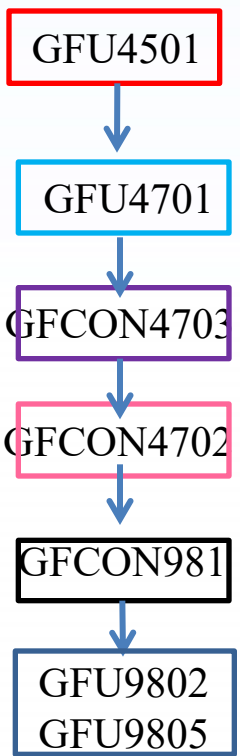

GSM 1900 PRX

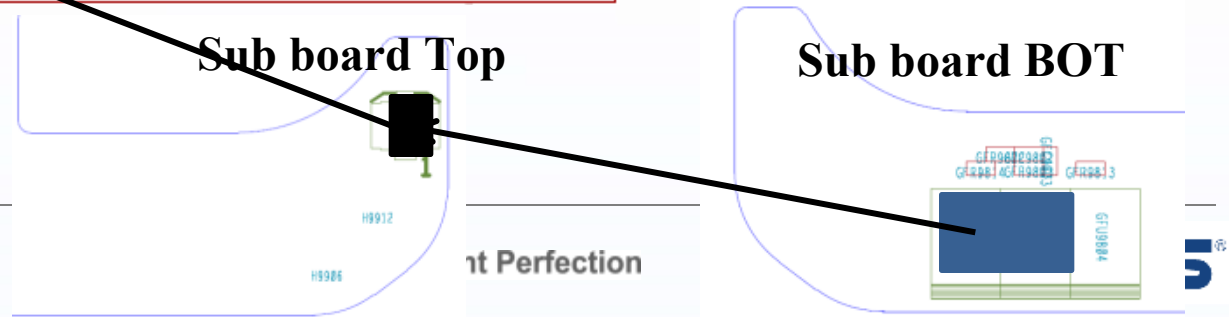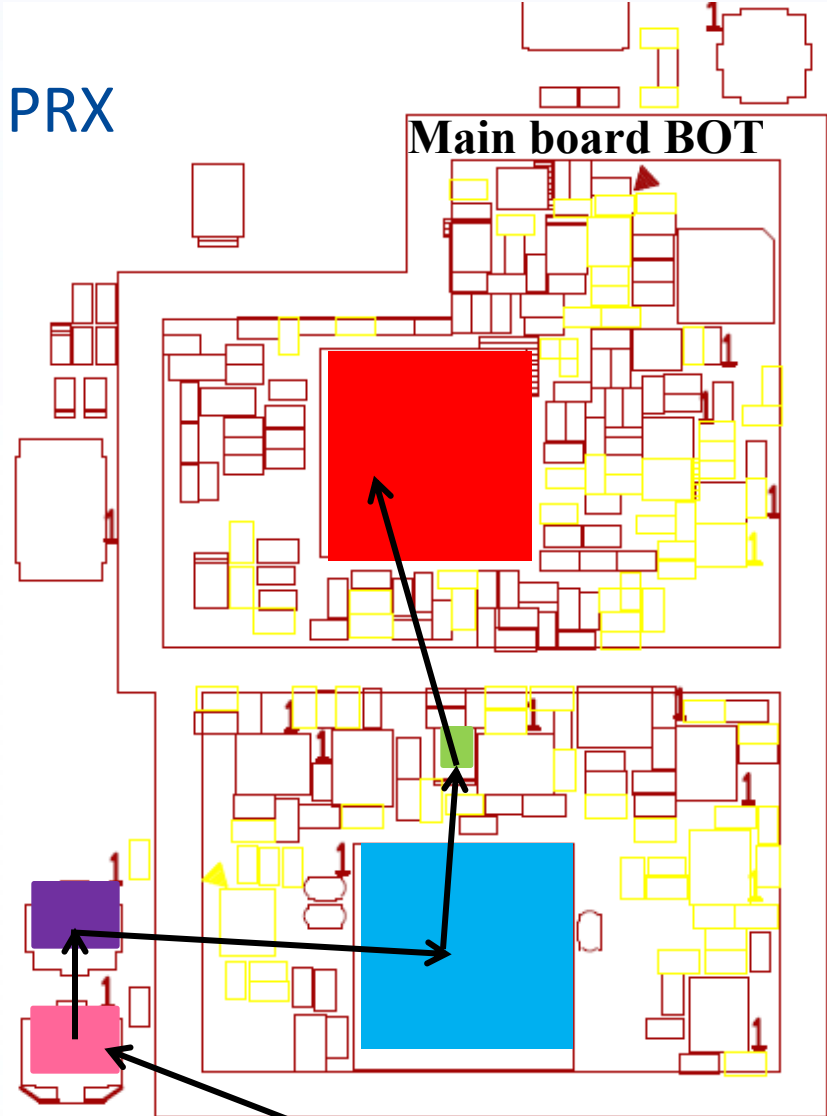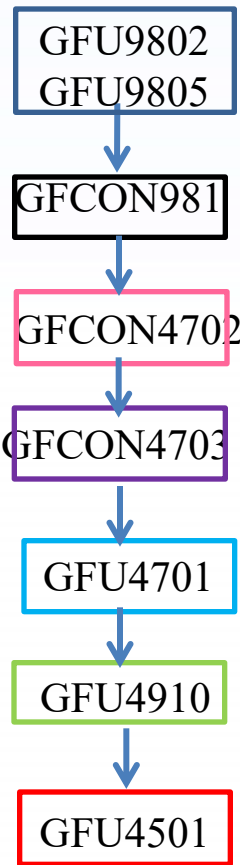

- XO Cal Fail-
 - PC8613 and PC8629 short.
- Internal Cal Fail
 - Check GFC4525



Agenda

- Overview
- LTE Function Placement
- FA issue

Antenna

- GSM/WCDMA/LTE TX & RX
 - Check Antenna Spring on sub-board
 - Check Antenna cable
 - Check Antenna Pattern
- LTE DRX
 - Check Antenna Spring on main board
 - Check Antenna Pattern

Wifi/BT 2.4G TRX

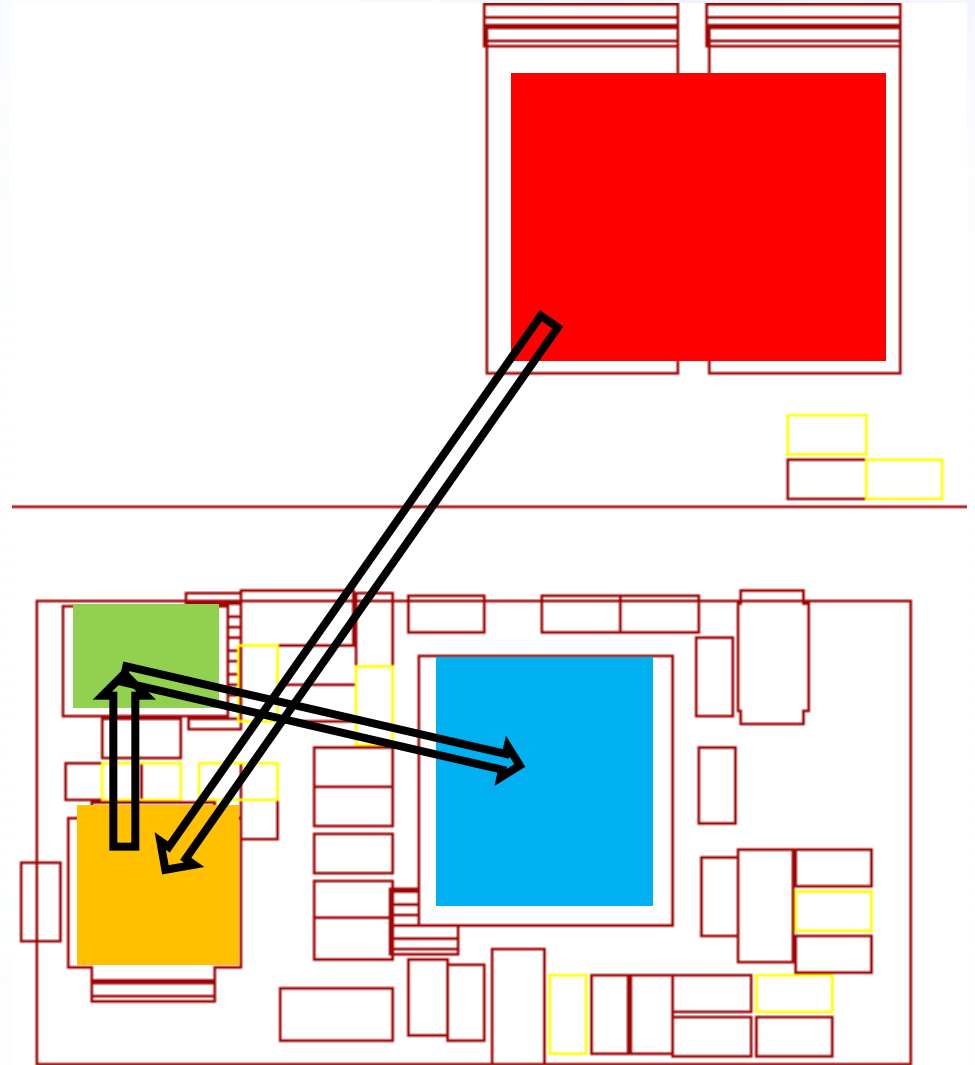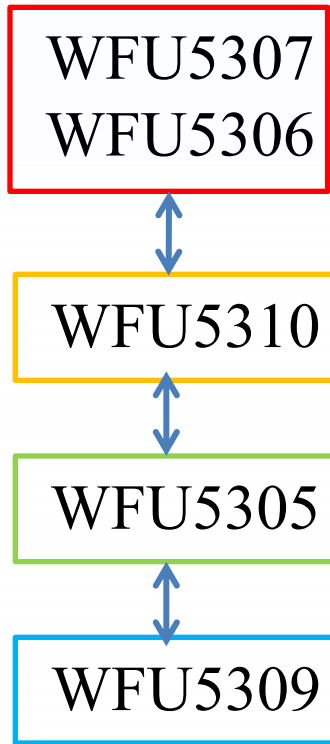

GPS

WFU5307
WFU5306

WFU5310

WFU5402

WFU5401

GFU4501



FM

Main board Top

CON2301



WFU5309

Main board BOT

