


● How to boot into Emergency Download mode

Method 1:

1. Turn off your phone.
2. Now plug one end of the USB Cable into the PC port and the other end does not connect to the phone.
3. Press the **Volume Up** and **Volume down** buttons and immediately connect the other end of USB Cable to the phone.
4. The phone will go to EDL Mode automatically.

Method 2: short two points.

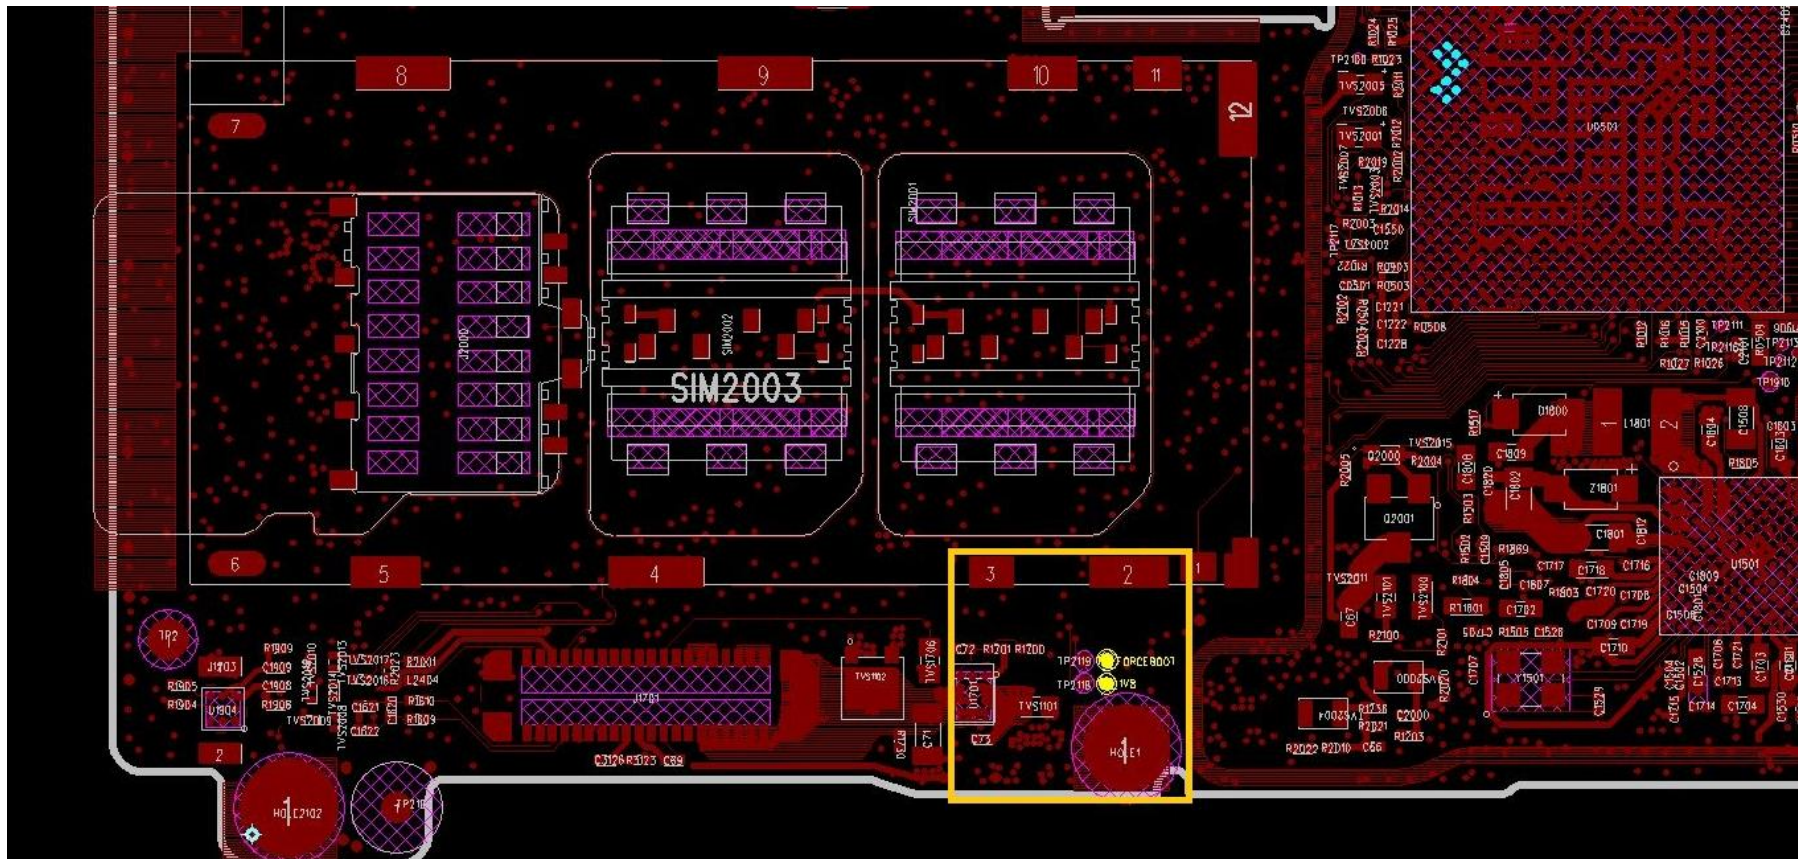

● Using QFIL

1. Run QFIL.
2. Setting :
 - 2.1 Configuration

 **Download Configuration** 

Firehose programmer Setting

Download Protocol **0 - Sahara** ☐ Reset State Machine
☐ Read Serial Number

FireHose Common Setting

☐ Max Payload Size to Target In Byte **49152**
☐ Active Partition Number **0**
Device Type **emmc** ☐ Provision
☐ Always Validate ☐ Skip Write ☐ Use Verbose
Validation Mode **0 - No Validation**
☒ Reset After Download
☒ Erase All Before Download

Backup Restore Setting

☐ Auto Backup Restore QCN SPC Code **000000**
☐ Enable Multi-SIM QCN (QCN only)
☐ Auto Preserve Partitions
Preserve Mode **0 - Backup Restore Partitions With**
Preserved List **0 - Manual Selection**

OK **Cancel**

2.2 Select Build Type: **Flat Build**

2.3 Select Programmer:

WT	SOC	Memory + Storage	Band	NFC	File
T89189IA1	MSM8937-9	3+32	WW/ID/IN	YES	NMF26F.WW_Phone-14.0400.1712.016-20171216(SW_T89189IA1_V016_M12_NF_ASUS_ZC600KL_USRD_ATO).rar
T89189MA1	MSM8937-9	4+64	TW/BR	NO	NMF26F.WW_Phone-14.0400.1712.027-20180614(SW_T89189LA1_V027_M12_EF_ASUS_ZC600KL_USRD_ATO).rar
	SDM-630				NGI77B.WW_Phone-14.0400.1801.018-20180128(SW_T89199AA1_V018_M10_EF_ASUS_ZC600KL_USRD_ATO).rar

SOC MSM8937→ prog_emmc_firehose_8937_dds.mbn

SOC SDM630→ prog_emmc_ufs_firehose_Sdm660_dds.elf


2.4 Select Flat Build:

RawProgram→ rawprogram_unsparse.xml

Patch→patch0.xml

3. Connect Phone.

4. After enter COM 9008, click "Download".

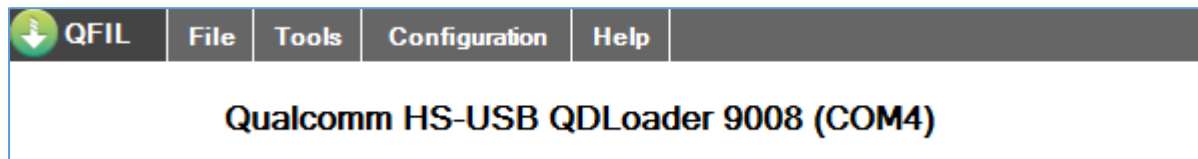

5. After flashing image with QFIL, please use AFT tool flash image to CSC image.