


scaling squares

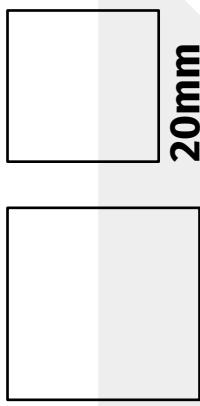

3 front pocket

2 middle pocket



SNAP
BACK
UP

- ✗ alignment points for top of airtag panel
(mark on flesh side)
- ✗ alignment points for top corners of middle pocket
(mark on skin side)

this wing will end up below

1 main



SNAP
BACK
UP

- ✗ alignment points for top corners of front pocket
(mark on skin side)

alignment points for base of middle pocket
(mark on skin side)



SNAP
BACK
UP

- ✗ alignment points for bottom of airtag panel
(mark on flesh side)

this wing will end up on top



SNAP
FRONT
UP

4 airtag
panel,
key tab

alignment points for opening in side seam
(mark on skin side)





skin side




flesh side

Note: All seams are sewn using saddle stitch, 3mm in from the edge. Start and end all seams with two backstitches.

- 1 Mark centre points of snaps on skin side of main piece (1). Mark alignment points on skin side or flesh side, as specified on pattern pieces.


2

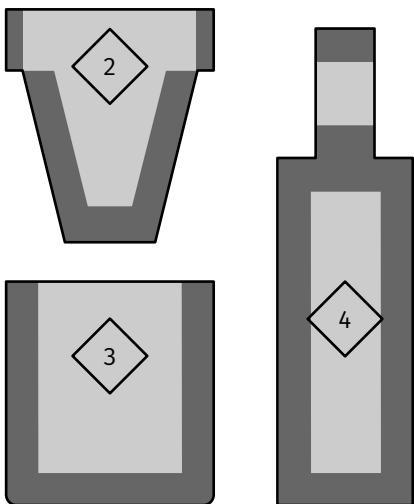

On the flesh side, skive down the edges that will be stitched, as well as the short ends of the key loop, shown as darkened regions.


Take care to still leave the edges thick enough that the skin side can be bevelled down later without taking bites out of the perimeter.

3

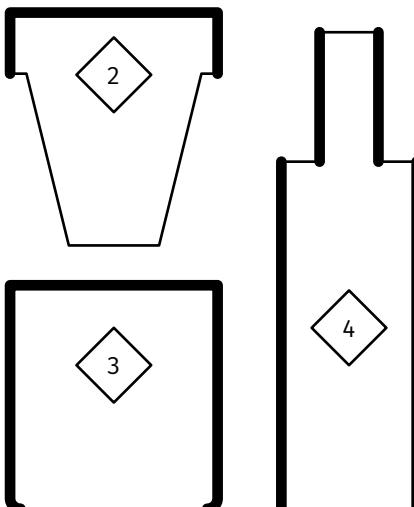

Bevel and burnish all public single edges, shown as thick lines.

4

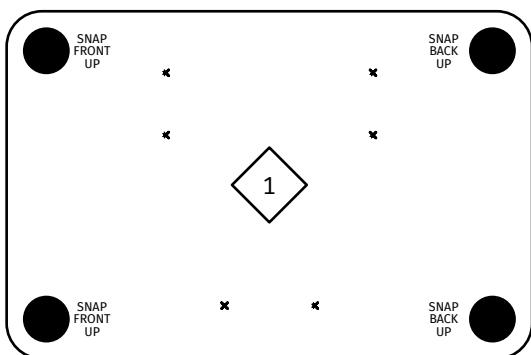


Prepare snaps following the orientation described on the pattern piece, which assumes that the skin side of the leather is facing up.

FRONT = receiving side; UP = smooth cap.
BACK = inserting side; UP = protruding knob.

Insert snaps onto main piece (1) following the manufacturer's instructions.


5

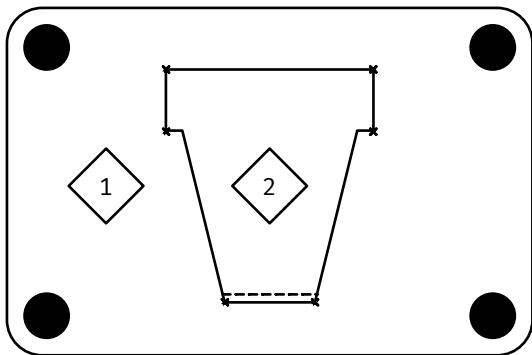

Lay the middle pocket (2), skin side up, onto the main piece (1), skin side up, matching alignment points.

Cement and sew the bottom of the middle pocket onto the main piece.

6

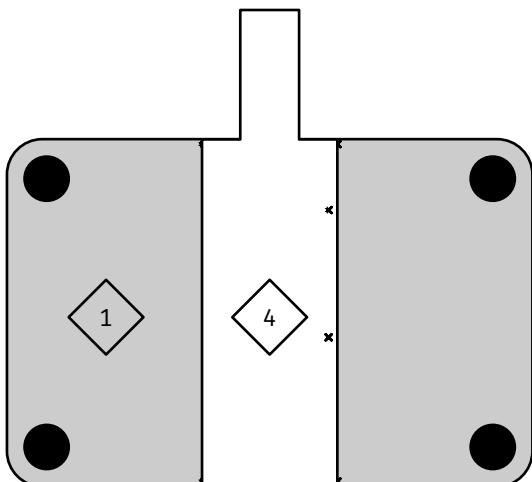


Fold the middle pocket (2) out of the way as needed during this step.


Lay the air tag panel and key tab (4), skin side up, onto the main piece (1), flesh side up, matching alignment points.

Fold the key tab down at top edge, then in half lengthwise and back up. The top of the key tab should match the top edge of the main piece (1).

Cement and sew around the top three edges of the panel, catching the folded key loop at the top, and leaving an opening between the marked points that the air tag can be slipped into later.

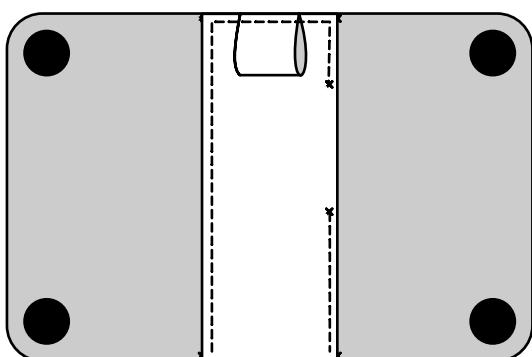

7

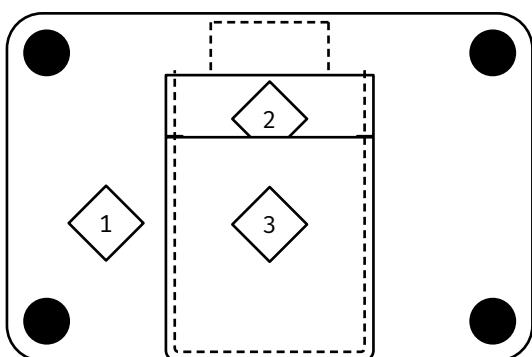

Cement the edges of the middle pocket (2) in place.

Lay the front pocket (3), skin side up, onto the main piece (1), skin side up, matching alignment points and snuggling it up under the middle pocket's (2) edges.

Cement and sew all around lower three edges of both pockets.

8 Bevel and burnish all around the main piece's perimeter.

9 Insert air tag into the opening in the side seam of the air tag panel, thread keyring through key tab, snap the wings shut over air tag and keys, and you're done!