
Upgrading E360 heat pumps with flash media

The purpose of this guide is to assist you in upgrading system software and configurations of E-Series E360 heat pump units.

Before you begin your software update, please navigate to the “Configuration” page of the Main Control Panel and record all settings. After the update you will need to confirm all settings, and some upgrades may require setting new configuration items that did not previously exist.

Remove the SD card from your E-Series heat pump unit, and backup the contents of FCDATA01 to a secure location. Safely remove the SD Card when complete.


Below is an example of the E-Series flash media upgrade kit file structure.
In this guide, the SD_Card Folder contents are copied to an SD Card.
The USB_media folder contents are copied to a USB media stick.
The contents of the Config folder will be copied to a blank SD Card after the HMI and PLC are upgraded.

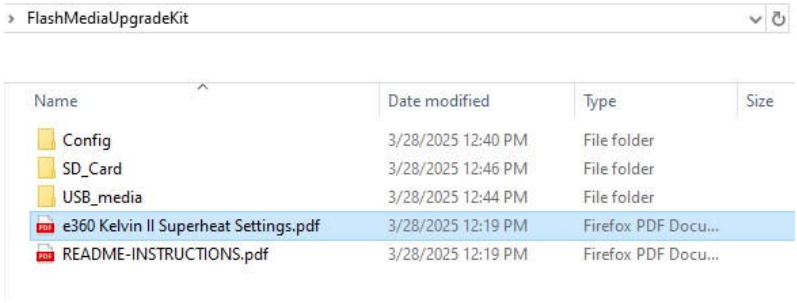

Move the contents of the USB_Media folder to a FAT32 formatted USB-A flash drive. You should have an hgauto.ini file, and a file named ESeries_HMI_1_202.ZNX. Be sure to place these files directly in the USB media root directory with no additional folders. Safely remove the USB device from your computer.


Next with an otherwise empty SD Card FAT32 formatted, copy the contents of the folder named SD_Card to the SD Card. You will now have an SD Card with the folder FCDATA01 in the root directory. Safely remove the SD Card from your computer.

With the Heat Pump System powered on, but the system set to “system off”, open the electrical enclosure, identify the back of the screen (HMI), and insert the USB media into the USB2 slot of the Heat Pump HMI.

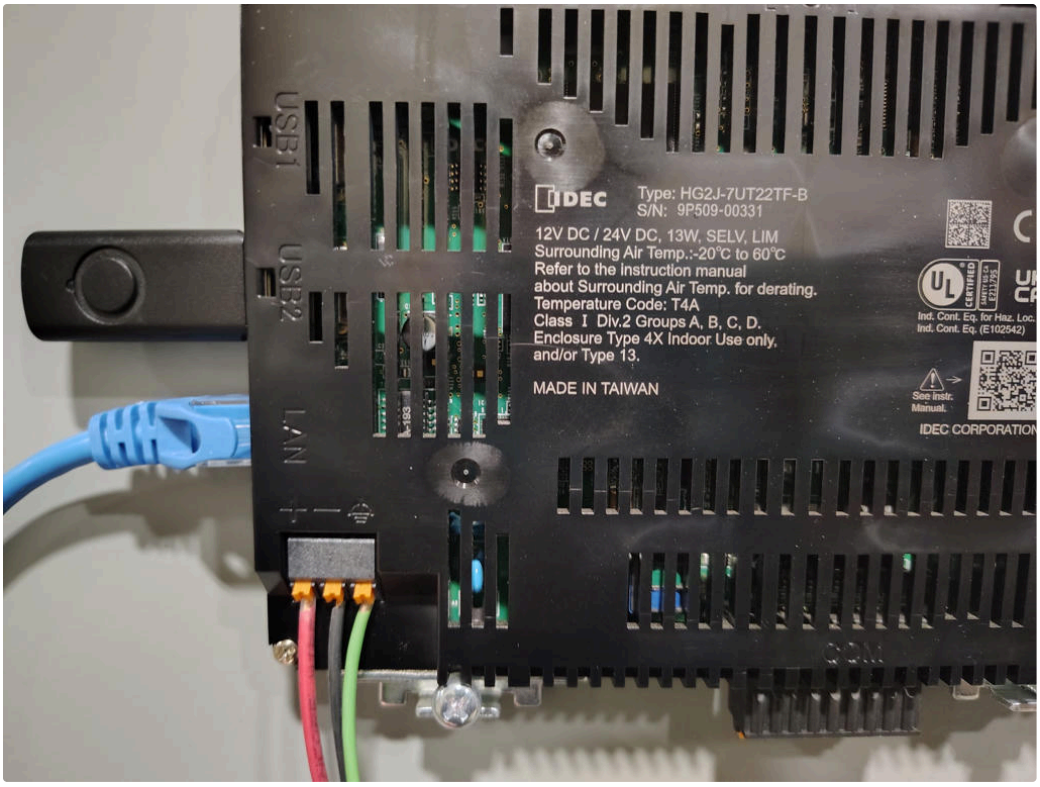

USB2 is the port located immediately next to the Ethernet port. This view is the rear of the HMI which you will see after you open the Heat Pump enclosure door.

Close the enclosure door of the Heat Pump, and secure as necessary. You should now be viewing the HMI control screen. Within 10 seconds a “Confirmation” window should appear as shown .

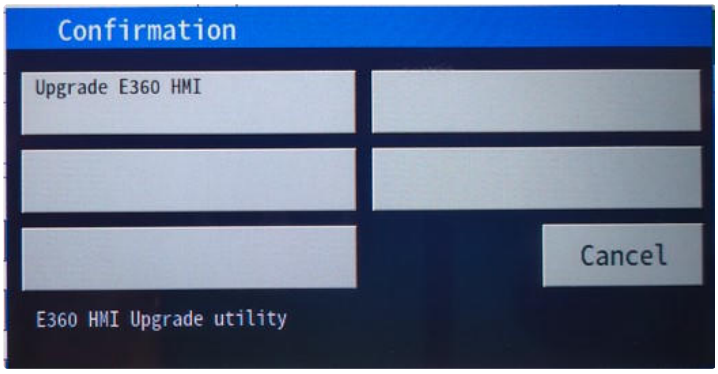


Select Upgrade E360 HMI

From the Confirmation window, select **Upgrade E360 HMI**. This will upgrade the Heat Pump HMI.
You may be prompted for a password. The user is User and the password is 1000. The HMI may flash, go blank, and reset during the upgrade process this is normal. When completed, a confirmation window will appear. Press **Ack** to continue.

Be sure you have recorded your previous settings and configurations, and backed up the SD Card which came with the Heat Pump. Next, power off your heat pump, and remove the USB media from the HMI.

Move the contents of the SD_Card folder to an otherwise blank SD Card, you should now have an SD Card with FCDATA01 on it. Safely remove the SD Card from your computer. Insert the SD card into the PLC. Power on the PLC and HMI. The heat pump HMI and PLC may take longer than normal to initialize, while the PLC software upgrade is being installed. The PLC


will click, and the HMI may display communication errors until the PLC has competed upgrading

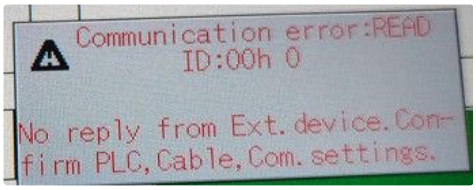

Communication error may appear while the unit upgrade takes place.

Please be patient, the upgrade process may take up to 5 minutes to complete. Once the PLC and HMI have fully initialized, communication errors will disappear.

Verify the upgrade process completed successfully by pressing the **Help** button located at the top right corner of the HMI. The upgraded versions should read HMI Version: 1.213 and PLC Program Version: 1.213 or later.

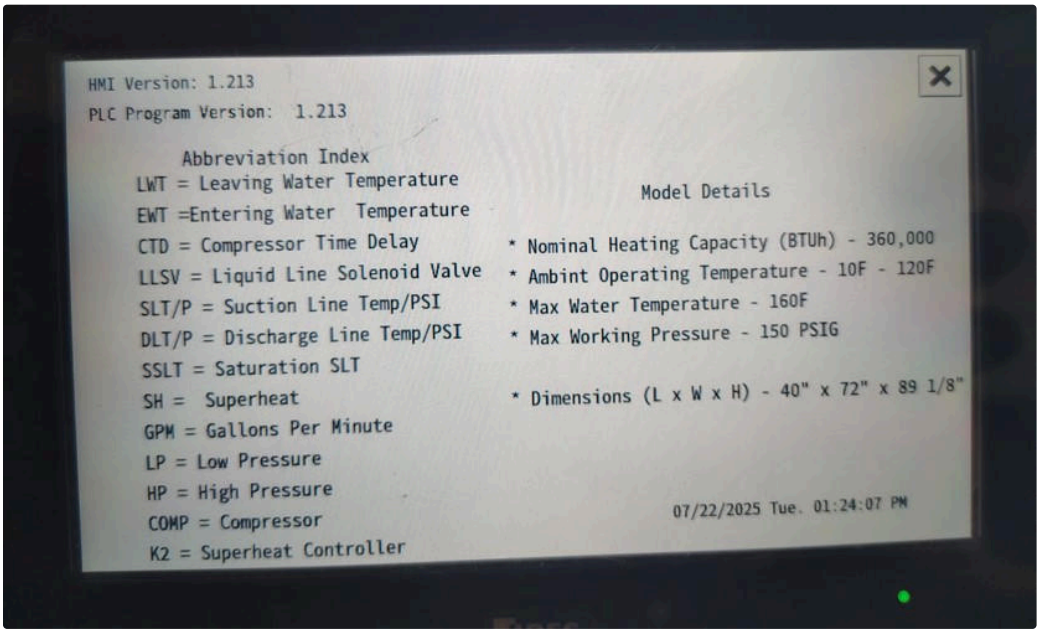

Press the **X** at the top right corner of the HMI to exit this view.

Remove the SD Card upgrade media from the PLC.

Finally you must provision an SD Card with E360 configuration files.
From the Flash Media upgrade kit files, a folder named “Config” is also present. Copy the entirety of the FCDATA01 folder located within to a blank SD Card.
Safely remove the SD card from your computer, and install it into the PLC. This can be done while the unit is on, however in some cases the unit may require power cycling to initialize the newly installed configuration files.

Power on the unit to continue with configuration, and diagnostics. To proceed to configuring the E-Series Heat Pump refer to the instruction manual for unit start up and settings.

Your E-Series upgrade is now complete.