


Figure 97-49. VOR/LOC navigation system No. 1 wiring diagram (S/N 31222 and subsequent) (Sheet 1 of 5)

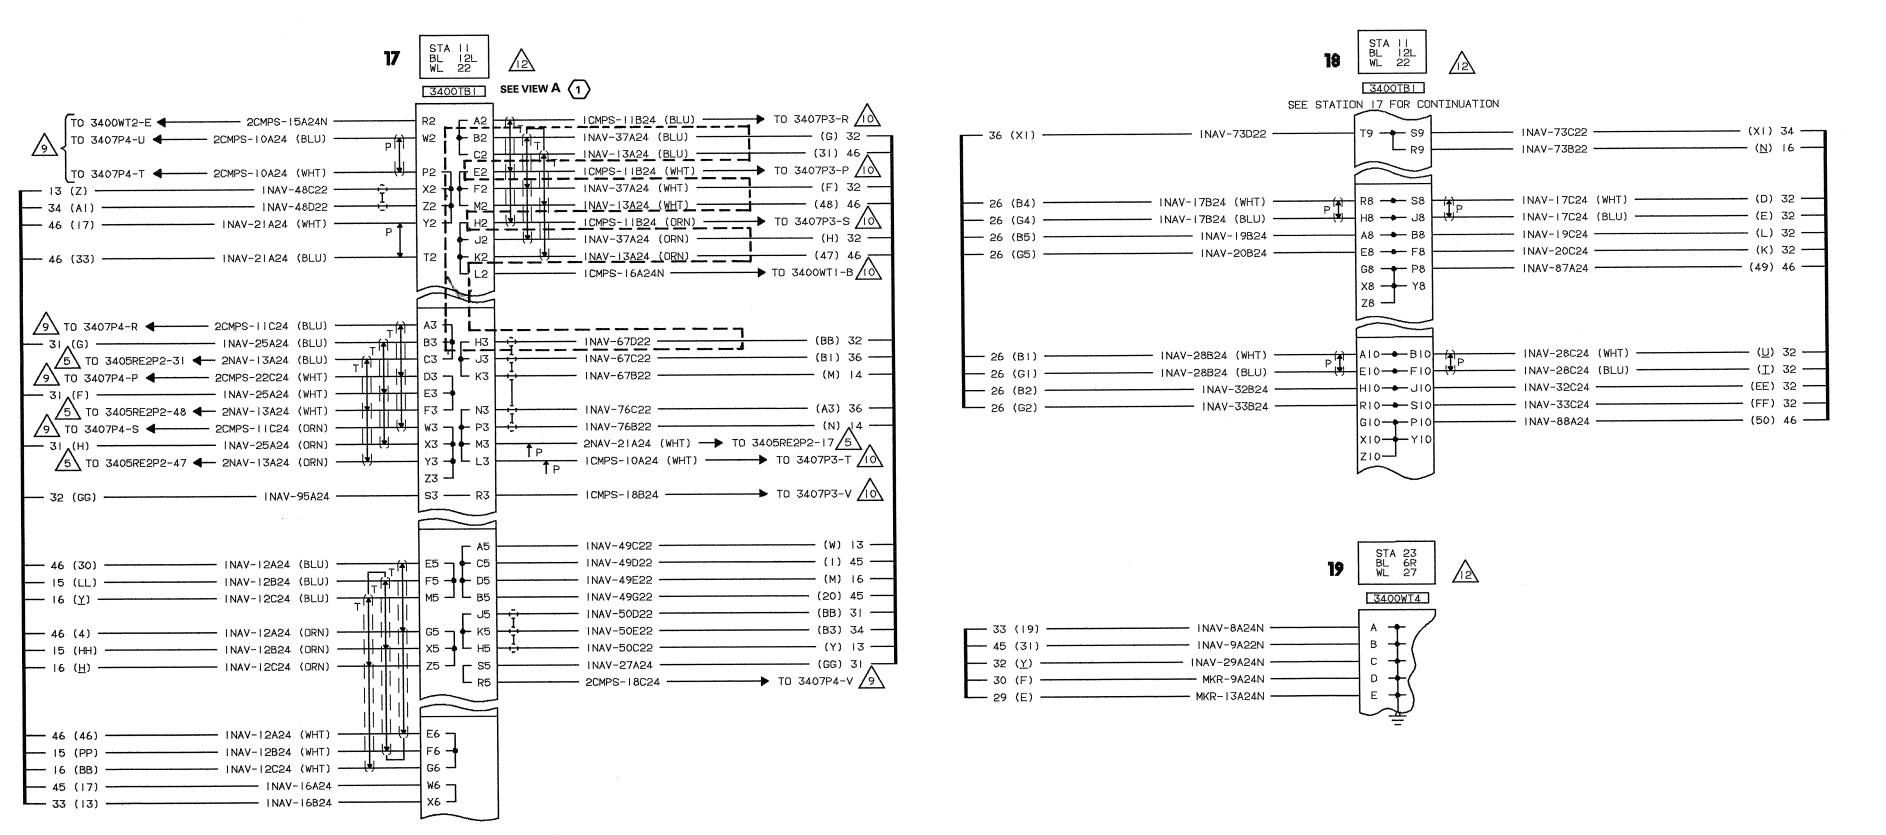

SEE STATION 18 FOR CONTINUATION

BHT-212-MM



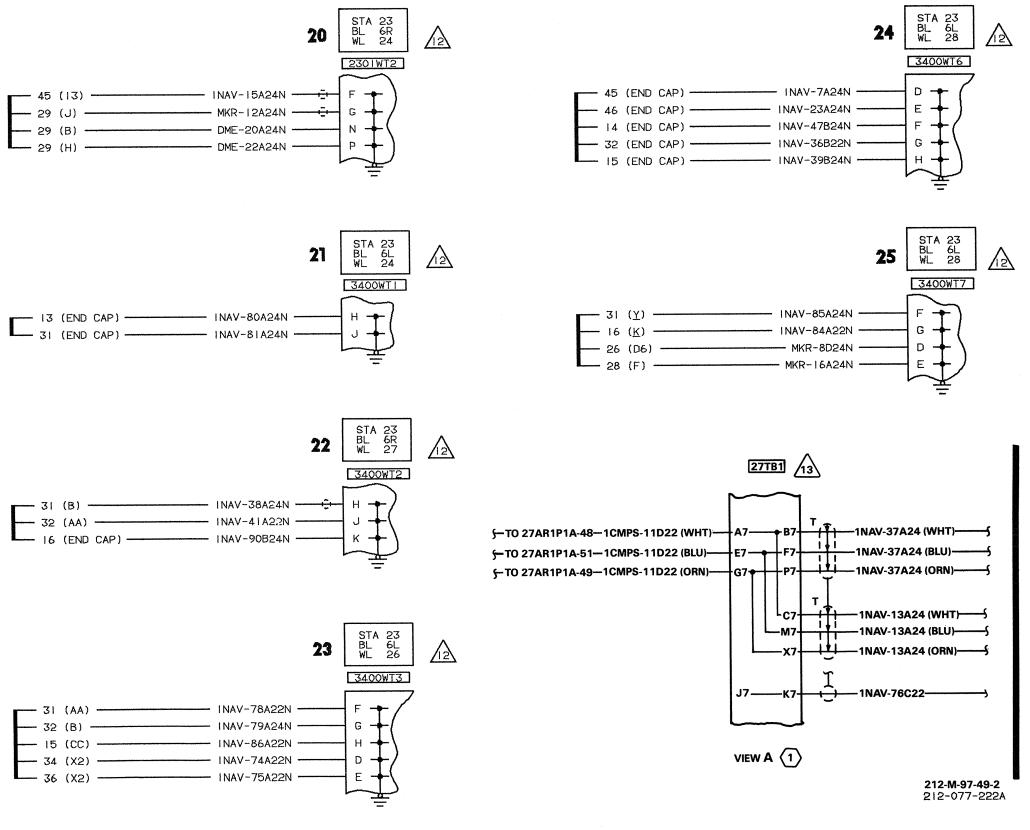



Figure 97-49. VOR/LOC navigation system No. 1 wiring diagram (S/N 31222 and subsequent) (Sheet 2)

97-00-00 Page 140

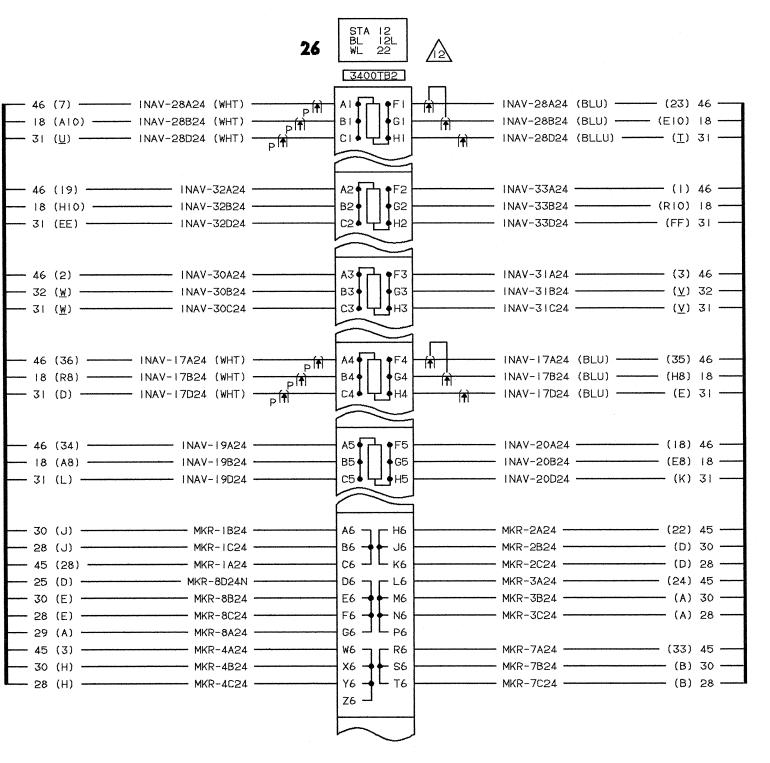


SEE STATION 27 FOR CONTINUATION

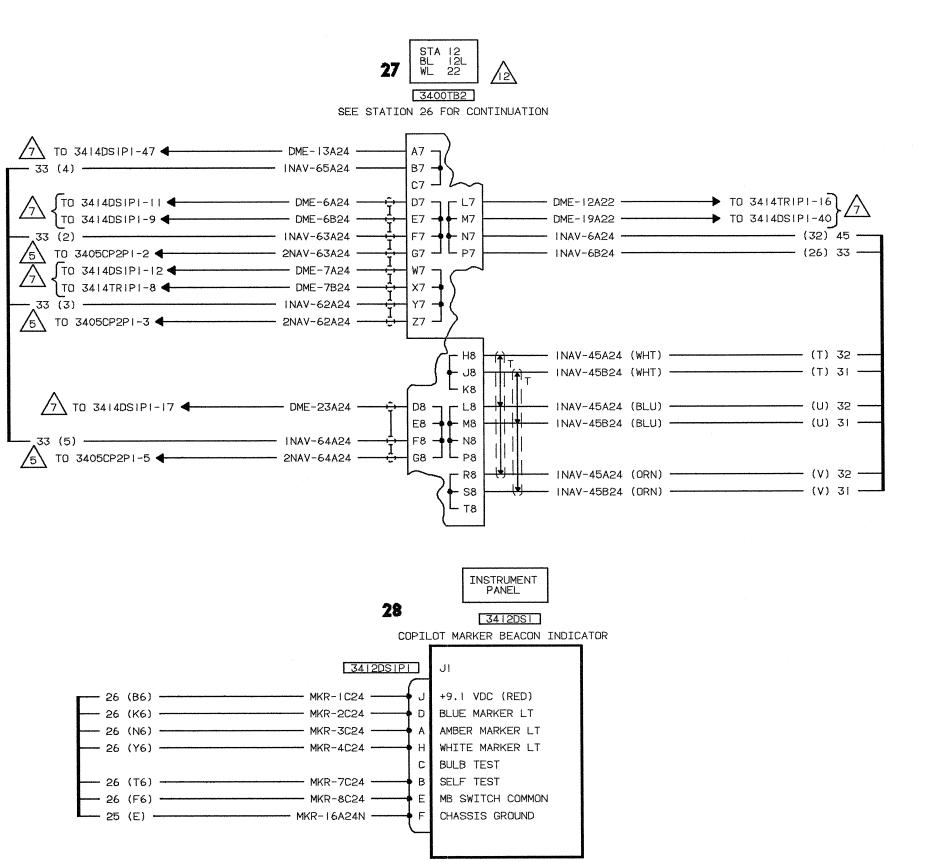

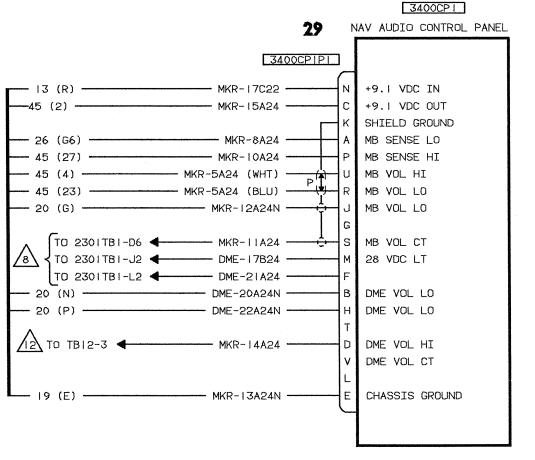

PEDESTAL

INSTRUMENT

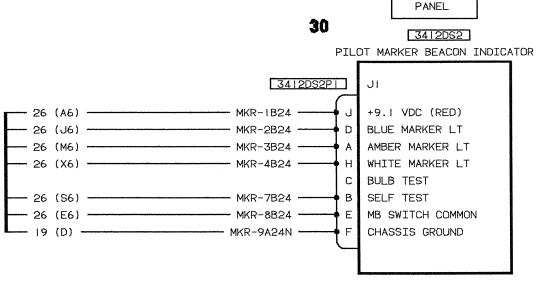

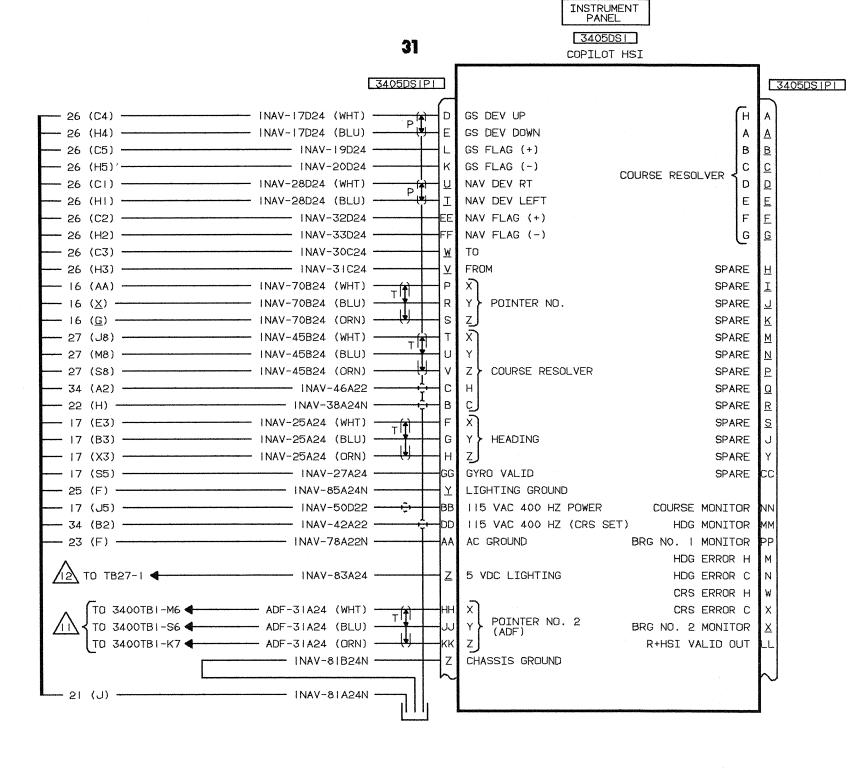


Figure 97-49. VOR/LOC navigation system No. 1 wiring diagram (S/N 31222 and subsequent) (Sheet 3)

212-M-97-49-3 212-077-222A

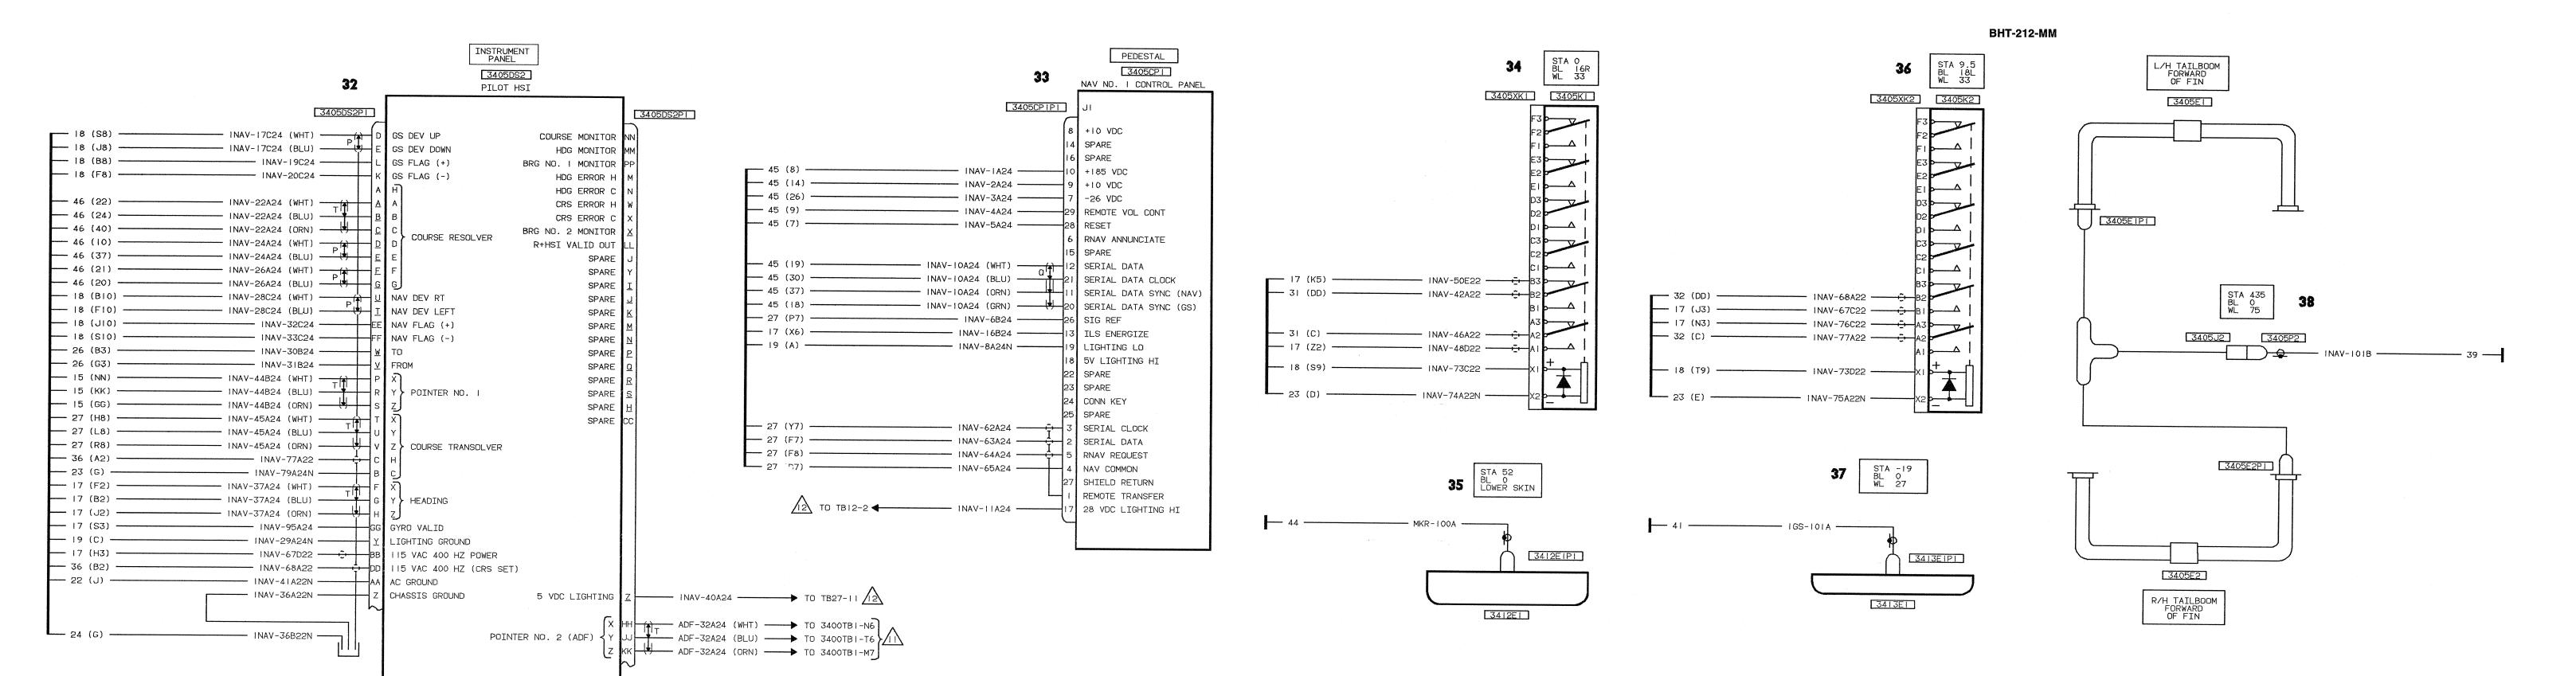


Figure 97-49. VOR/LOC navigation system No. 1 wiring diagram (S/N 31222 and subsequent) (Sheet 4)

212-M-97-49-4 212-077-222A

NAV AUDIO LO

ILS ENERGIZE 28 VDC POWER

28 VDC POWER

AUDIO ATTEN LOAD

VOR COMPOSITI

CONN KEY

AC GS EXT

DC GS EXT

GS AGC

NAV AGC

VOR REF

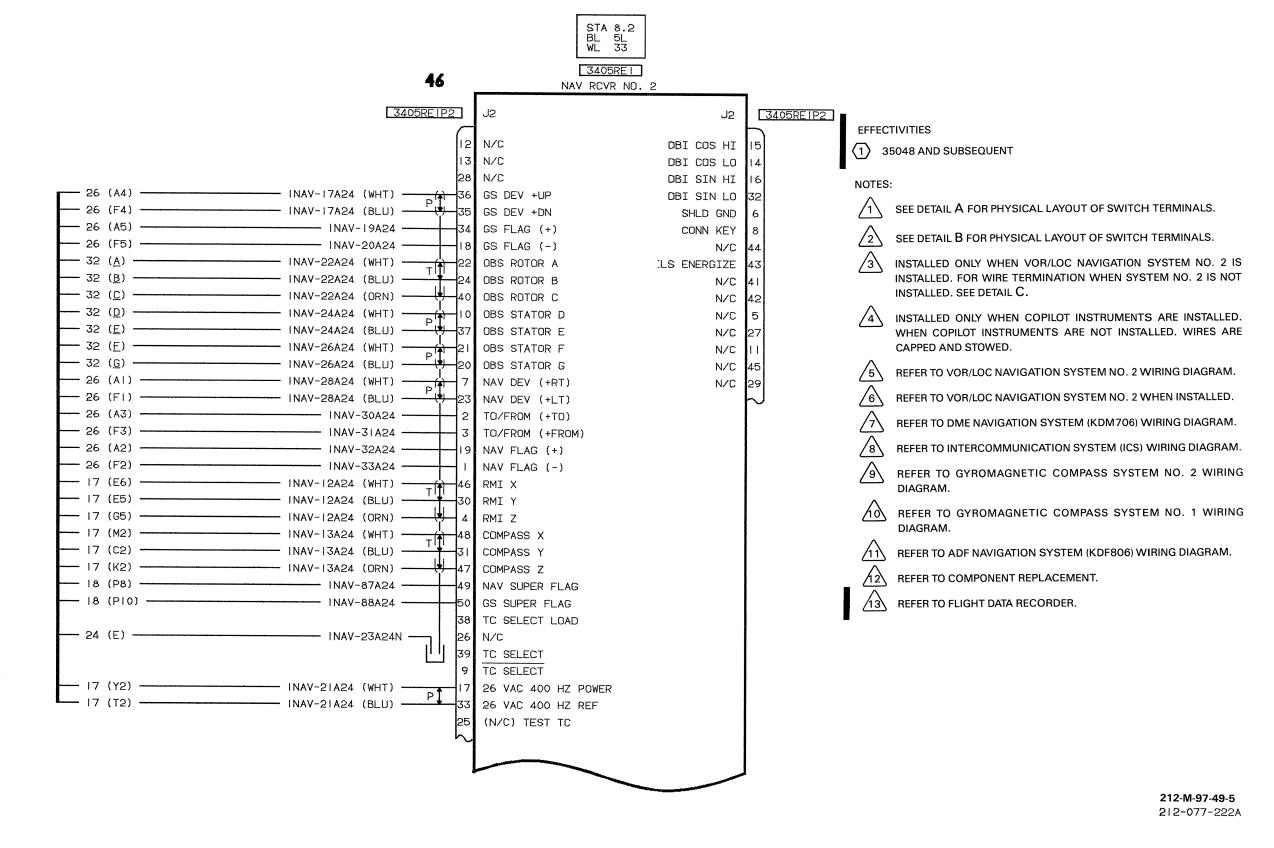


Figure 97-49. VOR/LOC navigation system No. 1 wiring diagram (S/N 31222 and subsequent) (Sheet 5)

97-00-00 Page 143

BHT-212-MM