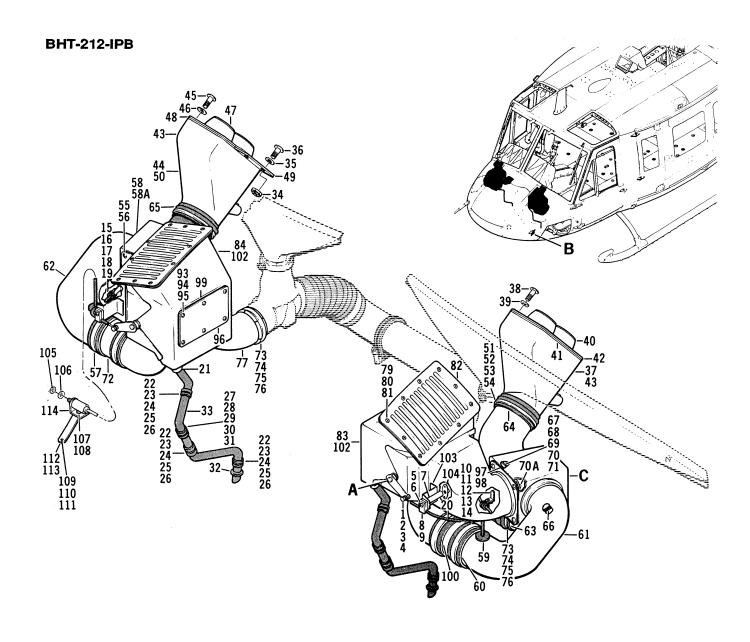
## **CONTENTS - IPB**

Figure Number	Figure Title	Chapter/Section Number	Page Number
21-1	Air distribution instl, heating and ventilation and		
	blower instl, inverter cooling (30504 thru 30596,		
	30604 thru 30610)	21-99-00	2
21-2	Air distribution installation, heating and ventilation		
	(30597 thru 30603, 30611 thru sub)	21-99-00	8
21-3	Air distribution installation, heating and ventilation	21-99-00	16
21-4	Air distribution installation, heating and ventilation	21-99-00	24
21-5	Air distribution installation, heating and ventilation	21-99-00	34
21-6	Air vent system installation, cabin roof (30504 thru		
	30553)	21-99-00	46
21-7	Winterization heater kit	21-99-00	48
21-8	Ventilation system installation, overhead ram air	2. 55 55	40
_, _		21-00-00	50
	(30554 thru sub)	21-99-00	58



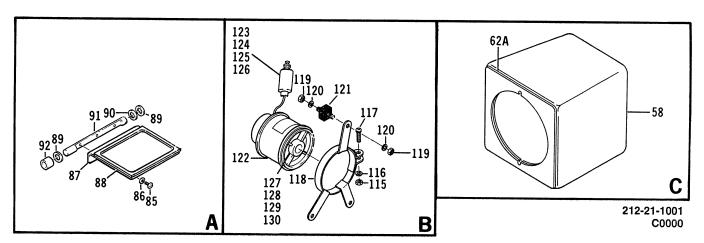


Figure 21-1. Air distribution instl, heating and ventilation and blower instl, inverter cooling (30504 thru 30596, 30604 thru 30610)

1 NAS 1 MS2 2 AN9 2 AN9 2 AN9 3 AN9 3 NAS 4 NAS 5 AN5 5 MS3 6 AN9 6 NAS 7 NAS 8 204 8 30- 9 204 9 30- 10 NAS 10 MS2 11 AN9 11 AN9	PART NUMBER  2-070-400-003  2-070-400-005  3679A06 21042L06 260PD6 260JD6  31149DN632J 260C10L 31149C0332R 31297-06-3 3207-272 260PD10L 260JD10L 31149D0332J 343DD3-90	Figure 21-1. Air Distribution Instl, Heating and Ventilation and Blower Instl, Inverter Cooling (S/N 30504 thru 30596, 30604 thru 30610)  AIR DISTRIBUTION INSTL, HEATING AND VENTILATION (S/N 30504 THRU 30553) (SEE FIG. 3, 4, 5 FOR BALANCE OF BREAKDOWN).  AIR DISTRIBUTION INSTL, HEATING AND VENTILATION (S/N 30554 THRU 30596, 30604 THRU 30610) (SEE FIG. 3, 4, 5 FOR BALANCE OF BREAKDOWN).  .NUT (REPLACED BY MS21042L06)NUT (REPLACED BY MS21042L06)WASHER (REPLACED BY AN960JD6)WASHER (REPLACED BY AN960JD6)WASHER (REPLACES AN960PD6) (REPLACED BY NAS1149DN632J)WASHER (REPLACED BY MS35149C0332R)WASHER (REPLACED BY MS35207-272)SCREW (REPLACED BY MS35207-272)SCREW (REPLACED BY AN960JD10L)WASHER, FLAT (REPLACES AN960PD10L) .WASHER, FLAT (REPLACES AN960PD10L) .WASHER, FLAT (REPLACES AN960DD10L) .WASHER, FLAT (REPLACES AN960DD10L)	UNIT PER ASSY  1 1 2 2 2 2 4 4 2 2 2 2 2 2 2	NP NP P SP P SP P SP P P SP P P SP P SP	UOC
1 NAS 1 MS2 2 AN9 2 AN9 2 AN9 3 AN9 3 NAS 4 NAS 5 AN5 5 MS3 6 AN9 6 NAS 7 NAS 8 204 8 30- 9 204 9 30- 10 NAS 10 MS2 11 AN9 11 AN9	8-070-400-005 8679A06 81042L06 960PD6 960JD6 81149DN632J 960C10L 81149C0332R 81297-06-3 820-10R36 85207-272 960PD10L 960JD10L	Blower Instl, Inverter Cooling (S/N 30504 thru 30596, 30604 thru 30610)  AIR DISTRIBUTION INSTL, HEATING AND VENTILATION (S/N 30504 THRU 30553) (SEE FIG. 3, 4, 5 FOR BALANCE OF BREAKDOWN)  AIR DISTRIBUTION INSTL, HEATING AND VENTILATION (S/N 30554 THRU 30596, 30604 THRU 30610) (SEE FIG. 3, 4, 5 FOR BALANCE OF BREAKDOWN)  .NUT (REPLACED BY MS21042L06) .NUT (REPLACES NAS679A06) .WASHER (REPLACES AN960JD6) .WASHER (REPLACED BY NAS1149C0332R) .WASHER (REPLACED BY MS35207-272) .SCREW (REPLACED BY MS35207-272) .SCREW (REPLACED BY AN960JD10L) .WASHER, FLAT (REPLACES AN960PD10L) .WASHER, FLAT (REPLACES AN960PD10L)	1 2 2 2 2 2 4 4 2 2 2 2	NP P SP P SP P SP P	
1 NAS 1 MS2 2 AN9 2 AN9 2 AN9 3 AN9 3 NAS 4 NAS 5 AN5 5 MS3 6 AN9 6 AN9 6 NAS 7 NAS 8 204 8 30- 9 204 9 30- 10 NAS 10 MS2 11 AN9 11 AN9	8-070-400-005 8679A06 81042L06 960PD6 960JD6 81149DN632J 960C10L 81149C0332R 81297-06-3 820-10R36 85207-272 960PD10L 960JD10L	(S/N 30504 THRU 30553) (SEE FIG. 3, 4, 5 FOR BALANCE OF BREAKDOWN)  AIR DISTRIBUTION INSTL, HEATING AND VENTILATION (S/N 30554 THRU 30596, 30604 THRU 30610) (SEE FIG. 3, 4, 5 FOR BALANCE OF BREAKDOWN)  .NUT (REPLACED BY MS21042L06) .NUT (REPLACES NAS679A06) .WASHER (REPLACED BY AN960JD6) .WASHER (REPLACES AN960PD6) (REPLACED BY NAS1149DN632J) .WASHER (REPLACES AN960JD6) .WASHER (REPLACES AN960JD6) .WASHER (REPLACES AN960JD6) .WASHER (REPLACED BY NAS1149C0332R) .WASHER (REPLACED BY MS35207-272) .SCREW (REPLACED BY MS35207-272) .SCREW (REPLACED BY AN960JD10L) .WASHER, FLAT (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	1 2 2 2 2 2 4 4 2 2 2 2	NP P SP P SP P SP P	
1 NAS 1 MS2 2 AN9 2 AN9 2 NAS 3 AN9 3 NAS 4 NAS 5 AN5 5 MS3 6 AN9 6 AN9 6 NAS 7 NAS 8 204 8 30- 9 204 9 30- 10 NAS 10 MS2 11 AN9 11 AN9	8679A06 81042L06 960PD6 960JD6 81149DN632J 960C10L 81149C0332R 81297-06-3 820-10R36 85207-272 960PD10L 960JD10L	AIR DISTRIBUTION INSTL, HEATING AND VENTILATION (S/N 30554 THRU 30596, 30604 THRU 30610) (SEE FIG. 3, 4, 5 FOR BALANCE OF BREAKDOWN) .NUT (REPLACED BY MS21042L06) .NUT (REPLACES NAS679A06) .WASHER (REPLACED BY AN960JD6) .WASHER (REPLACES AN960PD6) (REPLACED BY NAS1149DN632J) .WASHER (REPLACES AN960JD6) .WASHER (REPLACES AN960JD6) .WASHER (REPLACES AN960C10L) .BOLT .SCREW (REPLACED BY MS35207-272) .SCREW (REPLACED BY MS35207-272) .SCREW (REPLACED BY AN960JD10L) .WASHER, FLAT (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	1 2 2 2 2 2 4 4 2 2 2 2	NP P SP P SP P SP P	
1 MS2 2 AN9 2 AN9 2 NAS 3 AN9 3 NAS 4 NAS 5 AN5 5 MS3 6 AN9 6 AN9 6 NAS 7 NAS 8 204 8 30- 9 204 9 30- 10 NAS 10 MS2 11 AN9 11 AN9	21042L06 260PD6 260PD6 31149DN632J 260C10L 31149C0332R 31297-06-3 320-10R36 35207-272 260PD10L 260JD10L	.NUT (REPLACED BY MS21042L06) .NUT (REPLACES NAS679A06) .WASHER (REPLACED BY AN960JD6) .WASHER (REPLACES AN960PD6) (REPLACED BY NAS1149DN632J) .WASHER (REPLACES AN960JD6) .WASHER (REPLACED BY NAS1149C0332R) .WASHER (REPLACED BY NAS1149C0332R) .BOLT .SCREW (REPLACED BY MS35207-272) .SCREW (REPLACED BY MS35207-272) .SCREW (REPLACED BY AN960JD10L) .WASHER, FLAT (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	2 2 2 2 2 4 4 2 2 2 2 2	P SP P SP P SP P SP P	
1 MS2 2 AN9 2 AN9 2 NAS 3 AN9 3 NAS 4 NAS 5 AN5 5 MS3 6 AN9 6 AN9 6 NAS 7 NAS 8 204 8 30- 9 204 9 30- 10 NAS 10 MS2 11 AN9 11 AN9	21042L06 260PD6 260PD6 31149DN632J 260C10L 31149C0332R 31297-06-3 320-10R36 35207-272 260PD10L 260JD10L	.NUT (REPLACES NAS679A06) .WASHER (REPLACED BY AN960JD6) .WASHER (REPLACES AN960PD6) (REPLACED BY NAS1149DN632J) .WASHER (REPLACES AN960JD6) .WASHER (REPLACED BY NAS1149C0332R) .WASHER (REPLACES AN960C10L) .BOLT .SCREW (REPLACED BY MS35207-272) .SCREW (REPLACES AN520-10R36) .WASHER (REPLACED BY AN960JD10L) .WASHER, FLAT (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	2 2 2 4 4 2 2 2 2	SP P P SP P SP P SP P	
2 AN9 2 AN9 2 NAS 3 AN9 3 NAS 4 NAS 5 AN5 5 MS 6 AN9 6 AN9 6 AN9 6 NAS 7 NAS 8 204 8 30- 9 204 9 30- 10 NAS 10 MS 211 AN9 11 AN9	060PD6 060JD6 060JD6 060JD6 060C10L 061149C0332R 05207-06-3 0520-10R36 05207-272 060PD10L 060JD10L	.WASHER (REPLACED BY AN960JD6) .WASHER (REPLACES AN960PD6) (REPLACED BY NAS1149DN632J) .WASHER (REPLACES AN960JD6) .WASHER (REPLACED BY NAS1149C0332R) .WASHER (REPLACES AN960C10L) .BOLT .SCREW (REPLACED BY MS35207-272) .SCREW (REPLACES AN520-10R36) .WASHER (REPLACED BY AN960JD10L) .WASHER, FLAT (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	2 2 4 4 2 2 2 2 2	P P SP SP SP SP P P P	
2 AN9 2 NAS 3 AN9 3 NAS 4 NAS 5 AN5 5 MS 6 AN9 6 AN9 6 NAS 7 NAS 8 204 8 30- 9 204 9 30- 10 NAS 10 MS 211 AN9 11 AN9	S1149DN632J S60C10L S1149C0332R S1297-06-3 S20-10R36 S5207-272 S60PD10L S60JD10L	.WASHER (REPLACES AN960PD6) (REPLACED BY NAS1149DN632J) .WASHER (REPLACES AN960JD6) .WASHER (REPLACED BY NAS1149C0332R) .WASHER (REPLACES AN960C10L) .BOLT .SCREW (REPLACED BY MS35207-272) .SCREW (REPLACES AN520-10R36) .WASHER (REPLACED BY AN960JD10L) .WASHER, FLAT (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	2 2 4 4 2 2 2 2	P SP P SP SP P	
3 AN9 3 NAS 4 NAS 5 AN5 5 MS3 6 AN9 6 AN9 6 NAS 7 NAS 8 204 8 30- 9 204 9 30- 10 NAS 10 MS2 11 AN9 11 AN9	060C10L S1149C0332R S1297-06-3 S20-10R36 S5207-272 060PD10L 060JD10L	.WASHER (REPLACES AN960JD6) .WASHER (REPLACED BY NAS1149C0332R) .WASHER (REPLACES AN960C10L) .BOLT .SCREW (REPLACED BY MS35207-272) .SCREW (REPLACES AN520-10R36) .WASHER (REPLACED BY AN960JD10L) .WASHER, FLAT (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	2 4 4 2 2 2 2	SP P SP SP P SP	
3 AN9 3 NAS 4 NAS 5 AN5 5 MS3 6 AN9 6 AN9 6 NAS 7 NAS 8 204 8 30- 9 204 9 30- 10 NAS 10 MS2 11 AN9 11 AN9	060C10L S1149C0332R S1297-06-3 S20-10R36 S5207-272 060PD10L 060JD10L	.WASHER (REPLACED BY NAS1149C0332R) .WASHER (REPLACES AN960C10L) .BOLT .SCREW (REPLACED BY MS35207-272) .SCREW (REPLACES AN520-10R36) .WASHER (REPLACED BY AN960JD10L) .WASHER, FLAT (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	4 4 2 2 2 2	P SP SP P SP	
3 NAS 4 NAS 5 AN5 5 MS3 6 AN9 6 AN9 6 NAS 7 NAS 8 204 8 30- 9 204 9 30- 10 NAS 10 MS2 11 AN9 11 AN9	81149C0332R 81297-06-3 820-10R36 85207-272 860PD10L 860JD10L	.WASHER (REPLACES AN960C10L) .BOLT .SCREW (REPLACED BY MS35207-272) .SCREW (REPLACES AN520-10R36) .WASHER (REPLACED BY AN960JD10L) .WASHER, FLAT (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	4 2 2 2 2	SP SP P SP	
4 NAS 5 AN5 5 MS3 6 AN9 6 AN9 6 NAS 7 NAS 8 204 8 30- 9 204 9 30- 10 NAS 10 MS2 11 AN9 11 AN9	81297-06-3 620-10R36 85207-272 960PD10L 960JD10L	BOLT  SCREW (REPLACED BY MS35207-272)  SCREW (REPLACES AN520-10R36)  WASHER (REPLACED BY AN960JD10L)  WASHER, FLAT (REPLACES AN960PD10L)  (REPLACED BY NAS1149D0332J)	2 2 2	SP P SP P	
5 AN5 5 MS3 6 AN9 6 AN9 6 NAS 7 NAS 8 204 8 30- 9 204 9 30- 10 NAS 10 MS2 11 AN9 11 AN9	320-10R36 35207-272 960PD10L 960JD10L	.SCREW (REPLACED BY MS35207-272)	2 2 2	P SP P	
5 MS3 6 AN9 6 AN9 6 NAS 7 NAS 8 204 8 30- 9 204 9 30- 10 NAS 10 MS2 11 AN9 11 AN9	85207-272 960PD10L 960JD10L 81149D0332J	.SCREW (REPLACES AN520-10R36)	2 2	SP P	
6 AN9 6 AN9 6 NAS 7 NAS 8 204 8 30- 9 204 9 30- 10 NAS 10 MS2 11 AN9 11 AN9	960PD10L 960JD10L 81149D0332J	.WASHER (REPLACED BY AN960JD10L)	2	P	
6 AN9 6 NAS 7 NAS 8 204 8 30- 9 204 9 30- 10 NAS 10 MS2 11 AN9 11 AN9	960JD10L 31149D0332J	.WASHER, FLAT (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)		-	
6 NAS 7 NAS 8 204 8 30- 9 204 9 30- 10 NAS 10 MS2 11 AN9 11 AN9	S1149D0332J	(REPLACED BY NAS1149D0332J)	2	ת	
7 NAS 8 204 8 30- 9 204 9 30- 10 NAS 10 MS2 11 AN9 11 AN9			2	ח	
7 NAS 8 204 8 30- 9 204 9 30- 10 NAS 10 MS2 11 AN9 11 AN9		.WASHER, FLAT (REPLACES AN960JD10L)		_	
8 204 8 30- 9 204 9 30- 10 NAS 10 MS2 11 AN9 11 AN9	343DD3-90		2	SP	
9 204  9 30- 10 NAS 10 MS2 11 AN9 11 AN9	1-070-972-003	.SPACER	2	SP	
9 204  9 30- 10 NAS 10 MS2 11 AN9 11 AN9		BY 30-053-3)	2	NP	
9 30- 10 NAS 10 MS2 11 AN9 11 AN9	-053-3	.CLAMP (REPLACES 204-070-972-003)	2	SP	
10 NAS 10 MS2 11 AN9 11 AN9	1-070-972-004	.CLAMP (S/N 30504 THRU 30553) (REPLACED			
10 NAS 10 MS2 11 AN9 11 AN9		BY 30-053-4)	2	NP	
10 MS2 11 AN9 11 AN9	-053-4	.CLAMP (REPLACES 204-070-972-004)	2 1	SP	
11 AN9 11 AN9		NUT (REPLACED BY MS21042L3)	_	P	
11 AN9	21042L3	.NUT, SELF-LOCKING (REPLACES NAS679A3)	1 1	SP P	
	060PD10L 060JD10L	.WASHER (REPLACED BY ANYOUDDIOL)		P	
11 NAS	,00001011	(REPLACED BY NAS1149D0332J)	1	P	
	S1149D0332J	.WASHER, FLAT (REPLACES AN960JD10L)	1	SP	
	520-10R8	SCREW (REPLACED BY MS35207-263)	1	P	
	35207-263	SCREW (REPLACES AN520-10R8)	1	SP	
	21104D3	.CLAMP (REPLACED BY MS21919WDG3)	1	NP	
-	21919WDG3	.CLAMP (REPLACES MS21104D3)	1	SP	
-	743-12	BRACKET	1	SP	
	679A3	.NUT (REPLACED BY MS21042L3)	1	P	
	21042L3	.NUT, SELF-LOCKING (REPLACES NAS679A3)	1	SP	
	960PD10L	.WASHER (REPLACED BY AN960JD10L)	1	P	
	960JD10L	.WASHER, FLAT (REPLACES AN960PD10L)		_	
		(REPLACED BY NAS1149D0332J)	1	P	
16 NAS			1	SP	
	31149D0332J	.WASHER, FLAT (REPLACES AN960JD10L)	1 I	P	1
17 MS3			1		

(1)	(2)	(3)	(4)	(5)	(6)
INDEX NUMBER	PART NUMBER	ITEM NAME	UNIT PER ASSY	A V A I L	U 0 C
		Figure 21-1. Air Distribution Instl, Heating and Ventilation and Blower Instl, Inverter Cooling (S/N 30504 thru 30596, 30604 thru 30610) (Cont'd)			
18	MS21104D3	.CLAMP (REPLACED BY MS21919WDG3)	1	NP	
18	MS21919WDG3	.CLAMP (REPLACES MS21104D3)	1	SP	
19	20-032-1	BRACKET	1	SP	
20	212-070-433-011	.CONTROL ASSY	1	SP	
21	AN737TW30	.CLAMP	2	SP	
22	NAS679A3	.NUT (REPLACED BY MS21042L3)	6	P	
22	MS21042L3	.NUT, SELF-LOCKING (REPLACES NAS679A3)	6	SP	
23	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	6	P	
23	AN960JD10L	.WASHER, FLAT (REPLACES AN960PD10L)		_	
22	NA G1140D02227	(REPLACED BY NAS1149D0332J)	6 6	P	
23	NAS1149D0332J	.WASHER, FLAT (REPLACES AN960JD10L)	-	SP	
24 25	AN520-10R18 NAS43DD3-40	SCREW	6 6	SP P	
25	NAS43DD3-40N	SPACER (REPLACES NAS43DD3-40N)	6	SP	
26	MS21919DG12	.CLAMP (REPLACED BY MS21919WDG12)	6	P	
26	MS21919BG12	.CLAMP (REPLACES MS21919DG12)	6	SP	
27	NAS1329A3-80	RIVNUT, BLIND	2	SP	
28	AN520-10R18	.SCREW	2	SP	
29	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	2	P	
29	AN960JD10L	.WASHER, FLAT (REPLACES AN960PD10L)			
		(REPLACED BY NAS1149D0332J)	2	P	
29	NAS1149D0332J	.WASHER, FLAT (REPLACES AN960JD10L)	2	SP	
30	NAS43DD3-37	.SPACER	2	SP	
31	MS21919DG12	.CLAMP (REPLACED BY MS21919WDG12)	2	P	
31	MS21919WDG12	.CLAMP (REPLACES MS21919DG12)	2	SP	
32	MS35489-135	.GROMMET	2	SP	
33	212-070-402-001	.HOSE	2	SP	
34	NAS679A3	.NUT (REPLACED BY MS21042L3)	4	P	
34	MS21042L3	.NUT, SELF-LOCKING (REPLACES NAS679A3)	4	SP	
35	AN960PD10	.WASHER (REPLACED BY AN960JD10)	4	P	
35	AN960JD10	.WASHER (REPLACES AN960PD10) (REPLACED	4	ъ	
35	NAS1149D0363J	BY NAS1149D0363J)	4	P SP	
36	MS27039-1-09	SCREW	4	SP	
37	212-070-464-001	.PLENUM ASSY, AIR DISTRIBUTION, RAM AIR	1	SP	
38	MS27039-1-10	SCREW	8	SP	
39	AN960PD10L	WASHER (REPLACED BY AN960JD10L)	8	P	
39	AN960JD10L	WASHER, FLAT (REPLACES AN960PD10L)		-	
	_	(REPLACED BY NAS1149D0332J)	8	P	
39	NAS1149D0332J	WASHER, FLAT (REPLACES AN960JD10L)	8	SP	
40	204-070-483-003	VALVE ASSY, AIR	2	SP	
41	212-070-485-001	FILLER	1		
42	212-070-484-001	PANEL	1		
43	212-070-458-001	PLENUM ASSY	1	SP	
44	212-070-464-003	.PLENUM ASSY, AIR DISTRIBUTION, RAM AIR	1	SP	
45	MS27039-1-10	SCREW	8	SP	
46	AN960PD10L	WASHER (REPLACED BY AN960JD10L)	8	P	

(1)	(2)	(3)	(4)	(5) A	(6)
INDEX NUMBER	PART NUMBER	ITEM NAME	UNIT PER ASSY	V A I L	0 C
		Figure 21-1. Air Distribution Instl, Heating and Ventilation and Blower Instl, Inverter Cooling (S/N 30504 thru 30596, 30604 thru 30610) (Cont'd)			
46	AN960JD10L	WASHER, FLAT (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	8	P	
46	NAS1149D0332J	WASHER, FLAT (REPLACES AN960JD10L)	8	SP	
47	204-070-483-003	VALVE ASSY	2	SP	
48	205-070-539-003	SHIM	1	P	
49	205-070-542-001	PLATE	1	P	
50	212-070-458-003	PLENUM ASSY	1	P	
51	NAS679A3	.NUT (REPLACED BY MS21042L3)	2	P	
51	MS21042L3	.NUT, SELF-LOCKING (REPLACES NAS679A3)	2	SP	
52	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	2	P	
52	AN960JD10L	.WASHER, FLAT (REPLACES AN960PD10L)			
		(REPLACED BY NAS1149D0332J)	2	P	
52	NAS1149D0332J	.WASHER, FLAT (REPLACES AN960JD10L)	2	SP	
52A	NAS43DD3-45	.SPACER	1		
53	AN520-10R12	.SCREW (REPLACED BY MS35207-265)	2	P	
53	MS35207-265	.SCREW (REPLACES AN520-10R12)	2	SP	
54	30-016A14	.CLAMP	2	SP	
55	MS35206-246	.SCREW	8	SP	
56	AN960C8L	.WASHER (REPLACED BY NAS1149CN816R)	8	P	
56	NAS1149CN816R	.WASHER (REPLACES AN960C8L)	8	SP	
57	AN737TW98	.CLAMP	4	SP	
58	212-070-417-009	.VALVE ASSY, LH, AIR DISTRIBUTION, RAM AIR			
		AND BLOWER, OUTLET CHECK	1	P	
58A	212-070-417-011	.VALVE ASSY, RH, AIR DISTRIBUTION, RAM AIR AND BLOWER, OUTLET CHECK	1	SP	
59	MS35489-3	GROMMET	1	SP	
60	NAS521-24-8	COUPLING	1	SP	
61	212-070-418-009	DUCT ASSY, LH (REPLACED BY			
		212-070-418-053)	1	NP	
61	212-070-418-053	DUCT ASSY, LH (REPLACES 212-070-418-009)	1	SP	
62	212-070-418-011	DUCT ASSY, RH (REPLACED BY			
		212-070-418-055)	1	NP	
62	212-070-418-055	DUCT ASSY, RH (REPLACES 212-070-418-011)	1	SP	
62A	214-073-126-001	STIFFENER (USBL ON 212-070-418-53 & 55)	1		
63	NAS521-20-8	COUPLING	1	SP	
64	NAS521-28-11	COUPLING (USBL ON 212-070-417-009)	1	SP	
65	NAS1374A14CA019	HOSE (USBL ON 212-070-417-011)	_	_	
65	277 01 200 21 4 77 21 2	(REPLACED BY NAS1375A14CA019)	1	P	
65	NAS1375A14CA019	HOSE (USBL ON 212-070-417-011)	1	a n	
	010 070 414 005	(REPLACES NAS1374A14CA019)	1	SP	
66	212-070-414-005	SEAL	1	SP	
67 69	212-070-414-003		1	SP	
68	MS20341-2C	NUT	4	C.F.	
69 70	MS35340-39	WASHER	4	SP	
70 707	MS35190-211	SCREW	4	SP	
70A	NAS1068A08	NUTPLATE (REPLACED BY MS21075L08)	4	P	
70A	MS21075L08	NUTPLATE (REPLACES NAS1068A08)		-	
		(REPLACED BY MS21075L08N)	4	P	1

INDEX NUMBER					
	PART NUMBER	ITEM NAME	UNIT PER ASSY	A V A I L	0 C
		Figure 21-1. Air Distribution Instl, Heating and Ventilation and Blower Instl, Inverter Cooling (S/N 30504 thru 30596, 30604 thru 30610) (Cont'd)			
70A	MS21075L08N	NUTPLATE (REPLACES MS21075L08)	4	SP	
71	212-070-419-001	FLAPPER ASSY	1	SP	
72	206-070-475-001	.BLOWER ASSY (S/N 30504 THRU 30553) (REPLACED			
		BY 206-070-475-003 AND -005)	2	NP	
72	206-070-475-003	.BLOWER ASSY (REPLACES 206-070-475-001)			
72	206-070-475-005	(REPLACED BY 206-070-475-005)	2	NP	
12	206-070-475-005	.BLOWER ASSY (REPLACES 206-070-475-001 AND -003)	2	SP	
		(ALTERNATE PART)	۷	DE	
72	206-070-475-007	.BLOWER ASSY	2	NP	
73	NAS679A3	.NUT (REPLACED BY MS21042L3)	4	P	
73	MS21042L3	.NUT, SELF-LOCKING (REPLACES NAS679A3)	4	SP	
74	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	4	P	
74	AN960JD10L	.WASHER, FLAT (REPLACES AN960PD10L)			
		(REPLACED BY NAS1149D0332J)	4	P	
	NAS1149D0332J	.WASHER, FLAT (REPLACES AN960JD10L)	4	SP	
75	AN520-10R12	SCREW (REPLACED BY MS35207-265)	4	P	
75 76	MS35207-265 AN735D40	.SCREW (REPLACES AN520-10R12)	4	SP SP	
77	212-070-428-001	.DUCT, LH	1	SP	
77	212-070-428-002	.DUCT, RH	1	SP	
78	DELETED			~ _	
79	MS21042-08	.NUT (REPLACED BY MS21042L08)	20	P	
79	MS21042L08	.NUT (REPLACES MS21042-08)	20	SP	
80	AN960C8L	.WASHER (REPLACED BY NAS1149CN816R)	20	P	
	NAS1149CN816R	.WASHER (REPLACES AN960C8L)	20	SP	
	MS24693C49	.SCREW (REPLACED BY MS24693-C49)	20	P	
-	MS24693-C49	.SCREW (REPLACES MS24693C49)	20	SP	
82	212-070-409-001	.GRILLE ASSY, RAM AIR INTAKE, LH (S/N 30504	-		
82	212-070-457-001	THRU 30553) (REPLACED BY 212-070-457-001) GRILLE ASSY, RAM AIR INTAKE, LH	1	NP	
02	212-070-457-001	(REPLACES 212-070-409-001)	1	SP	
82	212-070-409-002	.GRILLE ASSY, RAM AIR INTAKE, RH (S/N 30504		DE	
-		THRU 30553) (REPLACED BY 212-070-457-002)	1	NP	
82	212-070-457-002	.GRILLE ASSY, RAM AIR INTAKE, RH			
		(REPLACES 212-070-409-002)	1	SP	
83	212-070-410-005	.PLENUM ASSY, LH (REPLACED BY			
		212-070-410-013)	1	NP	
83	212-070-410-013	.PLENUM ASSY (REPLACES 212-070-410-005)	1		
84	212-070-410-006	.PLENUM ASSY, RH (REPLACED BY	-	3.75	
84	212-070-410-014	212-070-410-014)	1 1	NP P	
	AN520-4R4	SCREW (REPLACED BY MS35207-213)	3	NP	
85	MS35207-213	SCREW (REPLACES AN520-4R4)	3	SP	
86	MS35333-70		3	SP	
87	212-070-412-001	FLAPPER ASSY	1	SP	
88	212-070-414-001	SEAL	1	SP	
89	AN960C516	washer (replaced by Nas1149c0563r)	2	P	

(1)	(2)	(3)	(4)	(5)	(6)
INDEX NUMBER	PART NUMBER	ITEM NAME	UNIT PER ASSY	A V A I L	U 0 C
		Figure 21-1. Air Distribution Instl, Heating and Ventilation and Blower Instl, Inverter Cooling (S/N 30504 thru 30596, 30604 thru 30610) (Cont'd)			
89 90	NAS1149C0563R 120-008C18-11	WASHER (REPLACES AN960C516)	2	SP SP	
91 91 92	212-070-413-001 212-070-413-002 NAS43DD5-23	SHAFT ASSY, LH SHAFT ASSY, RH SPACER	1 1 1	SP SP	
93 93	NAS679A08 MS21042L08	NUT (REPLACED BY MS21042L08)	6 6	P SP	
94 94 95	AN960C8L NAS1149CN816R MS27039-0805	WASHER (REPLACED BY NAS1149CN816R)	6 6	P SP SP	
96 97	212-070-431-001 212-070-410-007	DOOR PLENUM ASSY, LH	1	SP NP	
97 98 99	212-070-410-008 212-070-415-001 212-070-415-003	PLENUM ASSY, RH GASKET	1 1 1	NP SP SP	
100	NAS521-24-9 DELETED	COUPLING	1	SP	
102 102 103	212-070-411-029 212-070-411-030 212-070-416-001	PLENUM ASSY, LH	1 1 1	SP SP SP	
104 105	MS21069L3 MS25082-5	NUTPLATE	1 2	SP SP	
106 106 107	AN961-516S AN961-516T AN520-10R7	.WASHER (REPLACED BY AN961-516T)	2 2 2	SP P P	
107 108 108	MS35207-262 AN960PD10L AN960JD10L	.SCREW (REPLACES AN520-10R7)	2 2	SP P	
108	NAS1149D0332J	(REPLACED BY NAS1149D0332J)	2 2	P SP	
109 110 110	MS21042L3 AN960D10L NAS1149D0316H	.NUT, SELF-LOCKING	2 2 2	SP P SP	
111 112	MS35207-260 120-055-1-20	SCREW BONDING STRIP	2 1	SP SP	
113 114	120-055-1-19 212-075-151-007 212-073-121-001	BONDING STRIP SUPPORT BLOWER INSTL, INVERTER COOLING	1 2	SP SP	
115	MS21042L3	(S/N 30615 THRU SUB)	1	NP SP	
116 116 117	AN960JD10L NAS1149D0332J MS27039-1-08	.WASHER, FLAT (REPLACED BY NAS1149D0332J)WASHER, FLAT (REPLACES AN960JD10L)	1 1 1	P SP SP	
118 119	212-073-115-001 MS21042L08	.CLAMP ASSY	1 3	SP SP	
120 120 121	AN960JD8L NAS1149DN816J 209-070-670-001	.WASHER (REPLACED BY NAS1149DN816J)	6 6 3	P SP SP	

(1)	(2)	(3)	(4)	(5)	(6)
INDEX NUMBER	PART NUMBER	ITEM NAME	UNIT PER ASSY	A V A I L	U O C
		Figure 21-1. Air Distribution Instl, Heating and Ventilation and Blower Instl, Inverter Cooling (S/N 30504 thru 30596, 30604 thru 30610) (Cont'd)			
122	206-070-475-003	.BLOWER ASSY (S/N 30504 THRU 30897) (REPLACED BY 206-070-475-005)	1	NP	
122	206-070-475-005	.BLOWER ASSY (REPLACES 206-070-475-003)	1	SP	
122 123 124 125 125 126 127 128 129 130	206-070-475-007 MS25082-5 MS35333-41 AN960D516L NAS1149D0516H 40D1042 MS35223-13 15D023A056 29D538-1 AN565D6H8	.BLOWER ASSY .NUT .WASHER .WASHER (REPLACED BY NAS1149D0516H) .WASHER (REPLACES AN960D516L) .FILTER .SCREW .BEARING, BALL .MAGNET .SETSCREW	1 1 1 1 1 2 2 2	NP SP SP SP SP SP	
		AVAIL CODE DEFINITION  P Procurable NP Non Procurable SP Normal Stock/Procurable See introduction on availability codes for additional information.			

THIS PAGE INTENTIONALLY LEFT BLANK

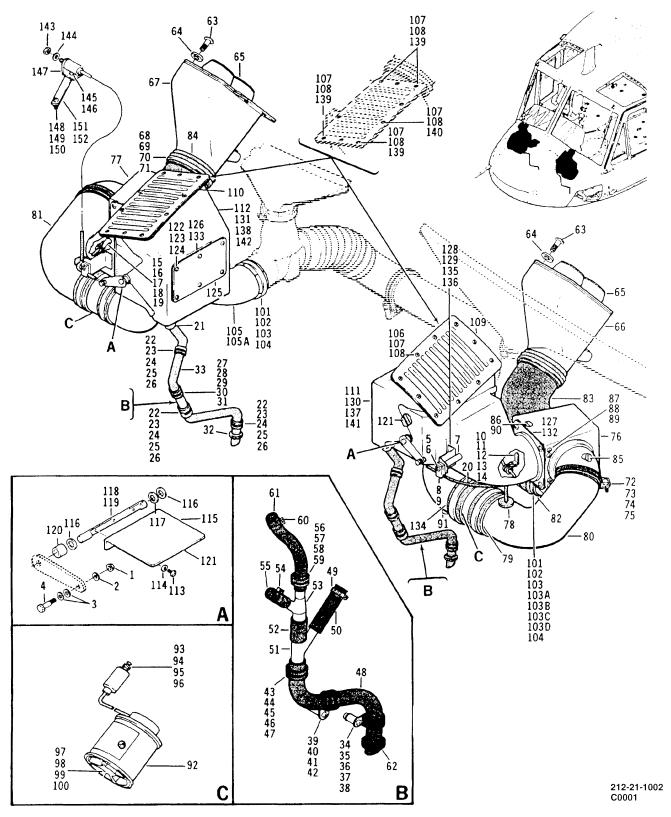


Figure 21-2. Air distribution installation, heating and ventilation (30597 thru 30603, 30611 thru sub)

(1)	(2)	(3)	(4)	(5)	(6)
INDEX NUMBER	PART NUMBER	ITEM NAME	UNIT PER ASSY	A V A I L	υ Ο C
		FIGURE: 21-2. Air distribution installation, heating and ventilation (S/N 30597 thru 30603, 30611 thru SUB)			
	212-070-400-007	AIR DISTRIBUTION INSTL, HEATING AND VENTILATION (S/N 30597 THRU 30603, 30611 THRU 30679) (SEE FIG. 3, 4, 5 FOR BALANCE OF BREAKDOWN)	1		
	212-070-400-013	AIR DISTRIBUTION INSTL, HEATING AND VENTILATION (S/N 30680 THRU 30755) (SEE FIG. 3, 4, 5 FOR BALANCE OF BREAKDOWN)	1		
	212-070-400-011	AIR DISTRIBUTION INSTL, HEATING AND VENTILATION (S/N 30756 THRU 30859) (SEE FIG. 3, 4, 5 FOR BALANCE OF BREAKDOWN)	1		
	212-070-400-015	AIR DISTRIBUTION INSTL, HEATING AND VENTILATION (S/N 30860 THRU 30969) (SEE FIG. 3, 4, 5 FOR BALANCE OF BREAKDOWN)	1		
	212-070-400-101	AIR DISTRIBUTION INSTL, HEATING AND VENTILATION (S/N 30970 THRU 31311, 35001 THRU 35061) (SEE FIG. 3, 4, 5 FOR BALANCE OF BREAKDOWN)	1		
	212-070-400-111	AIR DISTRIBUTION INSTL, HEATING AND VENTILATION (S/N 35062 THRU SUB) (SEE FIG. 3, 4, 5 FOR BALANCE OF BREAKDOWN)	1		
1 1	MS21042L06	.NUT	2	1	
2	AN960PD6	.WASHER (REPLACED BY AN960JD6)	2		
2	AN960JD6	.WASHER (REPLACES AN960PD6) (REPLACED BY NAS1149DN632J)	2	1	
2	NAS1149DN632J	.WASHER (REPLACES AN960JD6)	2	1	
3	AN960C10L	.WASHER (REPLACED BY NAS1149C0332R)	4	_	
3	NAS1149C0332R	.WASHER (REPLACES AN960C10L)	4	1	
4 5	NAS1297-06-3	BOLT	2 2	1	
5	AN520-10R36 MS35207-272	SCREW (REPLACED BY MS35207-272)	2	1	
6	MS35207-272 AN960PD10L	. SCREW (REPLACES AN320-10R36)	2		
6	AN960JD10L	.WASHER (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	2		
6	NAS1149D0332J	.WASHER (REPLACES AN960JD10L)	2		
7	NAS43DD3-90	SPACER	2		
8	30-053-3	.CLAMP	2	1	
9	30-053-4	.CLAMP	2	1	
10	MS21042L3	.NUT	1	1	
11	AN960PD10L	.WASHER (REPLACED BY NAS1149D0332J) (REPLACED BY AN960JD10L)	1		
11	AN960JD10L	.WASHER (REPLACED BY NAS1149D0332J) (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	1		
11	NAS1149D0332J	.WASHER (REPLACED BY NAS1149D0332J) (REPLACES AN960JD10L)	1		
11	NAS1149D0332J	.WASHER (REPLACES AN960PD10L AND AN960JD10L)	1		
12	AN520-10R8	SCREW (REPLACED BY MS35207-263)	1		
12	MS35207-263	SCREW (REPLACES AN520-10R8)	1	1	
13 13	MS21919DG2	.CLAMP (REPLACED BY MS21919WDG2)	1	1	
13 14	MS21919WDG2 AN743-12	.CLAMP (REPLACES MS21919DG2)	1	1	
14	WM / #7_T7	DRACKEL		_	

(1)	(2)	(3)	(4)	(5)	(6)
INDEX NUMBER	PART NUMBER	ITEM NAME	UNIT PER ASSY	A V A I L	0 0
		FIGURE: 21-2. Air distribution installation, heating and ventilation (S/N 30597 thru 30603, 30611 thru SUB) (Cont'd)			
15	MS21042L3	NUT	1	1	
16	AN960PD10L	.WASHER (REPLACED BY NAS1149D0332J) (REPLACED BY AN960JD10L)	_	_	
16	AN960JD10L	.WASHER (REPLACED BY NAS1149D0332J) (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	1		
16	NAS1149D0332J	.WASHER (REPLACED BY NAS1149D0332J) (REPLACES AN960JD10L)	1		
16	NAS1149D0332J	.WASHER (REPLACES AN960PD10L AND AN960JD10L)	1		
17	AN520-10R6	.SCREW (REPLACED BY MS35207-261)	1		
17	MS35207-261	.SCREW (REPLACES AN520-10R6)	1	1	
18	MS21919DG2	.CLAMP (REPLACED BY MS21919WDG2)	1		
18	MS21919WDG2	.CLAMP (REPLACES MS21919DG2)	1	1	Ì
19 20	20-032-1 212-070-433-003	BRACKET	1 2	1	
21	AN737TW30	.CONTROL ASSY	2	1	
22	NAS679A3	.CLAMP (S/N 3059/ THRO 30603, 30611 THRO 30859)	6	1	
22	MS21042L3	.NUT (S/N 30597 THRU 30603, 30611 THRU 30859)	6	1	
23	AN960PD10L	.WASHER (S/N 30597 THRU 30603, 30611 THRU 30859) (REPLACED BY NAS1149D0332J) (REPLACED BY AN960JD10L)	6		
23	AN960JD10L	.WASHER (S/N 30597 THRU 30603, 30611 THRU 30859) (REPLACED BY NAS1149D0332J) (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	6		
23	NAS1149D0332J	.WASHER (S/N 30597 THRU 30603, 30611 THRU 30859) (REPLACED BY NAS1149D0332J) (REPLACES AN960JD10L)	6		
23	NAS1149D0332J	.WASHER (REPLACES AN960PD10L AND AN960JD10L)	6		
24	AN520-10R18	.SCREW (S/N 30597 THRU 30603, 30611 THRU 30859)	6	1	
25	NAS43DD3-40	.SPACER (S/N 30597 THRU 30603, 30611 THRU 30859) (REPLACED BY NAS43DD3-40N)	6		
25	NAS43DD3-40N	.SPACER (S/N 30597 THRU 30603, 30611 THRU 30859) (REPLACES NAS43DD3-40)	6	1	
26	MS21919DG12	.CLAMP (S/N 30597 THRU 30603, 30611 THRU 30859) (REPLACED BY MS21919WDG12)	6		
26	MS21919WDG12	.CLAMP (S/N 30597 THRU 30603, 30611 THRU 30859) (REPLACES MS21919DG12)	6	1	
27	NAS1329A3-80	RIVNUT, BLIND (S/N 30597 THRU 30603, 30611 THRU 30859)	2	1	
28	AN960PD10L	.WASHER (S/N 30597 THRU 30603, 30611 THRU 30859) (REPLACED BY NAS1149D0332J) (REPLACED BY AN960JD10L)	2		
28	AN960JD10L	.WASHER (S/N 30597 THRU 30603, 30611 THRU 30859) (REPLACED BY NAS1149D0332J) (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	2		

(1)	(2)	(3)	(4)	(5)	(6)
INDEX NUMBER	PART NUMBER	ITEM NAME	UNIT PER ASSY	A V A I L	000
		FIGURE: 21-2. Air distribution installation, heating and ventilation (S/N 30597 thru 30603, 30611 thru SUB) (Cont'd)			
28	NAS1149D0332J	.WASHER (S/N 30597 THRU 30603, 30611 THRU 30859) (REPLACED BY NAS1149D0332J) (REPLACES AN960JD10L)	2		
28	NAS1149D0332J	.WASHER (REPLACES AN960PD10L AND AN960JD10L)	2		
29	NAS43DD3-37	.SPACER (S/N 30597 THRU 30603, 30611 THRU 30859)	2		
30	AN520-10R18	.SCREW (S/N 30597 THRU 30603, 30611 THRU 30859)	2	1	
31	MS21919DG12	.CLAMP (S/N 30597 THRU 30603, 30611 THRU 30859) (REPLACED BY MS21919WDG12)	2		
31	MS21919WDG12	.CLAMP (S/N 30597 THRU 30603, 30611 THRU 30859) (REPLACES MS21919DG12)	2	1	
32	MS35489-135	.GROMMET (S/N 30597 THRU 30603, 30611 THRU 30859)	2	1	
33	212-070-402-001	.HOSE (S/N 30597 THRU 30603, 30611 THRU 30859)	2	1	
34	NAS679A3	.NUT (S/N 30860 THRU SUB) (REPLACED BY MS21042L3)	2	_	
34	MS21042L3	.NUT (S/N 30860 THRU SUB) (REPLACES NAS679A3)	2 2	1	
35	AN960PD10L	.WASHER (S/N 30860 THRU SUB) (REPLACED BY	2		
35	AN960JD10L	NAS1149D0332J) (REPLACED BY AN960JD10L) .WASHER (S/N 30860 THRU SUB) (REPLACED BY NAS1149D0332J) (REPLACES AN960PD10L) (REPLACED	2		
35	NAS1149D0332J	BY NAS1149D0332J) .WASHER (S/N 30860 THRU SUB) (REPLACED BY	2		
35	NAS1149D0332J	.WASHER (REPLACES AN960PD10L AND AN960JD10L)	2		
36	NAS43DD3-40	.SPACER (S/N 30860 THRU SUB) (REPLACED BY NAS43DD3-40N)	2		
36	NAS43DD3-40N	.SPACER (S/N 30860 THRU SUB) (REPLACES	2	1	
37	MS35207-268	.SCREW (S/N 30860 THRU SUB)	2	1	
38	MS21919WDG16	.CLAMP (S/N 30860 THRU SUB)	2	1	
39	MS35207-267	.SCREW (S/N 30860 THRU SUB)	2	1	
40	AN960PD10L	.WASHER (S/N 30860 THRU SUB) (REPLACED BY	2		
40	AN960JD10L	NAS1149D0332J) (REPLACED BY AN960JD10L)  .WASHER (S/N 30860 THRU SUB) (REPLACED BY	2		
40	NAS1149D0332J	BY NAS1149D0332J) .WASHER (S/N 30860 THRU SUB) (REPLACED BY NAS1149D0332J) (REPLACES AN960JD10L)	2		
40	NAS1149D0332J	.WASHER (REPLACES AN960PD10L AND AN960JD10L)	2		
41	NAS43DD3-32	SPACER (S/N 30860 THRU SUB) (REPLACED BY NAS43DD3-32N)	2		
41	NAS43DD3-32N	.SPACER (S/N 30860 THRU SUB) (REPLACES	2	1	
42	MS21919WDG16	.CLAMP (S/N 30860 THRU SUB)	2	1	
43	NAS679A3	.NUT (S/N 30860 THRU SUB) (REPLACED BY MS21042L3)	4	_	
43	MS21042L3	.NUT (S/N 30860 THRU SUB) (REPLACES NAS679A3)	4	1	
44	AN960PD10L	.WASHER (S/N 30860 THRU SUB) (REPLACED BY NAS1149D0332J) (REPLACED BY AN960JD10L)	4		

(1)	(2)	(3)	(4)	(5)	(6)
INDEX NUMBER	PART NUMBER	ITEM NAME	UNIT PER ASSY	A V A I L	noc
		FIGURE: 21-2. Air distribution installation, heating and ventilation (S/N 30597 thru 30603, 30611 thru SUB) (Cont'd)			
44	AN960JD10L	.WASHER (S/N 30860 THRU SUB) (REPLACED BY NAS1149D0332J) (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	4		
44	NAS1149D0332J	.WASHER (S/N 30860 THRU SUB) (REPLACED BY NAS1149D0332J) (REPLACES AN960JD10L)	4		
44	NAS1149D0332J	.WASHER (REPLACES AN960PD10L AND AN960JD10L)	4		i
45	20-032-1	.BRACKET (S/N 30860 THRU SUB)	2	1	
46	MS35207-263	.SCREW (S/N 30860 THRU SUB)	4	1	
47	MS21919WDG16	.CLAMP (S/N 30860 THRU SUB)	2	1	
48	110-107-32GS210	.TUBE (S/N 30860 THRU SUB) (MAKE FROM 110-107-32G) .	1		
48	110-107-32G	.TUBE (S/N 30860 THRU SUB)	1		
49	MS3367-5-9	.STRAP (S/N 30860 THRU SUB)	2	1	
50	110-107-25G-130	.TUBE (S/N 30860 THRU SUB) (MAKE FROM 110-107-25G) .	2		
50	110-107-25G	.TUBE (S/N 30860 THRU SUB)	2	1	
51 52	214-073-139-001	ADAPTER (S/N 30860 THRU SUB)	2	1	
52 52	110-107-32G-030 110-107-32G	.TUBE (S/N 30860 THRU SUB) (MAKE FROM 110-107-32G) .	•		
5⊿ 53	214-073-138-001	.TUBE (S/N 30860 THRU SUB)	2 2	4	
54	MS3367-5-9	STRAP (S/N 30860 THRU SUB)	2	1	
55	110-107-25G-045	.TUBE (S/N 30860 THRU SUB) (MAKE FROM 110-107-25G)	2	1	
55	110-107-25G	.TUBE (S/N 30860 THRU SUB)	_	1	
56	NAS679A3	.NUT (S/N 30860 THRU SUB) (REPLACED BY MS21042L3)	2	_	İ
56	MS21042L3	.NUT (S/N 30860 THRU SUB) (REPLACES NAS679A3)	2	1	
57	AN960PD10L	.WASHER (S/N 30860 THRU SUB) (REPLACED BY	2		
57	AN960JD10L	NAS1149D0332J) (REPLACED BY AN960JD10L)  .WASHER (S/N 30860 THRU SUB) (REPLACED BY NAS1149D0332J) (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	2		
57	NAS1149D0332J	.WASHER (S/N 30860 THRU SUB) (REPLACED BY NAS1149D0332J) (REPLACES AN960JD10L)	2		
57	NAS1149D0332J	.WASHER (REPLACES AN960PD10L AND AN960JD10L)	2		
58	MS35207-259	.SCREW (S/N 30860 THRU SUB)	2	1	
59	MS21919WDG12	.CLAMP (S/N 30860 THRU SUB)		1	
60	MS3367-5-9	.STRAP (S/N 30860 THRU SUB)	2	1	
61	110-107-25G-085	.TUBE (S/N 30860 THRU SUB) (MAKE FROM 110-107-25G) .	2		
61	110-107-25G	TUBE (S/N 30860 THRU SUB)	2	1	
62	MS35489-23	GROMMET (S/N 30860 THRU SUB)	2	1	
63 64	MS35215-56 AN960PD10L	SCREW	16	1	
64	AN960PD10L	.WASHER (REPLACES AN960DD10L) (REPLACED BY	16 16		
04	WAS A COUNT OF	NAS1149D0332J)	10		
64	NAS1149D0332J	.WASHER (REPLACES AN960JD10L)	16		
65	204-070-483-003	.VALVE ASSY, AIR	4	1	
66	212-070-454-007	.PLENUM ASSY	1	1	
67	212-070-454-008	.PLENUM ASSY	1	1	
68	MS21042L3	.NUT	2	1	
69	AN960PD10L	.WASHER (REPLACED BY NAS1149D0332J) (REPLACED BY AN960JD10L)	2		
I			l		

21-99-00 Page 12

Rev. 5

(1)	(2)	(3)	(4)	(5)	(6)
INDEX NUMBER	PART NUMBER	ITEM NAME	UNIT PER ASSY	A V A L	0 U
		FIGURE: 21-2. Air distribution installation, heating and ventilation (S/N 30597 thru 30603, 30611 thru SUB) (Cont'd)			
69	AN960JD10L	.WASHER (REPLACED BY NAS1149D0332J) (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	2		
69	NAS1149D0332J	.WASHER (REPLACED BY NAS1149D0332J) (REPLACES AN960JD10L)	2		
69 70	NAS1149D0332J AN520-10R12	.WASHER (REPLACES AN960PD10L AND AN960JD10L)	2 2		
70	MS35207-265	SCREW (REPLACES AN520-10R12)	2	1	
71	30-016A14	.CLAMP	2 2	1 1	
72	MS27039-1-32	SCREW	2	1	
73	AN960PD10L	.WASHER (REPLACED BY NAS1149D0332J) (REPLACED BY AN960JD10L)	4		
73	AN960JD10L	.WASHER (REPLACED BY NAS1149D0332J) (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	2		
73	NAS1149D0332J	.WASHER (REPLACED BY NAS1149D0332J) (REPLACES AN960JD10L)	2		
73	NAS1149D0332J	.WASHER (REPLACES AN960PD10L AND AN960JD10L)	2		İ
74	NAS43DD3-96	.SPACER (REPLACED BY NAS43DD3-96N)	2		
74	NAS43DD3-96N	.SPACER (REPLACES NAS43DD3-96)	2	1	
75	MS21919DG50	.CLAMP	2	1	
76	212-070-417-005	.VALVE ASSY, LH (S/N 30597 THRU 30603, 30611 THRU 30859)	1	1	
76	212-070-417-017	.VALVE ASSY, LH (S/N 30860 THRU SUB)	1	1	
77	212-070-417-011	.valve assy, rh (s/n 30597 thru 30603, 30611 thru 30859)	1	1	
77	212-070-417-019	.VALVE ASSY, RH (S/N 30860 THRU SUB)	1	1	
78	MS35489-3	GROMMET	1	1 1	
79	NAS521-24-8	COUPLING (S/N 30597 THRU 30603, 30611 THRU 30859)	_	_	
79	NAS521-24-10	COUPLING (S/N 30860 THRU SUB)	2 1	1	
80	212-070-418-001	DUCT ASSY, LH (USBL ON 212-070-417-005 AND -017) . (REPLACED BY 212-070-418-045)		0	
80	212-070-418-045	DUCT ASSY, LH (USBL ON 212-070-417-005 AND -017) . (REPLACES 212-070-418-001)	1	1	
81	212-070-418-011	DUCT ASSY, RH (USBL ON 212-070-417-011 AND -019) . (REPLACED BY 212-070-418-055)	1	0	
81	212-070-418-055	DUCT ASSY (USBL ON 212-070-417-011 AND -019) (REPLACES 212-070-418-011)	1	1	
82	NAS521-20-8	COUPLING (USBL ON 212-070-417-5 AND -11)	1	1	
83	NAS1374A14CA014	HOSE, LH (USBL ON 212-070-417-005 AND -017) (REPLACED BY NAS1375A14CA014)	1		
83	NAS1375A14CA014	HOSE, LH (USBL ON 212-070-417-005 AND -017) (REPLACES NAS1374A14CA014)	1	1	
84	NAS1374A14CA019	HOSE, RH (USBL ON 212-070-417-011 AND -019) (REPLACED BY NAS1375A14CA019)	1	0	
84	NAS1375A14CA019	HOSE, RH (USBL ON 212-070-417-011 AND -019) (REPLACES NAS1374A14CA019)	1		
85	212-070-414-005	SEAL	1	1	
86	212-070-414-003	SEAL	1	1	

NDEX NUMBER   FIGURE: 21-2. Air distribution installation, heating and ventilation (S/N 30597 thru 30603, 30611 thru SUB) (Cont'd)		900
FIGURE: 21-2. Air distribution installation, heating and ventilation (S/N 30597 thru 30603, 30611 thru SUB) (Cont'd)  87  MS20341-2C	1 1 1	
NS20341-2C	1 1 1 1	
88       MS35340-39      WASHER       4         89       MS35190-211      SCREW       4         90       212-070-419-001      FLAPPER ASSY       1         91       212-070-411-015      DRAIN, LH (S/N 30860 THRU SUB)       1         92       206-070-475-003       .BLOWER ASSY (S/N 30597 THRU 30603, 30611 THRU       2         30679) (REPLACED BY 206-070-475-005)       .BLOWER ASSY (REPLACES 206-070-475-003)       2         92       206-070-475-007       .BLOWER ASSY	1 1 1 1	
88       MS35340-39      WASHER       4         89       MS35190-211      SCREW       4         90       212-070-419-001      FLAPPER ASSY       1         91       212-070-411-015      DRAIN, LH (S/N 30860 THRU SUB)       1         92       206-070-475-003       .BLOWER ASSY (S/N 30597 THRU 30603, 30611 THRU       2         30679) (REPLACED BY 206-070-475-005)       .BLOWER ASSY (REPLACES 206-070-475-003)       2         92       206-070-475-007       .BLOWER ASSY	1 1 1 1	
89       MS35190-211      SCREW       4         90       212-070-419-001      FLAPPER ASSY       1         91       212-070-411-015      DRAIN, LH (S/N 30860 THRU SUB)       1         91       212-070-411-016      DRAIN, RH (S/N 30860 THRU SUB)       1         92       206-070-475-003      BLOWER ASSY (S/N 30597 THRU 30603, 30611 THRU       2         30679) (REPLACED BY 206-070-475-005)      BLOWER ASSY (REPLACES 206-070-475-003)       2         (ALTERNATE PART)       2         92       206-070-475-007      BLOWER ASSY       2         93       MS25082-5      NUT       1         94       MS35333-41      WASHER       1         95       AN960D516L      WASHER (REPLACED BY NAS1149D0516H)       1         95       NAS1149D0516H      WASHER (REPLACES AN960D516L)       1         96       40D1042      FILTER       1         97       MS35223-13      SCREW       2         98       15D023A056      BEARING, BALL       2         99       29D538-1      MAGNET       2         100       AN565D6H8      SETSCREW       2	1	
91       212-070-411-015      DRAIN, LH (S/N 30860 THRU SUB)       1         91       212-070-411-016      DRAIN, RH (S/N 30860 THRU SUB)       1         92       206-070-475-003       .BLOWER ASSY (S/N 30597 THRU 30603, 30611 THRU       2         30679) (REPLACED BY 206-070-475-005)       .BLOWER ASSY (REPLACES 206-070-475-003)       2         92       206-070-475-007       .BLOWER ASSY       2         93       MS25082-5       .NUT       1         94       MS35333-41       .WASHER       1         95       AN960D516L      WASHER (REPLACED BY NAS1149D0516H)       1         95       NAS1149D0516H      WASHER (REPLACES AN960D516L)       1         96       40D1042      FILTER       1         97       MS35223-13       .SCREW       2         98       15D023A056       .BEARING, BALL       2         99       29D538-1       .MAGNET       2         100       AN565D6H8       .SETSCREW       2	1	
91	1	
92       206-070-475-003       .BLOWER ASSY (S/N 30597 THRU 30603, 30611 THRU 30679) (REPLACED BY 206-070-475-005)       2         92       206-070-475-005       .BLOWER ASSY (REPLACES 206-070-475-003)       2         (ALTERNATE PART)         92       206-070-475-007       .BLOWER ASSY       2         93       MS25082-5       .NUT       1         94       MS35333-41       .WASHER       1         95       AN960D516L       .WASHER (REPLACED BY NAS1149D0516H)       1         95       NAS1149D0516H       .WASHER (REPLACES AN960D516L)       1         96       40D1042       .FILTER       1         97       MS35223-13       .SCREW       2         98       15D023A056       .BEARING, BALL       2         99       29D538-1       .MAGNET       2         100       AN565D6H8       .SETSCREW       2	1	
30679) (REPLACED BY 206-070-475-005)  BLOWER ASSY (REPLACES 206-070-475-003)  (ALTERNATE PART)  2 206-070-475-007  BLOWER ASSY  MS25082-5  NUT  MS35333-41  MS35333-41  MASHER  NASHER  NASHER  NASHER (REPLACED BY NAS1149D0516H)  NAS1149D0516H  WASHER (REPLACES AN960D516L)  MS35223-13  SCREW  MS35223-13  SCREW  1 5D023A056  BEARING, BALL  MAGNET  AN565D6H8  SETSCREW  2 2	1	
Calternate Part		1
93       MS25082-5       .NUT       1         94       MS35333-41       .WASHER       1         95       AN960D516L       .WASHER (REPLACED BY NAS1149D0516H)       1         95       NAS1149D0516H       .WASHER (REPLACES AN960D516L)       1         96       40D1042       .FILTER       1         97       MS35223-13       .SCREW       2         98       15D023A056       .BEARING, BALL       2         99       29D538-1       .MAGNET       2         100       AN565D6H8       .SETSCREW       2	0	
93       MS25082-5       .NUT       1         94       MS35333-41       .WASHER       1         95       AN960D516L       .WASHER (REPLACED BY NAS1149D0516H)       1         95       NAS1149D0516H       .WASHER (REPLACES AN960D516L)       1         96       40D1042       .FILTER       1         97       MS35223-13       .SCREW       2         98       15D023A056       .BEARING, BALL       2         99       29D538-1       .MAGNET       2         100       AN565D6H8       .SETSCREW       2		
95       AN960D516L       .WASHER (REPLACED BY NAS1149D0516H)       1         95       NAS1149D0516H       .WASHER (REPLACES AN960D516L)       1         96       40D1042       .FILTER       1         97       MS35223-13       .SCREW       2         98       15D023A056       .BEARING, BALL       2         99       29D538-1       .MAGNET       2         100       AN565D6H8       .SETSCREW       2	1	
95       NAS1149D0516H       .WASHER (REPLACES AN960D516L)       1         96       40D1042       .FILTER       1         97       MS35223-13       .SCREW       2         98       15D023A056       .BEARING, BALL       2         99       29D538-1       .MAGNET       2         100       AN565D6H8       .SETSCREW       2	. 1	
96       40D1042       .FILTER       1         97       MS35223-13       .SCREW       2         98       15D023A056       .BEARING, BALL       2         99       29D538-1       .MAGNET       2         100       AN565D6H8       .SETSCREW       2	1	
97       MS35223-13       .SCREW       .         98       15D023A056       .BEARING, BALL       .         99       29D538-1       .MAGNET       .         100       AN565D6H8       .SETSCREW       .		
98       15D023A056       .BEARING, BALL       2         99       29D538-1       .MAGNET       2         100       AN565D6H8       .SETSCREW       2	1 -	
99	1	
100 AN565D6H8setscrew 2	I .	
i l		
101   MS21042L3 $  .NUT$	1	
102 AN960PD10L .WASHER (REPLACED BY NAS1149D0332J) (REPLACED BY 4	1 -	
AN960JD10L)		
102 AN960JD10L .WASHER (REPLACED BY NAS1149D0332J) (REPLACES 4 AN960PD10L) (REPLACED BY NAS1149D0332J)		
102 NAS1149D0332J .WASHER (REPLACED BY NAS1149D0332J) (REPLACES 4 AN960JD10L)		
102 NAS1149D0332J .WASHER (REPLACES AN960PD10L AND AN960JD10L) 4		
103 AN520-10R12 .SCREW (USBL ON 212-070-400-007, -011, -013, 2 -015, -101) (REPLACED BY MS35207-265)		
103 MS35207-265 .SCREW (USBL ON 212-070-400-007, -011, -013, 2 -015, -101) (REPLACES AN520-10R12)	1	
103A NAS43DD3-16 .SPACER (USBL ON 212-070-400-111) 1		
103B NAS43DD3-32 .SPACER (USBL ON 212-070-400-111) (REPLACED BY 1 NAS43DD3-32N)		
103B NAS43DD3-32N .SPACER (USBL ON 212-070-400-111) (REPLACES 1 NAS43DD3-32)	1	
103C AN520-10R9 .SCREW (USBL ON 212-070-400-111) 1	1	
103D AN520-10R13 .SCREW (USBL ON 212-070-400-111) 1		
104 AN735D40 .CLAMP 4	1	
105   212-070-428-001   .DUCT, LH	1	
105A 212-070-428-002 .DUCT, RH	_	
106 MS21042L08 .NUT	1	
107 AN960C8L .WASHER (REPLACED BY NAS1149CN816R)	1	
107 NAS1149CN816R .WASHER (REPLACES AN960C8L)		
108 MS24693C49 .SCREW (REPLACED BY MS24693-C49)		
108 MS24693-C49 .SCREW (REPLACES MS24693C49)		
109   212-070-457-001   .GRILLE ASSY, LH	1 1	

21-99-00

Page 14 Rev. 5

(1)	(2)	(3)	(4)	(5) A	(6)
INDEX NUMBER	PART NUMBER	ITEM NAME	UNIT PER ASSY	A V A I L	υου
		FIGURE: 21-2. Air distribution installation, heating and ventilation (S/N 30597 thru 30603, 30611 thru SUB) (Cont'd)			
110	212-070-457-002	.GRILLE ASSY, RH	1	1	
111	212-070-410-005	PLENUM ASSY. LH (S/N 30597 THRU 30603, 30611 THRU 30859) (REPLACED BY 212-070-410-013)	1		
111	212-070-410-013	PLENUM ASSY, LH (S/N 30597 THRU 30603, 30611 THRU 30859) (REPLACES 212-040-410-005)	1		
111	212-070-410-019	.PLENUM ASSY, LH (S/N 30860 THRU 30969) (REPLACED BY 212-073-129-003)	1	0	
111	212-073-129-003	.PLENUM ASSY, LH (S/N 30860 THRU SUB) (REPLACES 212-070-410-019)	1	1	
112	212-070-410-006	.PLENUM ASSY, RH (S/N 30597 THRU 30603, 30611 THRU 30859) (REPLACED BY 212-070-410-014)	1		
112	212-070-410-014	.PLENUM ASSY, RH (S/N 30597 THRU 30603, 30611 THRU 30859) (REPLACES 212-070-410-006)	1		
112	212-070-410-020	PLENUM ASSY, RH (S/N 30860 THRU 30969) (REPLACED BY 212-073-129-004)	1	0	
112	212-073-129-004	PLENUM ASSY, RH (S/N 30860 THRU SUB) (REPLACES 212-070-410-020)	1	1	
113	AN520-4R4	SCREW (REPLACED BY MS35207-213)	3	0	
113	MS35207-213	SCREW (REPLACES AN520-4R4)	3		
114	MS35333-70	WASHER	3	1	
115	212-070-412-001	FLAPPER ASSY, RAM AIR CONTROL	1	1	
116	AN960C516	WASHER (REPLACED BY NAS1149C0563R)	2		
116	NAS1149C0563R	WASHER (REPLACES AN960C516)	2		
117	120-008C18-11	SHIM	1	1	
118	212-070-413-001	SHAFT ASSY, LH	1	1	
119	212-070-413-002	SHAFT ASSY, RH	1	1	
120	NAS43DD5-23	spacer	1	1	
121	212-070-414-001	SEAL	1	6	
122	MS21042L08	NUT	6	1	
123	AN960C8L	WASHER (REPLACED BY NAS1149CN816R)	6	1	
123	NAS1149CN816R	washer (replaces an960c8L)	6		
124	MS27039-0805	screw	6	1	
125	212-070-431-001	DOOR	1	1	
126	212-070-415-003	GASKET (USBL ON 212-073-129-003 AND -004)	1	1	
127	212-070-415-001	GASKET (USBL ON 212-073-129-003 AND -004)	1	1	
128	212-070-416-001	BRACKET (USBL ON 212-073-129-003 AND -004)	1	1	
129	MS21069L3	NUTPLATE (USBL ON 212-073-129-003 AND -004)	1	1	
130	212-070-410-007	PLENUM ASSY, LH (USBL ON 212-070-410-005, -013, AND -019)	1	0	
131	212-070-410-008	PLENUM ASSY, RH (USBL ON 212-070-410-006, -014 AND -020)	1	0	
132	212-070-415-001	GASKET	1	1	
133	212-070-415-003	GASKET	1	1	
134	NAS521-24-9	COUPLING	1	1	
135	212-070-416-001	BRACKET	1	1	
136	MS21069L3	NUTPLATE	1	1	
137	212-070-411-029	PLENUM ASSY, LH	1	6	
138	212-070-411-030	PLENUM ASSY, RH	1	6	
		,	-	-	

PART NUMBER   FIGURE: 21-2. Air distribution installation, heating and verification (S/N 30597 thru 30603, 30611 thru SUB) (Cont'd)	(1)	(2)	(3)	(4)	(5)	(6)
NS21071L08	INDEX NUMBER	PART NUMBER	ITEM NAME	UNIT PER ASSY	A V A L	noc
140   MS21069L08  NUTPLATE (USBL ON			ventilation (S/N 30597 thru 30603, 30611 thru			
140   MS21069L08   .NUTPLATE (USBL ON   212-070-410-013,-014,-019,-020 AND   212-070-411-047   .PLENUM ASSY, LH (USBL ON 212-073-129-003)   . 1	139	MS21071L08	212-070-410-013,-014,-019,-020 AND	4	1	
141   212-070-411-047	140	MS21069L08	NUTPLATE (USBL ON	6	1	
142   212-070-411-048	141		PLENUM ASSY, LH (USBL ON 212-073-129-003)	1	1	
(REPLACED BY 212-070-411-102)       142       212-070-411-102      PLENUM ASSY, RH (REPLACES 212-070-411-048)	141	i e	PLENUM ASSY, LH (REPLACES 212-070-411-047)	1		
143       MS25082-5       .NUT       1         144       AN961-516S       .WASHER (REPLACED BY AN961-516T)       1         144       AN961-516T       .WASHER (REPLACES AN961-516S)       1         145       AN520-10R7       .SCREW (REPLACED BY MS35207-262)       1         146       AN960PD10L       .WASHER (REPLACED BY NAS1149D0332J) (REPLACED BY       1         146       AN960JD10L       .WASHER (REPLACED BY NAS1149D0332J) (REPLACES       1         146       NAS1149D0332J       .WASHER (REPLACED BY NAS1149D0332J) (REPLACES       1         146       NAS1149D0332J       .WASHER (REPLACED BY NAS1149D0332J) (REPLACES       1         147       212-075-151-007       .SUPFORT       2         148       MS21042L3       .NUT       2         149       AN960D10L       .WASHER (REPLACED BY NAS1149D0316H)       6         149       NAS1149D0316H       .WASHER (REPLACED BY NAS1149D0316H)       6         149       NAS1207-260       .SCREW       2         150       MS35207-260       .SCREW       2         151       120-055-1-17       .BONDING STRIP (S/N 30940 THRU SUB)       2         152       120-055-1-19       .BONDING STRIP (S/N 30597 THRU 30603, 30611 THRU       1 <td></td> <td></td> <td>(REPLACED BY 212-070-411-102)</td> <td>_</td> <td>1</td> <td></td>			(REPLACED BY 212-070-411-102)	_	1	
144       AN961-516S       .WASHER (REPLACED BY AN961-516T)       1         144       AN961-516T       .WASHER (REPLACES AN961-516S)       1         145       AN520-10R7       .SCREW (REPLACED BY MS35207-262)       1         145       MS35207-262       .SCREW (REPLACED BY NAS1149D0332J) (REPLACED BY       1         146       AN960PD10L       .WASHER (REPLACED BY NAS1149D0332J) (REPLACES       1         146       AN960JD10L       .WASHER (REPLACED BY NAS1149D0332J) (REPLACES       1         146       NAS1149D0332J       .WASHER (REPLACED BY NAS1149D0332J) (REPLACES       1         147       212-075-151-007       .SUPPORT       2         148       MS21042L3       .NUT       2         149       AN960D10L       .WASHER (REPLACED BY NAS1149D0316H)       6         149       NAS1149D0316H       .WASHER (REPLACED BY NAS1149D0316H)       6         150       MS35207-260       .SCREW       2         151       120-055-1-17       .BONDING STRIP (S/N 30940 THRU SUB)       2         152       120-055-1-19       .BONDING STRIP (S/N 30597 THRU 30603, 30611 THRU       1				_		
144       AN961-516T       .WASHER (REPLACES AN961-516S)					1	
145       AN520-10R7       .SCREW (REPLACED BY MS35207-262)        1         145       MS35207-262       .SCREW (REPLACES AN520-10R7)        1         146       AN960PD10L       .WASHER (REPLACED BY NAS1149D0332J) (REPLACED BY       1         AN960JD10L)       .WASHER (REPLACED BY NAS1149D0332J) (REPLACES       1         AN960PD10L)       .WASHER (REPLACED BY NAS1149D0332J) (REPLACES       1         AN960JD10L)       .WASHER (REPLACED BY NAS1149D0332J) (REPLACES       1         AN960JD10L)       .WASHER (REPLACES AN960PD10L AND AN960JD10L)       1         147       212-075-151-007       .SUPPORT          148       MS21042L3       .NUT          149       AN960D10L       .WASHER (REPLACED BY NAS1149D0316H)          149       NAS1149D0316H       .WASHER (REPLACES AN960D10L)          150       MS35207-260       .SCREW          151       120-055-1-17       .BONDING STRIP (S/N 30940 THRU SUB)          152       120-055-1-19       .BONDING STRIP (S/N 30597 THRU 30603, 30611 THRU			· · · · · · · · · · · · · · · · · · ·		1	
145       MS35207-262       .SCREW (REPLACES AN520-10R7)        1         146       AN960PD10L       .WASHER (REPLACED BY NAS1149D0332J) (REPLACED BY        1         146       AN960JD10L       .WASHER (REPLACED BY NAS1149D0332J) (REPLACES        1         146       NAS1149D0332J       .WASHER (REPLACED BY NAS1149D0332J) (REPLACES        1         146       NAS1149D0332J       .WASHER (REPLACES AN960PD10L AND AN960JD10L)        1         147       212-075-151-007       .SUPPORT        2         148       MS21042L3       .NUT        2         149       AN960D10L       .WASHER (REPLACED BY NAS1149D0316H)        6         149       NAS1149D0316H       .WASHER (REPLACES AN960D10L)        6         150       MS35207-260       .SCREW        2         151       120-055-1-17       .BONDING STRIP (S/N 30940 THRU SUB)        2         152       120-055-1-19       .BONDING STRIP (S/N 30597 THRU 30603, 30611 THRU       1			· · · · · · · · · · · · · · · · · · ·	1		
146       AN960PD10L      WASHER (REPLACED BY NAS1149D0332J) (REPLACED BY 1 AN960JD10L)				1	1	
AN960PD10L) (REPLACED BY NAS1149D0332J)  146 NAS1149D0332J			.WASHER (REPLACED BY NAS1149D0332J) (REPLACED BY	_	-	
AN960JD10L)  146 NAS1149D0332J			AN960PD10L) (REPLACED BY NAS1149D0332J)	1		
147       212-075-151-007       .SUPPORT			AN960JD10L)			
148       MS21042L3       .NUT			1 '		1	
149       AN960D10L       .WASHER (REPLACED BY NAS1149D0316H)					1	
149       NAS1149D0316H       .WASHER (REPLACES AN960D10L)			i e e e e e e e e e e e e e e e e e e e		0	
150       MS35207-260       .SCREW				- 1		
152 120-055-1-19 .BONDING STRIP (S/N 30597 THRU 30603, 30611 THRU 1	150	MS35207-260		2	1	
	151	120-055-1-17			1	
	152	120-055-1-19		1	1	

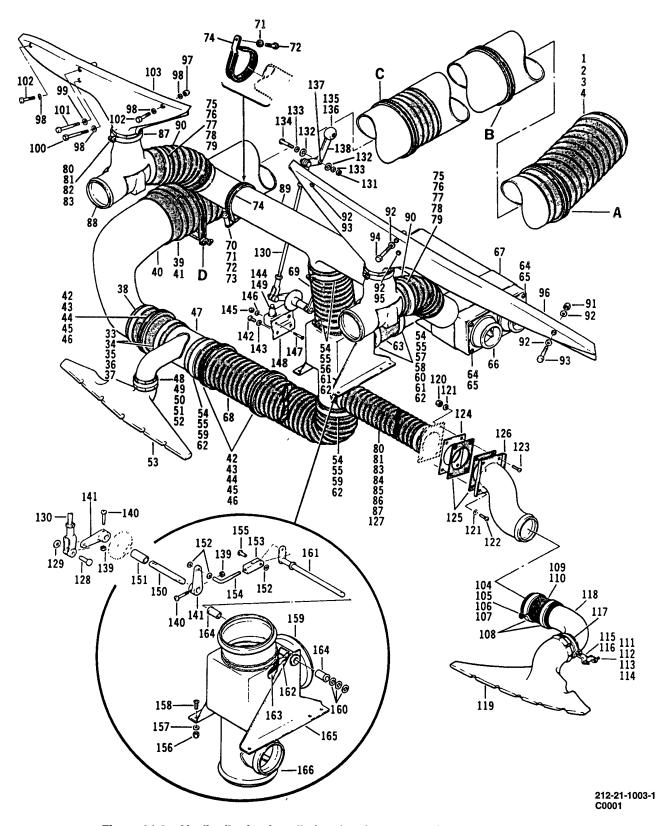


Figure 21-3. Air distribution installation, heating and ventilation (Sheet 1 of 2)

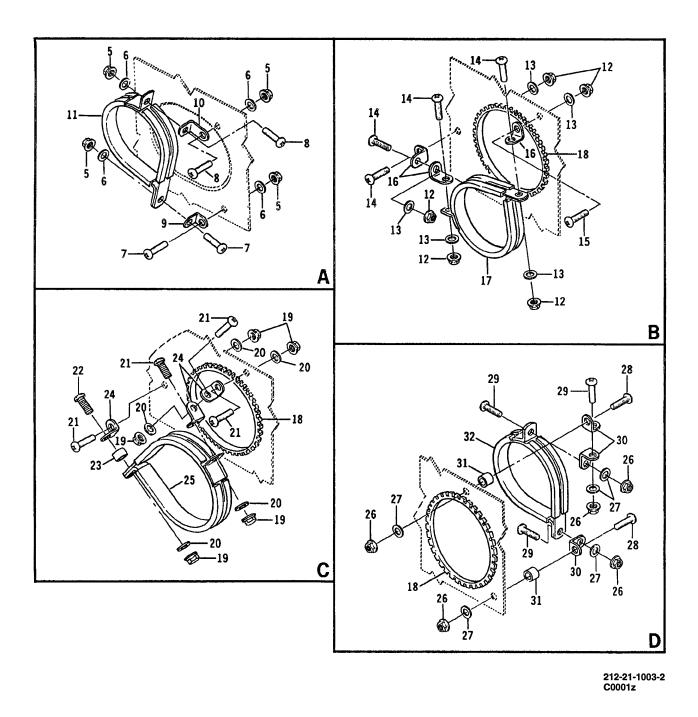


Figure 21-3. Air distribution installation, heating and ventilation (Sheet 2)

(1)	(2)	(3)	(4)	(5)	(6)
INDEX NUMBER	PART NUMBER	ITEM NAME	UNIT PER ASSY	A V A I L	U O C
		FIGURE: 21-3. Air distribution installation, heating and ventilation			
	212-070-400-003	AIR DISTRIBUTION INSTL, HEATING AND VENTILATION (S/N 30504 THRU 30553) (SEE FIG. 1, 4, 5 FOR BALANCE OF BREAKDOWN)	REF		
	212-070-400-005	AIR DISTRIBUTION INSTL, HEATING AND VENTILATION (S/N 30554 THRU 30596, 30604 THRU 30610) (SEE FIG. 1, 4, 5 FOR BALANCE OF BREAKDOWN)	REF		
	212-070-400-007	AIR DISTRIBUTION INSTL, HEATING AND VENTILATION (S/N 30597 THRU 30603, 30611 THRU 30679) (SEE FIG. 2, 4, 5 FOR BALANCE OF BREAKDOWN)	REF		
	212-070-400-013	AIR DISTRIBUTION INSTL, HEATING AND VENTILATION (S/N 30680 THRU 30755) (SEE FIG. 2, 4, 5 FOR BALANCE OF BREAKDOWN)	REF		
	212-070-400-011	AIR DISTRIBUTION INSTL, HEATING AND VENTILATION (S/N 30756 THRU 30859) (SEE FIG. 2, 4, 5 FOR BALANCE OF BREAKDOWN)	REF		
	212-070-400-015	AIR DISTRIBUTION INSTL, HEATING AND VENTILATION (S/N 30860 THRU 30969) (SEE FIG. 2, 4, 5 FOR BALANCE OF BREAKDOWN)	REF		
	212-070-400-101	AIR DISTRIBUTION INSTL, HEATING AND VENTILATION (S/N 30970 THRU 31311, 35001 THRU 35061) (SEE FIG. 2, 4, 5 FOR BALANCE OF BREAKDOWN)	REF		
	212-070-400-111	AIR DISTRIBUTION INSTL, HEATING AND VENTILATION (S/N 35062 THRU SUB) (SEE FIG. 2, 4, 5 FOR BALANCE OF BREAKDOWN)	REF		
1	NAS679A3	.NUT (REPLACED BY MS21042L3)	1		
1	MS21042L3	.NUT (REPLACES NAS679A3)	1	1	
2	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	1		
2	AN960JD10L	.WASHER (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	1		
2	NAS1149D0332J	.WASHER (REPLACES AN960JD10L)	1		
3	MS35207-289	SCREW	1	6	
4	AN735D64	.CLAMP	1	1	
5 5	NAS679A3	.NUT (REPLACED BY MS21042L3)	1	1	
5 6	MS21042L3 AN960PD10L	.NUT (REPLACES NAS679A3)	4	1	
6	AN960JD10L	.WASHER (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	4		
6	NAS1149D0332J	.WASHER (REPLACES AN960JD10L)	4		
7	AN520-10R8	.SCREW (REPLACED BY MS35207-263)	2		
7	MS35207-263	.SCREW (REPLACES AN520-10R8)	2	1	
8	AN520-10R6	SCREW (REPLACED BY MS35207-261)	2		
8	MS35207-261	.SCREW (REPLACES AN520-10R6)	2	1	
9	AN743-12	BRACKET	1	1	l
10	20-032-1	BRACKET	1	1	
11 12	204-070-048-001 NAS679A3	.CLAMP ASSY	1 5	1	
12	MS21042L3	.NUT (REPLACED BY MS21042L3)	5	1	
13	AN960PD10L	.NOT (REPLACES NAS6/9A3)	5	Τ.	

(1)	(2)	(3)	(4)	(5)	(6)
INDEX NUMBER	PART NUMBER	ITEM NAME	UNIT PER ASSY	A V A I L	n 0 c
		FIGURE: 21-3. Air distribution installation, heating and ventilation (Cont'd)			
13	AN960JD10L	.WASHER (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	5		
13	NAS1149D0332J	WASHER (REPLACES AN960JD10L)	5		
14	AN520-10R6	SCREW (REPLACED BY MS35207-261)	4		
14	MS35207-261	SCREW (REPLACES AN520-10R6)	4	1	
15	AN520-10R8	SCREW (REPLACED BY MS35207-263)	1	_	
15	MS35207-263	.SCREW (REPLACES AN520-10R8)	1	1	
16	AN743-12	BRACKET	3	1	
17	204-070-048-001	CLAMP ASSY	1	1	
18	MS21266-2N	GROMMET	3	1	
19	MS21042L3	NUT	5	1	
20	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	5	_	
20	AN960JD10L	.WASHER (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	5		
20	NAS1149D0332J	.WASHER (REPLACES AN960JD10L)	5		
21	MS35207-264	.SCREW	4	1	
22	MS35207-266	.SCREW	1	1	
23	NAS43DD3-16	.SPACER	1		
24	AN743-12	BRACKET	3	1	
25	204-070-048-001	.CLAMP ASSY	1	1	
26	NAS679A3	.NUT (REPLACED BY MS21042L3)	5		
26	MS21042L3	.NUT (REPLACES NAS679A3)	5	1	
27	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	5		
27	AN960JD10L	.WASHER (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	5		
27	NAS1149D0332J	.WASHER (REPLACES AN960JD10L)	5		
28	AN520-10R12	.SCREW (REPLACED BY MS35207-265)	2		
28	MS35207-265	.SCREW (REPLACES AN520-10R12)	2	1	
29	AN520-10R6	.SCREW (REPLACED BY MS35207-261)	3		
29	MS35207-261	.SCREW (REPLACES AN520-10R6)	3	1	
30	AN743-12	BRACKET	3	1	
31	NAS43DD3-24	.SPACER (REPLACED BY NAS43DD3-24N)	2		
31	NAS43DD3-24N	.SPACER (REPLACES NAS43DD3-24)	2	1	
32	204-070-048-001	.CLAMP ASSY	1	1	
33	NAS679A3	.NUT (REPLACED BY MS21042L3)	2		
33	MS21042L3	.NUT (REPLACES NAS679A3)	2	1	
34	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	2		
34	AN960JD10L	.WASHER (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	2		
34	NAS1149D0332J	.WASHER (REPLACES AN960JD10L)	2		
35	NAS43DD3-24	.SPACER (REPLACED BY NAS43DD3-24N)	1		
35	NAS43DD3-24N	.SPACER (REPLACES NAS43DD3-24)	1	1	
36	MS35207-265	SCREW	2	1	
37	AN735D48	.CLAMP	2	1	
38	NAS521-24-16	.COUPLING	1	1	
39	205-070-525-001	.DUCT ASSY	1	1	
40	205-070-474-003	ELBOW	1	1	
41	205-070-523-003	DUCT	1	1	
42	NAS679A3	.NUT (REPLACED BY MS21042L3)	6		

## BHT-212-IPB

(1)	(2)	(3)	(4) UNIT	(5) A V	(6) U
INDEX NUMBER	PART NUMBER	ITEM NAME	PER ASSY	A L	c
		FIGURE: 21-3. Air distribution installation, heating and ventilation (Cont'd)			
42	MS21042L3	.NUT (REPLACES NAS679A3)	6	1	
43	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)			1
43	AN960JD10L	.WASHER (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)			
43	NAS1149D0332J	.WASHER (REPLACES AN960JD10L)			
44	AN520-10R8	SCREW (REPLACED BY MS35207-263)			
44	MS35207-263	.SCREW (REPLACES AN520-10R8)		1	
45	AN743-12	.BRACKET (REPLACED BY 20-032-1)	1	1	
45	20-032-1	.BRACKET (REPLACES AN743-12)		1	
46	MS21919DG48	.CLAMP (REPLACED BY MS21919WDG48)	3		
46	MS21919WDG48	.CLAMP (REPLACES MS21919DG48)	3	1	
47	205-072-401-001	.DUCT	1	1	
48	NAS679A3	.NUT (REPLACED BY MS21042L3)	1		
48	MS21042L3	.NUT (REPLACES NAS679A3)		1	
49	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	1		
49	AN960JD10L	.WASHER (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	1		
49	NAS1149D0332J	.WASHER (REPLACES AN960JD10L)	1		
50	NAS43DD3-10	.SPACER	1		
51	AN520-10R8	.SCREW (REPLACED BY MS35207-263)	1		
51	MS35207-263	.SCREW (REPLACES AN520-10R8)	1	1	
52	AN735D26	.CLAMP	1	1	
53	205-072-402-001	NOZZLE	1	1	
54	NAS679A3	.NUT (REPLACED BY MS21042L3)	6		
54	MS21042L3	.NUT (REPLACES NAS679A3)	6	1	
55	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	6		
55	AN960JD10L	.WASHER (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)			
55	NAS1149D0332J	.WASHER (REPLACES AN960JD10L)	6		
56	NAS43DD3-24	.SPACER (REPLACED BY NAS43DD3-24N)			
56	NAS43DD3-24N	.SPACER (REPLACES NAS43DD3-24)		1	
57	NAS43DD3-16	SPACER	1		
58	NAS43DD3-24	.SPACER (REPLACED BY NAS43DD3-24N)	1		
58	NAS43DD3-24N	.SPACER (REPLACES NAS43DD3-24)	1	1	
59	AN520-10R6	.SCREW (REPLACED BY MS35207-261)	6		
59	MS35207-261	.SCREW (REPLACES AN520-10R6)	6	1	
60	AN520-10R9	SCREW		1	
61	MS35207-265	SCREW	1 1	1	
62	AN735D48	.CLAMP	6	1	
63	NAS521-24-16	.COUPLING	1	1	
64	AN520-10R8	SCREW (REPLACED BY MS35207-263)	16	_	
64	MS35207-263	SCREW (REPLACES AN520-10R8)	16	1	
65	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	16		
65	AN960JD10L	.WASHER (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	16		
65	NAS1149D0332J	.WASHER (REPLACES AN960JD10L)	16		l
66	204-070-483-001	.VALVE ASSY, AIR	4	1	
67	205-070-498-001	.DUCT ASSY	1	1	
68	NAS1374A12CA096	.HOSE (REPLACED BY NAS1375A12CA096)	1	0	

Page 20 Rev. 5

(1)	(2)	(3)	(4)	(5)	(6)
INDEX NUMBER	PART NUMBER	ITEM NAME	UNIT PER ASSY	A V A L	υoc
		FIGURE: 21-3. Air distribution installation, heating and ventilation (Cont'd)			
68	NAS1375A12CA096	.HOSE (REPLACES NAS1374A12CA096)	1		
69	NAS1374A12CA015	.HOSE (REPLACED BY NAS1375A12CA015)	1		
69	NAS1375A12CA015	.HOSE (REPLACES NAS1374A12CA015)	1		
70	NAS679A3	.NUT (NOTE 1) (REPLACED BY MS21042L3)	2		
70	MS21042L3	.NUT (NOTE 1) (REPLACES NAS679A3)	2	1	
71	AN960PD10L	.WASHER (NOTE 1) (REPLACED BY AN960JD10L)	2		
71	AN960JD10L	.WASHER (NOTE 1) (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	2		
71	NAS1149D0332J	.WASHER (NOTE 1) (REPLACES AN960JD10L)	2		
72	AN520-10R12	.SCREW (NOTE 1) (REPLACED BY MS35207-265)	2		
72	MS35207-265	.SCREW (NOTE 1) (REPLACES AN520-10R12)	2	1	
72	MS27039-1-08	.SCREW (NOTE 1)	2	1	
73	NAS43DD3-20	.SPACER (NOTE 1)			
74	MS21919DG40	.CLAMP (NOTE 1) (REPLACED BY MS21919WDG40)	2	0	
74	MS21919WDG40	.CLAMP (NOTE 1) (REPLACES MS21919DG40)	2	1	
75	NAS679A3	.NUT (REPLACED BY MS21042L3)	2		
75	MS21042L3	.NUT (REPLACES NAS679A3)	2	1	
76	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	2		
76	AN960JD10L	.WASHER (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	2		
76	NAS1149D0332J	.WASHER (REPLACES AN960JD10L)	2		
77	NAS43DD3-24	.SPACER (REPLACED BY NAS43DD3-24N)	2		
77	NAS43DD3-24N	.SPACER (REPLACES NAS43DD3-24)	2	1	
78	AN520-10R8	.SCREW (REPLACED BY MS35207-263)	2		
78	MS35207-263	.SCREW (REPLACES AN520-10R8)	2	1	
79	AN735D40	.CLAMP	2	1	
80	NAS679A3	.NUT (REPLACED BY MS21042L3)	4		
80	MS21042L3	.NUT (REPLACES NAS679A3)	4	1	
81	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	4		
81	AN960JD10L	.WASHER (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	4		
1	NAS1149D0332J	.WASHER (REPLACES AN960JD10L)	4		
82	NAS43DD3-24	.SPACER (REPLACED BY NAS43DD3-24N)	2		
82	NAS43DD3-24N	.SPACER (REPLACES NAS43DD3-24)	2	1	
83	AN520-10R8	.SCREW (S/N 30504 THRU 31311, 35001 THRU 35103) (REPLACED BY MS35207-263)	3		
83	MS35207-263	.SCREW (S/N 30504 THRU 31311, 35001 THRU 35103) (REPLACES AN520-10R8)	3	1	
83	MS35207-265	.SCREW (S/N 35104 THRU SUB)	3	1	
84	MS35207-265	.SCREW	1	1	
85	NAS43DD3-16	.SPACER (S/N 30504 THRU 31311, 35001 THRU 35103)	1		
85	NAS43DD3-24N	.SPACER (S/N 35104 THRU SUB)	1	1	
86	NAS43DD3-24	.SPACER (REPLACED BY NAS43DD3-24N)	1		
86	NAS43DD3-24N	.SPACER (REPLACES NAS43DD3-24)	1	1	
87	AN735D32	.CLAMP (S/N 30504 THRU 31311, 35001 THRU 35103)	4	1	
87	AN735D33	.CLAMP (S/N 35104 THRU SUB)	4		
88	205-072-489-007	.VALVE ASSY	2	1	
89	212-070-427-001	.DUCT ASSY	1	1	
90	70-051-10A045G	HOSE (REPLACED BY NAS1377A10CA045)	2	0	

## BHT-212-IPB

(1)	(2)	(3)	(4)	(5)	(6)
INDEX	DADT NUMBER	ITEM NAME	UNIT	A V A	U
NUMBER	PART NUMBER	I EW NAME	PER ASSY	ĵ.	č
		FIGURE: 21-3. Air distribution installation, heating and ventilation (Cont'd)			
90	NAS1377A10CA045	  HOSE (REPLACES 70-051-10A045G)	2		
91	NAS679A3	.NUT (REPLACED BY MS21042L3)	1		
91	MS21042L3	.NUT (REPLACES NAS679A3)	1	1	Ì
92	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	5		
92	AN960JD10L	.WASHER (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	5		
92	NAS1149D0332J	.WASHER (REPLACES AN960JD10L)	5		
93	AN3-13A	BOLT	2	1	ŀ
94	AN3-16A	BOLT	1	1	
95	AN3-24A	BOLT	1	1	
96	204-072-450-011	.NOZZLE ASSY	1	1	
97	NAS679A3	.NUT (REPLACED BY MS21042L3)	1		
97	MS21042L3	.NUT (REPLACES NAS679A3)	1	1	į
98	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	4		
98	AN960JD10L	.WASHER (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	4		
98	NAS1149D0332J	.WASHER (REPLACES AN960JD10L)	4		
99	AN960JD10	.WASHER (REPLACED BY NAS1149D0363J)	1		
99	NAS1149D0363J	.WASHER (REPLACES AN960JD10)	1		
100	AN3-20A	.BOLT	1	1	
101	AN3-22A	BOLT	1	1	
102	AN3-13A	BOLT	2	1	
103	204-072-450-012	.NOZZLE ASSY	1	1	
104	NAS679A3	.NUT (REPLACED BY MS21042L3)	2		
104	MS21042L3	.NUT (REPLACES NAS679A3)	2	1	
105	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	2		
105	AN960JD10L	.WASHER (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	2		
105	NAS1149D0332J	.WASHER (REPLACES AN960JD10L)	2		
106	NAS43DD3-16	.SPACER	2		
107	AN520-10R9	.SCREW	2	1	
108	AN735D32	.CLAMP	2	1	
109	NAS521-16-11	.COUPLING (S/N 30504 THRU 30596, 30604 THRU 30610) . (REPLACED BY NAS520-16-11)	1	6	
110	NAS520-16-11	.COUPLING (S/N 30597 THRU 30603, 30611 THRU SUB) (REPLACES NAS521-16-11)	1	1	
111	NAS679A3	.NUT (REPLACED BY MS21042L3)	3		
111	MS21042L3	.NUT (REPLACES NAS679A3)	3	1	1
112	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	3		1
112	AN960JD10L	.WASHER (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	3		
112	NAS1149D0332J	.WASHER (REPLACES AN960JD10L)	3		1
113	NAS43DD3-16	.SPACER	1		
114	AN520-10R12	SCREW (REPLACED BY MS35207-265)	3		1
114	MS35207-265	.SCREW (REPLACES AN520-10R12)	3	1	1
115	20-032-1	BRACKET	1	1	
116	AN743-12	BRACKET	1	1	
117	AN735D32	.CLAMP	1	1	
118	212-070-486-001	.DUCT	1	1	
					<u> </u>

21-99-00

Page 22 Rev. 5

(1)	(2)	(3)	(4)	(5)	(6)
INDEX NUMBER	PART NUMBER	ITEM NAME	UNIT PER ASSY	A V A I L	n 0
		FIGURE: 21-3. Air distribution installation, heating and ventilation (Cont'd)			
119	212-070-465-001	.NOZZLE	1	1	
120	NAS679A3	.NUT (REPLACED BY MS21042L3)	3	_	
120	MS21042L3	.NUT (REPLACES NAS679A3)	3	1	
121	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	7		
121	AN960JD10L	.WASHER (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	7		
121	NAS1149D0332J	.WASHER (REPLACES AN960JD10L)	7		
122	AN520-10R7	.SCREW (REPLACED BY MS35207-262)	1		
122	MS35207-262	.SCREW (REPLACES AN520-10R7)	1	1	
123	AN520-10R10	.SCREW (REPLACED BY MS35207-264)	3	0	
123	MS35207-264	.SCREW (REPLACES AN520-10R10)	3	1	
124	205-070-493-001	ORIFICE	1	1	
125	205-070-494-001	.GASKET	2	1	
126	205-070-492-007	.DUCT	1	1	
127	NAS1374A08CA045	.HOSE (REPLACED BY NAS1375A08CA045)	1		
127	NAS1375A08CA045	.HOSE (REPLACES NAS1374A08CA045)	1		
128	MS20392-2-11	.PIN (REPLACED BY MS20392-2C11)	2		
128	MS20392-2C11	.PIN (REPLACES MS20392-2-11) (REPLACED BY MS20392-2S11)	2		
128	MS20392-2S11	.PIN (REPLACES MS20392-2C11)	2	1	
129	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	1		
129	AN960JD10L	.WASHER (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	1		
129	NAS1149D0332J	.WASHER (REPLACES AN960JD10L)	1		
130	204-070-244-001	ROD ASSY (REPLACED BY 204-070-244-101)	1		
130	204-070-244-101	ROD ASSY (REPLACES 204-070-244-001)	1	1	
131	AN320-3	NUT	1	1	
132	AN960PD516	.WASHER (REPLACED BY AN960JD516)	2		
132	AN960JD516	.WASHER (REPLACES AN960PD516) (REPLACED BY NAS1149D0563J)	2	1	
132	NAS1149D0563J	.WASHER (REPLACES AN960JD516)	2	1	
133	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	2		
133	AN960JD10L	.WASHER (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	2		
133	NAS1149D0332J	.WASHER (REPLACES AN960JD10L)	2	_	
134	AN23-19	BOLT	1	1	
135	204-070-245-001	LEVER ASSY	1	1	
136	MS26517-2	HANDLE	1	1	
137	75B5B6-8	BUSHING (REPLACED BY 21-005B6-8)	1	0	
137	21-005B6-8	BUSHING (REPLACES 75B5B6-8)	1		
138	204-070-245-003	ARM	1	1	
139	AN320-1	NUT	2 2	1	
140	AN21-14	.BOLT	2	1	
1 1	204-070-243-001	.ARM	2	1	
142	AN520-10R6		2	1	
142	MS35207-261	SCREW (REPLACES AN520-10R6)	2 2	_	İ
143	AN960PD10L AN960JD10L	.WASHER (REPLACED BY AN960JD10L)	2		
		NAS1149D0332J)			

	(2)	(3)	(4)	(5)	(6)
INDEX NUMBER	PART NUMBER	ITEM NAME	UNIT PER ASSY	A V A I L	noc
		FIGURE: 21-3. Air distribution installation, heating and ventilation (Cont'd)			
143	   NAS1149D0332J	.WASHER (REPLACES AN960JD10L)	2		
144	205-072-406-001	SWITCH ASSY	1	1	İ
145	NAS679A06	NUT (REPLACED BY MS21042L06)	2	1	
145	MS21042L06	NUT (REPLACES NAS679A06)	2	1	
146	AN960PD6L	WASHER (REPLACED BY AN960JD6L)	2		1
146	AN960JD6L	WASHER (REPLACES AN960PD6L) (REPLACED BY NAS1149DN616J)	2	1	
146	NAS1149DN616J	WASHER (REPLACES AN960JD6L)	2	1	
147	MS35206-234	SCREW	2	1	
148	205-072-406-003	BRACKET	1	1	
149	BZ7YQ1T1	SWITCH	1		
150	204-072-403-001	.SHAFT (S/N 30504 THRU 31311, 35001 THRU 35061)	1	1	
150	204-072-403-101	.SHAFT (S/N 35062 THRU SUB)	1	1	
151	NAS43DD5-61	.SPACER (S/N 30504 THRU 31311, 35001 THRU 35061)	1		
151	NAS43DD5-84	.SPACER (S/N 35062 THRU SUB)	1	1	
152	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	3		
152	AN960JD10L	.WASHER (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	3		
152	NAS1149D0332J	.WASHER (REPLACES AN960JD10L)	3		
153	204-072-404-001	LINK	1	1	
154	204-072-405-001	LINK	1	1	
155	MS20392-2-11	PIN (REPLACED BY MS20392-2C11)	1		
155	MS20392-2C11	PIN (REPLACES MS20392-2-11) (REPLACED BY	1		
155 156	MS20392-2S11	PIN (REPLACES MS20392-2C11)	1	1	
156	NAS679A3 MS21042L3	NUT (REPLACED BY MS21042L3)	6	1	
156	MS21042L3 AN960PD10L	.NUT (REPLACES NAS679A3)	6	1	
157	AN960PDIOL AN960JD10L	.WASHER (REPLACED BY AN960JD10L)	6		
157		NAS1149D0332J)			
157	NAS1149D0332J AN520-10R6	.WASHER (REPLACES AN960JD10L)	6		
158	MS35207-261	SCREW (REPLACED BY MS35207-201)	6	1	
159	205-070-497-001	DUCT ASSY (S/N 30504 THRU 31311, 35001 THRU	1	1	
		35061)	-	-	
159	205-070-497-101	.DUCT ASSY (S/N 35062 THRU SUB)	1	1	
160	AN960-416L	WASHER (REPLACED BY NAS1149F0432P)	3	1	
160	NAS1149F0432P	WASHER (REPLACES AN960-416L)	3		
161	204-072-401-003	ROD ASSY (S/N 30504 THRU 31311, 35001 THRU 35061)	1	1	
161	204-072-401-101	ROD ASSY (S/N 35062 THRU SUB)	1		
162	204-070-371-007	FLAPPER ASSY	1	1	
163	204-070-497-003	SEAL	2		
164	22-006B16-48-16	BUSHING	2	1	
165	205-070-495-001	BRACLET ASSY, LH	1		
165	205-070-495-002	BRACLET ASSY, RH	1		
166	205-070-496-001	DUCT ASSY	1	6	

(1)	(2)	(3)	(4)	(5) A	(6)
INDEX NUMBER	PART NUMBER	ITEM NAME	UNIT PER ASSY	A > A - L	noc
		FIGURE: 21-3. Air distribution installation, heating and ventilation (Cont'd)			
		NOTE 1: NAS679A3 NUT, AN960PD10L WASHER, AN520-1012 SCREW, NAS43DD3-20 SPACER AND MS21919DG40 CLAMP AS A UNIT REPLACED BY MS27039-1-08 SCREW, AN960PD10L WASHER AND MS21919DG40 CLAMP AS A UNIT.			

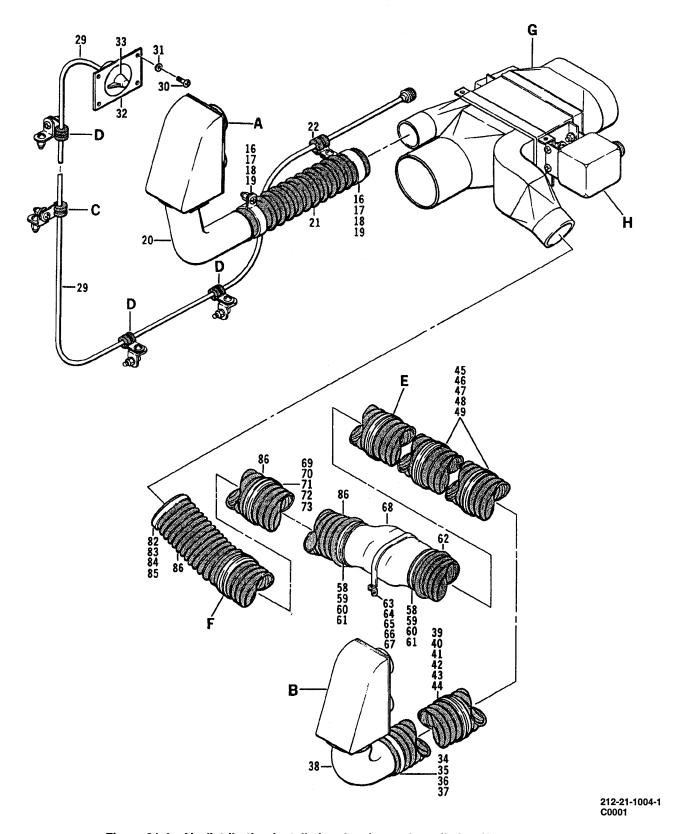


Figure 21-4. Air distribution installation, heating and ventilation (Sheet 1 of 3)

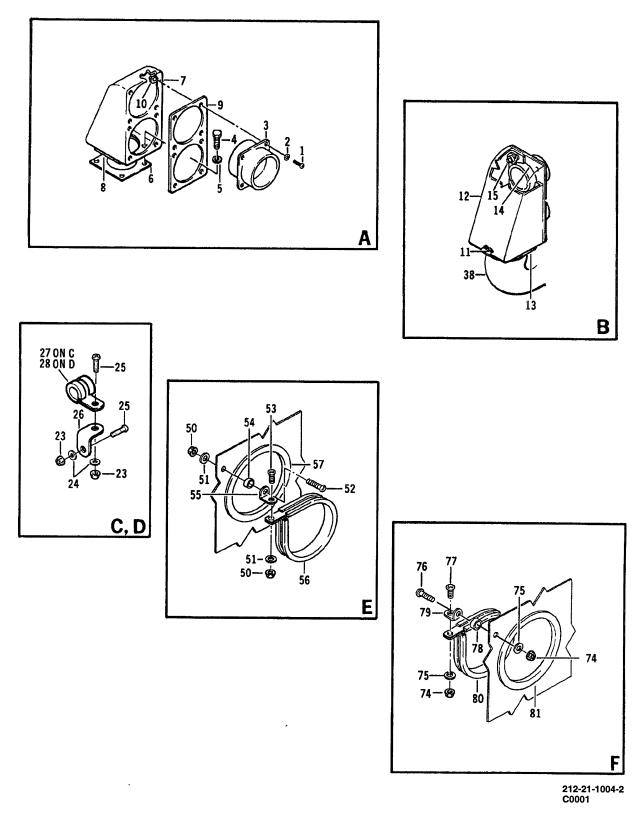


Figure 21-4. Air distribution installation, heating and ventilation (Sheet 2)

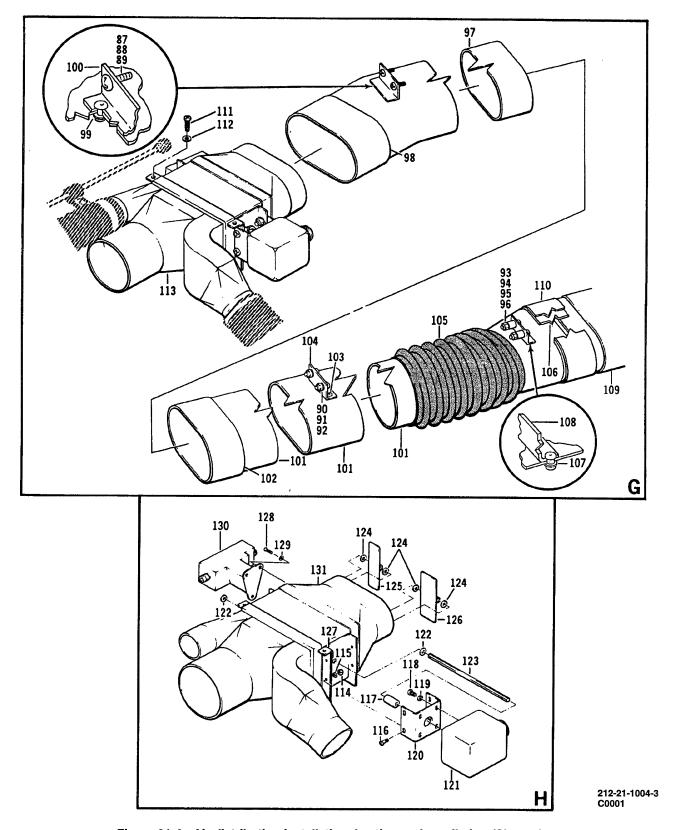


Figure 21-4. Air distribution installation, heating and ventilation (Sheet 3)

(1)	(2)	(3)	(4)	(5)	(6)
INDEX NUMBER	PART NUMBER	ITEM NAME	UNIT PER ASSY	A V A L	υoc
		FIGURE: 21-4. Air distribution installation, heating and ventilation			
	212-070-400-003	AIR DISTRIBUTION INSTL, HEATING AND VENTILATION (S/N 30504 THRU 30553) (SEE FIG. 1,3,5 FOR BALANCE OF BREAKDOWN)	REF		
	212-070-400-005	AIR DISTRIBUTION INSTL, HEATING AND VENTILATION (S/N 30554 THRU 30596, 30604 THRU 30610) (SEE FIG. 1,3,5 FOR BALANCE OF BREAKDOWN)	REF		
	212-070-400-007	AIR DISTRIBUTION INSTL, HEATING AND VENTILATION (S/N 30597 THRU 30603, 30611 THRU 30679) (SEE FIG. 2,3,5 FOR BALANCE OF BREAKDOWN)	REF		
	212-070-400-013	AIR DISTRIBUTION INSTL, HEATING AND VENTILATION (S/N 30680 THRU 30755) (SEE FIG. 2,3,5 FOR BALANCE OF BREAKDOWN)	REF		
	212-070-400-011	AIR DISTRIBUTION INSTL, HEATING AND VENTILATION (S/N 30756 THRU 30859) (SEE FIG. 2,3,5 FOR BALANCE OF BREAKDOWN) (REPLACED BY 212-070-400-015)	REF		
	212-070-400-015	AIR DISTRIBUTION INSTL, HEATING AND VENTILATION (S/N 30860 THRU 30969) (SEE FIG. 2,3,5 FOR BALANCE OF BREAKDOWN) (REPLACES 212-070-400-011)	REF		
	212-070-400-101	AIR DISTRIBUTION INSTL, HEATING AND VENTILATION (S/N 30970 THRU 31311, 35001 THRU 35061) (SEE FIG. 2,3,5 FOR BALANCE OF BREAKDOWN)	REF		
	212-070-400-111	AIR DISTRIBUTION INSTL, HEATING AND VENTILATION (S/N 35062 THRU SUB) (SEE FIG. 2,3,5 FOR BALANCE OF BREAKDOWN)	REF		
1	AN520-10R8	SCREW (REPLACED BY MS35207-263)	16		
1	MS35207-263	.SCREW (REPLACES AN520-10R8)	16		
2	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	16		
2	AN960JD10L	.WASHER (REPLACES AN960PD10L)	16	_	
3	204-070-483-001	.VALVE ASSY, AIR	4	1	
4 5	AN3-3A AN960PD10L	.BOLT	8	1	
5	AN960JD10L	.WASHER (REPLACES AN960PD10L)	8		
6	205-070-416-005	ORIFICE (REPLACED BY 100-064-5)	1	0	
6	100-064-5	.PLATE (REPLACES 205-070-416-005)	1	1	
7	204-072-420-005	.DUCT ASSY, RH	1	1	
8	205-070-412-001	GASKET	1	1	
9	205-070-413-001	GASKET	1	1	
10	NAS1068A3	NUTPLATE (REPLACED BY MS21075L3)	8	0	
10 11	MS21075L3 205-070-416-013	NUTPLATE (REPLACES NAS1068A3)	8 1	0	
11	100-064-13	PLATE (REPLACES 205-070-416-013)	1	1	
12	204-072-420-005	DUCT ASSY, LH	1	1	
13	205-070-412-001	GASKET	1	1	
14	205-070-413-001	GASKET	1	1	
15	NAS1068A3	NUTPLATE (REPLACED BY MS21075L3)	8	0	
15	MS21075L3	NUTPLATE (REPLACES NAS1068A3)	8	0	
16	NAS679A3	NUT (REPLACED BY MS21042L3)	2		
16 17	MS21042L3 AN960PD10L	.NUT (REPLACES NAS679A3)	2 2		
- '	- THIS OOF DEATH	(IUI DECDO DI MIOOUDION)	4		i l'


(1)	(2)	(3)	(4)	(5)	(6)
INDEX NUMBER	PART NUMBER	ITEM NAME	UNIT PER ASSY	A V A L	noc
		FIGURE: 21-4. Air distribution installation, heating and ventilation (Cont'd)			
17	AN960JD10L	.WASHER (REPLACES AN960PD10L)	2		
18	AN520-10R10	.SCREW (REPLACED BY MS35207-264)	2	0	
18	MS35207-264	.SCREW (REPLACES AN520-10R10)	2	0	
19	AN735D35	.CLAMP	1 1	1	
20	205-070-460-005	.ELBOW ASSY	1	1	
21	NAS1374A08CA030	.HOSE, AIR DUCT (REPLACED BY NAS1375A08CA030)	1		
21	NAS1375A08CA030	.HOSE, AIR DUCT (REPLACES NAS1374A08CA030)	1		
22	MS21919DG4	.CLAMP (S/N 30504 THRU 30755) (REPLACED BY	1		
		MS21919WDG4)			
22	MS21919WDG4	.CLAMP (S/N 30504 THRU 30755) (REPLACES	1		
23	NAS679A3	.NUT (S/N 30504 THRU 30755) (REPLACED BY	8		
23	MS21042L3	.NUT (S/N 30504 THRU 30755) (REPLACES NAS679A3)	8		
24	AN960PD10L	.WASHER (S/N 30504 THRU 30755) (REPLACED BY AN960JD10L)	8		
24	AN960JD10L	.WASHER (S/N 30504 THRU 30755) (REPLACES AN960PD10L)	8		
25	AN520-10R7	.SCREW (S/N 30504 THRU 30755) (REPLACED BY MS35207-262)	8		
25	MS35207-262	.SCREW (S/N 30504 THRU 30755) (REPLACES	8		
26	AN743-12	.BRACKET (S/N 30504 THRU 30755)	4	1	
27	MS25281-R5	.CLAMP (S/N 30504 THRU 30755)	2	1	
28	MS21919DG4	.CLAMP (S/N.30504 THRU 30755) (REPLACED BY MS21919WDG4)	4		
28	MS21919WDG4	.CLAMP (S/N 30504 THRU 30755) (REPLACES	4		
29	FYLD243-12	.CONTROL CABLE (S/N 30504 THRU 30553) (REPLACED BY . 212-070-493-003 AND 10901-3)	1	0	
29	212-070-493-003	.FLEX SHAFT ASSY (S/N 30504 THRU 30553) (REPLACES FYLD243-12) (REPLACED BY 10901-3)	1	0	
29	10901-3	.FLEX SHAFT ASSY (S/N 30504 THRU 30553) (REPLACES FYLD243-12 AND 212-070-493-003)		1	
29	CB1620-7	.FLEX SHAFT ASSY (S/N 30554 THRU 30755) (REPLACED BY 212-070-493-101)	1	0	
29	212-070-493-101	.FLEX SHAFT ASSY (S/N 30554 THRU 30755) (REPLACES CB1620-7)	1	1	
30	MS35206-228	.SCREW (S/N 30504 THRU 30755)	4	1	
30	MS35206-230	SCREW (S/N 30756 THRU SUB)	4	1	
31	AN960PD6L	.WASHER (REPLACED BY AN960JD6L)	4		
31	AN960JD6L	.WASHER (REPLACES AN960PD6L)	4		
32	FYLD317-30	.DIAL (S/N 30504 THRU 30553) (REPLACED BY	1		
32	212-070-430-001	212-070-430-001) .DIAL (S/N 30554 THRU 30755) (REPLACES	1	1	
	212 072 007 000	FYLD317-30)	_	_	
32	212-073-927-003	.SERVO CONTROLLER (S/N 30756 THRU SUB)	1	1	
33 34	80-012-5	KNOB	1	1	
34	NAS679A3	.NUT (REPLAÇED BY MS21042L3)	1		

(1)	(2)	(3)	(4)	(5)	(6)
INDEX NUMBER	PART NUMBER	ITEM NAME	UNIT PER ASSY	Å V A I L	noc
		FIGURE: 21-4. Air distribution installation, heating and ventilation (Cont'd)			
34	MS21042L3	.NUT (REPLACES NAS679A3)	1		
35	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	1		
35	AN960JD10L	.WASHER (REPLACES AN960PD10L)	1		
36	AN520-10R16	.SCREW (REPLACED BY MS35207-267)	1		
36	MS35207-267	.SCREW (REPLACES AN520-10R16)	1		
37	AN735D40	.CLAMP	1	1	
38	205-070-461-005	.ELBOW ASSY	1	1	
39	NAS679A3	.NUT (REPLACED BY MS21042L3)	2		
39	MS21042L3	.NUT (REPLACES NAS679A3)	2		
40	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	2		
40	AN960JD10L	.WASHER (REPLACES AN960PD10L)	2		
41	AN520-10R8	SCREW (REPLACED BY MS35207-263)			
41	MS35207-263	.SCREW (REPLACES AN520-10R8)	2		
42	AN743-12	BRACKET	1	1	
43	MS21919DG40	.CLAMP (REPLACED BY MS21919WDG40)	1	0	
43	MS21919WDG40	.CLAMP (REPLACES MS21919DG40)	1	0	
44	110-076-1-11-2	.EXTRUSION (S/N 30970 THRU SUB) (MAKE FROM	1		
44	110-076-1	.EXTRUSION (S/N 30970 THRU SUB)	1		
45	NAS679A3	.NUT (REPLACED BY MS21042L3)	6		l i
45	MS21042L3	.NUT (REPLACES NAS679A3)	6		
46	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	6		
46	AN960JD10L	.WASHER (REPLACES AN960PD10L)	6		
47	AN520-10R8	.SCREW (REPLACED BY MS35207-263)	6		İ
47	MS35207-263	.SCREW (REPLACES AN520-10R8)	6		
48	AN743-12	BRACKET	4	1	
49	MS21919DG40	.CLAMP (REPLACED BY MS21919WDG40)	2	0	
49	MS21919WDG40	.CLAMP (REPLACES MS21919DG40)	2	0	
50	NAS679A3	.NUT (REPLACED BY MS21042L3)	2		
50	MS21042L3	.NUT (REPLACES NAS679A3)	2		
51	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	2		
51	AN960JD10L	.WASHER (REPLACES AN960PD10L)	2		
52 52	AN520-10R12	SCREW (REPLACED BY MS35207-265)	1		
52	MS35207-265	SCREW (REPLACES AN520-10R12)	1	_	
53 53	AN520-10R10	SCREW (REPLACED BY MS35207-264)	1	0	
53 54	MS35207-264	SCREW (REPLACES AN520-10R10)	1	0	
54 54	NAS43DD3-24	SPACER (REPLACED BY NAS43DD3-24N)	1		
54 55	NAS43DD3-24N AN743-12	.SPACER (REPLACES NAS43DD3-24)	1		
55 56	AN 743-12 MS21919DG40	BRACKET	1	1	
56	MS21919DG40 MS21919WDG40	.CLAMP (REPLACED BY MS21919WDG40)	1	0	
57	110-076-1-11-2	.CLAMP (REPLACES MS21919DG40)	1	0	
57	110-076-1	EXTRUSION (S/N 30970 THRU SUB)	1		
58	NAS679A3	.NUT (REPLACED BY MS21042L3)	2		
58	MS21042L3	.NUT (REPLACES NAS679A3)	2		
59	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	2		
59	AN960JD10L	.WASHER (REPLACES AN960PD10L)	2		
60	AN520-10R16	SCREW (REPLACED BY MS35207-267)	2		
	-				

(1)	(2)	(3)	(4)	(5)	(6)
INDEX	PART NUMBER	ITEM NAME	UNIT	A V A	U O
NUMBER	PART NUMBER	I EM NAME	PER ASSY	Ê	č
		FIGURE: 21-4. Air distribution installation, heating and			
		ventilation (Cont'd)			
60	MS35207-267	.SCREW (REPLACES AN520-10R16)	2		
61	AN735D40	.CLAMP	2	1	
62	NAS1374A10CA159	.HOSE, AIR DUCT (REPLACED BY NAS1375A10CA159)	1	0	l i
62	NAS1375A10CA159	.HOSE, AIR DUCT (REPLACES NAS1374A10CA159)	1	0	
63	NAS679A3	.NUT (REPLACED BY MS21042L3)			
63	MS21042L3	.NUT (REPLACES NAS679A3)	2		
64	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	2		
64	AN960JD10L	.WASHER (REPLACES AN960PD10L)	2		
65	AN520-10R8	.SCREW (REPLACED BY MS35207-263)	2		
65	MS35207-263	.SCREW (REPLACES AN520-10R8)			
66	TA4C87WD32-48	.CLAMP		6	
67	AN743-12	.BRACKET		1	
68	212-070-401-001	.DUCT	1	1	
69	NAS679A3	.NUT (REPLACED BY MS21042L3)	1		
69	MS21042L3	.NUT (REPLACES NAS679A3)	1		
70	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)			
70	AN960JD10L	.WASHER (REPLACES AN960PD10L)	1		
71	AN520-10R8	.SCREW (REPLACED BY MS35207-263)	1		
71	MS35207-263	.SCREW (REPLACES AN520-10R8)	1		
72	AN743-12	.BRACKET	1	1	
73	MS21919DG40	.CLAMP (REPLACED BY MS21919WDG40)	1	0	
73	MS21919WDG40	.CLAMP (REPLACES MS21919DG40)	1	0	
74	NAS679A3	.NUT (REPLACED BY MS21042L3)			
74	MS21042L3	.NUT (REPLACES NAS679A3)			
75	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	2		1
75	AN960JD10L	.WASHER (REPLACES AN960PD10L)	2		
76	AN520-10R14	SCREW (REPLACED BY MS35207-266)	1		
76	MS35207-266	.SCREW (REPLACES AN520-10R14)	1		
77	AN520-10R10	SCREW (REPLACED BY MS35207-264)	1	0	
77	MS35207-264	.SCREW (REPLACES AN520-10R10)		0	
78	NAS43DD3-24	.SPACER (REPLACED BY NAS43DD3-24N)	1		
78	NAS43DD3-24N	.SPACER (REPLACES NAS43DD3-24)	1		
79	AN743-12	.BRACKET	1	1	
80	MS21919DG40	.CLAMP (REPLACED BY MS21919WDG40)	1	0	
80	MS21919WDG40	.CLAMP (REPLACES MS21919DG40)	1	0	
81	110-076-1-10-3	.EXTRUSION (S/N 30970 THRU SUB) (MAKE FROM	1		
81	110-076-1	EXTRUSION (S/N 30970 THRU SUB)	1		
82	NAS679A3	.NUT (REPLACED BY MS21042L3)	1		
82	MS21042L3	.NUT (REPLACES NAS679A3)	1		
83	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	1		
83	AN960JD10L	.WASHER (REPLACES AN960PD10L)	1		
84	AN520-10R12	SCREW (REPLACED BY MS35207-265)	1		
84	MS35207-265	SCREW (REPLACES AN520-10R12)	1		
85	AN735D40	.CLAMP	1	1	
86	NAS1374A10CA183	.HOSE (REPLACED BY NAS1375A10CA183)	1	0	
86	NAS1375A10CA183	.HOSE (REPLACES NAS1374A10CA183)	1	0	]
87	NAS679A3	.NUT (REPLACED BY MS21042L3)	2		
87	MS21042L3	.NUT (REPLACES NAS679A3)	2		

(1)	(2)	(3)	(4)	(5) A	(6)
INDEX NUMBER	PART NUMBER	ITEM NAME	UNIT PER ASSY	A V A L	noc
		FIGURE: 21-4. Air distribution installation, heating and ventilation (Cont'd)			
88	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	2		
88	AN960JD10L	.WASHER (REPLACES AN960PD10L)	2		
89	AN520-10R6	SCREW (REPLACED BY MS35207-261)	2		
89	MS35207-261	SCREW (REPLACES AN520-10R6)	2		
90	NAS679A3	.NUT (REPLACED BY MS21042L3)	2		
90	MS21042L3	.NUT (REPLACES NAS679A3)	2		
91	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	2		
91	AN960JD10L	.WASHER (REPLACES AN960PD10L)	2		
92	AN520-10R7	SCREW (REPLACED BY MS35207-262)	2		
92	MS35207-262	SCREW (REPLACES AN520-10R7)	2		
93	NAS679A3	.NUT (REPLACED BY MS21042L3)	2		
93 94	MS21042L3	.NUT (REPLACES NAS679A3)	2		
94 94	AN960PD10L AN960JD10L	.WASHER (REPLACED BY AN960JD10L)	2 2		
9 <del>4</del> 95	AN520-10R18	SCREW	2	1	
96	NAS43DD3-34	SPACER	2	1	
97	205-070-455-007	DUCT ASSY	1 1		
98	204-070-190-001	COUPLING	1 1	1	
99	AN960PD2L	WASHER (REPLACED BY AN960JD2L)	2	-	
99	AN960JD2L	WASHER (REPLACES AN960PD2L)	2		
100	205-070-455-005	CLIP	1 1	6	
101	205-070-456-011	.DUCT ASSY	1	1	
102	204-070-190-001	COUPLING	1	1	
103	AN960PD2L	WASHER (REPLACED BY AN960JD2L)	2		
103	AN960JD2L	WASHER (REPLACES AN960PD2L)	2		
104	205-070-456-005	CLIP	1		
105	205-070-457-007	.DUCT ASSY	1	1	
106	204-070-190-001	COUPLING	1	1	
107	AN960PD2L	WASHER (REPLACED BY AN960JD2L)	2		
107	AN960JD2L	WASHER (REPLACES AN960PD2L)	2		
108	205-070-457-005	CLIP	1		
109	205-070-406-015	.INSULATION	1	1	
110	205-070-406-017	.INSULATION	1	1	
111	MS35207-289	SCREW	2	6	
112 112	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	2		
112	AN960JD10L 205-070-442-007	.WASHER (REPLACES AN960PD10L)	2	^	
113	205-070-442-007	.VALVE ASSY (S/N 30504 THRU 30553)	1 1	0	
113	203-0/0-442-005	.VALVE ASSY (S/N 30554 THRU SUB)	+	U	
113	205-070-442-101	(ALTERNATE PART)  .VALVE ASSY (S/N 30554 THRU SUB)	1	1	
114	NAS679A3	.NUT (REPLACED BY MS21042L3)	4	Т	
114	MS21042L3	NUT (REPLACES NAS679A3)	4		
115	AN960PD10L	WASHER (REPLACED BY AN960JD10L)	4		
115	AN960JD10L	WASHER (REPLACES AN960PD10L)	4		
116	AN520-10R7	SCREW (REPLACED BY MS35207-262)	4		
116	MS35207-262	SCREW (REPLACES AN520-10R7)	4		
117	204-070-177-001	ADAPTER	1	1	
118	AN520-10R7	screw (replaced by ms35207-262)	4		
118	MS35207-262	SCREW (REPLACES AN520-10R7)	4		

(1)	(2)	(3)	(4)	(5) A	(6)
INDEX NUMBER	PART NUMBER	ITEM NAME	UNIT PER ASSY	4>4-L	noc
		FIGURE: 21-4. Air distribution installation, heating and ventilation (Cont'd)			
119 119 120 121 121 122 122 123 124	AN960PD10L AN960JD10L 204-070-175-001 204-070-482-001 204-070-482-101 AN960JD516 NAS1149D0563J 204-070-176-001 AN960JD516L	WASHER (REPLACED BY AN960JD10L)WASHER (REPLACES AN960PD10L)MOUNTSELECTOR ASSY		1 0 1 1 1 1	
124 124 125 126 127 128 128 129	NAS1149D0516J 204-070-174-001 204-070-173-001 205-070-443-001 AN520-10R7 MS35207-262 AN960PD10L AN960JD10L	. WASHER (REPLACES AN960JD516L) . FLAPPER ASSY . FLAPPER ASSY . HANGER ASSY . SCREW (REPLACED BY MS35207-262) . SCREW (REPLACED BY MS95207-262) . WASHER (REPLACES AN960JD10L) . WASHER (REPLACES AN960JD10L)	4 1 1 3 3 3	1 1 1 6	
130	205-072-277-001 204-072-431-015	SENSOR (S/N 30504 THRU 30553)	1 1	1 1	

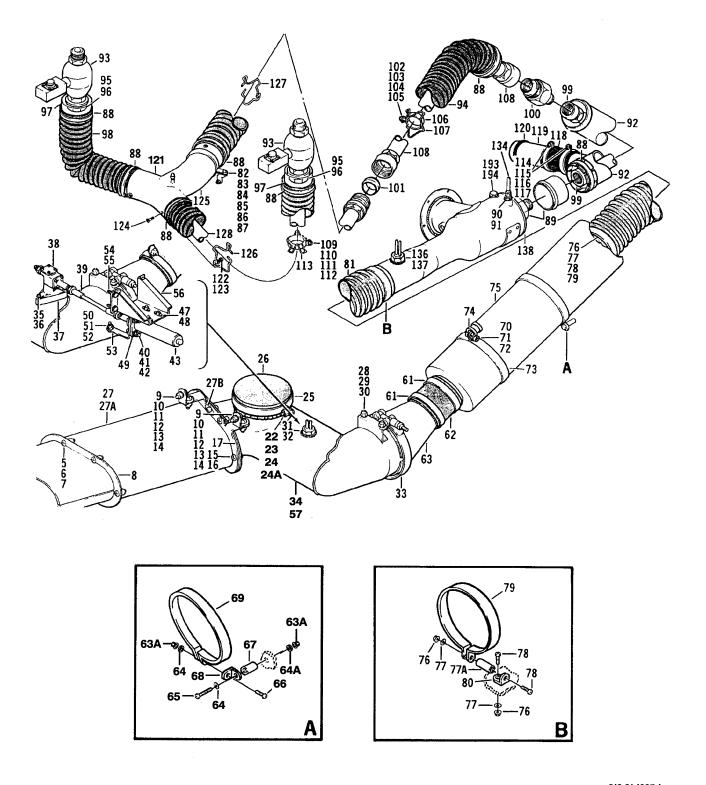

212-21-1005-1 C0001

Figure 21-5. Air distribution installation, heating and ventilation (Sheet 1 of 2)

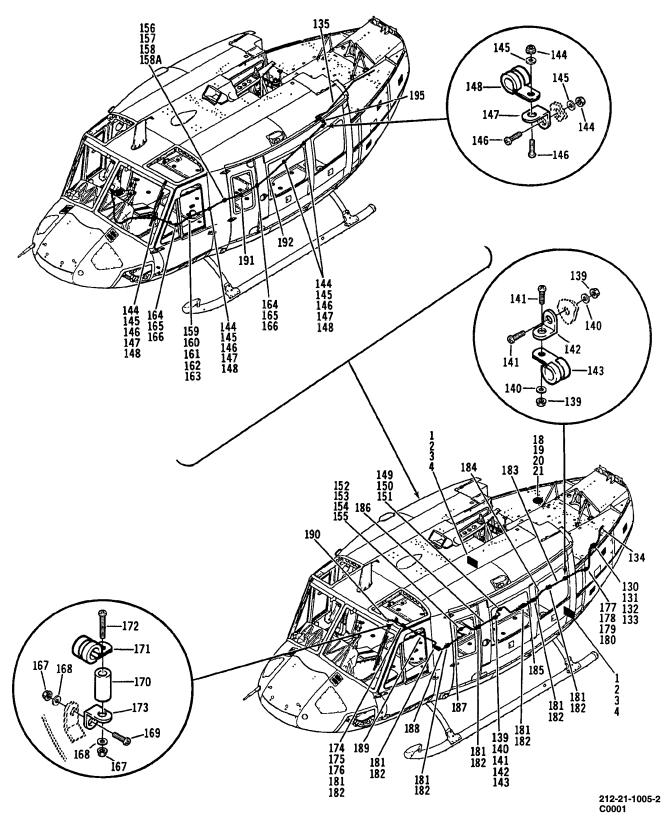


Figure 21-5. Air distribution installation, heating and ventilation (Sheet 2)

Rev. 1

(1)	(2)	(3)	(4)	(5)	(6)
INDEX NUMBER	PART NUMBER	ITEM NAME	UNIT PER ASSY	A V A I L	υου
		FIGURE: 21-5. Air distribution installation, heating and ventilation			
	212-070-400-003	AIR DISTRIBUTION, HEATING AND VENTILATION (S/N 30504 THRU 30553) (SEE FIG. 1, 3, 4 FOR BALANCE OF BREAKDOWN)	REF		
	212-070-400-005	AIR DISTRIBUTION, HEATING AND VENTILATION (S/N 30554 THRU 30596, 30604 THRU 30610) (SEE FIG. 1, 3, 4 FOR BALANCE OF BREAKDOWN)	REF		
	212-070-400-007	AIR DISTRIBUTION, HEATING AND VENTILATION (S/N 30597 THRU 30603, 30611 THRU 30679) (SEE FIG. 2, 3, 4 FOR BALANCE OF BREAKDOWN)	REF		
	212-070-400-013	AIR DISTRIBUTION, HEATING AND VENTILATION (S/N 30680 THRU 30755) (SEE FIG. 2, 3, 4 FOR BALANCE OF BREAKDOWN)	REF		
	212-070-400-011	AIR DISTRIBUTION, HEATING AND VENTILATION (S/N 30756 THRU 30859) (SEE FIG. 2, 3, 4 FOR BALANCE OF BREAKDOWN)	REF		
	212-070-400-015	AIR DISTRIBUTION, HEATING AND VENTILATION (S/N 30860 THRU 30969) (SEE FIG. 2, 3, 4 FOR BALANCE OF BREAKDOWN)	REF		
	212-070-400-101	AIR DISTRIBUTION, HEATING AND VENTILATION (S/N 30970 THRU 31311, 35001 THRU 35061) (SEE FIG. 2, 3, 4 FOR BALANCE OF BREAKDOWN)	REF		
	212-070-400-111	AIR DISTRIBUTION INSTL, HEATING AND VENTILATION (S/N 35062 THRU SUB) (SEE FIG. 2, 3, 4 FOR BALANCE OF BREAKDOWN)	REF		
1	AN520-10R8	SCREW (REPLACED BY MS35207-263)	16		
1	MS35207-263	.SCREW (REPLACES AN520-10R8)	16	1	
2	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	16		
2	AN960JD10L	.WASHER (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	16		
2	NAS1149D0332J	.WASHER (REPLACES AN960JD10L)	16		
3	NAS679A3	.NUT (REPLACED BY MS21042L3)	16		
3	MS21042L3	NUT (REPLACES NAS679A3)	16	1	
4   5	205-072-425-001 NAS679A3	PLATE, COVER   PLACED BY MS21042L3)   PLACED BY MS21042L3	2 6	1	
5	MS21042L3	NUT (REPLACES NAS679A3)	6	1	
6	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	6	-	
6	AN960JD10L	.WASHER (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	6		
6	NAS1149D0332J	.WASHER (REPLACES AN960JD10L)	6		
7	AN520-10R6	.SCREW (REPLACED BY MS35207-261)	6		
7	MS35207-261	.SCREW (REPLACES AN520-10R6)	6	1	
8	205-070-405-005	SUPPORT	1	1	
9	NAS679A3	.NUT (REPLACED BY MS21042L3)	4		
9	MS21042L3	.NUT (REPLACES NAS679A3)	4	1	
10	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	6		
10	AN960JD10L	.WASHER (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	6		
10	NAS1149D0332J AN960C10L	WASHER (REPLACES AN960JD10L)	6 2		

21-99-00

Page 36 Rev. 5

(1)	(2)	(3)	(4)	(5)	(6)
INDEX NUMBER	PART NUMBER	ITEM NAME	UNIT PER ASSY	A > A - L	000
		FIGURE: 21-5. Air distribution installation, heating and ventilation (Cont'd)			
11	NAS1149C0332R	.WASHER (REPLACES AN960C10L)	2	1	
12	AN520-10R7	.SCREW (REPLACED BY MS35207-262)	2		
12	MS35207-262	.SCREW (REPLACES AN520-10R7)	2	1	
13	AN520-10R6	.SCREW (REPLACED BY MS35207-261)	2		
13	MS35207-261	.SCREW (REPLACES AN520-10R6)	2	1	
14	AN743P12	.BRACKET	2	6	
15	AN520-10R6	.SCREW (REPLACED BY MS35207-261)	6		
15	MS35207-261	.SCREW (REPLACES AN520-10R6)	6	1	
16	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	6		
16	AN960JD10L	.WASHER (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	6		
16	NAS1149D0332J	.WASHER (REPLACES AN960JD10L)	6		
17	205-070-426-001	.GASKET	1	1	
18	NAS679A3	.NUT (REPLACED BY MS21042L3)	4		
18	MS21042L3	.NUT (REPLACES NAS679A3)	4	1	
19	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	4		
19	AN960JD10L	.WASHER (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	4		
19	NAS1149D0332J	.WASHER (REPLACES AN960JD10L)	4		
20	AN520-10R12	.SCREW (REPLACED BY MS35207-265)	4		
20	MS35207-265	.SCREW (REPLACES AN520-10R12)	4	1	
21	205-070-483-001	.COVER	1	1	
22	NAS679A3	.NUT (REPLACED BY MS21042L3)	1		
22	MS21042L3	.NUT (REPLACES NAS679A3)	1	1	
23	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	1		
23	AN960JD10L	.WASHER (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	1		
23	NAS1149D0332J	.WASHER (REPLACES AN960JD10L)	1		
24	AN520-10R18	.SCREW	1	1	
24A	NAS43DD3-45	.SPACER (USBL ON 212-070-400-111)	1		
25	AN735D80	.CLAMP	1	1	
26	205-072-426-001	.COVER	1	1	
27	205-070-406-011	.DUCT ASSY	1	1	
27A	205-070-406-013	INSULATION (REPLACED BY 150-026-145-180)	1	6	
27A	150-026-145-180	INSULATION (REPLACES 205-070-406-013)	1		
27B	NAS1068C3	NUTPLATE (REPLACED BY MS21076-3)	3		
27в	MS21076-3	NUTPLATE (REPLACES NAS1068C3)	3	1	
28	NAS679A3	.NUT (REPLACED BY MS21042L3)	2		
28	MS21042L3	.NUT (REPLACES NAS679A3)	2	1	
29	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	2		
29	AN960JD10L	.WASHER (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	2		
29	NAS1149D0332J	.WASHER (REPLACES AN960JD10L)	2		}
30	MS35207-262	.SCREW	2	1	
31	212-072-705-001	.SWITCH, TEMPERATURE CONTROL	1	1	
32	2-114S418-6	.PACKING, PREFORMED (REPLACED BY 2-114S613-60)	1		
32	2-114S613-60	.PACKING, PREFORMED (REPLACES 2-114S418-6) (REPLACED BY MS9068-114)	1		
32	MS9068-114	.PACKING, PREFORMED (REPLACES 2-114S613-60)	1		

(1)	(2)	(3)	(4)	(5)	(6)
INDEX NUMBER	PART NUMBER	ITEM NAME	UNIT PER ASSY	A V A I L	u o c
		FIGURE: 21-5. Air distribution installation, heating and ventilation (Cont'd)	-		
ll 33	24540-500	COUPLING (REPLACED BY 30-057-9)	1		
33	30-057-9	.COUPLING (REPLACES 24540-500) (REPLACED BY 30-057-23)	1		
33	30-057-23	.COUPLING (REPLACES 30-057-9)	1	1	
34	205-072-407-001	.PLENUM ASSY (S/N 30504 THRU 30553)	1	1	
35	MS35207-268	.SCREW (S/N 30554 THRU SUB)	3	1	
36	AN960PD10L	.WASHER (S/N 30554 THRU SUB) (REPLACED BY AN960JD10L)	3		
36	AN960JD10L	.WASHER (S/N 30554 THRU SUB) (REPLACES	3		
36	NAS1149D0332J	.WASHER (S/N 30554 THRU SUB) (REPLACES	3		
37	212-073-868-001	.SPACER (S/N 30554 THRU SUB)	1	1	
38	212-070-444-001	SENSOR (S/N 30554 THRU SUB)	1	1	
39	212-073-475-001	SHAFT ASSY, FLEX (S/N 30756 THRU SUB)	1 4	1 1	
40	MS21042L3 AN960PD10L	.NUT (S/N 30756 THRU SUB)	4	1	
41	AN960JD10L	AN960JD10L)  .WASHER (S/N 30756 THRU SUB) (REPLACES	4		
41	NAS1149D0332J	.WASHER (S/N 30756 THRU SUB) (REPLACES	4		
42	MS27039-1-09	SCREW (S/N 30756 THRU SUB)	4	1	
43	212-073-927-001	.MOTOR (S/N 30756 THRU SUB)	1	1	
44	DELETED				
45	DELETED				
46	DELETED				
47	MS27039-1-09	.SCREW (S/N 30756 THRU SUB)	4	1	
48	AN960JD10L	.WASHER (REPLACED BY NAS1149D0332J)	4		
48	NAS1149D0332J	.WASHER (REPLACES AN960JD10L)	4 1	1	
49	212-073-714-001	SUPPORT (S/N 30756 THRU SUB)	1	1 1	
50 51	MS21042L3 AN960PD10L	.NUT (S/N 30756 THRU SUB)	3	т	
51	AN960JD10L	AN960JD10L)  .WASHER (S/N 30756 THRU SUB) (REPLACES	3		
51	NAS1149D0332J	AN960PD10L) (REPLACED BY NAS1149D0332J)  .WASHER (S/N 30756 THRU SUB) (REPLACES	3		
52	MS35207-265	AN960JD10L)  SCREW (S/N 30756 THRU SUB)	1	1	
53	MS35207-265 120-055-1-6	BONDING STRIP (S/N 30756 THRU SUB)	1	1	
54	MS27039-1-07	SCREW (S/N 30756 THRU SUB)	4	1	
55	AN960PD10L	.WASHER (S/N 30756 THRU SUB) (REPLACED BY AN960JD10L)	4	4	
55	AN960JD10L	.WASHER (S/N 30756 THRU SUB) (REPLACES	4		
55	NAS1149D0332J	.WASHER (S/N 30756 THRU SUB) (REPLACES	4		
56 57	212-073-716-001 205-072-407-011	SUPPORT (S/N 30756 THRU SUB)	1 1	1 1	

21-99-00 Page 38

e 38 Rev. 5

(1)	(2)	(3)	(4)	(5)	(6)
INDEX	DADTAUMDED	ITEM NAME	UNIT PER	A V A	U
NUMBER	PART NUMBER	ITEM NAME	ASSY	Ĺ	C
		FIGURE: 21-5. Air distribution installation, heating and ventilation (Cont'd)			
58	DELETED				
59	DELETED				
60	DELETED				
61	AN737TM107	.CLAMP	2		
62	NAS520-24-12	.COUPLING	1	1	
63	205-072-408-001	.ADAPTER	1	1	
63A	MS21042L3	.NUT (S/N 35104 THRU SUB)	2	1	
64	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	2		
64	AN960JD10L	.WASHER (REPLACES AN960PD10L) (REPLACED BY	2		
		NAS1149D0332J)			
64	NAS1149D0332J	.WASHER (REPLACES AN960JD10L)	2		
64A	AN960PD10L	.WASHER (S/N 35104 THRU SUB) (REPLACED BY AN960JD10L)	1		
64A	AN960JD10L	.WASHER (S/N 35104 THRU SUB) (REPLACES	1		
		AN960PD10L) (REPLACED BY NAS1149D0332J)			
64A	NAS1149D0332J	.WASHER (S/N 35104 THRU SUB) (REPLACES	1		
65	AN520-10R18	.SCREW (S/N 30504 THRU 31311, 35001 THRU 35103)	1	1	
65	MS27039-1-17	.SCREW (S/N 35104 THRU SUB)	1	1	
66	AN520-10R6	.SCREW (S/N 30504 THRU 31311, 35001 THRU 35103)	1		
66	MS35207-261	(REPLACED BY MS35207-261) .SCREW (S/N 30504 THRU 31311, 35001 THRU 35103)	1	1	
	MG07030 1 07	(REPLACES AN520-10R6)		4	
66 67	MS27039-1-07 NAS43DD3-22	.SCREW (S/N 35104 THRU SUB)	1	1	ĺ
67	NAS43DD3-22 NAS43DD3-40N	SPACER (S/N 35104 THRU 51511, 35001 THRU 53103)	1	1	
68	AN743-12	BRACKET	1	1.	
69	AN735D80	.CLAMP	1	1	
70	NAS679A3	NUT (REPLACED BY MS21042L3)	1	-	
70	MS21042L3	.NUT (REPLACES NAS679A3)	1	1	
71	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	1	_	
71	AN960JD10L	.WASHER (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	1		
71	NAS1149D0332J	.WASHER (REPLACES AN960JD10L)	1		
72	AN520-10R6	.SCREW (REPLACED BY MS35207-261)	1		
72	MS35207-261	.SCREW (REPLACES AN520-10R6)	1	1	
73	AN735D80	.CLAMP	1	1	
74	MS21919DG4	.CLAMP (REPLACED BY MS21919WDG4)	1		
74	MS21919WDG4	.CLAMP (REPLACES MS21919DG4)	1	1	
75	204-070-540-003	.NOISE SUPPRESSOR	1	1	
76	NAS679A3	.NUT (REPLACED BY MS21042L3)	3		
76	MS21042L3	.NUT (REPLACES NAS679A3)	3	1	
77	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	3		
77	AN960JD10L	.WASHER (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	3		
77	NAS1149D0332J	.WASHER (REPLACES AN960JD10L)	3		
77A	120-099-3-12	SPACER	1		
78	AN520-10R12	SCREW (REPLACED BY MS35207-265)	3		
78	MS35207-265	SCREW (REPLACES AN520-10R12)	3	1	

(1)	(2)	(3)	(4)	(5)	(6)
INDEX NUMBER	PART NUMBER	ITEM NAME	UNIT PER ASSY	A A L	U O C
		FIGURE: 21-5. Air distribution installation, heating and ventilation (Cont'd)			
79	AN735D48	CLAMP	2	1	
80	AN743-12	BRACKET	1	1	
81	NAS1374A12SA022	.HOSE (REPLACED BY NAS1375A12SA022)	1	0	
81	NAS1375A12SA022	.HOSE (REPLACES NAS1374A12SA022)	1	1	
82	NAS679A3	.NUT (REPLACED BY MS21042L3)	1		
82	MS21042L3	.NUT (REPLACES NAS679A3)	1	1	
83	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	2		
83	AN960JD10L	.WASHER (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	2		
83	NAS1149D0332J	.WASHER (REPLACES AN960JD10L)	2		
84	AN520-10R10	.SCREW (REPLACED BY MS35207-264)	1	0	
84	MS35207-264	.SCREW (REPLACES AN520-10R10)	1	1	
85	AN520-10R7	SCREW (REPLACED BY MS35207-262)	1		
85	MS35207-262	.SCREW (REPLACES AN520-10R7)	1	1	
86	20-032-1	BRACKET	1	1	
87	MS21104D40	.CLAMP (REPLACED BY MS21919WDG40)	1	0	
87	MS21919WDG40	.CLAMP (REPLACES MS21104D40)	1	1	
88	AN737TW91	.CLAMP (S/N 30504 THRU 30553)	7	1	
88	MS21920-22	.CLAMP (S/N 30554 THRU 30969)	7	1	
89	212-070-463-003	.CAP (S/N 30504 THRU 30553)	1	0	
89	212-070-463-005	.CAP (S/N 30554 THRU 30969)	1	1	
90	AN924-16D	.NUT (S/N 30554 THRU 30969)	1	1	
91	AN960PD2116L	.WASHER (REPLACED BY AN960JD2116L)	2		
91	AN960JD2116L	.WASHER (REPLACES AN960PD2116L) (REPLACED BY	2	1	
01	NA G1140D0116 T	NAS1149D2116J)			
91 92	NAS1149D2116J 212-070-471-001	.WASHER (REPLACES AN960JD2116L)	2 1	1	
92	209-072-433-001	.ADAPTER (S/N 30504 THRU 30969)	$\frac{1}{2}$	1	
93		.VALVE ASSY (S/N 30504 THRU 30755) (REPLACED BY 209-072-433-005 AND -007)	_	Ū	
93	209-072-433-005	.VALVE ASSY (S/N 30504 THRU 30969) (REPLACES 209-072-433-001) (REPLACED BY 209-072-433-007)	2	0	
93	209-072-433-007	.VALVE ASSY (REPLACES 209-072-433-001 AND -005)	2		
		(ALTERNATE PARTS)			
93	209-072-433-009 209-072-433-105	.VALVE ASSY	2 2	0	
93	NAS1375A10SM095	.VALVE ASSY	1	1 1	
94	NAS13/5A10SM095 AN924-16	.HOSE (S/N 30504 THRU 30969)	2	1	
95	AN924-16 AN960C2116	.NUT	4	Τ.	
96	NAS1149C2190R	.WASHER (REPLACES AN960C2116)	$\begin{bmatrix} 4\\4 \end{bmatrix}$		
97	212-070-463-001	.WASHER (REPLACES AN980C2116)	2	0	
97	212-070-463-007	.CAP (S/N 30554 THRU 30969)	2	1	
98	NAS1375A10SM062	.HOSE (S/N 30504 THRU 30969)	2	1	
99	212-070-482-001	.TUBE ASSY (S/N 30504 THRU 30553)	1	-	
99	212-070-482-005	TUBE ASSY (S/N 30554 THRU 30969) (REPLACED BY 212-070-482-007)	1		
99	212-070-482-007	.TUBE ASSY (S/N 30554 THRU SUB) (REPLACES	1	1	
100	212-070-451-001	FITTING	1	1	
101	NAS595-24E	RETAINER	1	1	

21-99-00 Page 40

40 Rev. 5

(1)	(2)	(3)	(4)	(5)	(6)
INDEX NUMBER	PART NUMBER	ITEM NAME	UNIT PER ASSY	A > A - L	500
		FIGURE: 21-5. Air distribution installation, heating and ventilation (Cont'd)			
102	NAS679A3	.NUT (S/N 30504 THRU 30969) (REPLACED BY	1		
102	MS21042L3	.NUT (S/N 30504 THRU 30969) (REPLACES NAS679A3)	1	1	
103	AN960PD10L	.WASHER (S/N 30504 THRU 30969) (REPLACED BY AN960JD10L)	1		
103	AN960JD10L	.WASHER (S/N 30504 THRU 30969) (REPLACES	1		
103	NAS1149D0332J	.WASHER (S/N 30504 THRU 30969) (REPLACES AN960JD10L)	1		
104	AN520-10R14	.SCREW (S/N 30504 THRU 30596, 30604 THRU 30610) (REPLACED BY MS35207-266)	1		
104	MS35207-266	.SCREW (S/N 30504 THRU 30596, 30604 THRU 30610) (REPLACES AN520-10R14)	1	1	
105	AN520-10R8	.SCREW (S/N 30597 THRU 30603, 30611 THRU 30969) (REPLACED BY MS35207-263)	1		
105	MS35207-263	.SCREW (S/N 30597 THRU 30603, 30611 THRU 30969) (REPLACES AN520-10R8)	1	1	I
106	30-016A6	.CLAMP (S/N 30504 THRU 30596, 30604 THRU 30610)	1	1	ı
106	AN735-26	.CLAMP (S/N 30597 THRU 30603, 30611 THRU 30969)	1	1	ı
107	212-070-460-007	.SPACER (S/N 30504 THRU 30969)	1	1	ı
108	212-070-477-001	.TUBE (S/N 30504 THRU 30969) (REPLACED BY	1		ı
108	212-073-484-001	.TUBE (REPLACES 212-070-477-001)	1	1	
109	NAS679A3	.NUT (S/N 30504 THRU 30969) (REPLACED BY	2		
109	MS21042L3	.NUT (S/N 30504 THRU 30969) (REPLACES NAS679A3)	2	1	
110	AN960PD10L	.WASHER (S/N 30504 THRU 30969) (REPLACED BY AN960JD10L)	2		
110	AN960JD10L	.WASHER (S/N 30504 THRU 30969) (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	2		
110	NAS1149D0332J	.WASHER (S/N 30504 THRU 30969) (REPLACES AN960JD10L)	2		
111	AN520-10R8	.SCREW (S/N 30504 THRU 30969) (REPLACED BY MS35207-263)	2		
111	MS35207-263	.SCREW (S/N 30504 THRU 30969) (REPLACES AN520-10R8)	2	1	
112	AN735D18	.CLAMP (S/N 30504 THRU 30969)	2	1	
113	212-070-460-005	.SPACER (S/N 30504 THRU 30969)	2	1	
114	MS21042L3	.NUT (S/N 30504 THRU 30969)	2	1	
115	AN960PD10L	.WASHER (S/N 30504 THRU 30969) (REPLACED BY AN960JD10L)	2		
115	AN960JD10L	.WASHER (S/N 30504 THRU 30969) (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	2		
115	NAS1149D0332J	.WASHER (S/N 30504 THRU 30969) (REPLACES AN960JD10L)	2		
116	MS35207-265	.SCREW (S/N 30504 THRU 30969)	2	1	
117	30-016A8	.CLAMP (S/N 30504 THRU 30969)	2	1	
118	NAS520-16-10	.COUPLING (S/N 30504 THRU 30969)	1	1	
119	212-070-472-001	.TUBE ASSY (S/N 30504 THRU 30969)	1	1	

(1)	(2)	(3)	(4)	(5)	(6)
INDEX NUMBER	PART NUMBER	ITEM NAME	UNIT PER ASSY	A A L	noc
		FIGURE: 21-5. Air distribution installation, heating and ventilation (Cont'd)			
120	MS35489-27	GROMMET (S/N 30504 THRU 30969)	1	1	
121	212-070-459-005	.TUBE ASSY (S/N 30504 THRU 30553)	1		
121	212-070-459-007	.TUBE ASSY (S/N 30554 THRU 30969)	1	1	
122	NAS679A3	NUT (REPLACED BY MS21042L3)	3		
122	MS21042L3	NUT (REPLACES NAS679A3)	3	1	
123	AN960PD10L	WASHER (REPLACED BY AN960JD10L)	3		
123	AN960JD10L	WASHER (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	3		
123	NAS1149D0332J	WASHER (REPLACES AN960JD10L)	3		
124	AN520-10R8	SCREW (REPLACED BY MS35207-263)			
124	MS35207-263	SCREW (REPLACES AN520-10R8)		1	
125	212-070-461-003	ADAPTER ASSY	1	6	
126	212-070-460-005	SPACER	2	1	
127	212-070-460-007	SPACER	1	1	
128	212-070-449-007	TUBE ASSY (S/N 30504 THRU 30553) (REPLACED BY 212-070-449-011 AND -017)	1		
128	212-070-449-011	TUBE ASSY (S/N 30504 THRU 30969) (REPLACES 212-070-449-007) (REPLACED BY 212-070-449-017)	1		
128	212-070-449-017	TUBE ASSY (REPLACES 212-070-449-007 AND -011)	1	1	
129	DELETED	(S/N 30970 THRU SUB)			
130	NAS679A3	.NUT (S/N 30504 THRU 30553) (REPLACED BY	1		
130	MS21042L3	.NUT (S/N 30504 THRU 30553) (REPLACES NAS679A3)	1	1	
131	AN960PD10L	.WASHER (S/N 30504 THRU 30553) (REPLACED BY AN960JD10L)	1		
131	AN960JD10L	.WASHER (S/N 30504 THRU 30553) (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	1		
131	NAS1149D0332J	.WASHER (S/N 30504 THRU 30553) (REPLACES AN960JD10L)	1		
132	AN520-10R8	.SCREW (S/N 30504 THRU 30553) (REPLACED BY MS35207-263)	1		
132	MS35207-263	.SCREW (S/N 30504 THRU 30553) (REPLACES	1	1	
133	MS21919DG4	.CLAMP (S/N 30504 THRU 30553) (REPLACED BY	1		
133	MS21919WDG4	.CLAMP (S/N 30504 THRU 30553) (REPLACES	1	1	
134	205-072-278-001	.TUBE ASSY (S/N 30504 THRU 30553)	1	1	
135	212-073-866-001	.TUBE ASSY (S/N 30554 THRU SUB)	1	1	
136	212-072-705-001	.SWITCH	1	1	
137	2-114S418-6	.PACKING, PREFORMED (REPLACED BY 2-114S613-60)	1		
137	2-114s613-60	.PACKING, PREFORMED (REPLACES 2-114S418-6) (REPLACED BY MS9068-114)	1		
137	MS9068-114	.PACKING, PREFORMED (REPLACES 2-114S613-60)	1		
138	205-072-277-009	.MIXING VALVE	1	1	
139	MS21042L3	.NUT (S/N 30504 THRU 30553)	4	1	
140	AN960JD10L	.WASHER (S/N 30504 THRU 30553) (REPLACED BY NAS1149D0332J)	4		

(1)	(2)	(3)	(4)	(5)	(6)
INDEX NUMBER	PART NUMBER	ITEM NAME	UNIT PER ASSY	A V A - L	n 0 0
		FIGURE: 21-5. Air distribution installation, heating and ventilation (Cont'd)			
140	NAS1149D0332J	.WASHER (S/N 30504 THRU 30553) (REPLACES AN960JD10L)	4		
141	AN520-10R7	.SCREW (S/N 30504 THRU 30553) (REPLACED BY	4		
141	MS35207-262	.SCREW (S/N 30504 THRU 30553) (REPLACES	4	1	
142	AN743-12	.BRACKET (S/N 30504 THRU 30553)	2	1	
143	MS21919DG4	.CLAMP (S/N 30504 THRU 30553) (REPLACED BY MS21919WDG4)	2		
143	MS21919WDG4	.CLAMP (S/N 30504 THRU 30553) (REPLACES	2	1	
144	NAS679A3	.NUT (S/N 30554 THRU SUB) (REPLACED BY MS21042L3)	10		1
144	MS21042L3	.NUT (S/N 30554 THRU SUB) (REPLACES NAS679A3)	10	1	1
145	AN960PD10L	.WASHER (S/N 30554 THRU SUB) (REPLACED BY AN960JD10L)	10		
145	AN960JD10L	.WASHER (S/N 30554 THRU SUB) (REPLACES	10		
145	NAS1149D0332J	.WASHER (S/N 30554 THRU SUB) (REPLACES	10		
146	AN520-10R6	.SCREW (S/N 30554 THRU SUB) (REPLACED BY	10		
146	MS35207-261	.SCREW (S/N 30554 THRU SUB) (REPLACES AN520-10R6)	10	1	
147	AN743-12	.BRACKET (S/N 30554 THRU SUB)	5	1	
148	MS25281R5	.CLAMP (S/N 30554 THRU SUB) (REPLACED BY	5		
148	MS25281-R5	.CLAMP (S/N 30554 THRU SUB) (REPLACES MS25281R5)	5	1	
149	AN520-10R6	.SCREW (S/N 30504 THRU 30553) (REPLACED BY MS35207-261)	1		
149	MS35207-261	.SCREW (S/N 30504 THRU 30553) (REPLACES AN520-10R6)	1	1	
150	AN960PD10L	.WASHER (S/N 30504 THRU 30553) (REPLACED BY AN960JD10L)	1		
150	AN960JD10L	.WASHER (S/N 30504 THRU 30553) (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	1		
150	NAS1149D0332J	.WASHER (S/N 30504 THRU 30553) (REPLACES AN960JD10L)	1		
151	MS21919DG4	.CLAMP (S/N 30504 THRU 30553) (REPLACED BY MS21919WDG4)	1		
151	MS21919WDG4	.CLAMP (S/N 30504 THRU 30553) (REPLACES	1	1	
152	AN520-10R6	.SCREW (S/N 30504 THRU 30553) (REPLACED BY	1		
152	MS35207-261	.SCREW (S/N 30504 THRU 30553) (REPLACES	1	1	
153	AN960PD10L	.WASHER (S/N 30504 THRU 30553) (REPLACED BY AN960JD10L)	1		
153	AN960JD10L	.WASHER (S/N 30504 THRU 30553) (REPLACES	1		

**GENUINE BELL PARTS ARE YOUR BEST VALUE** 

(1)	(2)	(3)	(4)	(5)	(6)
INDEX NUMBER	PART NUMBER	ITEM NAME	UNIT PER ASSY	A V A I L	UOC
		FIGURE: 21-5. Air distribution installation, heating and ventilation (Cont'd)			
153	NAS1149D0332J	.WASHER (S/N 30504 THRU 30553) (REPLACES AN960JD10L)	1		
154	NAS43DD3-64	.SPACER (S/N 30504 THRU 30553)	1		
155	MS21919DG4	.CLAMP (S/N 30554 THRU SUB) (REPLACED BY MS21919WDG4)	1		
155	MS21919WDG4	.CLAMP (S/N 30554 THRU SUB) (REPLACES MS21919DG4)	1	1	
156	AN520-10R22	.SCREW (S/N 30554 THRU SUB)	1	1	
157	AN960PD10L	.WASHER (S/N 30554 THRU SUB) (REPLACED BY AN960JD10L)	1		
157	AN960JD10L	.WASHER (S/N 30554 THRU SUB) (REPLACES	1		
157	NAS1149D0332J	AN960PD10L) (REPLACED BY NAS1149D0332J) .WASHER (S/N 30554 THRU SUB) (REPLACES AN960JD10L)	1		
158	NAS43DD3-64	SPACER (S/N 30554 THRU SUB)	1		ļ
158A	MS25281-R5	.CLAMP (S/N 30554 THRU SUB)	_	1	
159	NAS679A3	.NUT (S/N 30554 THRU SUB) (REPLACED BY MS21042L3)		_	
159	MS21042L3	.NUT (S/N 30554 THRU SUB) (REPLACES NAS679A3)	1	1	
160	AN960PD10L	.WASHER (S/N 30554 THRU SUB) (REPLACED BY AN960JD10L)	1		
160	AN960JD10L	.WASHER (S/N 30554 THRU SUB) (REPLACES	1		
160	NAS1149D0332J	.WASHER (S/N 30554 THRU SUB) (REPLACES	1		
161	AN520-10R6	.SCREW (S/N 30554 THRU SUB) (REPLACED BY	1		
161	MS35207-261	.SCREW (S/N 30554 THRU SUB) (REPLACES AN520-10R6)	1	1	
162	MS21919DG40	.CLAMP (S/N 30554 THRU SUB) (REPLACED BY	1	0	
162	MS21919WDG40	.CLAMP (S/N 30554 THRU SUB) (REPLACES	1	1	
163	MS25281R5	.CLAMP (S/N 30554 THRU SUB) (REPLACED BY	1		
163	MS25281-R5	.CLAMP (S/N 30554 THRU SUB) (REPLACES MS25281R5)	1	1	
164	AN520-10R6	.SCREW (S/N 30554 THRU SUB) (REPLACED BY	2		
164	MS35207-261	.SCREW (S/N 30554 THRU SUB) (REPLACES AN520-10R6)	2	1	
165	AN960PD10L	.WASHER (S/N 30554 THRU SUB) (REPLACED BY AN960JD10L)	2		
165	AN960JD10L	.WASHER (S/N 30554 THRU SUB) (REPLACES	2		
165	NAS1149D0332J	.WASHER (S/N 30554 THRU SUB) (REPLACES	2		
166	MS25281R5	.CLAMP (S/N 30554 THRU SUB) (REPLACED BY	2		
166	MS25281-R5	.CLAMP (S/N 30554 THRU SUB) (REPLACES MS25281R5)	2	1	
167	NAS679A3	.NUT (S/N 30504 THRU 30553) (REPLACED BY	2		
167	MS21042L3	.NUT (S/N 30504 THRU 30553) (REPLACES NAS679A3)	2	1	

21-99-00 Page 44

Rev. 5

(1)	(2)	(3)	(4)	(5)	(6)
INDEX NUMBER	PART NUMBER	ITEM NAME	UNIT PER ASSY	A V A – L	υου
		FIGURE: 21-5. Air distribution installation, heating and ventilation (Cont'd)			
168	AN960PD10L	.WASHER (S/N 30504 THRU 30553) (REPLACED BY AN960JD10L)	2		
168	AN960JD10L	.WASHER (S/N 30504 THRU 30553) (REPLACES	2		
168	NAS1149D0332J	.WASHER (S/N 30504 THRU 30553) (REPLACES	2		
169	AN520-10R28	.SCREW (S/N 30504 THRU 30553) (REPLACED BY	1		
169	MS35207-270	.SCREW (S/N 30504 THRU 30553) (REPLACES	1	1	
170	NAS43DD3-76	.SPACER (S/N 30504 THRU 30553)	1		
171	MS21919DG6	.CLAMP (S/N 30504 THRU 30553) (REPLACED BY MS21919WDG6)	1		
171	MS21919WDG6	.CLAMP (S/N 30504 THRU 30553) (REPLACES	1	1	
172	AN520-10R6	.SCREW (S/N 30504 THRU 30553) (REPLACED BY MS35207-261)	1		
172	MS35207-261	.SCREW (S/N 30504 THRU 30553) (REPLACES AN520-10R6)	1	1	
173	20-032-1	.BRACKET (S/N 30504 THRU 30553)	1	1	
174	AN520-10R6	.SCREW (S/N 30504 THRU 30553) (REPLACED BY MS35207-261)	2		
174	MS35207-261	.SCREW (S/N 30504 THRU 30553) (REPLACES AN520-10R6)	2	1	
175	AN960PD10L	.WASHER (S/N 30504 THRU 30553) (REPLACED BY AN960JD10L)	2		İ
175	AN960JD10L	.WASHER (S/N 30504 THRU 30553) (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	2		
175	NAS1149D0332J	.WASHER (S/N 30504 THRU 30553) (REPLACES AN960JD10L)	2		l
176	205-072-413-001	BRACKET (S/N 30504 THRU 30553)	1	6	ı
177	AN832-4D	.UNION (S/N 30504 THRU 30553)	1	1	ı
178	AN924-4	.NUT (S/N 30504 THRU 30553)	1	1	ı
179	AN960PD716	.WASHER (S/N 30504 THRU 30553) (REPLACED BY AN960JD716)	2		
179	AN960JD716	.WASHER (S/N 30504 THRU 30553) (REPLACES AN960PD716) (REPLACED BY NAS1149D0763J)	2	1	
179	NAS1149D0763J	.WASHER (S/N 30504 THRU 30553) (REPLACES	2		
180	AN960PD716L	.WASHER (S/N 30504 THRU 30553) (REPLACED BY AN960JD716L)	1	1	
180	AN960JD716L	.WASHER (S/N 30504 THRU 30553) (REPLACES AN960PD716L) (REPLACED BY NAS1149D0716J)	1	1	
180	NAS1149D0716J	.WASHER (S/N 30504 THRU 30553) (REPLACES AN960JD716L)	1		
181	AN924-4D	.NUT (S/N 30504 THRU 30553)	7	1	
182	AN832-4D	.UNION (S/N 30504 THRU 30553)	7	1	
183	205-070-490-001	.TUBE ASSY (S/N 30504 THRU 30553)	1	1	
184	205-070-489-001	.TUBE ASSY (S/N 30504 THRU 30553)	1	1	

(1)	(2)	(3)	(4)	(5)	(6)
INDEX NUMBER	PART NUMBER	ITEM NAME	UNIT PER ASSY	A V A I L	200
		FIGURE: 21-5. Air distribution installation, heating and ventilation (Cont'd)			
185	205-070-488-001	.TUBE ASSY (S/N 30504 THRU 30553)	1	6	
186	205-070-487-001	.TUBE ASSY (S/N 30504 THRU 30553)	1	6	
187	205-070-486-001	.TUBE ASSY (S/N 30504 THRU 30553)	1	6	
188	205-070-485-001	TUBE ASSY (S/N 30504 THRU 30553)	1	6	
189	205-070-484-001	.TUBE ASSY (S/N 30504 THRU 30553)	1	6	
190	S20204-2000	.HOSE ASSY (S/N 30504 THRU 30553) (REPLACED BY	1		
190	70-031A200-000	.HOSE ASSY (S/N 30504 THRU 30553) (REPLACES	1	1	
191	MS35489-7	.GROMMET (S/N 30554 THRU 30755)	1	1	
192	CB1620-7	.FLEX SHAFT ASSY (S/N 30554 THRU 30755) (REPLACED BY 212-070-493-101)	1	0	
192	212-070-493-101	.FLEX SHAFT ASSY (REPLACES CB1620-7)	1	1	
193	AN806D4	.PLUG (REPLACED BY AN806-D4)	1	1	
193	AN806-D4	.PLUG (REPLACES AN806D4)	1		
194	MS9385-04	.PACKING, PREFORMED	1	1	
195	MS35489-123	.GROMMET	1	1	

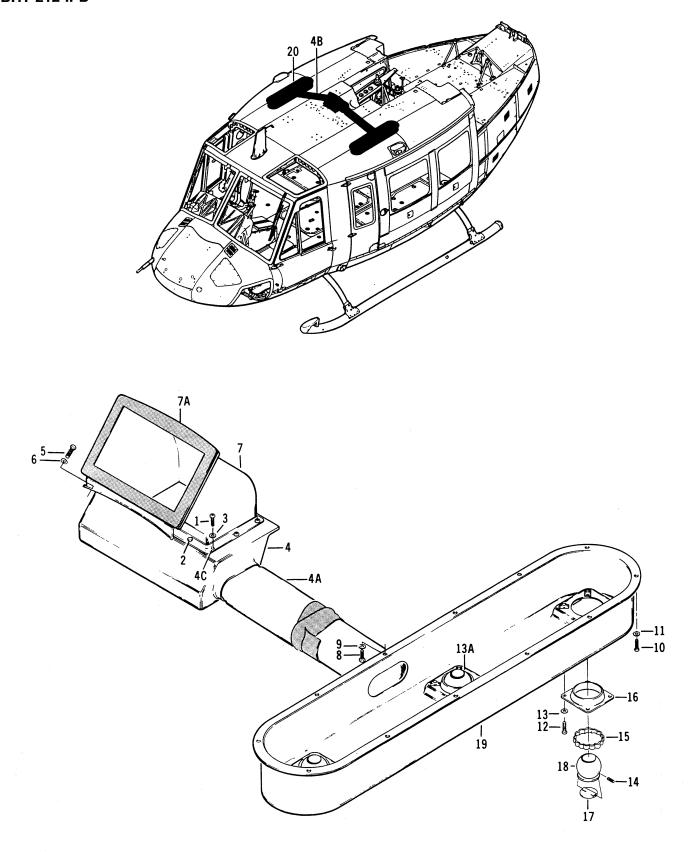


Figure 21-6. Air vent system installation, cabin roof (30504 thru 30553)

(1)	(2)	(3)	(4)	(5)	(6)
INDEX NUMBER	PART NUMBER	ITEM NAME	UNIT PER ASSY	A - L	000
		FIGURE: 21-6. Air vent system installation, cabin roof (30504 thru 30553)			
	212-070-480-003	AIR VENT SYSTEM INSTL, CABIN ROOF (S/N 30504 THRU	1		
1 2 3 3 4 4A 4B 4C 5 5 6 7 7 8 9 10 11 12 13 13 14 15 16 17 18 19 20	212-070-480-003  MS27039-1-09 AN3-4 AN960PD10L AN960JD10L 212-070-437-011 212-070-437-017 212-070-437-019 NAS1068A3 MS21075L3 AN520-10R7 MS35207-262 AN960D10L 212-070-435-003 212-070-436-003 AN3-3A AN960D10L AN520-10R8 MS35207-263 AN960D10L AN520-416R12 MS35207-281 AN960D416L 204-072-465-001 AN565B6H6 204-072-199-001 204-072-463-001 204-072-462-001 212-070-438-002	AIR VENT SYSTEM INSTL, CABIN ROOF (S/N 30504 THRU 30553)  SCREW BOLT WASHER (REPLACED BY AN960JD10L) PLENUM ASSY .TUBE .NUTPLATE (REPLACED BY MS21075L3) .NUTPLATE (REPLACED BY MS21075L3) .NUTPLATE (REPLACED BY MS35207-262) .SCREW (REPLACED BY MS35207-262) .SCREW (REPLACES AN520-10R7) WASHER .DUCT ASSY, INLET .SEAL .BOLT .WASHER .SCREW (REPLACED BY MS35207-263) .SCREW (REPLACED BY MS35207-263) .SCREW (REPLACED BY MS35207-281)	1 9 3 12 12 1 1 1 1 2 2 2 2 2 2 2 2 2 2 2 2		

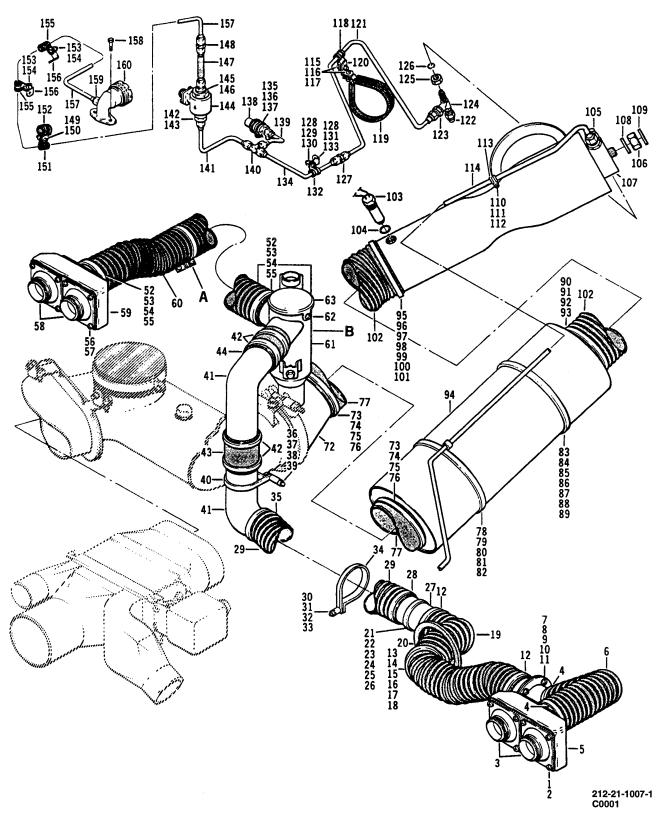


Figure 21-7. Winterization heater kit (Sheet 1 of 2)

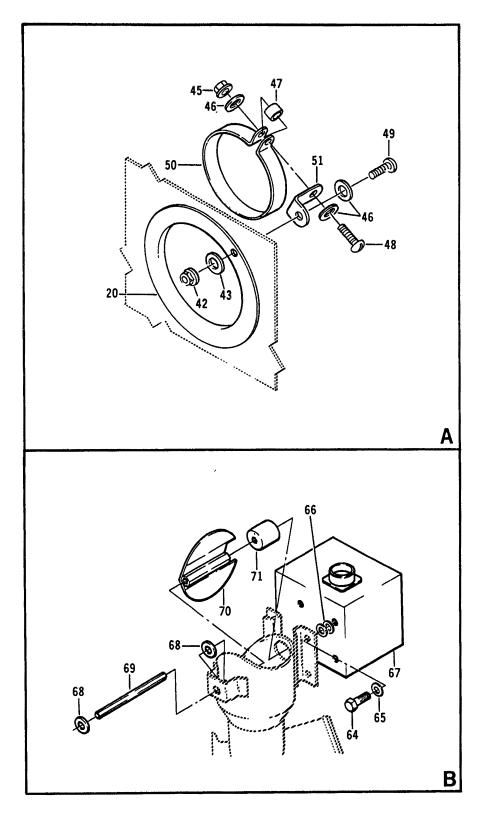


Figure 21-7. Winterization heater kit (Sheet 2)

212-21-1007-2 C0001

(1)	(2)	(3)	(4)	(5)	(6)
INDEX NUMBER	PART NUMBER	ITEM NAME	UNIT PER ASSY	A L	U O C
		FIGURE: 21-7. Winterization heater kit			
	212-706-008-001	WINTERIZATION HEATER KIT	1	0	
	212-706-008-103	WINTERIZATION HEATER KIT (S/N 30554 THRU SUB) (REPLACED BY 212-706-008-109)	1	0	
	212-706-008-109	WINTERIZATION HEATER KIT (REPLACES	1	1	
1	AN520-10R10	.SCREW (REPLACED BY MS35207-264) (USBL ON	8	0	
1	MS35207-264	212-706-008-001) .SCREW (REPLACES AN520-10R10) (USBL ON	8	0	
1	W225015 56	212-706-008-001)			
1 2	MS35215-56	.SCREW (USBL ON 212-706-008-103 AND -109)	8	1	
_	AN960JD10L	.WASHER (REPLACED BY NAS1149D0332J) (USBL ON 212-706-008-001)	8		
2	NAS1149D0332J	.WASHER (REPLACES AN960JD10L) (USBL ON	8		
2	AN960XC10L	.WASHER (REPLACED BY NAS1149C0332B) (USBL ON 212-706-008-103 AND -109)	8	1	
2	NAS1149C0332B	.WASHER (REPLACES AN960XC10L) (USBL ON	8	1	
3	204-070-483-001	212-706-008-103 AND -109)			
3	204-070-483-001	.VALVE ASSY (USBL ON 212-706-008-001)	2	1	
4	AN737TW91		2	1	i i
5	205-070-424-005	CLAMP	2	1	li
6	NAS1375A10SA044	.HOSE	1	1	
7	AN3-3A	BOLT	2	1 1	
8	MS27039-1-06	SCREW	4	1	] ]
9	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	6	1	
9	AN960JD10L	.WASHER (REPLACES AN960PD10L)	6		li
10	205-032-112-019	SEAL	1	1	
11	205-072-301-001	.ELBOW ASSY	1	1	
12	AN737TW91	.CLAMP	2	1	
13	NAS679A3	.NUT (REPLACED BY MS21042L3)	1	1	
13	MS21042L3	.NUT (REPLACES NAS679A3)	1		
14	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	2		
14	AN960JD10L	.WASHER (REPLACES AN960PD10L)	2		
15	AN520-10R14	SCREW (REPLACED BY MS35207-266) (USBL ON	1		
15	MS35207-266	.SCREW (REPLACES AN520-10R14) (USBL ON	1		
15	AN520-10R32	212-706-008-001) .SCREW (REPLACED BY MS35207-271) (USBL ON	1		
15	MS35207-271	212-706-008-103 AND -109) .SCREW (REPLACES AN520-10R32) (USBL ON	1		
1.5	34001010404ma+0	212-706-008-103 AND -109)			
16	MS21919WDG40	.CLAMP	1	1	
17 17	NAS43DD3-48	SPACER (REPLACED BY NAS43DD3-50)	1		
18	NAS43DD3-50 NAS43DD3-20	.SPACER (REPLACES NAS43DD3-48)	1	1	
19	NAS1375A10SA090	SPACER	1	اہرا	
20	110-076-1-13-2	EXTRUSION (MAKE FROM 110-076-1)	1	6	
20	110-076-1	EXTRUSION (MAKE FROM 110-076-1)	2 2	0	
21	NAS679A3	.NUT (REPLACED BY MS21042L3)	2	ا ۲	
			4		

(1)	(2)	(3)	(4)	(5) A	(6)
INDEX NUMBER	PART NUMBER	ITEM NAME	UNIT PER ASSY	A V A I L	υoc
		FIGURE: 21-7. Winterization heater kit (Cont'd)			
21	MS21042L3	.NUT (REPLACES NAS679A3)	2		
22	AN960PD10L	.WASHER (REPLACED BY AN960JD10L) (USBL ON	2		
22	AN960JD10L	.WASHER (REPLACES AN960PD10L) (USBL ON	2		
23	AN520-10R8	212-706-008-001 AND -103) .SCREW (S/N 30554 THRU 31287) (REPLACED BY	1		
23	MS35207-263	MS35207-263) (USBL ON 212-706-008-001 AND -103) .SCREW (S/N 30554 THRU 31287) (REPLACES	1		
		AN520-10R8) (USBL ON 212-706-008-001 AND -103)			
24	AN520-10R12	.SCREW (REPLACED BY MS35207-265) (USBL ON	1		
24	MS35207-265	SCREW (REPLACES AN520-10R12) (USBL ON	1		
25	MS21919DG40	.CLAMP (REPLACED BY MS21919WDG40) (USBL ON	1	0	
25	MS21919WDG40	.CLAMP (REPLACES MS21919DG40) (USBL ON	1	0	
26	20-032-1	212-706-008-001 AND -103) BRACKET (USBL ON 212-706-008-001 AND -103)	2	1	
27	205-072-464-001	UNION (S/N 30504 THRU 31287)	1	1	
28	AN737TW91	CLAMP	2	1	
29	NAS1375A10SA100	HOSE	1	1	
30	NAS679A3	.NUT (REPLACED BY MS21042L3)	1	1	
30	MS21042L3	.NUT (REPLACES NAS679A3)	1		
31	AN960PD10L				
31	AN960JD10L	.WASHER (REPLACED BY AN960JD10L)	1		
32	NAS43DD3-50	, , , , , , , , , , , , , , , , , , , ,	1		
33	AN520-10R24	SPACER	1	1	
33		SCREW (REPLACED BY MS35207-269)	1		
34	MS35207-269	SCREW (REPLACES AN520-10R24)			
	MS21919DG40	.CLAMP (REPLACED BY MS21919WDG40)	1	0	
34 35	MS21919WDG40	.CLAMP (REPLACES MS21919DG40)	1	0	
36	AN737TW91	.CLAMP	2	1	
	NAS679A3	.NUT (REPLACED BY MS21042L3)	1		
36 37	MS21042L3	.NUT (REPLACES NAS679A3)	1		
37	AN960PD10L AN960JD10L	.WASHER (REPLACED BY AN960JD10L)	1		
38	NAS43DD3-48	.WASHER (REPLACES AN960PD10L)	1		
38	NAS43DD3-46 NAS43DD3-50	.SPACER (REPLACED BY NAS43DD3-50)	1		
38	AN520-10R22	.SPACER (REPLACES NAS43DD3-48)	1	1	
40	MS21919DG40	.SCREW	1	1	
40	MS21919DG40 MS21919WDG40	· ·	1	0	
41	205-070-464-003	CLAMP (REPLACES MS21919DG40)	1	0	
42	AN737TW91	CLAMP	2 4	1 1	
43	NAS520-20-12	COUPLING	1	1	
44	NAS520-20-12 NAS520-20-17	COUPLING (REPLACED BY NAS520-20-24)	1	0	
44	NAS520-20-17	COUPLING (REPLACES NAS520-20-17)	1	1	
45	NAS679A3	NUT (REPLACED BY MS21042L3)	2	_	
45	MS21042L3	. NOT (REPLACED BY MS21042L3)	2		
46	AN960PD10L		_		İ
46	AN960JD10L	. WASHER (REPLACED BY AN960JD10L)	4		
47	NAS43DD3-12	.WASHER (REPLACES AN960PD10L)	4		
- z /	MUD42DD2_TQ	SFACEA,	1	- 1	


(1)	(2)	(3)	(4)	(5)	(6)
INDEX NUMBER	PART NUMBER	ITEM NAME	UNIT PER ASSY	A V A - L	noc
		FIGURE: 21-7. Winterization heater kit (Cont'd)			
48	AN520-10R6	.SCREW (REPLACED BY MS35207-261)	1		
48	MS35207-261	.SCREW (REPLACES AN520-10R6)	1		
49	AN520-10R10	SCREW (REPLACED BY MS35207-264)	1	0	
49	MS35207-264	.SCREW (REPLACES AN520-10R10)	1	0	
50	AN735-34	.CLAMP		1	
51	AN743-12	BRACKET (PRE BHT-412-SI-5)		1	
51	20-032-1	BRACKET (POST BHT-412-SI-5)		1	
52	NAS679A3	NUT (REPLACED BY MS21042L3)	2		
52 53	MS21042L3	.NUT (REPLACES NAS679A3)	2		
53	AN960PD10L AN960JD10L	.WASHER (REPLACED BY AN960JD10L)	2		
54	AN520-10R12	.WASHER (REPLACES AN960PD10L)			
54	MS35207-265	SCREW (REPLACES AN520-10R12)	2		
55	30-016A8-5	.CLAMP	2	1	
56	AN520-10R10	SCREW (REPLACED BY MS35207-264) (USBL ON	8	0	
	111310 101110	212-706-008-001)		U	
56	MS35207-264	.SCREW (REPLACES AN520-10R10) (USBL ON	8	0	
56	MS35215-56	.SCREW (USBL ON 212-706-008-103 AND -109)	8	1	
57	AN960JD10L	.WASHER (REPLACED BY NAS1149D0332J) (USBL ON 212-706-008-001)	8		
57	NAS1149D0332J	.WASHER (REPLACES AN960JD10L) (USBL ON	8		
57	AN960XC10L	.WASHER (REPLACED BY NAS1149C0332B) (USBL ON 212-706-008-103 AND -109)	8	1	
57	NAS1149C0332B	.WASHER (REPLACES AN960XC10L) (USBL ON	8	1	
58	204-070-483-001	.VALVE ASSY (USBL ON 212-706-008-001)	2	1	
58	204-070-483-003	.VALVE ASSY, AIR (USBL ON 212-706-008-103 AND109)	2	1	
59	205-070-429-005	.DUCT ASSY	1	1	
60	NAS1375A08SA116	.HOSE	1	1	
61	212-070-475-001	.VALVE ASSY	1	1	
62	MS27039-1-07	SCREW	3	1	
63 64	205-070-212-001	CAP ASSY	1	1	
64 65	AN3-3A	BOLT	4	1	
65 65	AN960PD10L AN960JD10L	WASHER (REPLACED BY AN960JD10L)	4		
66	AN960PD10L	WASHER (REPLACES AN960PDIOL)	8		
66	AN960JD10	WASHER (REPLACES AN960PD10)	8		
67	204-070-482-001	SELECTOR ASSY (REPLACED BY 204-070-482-101)	1	0	
67	204-070-482-101	SELECTOR ASSY (REPLACES 204-070-482-001)	1	1	
68	AN960PD516	WASHER (REPLACED BY AN960JD516)	2	-	
68	AN960JD516	WASHER (REPLACES AN960PD516)	2		
69	205-070-214-001	SHAFT	1	6	
70	204-070-184-001	FLAPPER	1	1	
	204 050 104 225	(ALTERNATE PART)			
70	204-070-184-007	FLAPPER	1	_	
71 72	204-070-185-001 212-070-476-001	CONNECTOR	1	6	
12	212-U/U-4/0-UUI		1	6	

(1)	(2)	(3)	(4)	(5)	(6)
INDEX NUMBER	PART NUMBER	ITEM NAME	UNIT PER ASSY	A V A - L	000
		FIGURE: 21-7. Winterization heater kit (Cont'd)			
73	NAS679A3	.NUT (REPLACED BY MS21042L3)	2		
73	MS21042L3	.NUT (REPLACES NAS679A3)	2		
74	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	2		
74	AN960JD10L	.WASHER (REPLACES AN960PD10L)	2		
75	AN520-10R12	SCREW (REPLACED BY MS35207-265)	2		
75	MS35207-265	.SCREW (REPLACES AN520-10R12)	2		
76	30-016A16-5	.CLAMP (REPLACED BY 30-016A16.5)		0	
76	30-016A16.5	.CLAMP (REPLACES 30-016A16-5)	2	0	
77	NAS520-32-12	.COUPLING	1	1	<b> </b>
78	MS21042L3	.NUT	1	1	
79	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	1		
79	AN960JD10L	.WASHER (REPLACES AN960PD10L)	1		
80	AN520-10R6	SCREW (REPLACED BY MS35207-261)			
80	MS35207-261	.SCREW (REPLACES AN520-10R6)			
81	MS21919DG40	.CLAMP (REPLACED BY MS21919WDG40)	1	0	l i
81	MS21919WDG40	.CLAMP (REPLACES MS21919DG40)	1	0	
82	AN735D96	.CLAMP	1	1	
83	NAS679A3	.NUT (REPLACED BY MS21042L3)	2		
83	MS21042L3	.NUT (REPLACES NAS679A3)	1		
84	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	2		
84	AN960JD10L	.WASHER (REPLACES AN960PD10L)	2		
85	NAS43DD3-22	.SPACER	1		
86	AN520-10R12	SCREW (REPLACED BY MS35207-265)	1		
86	MS35207-265	.SCREW (REPLACES AN520-10R12)	1		
87	AN735D96	.CLAMP	1	1	
88	AN520-10R8	.SCREW (REPLACED BY MS35207-263)	1		
88	MS35207-263	.SCREW (REPLACES AN520-10R8)	1		
89	AN743-12	.BRACKET	1	1	
90	NAS679A3	.NUT (REPLACED BY MS21042L3)	1		
90	MS21042L3	.NUT (REPLACES NAS679A3)	1		
91	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	1		
91	AN960JD10L	.WASHER (REPLACES AN960PD10L)	1		
92	AN520-10R12	.SCREW (REPLACED BY MS35207-265)	1		
92	MS35207-265	.SCREW (REPLACES AN520-10R12)	1		
93	30-016A16-5	.CLAMP (REPLACED BY 30-016A16.5)	1	0	
93	30-016A16.5	.CLAMP (REPLACES 30-016A16-5)	1	0	
94	212-070-473-001	SUPPRESSOR	1	1	
95	NAS679A3	.NUT (REPLACED BY MS21042L3)	2		
95	MS21042L3	.NUT (REPLACES NAS679A3)	2		
96	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	2		
96	AN960JD10L	.WASHER (REPLACES AN960PD10L)	2		
97	NAS43DD3-12	SPACER	1		
98	AN520-10R6	.SCREW (REPLACED BY MS35207-261)	1		
98	MS35207-261	.SCREW (REPLACES AN520-10R6)	1		
99	AN520-10R14	.SCREW (REPLACED BY MS35207-266)	1		
99	MS35207-266	.SCREW (REPLACES AN520-10R14)	1		
100	30-016A16-5	.CLAMP (REPLACED BY 30-016A16.5)	1	0	
100	30-016A16.5	.CLAMP (REPLACES 30-016A16-5)	1	0	
101	20-032-1	BRACKET	1	1	
102	NAS1375A16SA019	.HOSE	1	1	

(1)	(2)	(3)	(4)	(5)	(6)
INDEX NUMBER	PART NUMBER	ITEM NAME	UNIT PER ASSY	A V A L	DOC
		FIGURE: 21-7. Winterization heater kit (Cont'd)			
103	212-072-705-001	.SWITCH, TEMPERATURE CONTROL	1	1	
104	2-114S418-6	.PACKING, PREFORMED (REPLACED BY 2-114S613-60)	1		
104	2-114S613-60	.PACKING, PREFORMED (REPLACES 2-114S418-6)	1		
105	AN929-4	.CAP (USBL ON 212-706-008-001 AND -103)		1	
106	AN924-16D	.NUT (USBL ON 212-706-008-103 AND -109)			
107	212-070-444-003	.MIXING VALVE (USBL ON 212-706-008-001 AND -103) (REPLACED BY 212-070-444-103)	1		
107	212-070-444-103	.MIXING VALVE (USBL ON 212-706-008-001 AND -103) (REPLACES 212-070-444-003)	1	1	
107	212-070-444-105	.MIXING VALVE (USBL ON 212-706-008-109)	1	1	
108	AN960PD2116L	.WASHER (REPLACED BY AN960JD2116L) (USBL ON	1		
100	3310 CO TD011 CT	212-706-008-103 AND -109)			
108	AN960JD2116L	.WASHER (REPLACES AN960PD2116L) (USBL ON	1		
109	AN960PD2116	.WASHER (REPLACED BY AN960JD2116) (USBL ON	1		
109	AN960JD2116	.WASHER (REPLACES AN960PD2116) (USBL ON	1		
		212-706-008-103 AND -109)	_		
110	NAS679A3	.NUT (REPLACED BY MS21042L3)	1		
110	MS21042L3	.NUT (REPLACES NAS679A3)	1		
111	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	1		
111	AN960JD10L	.WASHER (REPLACES AN960PD10L)	1		
112	AN520-10R8	.SCREW (REPLACED BY MS35207-263)			
112	MS35207-263	.SCREW (REPLACES AN520-10R8)	1		
113	MS21919DG4	.CLAMP (REPLACED BY MS21919WDG4)	1		
113	MS21919WDG4	.CLAMP (REPLACES MS21919DG4)	1		1
114	212-070-483-001	.TUBE ASSY (S/N 30504 THRU 30553)	1	1	
114	212-073-866-001	.TUBE ASSY (S/N 30554 THRU SUB)	1	1	
115	NAS679A3	.NUT (REPLACED BY MS21042L3) (USBL ON	2		
115	MS21042L3	.NUT (REPLACES NAS679A3) (USBL ON 212-706-008-001 .	2		
116	AN960PD10L	.WASHER (REPLACED BY AN960JD10L) (USBL ON	2		
116	AN960JD10L	.WASHER (REPLACES AN960PD10L) (USBL ON	2		
117	AN520-10R10	.SCREW (S/N 30504 THRU 30939) (REPLACED BY MS35207-264) (USBL ON 212-706-008-001)	2	0	
117	MS35207-264	.SCREW (S/N 30504 THRU 30939) (REPLACES	2	0	
117	MS27039-1-07	.SCREW (S/N'30940 THRU SUB) (USBL ON	2	1	
118	AN742D4	.CLAMP (USBL ON 212-706-008-001 AND -103)	1	1	
119	MS21919WDG40	.CLAMP (S/N 30504 THRU 30939) (USBL ON	1	1	
		212-706-008-001)			
119	MS21919H23	.CLAMP (S/N 30940 THRU SUB) (REPLACED BY	1		
119	MS21919WCH23	MS21919WCH23) (USBL ON 212-706-008-001 AND -103)			
117	HGZIJIJWUNZJ	.CLAMP (S/N 30940 THRU SUB) (REPLACES MS21919H23) (USBL ON 212-706-008-001 AND -103)	1		

(1)	(2)	(3)	(4)	(5)	(6)
INDEX NUMBER	PART NUMBER	ITEM NAME	UNIT PER ASSY	A V A - L	000
		FIGURE: 21-7. Winterization heater kit (Cont'd)			
120	AN743-12	.BRACKET (S/N 30940 THRU SUB) (USBL ON	1	1	
121	212-073-455-001	.TUBE ASSY (USBL ON 212-706-008-001 AND -103)	1	1	
122	AN929-4	.CAP (USBL ON 212-706-008-001 AND -103)		1	
123	AN815-4D	.UNION (USBĻ ON 212-706-008-001 AND -103)		1	
124	AN783D4	.TEE (USBL ON 212-706-008-001 AND -103)		1	i l
125	AN924-4D	.NUT (USBL ON 212-706-008-001 AND -103)	1	1	
126	3-45418-6	.PACKING, PREFORMED (REPLACED BY 3-4S613-60) (USBL ON 212-706-008-001 AND -103)	2		
126	3-4s613-60	.PACKING, PREFORMED (REPLACES 3-4S418-6) (USBL ON . 212-706-008-001 AND -103)	2		
127	AN815-4D	.UNION (USBL ON 212-706-008-001 AND -103)	1	1	
128	NAS679A3	.NUT (REPLACED BY MS21042L3) (USBL ON	1		
128	MS21042L3	.NUT (REPLACES NAS679A3) (USBL ON 212-706-008-001 . AND -103)	1		
129	AN960PD10L	.WASHER (REPLACED BY AN960JD10L) (USBL ON	2		
129	AN960JD10L	.WASHER (REPLACES AN960PD10L) (USBL ON	2		
130	AN520-10R6	.SCREW (REPLACED BY MS35207-261) (USBL ON	1		
130	MS35207-261	.SCREW (REPLACES AN520-10R6) (USBL ON	1		
131	AN520-10R8 MS35207-263	.SCREW (REPLACED BY MS35207-263) (USBL ON	1		
132	MS35207-263 AN742D4	SCREW (REPLACES AN520-10R8) (USBL ON	1	1	
133	AN742D4 AN743-12	BRACKET (USBL ON 212-706-008-001 AND -103)	1 1	1 1	
134	212-070-489-001	.TUBE ASSY (USBL ON 212-706-008-001 AND -103)	1	1	
135	AN520-10R10	.SCREW (REPLACED BY MS35207-264) (USBL ON	1	0	
135	MS35207-264	.SCREW (REPLACES AN520-10R10) (USBL ON	1	0	
136	AN960PD10L	.WASHER (REPLACED BY AN960JD10L) (USBL ON	1		
136	AN960JD10L	.WASHER (REPLACES AN960PD10L) (USBL ON	1		
137	MS21919DG12	.CLAMP (REPLACED BY MS21919WDG12) (USBL ON 212-706-008-001 AND -103)	1		
137	MS21919WDG12	.CLAMP (REPLACES MS21919DG12) (USBL ON	1		
138	7G304	.SWITCH (USBL ON 212-706-008-001 AND -103) (ALTERNATE PART)	1	1	
138	7039	.SWITCH (USBL ON 212-706-008-001 AND -103)	1		
139	212-070-490-001	.TUBE ASSY (USBL ON 212-706-008-001 AND -103)	1	1	
140	AN824-4D	.TEE (USBL ON 212-706-008-001 AND -103)	1	1	
141	212-070-488-001	.TUBE ASSY (USBL ON 212-706-008-001 AND -103)	1	1	
142	AN919-6D	REDUCER (USBL ON 212-706-008-001 AND -103)	1	1	

(1)	(2)	(3)	(4)	(5)	(6)
INDEX NUMBER	PART NUMBER	ITEM NAME	UNIT PER ASSY	A V A I L	U OC
		FIGURE: 21-7. Winterization heater kit (Cont'd)			
143	3-6(S418-6)	.PACKING, PREFORMED (REPLACED BY 3-6s418-6) (USBL . ON 212-706-008-001 AND -103)	1		
143	3-6s418-6	.PACKING, PREFORMED (REPLACES 3-6(S418-6)) (USBL ON 212-706-008-001 AND -103)	1		
144	212-070-494-001	.VALVE, BLEED AIR CONTROL LINE CUTOFF (USBL ON 212-706-008-001 AND -103)	1	1	
145	AN924-4J	.NUT (USBL ON 212-706-008-001 AND -103)	1	1	
146	AN960PD716	.WASHER (REPLACED BY AN960JD716) (USBL ON	1		
146	AN960JD716	.WASHER (REPLACES AN960PD716) (USBL ON	1		
147	BE4YY030-000	.HOSE ASSY (REPLACED BY 70-031A030-000) (USBL ON 212-706-008-001 AND -103)	1	0	
147	70-031A030-000	.HOSE ASSY (REPLACES BE4YY030-000) (USBL ON	1	0	:
148	AN815-4D	.UNION (USBL ON 212-706-008-001 AND -103)	1	1	
149	NAS679A3	.NUT (REPLACED BY MS21042L3) (USBL ON		_	
149	MS21042L3	.NUT (REPLACES NAS679A3) (USBL ON 212-706-008-001 . AND -103)	1		
150	AN520-10R6	SCREW (REPLACED BY MS35207-261) (USBL ON	1		
150	MS35207-261	.SCREW (REPLACES AN520-10R6) (USBL ON	1		
151	MS21919H4	.CLAMP (REPLACED BY MS21919WCH4) (USBL ON	1		
151	MS21919WCH4	.CLAMP (REPLACES MS21919H4) (USBL ON	1		
152	MS21919H9	.CLAMP (REPLACED BY MS21919WCH9) (USBL ON	1		
152	MS21919WCH9	.CLAMP (REPLACES MS21919H9) (USBL ON	1		
153	NAS679A3	.NUT (REPLACED BY MS21042L3) (USBL ON	2		
153	MS21042L3	.NUT (REPLACES NAS679A3) (USBL ON 212-706-008-001 . AND -103)	2		
154	AN520-10R6	SCREW (REPLACED BY MS35207-261) (USBL ON	2		
154	MS35207-261	.SCREW (REPLACES AN520-10R6) (USBL ON	2		
155	MS21919H4	.CLAMP (REPLACED BY MS21919WCH4) (USBL ON	2		
155	MS21919WCH4	212-706-008-001 AND -103) .CLAMP (REPLACES MS21919H4) (USBL ON	2		
156	20-032-1	BRACKET (USBL ON 212-706-008-001 AND -103)	2	1	
156	212-070-481-001	.TUBE ASSY (USBL ON 212-706-008-001 AND -103)	1	1	
158	MS9575-06	BOLT (USBL ON 212-706-008-001 AND -103)	2	1	
159	AN929-4	.CAP (USBL ON 212-706-008-001 AND -103)	1	1	
160	3751B19T12	.ELBOW ASSY (USBL ON 212-706-008-001 AND -103)	1	1	
			-	-	

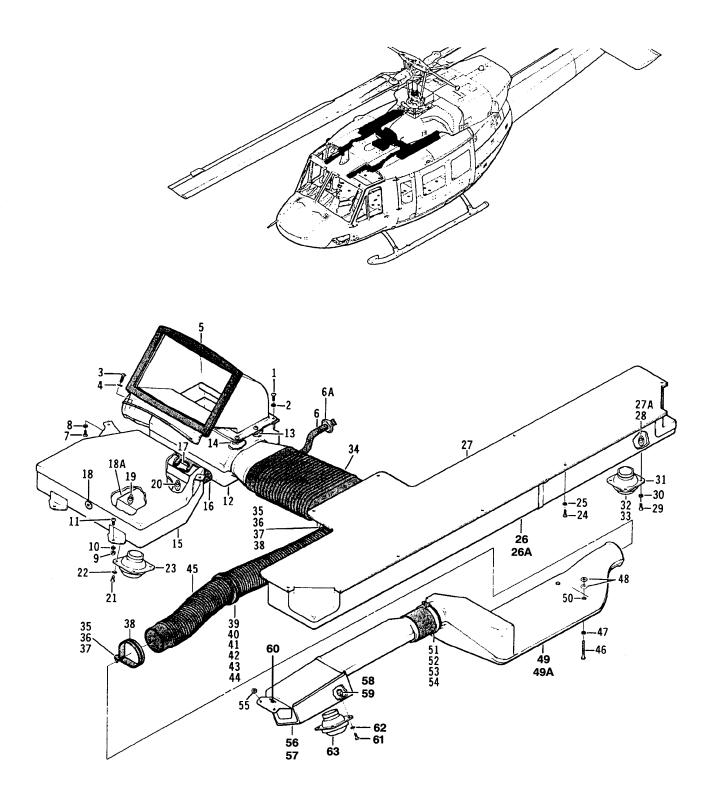

212-21-1008 C0001

Figure 21-8. Ventilation system installation, overhead ram air (S/N 30554 thru SUB)

(1)	(2)	(3)			(6)
INDEX NUMBER	PART NUMBER	ITEM NAME		A V A	U
NOMBER	TART NOMBER	TEW NAME			С
		FIGURE: 21-8. Ventilation system installation, overhead ram air (30554 thru sub)			
	212-073-100-001	VENTILATION SYSTEM INSTL, OVERHEAD RAM AIR (S/N 30554 THRU SUB)	1		
1	MS35207-264	.SCREW	12	1	
1	NAS6203-5	BOLT (NOTE 1)	12	1	
2	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	12		1 1
2	AN960JD10L	.WASHER (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	12		
2	NAS1149D0332J	.WASHER (REPLACES AN960JD10L)	12		
3	MS35207-262	.SCREW	3	1	
4	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	3		
4	AN960JD10L	.WASHER (REPLACES AN960PD10L) (REPLACED BY	3		
		NAS1149D0332J)			
4	NAS1149D0332J	.WASHER (REPLACES AN960JD10L)	3		
5	212-070-435-003	.DUCT ASSY, INLET	1	1	
6	212-070-402-003	.HOSE	2	1	
6A	MS35489-17	GROMMET	2	1	
7	MS35207-260	SCREW	2	1	
8	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	2		
8	AN960JD10L	.WASHER (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	2		
8	NAS1149D0332J	.WASHER (REPLACES AN960JD10L)	2		1
9	MS21042L3	NUT	2	1	
10	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	2	_	
10	AN960JD10L	.WASHER (REPLACES AN960PD10L) (REPLACED BY	2		
	111,3000,5101	NAS1149D0332J)	_		
10	NAS1149D0332J	.WASHER (REPLACES AN960JD10L)	2		
11	MS35207-260	SCREW	2	1	
12	212-073-111-001	PLENUM ASSY	1	1	
13	MS21059L3	NUTPLATE	8	1	
14	MS21061L3	NUTPLATE	4	1	
15	212-073-412-001	PLENUM ASSY	1	1	
16	NAS520-38-7	COUPLING	1	1	1
17	212-073-412-013	DUCT	1	_	
18	MS35489-2	GROMMET	1	1	
18A	212-073-424-001	STIFFENER	2		
19	MS21075L3	NUTPLATE	8		
20	MS21075L06	NUTPLATE (REPLACED BY MS21075L06N)	4		
20	MS21075L06N	NUTPLATE (REPLACES MS21075L06)	4	1	
21	MS35207-263	.SCREW	8	1	
22	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	8	=	
22	AN960JD10L	.WASHER (REPLACES AN960PD10L) (REPLACED BY	8		
		NAS1149D0332J)	_		
22	NAS1149D0332J	.WASHER (REPLACES AN960JD10L)	8		
23	204-070-483-001	.VALVE ASSY	2	1	
24	MS35207-261	SCREW	16	1	
25	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	16		
25	AN960JD10L	.WASHER (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	16		
25	NAS1149D0332J	.WASHER (REPLACES AN960JD10L)	16		
					لــــــا

	(1)	(2)	(2)			(6)
	INDEX	DADT NUMBER	ITEM NAME		A V A	U
	NUMBER	PART NUMBER	ITEM NAME	PER ASSY	<b>₹</b> -L	C
			FIGURE: 21-8. Ventilation system installation, overhead ram air (S/N 30554 thru SUB) (Cont'd)			
	26	212-072-811-001	.PLENUM ASSY, LH (REPLACED BY 212-072-811-007)	1	6	
	26	212-072-811-007	.PLENUM ASSY, LH (REPLACES 212-072-811-001)	1	1	
II	26A	212-072-811-002	.PLENUM ASSY, RH (REPLACED BY 212-072-811-008)	1	6	
•	26A	212-072-811-008	.PLENUM ASSY, RH (REPLACES 212-072-811-002)	1	1	
	27	212-072-811-011	COVER	1		
	27A 28	212-073-424-001	STIFFENER	5 20		
	28 29	MS21075L3 MS35207-263	SCREW	40	1	
	30	MS35207-263 AN960PD10L	WASHER (REPLACED BY AN960JD10L)	40	1	
	30	AN960JD10L	.WASHER (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	40		
	30	NAS1149D0332J	NAS1149D0332J) .WASHER (REPLACES AN960JD10L)	40		
	31	212-073-434-001	VALVE ASSY	10	1	
	32	212-073-433-001	ORIFICE	1	1	
	33	204-070-483-001	VALVE ASSY	1	1	
	34	212-073-112-001	DUCT	2	1	
ı	35	MS21042L3	.NUT	4	1	
	36	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	4		
	36	AN960JD10L	.WASHER (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	4		
	36	NAS1149D0332J	.WASHER (REPLACES AN960JD10L)	4		
	37	MS35207-264	.SCREW	4	1	
	38	30-016A10-5	.CLAMP	4	0	
	39	MS21042L3	NUT	4	1	
	40 40	AN960PD10L AN960JD10L	.WASHER (REPLACED BY AN960JD10L)	4		
	40	NAS1149D0332J	NAS1149D0332J) .WASHER (REPLACES AN960JD10L)	4		
	41	MS35207-260	SCREW	2	1	
	42	MS35207-263	SCREW	2	1	
	43	AN743-12	BRACKET	2	1	
	44	MS21919DG43	.CLAMP (REPLACED BY MS21919WDG43)	2	_	
	44	MS21919WDG43	.CLAMP (REPLACES MS21919DG43)	2	1	
	45	NAS1375A10SB100	.HOSE	2	1	
	46	MS35207-272	.SCREW (S/N 30554 THRU 31311, 35001 THRU 35104)	8	1	
	46	MS35207-273	.SCREW (S/N 35105 THRU SUB)	8	1	
	47	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	8		
	47	AN960JD10L	.WASHER (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	8		
	47	NAS1149D0332J	.WASHER (REPLACES AN960JD10L)	8		
	48	AN960PD10	.WASHER (REPLACED BY AN960JD10)	16		
	48	AN960JD10	.WASHER (REPLACES AN960PD10) (REPLACED BY NAS1149D0363J)	16		
	48	NAS1149D0363J	.WASHER (REPLACES AN960JD10)	16		
	49	212-073-413-001	.DUCT ASSY, LH (S/N 30554 THRU 31287) (REPLACED BY 212-073-413-101)	1		
	49	212-073-413-101	.DUCT ASSY, LH (S/N 30554 THRU SUB) (REPLACES 212-073-413-001)	1	1	

(1)	(2)	(3)	(4)	(5)	(6)
INDEX NUMBER	PART NUMBER	ITEM NAME		A V A I L	000
		FIGURE: 21-8. Ventilation system installation, overhead ram air (S/N 30554 thru SUB) (Cont'd)			
49A	212-073-413-002	.DUCT ASSY, RH (S/N 30554 THRU 31287) (REPLACED BY 212-073-413-102)	1		
49A	212-073-413-102	.DUCT ASSY, RH (S/N 30554 THRU SUB) (REPLACES		1	
50	NAS43DD3-109	SPACER (S/N 30554 THRU 31311, 35001 THRU 35104)	4		
50	NAS43DD3-118	SPACER (S/N 35105 THRU SUB)	4		
51	MS21042L3	NUT	2	1	
52	AN960PD10L	.WASHER (REPLACED BY AN960JD10L)	2	_	
52	AN960JD10L	.WASHER (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	2		
52	NAS1149D0332J	.WASHER (REPLACES AN960JD10L)	2		
53	MS35207-264	SCREW	2	1	
54	30-016A10-5	CLAMP	2	0	
55		SPACER	4	U	
56	NAS43DD3-4 212-073-414-001	DUCT ASSY, LH (S/N 30504 THRU 31287) (REPLACED BY 212-073-414-101)	1		
56	212-073-414-101	.DUCT ASSY, LH (REPLACES 212-073-414-001)	1	1	
57	212-073-414-002	DUCT ASSY, RH (S/N 30504 THRU 31287) (REPLACED BY 212-073-414-102)	1	-	
57	212-073-414-102	.DUCT ASSY, RH (REPLACES 212-073-414-002)	1	1	
58	212-073-424-001	STIFFENER	2		
59	MS21075L3	NUTPLATE	8		
60	MS21075L3	NUTPLATE (USBL ON 212-073-414-002 AND -102)	1	1	
61	MS35207-264	SCREW (S/N 30554 THRU 31311, 35001 THRU 35104)	16	1	
	MS35217-264 MS35215-56	.SCREW (S/N 30334 THRU 31311, 33001 THRU 33104)	16	1	
61 62	AN960PD10L	.WASHER (S/N 30554 THRU 31311, 35001 THRU 30104) (REPLACED BY AN960JD10L)	16	1	
62	AN960JD10L	.WASHER (S/N 30554 THRU 31311, 35001 THRU 30104) (REPLACES AN960PD10L) (REPLACED BY NAS1149D0332J)	16		
62	NAS1149D0332J	.WASHER (S/N 30554 THRU 31311, 35001 THRU 30104) (REPLACES AN960JD10L)	16		
62	NAS1149B0332H	.WASHER (S/N 35105 THRU SUB)	16	1	
63	204-070-483-001	NOTE 1: NAS6203-5 BOLT MAY BE USED IN LIEU OF MS35207-264 BECAUSE OF LIMITED ACCESS AT	4	1	
		FRONT.			