SEWING PATTERN · INSTRUCTION BOOKLET

Vivienne Tailored Wide-Leg T

TAILORED WIDE-LEG TROUSERS

Sizes US 00–22 · Skill Level: Intermediate · 1.0 cm (3/8 in) Seam Allowance Included



SIZES	LEVEL	SEAM ALLOWANCE	FORMATS
US 00 – 22 (13 sizes)	Intermediate	1.0 cm (3/8 in) included	A4 · US Letter · A0 · Projector

HELPFUL VIDEO GUIDES INCLUDED · CLICKABLE LINKS AND DIRECT QR CODES ON PAGE 8

SewLuxePatterns

WELCOME

Meet the Vivienne Tailored Wide-Leg Trousers

Thank you for choosing the Vivienne Tailored Wide-Leg Trousers. Designed for fluid woven textiles, these high-waisted trousers epitomize modern quiet-luxury tailoring. Featuring flat front with an expansive silhouette, deep 4.0 cm weighted hem, and comfortable clean lines.

Key Design & Tailoring Features

- High-waisted tailored fit sitting cleanly at natural waistline.
- Constructed with flat front for authentic garment ease.
- Clean pocketless back shaped with contoured waist shaping.
- Deep weighted 4.0 cm (1.6 in) fold-up hem creating fluid waterfall break.
- Standard 1.0 cm (3/8 in) seam allowance included on all pattern edges.
- Refined 5 belt loops (1.1 cm finished) tailored securely to waistband.

What is Included in Your Package

- This complete 16-page illustrated luxury sewing instruction booklet.
- Full printable pattern suite in A4, US Letter, and A0 CopyShop across all 13 sizes (US 00 to 22).
- Dedicated Multi-Size Layered A0 PDF and Projector File with individual size toggle layers.
- Interactive Video Guides Hub with clickable links and direct QR codes (Page 8).

> **The SewLuxe Tailoring Philosophy**
> Take your time pressing each seam as you sew. In luxury trouser tailoring, 60% of the silhouette is created with the steam iron. A tailor's pressing ham and clapper make all the difference.

READ THIS FIRST

Before You Begin

1. PRINT & CALIBRATE

- Always print Page 1 first at 100% Actual Size (uncheck 'Fit to Page').
- Measure the 4" x 4" (10 cm x 10 cm) test square with a hard physical ruler.
- Verify both horizontal and vertical lines match exactly before printing remaining tiles.

2. ACCURATE BODY MEASUREMENTS

- Measure in light undergarments at natural waist (narrowest part) and full hip.
- If your waist and hip fall between sizes, blend smoothly along side seams.
- Check finished garment measurements (Page 4) to verify desired ease.

3. FABRIC PREPARATION

- Pre-wash, steam, and shrink your suiting fabric thoroughly before pinning.
- Linen-viscose and Tencel blends can shrink 5–8% on first steam pressing.
- Press fabric completely flat on the grainline to prevent twisted trouser legs.

4. SEAM ALLOWANCES & TOOLS

- Standard 1.0 cm (3/8 in) seam allowance is included on all seams.
- Generous 4.0 cm (1.6 in) fold-up hem is included at leg hems.
- Equip your machine with a new 80/12 Microtex needle and quality polyester thread.

Gold Standard Cutting Advice

Never cut along the pattern line without double-checking the grainline orientation. Placing pieces off-grain causes legs to twist around the calves during wear.

CHOOSE YOUR SIZE

Size Charts & Measurements

BODY SIZE CHART (PATTERNFAST / EUROPEAN STANDARD)

SIZE	EU CODE	BUST (CM)	WAIST (CM)	HIPS (CM)	WAIST (IN)	HIPS (IN)
XXS	EU 32	80.0	61.2	90.0	24 1/8"	35 3/8"
XS	EU 34	84.0	65.4	94.0	25 3/4"	37"
S	EU 36	88.0	69.6	98.0	27 3/8"	38 5/8"
M	EU 38	92.0	73.8	102.0	29"	40 1/8"
L	EU 40	96.0	78.0	106.0	30 3/4"	41 3/4"
XL	EU 42	100.0	82.2	110.0	32 3/8"	43 1/4"
XXL	EU 44	104.0	86.4	114.0	34"	44 7/8"
3XL	EU 46	108.0	90.6	118.0	35 5/8"	46 1/2"
4XL	EU 48	112.0	95.4	122.0	37 1/2"	48"
5XL	EU 50	116.0	100.2	126.0	39 1/2"	49 5/8"
6XL	EU 52	120.0	105.0	130.0	41 3/8"	51 1/8"
7XL	EU 54	124.0	110.2	134.0	43 3/8"	52 3/4"
8XL	EU 56	128.0	115.6	138.0	45 1/2"	54 3/8"
9XL	EU 58	132.0	121.0	142.0	47 5/8"	55 7/8"
10XL	EU 60	136.0	126.4	146.0	49 3/4"	57 1/2"

FINISHED GARMENT MEASUREMENTS

SIZE	FINISHED WAIST	FINISHED HIPS*	LEG SWEEP (CIRC.)	INSEAM / OUTSEAM
XXS	62.7 cm (24 5/8")	92.5 cm (36 3/8")	52.0 cm (20 1/2")	74 cm / 102 cm (29 3/8" / 40 1/8")
XS	66.9 cm (26 3/8")	96.5 cm (38")	54.0 cm (21 1/4")	74 cm / 102 cm (29 3/8" / 40 3/8")
S	71.1 cm (28")	100.5 cm (39 5/8")	56.0 cm (22")	74 cm / 103 cm (29 3/8" / 40 1/2")
M	75.3 cm (29 5/8")	104.5 cm (41 1/8")	58.0 cm (22 7/8")	74 cm / 104 cm (29 3/8" / 40 3/4")
L	79.5 cm (31 1/4")	108.5 cm (42 3/4")	60.0 cm (23 5/8")	74 cm / 104 cm (29 3/8" / 41")
XL	83.7 cm (33")	112.5 cm (44 1/4")	62.0 cm (24 3/8")	74 cm / 105 cm (29 3/8" / 41 1/8")
XXL	87.9 cm (34 5/8")	116.5 cm (45 7/8")	64.0 cm (25 1/4")	74 cm / 105 cm (29 3/8" / 41 3/8")
3XL	92.1 cm (36 1/4")	120.5 cm (47 1/2")	66.0 cm (26")	74 cm / 106 cm (29 3/8" / 41 5/8")
4XL	96.9 cm (38 1/8")	124.5 cm (49")	68.0 cm (26 3/4")	74 cm / 106 cm (29 3/8" / 41 7/8")
5XL	101.7 cm (40")	128.5 cm (50 5/8")	70.0 cm (27 1/2")	74 cm / 107 cm (29 3/8" / 42 1/4")
6XL	106.5 cm (41 7/8")	132.5 cm (52 1/8")	72.0 cm (28 3/8")	74 cm / 108 cm (29 3/8" / 42 1/2")
7XL	111.7 cm (44")	136.5 cm (53 3/4")	74.0 cm (29 1/8")	74 cm / 109 cm (29 3/8" / 42 7/8")
8XL	117.1 cm (46 1/8")	140.5 cm (55 3/8")	76.0 cm (29 7/8")	74 cm / 110 cm (29 3/8" / 43 1/8")
9XL	122.5 cm (48 1/4")	144.5 cm (56 7/8")	78.0 cm (30 3/4")	74 cm / 110 cm (29 3/8" / 43 1/2")
10XL	127.9 cm (50 3/8")	148.5 cm (58 1/2")	80.0 cm (31 1/2")	74 cm / 111 cm (29 3/8" / 43 3/4")

** Finished waist and hip circumferences measured with all shaping elements closed. Zero 0/0 fraction bugs.*

MATERIALS

Fabric Requirements & Notions

INTELLIGENT FABRIC REQUIREMENTS TABLE (WITH 10% BUFFER)

SIZE CLUSTER	60 IN (150 CM) FABRIC WIDTH	45 IN (115 CM) FABRIC WIDTH
Sizes US 00 – 08	**2.60 m (2.84 yards)**	**3.40 m (3.72 yards)**
Sizes US 10 – 14	2.85 m (3.12 yards)	3.70 m (4.05 yards)
Sizes US 16 – 22	3.20 m (3.50 yards)	4.10 m (4.48 yards)

REQUIRED NOTIONS & HARDWARE

- Waistband Closure: Tailored horn button 20 mm + buttonhole.
- Fusible Interfacing: 0.50 m (1/2 yard) lightweight woven fusible interfacing.
- Pocket Lining Fabric: 0.40 m lightweight cotton lawn or Bemberg lining for pocket bags.
- Sewing Thread: 1 spool quality 100% polyester all-purpose thread matching your main fabric.
- Tailoring Tools: Steam iron, tailor's ham, press cloth, and wooden clapper.

Pro Tip: Cutting Wide Legs on 45" Fabric
Because this silhouette features generous leg volume, Front and Back leg pieces must be stacked lengthwise when cutting on 45" (115 cm) width fabric. Always ensure your fabric length accounts for lengthwise nesting.

CUTTING

Pattern Pieces & Cutting Protocol

GARMENT PIECE INVENTORY (CLEAN POCKETLESS BACK)

#	PIECE NAME	MATERIAL	CUT QUANTITY
1	Pants Front	Main Fabric	Cut 2 (Mirrored Pair - Flat Front)
2	Pants Back	Main Fabric	Cut 2 (Mirrored Pair - 1 Waist Dart per side / 2 total)
3	Tailored Waistband	Main Fabric + Interfacing	Cut 1 Main + 1 Interfacing
4	Pocket Bag (Outer / Facing)	Main Fabric	Cut 2 (Mirrored Pair)
5	Pocket Lining (Inner Bag)	Lining Fabric	Cut 2 (Mirrored Pair)
6	Fly Facing Shield	Main Fabric + Interfacing	Cut 1 Main + 1 Interfacing
7	Fly Extension Interfacing	Fusible Interfacing	Cut 2 (Left & Right Fly)
BL	Belt Loops (5x)	Main Fabric + Interfacing	Cut 1 Strip (3.5 cm x 45 cm)

SEWING ORDER AT A GLANCE


PHASE	OPERATION SUMMARY
Step 1: Front Shaping & Leg Creases	Flat Front Preparation: Staystitch the curved front waist edge at...
Step 2: Front Pocket Construction	Stay-Tape & Lining: Fuse 1 cm stay-tape to wrong side of slant po...
Step 3: Center Front & Zipper Fly Assembly	nterfacing & Center Front: Fuse Fly Interfacing to both front fl...
Step 4: Back Shaping & Center Back Rise	Two Back Waist Darts: Fold the 2 back waist darts (1 on each Pant...
Step 5: Inseams & Reinforced Crotch Curve	itch Inseams: Pin Pants Back to Pants Front right sides togethe...
Step 6: Outer Side Seams & Tailored Belt Loops	Side Seams: Pin Front and Back outer edges right sides toge...
Step 7: Waistband Closure & Hemming	Attach Waistband: Stitch interfaced Waistband to trouser waist at...

Standard Seam Allowance & Hem Protocol


- Standard 1.0 cm (3/8 in) seam allowance is included on all pattern edges.
- Deep 4.0 cm (1.6 in) hem is included at bottom of legs for authentic drape.
- Cut directly along solid pattern lines—do NOT add extra seam allowance.

PIECES


Patte ces & kings Guide

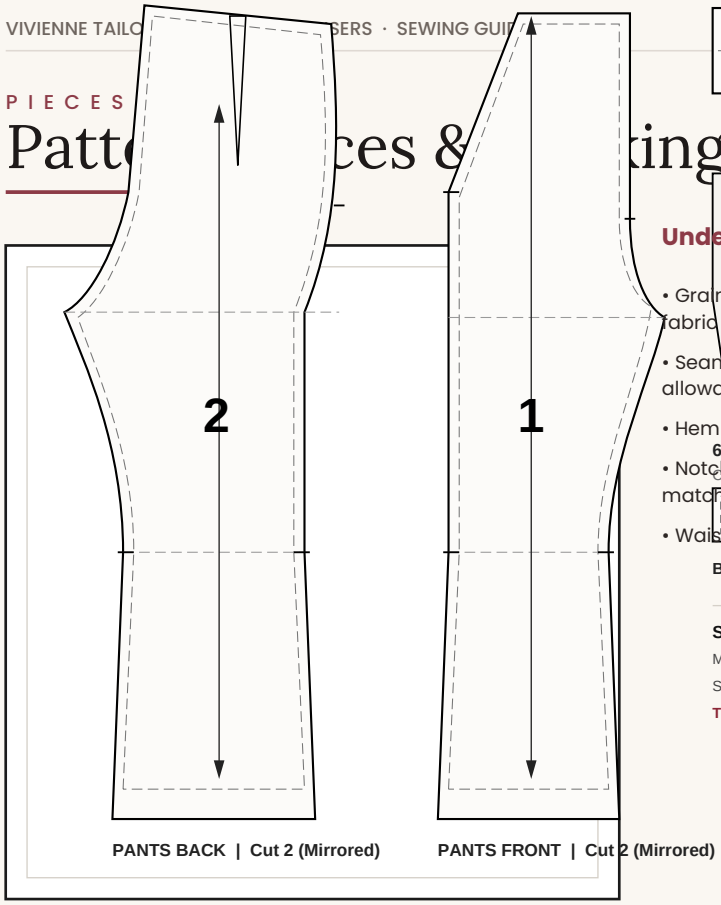

PANTS BACK | Cut 2 (Mirrored) PANTS FRONT | Cut 2 (Mirrored)



3. TAILORED WAISTBAND | Cut 1 Main + 1 Interfacing

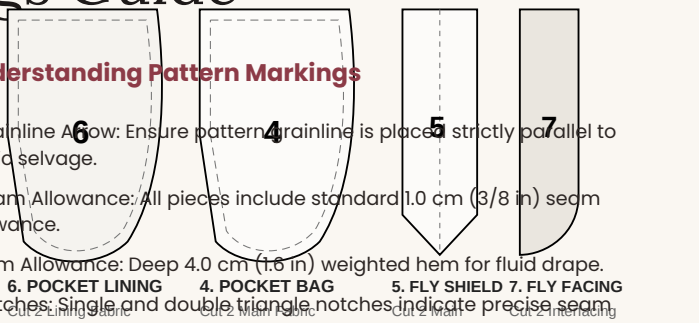

6. POCKET LINING Cut 2 Lining Fabric 4. POCKET BAG Cut 2 Main Fabric 5. FLY SHIELD Cut 2 Main 7. FLY FACING Cut 2 Interfacing

BL. BELT LOOPS STRIP (3.5 cm x 45 cm) | Cut 1 Main (Yields 5 Loops)

Understanding Pattern Markings

- Grainline Arrow: Ensure pattern grainline is placed strictly parallel to fabric selvage.
- Seam Allowance: All pieces include standard 1.0 cm (3/8 in) seam allowance.
- Hem Allowance: Deep 4.0 cm (1.6 in) weighted hem for fluid drape.
- Notches: Single and double triangle notches indicate precise seam matching positions.
- Waist Shaping: Constructed with flat front and clean pocketless back.

SEWLUXE PATTERNS • CAD PATTERN INVENTORY

Model: Vivienne Tailored Wide-Leg Trousers • Sizes: US 00–22

Seam Allowance: 1.0 cm Included • Hem: 4.0 cm

Tailored Button Closure • Pocketless Back • Zero AI Clutter

HOW TO LENGTHEN OR SHORTEN YOUR TROUSERS

TO LENGTHEN (+) — FOR TALL FIT

1. Cut Across: Locate horizontal line at mid-thigh on Pieces 1 & 2.
2. Spread Evenly: Separate sections by desired extension (e.g. +3 to +5 cm).
3. Tape & True: Back with paper and blend side and inner leg seamlines.

TO SHORTEN (-) — FOR PETITE FIT

1. Measure Up: Mark a parallel line above the lengthen/shorten line.
2. Fold & Overlap: Crease lower section upward to meet guideline.
3. Re-true Edges: Tape flat and smooth outer side seams and inseams.

EXTRA HELP

Helpful Video Guides Hub

Master each tailoring technique with confidence! Click any title to watch the video tutorial in your web browser, or scan the QR code with your smartphone camera.

Sewing Front Pleats & Center Crease

Step 1 Technique Guide

Watch Video Tutorial

Sewing Slanted Trouser Pockets

Step 2 Technique Guide

Watch Video Tutorial

Front Zipper Fly & Shield Installation

Step 3 Technique Guide

Watch Video Tutorial

Concealed Hook & Bar Waistband Closure

Step 7 Technique Guide

Watch Video Tutorial


Video tutorials are produced by independent tailoring educators. Always follow the seam allowances and measurements in this guide.

LET'S SEW

Step 1: Front Shaping & Leg Creases

• Flat Front Preparation: Staystitch the curved front waist edge at 6 mm (1/4 in) to prevent stretching during handling.

• Razor-Sharp Center Crease: Fold each front and back leg panel lengthwise matching inseam and side seam. Steam-press a crisp vertical center crease down to the hem.

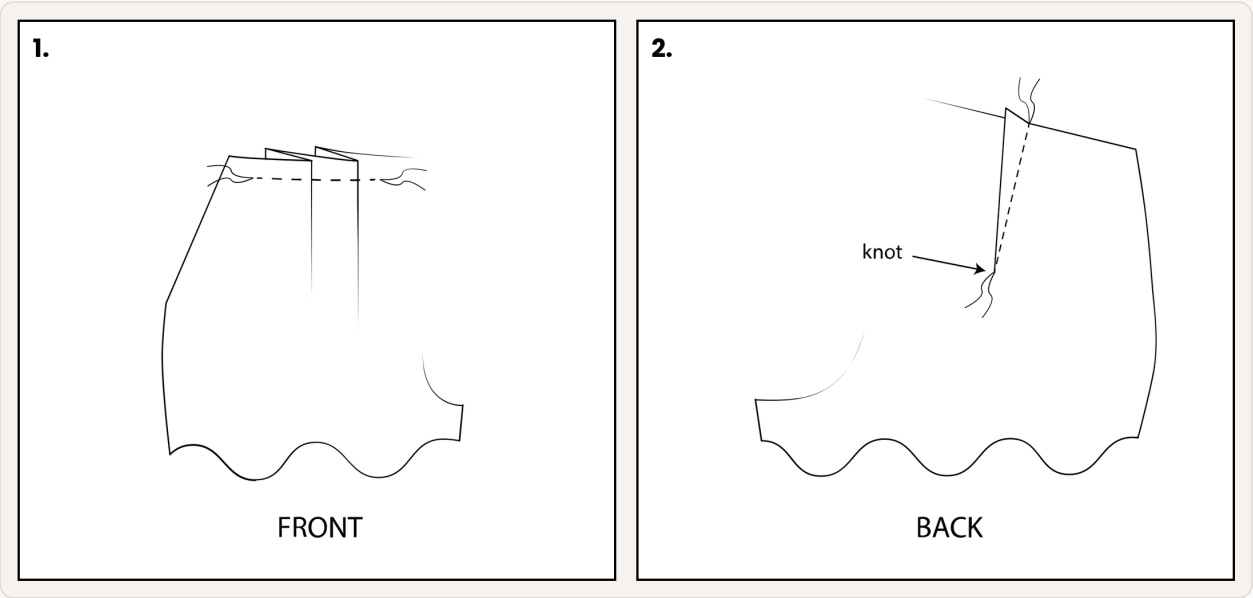

Tailoring Secret: Step 1 Integrity
Pressing thoroughly at this step prevents bulky seams and ensures razor-sharp drape in the finished trouser.


LET'S SEW

Step 2: Front Pocket Construction

• Stay-Tape & Lining: Fuse 1 cm stay-tape to wrong side of slant pocket opening. Pin Pocket Lining right sides together with Pants Front and stitch at 1.0 cm (0 3/8").

• Understitching: Trim seam to 5 mm, press lining away from front, and understitch 2 mm from seamline so lining rolls invisibly inside.

• Pocket Bag Assembly: Pin Pocket Bag (Outer) right sides together with Pocket Lining, stitch curved bottom perimeter at 1.0 cm (0 3/8"), serge, and baste pocket edges to waist and side seam.

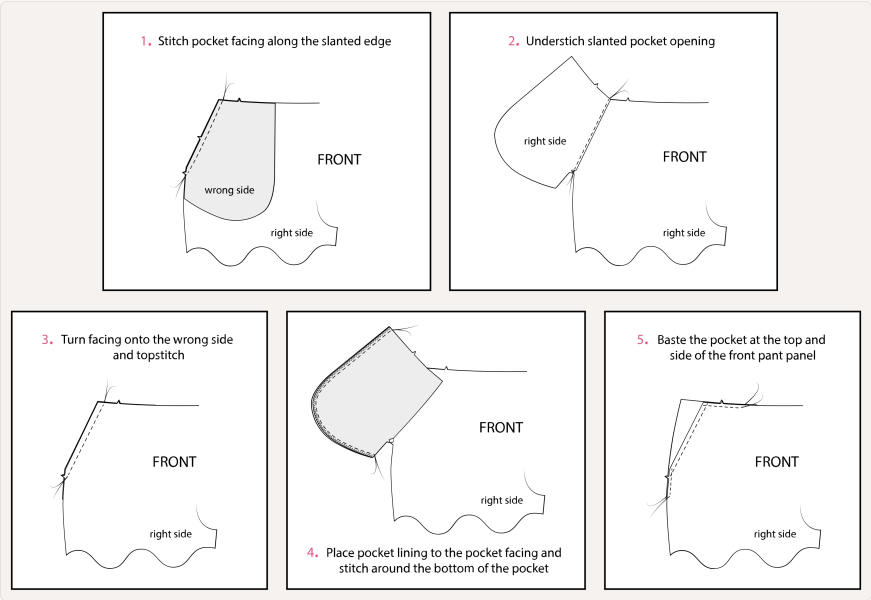

Tailoring Secret: Step 2 Integrity
Pressing thoroughly at this step prevents bulky seams and ensures razor-sharp drape in the finished trouser.


LET'S SEW

Step 3: Center Front & Zipper Fly Assembly

• Interfacing & Center Front: Fuse Fly Interfacing to both front fly extensions. Stitch center front seam from 2.5 cm above inseam up to circle stop; baste from circle to waist.

• Zipper & J-Stitch: Stitch closed zipper under folded right fly extension. Flip zipper onto left fly extension, stitch tape, remove basting, and topstitch curved J-stitch.

• Fly Shield: Fold interfaced Fly Facing Shield lengthwise, pin behind right zipper teeth, and secure with a bar tack at bottom of J-stitch.

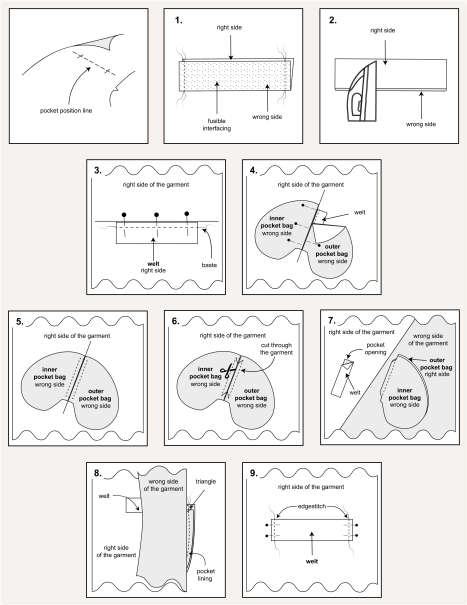

Tailoring Secret: Step 3 Integrity
Pressing thoroughly at this step prevents bulky seams and ensures razor-sharp drape in the finished trouser.


LET'S SEW

Step 4: Back Shaping & Center Back Rise

• Two Back Waist Darts: Fold the 2 back waist darts (1 on each Pants Back) right sides together. Stitch, tie thread tails, and press toward center back.

• Clean Pocketless Back: No back welt pockets are used, preserving a smooth, contoured silhouette over the seat.

• Center Back Rise: Place both Pants Backs right sides together along center back rise, stitch at 1.0 cm (0 3/8") down to crotch point, and press open.

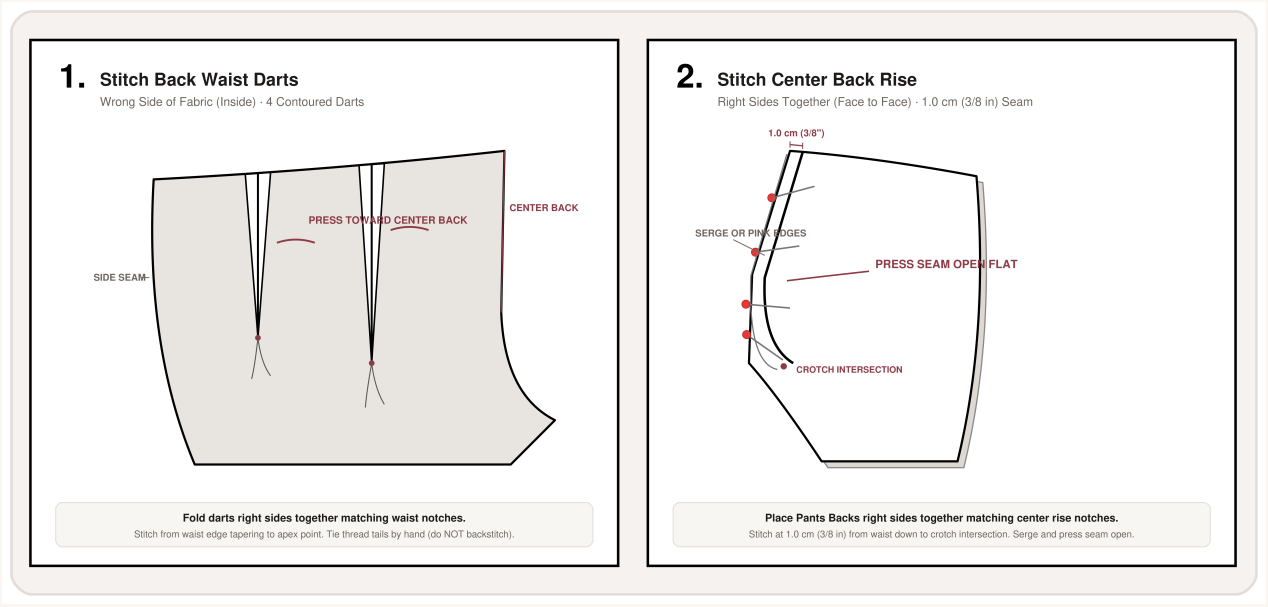


Tailoring Secret: Step 4 Integrity
Pressing thoroughly at this step prevents bulky seams and ensures razor-sharp drape in the finished trouser.

LET'S SEW

Step 5: Inseams & Reinforced Crotch Curve

• Stitch Inseams: Pin Pants Back to Pants Front right sides together along inner leg seams from crotch to hem, matching knee notches. Stitch at 1.0 cm (0 3/8") and press open.

• Reinforced U-Crotch Curve: Turn one leg right side out and slide inside the other leg (right sides together). Stitch continuous crotch curve and sew a second reinforcement line 2 mm away.

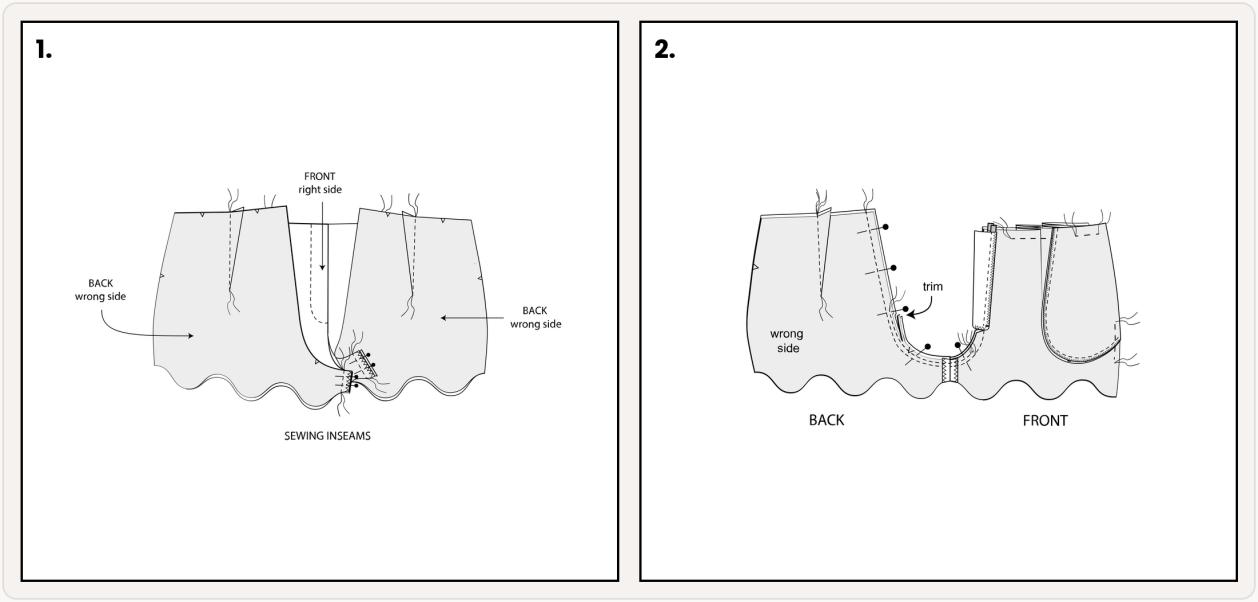


Tailoring Secret: Step 5 Integrity
Pressing thoroughly at this step prevents bulky seams and ensures razor-sharp drape in the finished trouser.

LET'S SEW

Step 6: Outer Side Seams & Tailored Belt Loops

• Outer Side Seams: Pin Front and Back outer edges right sides together from waist to hem (keeping front pocket openings free). Stitch at 1.0 cm (0 3/8") and press open.

• Construct 5 Belt Loops: Fold the 3.5 cm x 45 cm strip lengthwise, stitch at 6 mm, turn right side out, press flat (1.2 cm finished width), and cut into 5 equal 8.5 cm loops.

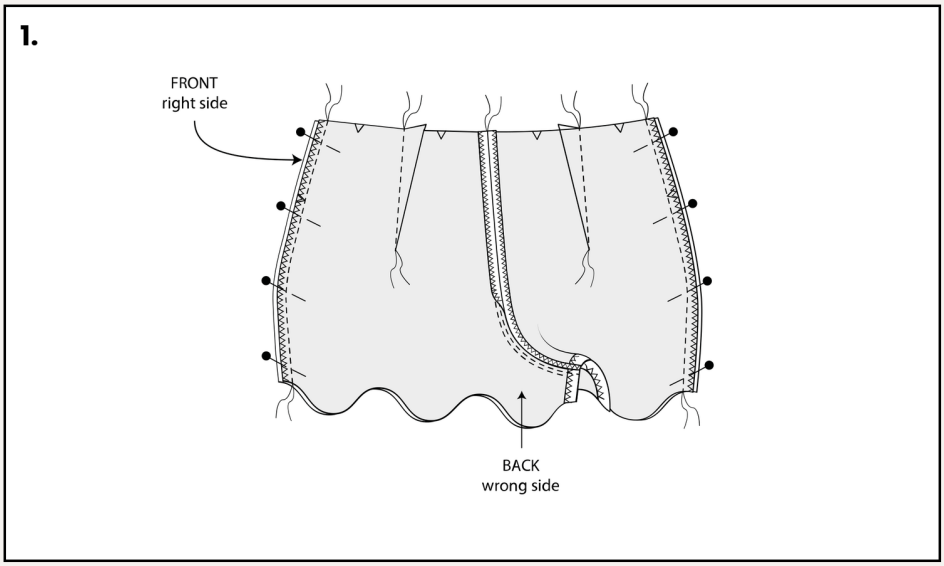

Tailoring Secret: Step 6 Integrity
Pressing thoroughly at this step prevents bulky seams and ensures razor-sharp drape in the finished trouser.


LET'S SEW

Step 7: Waistband Closure & Hemming

• Attach Waistband: Stitch interfaced Waistband to trouser waist at 1.0 cm (0 3/8") and finish short ends.

• Button & Buttonhole Closure: Sew a horizontal buttonhole on the left waistband end and attach matching exterior button on the right extension.

• Turn Up 4.0 cm (1 5/8") Hem: Press lower leg raw edge 1 cm to wrong side, then fold up 3.0 cm to form a clean 4.0 cm weighted hem. Blind-stitch or topstitch.

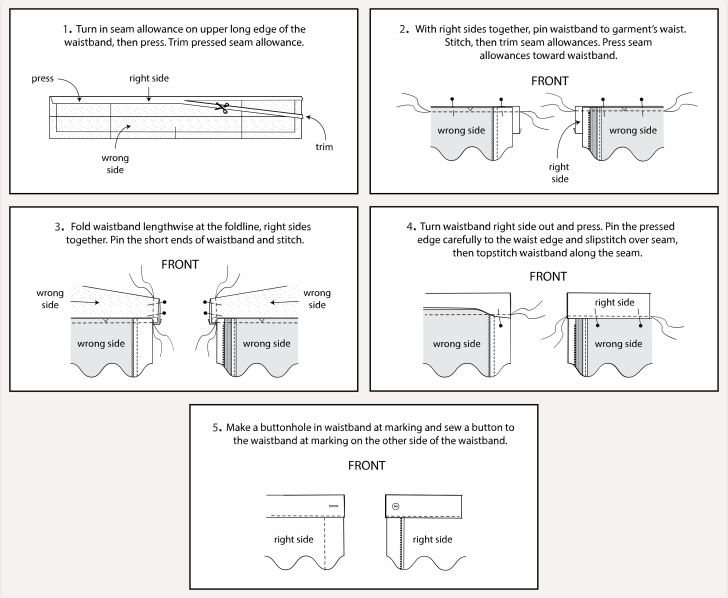

Tailoring Secret: Step 7 Integrity
Pressing thoroughly at this step prevents bulky seams and ensures razor-sharp drape in the finished trouser.

YOU MADE IT

Enjoy Your Vivienne Tailored Wide-Leg Trousers!

Congratulations on completing your couture Vivienne Tailored Wide-Leg Trousers! Take a moment to admire the graceful fluid drape, the razor-sharp seamlines, and the tailored luxury profile. Wear them with pride!

360° EDITORIAL FIT GALLERY & RUNWAY PROPORTIONS



1. FRONT VIEW



2. 45° PROFILE



3. BACK VIEW

Styling & Textile Care Suggestions

• Styling: Tuck in a crisp linen button-down shirt or fine-ribbed tank to highlight the high waist. Pair with minimalist leather slides or tailored mules.

• Care Protocol: Hand-wash cold or gentle machine cycle in a mesh wash bag. Hang to dry along the crease lines. Steam press with a pressing cloth for effortless texture.

Need Personalized Sewing Support?
If you have any questions about fit, grading, or assembly, reach out to us directly through our Etsy shop SewLuxePatterns. We are delighted to support your creative journey! © SewLuxePatterns.