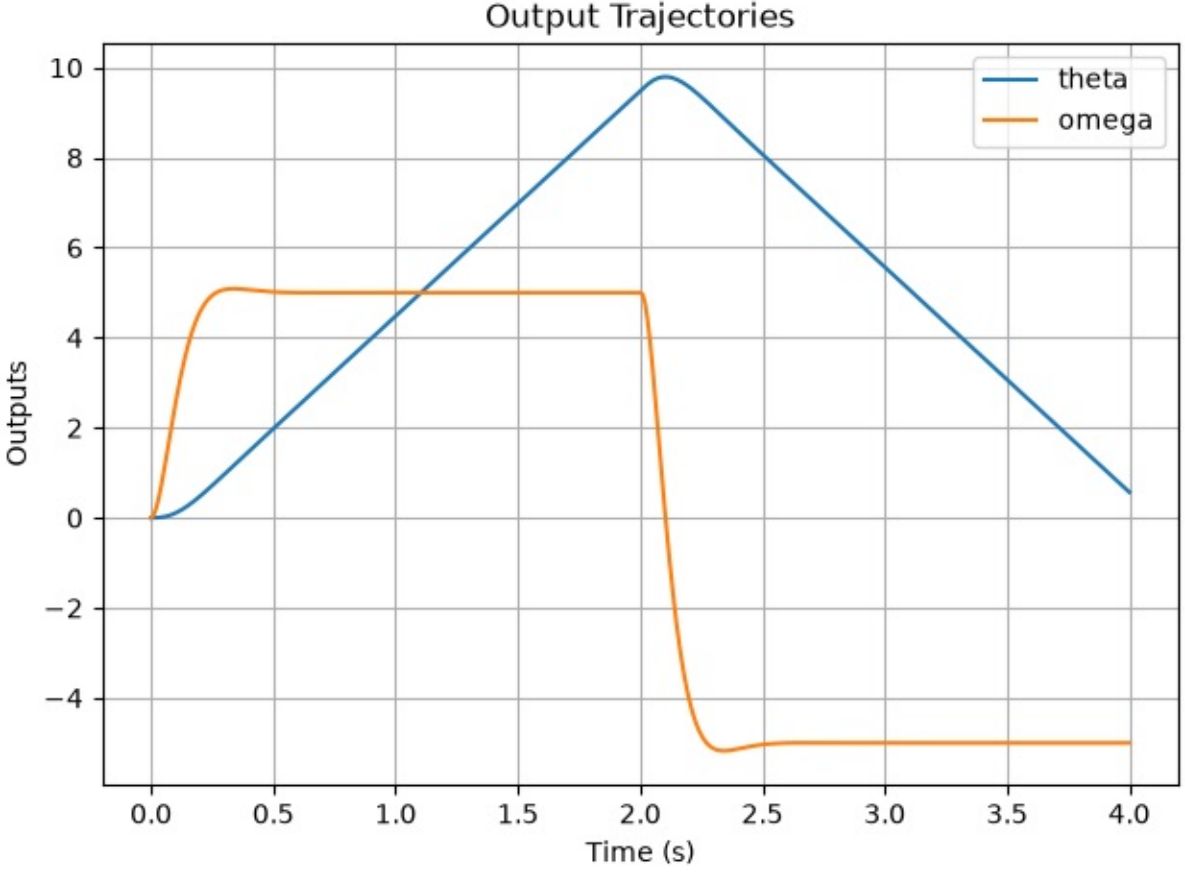
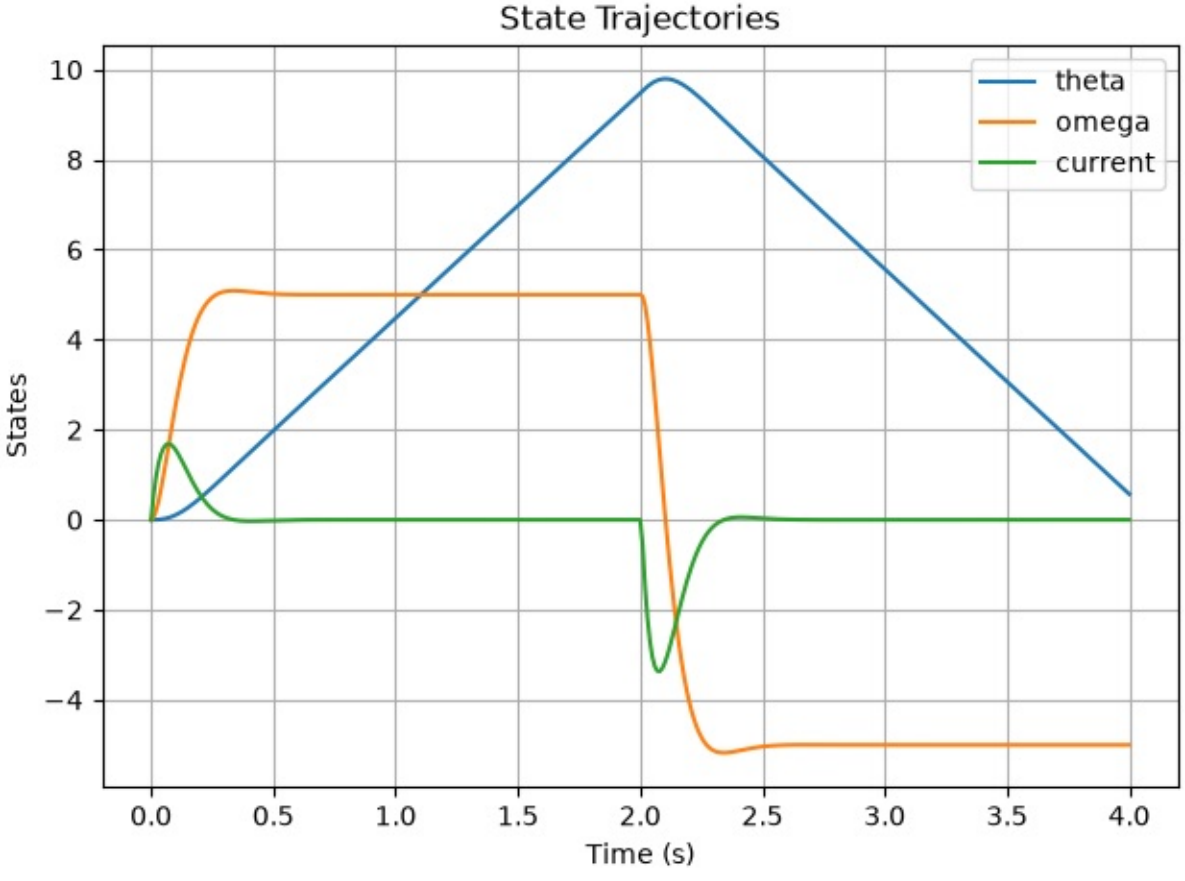

Output Trajectories
theta
omega
Outputs
Time (s)
10
8
6
4
2
0
−2
−4
0.0
0.5
1.0
1.5
2.0
2.5
3.0
3.5
4.0


State Trajectories
theta
omega
current
States
Time (s)
10
8
6
4
2
0
−2
−4
0.0
0.5
1.0
1.5
2.0
2.5
3.0
3.5
4.0

As expected, omega is derivative of theta (as theta increases at a constant rate, omega is flat). Furthermore spikes in current represent moments where input voltage is applied (3V at 0s and -3V at 2s). Omega correspondingly changes with change in input voltage.