


E Assembly: *End-effector*


Step 1: Drum subassembly

You need:

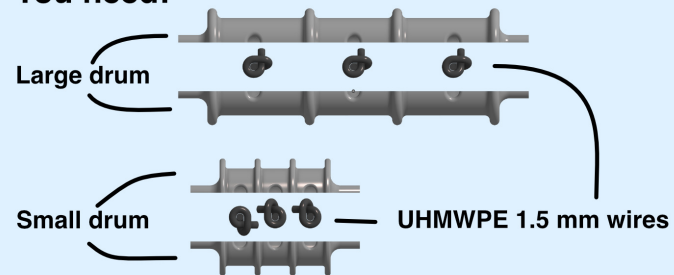


1.1 Tie knots on the ends of six UHMWPE wires, and place them inside

1.2 Glue the drums together

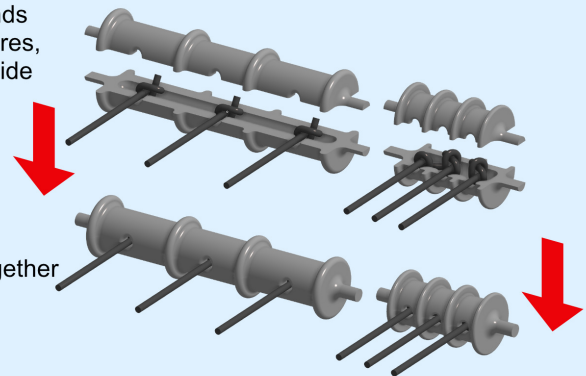


Step 2: Drum mounting


You need:

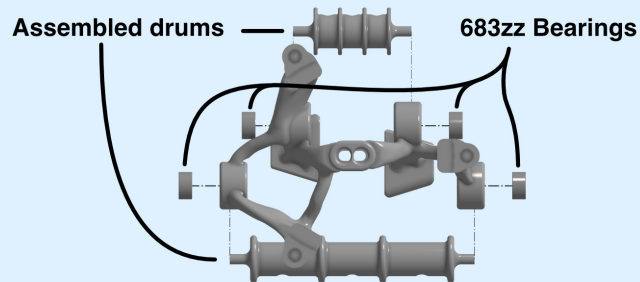


2.1 Insert the drum

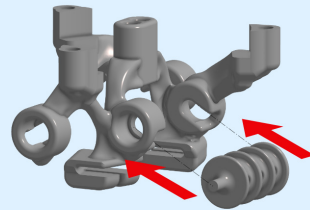


2.2 Push the bearings in on the drums. This is a hard press fit.

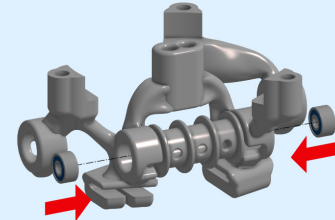

2.3 Insert the large drum and bearings

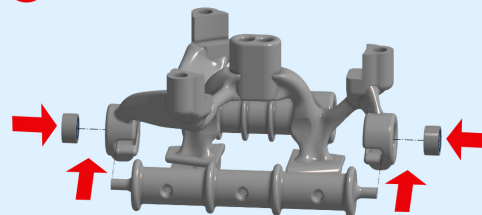


2.4 Now the product should look like this

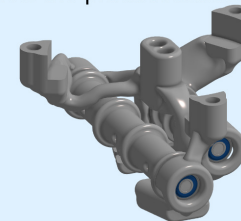


Step 3: Finger mounting

You need:


Fingers

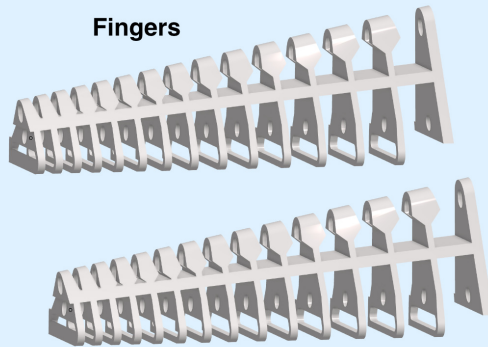

3.1 Slide the fingers into position

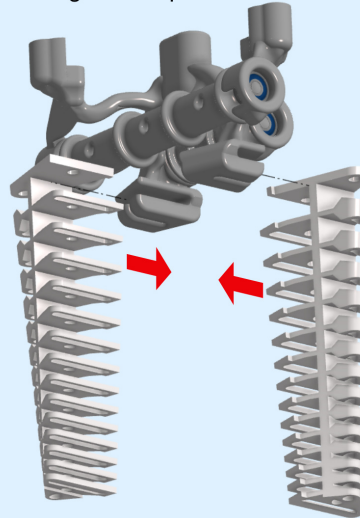

3.2 Wind the short wires around the drum once, through the fingers, and tie a knot at the end.

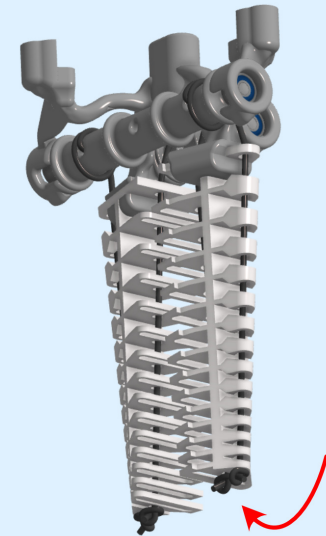

Step 4: Arm mounting

You need:


PTFE tubes

M2.5 bolts


Arm holders

Brass inserts


Soft arm end-disc

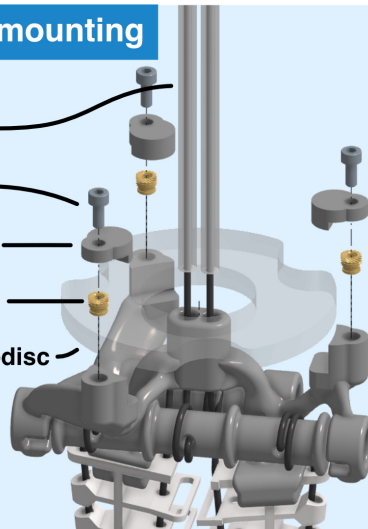

4.1 Solder the brass inserts into place, and get the tendons through the PTFE

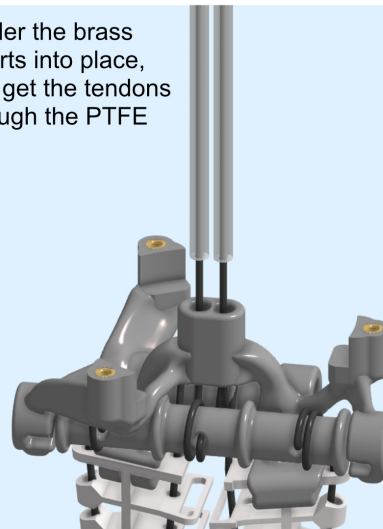


4.2 Fit the PTFE tube inside the arm, and attach the arm with the holders and

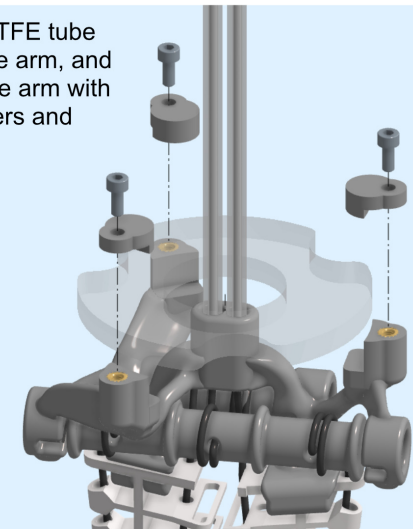


F Assembly: Actuator


Step 1: Mount horn

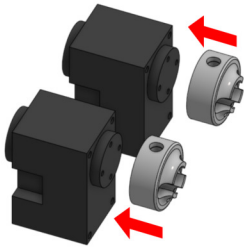


Step 2: Mount axle

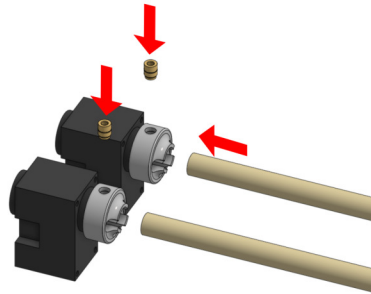


Step 3: Mount axle and bearings to the housing

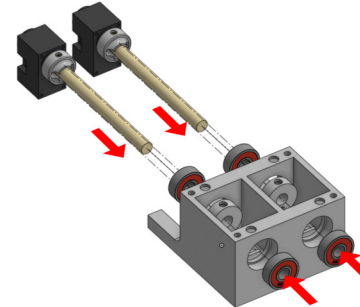

Step 4: Mount Magnets and secure the collar

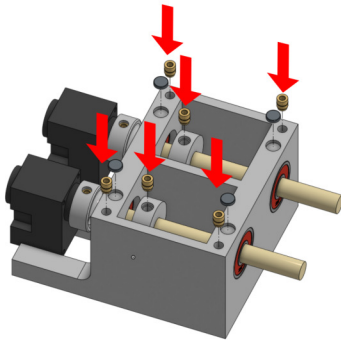

Step 5: Mount transmission

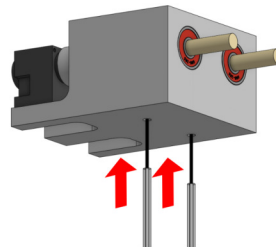

Step 6: Secure the tendon and close the lid

