YMMS: 2002 Acura RSX Base
Engine: 2.0L
VIN: JH4DC54832C017218

Oct 27, 2026
License: STBBORN TX
Odometer:

Fig 1: Gauge Assembly Connector End View


Gauge Assembly

– Behind gauge assembly
– On dashboard wire harness (left branch)

'02-'04:

Connector A


– White

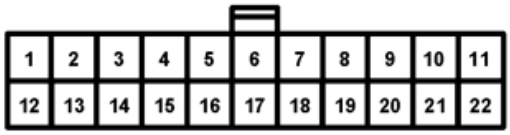

1 —
2 —
3 BLK/YEL (Security system)
4 RED/BLK (Circuit 11)
5 RED/BLU (Headlights)
6 Canada: RED/GRN
USA: RED/YEL (Headlights)
7 GRN/RED (Circuit 17)
8 BLU/YEL (Cruise control)
9 —
10 BLU/ORN (Immobilizer system)
11 WHT/RED (Fuse 9 – Under-hood)
12 Canada: PNK (Gauges and indicators)
13 RED (Circuit 12)
14 BLU/RED (ABS)
15 PNK (SRS)
16 Canada: WHT/BLU (DRL)
17 A/T: BLK/RED (Circuit M22)
18 A/T: GRN/BLK (Back-up lights)
19 A/T: WHT (Circuit M34)
20 A/T: BLU/BLK (Circuit M35)
21 YEL/RED (Low oil pressure indicator)
22 GRN/ORN (MIL circuit)

Connector B

– White

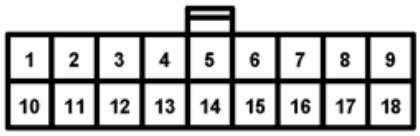


1 —
2 —
3 —
4 —
5 —
6 WHT/RED (Fuse 9 – Under-hood)
7 YEL (Fuse 10 – Under-dash)
8 PNK/BLU (SRS)
9 GRN/YEL (Circuit 16)
10 —
11 —
12 —
13 WHT/GRN (Communication line)
14 BLU (Gauges and indicators)
15 BLU/WHT (Circuit E93)
16 YEL/BLK (Fuel gauge)
17 BLK (G402)
18 BLK (G401)

'05-'06:

Connector A


– Gray

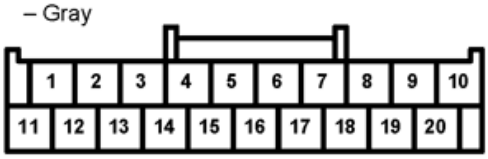

1 Canada: PNK (Gauges and indicators)
2 BLK/YEL (Security system)
3 RED/BLK (Circuit 11)
4 RED/BLU (Headlights)
5 Canada: RED/GRN
USA: RED/YEL (Headlights)
6 GRN/RED (Circuit 17)
7 BLU/YEL (Cruise control)
8 —
9 BLU/ORN (Immobilizer system)
10 WHT/RED (Fuse 9 – Under-hood)
11 RED (Circuit 12)
12 BLU/RED (ABS)
13 PNK (SRS)
14 Canada: WHT/BLU (DRL)
15 A/T: BLK/RED (Circuit M22)
16 A/T: GRN/BLK (Back-up lights)
17 A/T: WHT (Circuit M34)
18 A/T: BLU/BLK (Circuit M35)
19 YEL/RED (Low oil pressure indicator)
20 GRN/ORN (MIL circuit)

Connector B

– Gray

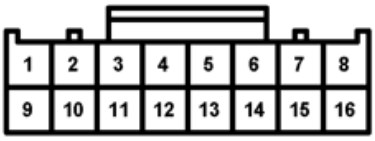

1 —
2 —
3 —
4 —
5 WHT/RED (Fuse 9 – Under-hood)
6 YEL (Fuse 10 – Under-dash)
7 PNK/BLU (SRS)
8 GRN/YEL (Circuit 16)
9 —
10 —
11 WHT/GRN (Communication line)
12 BLU (Gauges and indicators)
13 BLU/WHT (Circuit E93)
14 YEL/BLK (Fuel gauge)
15 BLK (G402)
16 BLK (G401)

Courtesy of AMERICAN HONDA MOTOR CO., INC.