AI Pods


SEAT ASSEMBLY

Parts required:


- 1x SA : left seat front panel
- 1x SB : right seat front panel
- 1x SC : main seat frame
- 1x SD : front seat pad riser
- 1x SE : back seat pad riser
- 1x SF : seat panel
- 1x SG : speakers holder
- 1x SH : seat backrest
- 13x 6mm x 60mm wood screws
- Wood glue
- 4x speakers visaton FRS-8 or other 80mm diam. speakers

Tools required:


- 4mm wood drill for predrilling
- mallet
- cordless drill

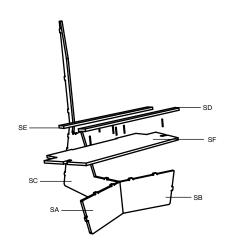

screw SF part on SA, SB and SC parts.
Then screw or glue SD and SE parts on top of SF part.

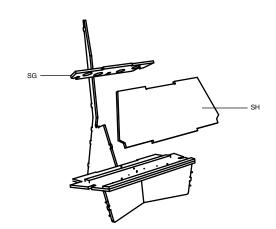

2. Mount the 4 speakers on SG part. Then screw the SG and SH parts to SC part

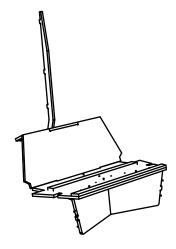

finished seat assermi


OUTER SHELL ASSEMBLY

Parts required :


- 3x OA: upwards large triangle
- 3x OB : downwards small triangle
- 6x OC : small upper connector
- 4x OD : large lower connector- 2x OE : downwards large triangle
- 2x OF : upwards small triangle
- 4x OG : long vertical outwards connector
- 2x OH : backrest connector
- 2x OI : long vertical inwards connector
- 1x OJ : upper right end panel - 1x OK : upper left end panel
- 1x OL : lower right end triangle
- 1x OM : lower left end triangle
- 1x AA : left armrest top part - 2x AB : armrests vertical part
- 1x AC : right armrest top part
- 96x 6mm x 60mm wood screws

Tools required :


- 4mm wood drill for predrilling
- mallet
- cordless drill

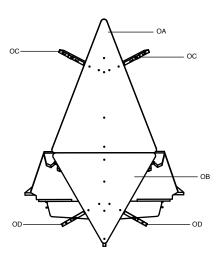


screw OA and OB (triangles) to SC parts.
Then screw 2 OC connectors on the OA part (large triangle) and 2 OD connectors on the OB part (small triangle).

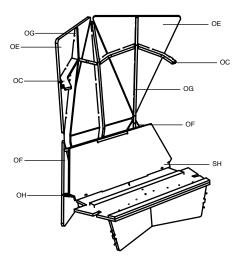


screw OE and OF (triangles) to OG (long connector).
Then screw 1 OC connectors on the OE part (large triangle) and 1 OH connectors on the OF (small triangle) and SH part.
Repeat for the other side of the shell

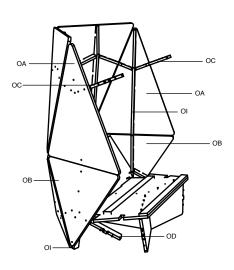

3. Screw OA and OB (triangles) to OI (long connector). Then screw 1 OC connector on the OA part (large triangle) and 1 OD connector on the OB part (small triangle).

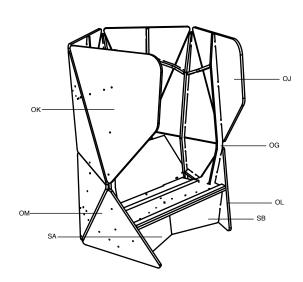

4. End right side : screw OJ and OL parts to 1 OG part (long connector).
End left side screw OK and OM parts to 1 OG part (long connector).
Then screw each side to the OC and OD connector and the SA and SB parts.

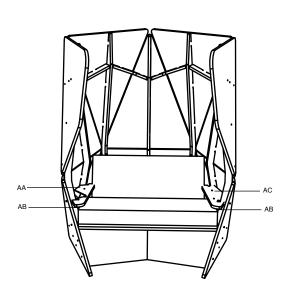

5. Left armrest : screw the top AA part to the AB vertical part, then screw the LCD screen on the top AA armrest part. Right armrest: screw the AC top part to the AB vertical part. Mount the to armrests and install the seating pads







