

Introduction to Interrupts through Stepper Motor Driving



Experiment 3 - Introduction to Interrupts through Stepper Motor Driving

Objectives

The previous laboratory session was dedicated to handling the parallel I/O using the polling technique. Namely, you monitored the ports continuously to check whether an input exists. What would you do if you have to do other tasks while monitoring the I/O port? For instance, stepper motor-driving is one of the most common task performed by the MCUs and it requires periodic signals to be generated. On the other hand, your I/O monitoring software may call delay subroutine, which can violate the periodicity of the generated signals. To handle such cases, there is tool coming with the MCU: Interrupts. The aim of this lab is to go over the utilization of the MCU with the interrupts and stepper motor driving will be an instrument to experience the aforementioned concepts. In this lab, you will learn,

- The concept of interrupts and their trigger-response structure
- Differences between polling-driven and interrupt-driven I/O
- How to write interrupt service routines (ISR) for the TM4C
- How to generate delays using the System Timer system
- How to drive a stepper motor

1 Background Information

1.1 Interrupts

This register model for the TM4C123GH6PM contains the Program Status Register (PSR). Eight of the bits in the PSR (bits 7:0) indicate which interrupt, if any, is currently being handled.

Another special register associated with interrupts is the PRIMASK register. The PRIMASK register contains only one bit (also named PRIMASK) that enables / disables most interrupts. The user cannot turn off a non-maskable interrupt. A maskable interrupt may be turned on or off by the user under program control. Its corresponding interrupt masking bit (I) is set to logic 1 during system reset, which turns off the maskable interrupt system. The user can turn on this system using the Change Processor State Interrupt Enable CPSIE I instruction and turn off this system using the Change Processor State Interrupt Disable CPSID I instruction. The TM4C123GH6PM is equipped with several maskable interrupts, e.g. SysTick, Timer, Pulse accumulator, SPI, and A/D system. In this lab, we will consider only one maskable interrupt, i.e., the System Timer (SysTick). Other interrupts are discussed in future labs. The System Timer generates an interrupt at a user specified interval. This interrupt is very useful in reminding the TM4C123GH6PM to perform a regular, repetitive task such as measuring the temperature in the controlled room at a regular interval.

1.1.1 Interrupt Service Routine

An interrupt service routine (ISR) is similar to a subroutine. It is called by the system when an *interrupt* occurs. Recall from the lectures that there are two main interrupt service approaches which are polling and vectored interrupts. TM4C123GH6PM supports vectored interrupts. In that scheme, each interrupt source has an address dedicated to it and that address contains the address of the ISR. The design of the MCU is in such a way that when an interrupt occurs, the PC fetches the corresponding address of the ISR from the vector map which is the memory block dedicated to the interrupt sources in order to hold the addresses of the ISRs. A complete interrupt vector map for TM4C123GH6PM is listed in the file Startup.s available on ODTUClass course page. This map tells you where the interrupt vector the appropriate interrupt service routine is located for all possible TM4C123GH6PM interrupts.

In general, the main program runs, possibly in an infinite loop, to perform some user defined useful tasks. However, you sometimes need to perform additional tasks that actually depend on internal or external requests. A request can be considered as an interrupt to the main program. When an interrupt occurs, the system runs the ISR. In that manner, an ISR is similar to a subroutine but it responds to a request, i.e. it is called by the system, whereas a subroutine is called because of an instruction in the program.

1.1.2 Coding with Interrupts

There are two main tasks to properly make use of the interrupts. The first task is to write an ISR and the second task is to configure and initialize the interrupt source that you want to use. The latter is to be explained in the following subsection 1.1.3 specific to *System Timer* interrupt. Recall that ISR is actually a subroutine which is called by the system when the related interrupt occurs. Thus, writing an ISR is actually writing a subroutine which is something you know from Experiment-1. There is no difference, all you do is labeling your subroutine by using PROC and ENDP directive doublet and ending your subroutine code with BX LR instruction, since the handling mode specific content of the LR tells the system to exit from the handler mode by fetching the return address from the saved context when the interrupt occurs. The issue is to link your subroutine with the related interrupt so that your subroutine becomes an ISR.

Remember that a 4-Byte memory space is dedicated to each interrupt source. In that space, the address of the corresponding ISR should be placed. Thus, all you need is to place the address where your subroutine starts in the reserved memory space of the interrupt you are using. There are several ways to do that. When you examine the vector map defined in the start up code, *Startup.s*, you will realize that the reserved memory spaces for the interrupt vectors are filled via assembly directive that uses labels and resolves the address value that a label corresponds:

Therefore, as long as the label of your subroutine matches with the label of the corresponding interrupt source, your subroutine is the ISR. When you further examine the start up code, *Startup.s*, you will see code sections devoted to the interrupt service subroutines:

Notice that the first ISR is the reset handler. Reset is an unmaskable interrupt and its ISR is called when the system reset occurs. You can see that your main program is called by this ISR with the specific label _main. That is why you have been labeling your main program with the label _main so far. The ISR sections of the interrupt sources follow the reset handler. One option to link your subroutine with the interrupt source you are using is just modifying the start up code, Startup.s, and placing your subroutine in the corresponding code section. Yet, you might not want to do that especially when you are planning to have a generic start up code that can be used by other projects that uses the same interrupt sources. In that case, you may follow two approaches. One is implementing your ISR in a separate source file and using EXPORT directive to make its address achievable by the other sources and placing an IMPORT/EXTERN directive before the definition of the vector map in the start up code. In that approach, you have to comment out the code section corresponding the interrupt source you are using in order to prevent redefinition of the same label. For instance, if you are planning to use System Timer interrupt, your generic start up code after modification should be something like:

```
The vector table.
:*******************
       IMPORT
               SysTick_Handler
                                          ; the label is to be imported
       EXPORT
               __Vectors
__Vectors
               StackMem + Stack
       DCD
                                          ; Top of Stack
               Reset_Handler
       DCD
                                          ; Reset Handler
       DCD
               SysTick_Handler
                                          ; SysTick Handler
       . . .
; The SysTick_Handler section should be disabled
; to prevent redefinition of the same label
; SysTick_Handler PROC
                                                 [WEAK]
                EXPORT
                        SysTick_Handler
                В
                ENDP
```

The other approach is calling your subroutine from the ISR implemented in the start up code, *Startup.s.* Again you should use EXPORT directive to make your subroutine achievable and you should use IM-PORT/EXTERN directive to refer your subroutine from the start up code. For instance, if you are planning to use *System Timer* interrupt, your generic start up code for the second approach after modification should be something like:

```
The vector table.
; NO CHANGE AT THIS SECTION
     EXPORT
           __Vectors
__Vectors
     DCD
           StackMem + Stack
                                ; Top of Stack
     DCD
           Reset_Handler
                                ; Reset Handler
     . . .
     DCD
           SysTick_Handler
                                ; SysTick Handler
; My_SysTick_Handler subroutine should be implemented and EXPORTed
           IMPORT My_ST_ISR
                                ; import the starting address of ISR
SysTick_Handler PROC
           EXPORT
                 SysTick_Handler
                                    [WEAK]
           В
                 My_ST_ISR
           ENDP
```

Note that the service routine is called via B instruction not BL and it is assumed that the service routine ends with BX LR instruction. By following the aforementioned approaches, you may link your subroutine with the interrupt source you are using and your subroutine becomes the ISR. Now, what is left is the initialization and the configuration of the interrupt source you are planning to use. In the following section 1.1.3, the *System Timer* is to be explained, since it is interrupt source you will be using in the scope of this lab.

1.1.3 System Timer (SysTick)

From Experiment-2, you know that delays can be written by means of software. However, software delays reduces the utilization of the processor. Namely, no other tasks can be performed during the execution of a delay subroutine. If you want to perform a repetitive task and nothing else, you may use software delay to periodically perform your task. Yet, if you want to simultaneously perform repetitive tasks and more other tasks, then things become more complicated. One way to handle such situations is to make use of the *System Timer*.

There are three important control registers for the SysTick in the TM4C123GH6PM: STCTRL, STRELOAD, STCURRENT. You may refer to page 138 of the datasheet of the MCU [1] for more detailed information about the registers.

The Status and Control register (STCTRL) given by Figure 1 is used to enable the SysTick system (interrupt vector address 0x0000.003C). Bit 0 of this register is the System Timer Enable (ENABLE) bit. This bit when set to 1 enables the SysTick system, and when set to 0, disables the SysTick system. Bit 1 is the Interrupt Enable bit (INTEN) which enables interrupts for the SysTick system. When this bit is set to 1 interrupts are enabled and an ISR will be called when the timer reaches 0. Bit 2 is the Clock Source bit (CLK_SRC). The internal oscillator of the TM4C123GH6PM is not the only clock available to use. With additional setup, other more accurate oscillators can be used. However, for now we will simply use the Precision Internal OSCillator (PIOSC) divided by 4. The PIOSC runs at 16 MHz on the TM4C123GH6PM, so PIOSC/4 is 4 MHz. Hence the clock period is 250ns, which enables us creating delays in the order of seconds.

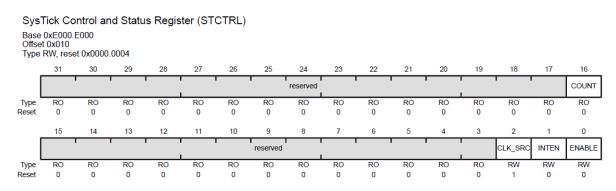


Figure 1: Status and Control register (STCTRL) at 0xE000.E010.

The SysTick Reload Value register (STRELOAD) given by Figure 2 selects the time-out period of the SysTick system. RELOAD[23:0] is where the 24-bit starting value for the counter will be stored. The SysTick system will count down from this value to 0, subtracting 1 every clock cycle.

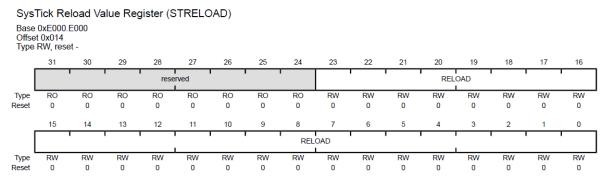


Figure 2: SysTick Reload Value register (STRELOAD) at 0xE000.E014.

The SysTick Current Value register is a 24-bit register containing the current value of the count down from the RELOAD value.

SysTick Current Value Register (STCURRENT)

Base 0xE000.E000 Offset 0x018 Type RWC, reset -

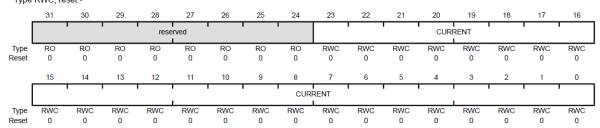


Figure 3: SysTick Current Value register (STCURRENT) at 0xE000.E018

The SYSPRI register configures the priority level, 0 to 7 of the SysTick exception handler by placing this level into the TICK field (bits 31:29). The lower the value of this field, the higher its priority. Recall from the lectures that a priority level of 1 or greater is required to enable SysTick interrupts. This register is byte addressable.

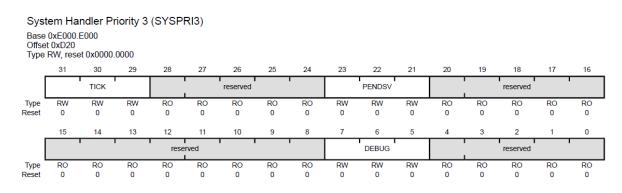


Figure 4: SYSPRI3 register at 0xE000.ED20

Once the functions of the registers are comprehended, an initialization and configuration routine can be written for the system timer interrupt. You are advised to write subroutines for initializations always, since the structure of your main code will be simpler and you may use your initialization subroutines in your future projects with slight modifications. Hence, it is better to implement the initialization and the service subroutines in the same file but separate from the main source file and to import the subroutines to your main program. As an example, the following code implements the initialization subroutine to enable an interrupt that occurs in every $500 \,\mu s$ and the user defined ISR. The initialization is to be called from the main program to configure and initialize the timer interrupt. The start up code, Startup.s, is assumed to be modified as explained in the previous section 1.1.2 to link the user defined ISR.

```
;***********************
; Your SystemTimer.s source file to implement
; initialization and ISR
;*********************************
; Definition of the labes standing for
; the address of the registers
NVIC_ST_CTRL EQU 0xE000E010
NVIC_ST_RELOAD EQU 0xE000E014
NVIC_ST_CURRENT EQU 0xE000E018
SHP_SYSPRI3 EQU 0xE000ED20
; end of the register label definitions
; 0x7D0 = 2000 \rightarrow 2000*250ns = 500mus
RELOAD_VALUE EQU 0x000007D0
; Initialization area
DIRECTIVE
                            VALUE
;LABEL
                                           COMMENT
              AREA
                             init_isr , CODE, READONLY, ALIGN=2
              THUMB
              EXPORT
                             InitSysTick
InitSysTick
              PROC
; first disable system timer and the related interrupt
; then configure it to use isternal oscillator PIOSC/4
                             R1, =NVIC_ST_CTRL
              LDR
              MOV
                             R0, #0
              STR
                             R0, [R1]
; now set the time out period
                             R1, =NVIC_ST_RELOAD
              LDR
              LDR
                             R0, =RELOAD_VALUE
              STR
                             R0, [R1]
; time out period is set
; now set the current timer value to the time out value
                             R1, =NVIC_ST_CURRENT
              LDR
                             R0, [R1]
              STR
; current timer = time out period
; now set the priority level
              LDR
                             R1, =SHP_SYSPRI3
              MOV
                             R0, #0x40000000
              STR
                             R0, [R1]
; priority is set to 2
; now enable system timer and the related interrupt
              LDR
                             R1, =NVIC_ST_CTRL
              MOV
                             R0, \#0x03
              STR
                             R0, [R1]
; set up for system time is now complete
              BX
                             LR
              ENDP
```

```
:**********************
; SysTick ISR area
DIRECTIVE
;LABEL
                         VALUE
                                     COMMENT
            EXPORT
                         My_ST_ISR
My_ST_ISR
            PROC
                                      ; your routine
            . . .
                         LR
            BX
                                       return
            ENDP
:*********************
; Your main.s source file
;************************
;LABEL
            DIRECTIVE
                         VALUE
                                     COMMENT
            AREA
                         main, CODE, READONLY
            THUMB
            EXTERN
                         InitSysTick
                                      ; Reference external subroutine
            EXPORT
                         _{-}main
__main
            PROC
                                      ; your other initializations
            . . .
            BL
                         InitSysTick
                                      ; initialize system timer
            CPSIE
                                      ; enable interrupts
                                      ; rest of your code
            ENDP
```

1.2 Stepper Motors

The stepper motor is an electromagnetic device that converts digital pulses into mechanical shaft rotation. Advantages of step motors are low cost, high reliability, high torque at low speeds and a simple, rugged construction that operates in almost any environment. The main disadvantages in using a stepper motor are the resonance effects often exhibited at low speeds and decreasing torque with increasing speed. These motors are commonly used in measurement and control applications. Sample applications include ink jet printers, CNC machines, volumetric pumps, etc.

The inner structure of the stepper motors are beyond the scope of this experiment. For this experiment we will consider stepper motors as black boxes, which convert digital pulses into mechanical shaft rotation. The protocol for this conversion is standard and very simple.

The stepper motor, like most other motor types has coils in its structure, which converts electrical current to magnetic force to rotate the motor shaft. Very simple schematic of a stepper motor with its control circuitry is given in Figure 5.

By energizing the coils respectively in each step, the stepper motor is rotated in one direction with fixed angles, which is prescribed in stepper motor's specifications. Every stepper motor has a fixed stepping angle. While reversing the current in an alternating fashion (windings energized consecutively), the motor makes this fixed angle of rotation. Essentially a digital input pattern with only one high bit from the driver is equivalent to one step. This mode of operation is called the *Full Step Mode* for step motors.

Applying these values to the controller outputs in the ascending order according to step index will make our motor make four steps of fixed angle rotation. Note that the table is cyclic in the sense that Full Step 1 follows Full Step 4. Reversing the direction of the order to descending (the order which the output is applied) will make the motor to rotate in the reverse direction.

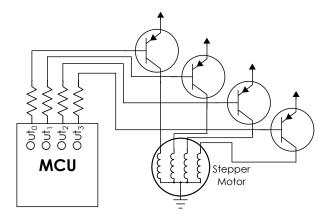


Figure 5: In this circuit, a micro-controller controls the rotation of a motor known as a step motor by sequentially activating one transistor at a time (thus, energizing one motor coil at a time). With each step in the sequence, the motor rotates a fixed number of degrees.

Step No.	Out_0	Out_1	Out_2	Out_3
Full Step 1	1	0	0	0
Full Step 2	0	1	0	0
Full Step 3	0	0	1	0
Full Step 4	0	0	0	1

1.2.1 Motor Driving

In the previous section 1.2, we have learned how to control the motors via applied voltages. But when it comes to the driving circuitry, the motor may require high currents compared to other interface devices. The current output of usual voltage outputs (like PIA) may not suffice this requirement. Because of similar reasons, separate motor driver IC's are used. For this experiment, you will use ULN2003A.

The ULN200xA devices are high-voltage, high-current Darlington transistor arrays. The ULN2003A is one of the most common motor driver ICs that houses an array of 7 Darlington transistor pairs, each capable of driving loads up to 500mA and 50V. Typical usage of the ULN2003A is in driver circuits for relays, lamp and LED displays, stepper motors, logic buffers and line drivers.

1.2.2 Motor Drive Control

Up to now, we have seen how to control and drive the stepper motors. For this experiment, as you may easily guess, we will use TM4C123GH6PM as the controller. For the experimental part, you don't need to implement any circuit to drive your motor since ULN2003A's board already provides all necessary connections made. The board has 4 inputs for connection to your microcontroller, power supply connection for the stepper motor voltage, an ON/OFF jumper, a direct connect stepper motor header and 4 LEDs to indicate stepping state. For 5V supply, you may use the VBUS pin on the microcontroller board. Moreover, LEDs on ULN2003A's board turn on/off according to the microcontroller's output (LEDs are active high). The connections for ULN2003A's board in addition to correspondence between LEDs and microcontroller connection are given in Fig. 6 below:

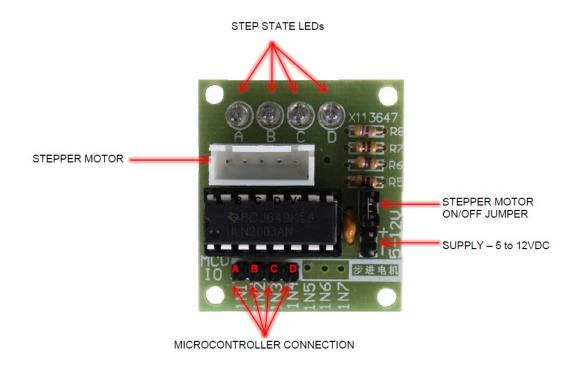


Figure 6: ULN2003A PCB connections

2 Preliminary Work

Assume you have started your own company and you want to develop an ink jet printer. You made a research and you understood there are different components needed. One of the required tasks for an ink jet printer is to relocate the ink jet throughout the page width. After your preliminary research, you realized that, this task is commonly done by stepper motors. Before you advance in the development of the rest of the printer, you should understand how to drive a stepper motor using a TM4C123GH6PM processor. Hence, you have decided to implement a system that controls the speed and direction of a stepper motor via external push buttons. You will implement your system step by step as follows:

- 1. (10%) Write a subroutine which sends a GPIO port the necessary signals to demonstrate the Full Step Mode in both directions (clockwise or counterclockwise).
- 2. (10%) Now, you will design a system that has two inputs from push buttons and provides a step to the stepper motor upon input. One button is to provide a step for clockwise rotation and the other is for counterclockwise rotation. You will use 4 buttons of the 4x4 Keypad Module introduced in Experiment-2. Draw the necessary connections between TM4C123G, ULN2003A's board, 4x4 Keypad Module and stepper motor.
- 3. (10%) According to your hardware design in step-2, write a program that, in an infinite loop, gives a step upon the release of one button and gives a step in the opposite direction upon the release of the other button. You may assume that the other button is never pushed until the pressed button is released. The response of the motor should be after the button release. You should be aware of bouncing inherent in the buttons.
- 4. (5%) At this stage, you will design a system that has 4 inputs from push buttons to control a stepper motor. One button is for speeding up, one is for slowing down, the other two are for directions. You will use 4 buttons of the 4x4 Keypad Module introduced in Experiment-2. Draw the necessary connections between TM4C123G, ULN2003A's board, 4x4 Keypad Module and stepper motor.
- 5. (65%) According to your hardware design in part-4, write a program that, in an infinite loop, drives a stepper motor speed and direction of which can be controlled by external push buttons. You may

assume that the no button is ever pushed until a pressed button is released. The controls should be applied upon releasing the corresponding button. You should be aware of bouncing inherent in the buttons.

For this item, please explain how you attack the problem and draw a flowchart of your algorithm.

3 Experimental Work

- 1. User Driven Stepper Motor: (30%) Construct the circuit that you have prepared in 2nd step of preliminary work (2.2). Test the operation with the program that you have written in 3rd step of preliminary work (2.3). Record a video of your testing process to demonstrate your results. Upload your videos to any platform you like and share the associated links in your reports. Note that the stepper motor you use has 1/64 reduction ratio, thus you may need to press the buttons multiple times to observe the motor shafts rotation. You may also take advantage of ULN2003A's LEDs to check for the correct sequence of output values.
- 2. <u>User Operated MCU Driven Stepper Motor:</u> (70%) Construct the circuit that you have prepared in 4th step of preliminary work (2.4). Test the operation with the program that you have written in 5th step of preliminary work (2.5). Record a video of your testing process to demonstrate your results. Upload your videos to any platform you like and share the associated links in your reports.

4 Parts List

- 1 x TM4C123G Board
- 1 x Stepper Motor
- 1 x ULN2003A
- 1 x 4x4 Keypad Module

References

[1] TI, "Tiva™ tm4c123gh6pm microcontroller data sheet." http://www.ti.com/lit/ds/spms376e/spms376e.pdf.