## **AVR102: Block Copy Routines**

#### **Features**

- Program Memory (Flash) to SRAM Copy Routine
- SRAM to SRAM Copy Routine
- Extremely Code Efficient Routines Flash → SRAM: 6 Words, SRAM → SRAM: 5 Words
- Runable Test/Example Program

#### Introduction

This application note contains routines for transfer of data blocks.

- Flash to SRAM Copy. Copies data blocks of sizes up to 256 bytes from any Flash address to any SRAM address.
- SRAM to SRAM copy. Copies data blocks of sizes up to 256 bytes from any SRAM source address to any SRAM destination address.

The routines are described in detail in the following sections.

### Flash to SRAM Copy – Subroutine "flash2ram"

Before calling this routine, the following input parameters must be set up by the user:

- "flashsize" Register variable holding the size of the data block.
- Z-pointer 2 x source address of first Flash block byte.
- Y-pointer Destination address of first SRAM block byte.

The routine uses the "LPM"-instruction which is the one to use for data transfer from Flash to Register File. The instruction selects the Flash word (16-bit) pointed to by the 15 most significant bytes of the Z-pointer. If LSB of the Z-pointer is 0, the lower byte of the Flash word is returned, otherwise the higher byte is returned. The returned byte is always found in R0. To obtain the 15 MSBs of Z with the correct word value, the user must be careful to load Z with two times the address of the first double byte in the table. The program listing shows how to handle this precaution.

During data transfer, the auto-increment facility of the pointers is utilized. Writing to SRAM is done using the "ST Y+,Rs"-instruction. The "LPM"-instruction does not support auto-increment or decrement. The "ADIW" instruction is used to increment the 16-bit pointer.

The register variable "flashsize" is used as a loop counter in the routine.



# 8-bit **AVR**® Microcontroller

# Application Note








Figure 1. "flash2ram" Flow Chart

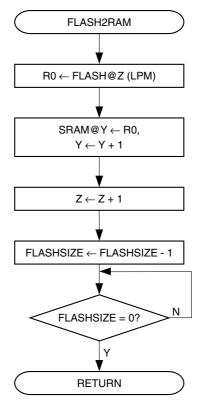


Table 1. "flash2ram" Register Usage

Register	Input	Internal	Output
R0		Temporary data storage	
R16	"flashsize" – Size of data block to copy		
R28	"YL" – Low address of SRAM data start		
R29	"YH" – High address of SRAM data start		
R30	"ZL" - Low address of Flash data start		
R31	"ZH" – High address of Flash data start		

Table 2. "flash2ram" Performance Figures

Parameter	Value	
Code Size (Words)	5 + return	
Execution Time	10 x (block size) + return	
Register Usage	Low Registers High Registers Pointers	:1 :1 :Y, Z
Interrupts Usage	None	
Peripherals Usage	None	

### SRAM to SRAM Copy – Subroutine "ram2ram"

Before calling this routine, the following input parameters must be set up by the user:

- "ramsize" Register variable holding the size of the data block.
- Z-pointer source address of first byte in block.
- Y-pointer destination address of first byte in block.

By utilizing the pointer auto-increment facility, this routine is extremely compact. Moving one byte of data and incrementing both pointers requires two instructions only. Two more instructions are needed to decrement an check the register variable "ramsize" which is used as a loop counter in the routine. The data are temporarily stored in the register variable "ramtemp" during transfer.

Figure 2. "ram2ram" Flow Chart

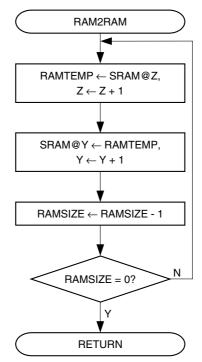


Table 3. "ram2ram" Register Usage

Register	Input	Internal	Output
R1		"ramtemp" – Temporary data storage	
R16	"ramsize" - Size of data block to copy		
R28	"YL" - Destination address low byte		
R29	"YH" - Destination address high byte		
R30	"ZL" - Source address low byte		
R31	"ZH" – Source address high byte		





Table 4. "flash2ram" Performance Figures

Parameter	Value		
Code Size (Words)	4 + return		
Execution Time	6 x (block size) + return	6 x (block size) + return	
Register Usage	Low Registers High Registers Pointers	:1 :1 :Y, Z	
Interrupts Usage	None		
Peripheral Usage	None		

# Test/Example Program

The application note program file contains a runable test program which uses the copy application routines to copy 20 bytes of data from Flash to SRAM, then make a second copy of the data at another SRAM location. The test program is made for use with an AT90S8515. By changing including another "\*def.inc" file, the program can be used with any other AVR MCU with SRAM.





#### **Atmel Headquarters**

Corporate Headquarters 2325 Orchard Parkway San Jose, CA 95131 TEL 1(408) 441-0311 FAX 1(408) 487-2600

#### Europe

Atmel SarL Route des Arsenaux 41 Casa Postale 80 CH-1705 Fribourg Switzerland TEL (41) 26-426-5555 FAX (41) 26-426-5500

#### Asia

Atmel Asia, Ltd.
Room 1219
Chinachem Golden Plaza
77 Mody Road Tsimhatsui
East Kowloon
Hong Kong
TEL (852) 2721-9778
FAX (852) 2722-1369

#### Ianan

Atmel Japan K.K. 9F, Tonetsu Shinkawa Bldg. 1-24-8 Shinkawa Chuo-ku, Tokyo 104-0033 Japan TEL (81) 3-3523-3551 FAX (81) 3-3523-7581

#### **Atmel Operations**

#### Memory

Atmel Corporate 2325 Orchard Parkway San Jose, CA 95131 TEL 1(408) 436-4270 FAX 1(408) 436-4314

#### Microcontrollers

Atmel Corporate 2325 Orchard Parkway San Jose, CA 95131 TEL 1(408) 436-4270 FAX 1(408) 436-4314

Atmel Nantes La Chantrerie BP 70602 44306 Nantes Cedex 3, France TEL (33) 2-40-18-18-18 FAX (33) 2-40-18-19-60

#### ASIC/ASSP/Smart Cards

Atmel Rousset Zone Industrielle 13106 Rousset Cedex, France TEL (33) 4-42-53-60-00 FAX (33) 4-42-53-60-01

Atmel Colorado Springs 1150 East Cheyenne Mtn. Blvd. Colorado Springs, CO 80906 TEL 1(719) 576-3300 FAX 1(719) 540-1759

Atmel Smart Card ICs Scottish Enterprise Technology Park Maxwell Building East Kilbride G75 0QR, Scotland TEL (44) 1355-803-000 FAX (44) 1355-242-743 RF/Automotive
Atmel Heilbronn
Theresienstrasse 2
Postfach 3535
74025 Heilbronn, Germany
TEL (49) 71-31-67-0
FAX (49) 71-31-67-2340

Atmel Colorado Springs 1150 East Cheyenne Mtn. Blvd. Colorado Springs, CO 80906 TEL 1(719) 576-3300 FAX 1(719) 540-1759

Biometrics/Imaging/Hi-Rel MPU/ High Speed Converters/RF Datacom Atmel Grenoble Avenue de Rochepleine BP 123 38521 Saint-Egreve Cedex, France TEL (33) 4-76-58-30-00 FAX (33) 4-76-58-34-80

e-mail literature@atmel.com

Web Site http://www.atmel.com

#### © Atmel Corporation 2002.

Atmel Corporation makes no warranty for the use of its products, other than those expressly contained in the Company's standard warranty which is detailed in Atmel's Terms and Conditions located on the Company's web site. The Company assumes no responsibility for any errors which may appear in this document, reserves the right to change devices or specifications detailed herein at any time without notice, and does not make any commitment to update the information contained herein. No licenses to patents or other intellectual property of Atmel are granted by the Company in connection with the sale of Atmel products, expressly or by implication. Atmel's products are not authorized for use as critical components in life support devices or systems.

ATMEL® and AVR® are the registered trademarks of Atmel.

Other terms and product names may be the trademarks of others.

