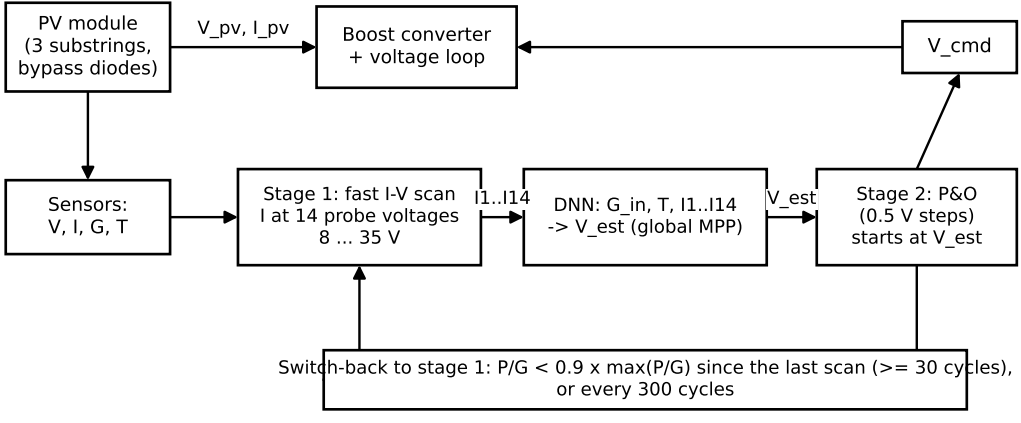
PV module
(3 substrings,
bypass diodes)
V_pv, I_pv
Boost converter
+ voltage loop
V_cmd
Sensors:
V, I, G, T
Stage 1: fast I-V scan
I at 14 probe voltages
8 ... 35 V
I1..I14
DNN: G_in, T, I1..I14
-> V_est (global MPP)
V_est
Stage 2: P&O
(0.5 V steps)
starts at V_est
Switch-back to stage 1: P/G < 0.9 x max(P/G) since the last scan (>= 30 cycles),
or every 300 cycles