

Toyota Genuine Audio

INSTALLATION INSTRUCTIONS

FOR



Avensis Verso (RHD) **M2*R

TABLE OF CONTENTS



1.	Application Chart	4
2.	System Layout	12
3.	Combo / Add on Unit Installation	
	3.1 Vehicle Disassembly	
	3.2 1DIN Audio Installation	15
	3.3 1.4DIN Audio Installation	16
	3.4 Wide-2DIN Audio Installation	17
4.	CD-, MD-Changer and Subwoofer Installation 4.1 Vehicle Disassembly 4.1.1 In case of Installation under the Passenger's Seat 4.1.2 In case of Installation in the Luggage Area 4.2 CD- and MD-Changer Installation 4.2.1 Hanging under the Passenger's Seat 4.2.2 In the Luggage Area 4.3 Subwoofer Installation 4.3.1 Hanging under the Passenger's Seat	18
	4.1 Vehicle Disassembly	18
	4.1.1 In case of Installation under the Passenger's Seat	18
	4.1.2 In case of Installation in the Luggage Area	20
	4.2 CD- and MD-Changer Installation	25
	4.2.1 Hanging under the Passenger's Seat	25
	4.2.2 In the Luggage Area	33
	4.3 Subwoofer Installation	40
	4.3.1 Hanging under the Passenger's Seat	40
5.	Outside Temperature Sensor Installation	45

Avensis Verso **M2*R

(RHD)

1.4DIN Head-Unit	- 0 0 4 0 0	COMBINATION Radio/Cassette (only) Radio/Cassette + CD-Deck Radio/Cassette + CD-Changer Radio/Cassette + MD-Changer CD-Tuner + CD-Changer	## In-Dash CD-Changer, Timuser (08601) Green 0.6 CD-Changer, (08601-00913)	+ ADD-ON UNIT	(S) Seat Mounting CD-Changer TM0461 (08601-00911) MD-Changer TM0660 (08601-00902) MD-Changer TM0660 (08601-00902) REQUIRED ADDITIONAL PARTS Cover-Plate (55522-42010) Cover-Plate (55522-42010)
	7	CD-Tuner + MD-Changer	08600-00965 (green)		Cover-Plate (55522-42010) + F/K (08695-00803) (3)

Avensis Verso **M2*R

(RHD)

UNIT(S)	MD-Changer TM0660 (08601-00900)	Navigation System TNS500 (08545-00803)	Navigation System TNS200 (08545-00802)	Cassette-Storage PZ437-90342-00 or CD-Storage PZ437-90341-00		REQUIRED ADDITIONAL PARTS	A-box (55521-16030) A-box (55521-16030) A-box (55521-16030) A-box (55521-16030) A-box (55521-16030)	A-box (55521-16030) A-box (55521-16030)			A-box (55521-16030) A-box (55521-16030) + F/K (08695-00803) A-box (55521-16030) A-box (55521-16030) + F/K (08695-00803)
+ ADD-ON UNIT(S)	Seat Mounting CD-Changer TM0461 (08601-00912) MD-Changer TM0660 (08601-00900)	Hide Away CD-Changer TM0461 (08601-00911)	In-Dash CD-Changer TM056; (0862):-01907)	CD-Deck TF0411 (08601-0090c)	300 (08690-00827)		922) 934) 933) 920))922))936)	922) 9334) 920) 932)	922) 934)	922) 922) 934) 934) 9334)
		3 8	In-Dash C	CD-D¢	Cassette-Deck TM0300 (08690-00827)	ATION HEAD UNIT	TF4301 (08600-00922) TM4201 (08600-009334) TP4000 (08600-00933) TF2002 (08600-00920) TM2003 (08600-00932)	TM4412 (08600-00922) TM4414 (08600-00936)	TF4301 (08600-00922) TM4201 (08600-00934) TP4000 (08600-00933) TF2002 (08600-00920) TM2003 (08600-00932)	TF4301 (08600-00922) TM4201 (08600-00934)	TF4301 (08600-00922) TF4301 (08600-00922) TM4201 (08600-00934)
	A DIA	ACCESSORIE			/	COMBINATION	1 Radio/Cassette (only)	2 CD-Tuner (only)	3 Radio/Cassette + Cassette storage	4 Radio/Cassette + CD-Deck	5 Radio/Cassette + CD-Changer

Avensis Verso **M2*R

	(00600-	Navigation System TNS500 (08545-00803)	Navigation System TNS200 (08545-00802)	Cassette-Storage PZ437-90342-00 or CD-Storage PZ437-90341-00		REQUIRED ADDITIONAL PARTS		A-box (55521-16030) + F/K (08695-00803) (3) A-box (55521-16030) + F/K (08695-00803) (3)		- F/K (08695-00803)	F/K (08695-00803) (3)	- F/K (08695-00803) F/K (08695-00803)	A-box (55521-16030) + F/K (08695-00803)
+ ADD-ON UNIT(S)	3D-Changer TM0461 (08601-00912) MD-Changer TM0660 (08601-00900)	(08501-00911)	1.20,500		(12		90						(3) (5)
	Seat Mounting CD-Changer	Hide Away CD-Changer TM0464	In-Dash CD-Changer TM0561 (086)1	CD-Deck TF0411 (08601-00906)	Cassette-Deck TM0300 (08690-00827)	HEAD UNIT	TF4301 (08600-00922) TM4201 (08600-00934)	TF4301 (08600-00922) TM4201 (08600-00934)	TF4301 (08600-00922) TM4201 (08600-00934)	TF4301 (08600-00922) TF4301 (08600-00922)	TF4301 (08600-00922)	TF4301 (08600-00922) TF4301 (08600-00922) TM4201 (08600-00934) TM4201 (08600-00934)	TF4301 (08600-00922)
	ATOXOT OF	ACCESSORIES	6000)	COMBINATION	Radio/Cassette + In dash CD-Changer	Radio/Cassette + MD-Changer	Radio/Cassette + Full Map Navigation	Radio/Cassette + CD-Deck + CD-Changer	Radio/Cassette + CD-Deck + MD-Changer	Radio/Cassette + CD-Changer CD/Cass-storage	Radio/Cassette + CD-Changer + MD-Changer
							9	۷	jin ∞	U-bsəl	e PINIU	=	12

Avensis Verso **M2*R

(RHD)

	(0060)	VS500 (08545-00803)	Navigation System TNS200 (08545-00802)	Cassette-Storage PZ437-90342-00 or CD-Storage PZ437-90341-00		REQUIRED ADDITIONAL PARTS	F/K (08695-00803)		F/K (08695-00803) (3)	F/K (08695-00803) (3) F/K (08695-00803) (3)				
+ ADD-ON UNIT(S)	:D-Changer TM0461 (08601-00912) MD-Changer TM0660 (08601-00900)	ger TM0461-(08601-00911) Navigation System TNS500 (08545-00803)			The state of the s		(3) (C)	(3) (3) (4) (4) (4) (4) (4) (4) (4) (4) (4) (4			© © © © © © © © © © © © © © © © © © ©	(2)		
	Seat Mounting CD-Changer	Hide Away CD-Changer TM0461	In-Dash CD-Changer TM056*; (0865/-00307)	CD-Deck TF0411 (08601-00906)	Cassette-Deck TM0300 (08690-00827)	HEAD UNIT	TF4301 (08600-00922)	TF4301 (08600-00922) TM4201 (08600-00934)	TF4301 (08600-00922)	TF4301 (08600-00922) TM4201 (08600-00934)	TF4301 (08600-00922) TM4201 (08600-00934)	TF4301 (08600-00922)	TM4412 (08600-00935) TM4414 (08600-00936)	TM4414 (08600-00936)
	ATOXOT (ACCESSORIES	(00))	COMBINATION	Radio/Cassette + CD-Changer + MD-Changer+CD/Cass-storage	Radio/Cassette + CD-Changer + Full Map Navigation	Radio/Cassette + In dash CD- Changer + MD-Changer	Radio/Cassette + MD-Changer + Cass-storage	Radio/Cassette + MD-Changer + Full Map Navigation	Radio/Cassette + MD-Changer + CD-Changer + Full Map Navigation	CD-Tuner + CD-storage	CD-Tuner + Cassette-Deck
							13	41	jir 5	n U-bs :	⊨ DIN H€	,	19	50

Avensis Verso **M2*R

(RHD)

			5-00802)	Cassette-Storage PZ437-90342-00 or CD-Storage PZ437-90341-00		REQUIRED ADDITIONAL PARTS	A-box (55521-16030) A-box (55521-16030) + F/K (08695-00803)		A-box (55521-16030) + F/K (08695-00803) (3)		- F/K (08695-00803)		F/K (08695-00803) (3)	
T(S)	Seat Mounting CD-Changer TM0461 (08601-00912) MD-Changer TM0660 (08601-00900)	Navigation System TNS500 (08545-00803)	Navigation System TNS200 (08545-00802)	Cassette-Storage PZ43.					₫	(3)	••			(2)
+ ADD-ON UNIT(S)	10461 (08601-00912) ML	(58501-00911)	(40)			2	(E)				(2)	(2)		
	ting CD-Changer TM	Hide Away CD-Changer TM0461.	er TM0561 (38601-00507)	CD-Deck TF0411 (08601-00906)	0-00827)									
	Seat Moun	Hide Away CD.	In-Dash CD-Changer TM0561 (58601	CD-Deck TF041	Cassette-Deck TM0300 (08690-00827)	HEAD UNIT	TM4414 (08600-00936) TM4414 (08600-00936)	TM4414 (08600-00936)	TM4414 (08600-00936)	TM4414 (08600-00936)	TM4414 (08600-00936) TM4414 (08600-00936)	TM4414 (08600-00936)	TM4414 (08600-00936)	TM4414 (08600-00936)
	8 TOX 0	ACCESSORIES	600)	COMBINATION	CD-Tuner + CD-Changer	CD-Tuner + In dash CD-Changer	CD-Tuner + MD-Changer	CD-Tuner + Full Map Navigation	CD-Tuner + CD-Changer + CD-storage	CD-Tuner + CD-Changer + Full Map Navigation	CD-Tuner + MD-Changer + CD-storage	CD-Tuner + MD-Changer + Full Map Navigation
							21	22	23	ìinU-b ≨	V Head		27	28

Avensis Verso **M2*R

(RHD)

	501-00900)	Navigation System TNS500 (08545-00803)	Navigation System TNS200 (08545-00802)	Cassette-Storage PZ437-90342-00 or CD-Storage PZ437-90341-00		REQUIRED ADDITIONAL PARTS			- - E/K (08695-00803)	F/K (08695-00803)	F/K (08695-00803) (3) F/K (08695-00803) (3)		F/K (08695-00803) F/K (08695-00803)
+ ADD-ON UNIT(S)	Seat Mounting CD-Changer TM0461 (08601-00912) MD-Changer TM0660 (08601-00900)	Hide Away CD-Changer TM0461 (08601-00911)			27)						40		(3) (5)
	Seat Mounting	Hide Away CD-Chai	In-Dash CD-Changer TM0561 (0865 i-00927)	CD-Deck TF0411 (08601-00906)	Cassette-Deck TM0300 (08690-00827)	HEAD UNIT	MOP-Unit 08600-00948 (green)-note (1)	MOP-Unit 08600-00958-A (green)-note (1)	MOP-Unit MOP-Unit	08600-00948 (green)-note (1)	MOP-Unit 08600-00948 (green)-note (1)	MOP-Unit 08600-00948 (green)-note (1)	MOP-Unit 08600-00948 (green)-note (1)
	ATO: 60	ACCESSORIES				COMBINATION	Radio/Cassette (only)	CD-Tuner (only)	Radio/Cassette + CD-Changer		Radio/Cassette + MD Changer	Radio/Cassette + Navigation (TBT)	Radio/Cassette + CD-Changer + MD-Changer
							59	30	-∙ N	lG-5DI	biW ²⁸	33	34

08695-00803 = Hanging Seat Mounting Kit • Note (1): Outside temperature sensor optional • Note (2): Luggage area mounting • Note (3): Passenger seat mounting

Only possible if the vehicle is pre-equipped with the 18P and 12P audio-connectors

Avensis Verso **M2*R

(RHD)

		(8)	45-00802)	Cassette-Storage PZ437-90342-00 or CD-Storage PZ437-90341-00		REQUIRED ADDITIONAL PARTS				- F/K (08695-00803)	F/K (08695-00803) F/K (08695-00803) (3) F/K (08695-00803) (3)	
	TM0461 (08601-00912) MD-Changer TM0660 (08601-00900)	Navigation System TNS500 (08545-00803)	Navigation System TNS200 (08545-00802)	Cassette-Storage PZ437			(3)	(2) (2) (3)	(2) (2) (3)			
+ ADD-ON UNIT(S)	Seat Mounting CD-Changer TM0461 (08601-00912) M	Hide Away CD-Changer TM0461 (08601-00911)	In-Dash CD-Changer TM0561 (08601-00907)	(08601-00906)	0.7827)		2 2 S		3 5 5			
	Seat Mounti	Hide Away CD-C	In-Dash CD-Changer	CD-Deck TF0411 (08601-00906)	Cassette-Deck TM0300 (08555-00827)	HEAD UNIT	MOP-Unit 08600-00948 (green)-note (1)	MOP-Unit 08600-00948 (green)-note (1)	MOP-Unit 08600-00948 (green)-note (1)	MOP-Unit MOP-Unit 08600-00958-A (areen)-note (1)	08600-00958-A (green)-note (1) MOP-Unit 08600-00958-A (green)-note (1)	MOP-Unit 08600-00958-A (green)-note (1)
		ACCESSORIES				COMBINATION	Radio/Cassette + CD-Changer + Navigation (TBT)	Radio/Cassette + MD Changer + Navigation (TBT)	Radio/Cassette + MD Changer + CD-Changer + Navigation (TBT)	CD-Tuner + CD-Changer	CD-Tuner + MD-Changer	CD-Tuner + Navigation (TBT)
							32	36	DIN S	Տ-əbiW ಜ	38	40

08695-00803 = Hanging Seat Mounting Kit • Note (1): Outside temperature sensor optional • Note (2): Luggage area mounting • Note (3): Passenger seat mounting

(n) Only possible if the vehicle is pre-equipped with the 18P and 12P audio-connectors

Avensis Verso **M2*R

(RHD)

nger TM0660 (08601-00900) Navigation System TNS500 (08545-00803) Navigation System TNS200 (08545-00802) Cassette-Storage PZ437-90342-00 or CD-Storage PZ437-90341-00	REQUIRED ADDITIONAL PARTS	F/K (08695-00803) F/K (08695-00803)	(8	F/K (08695-00803) F/K (08695-00803)	((
JNIT(S) MD-Changer TM0660 (Navigation Sy Navig		(Z) (Z)	(S) (S)	(3)	(2) (2) (3) (3)
+ ADD-ON UNIT(S) Seat Mounting CD-Changer TM0461 (08601-00912) MD-Changer TM0660 (08601-00900) Hide Away CD-Changer TM0461 (08601-00911) Navigation System TNS500 ish CD-Changer TM0561 (05001-01907) CD-Deck TF0411 (08601-00905) Cassette-St TM0300 (08690-00827)		\$ \$ S	(2, C) (3, C) (4, C)		(2) (2) (3) (4)
Seat Mounting CD-Changer TM046 Hide Away CD-Changer TM0461 (08601 In-Dash CD-Changer TM0561 (05:001-0:1907) CD-Deck TF0411 (08601-0:0906) Cassette-Deck TM0300 (08690-00827)	HEAD UNIT	MOP-Unit 08600-00958-A (green)-note (1)	MOP-Unit 08600-00958-A (green)-note (1)	MOP-Unit 08600-00958-A (green)-note (1)	MOP-Unit 08600-00958-A (green)-note (1)
ACCESSORIES	COMBINATION	CD-Tuner + CD-Changer + MD-Changer	CD-Tuner + CD-Changer + Navigation (TBT)	CD-Tuner + MD-Changer + Navigation (TBT)	CD-Tuner + MD-Changer + CD-Changer + Navigation (TBT)
		41	NIQ2 .	- əbiW &	44


08695-00803 = Hanging Seat Mounting Kit • Note (1): Outside temperature sensor optional • Note (2): Luggage area mounting • Note (3): Passenger seat mounting

Only possible if the vehicle is pre-equipped with the 18P and 12P audio-connectors

2. SYSTEM LAYOUT



2.1 CD-CHANGER

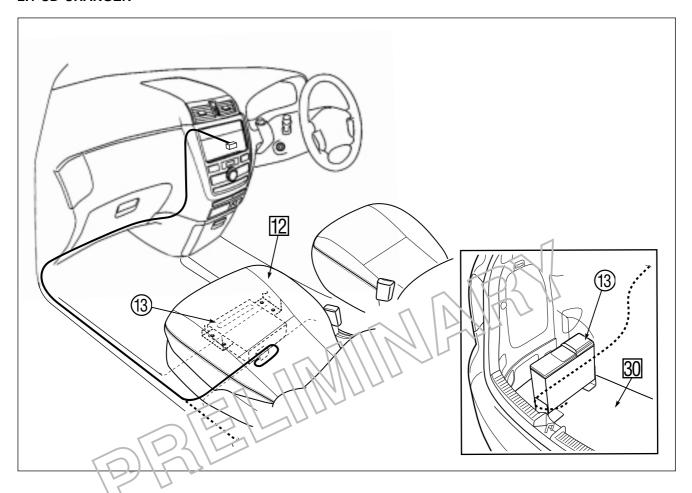


NOTE:

The preferred position of the CD-changer ③ is under the passenger's seat ②. In case of vehicles with navigation, the navi ECU is located under the passenger's seat ②. In this case the CD-changer ③ can only be installed in the luggage area ③.

To install the CD-Changer 3 under the passenger's seat 2, you need the seat mounting CD-changer TM0461 (08601-00912) and the additional hanging seat mounting kit F/K (08695-00803). To install the CD-changer 3 in the luggage area 3, you need the hide away CD-changer TM0461 (08601-00911).

2.2 MD-CHANGER

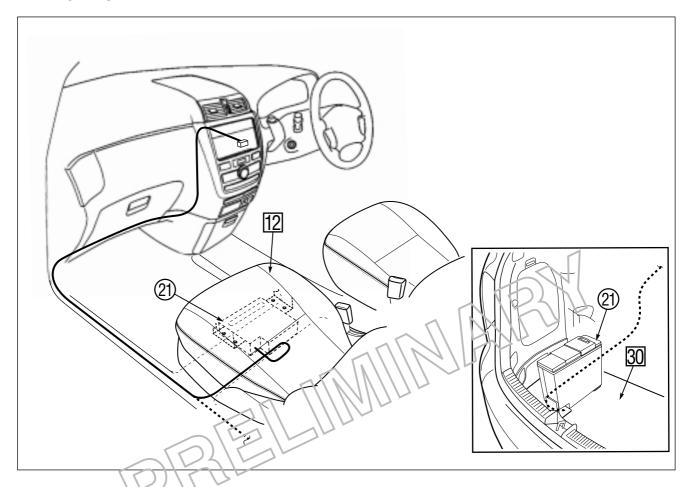

NOTE:

The preferred position of the MD-changer is under the passenger's seat. In case both the seat mounting CD-changer and the MD-changer are to be installed, the MD-changer should be installed in the luggage area. In case navigation is installed the CD-changer and MD-changer can be installed in the luggage area.


To install the MD-changer ② under the passenger's seat ②, you need the MD-changer TM0660 (08601-00900) and the additional hanging seat mounting kit F/K (08695-00803).


To install the MD-changer 20 in the luggage area 30, you only need the MD-changer TM0660 (08601-00900).

COMBO / ADD ON UNIT INSTALLATION



3.1 VEHICLE DISASSEMBLY

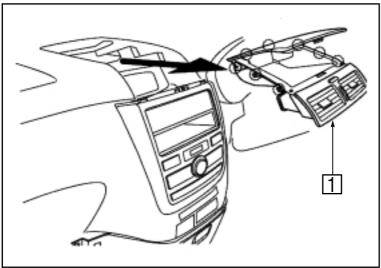

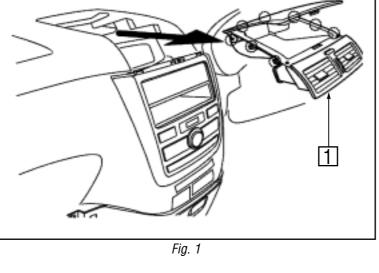

Remove the panel 2 and centre cluster 31.

Remove the accessory box 4.

Remove the upper cluster 1.

: Clip (8x)

101: Screw (4x) 102: Screw (1x)

 \bigcirc : Clip (7x) + (8x)

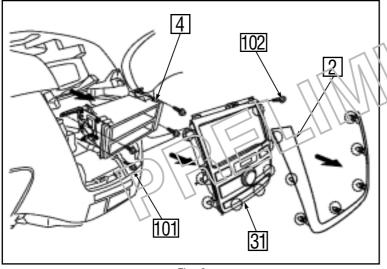


Fig. 2


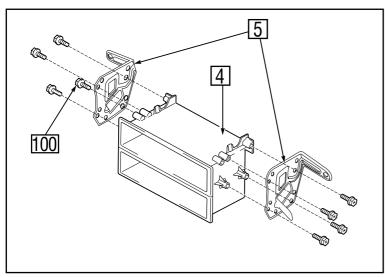


Fig. 3

3. Remove the brackets 5 (2x) from the accessory box 4.

100: Screw (8x)

3.2 1DIN AUDIO INSTALLATION

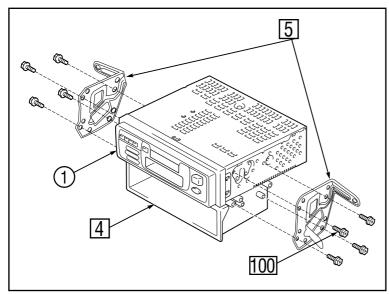

1. Mount the brackets 5 (2x) to the audio assembly ① and accessory box ④ or add on unit.

100: Screw (8x)

Fig. 4

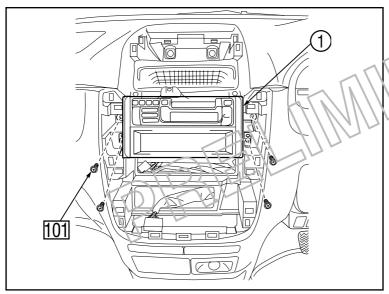


Fig. 5

2. Before fitting the audio assembly ① to the vehicle connect the vehicle's audio connector (10P/6P) and antenna.

101: Screw (4x)

3.3 1.4DIN AUDIO INSTALLATION

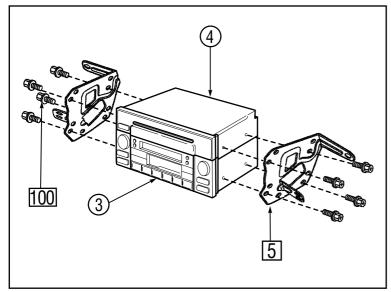


Fig. 6

WITH 0.6DIN ADD ON UNIT

1. Mount the brackets 5 (2x) onto the 1.4 DIN audio assembly 3 and 0.6DIN add on unit 4.

100: Screw (8x)

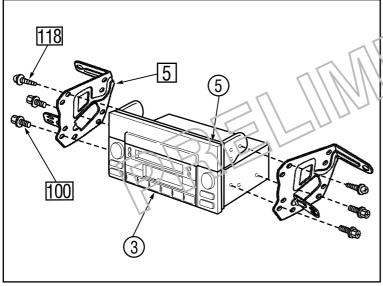


Fig. 7

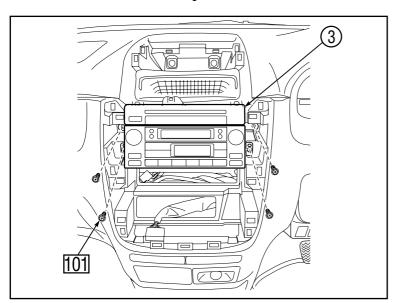


Fig. 8

WITHOUT 0.6DIN ADD ON UNIT

1. Fit the 0.6-DIN cover plate ⑤.

Mount the brackets ⑤ (2x) onto the audio assembly ③ and 0.6DIN cover plate ⑤.

100: Screw (4x) 118: Screw (2x)

2. Before fitting the audio assembly ③ to the vehicle connect the vehicle's audio connector (10P/6P) and antenna.

101: Screw (4x)

3.4 WIDE-2DIN AUDIO INSTALLATION

Only possible if the vehicle is pre-equipped with the 18P and 12P audio-connectors.

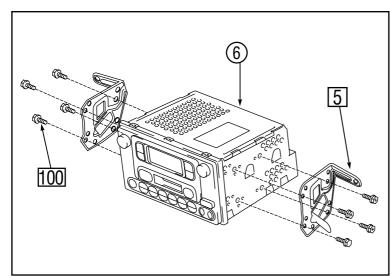


Fig. 9

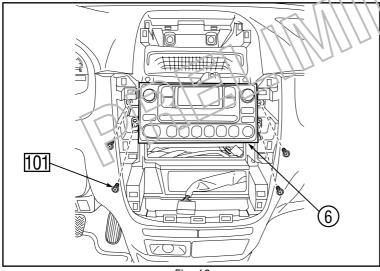


Fig. 10

1. Mount the brackets 5 (2x) onto the wide-2DIN audio assembly 6. 100: Screw (8x)

Before fitting the wide-2DIN audio assembly 6 to the vehicle connect the vehicle's audio connector (10P/6P) and antenna.

101: Screw (4x)

4. CD-, MD-CHANGER AND SUBWOOFER INSTALLATION



4.1 VEHICLE DISASSEMBLY

4.1.1 IN CASE OF INSTALLATION UNDER THE PASSENGER'S SEAT

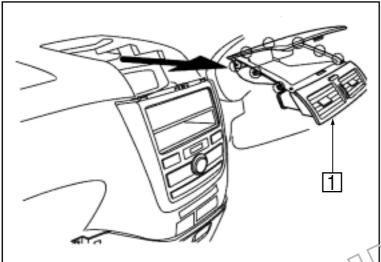
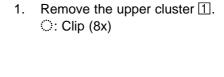


Fig. 11




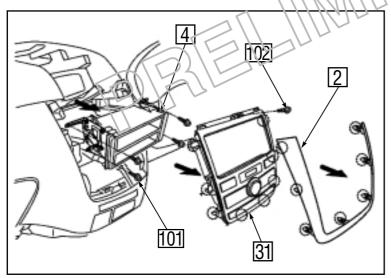


Fig. 12


2. Remove the panel 2 and centre cluster 31.

Remove the accessory box 4.

101: Screw (4x) 102: Screw (1x) : Clip (7x) + (8x)

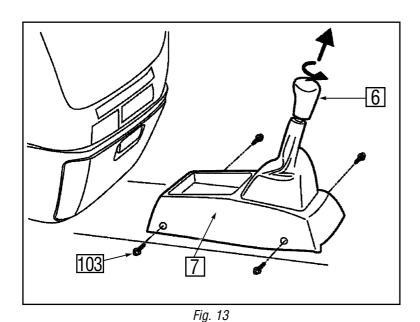

3. Remove the shift knob 6 and shift cover 7.103: Screw (4x)

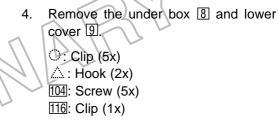

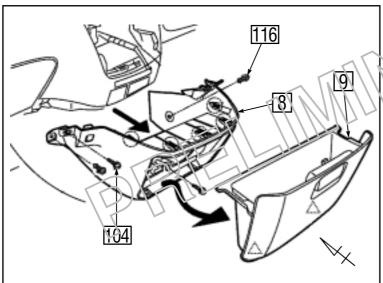


Fig. 14

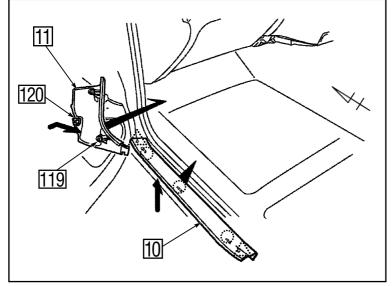


Fig. 15

5. Remove the front scuff plate (L) 🗓 and kick panel (L) 🗓.

: Ćlip (3x)

△: Hook (2x)

119: Clip (2x)

120: Hook (1x)

4.1.2 IN CASE OF INSTALLATION IN THE LUGGAGE AREA

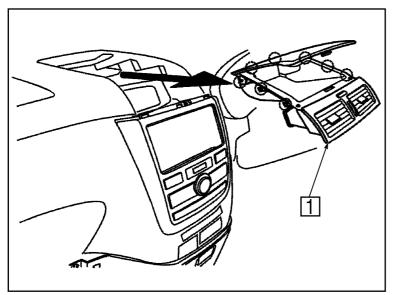


Fig. 16

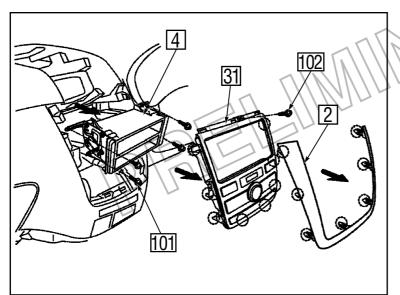


Fig. 17

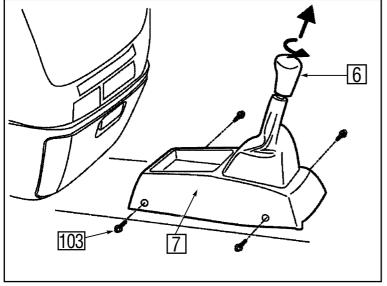


Fig. 18

1. Remove the upper cluster 1. : Clip (8x)

2. Remove the panel 2 and centre cluster 31.

Remove the accessory box 4.

☐: Screw (4x) ☐: Screw (1x) ☐: Clip (7x) + (8x)

3. Remove the shift knob 6 and shift cover 7.

103: Screw (4x)

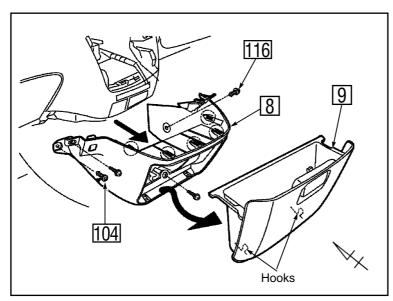


Fig. 19

4. Remove the under box (a) and lower cover (9).

104: Screw (5x) 116: Clip (1x)

: Clip (5x)

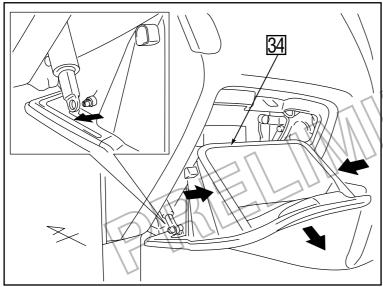


Fig. 20



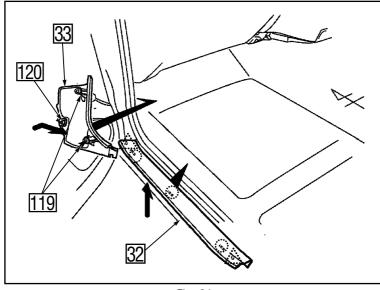


Fig. 21

6. Remove the front scuff plate (L) 2 and kick panel (L) 3.

ः Clip (3x)

△: Hook (2x)

119: Clip (2x)

120: Hook (1x)

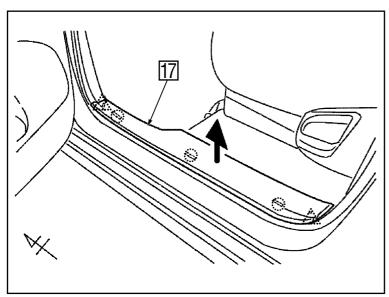


Fig. 22

7. Remove the rear scuff plate (L) 17.

Clip (3x)△: Hook (2x)

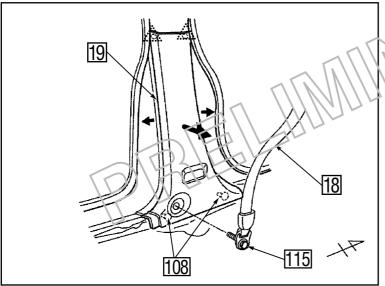


Fig. 23

8. Remove the seat belt 18 and centre pillar cover (L) 19.

△: Hook (2x)

108: Clip (2x)

115: Bolt w/ washer (1x)

CAUTION:

Fasten the bolt with specified torque when reassembling.


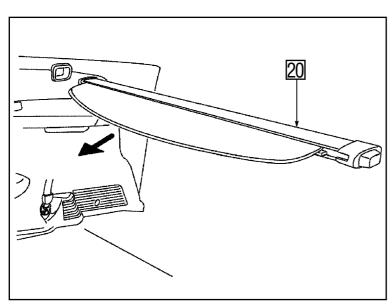



Fig. 24

9. Remove the cover 20.

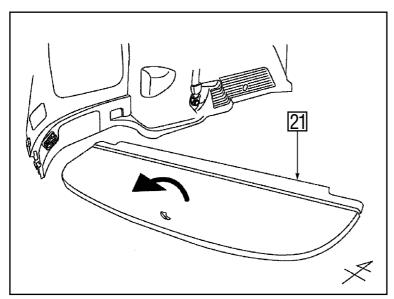

10. Remove the luggage floor board 21.

Fig. 25

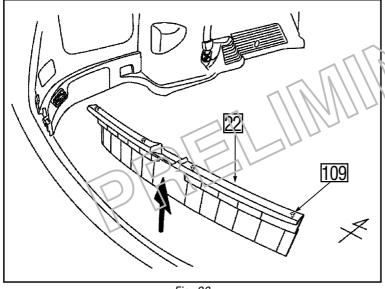

11. Remove the luggage finish plate 22. 109: Clip (4x)



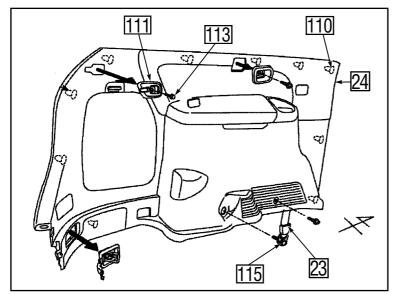


Fig. 27

12. Remove the seat belt 23 and luggage side trim (L) 24.

110: Clip (10x)


111: Cover (2x)

113: Screw (2x)

115: Bolt w/ washer (1x)

CAUTION:

Fasten the bolt with specified torque when reassembling.

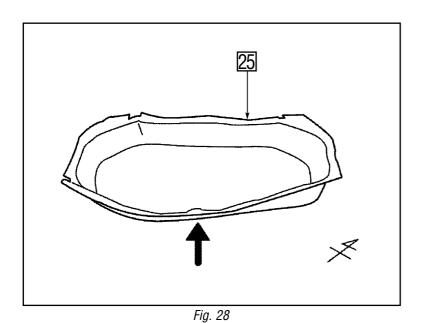

13. Remove the luggage floor trim 25.



4.2 CD- AND MD-CHANGER INSTALLATION

4.2.1 HANGING UNDER THE PASSENGER'S SEAT

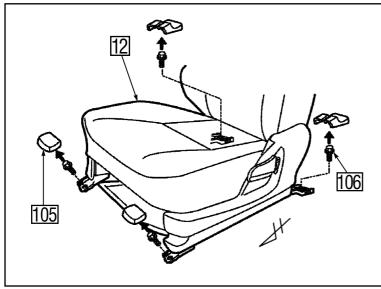


Fig. 29

1. Remove the passenger's seat 12.

105: Cover (4x)

106: Bolt w/ washer (4x)

CAUTION:

Fasten the bolt with specified torque when reassembling.

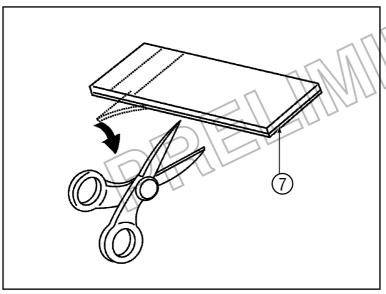


Fig. 30

2. Cut the tape ⑦ (10 pieces).

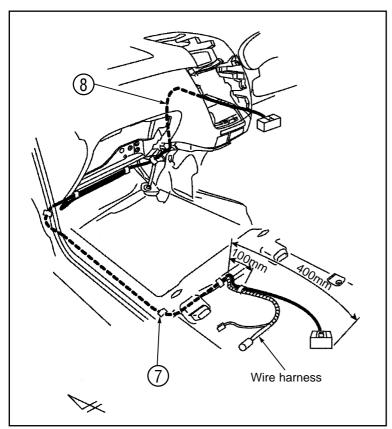


Fig. 31



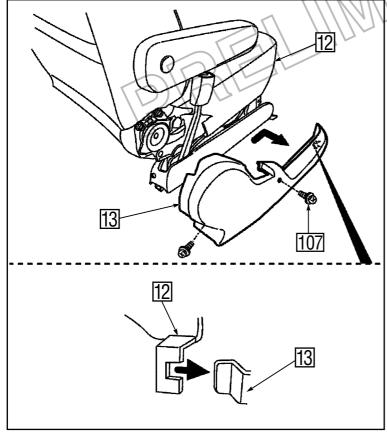


Fig. 32

3. Route and attach the changer wire ® using tape ⑦ (7x).



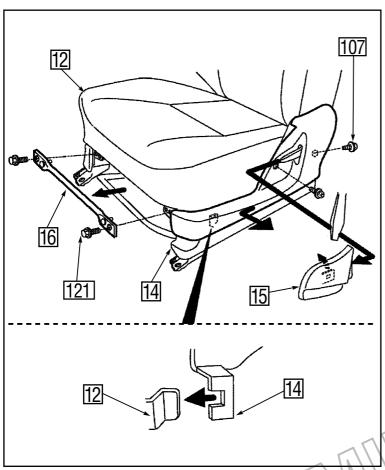

5. Remove the knob and side cover (L)14 of the passenger's seat 2.Remove the reinforcement bar 6.

107: Screw (2x)

121: Bolt w/ washer (2x)



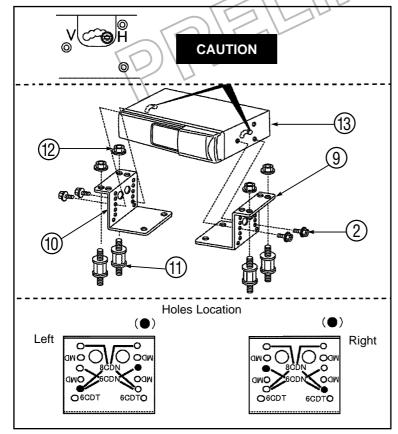



Fig. 34

FOR CD-CHANGER INSTALLATION

- 6. Fit the side brackets (9) (2x) and dampers (1) (4x) onto the CD-changer (3) using bolts (2) and nuts (2).
 - 2: Bolt (M5x9) (4x)
 - 12: Nut (M6) (4x)
 - 11): Damper ('6CDN' Mark) (4x)

CAUTION:

Loosen the screws before moving them. Screw up after the position is changed.

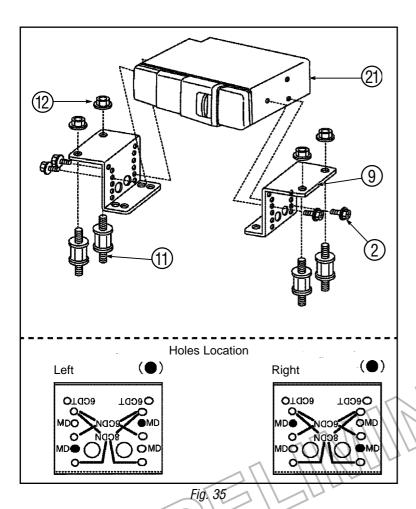

FOR MD-CHANGER INSTALLATION

- 6. Fit the side brackets (9) (2x) and dampers (11) (4x) onto the MD-changer (2) using bolts (2) and nuts (12).
 - 2: Bolt (M5x9) (4x)
 - 12: Nut (M6) (4x)
 - 11): Damper ('MD' Mark) (4x)


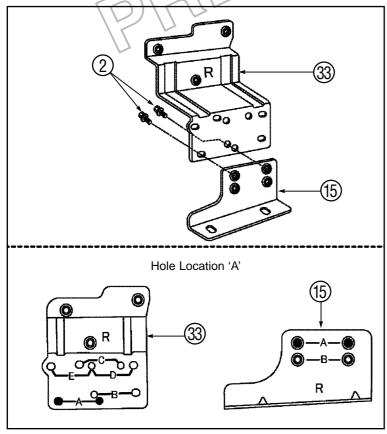


Fig. 36

FOR CD- AND MD-CHANGER INSTALLATION

- 7. Fit the sub bracket (R) (5) to the side bracket (R) (3).
 - 2: Bolt (M5x9) (2x)

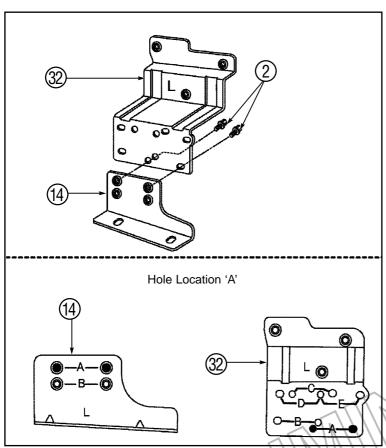

8. Fit the sub bracket (L) (14) to the side bracket (L) (32).

2: Bolt (M5x9) (2x)

Fig. 37

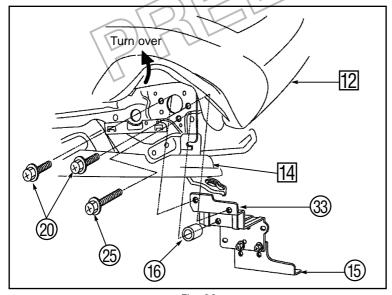


Fig. 38

- 9. Fit the sub bracket (R) (\$\overline{1}\$, side bracket (R) (\$\overline{3}\$) and spacer (\$\overline{1}\$) onto the passenger's seat (\$\overline{1}\$2] right hand.
 - @: Bolt (M6x12) (2x)
 - 25: Bolt (M6x25) (1x)

Replace the side cover (R) 14 onto the passenger's seat 12 right hand.

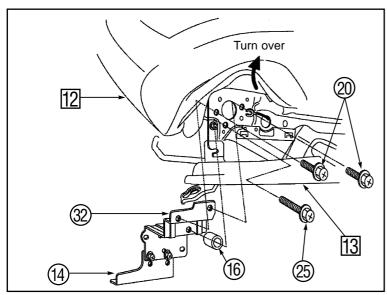


Fig. 39

- 10. Fit the sub bracket (L) (4), side bracket (L) (2) and spacer (6) onto the passenger's seat [12] left hand.
 - 20: Bolt (M6x12) (2x)
 - ②: Bolt (M6x25) (1x)

Replace the side cover (L) [3] and knob [5] onto the passenger's seat [2] left hand.


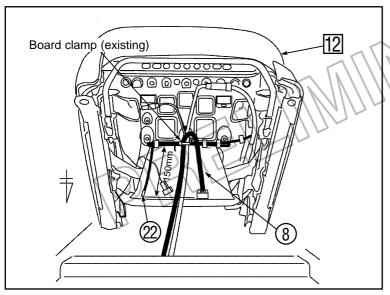



Fig. 40

11. Route the changer wire ® and ground wire @ (ground wire: only in case of MD-changer).

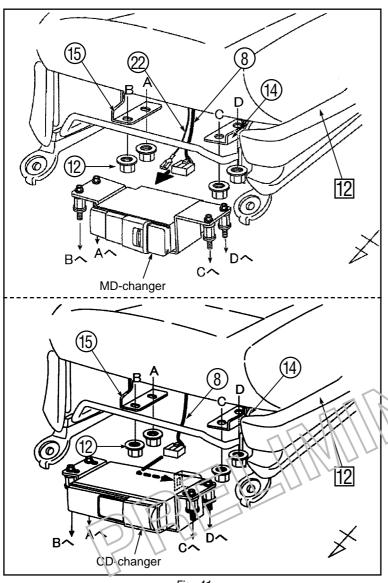


- 12. Connect the changer wire ® and the ground wire ② (ground wire: only in case of MD-changer) to the changer-unit.
 - 12: Nut (M6) (4x)

Fig. 41

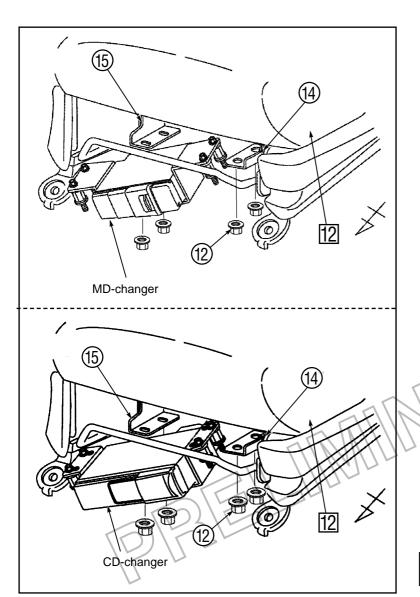

- 13. Fit the changer-unit to the sub brackets 4+5, under the passenger's seat 2 using nuts 2.
 - 12: Nut (M6) (4x)

4.2.2 IN THE LUGGAGE AREA

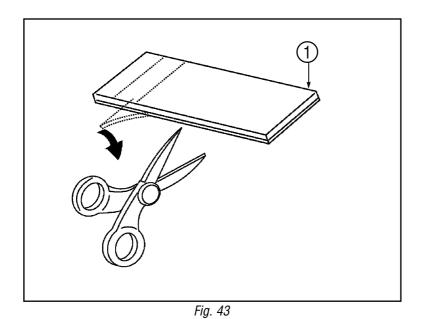

1. Cut the tape ⑦ (10 pieces).


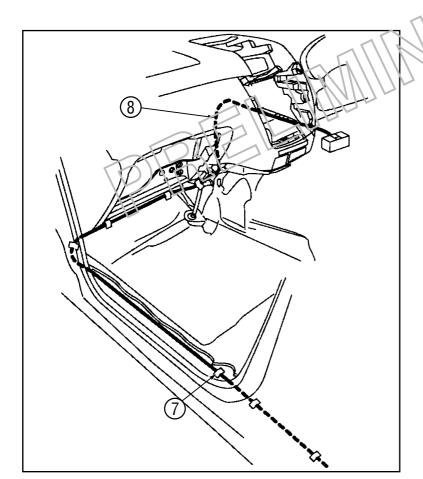



Fig. 44

2. Route and attach the changer wire ® as shown using tape ⑦ (5x).

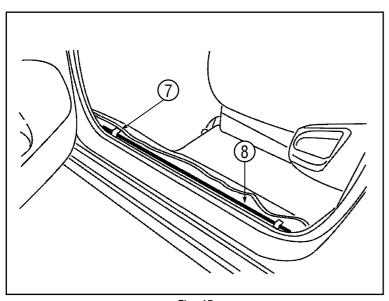

3. Route and attach the changer wire ® along the passenger's side back door using tape ⑦ (2x).

Fig. 45

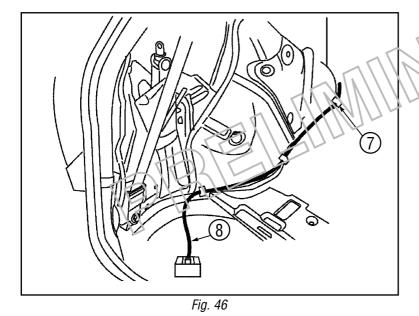

4. Route and attach the changer wire ® as shown using tape ⑦ (3x).


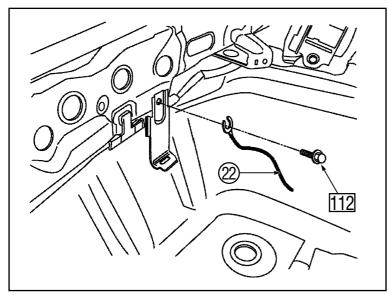


Fig. 47

ONLY FOR MD-CHANGER INSTALLATION

5. Attach the ground wire ②. 112: Bolt (1x)

08-01

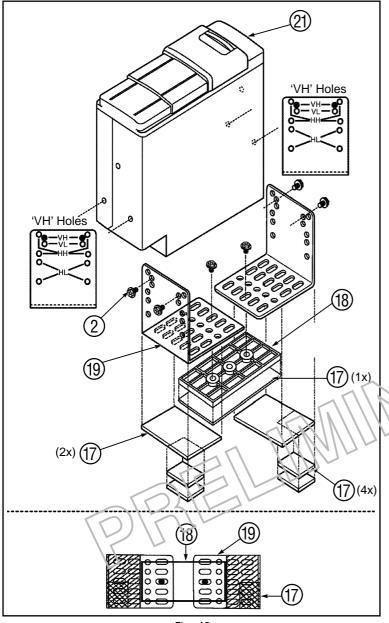

FOR MD-CHANGER INSTALLATION

- 6. Attach the tapes ⑦,spacer ® and side brackets ⑨ (2x) to the MD-changer ②.
 - 2: Bolt (M5x9) (6x)
 - 17): Tape
 - (1x)
 - (2x) Cut to size 67 x 40mm
 - (4x) Cut to size 25 x 30mm
 - (18): Spacer with nut (1x)





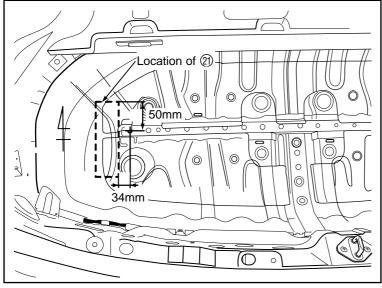


Fig. 49

7. Location of the MD-changer ②.

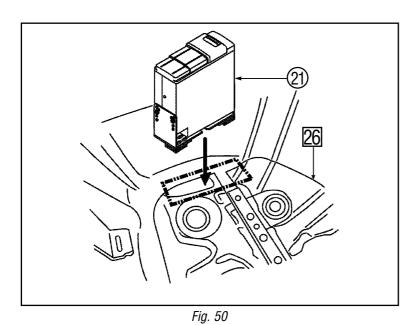

8. Attach the MD-changer ② to the luggage floor ②.

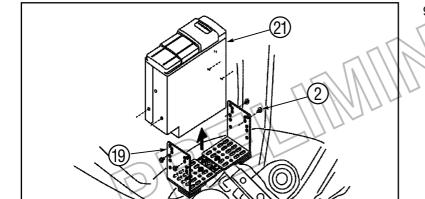

9. Remove the MD-changer ② from the side brackets ③ (2x).②: Bolt (M5x9) (4x)



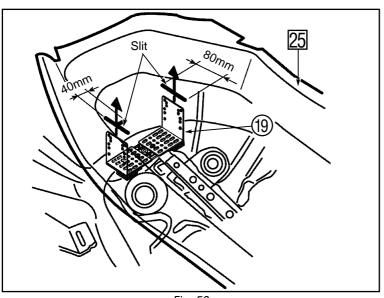


Fig. 52

10. Cut the luggage floor trim 25 as shown in the illustration.

TOYOTA GENUINE AUDIO Avensis Verso (M2)

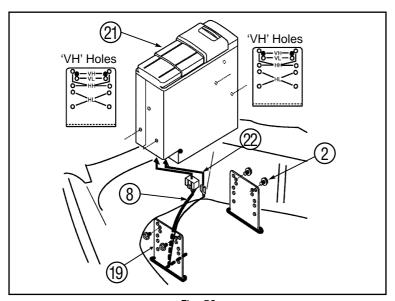


Fig. 53

- 11. Fit the MD-changer ② between the brackets (9) (2x). ②: Bolt (M5x9) (4x)
 - Connect the changer wire ® and ground wire 22 to the MD-changer 21.

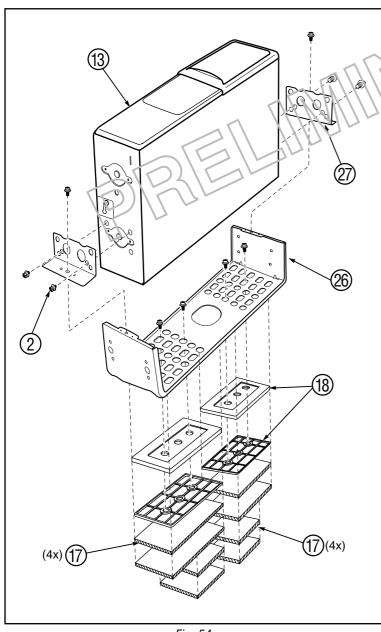


Fig. 54


FOR CD-CHANGER INSTALLATION

- Atach the tapes ①, spacers ® (4x), base bracket ® and sub brackets ® (2x) to the CD-changer (3).
 - 2: Bolt (M5x9) (6x)
 - 17: Tape

(4x)


(4x) Cut to size 67 x 40mm

(18): Spacer with nut (4x)

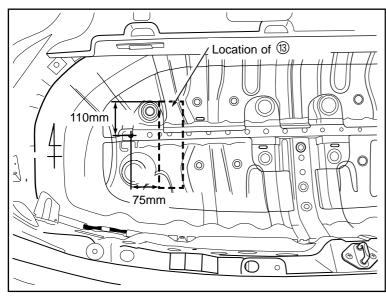


7. Location of the CD-changer ⁽¹⁾3.



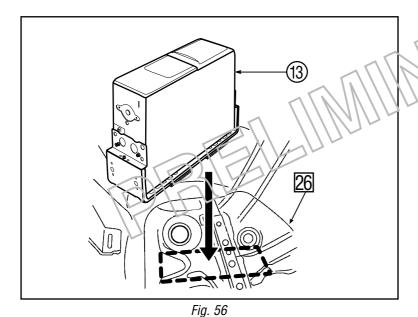


3. Attach the CD-changer (3) to the luggage floor (26).

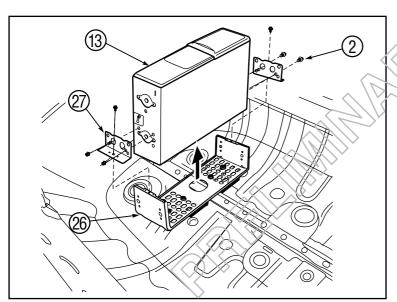

9. Remove the CD-changer [®] from the brackets [®]+2.

②: Bolt (M5x9) (6x)

Fig. 57

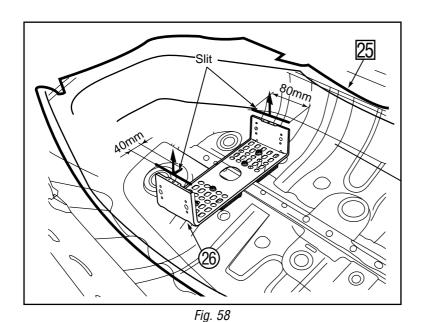

10. Cut the luggage floor trim 25 as shown in the illustration.

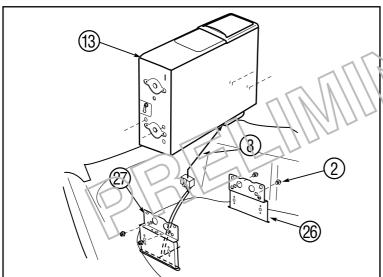


Fig. 59

REFIT THE REMOVED PARTS.

11. Fit the CD-changer (3) between the

Connect the changer wire ® to the

brackets ② (2x). ②: Bolt (M5x9) (4x)


CD-changer ⁽¹³⁾.

4.3 SUBWOOFER INSTALLATION

4.3.1 HANGING UNDER THE PASSENGER'S SEAT

NOTE:

The subwoofer is to be installed hanging under the passenger's seat. The additional fitting kit (PZ425-50240-00) is required.

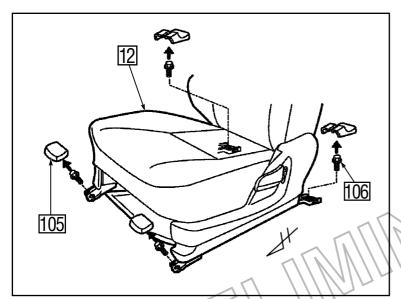

1. Remove the passenger's seat 12.

105: Cover (4x)

106: Bolt w/ washer (4x)

CAUTION:

Fasten the bolt with specified torque when reassembling.




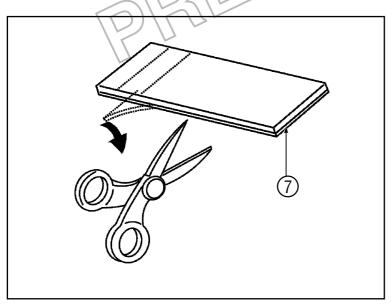


Fig. 61

2. Cut the tape ① (10 pieces).

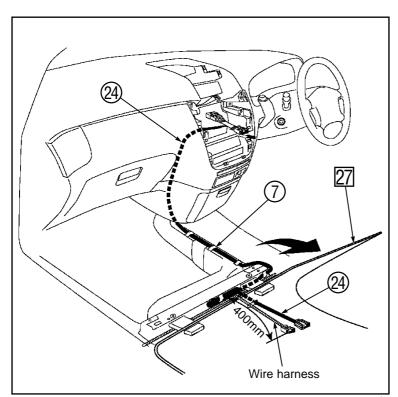

3. Fold up the floor carpet ☑.Route and attach the subwoofer wire⑧ harness using tape ⑦ (5x).




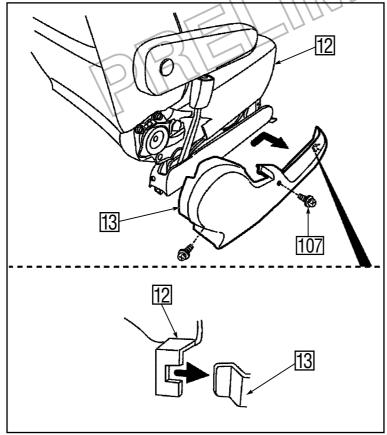


Fig. 63

4. Remove the side cover (R) ③ of the passenger's seat ②. ① : Screw (2x)

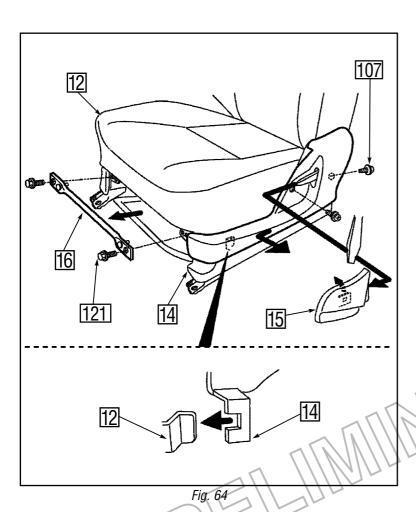

5. Remove the knob 15 and side cover (L) 14 of the passenger's seat 12. Remove the reinforcement bar 16.

107: Screw (4x)

121: Bolt w/ washer (2x)


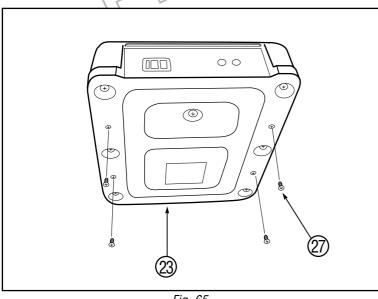


Fig. 65


6. Remove 4 screws @ from the subwoofer @.

②: Screw (4x)

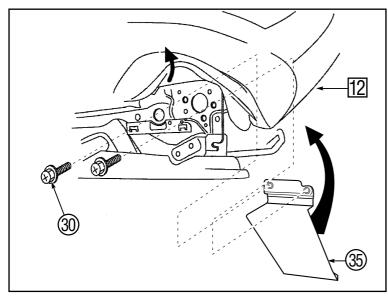

7. Fit the side bracket (R) ③ to the passenger's seat ① right hand. ③ : Bolt (2x)

Fig. 66

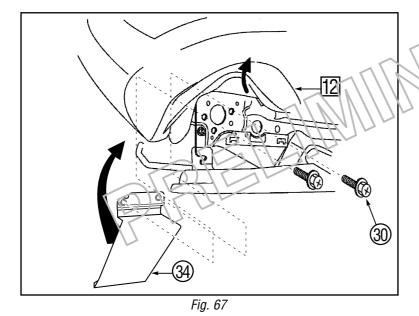

8. Fit the side bracket (L) 3 to the passenger's seat 1 left hand.
3 Bolt (2x)


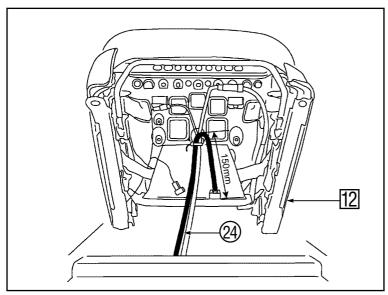


Fig. 68

9. Route the subwoofer wire ② under the passenger's seat ①.

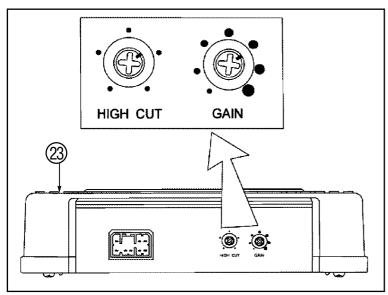

10. Before installing the subwoofer 23 adjust the sensitivity to the correct position.

Fig. 69

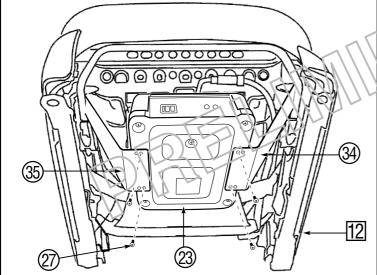


Fig. 70

11. Fit the subwoofer ② to the attached side brackets ③+③ under the passenger's seat ② using screws ②.


②: Screw (4x)

9. OUTSIDE TEMPERATURE SENSOR INSTALLATION



NOTE:

Please check first whether the prewired connector is available. If it is not available fitting of the thermistor is impossible.

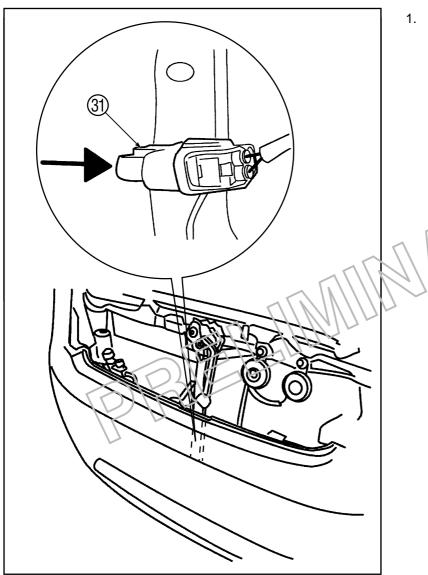

1. Attach the temperature sensor ③.

Fig. 71

NOTES	(4)

