
TAFE 7502/8502

TRACTORPARTS BOOK




FRONT AXLE

SL NO	PART NO	DESCRIPTION	QTY
1	0897625M94	Beam (with Bush)	1
	————————	Beam (Not serviced separately	1
2	0897712M2	Bush	2
3	MP1056	Nipple	1
4	0894061M01	Bolt	6
5	0353775X01	Washer	6
6	0894060M3	Nut	6
7	0897471M92	Arm-Front Axle	2
8	0183086M01	Bush	2
9	200191M01	Nipple	2
10	0196167M01	Bearing	2
11	0897476M96	Spindle LH	1
11	0897475M96	Spindle & shaft RH	1
12	0897702M01	Seal 2	
13	4247995M91	Assy .Bearing Inner	2
14	0898346M93	Hub Assy.	2
15	0898348M03	Hub	1
16	4248548M01	Bolt	12
17	0195490M01	Nut	12
18	4247996M91	Assy. Bearing Outer	2
19	0882637M02	Cap front hub	2

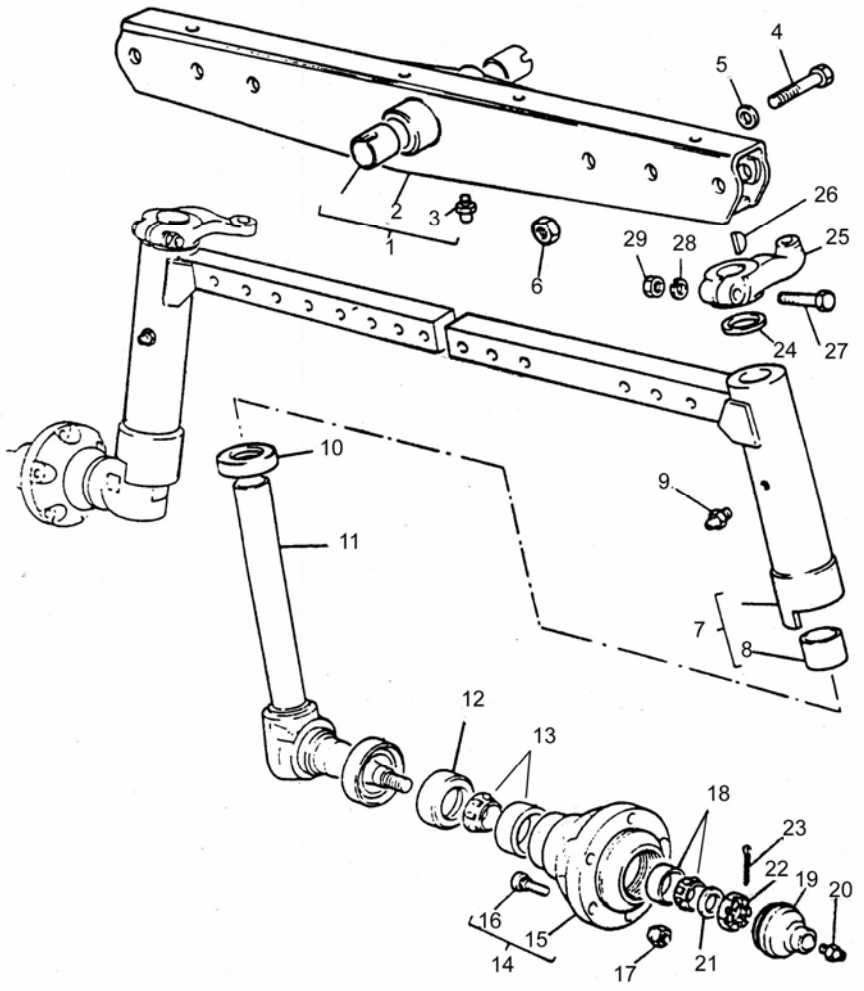


SL NO	PART NO	DESCRIPTION	QTY
20	200191M01	Nipple	2
21	0881384M01	Washer	2
22	0882263M01	Nut special	2
23	0354072X01	Pin – cottor	2
24	0183021M02	Seal	2
25	0898343M01	Arm LH	1
25	0898342M01	Arm RH	1
26	0350355X01	Woddruff key	2
27	0390719X01	Bolt	2
28	3019575X01	Lock washer	2
29	0339623X01	Nut (unf)	2

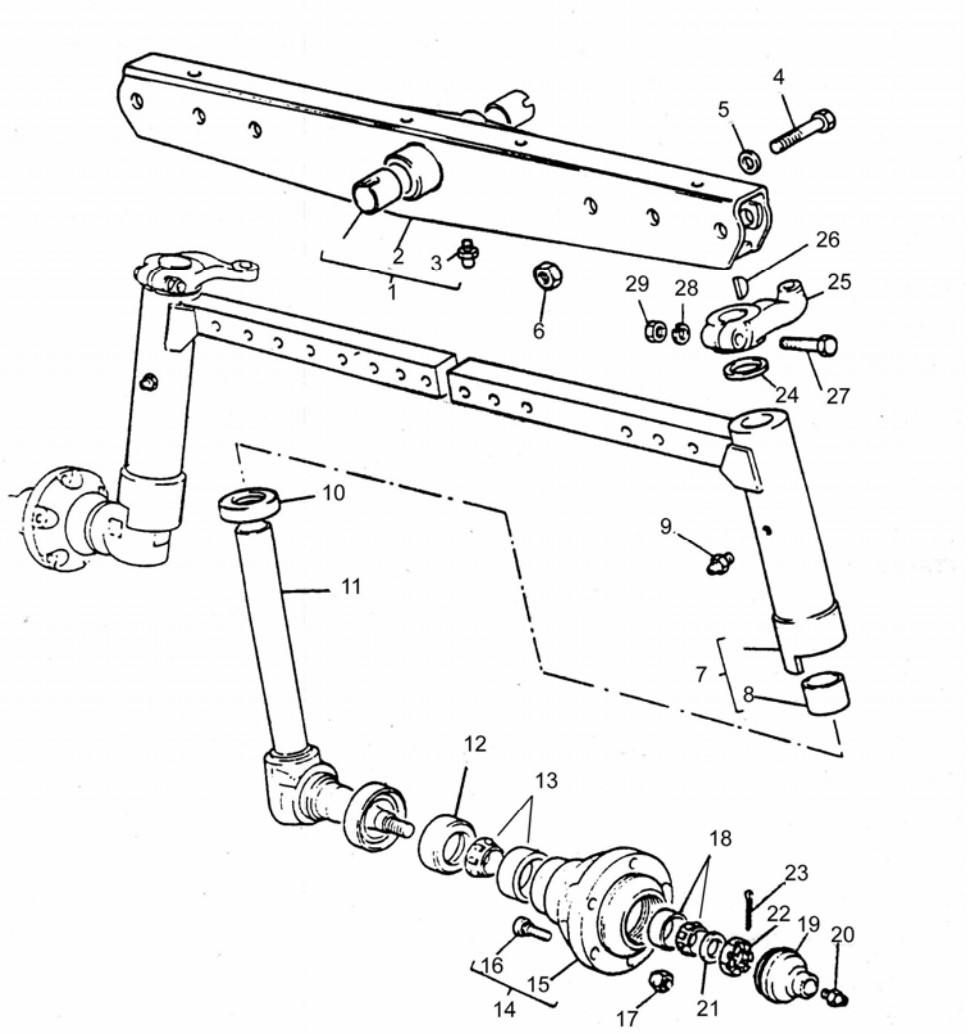


FRONT AXLE SUPPORT

SL NO	PART NO	DESCRIPTION	QTY	
1	1688619M91	Assy. Front Engine Support	1	
	3763953M01	Assy. Front Engine Support-	1	For 4WD
2	1688618M01	Front Engine Support	1	
3	0897235M01	Bush 2		
4	0894467M01	Lubricator	1	
5	3019869X01	Bolt (metric)	1	
6	3019902X01	Bolt (metric)	2	
	3019865X01	Bolt	2	For 4WD
7	1660192M01	Shim (.044”/ .010MM)	AR	
7	0894825M01	Shim (.010”/ .025MM)	AR	
7	0894826M01	Shim (.020”/ .050MM)	AR	
8	0377682X01	Stud	1	
9	0377641X01	Nut (UNF)	1	
10	0377682X01	Stud	1	
	3019885X01	Stud-	1	For 4WD
11	0377641X01	Nut (UNF)	1	
	3019871X01	Nut (UNF)	1	-For 4WD
12	3019869X01	Bolt (metric)	2	
13	3019865X01	Bolt (metric)	1	
14	1862267M01	Screw	1	
15	0375111X01	Nut (unc)	1	
16	1684285M01	Pin 1		

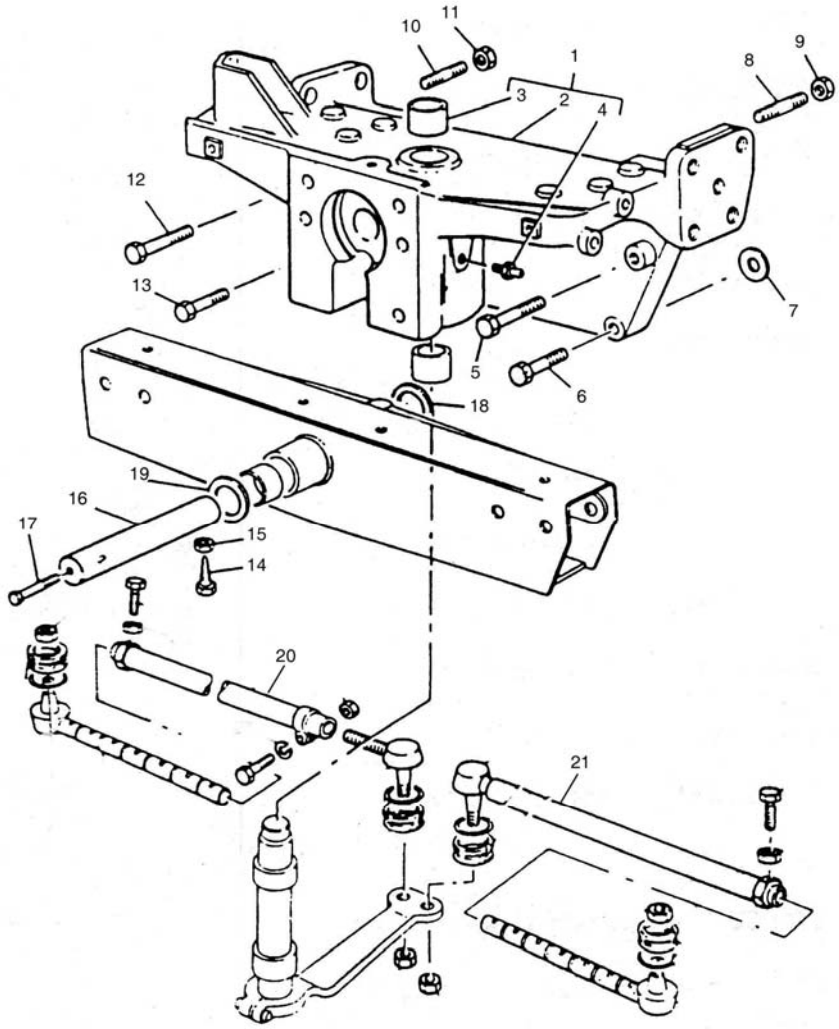


Sl No	Part No.	Description	Qty
NI	0522259M02	Pin Retainer	1
NI	0195414M01	Pin Cotter	1
18	0898018M01	Shim (.028/ .071 MM)	X
18	0898019M01	Shim (.034”/ .087MM)	AR
18	0898020M01	Shim (.039”/ .099MM)	AR
18	0882868M01	Shim (.044”/ .120MM)	AR
18	0882869M01	Shim (.049”/ .130MM)	AR
19	0898017M01	Washer	1
20	0886800M92	Tie rod LH	1
21	0886796M92	Tie rod RH	1

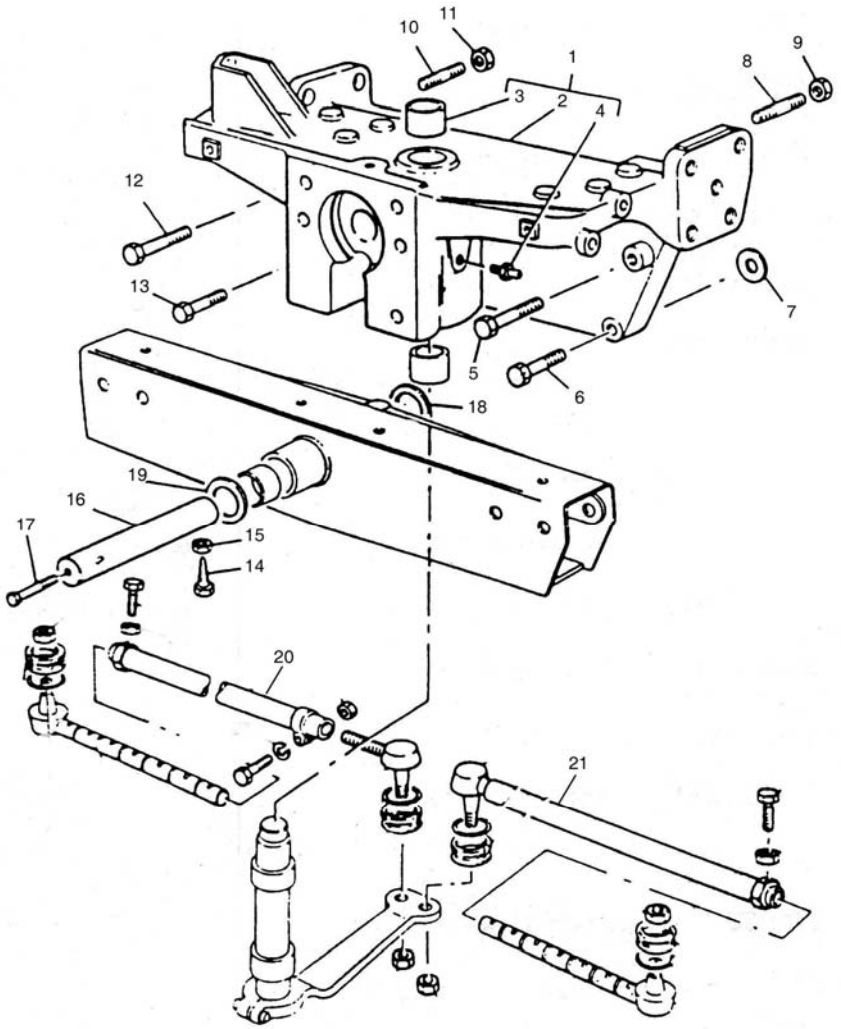


STEERING LINKAGE

Sl No	Part No.	Description	Qty
1	0886800M92	Tie rod LH	1
	0886796M92	Tie rod RH	1
3	1885486M01	Boot	2
4	1885487M01	Spring	2
5	884700X01	Nut (unf)	2
6	1676666M01	Shaft Steering	1
7	355917X01	Snap ring	1
8	361849X01	Bolt (unf)	1
9	376724X01	Lock Washer	1
10	363629X01	Nut (unf)	1
11	196079M01	Seal	2
12	1676664M01	Arm	1
13	377899X01	Bolt (unf)	1
14	1679532X01	Nut (unf)	1
15	0898342M01	Arm Steering RH	1
17	353436X01	Nut (unf)	1
18	0898355M91	Arm	1
19	————	Arm (Order. 899355M91)	1
20	190560M01	Bush	2
NI	0898343M01	Arm Steering LH	1

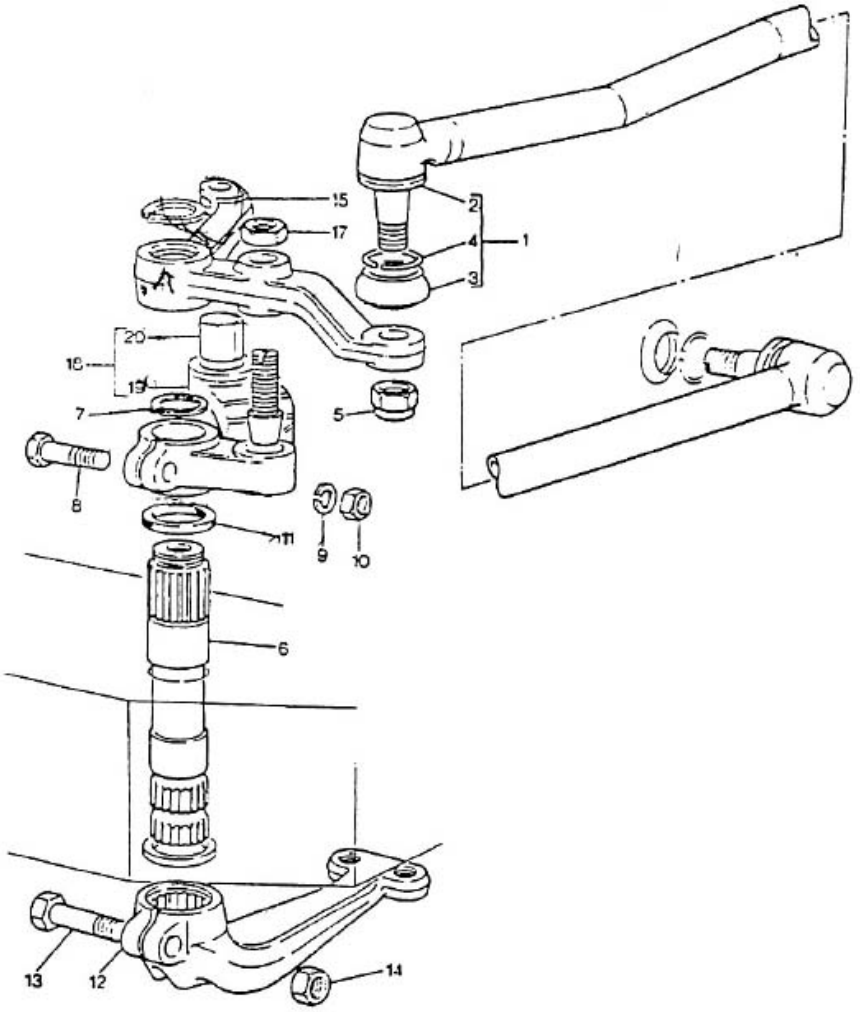


FUEL TANK AND ATTACHMENTS

Sl No	Part No.	Description	Qty
1	4256157M91	Assy.Fuel tank	1
2	714360M93	Assy. Cap	1
3	3009532X01	Screw	6
4	0390469X01	Washer	6
5	4245174M91	Float unit	1
6	4245147M91	Assy. Snap & PAD	1
7	4245148M91	Strap (Not serviced separately)	1
8	888764M01	Pad (Not serviced separately)	5
9	4245147M91	Assy. Snap & PAD	1
10	4245148M91	Strap (Not serviced separately)	1
11	888764M01	Pad (Not serviced separately)	5
12	4256909M91	Fuel tank support Assy. Rear	1
13	4256906M01	Pad 1	
14	4256905M01	Pad 1	
15	0339375X01	Lock Washer	2
16	353918X01	Nut (unf)	2
17	4256898M01	Damper	2
18	4248161M91	Fuel Tank Support Assy-Front	1
19	1876519M01	Pad *	
20	4256896	Damper	1

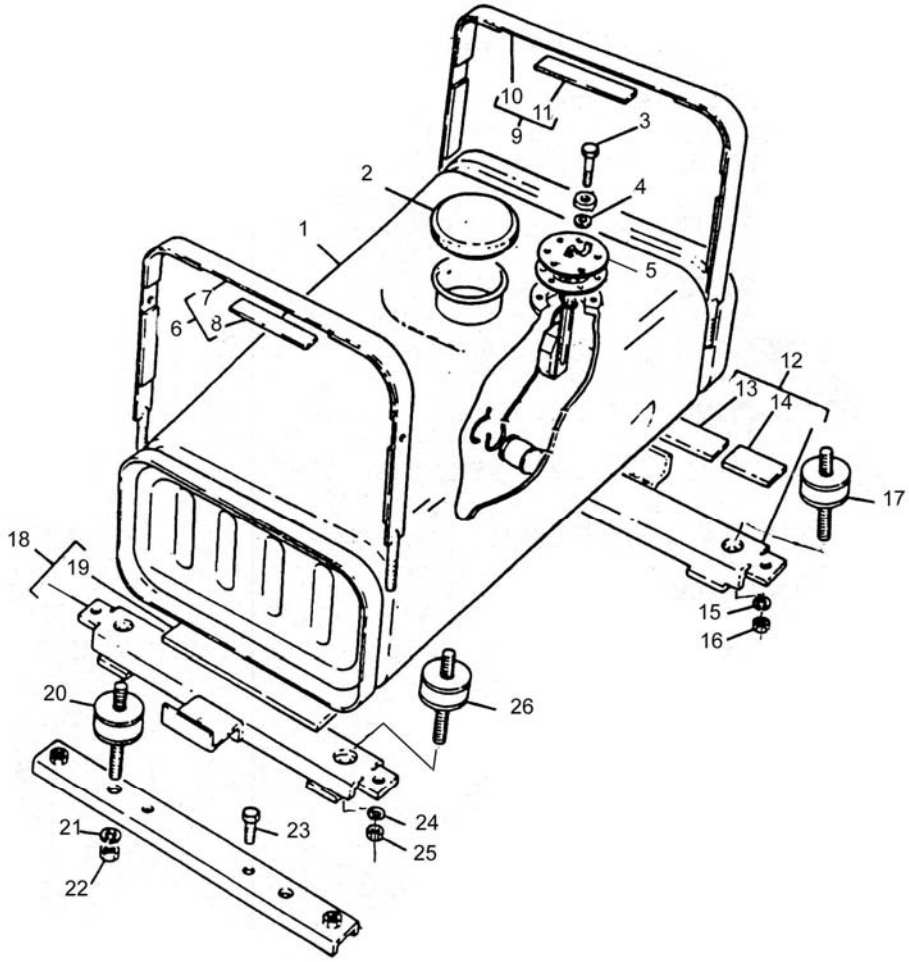


Sl No	Part No.	Description	Qty
21	353446X01	Lock washer	4
22	355565X01	Nut (unc)	4
23	353441X01	Screw (unc)	4
24	343441X01	Lock washer	2
25	353918X01	Nut (unc)	2
26	4256897M01	Damper	1

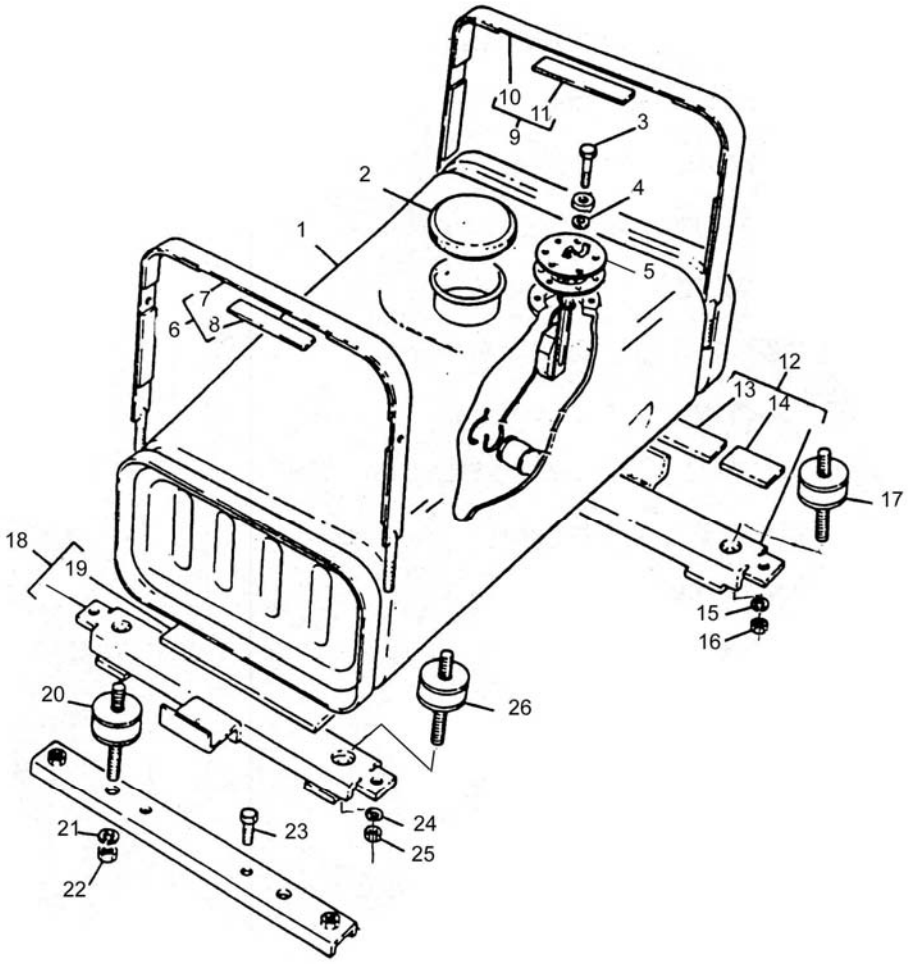

AIR CLEANER


Sl No	Part No.	Description		Qty
1	3761802M01	Pre Cleaner		1
2	1682795M01	Tube		1
3	1662276M93	Air Cleaner		1
4	0338618X01	Hose Clip		2
5	1682800M01	Collar		1
6	1676431M91	Bracket Assy		1
	1945A00301	Bracket Assy-	For 4WD	1
7	338618X01	Hose Clip		2
8	1686294M01	Hose		1
9	1876072M01	Seal		1
NI	1676439M02	Plastic Pre-Cleaner		1

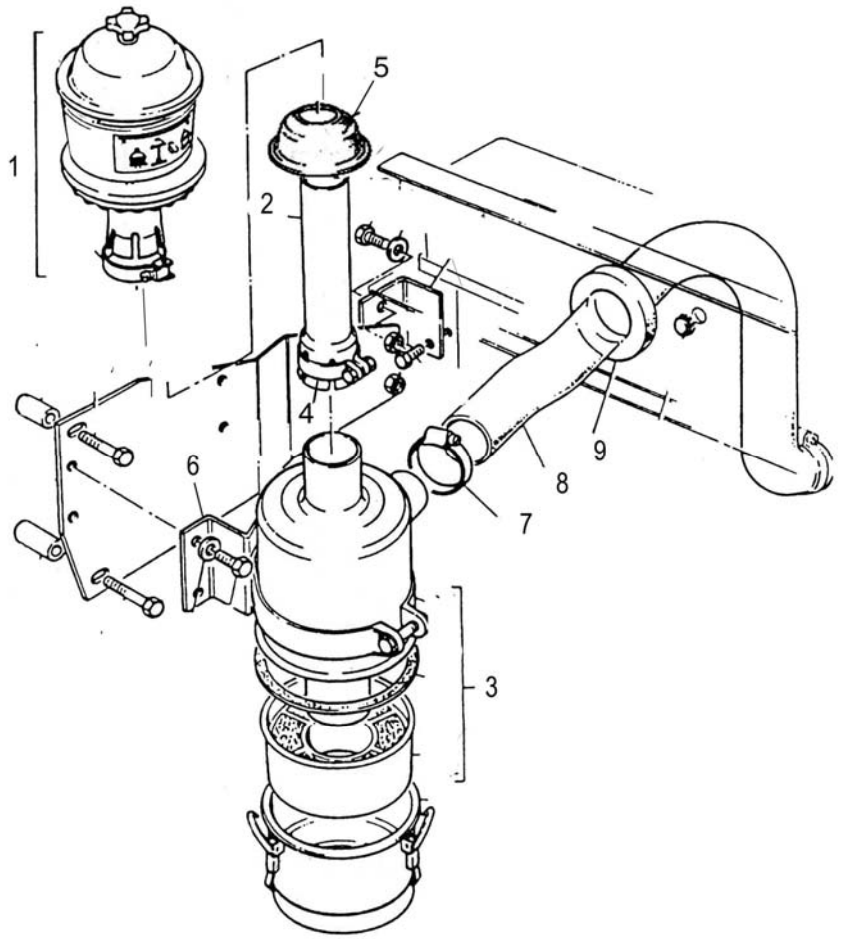

VERTICAL EXHAUST


Sl No	Part No.	Description	Qty
1	4256271M91	Assy. Silencer	1
2	0717672M01	U-Clamp	1
3	1862807M01	Elbow	1
4	194742M01	Gasket	1
5	376448X01	Nut (unf)	3
6	0717673M01	Bracket clamp	1
NI	390734X01	Washer-Flat	2
NI	3009693X01	Nut	2

Vertical Exhaust

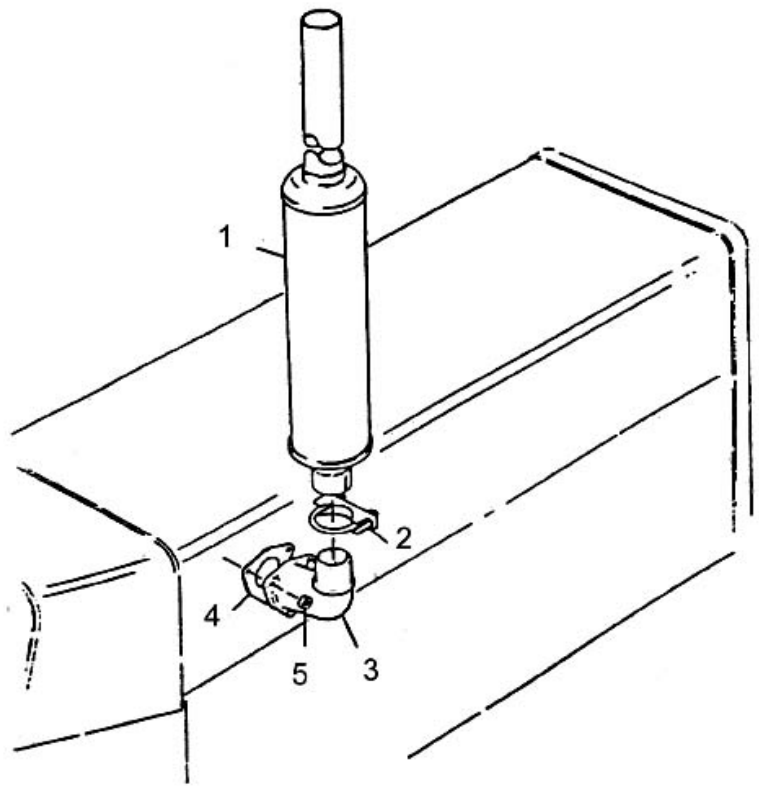


HAND THROTTLE CONTROLS

Sl No	Part No.	Description	Qty
1	1913C00301	Knob	1
2	375108X01	Nut (unc)	1
3	1876333M95	Lever-Throttle	1
4	0377119X01	Grommet	1
5	353502X01	Screw (unf)	1
6	376806X01	Washer	1
7	1876360M07	Bracket	1
8	376806X01	Washer	1
9	353441X01	Lock washer	1
10	353918X01	Nut (unf)	1
11	0353441X01	Lock washer	4
12	0353507X01	Bolt	2
13	0880713M01	Washer-Special	1
14	0880712M01	Washer-Bellevelle	3
15	0884737M01	Nut	1
16	0880714M01	Disc friction	1
17	0353507X01	Bolt Hex	1
18	0376806X01	Flat Washer	2
19	1876337M01	Lever Throttle Control	1
20	0376806X01	Flat Washer	1
21	0353441X01	Lock Washer	1

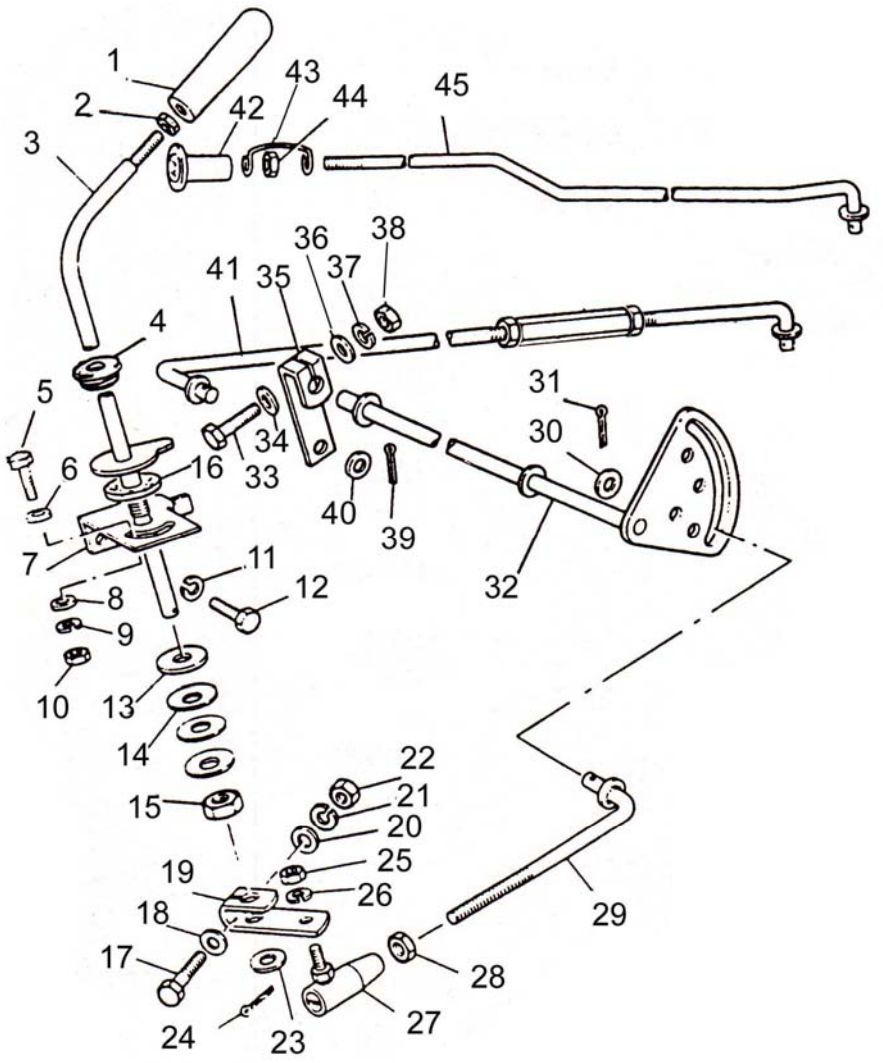


Sl No	Part No.	Description	Qty
22	0353918X01	Nut	1
23	0353756X01	Washer	1
24	0354048X01	Cotter Pin	1
25	353918X01	Nut	1
26	353441X01	Washer	1
27	1861633M91	Ball Joint	1
29	1913A00501	Assy.Rod H/T To Quad.	1
30	0353754X01	Flat Washer	1
31	0354041X01	Cotter Pin - 1/4"	1
32	1876338M93	Assy Cross Shaft	1
33	0353507X01	Bolt Hex	1
34	0376806X01	Flat Washer	1
35	1876337M01	Lever Throttle Control	1
36	0376806X01	Flat Washer	1
37	0353441X01	Lock Washer	1
38	0353918X01	Nut Hex	1
39	0354041X01	Cotter Pin - 1/4"	1
40	0353754X01	Flat Washer	1
41	4256133M91	Assy. Rod Throttle Control (Fip	1
42	0715689M01	Knob - Fuel Cut Off	1
43	0713498M01	Spring-Fuel Cutoff	1
44	0390995X01	Nut	1
45	4256061M91	Assy. fuel cut off Rod	1

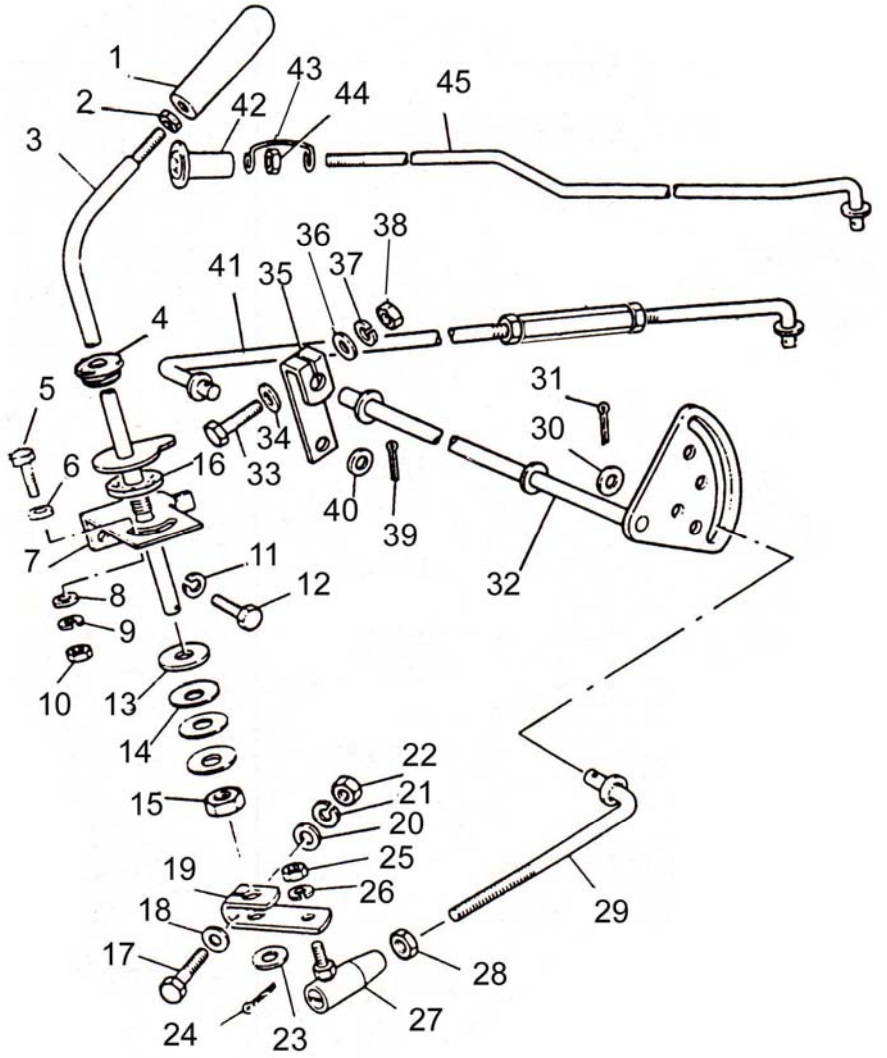


FOOT THROTTLE CONTROLS

Sl No	Part No.	Description	Qty
1	4256628M91	Assy. Rod H/T To Quad	1
2	0897547M01	Pedal	1
3	353755X01	Washer	2
4	354048X01	Pin	2
5	195610M01	Pin	1
6	354048X01	Pin	1
7	0890066M01	Bolt	1
8	375108X01	Nut (unc)	1
9	0828655M02	Bracket	1
10	828656M01	Spring	1
11	353918X01	Nut (unf)	2
12	353441X01	Lock washer	2
13	353754X01	Washer	2
14	353787X01	Bolt	2
NI	353756X01	Washer Flat	1

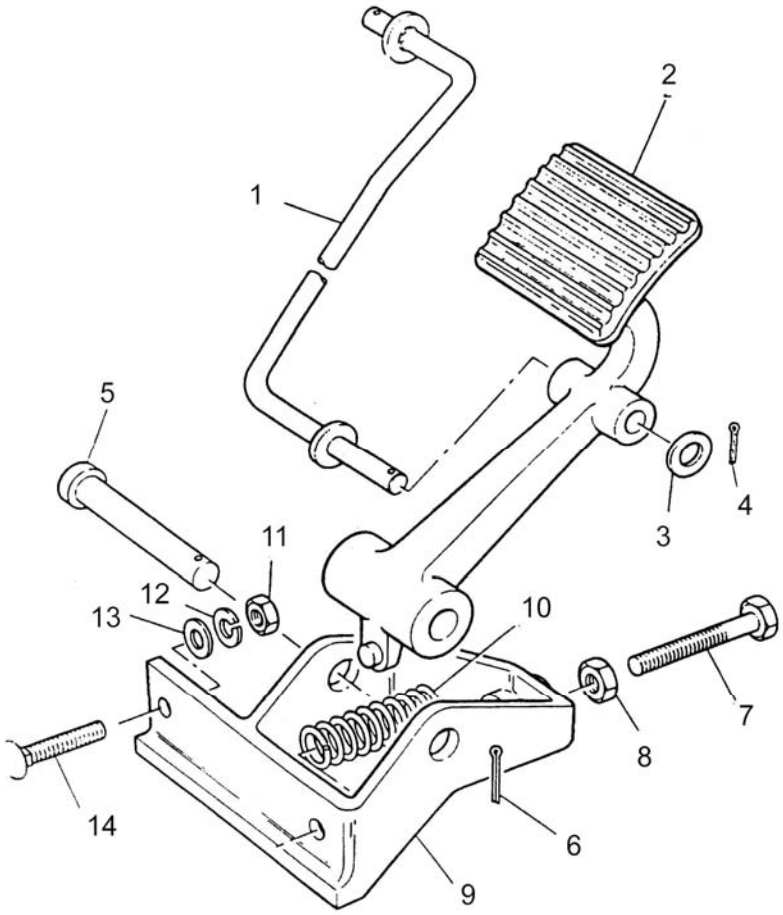


CLUTCH CERAMATALIC

Sl No	Part No.	Description	Qty
1	3701003M92	Assy clutch cover	1
2	354 604 X01	Bolt (unc)	3
3	3900 546 M91	Repair kit	1
4	1753751 M2	Washer	12
5	886 396 M01	Spring	9
7	887 893 M01	Pin	3
8	354 046 X01	Pin	3
9	3900 547 M01	Link	3
10	887 902 M01	Plate	
		(3697206M91 Clutch Dual 12”)	1
11	3478 359 M91	P.T.O. Driven plate	
		(3701008M91 Assy. Driven	1
12	887 903 M01	Plate	1
13	897 906 M01	Washer	1
14	3900 707 M01	Cover	1
15	3900 545 M01	Lever	3
16	3900 541 M01	Pin	3
17	3900 542 M01	Pin	3
18	887 897 M01	Pin	3

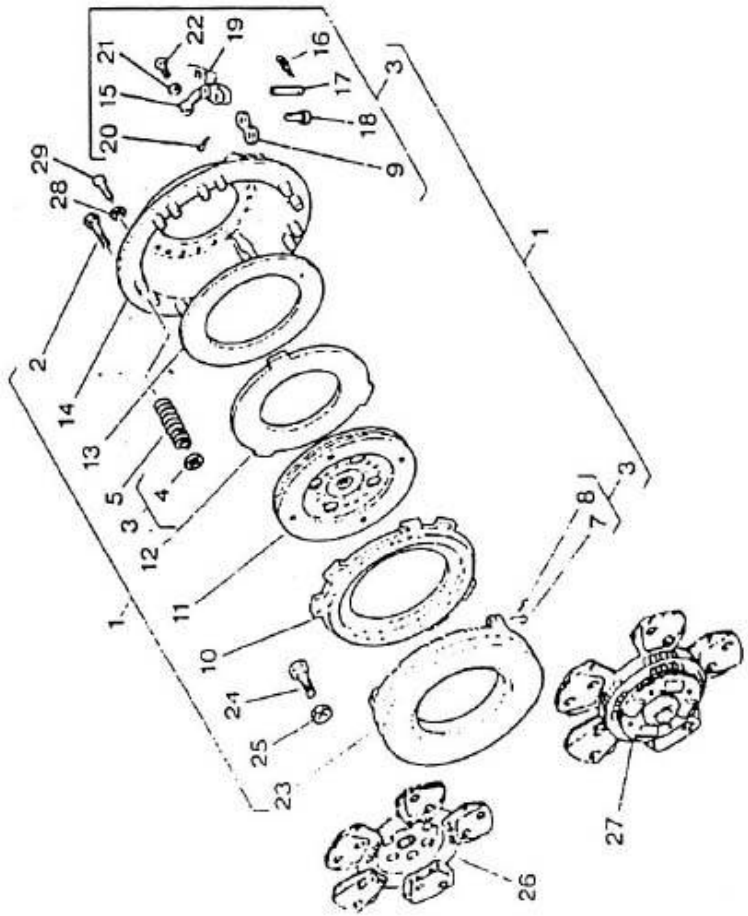


Sl No	Part No.	Description	Qty
19	3900 543 M01	Spring	3
20	354 046 X01	Pin	3
21	353 430 X01	Nut(unf)	3
22	1853164M01	Screw	3
23	3900 534 M01	Plate	1
24	181124M01	Screw	3
25	353917X01	Nut (unf)	3
26	3701008M91	Clutch disk	1
27	3701008M91	Clutch disk	1
28	339374X01	Lock washer	6
29	714404M01	Bolt	6
30	0892862M03	Bearing	1
31	0886727M02	Support	1
32	1867690M02	Spring	2

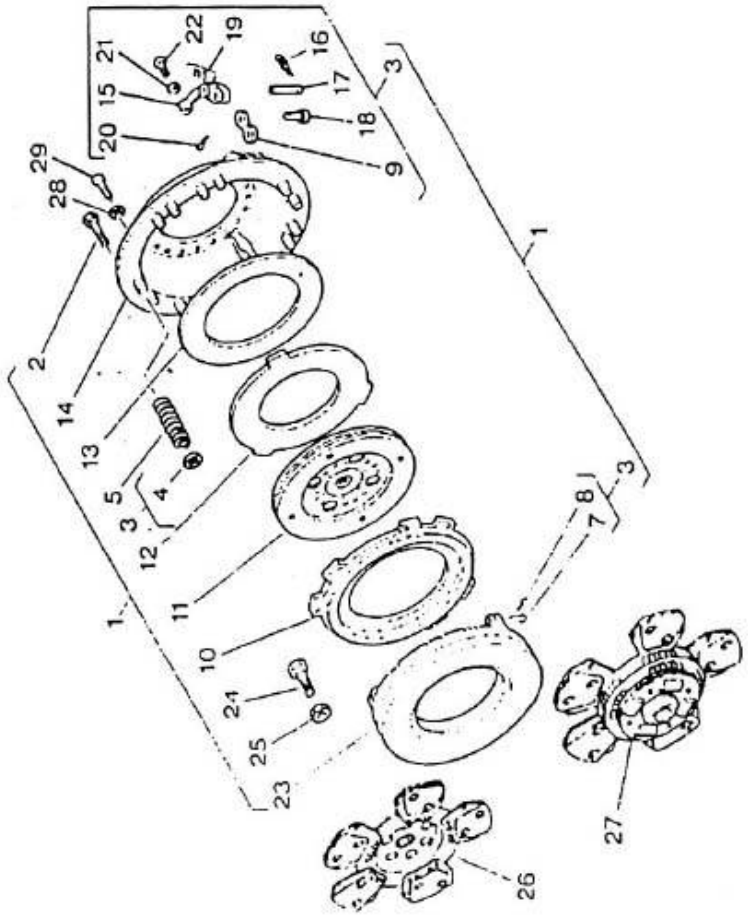


CLUTCH PEDAL AND LINKAGE

Sl No	Part No.	Description	Qty
1	1862074M01	Spacer	2
2	1671130M92	Pivot	1
3	897690M92	Assy. clutch pedal	1
4	4247632M01	Bush	2
5		Clutch Pedal	1
		(Not serviced separately)	
6	0013222X00	Nipple	1
7	184580M01	Washer	1
8	352438M01	Snap ring	1
9	376401X01	Clevis Pin	1
10	354059X01	Pin-Cotter	1
17	1861032M92	Rod	1
18	353430X01	Nut (unf)	1
19	884750M01	Washer	1
20	884751M01	Yoke	1
21	894538M01	Trunnion	1
22	376401X01	Clevis Pin	1
23	354059X01	Pin Cotter	1

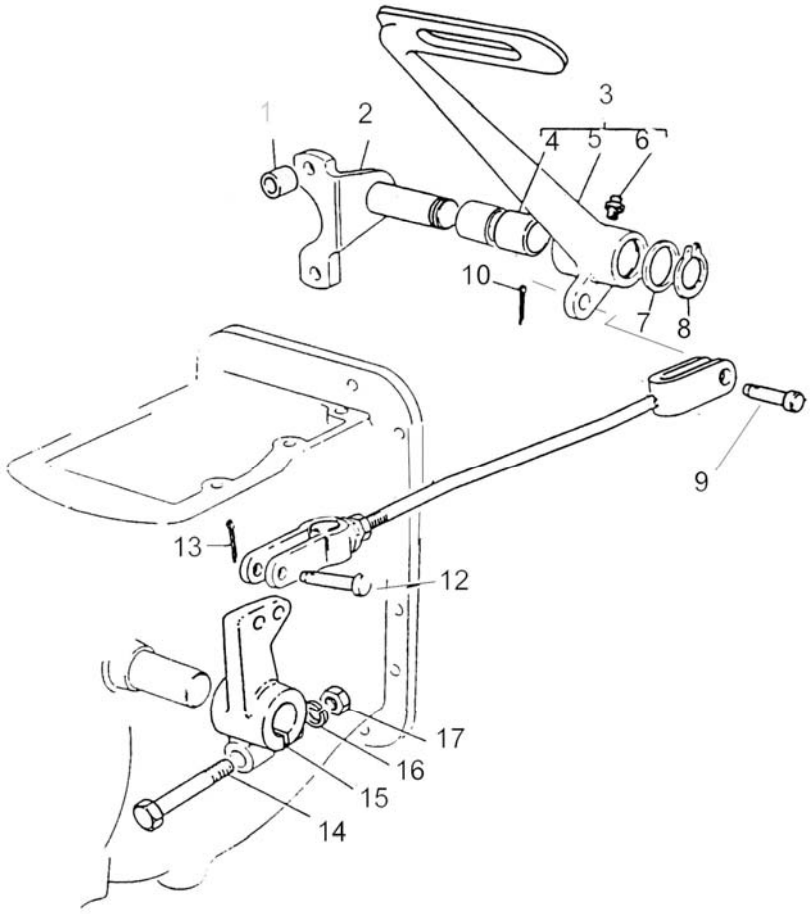


Sl No	Part No.	Description	Qty
24	361583X01	Bolt (unf)	1
25	0508354M01	Arm	1
26	376722X01	Lock washer	1
27	353437X01	Nut (unf)	1
NI	385363X01	Washer	1

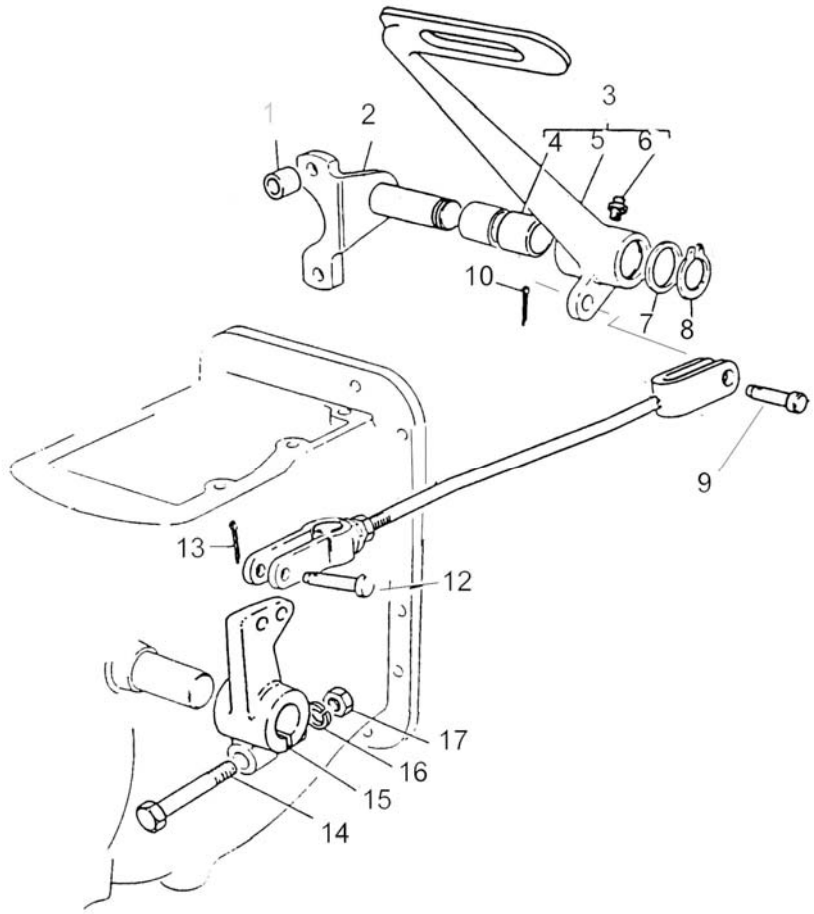


TRANSMISSION CASE ASSY.

Sl No	Part No.	Description	Qty
1	3772777M02	Transmission Case	1
2	0002950X00	Plug-Expansion	1
3	4244696M01	Plug-Clutch Shaft	1
4	0180482M02	Cover Transmission Bottom	1
5	0353901X01	Bolt 4	
6	0180474M01	Washer Sealing	1
7	0717257M03	Plug-Magnetic Drain	1
8	1860876M02	Retainer Main Drive Shaft	1
9	4242652M01	Hex. Bolt	1
10	4242651M01	Hex. Bolt	3
11	0886727M02	Carrier Clutch Release	1
12	0892862M03	Clutch Release Bearing	1
13	0899331M03	Housing P.T.O Front Bearing	1
14	4242964M01	Cap-Front Pto Bearing Housing	1
15	0353434X01	Lock Washer	4
16	4242653M01	Hex. Bolt-3/8"Unf/Unc	4
17	0886719M01	Fork-Clutch Release Shaft	1
18	4245672M01	Shaft Clutch Release Pivot	1

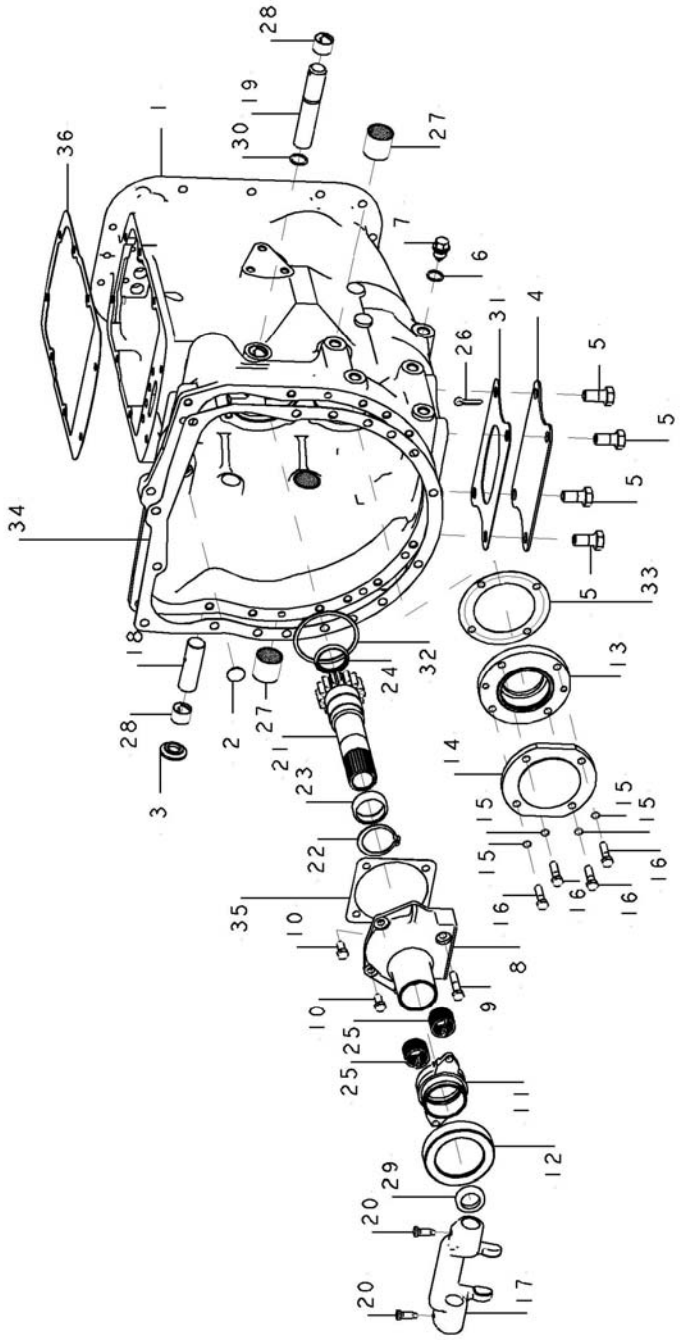


Sl No	Part No.	Description	Qty
19	4244697M01	Shaft Clutch Pedal	1
20	0881144M01	Screw, Special	2
21	4245689M91	Pinion Assy-P.T.O.	1
22	0762101M01	Snap Ring	1
23	0886668M01	Bearing Special	1
24	1860867M05	Oil Seal	1
25	1867690M02	Spring	2
26	0354087X01	Cotter Pin (Alt 0715073m01)	1
27	0180801M01	Bushing-Trans.Case(Brake Shaft)	2
28	4247632M01	Bush-Clutch Shaft	2
29	1860011M01	Oil-Seal	1
30	4244698M01	O Ring Clutch Shaft	1
31	0180481M01	Gasket-Transmission Case Bottom	1
32	0358890X01	Snap Ring	1
33	0181237M01	Gasket-P.T.O. Front Cap	1
34	0716946M02	Gasket Transmission	1
35	0180434M01	Gasket	1
36	0180511M02	Gasket Stg Hsg To T C	1

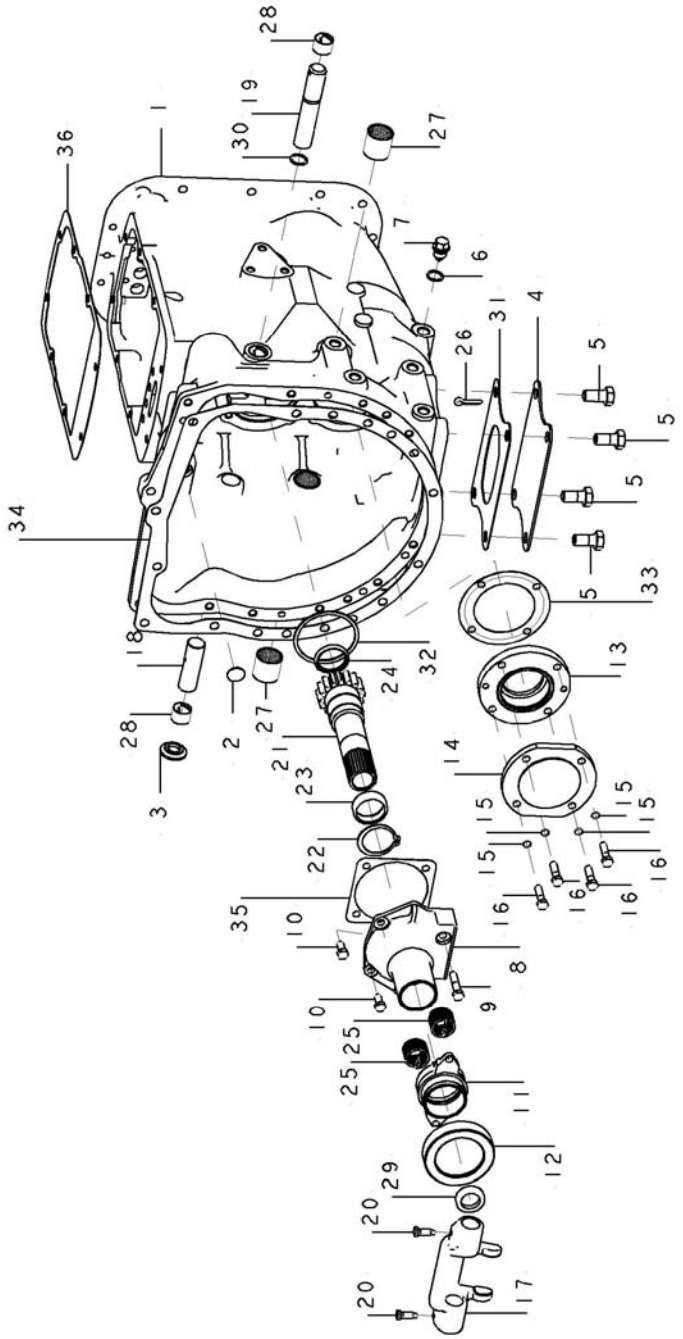


SPEED CONSTANT MESH TRANSMISSION (MAIN SHAFT)

Sl No	Part No.	Description	Qty
1	————————	Transmission Assy	1
2	3772777M02	Housing	1
3	1860876M02	Retainer	1
4	1860867M06	Seal	1
5	0886668M01	Bearing	1
6	424651M01	Screw (unc)	3
7	424652M01	Bolt (unc)	1
8	0762101M01	Ring	1
9	713923M01	Bearing Ball	1
10	358890X01	Ring (Alt part No. 377631X01)	1
11	0180434M01	'O' Ring	1
12	1671705M02	Pinion	1
13	1860011M02	Seal	1
14	0964929M01	Washer	1
15	3760467M01	Pinion main drive shaft (26 Teeth)	1
16	964944M01	Distance piece	1
17	1682690M01	Gear	1
18	2700273M01	Bearing	1
19	2700274M02	Spacer	1

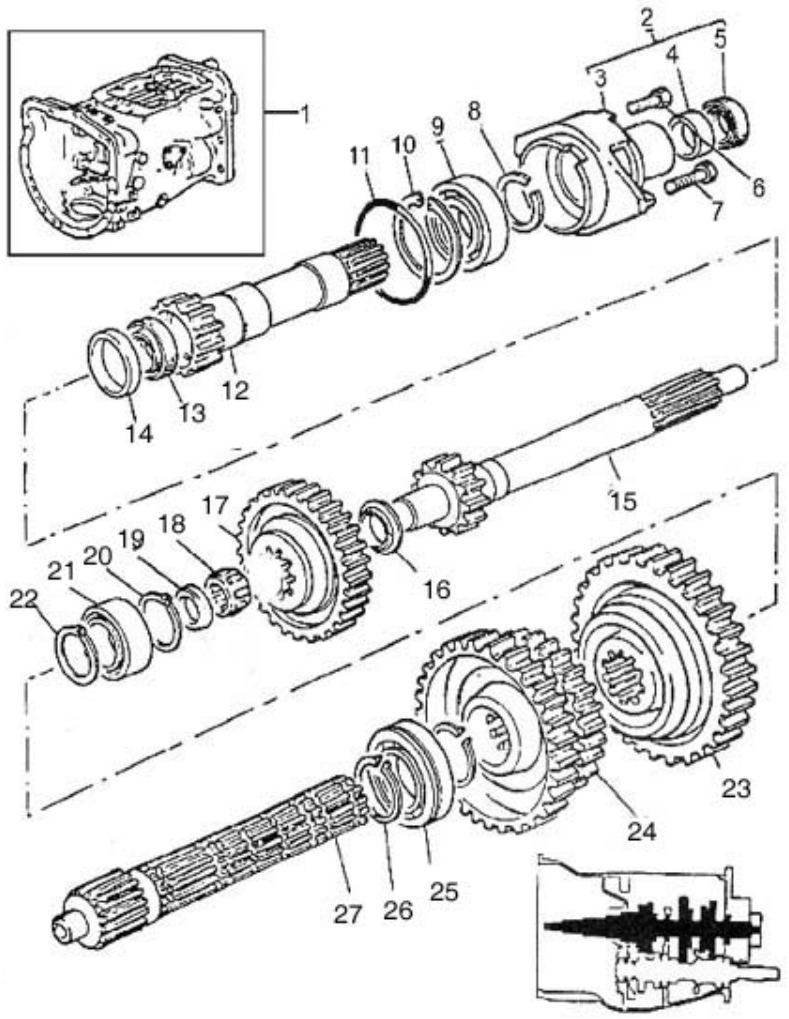


Sl No	Part No.	Description	Qty
20	0195363M01	Circlip	1
21	0338552X01	Bearing	1
22	0195363M01	Circlip	1
23	1682688M02	Gear Low Speed	1
24	1682691M02	Gear Inter and high	1
25	195493M01	Bearing (Alt part No.1675274M01)	1
26	195363M01	Circlip	2
27	1687642M01	Main Shaft	1

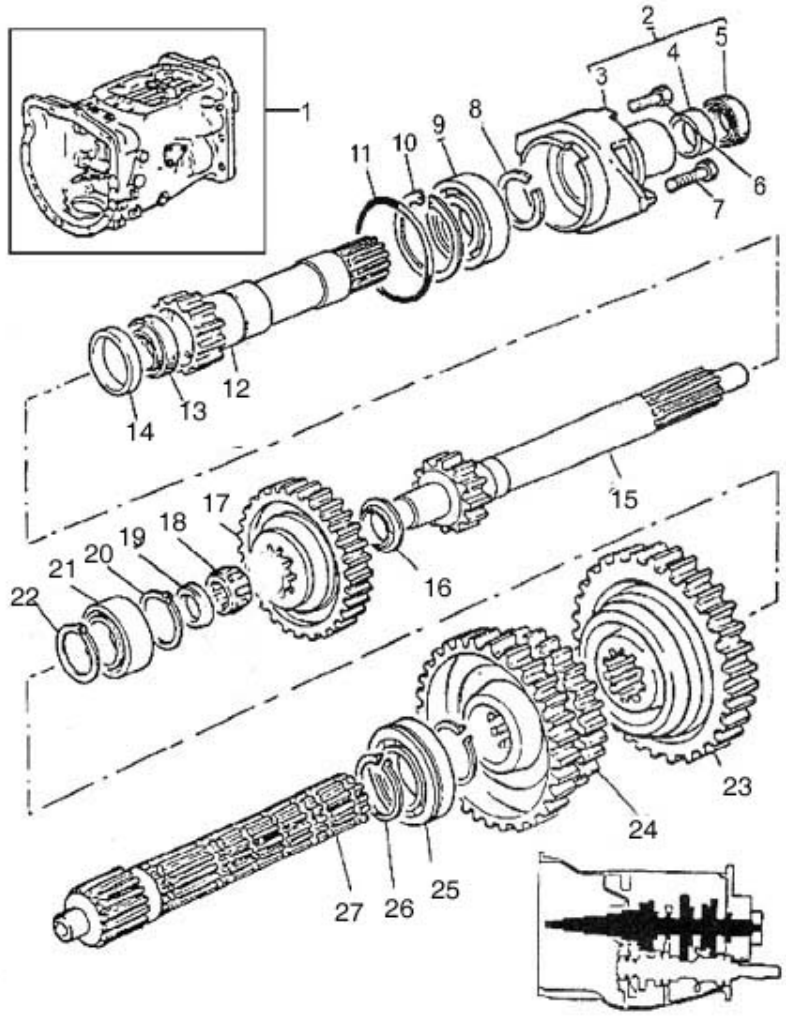


SPEED CONSTANT MESH TRANSMISSION (COUNTER SHAFT)

Sl No	Part No.	Description	Qty
2	4242653M01	Screw (unc)	4
3	0353434X01	Washer	4
4	4242964M01	Cap	1
5	1004633M01	'O' Ring	1
6	0899385M01	Ring	1
7	0881122M02	Ring	1
8	0355988X01	Snap ring	1
9	0899377M02	Bearing	1
10	0899331M02	Housing	1
11	0180432M01	Gasket	1
12	0358913X02	Snap Ring	1
13	4246009M01	Gear	1
14	1869279M01	Shaft	1
21	0906472M03	Counter Shaft	1
22	0195453M01	Bearing	1
23	195499M01	Snap ring	1
24	1862422M01	Gear Constant Mesh(42 Teeth)	1
25	0964916M01	Pinion (28 Teeth)	1
26	0195507M01	Bearing Ball	1
27	0195500M01	Snag ring	1
28	0180415M02	Pinion (33 Teeth)	1

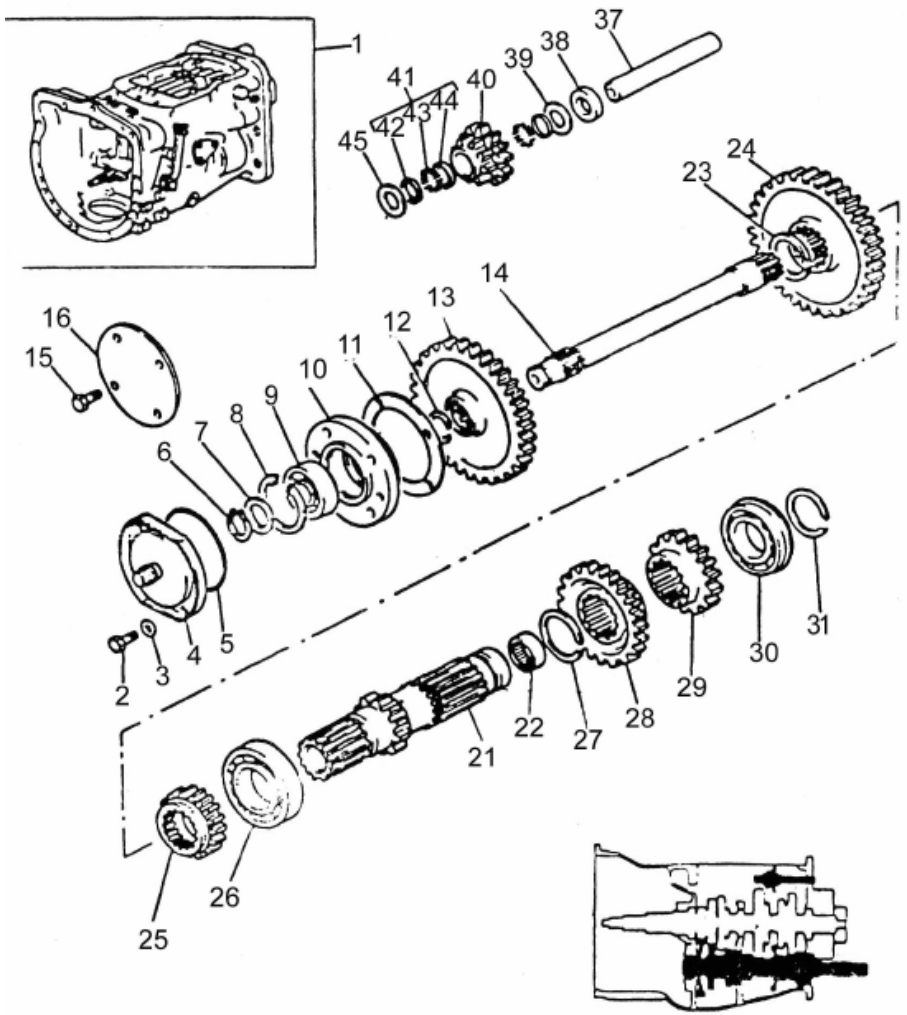


Sl No	Part No.	Description	Qty
29	0180419M02	Pinion	1
30	0195453M01	Bearing	1
31	0195500M01	Snap Ring	1
37	0180445M01	Shaft	1
38	0189449M01	Washer spacer	1
39	0180458M01	Washer	1
40	183040M01	Gear Rev Cluster (21 T /13 T)	1
41	830735M91	Bearing Kit	1
42	0183037M01	Washer	2
43	0183039M01	Needle bearing	56
44	0183038M01	Spacer	1
45	0180458M01	Washer	1

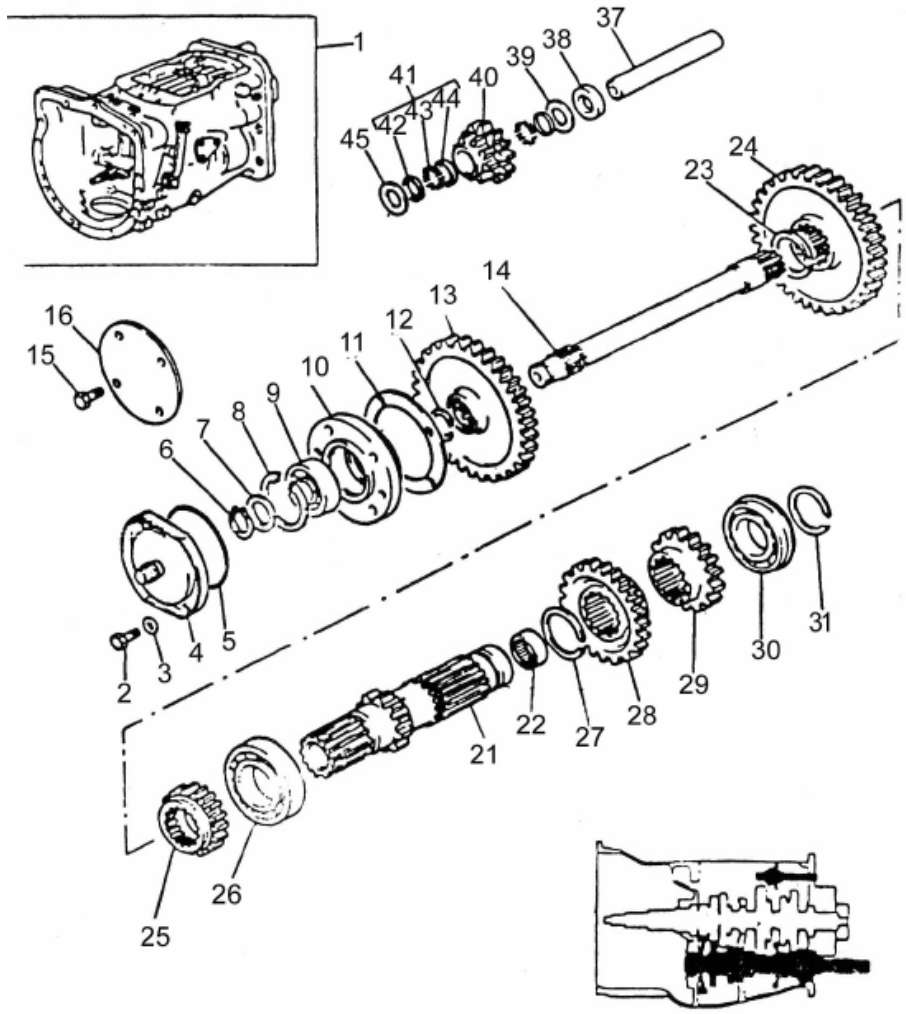


SPEED CONSTANT MESH TRANSMISSION EPCYCLIC UNIT

Sl No	Part No.	Description	Qty
1	1866557M02	Coupler	1
2	0362686X01	Bolt (unc)	4
3	0353434X01	Washer Lock	4
4	1867423M01	Plate	1
5	4246699M91	Carrier Assy	1
6	1866545M02	Washer	1
7	1866543M01	Washer	3
8	1866537M2	Carrier	1
9	1866553M2	Needle Roller	96
10	377424X01	Ring	1
11	1866552M01	Pinion	3
12	1866545M2	Washer	1
13	1866542M01	Thrust Washer	6
14	1866538M2	Shaft	3
15	1867424M02	Gear (68 Teeth)	1
16	180409M01	Pin	2
17	1867425M01	Plate	1
18	1867426M01	Shim	1

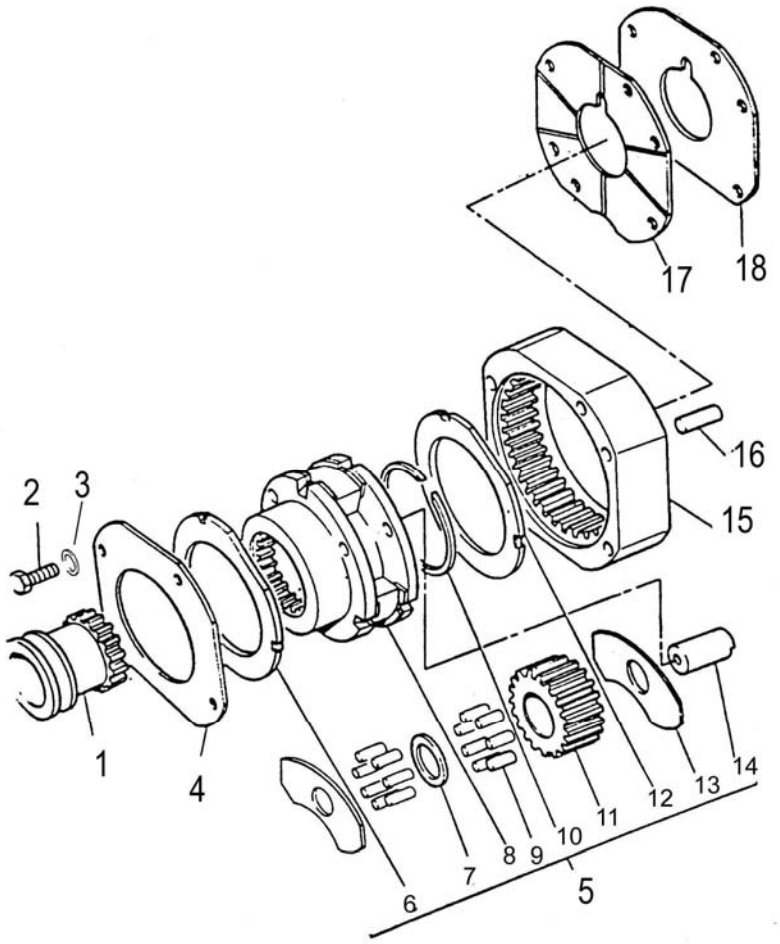


SHIFT LEVER

Sl No	Part No.	Description	Qty
1	3699827M02	Support	1
2	3762688M01	Lever	1
3	0717686M01	Knob Assy.	1
4	353430X01	Nut (unf)	1
5	3614852M01	Cup	1
NI	3009326X01	Clip Snapper	1
NI	4244693M01	Clip Snapper	2
NI	3009816X01	Clip Snapper	1
NI	3614895X01	Washer	1
NI	3698630M01	Spring Gear Shift Lever	1
11	1694127M3	Cover	1
NI	3612576M01	Retaining Ring	1
NI	3614872M01	Washer	1
12	3762686M01	Lever	1
13	0715682M01	Knob Assy.	1
14	353430X01	Nut unf	1
15	831527M01	Ring	1
16	1678440M01	Pin	1
18	3614852M01	Cover	1

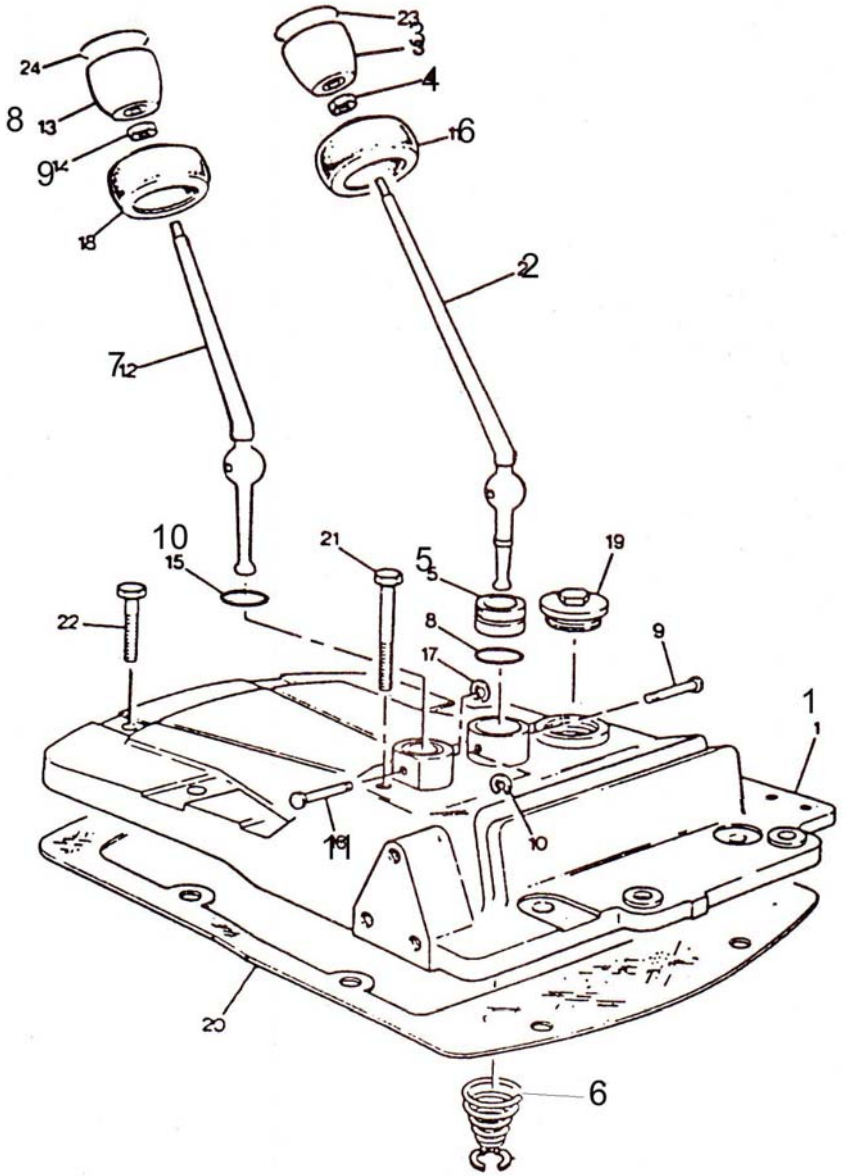


Sl No	Part No.	Description	Qty
19	768300M01	Plug	1
20	180511M2	Gasket	1
21	377886X01	Bolt (unc)	2
22	377883X01	Bolt (unc)	6
NI	827211M01	Ring Locking	2

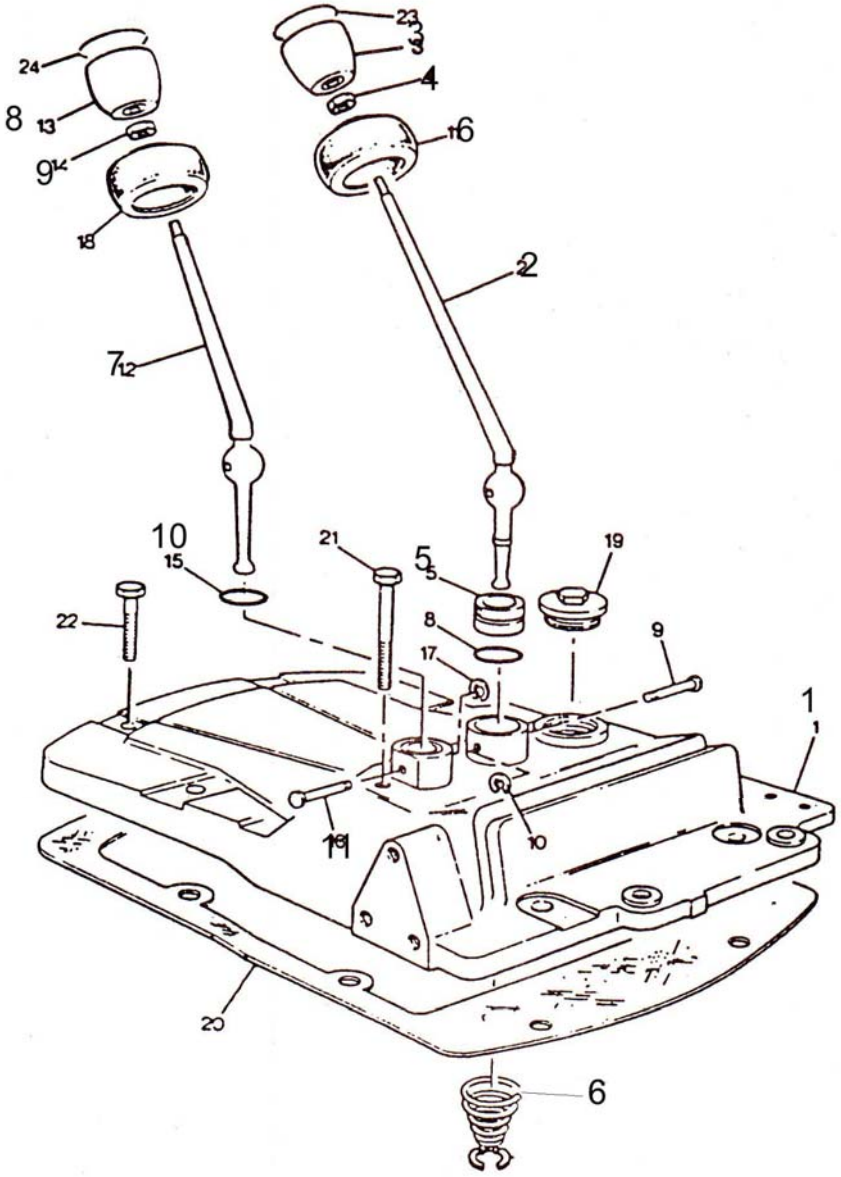


P.T.O DRIVE MECHANISM

Sl No	Part No.	Description	Qty
1	3599003M91	Assy P.T.O Shaft-Rear	1
2	0713923M01	Bearing-Ball	1
3	0831581M02	Snap-RING	1
4	0195453M01	Bearing Needle Roller	1
5	3699801M01	Seal- PTO (Unitised)	1
6	0532888M02	Cap Output Shaft-PTO	1
7	1663254M01	Retainer- PTO Bearing	1
8	3599002M01	Sleeve-Retainer PTO Seal	1
9	1004633M01	O-Ring	1
10	0353697X01	Hex.Screw	2
11	3610252M01	Sleeve	1
12	3599630M01	Coupler	1

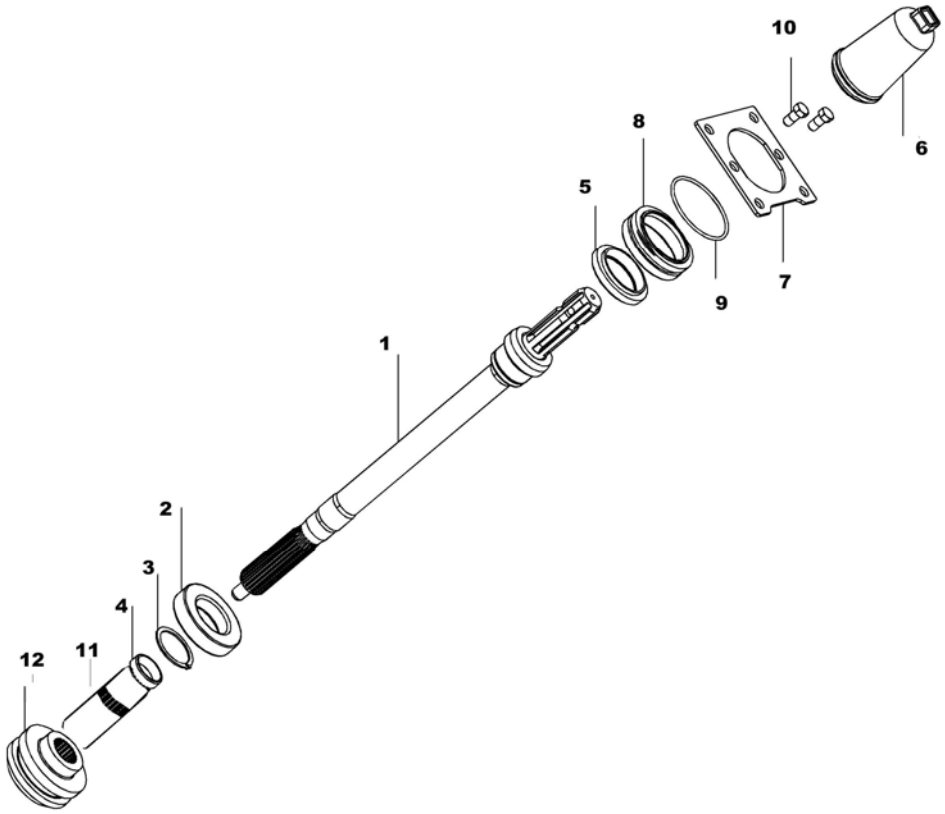


P.T.O COVER ASSEMBLY


Sl No	Part No.	Description	Qty
1	0353213X01	Snap Ring	1
2	0195562M01	‘O’ Ring	1
3	3760665M01	Cover	1
4	0181217M04	Gasket	1
5	0191221M01	Spring	1
6	0180418M02	Plunger	1
7	1870594M92	Fork PTO	1
8	4257072M91	Lever PTO	1
9	1440999X01	Slotted Pin	1
10	0717683M01	Knob PTO	1
11	3760613M01	Decal	1
NI	0358724X91	Plug	1

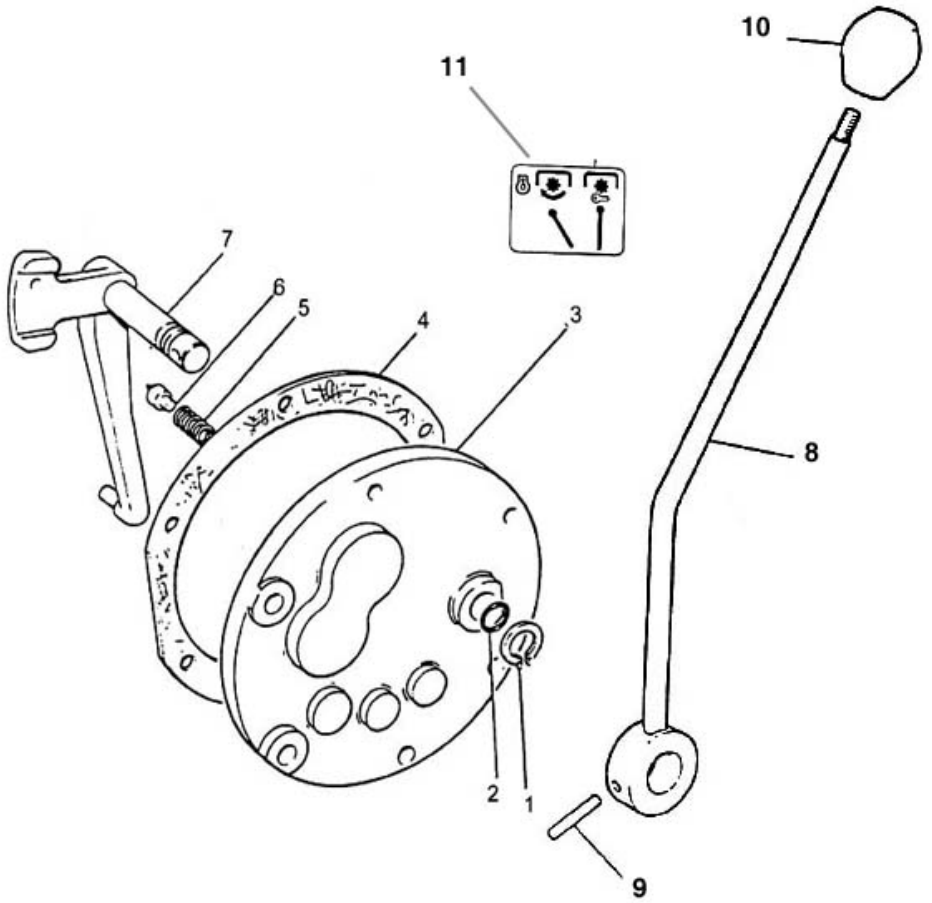

REAR AXLE SPACER


Sl No	Part No.	Description	Qty
1	1866533M01	Shaft	1
2	1866533M01	Shaft	1
3	0886352M01	Spring	1
4	0886353M01	Abutment	1
5	0195513M01	Bearing	1
6	3611473M01	Coupling - Rear Drive	1
7	0354416X01	Pin – Cotter	1
11	1663273M02	Spacer	1
12	3599804M02	Gasket	2
13	880695M01	Plug	2
14	882011M01	Washer	4
20	1687835M01	Bolt (unc)	3
21	377824X01	Bolt (unc)	2
22	377181X01	Bolt (unf)	1
23	377182X01	Bolt (unc) (7/16” × 2 1/2")	1
24	377566X01	Bolt (unc) (7/16” × 3 5/8")	1
25	377563X01	Bolt (7/16” × 33/4")	3
26	377181X01	Bolt (unc)	2

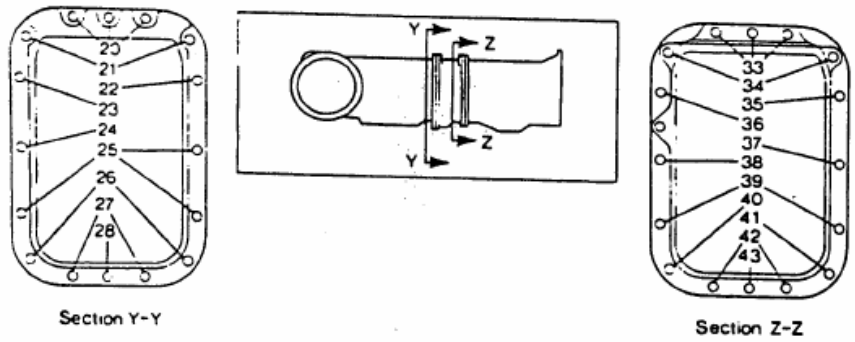

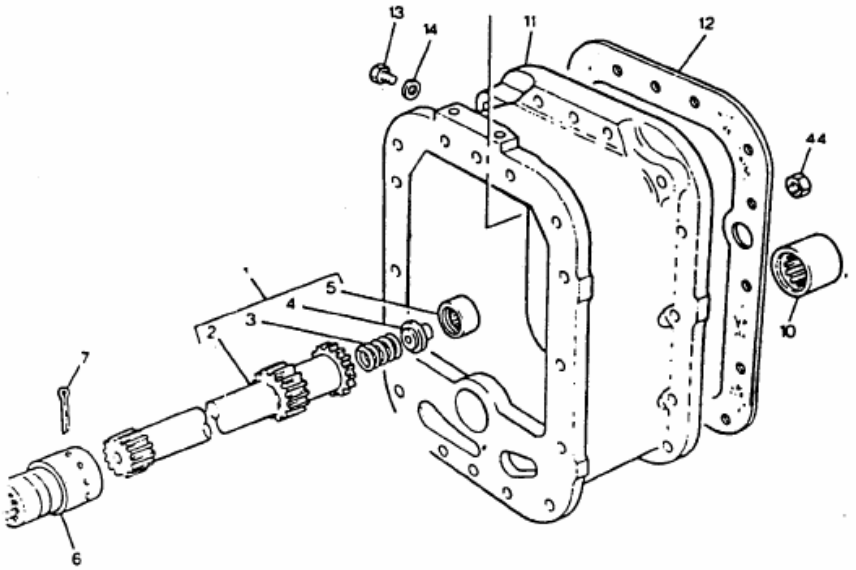


CENTRE HOUSING

Sl No	Part No.	Description	Qty
1	3599718M04	Centre Housing - OIB	1
2	0377616X01	Stud	4
3	0377626X01	Nut Hex	12
4	0377622X01	Bolt(Hd)1/2" Unc	18
5	0195569M01	Stud	4
6	0898643M01	Pin Pump Support	2
7	0851258M01	O Ring	2
8	0353916X01	Nut Hex	4
9	1869491M0160	Cover Plate	1
10	1660551M01	Gasket	1
11	0353676X01	Bolt Hex	3
12	0353446X01	Lock Washer	3
13	0717257M03	Plug - Magnetic Drain	1
14	0180474M01	Washer Sealing	1
15	1861986M02	Gasket	1
16	0377181X01	Bolt Hex	10
17	0377185X01	Nut Hex	10
18	0353572X01	Bolt-Hex	2
19	0363625X01	Nut (Unf)	1

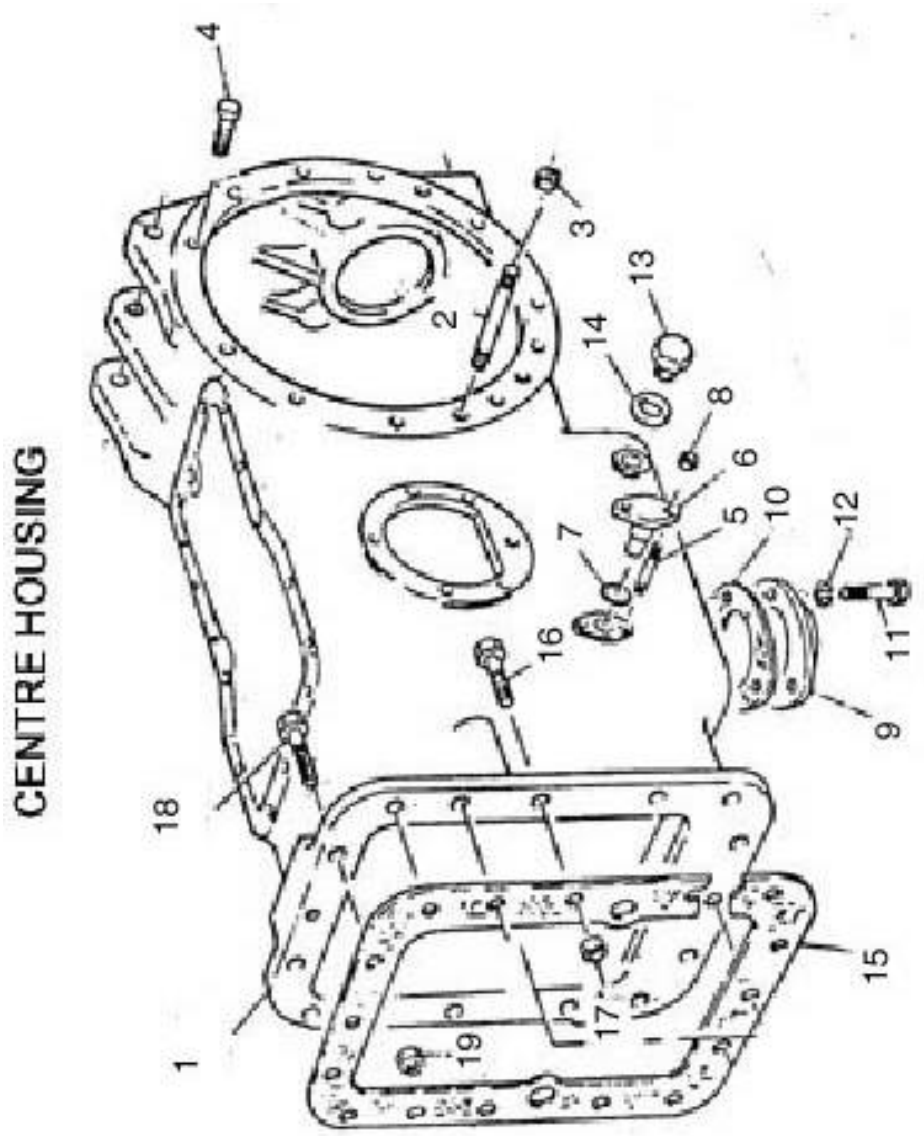


REAR AXLE DIFFERENTIAL ASSEMBLY

Sl No	Part No.	Description	Qty
NI	4249236M91	Diff. Case & Pinion	1
1	0893223M02	Differential Case LH	1
2	4246148M01	Gear-Rear Axle Driving-38t	1
3	4245410M01	Washer-Diff.Gear Thrust	2
4	0717918M01	Differential Bushing	2
5	0716337M01	Gear-Differential.	2
6	1210C00601	Joint-Diff.Cross	1
7	2746322M03	Pinion Differential Dividing	4
8	4246028M02	Washer Diff.	4
9	3771134M01	Case-Diff.Gear RH	1
10	0717916M01	Diff Coupling	1
11	1850909M91	Taper Roller Bearing	1
12	0181246M02	Screw Diff.Gear Case	8
13	0712502M01	Bolt	12
14	0712503M01	Nut-Crown Wheel	12
15	0714101M01	Adhesive	1
16	0196097M01	Snap Ring	1
17	0191250M01	Bearing	1

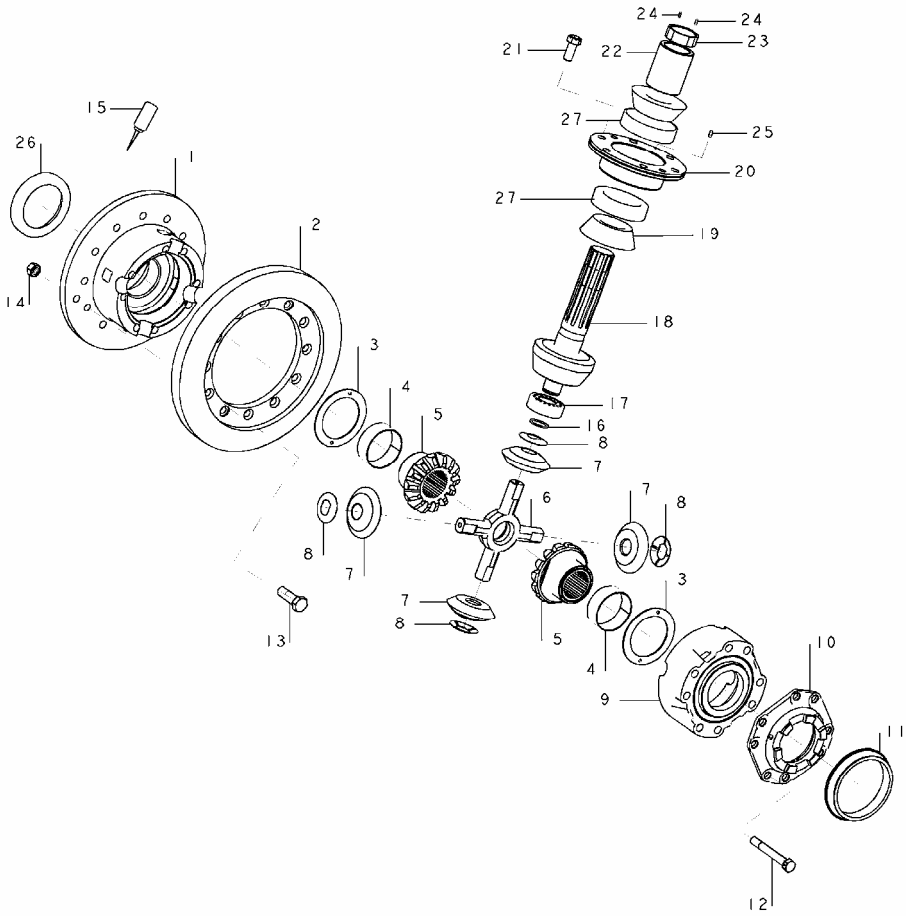


Sl No	Part No.	Description	Qty
18	4246149M01	Pinion Driving(11t)	1
19	0185777M01	Cone-Taper Roller Bearing	2
20	0714475M92	Sleeve Assy.	1
21	0899199M01	Screw Hex	6
22	3614678M01	Spacer-Pinion	1
23	0532956M01	Nut-Bearing Lock	1
24	3612442M01	Needle Roller	2
25	0181253M01	Pin-Pinion Bearing Nut Lock	1
26	1860503M93	Tapered Roller Bearing	1
27	0185778M01	Cup-Tapered Roller Bearing	2
NI	0894778M01	Wrapped Bush	2

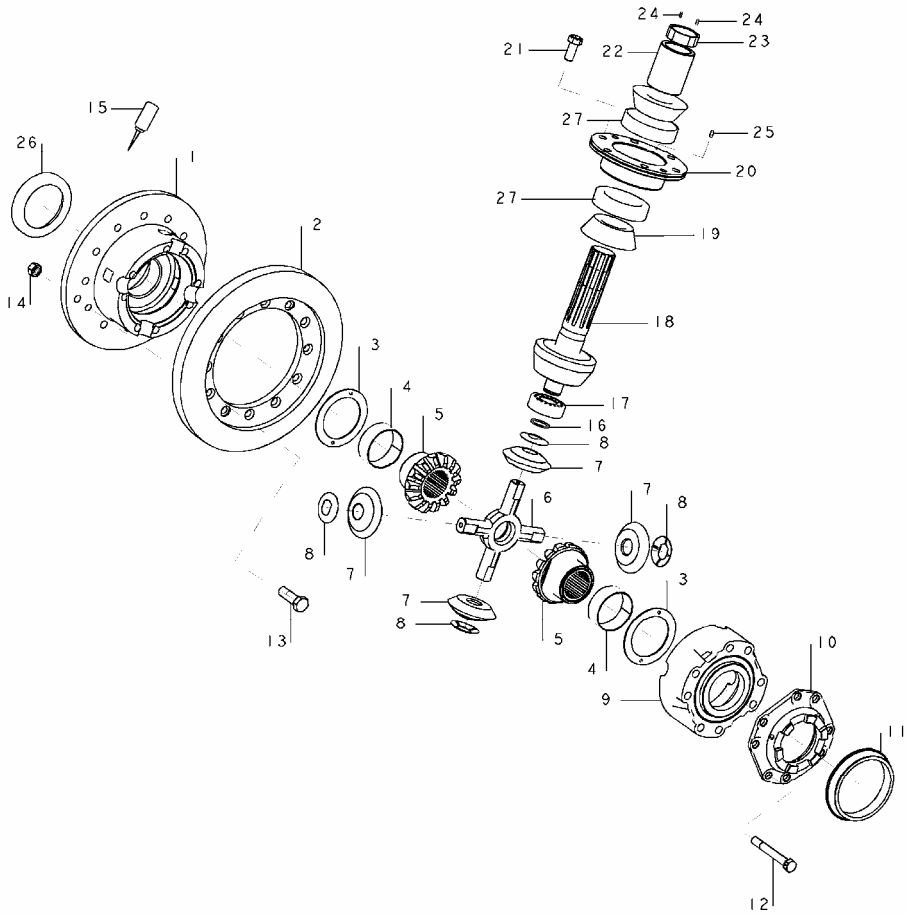


REAR AXLE - DIFFERENTIAL LOCK MECHANISM

Sl No	Part No.	Description	Qty
1	1865014M01	Clevis	1
2	0906811M01	BOOT	1
3	353428X01	Nut (unf)	1
4	851258M01	‘O’ Ring	1
5	358950X01	Ring Snap	1
6	3611355M01	Collar diff. lock	1
7	1694353M01	Spring - Diff. lock	1
8	3613150M01	Shaft - Diff. lock	1
9	1860838M01	‘O’ Ring	4
15	3614193M02	Plate – Diff. Carrier RH*	1
16	0355723X01	Pin – Spring	1
17	0906807M01	Fork – Diff. lock	1
18	0897003M3	Cap diff. coupling	1
19	3614194M02	Plate – Diff. Carrier LH*	1
20	0376407X01	C Sunk screw	4

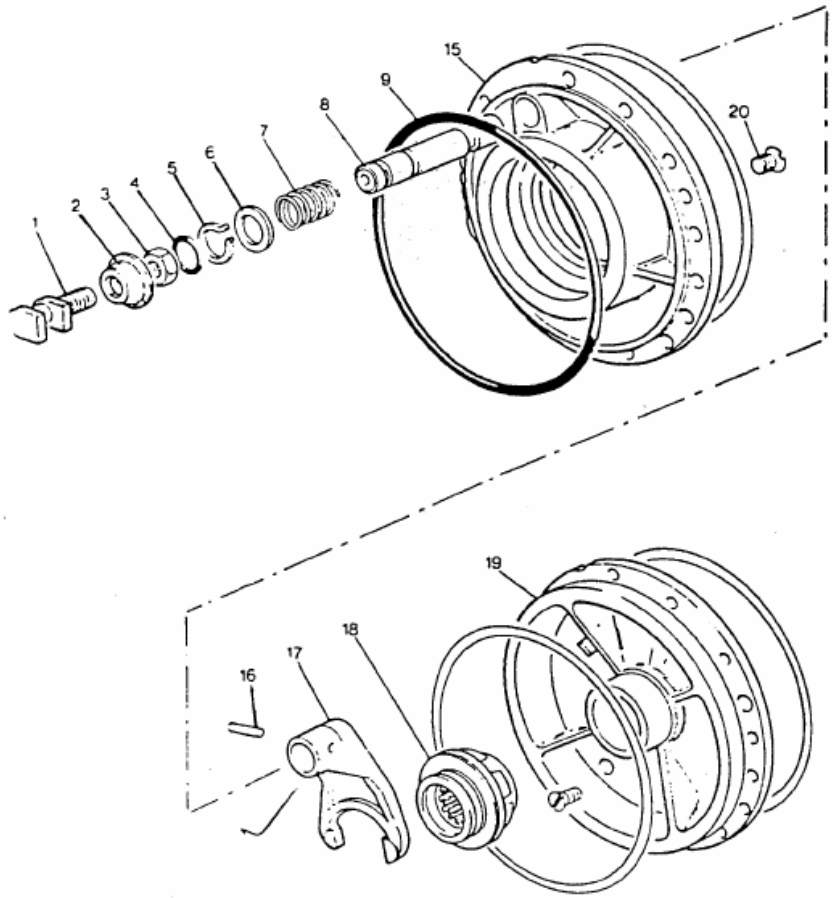


FORK AND GEAR SHIFT RAIL

Sl No	Part No.	Description	Qty
2	3610591M03	Spring	4
3	3610589M02	Plunger	4
4	3697278M01	Rail	1
5	881144M01	Screw	1
6	0180446M01	Selector Planetary	1
7	881144M01	Screw	1
8	0897065M02	Fork Planetory Shifter	1
9	1678867M01	Rail - Reverse & low shifter	1
10	1877607M01	Jaw selector	1
11	881144M01	Screw	1
12	1860773M01	Fork Selector	1
13	881144M01	Screw	1
19	1678865M01	Rail - Third Gear	1
20	1873532M03	Fork - Third Gear	1
21	881144M01	Screw	1
22	1860773M01	Selector - Third Gear	1
23	881144M01	Screw	1
24	1678866M01	Rail	1

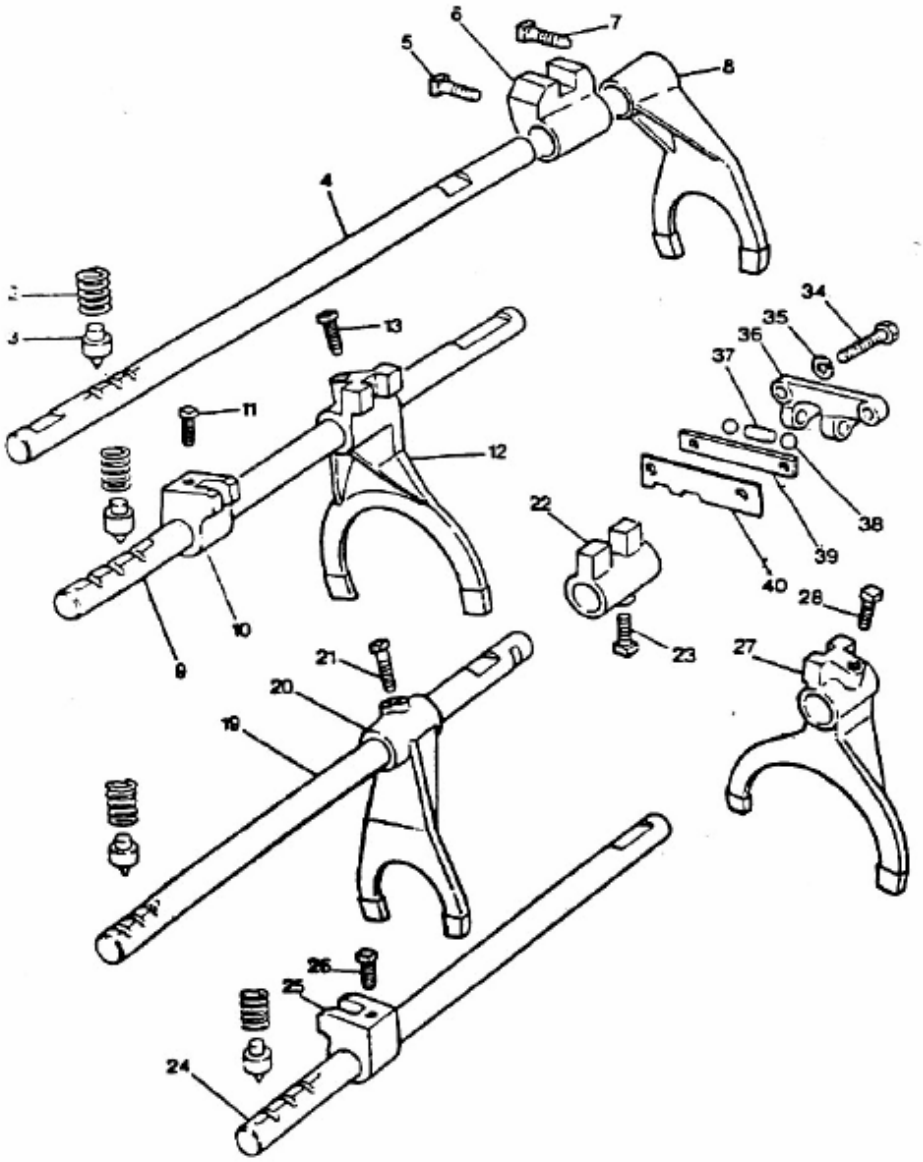


Sl No	Part No.	Description	Qty
25	1877607M01	Jaw - Selector	1
26	881144M01	Screw	1
27	1860773M01	Fork	1
28	881144M01	Screw	1
34	353434X01	Lock washer	2
35	4242653M01	Bolt	2
36	1860761M01	Retainer - Ball	1
37	1860767M01	Pin - Lock Rail	1
38	0391838M01	Ball - Steel	2
39	1860765M01	Packing	1
40	1860764M01	Plate packing	1

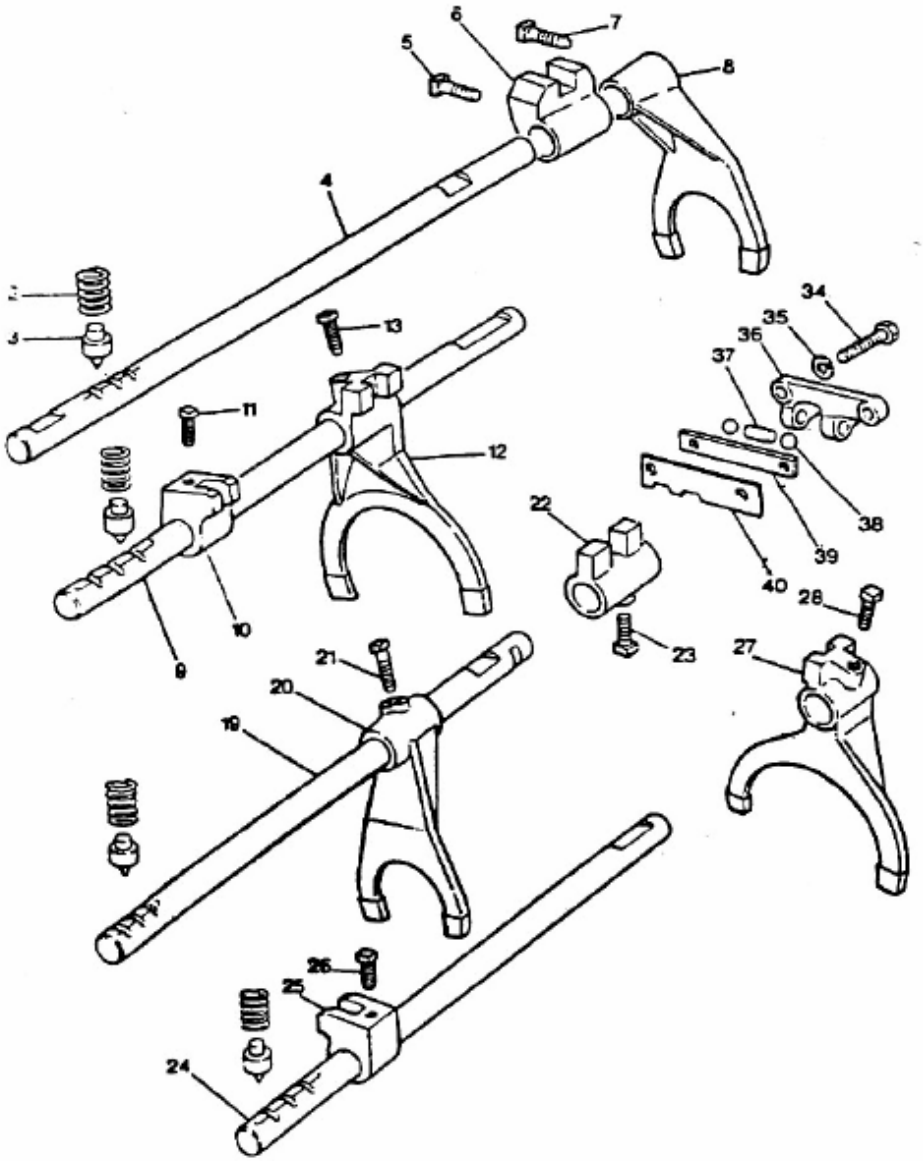


REAR AXLE DIFFERENTIAL LOCK PEDAL

Sl No	Part No.	Description	Qty
1	1871784M01	Pedal – DIFF Lock	1
2	1860961M01	Shaft – DIFF Lock	1
3	0354454X01	Groove Pin	1

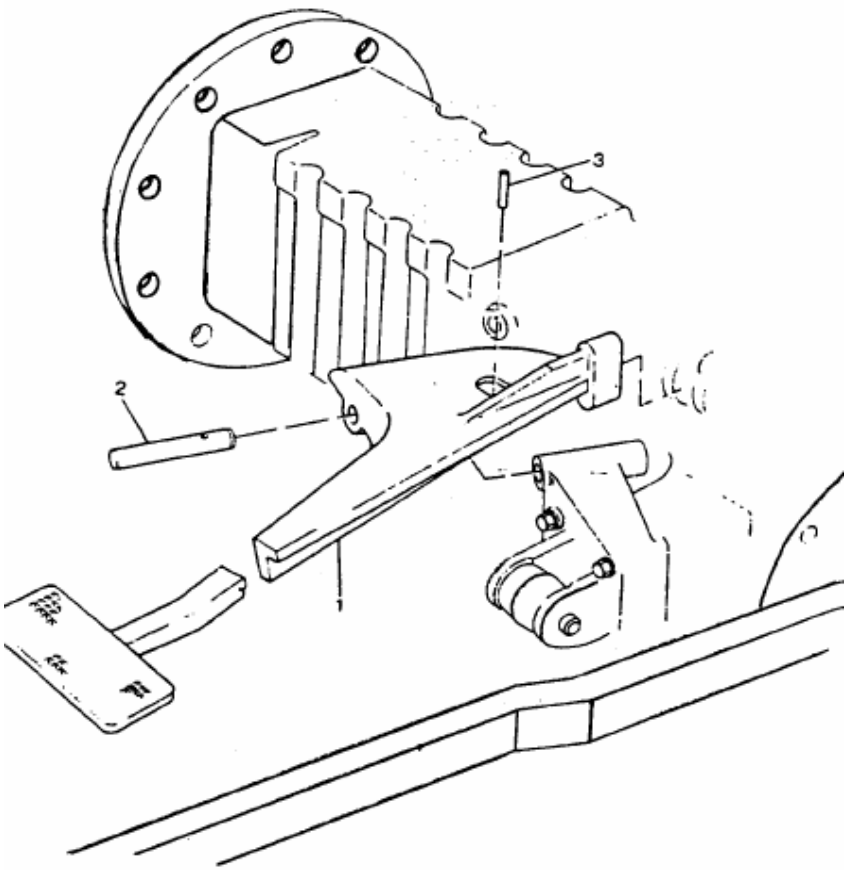


REAR AXLE HOUSING R.H ASSEMBLY


Sl No	Part No.	Description	Qty
1	3759143M01	Axle Housing RH	1
2	1865014M01	Clevis~Difflock	1
3	0906811M01	Boot	1
4	0851258M01	O Ring	2
5	3611355M01	Collar-Diff. Lock	1
6	1871784M01	Pedal-Diff. Lock	1
7	1695314M01	Shaft-Lower Link	2
8	1861676M91	Assy. Pull Rod.	1
9	4245372M01	Special Bonded Type Seal.	1
10	1667224M01	Bracket Brake Lever RH	1
11	1861665M01	Brake Lever RH	1
12	1865002M02	Collar	1
13	1865003M01	Trunnion	1
14	0195348M01	Pin Clevis	1
15	0358950X01	Ring-Retaining	1
16	1694353M01	Spring (Diff.Lock)	1
17	3613150M01	Shaft-Diff-Lock	1

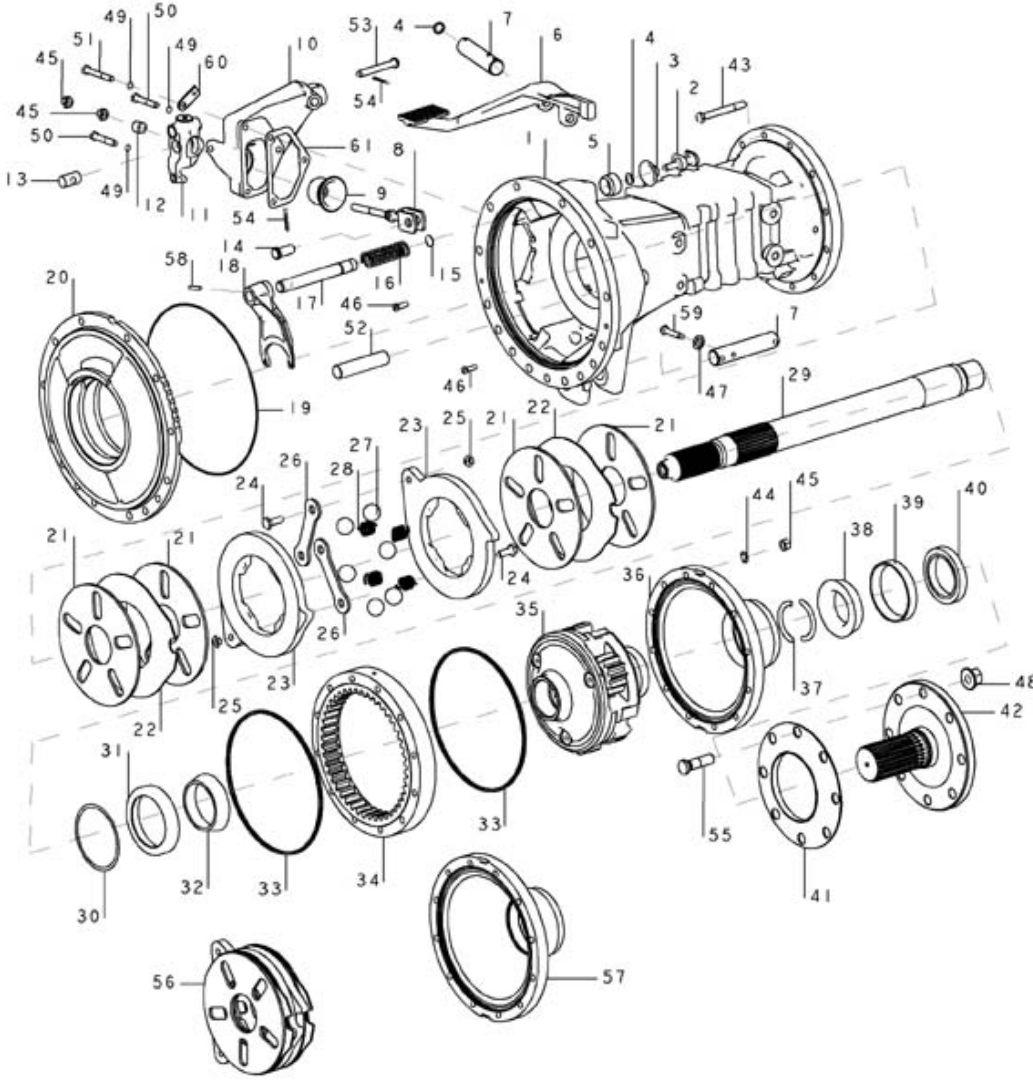


Sl No	Part No.	Description	Qty
18	0906807M01	Fork-Diff Lock Shifter	1
19	1860838M01	O Ring	1
20	3614193M02	Plate Differential Career RH	1
21	4256143M01	Friction Disc Plate	4
22	3613538M01	Disc Intermediate	2
23	4256142M91	Assy.Actuator	2
24	1805982M01	Bolt	2
25	1805983M01	Nut	2
26	1805981M01	Link Plate	2
27	16979X	Ball	6
28	1890318M01	Spring	4
29	1678303M02	Shaft-Rear Axle	1
30	0894757M01	Shim-Straddle Mounted Planetary	1
30	0894758M01	Shim-Straddle Mounted Planetary	1
31	0022020X00	Cup-Tapered Roller Bearing	1
32	0894776M01	Cone Tapered Roller Bearing	1
33	3759196M01	Seal-Epicyclical Ring-Composite	2
34	0894772M02	Gear-Internal Planetary Drive	1
35	4246700M91	Epicyclical Carrier Rear	1
36	3759150M01	Cover-Rear Axle Drive	1

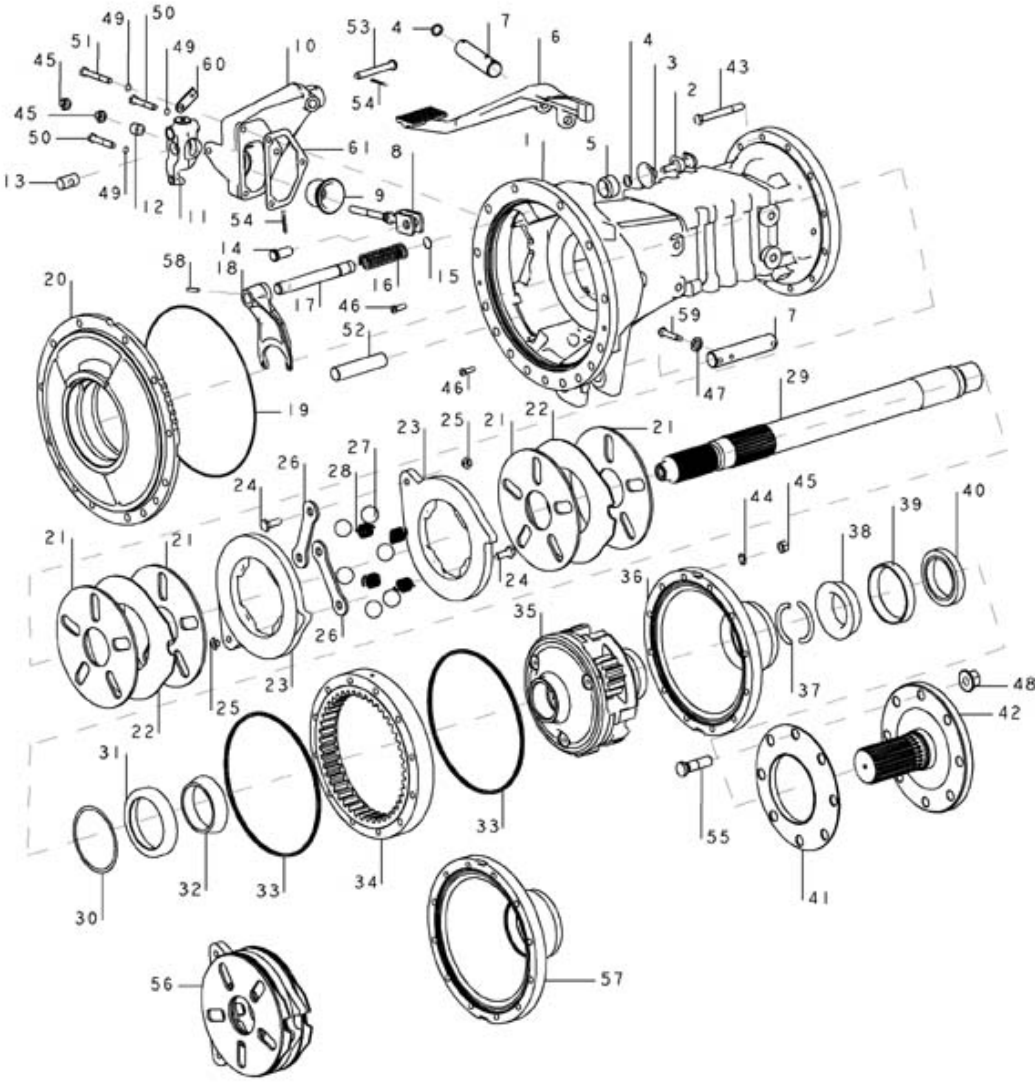

Sl No	Part No.	Description	Qty
37	0882601M01	Ring-Wheel Axle Retaining	2
38	0882967M01	Bearing Tapered Cone And Roller	1
39	0884792M02	Cup-Tapered Roller Bearing	1
40	4245373M01	Seal-Unitized Epicyclical Hub	1
41	0894756M01	Seal-Labyrinth	1
42	4251021M01	Wheel Axle-Standard Duty	1
43	0361785X01	Bolt Hex	12
44	0353432X01	Lock Washer	12
45	0353426X01	Nut Hex	12
46	0376407X01	Screw Counter Sunk	2
47	0353430X01	Nut Hex	1
48	0847417M01	Nut-Rear Wheel	8
49	0353434X01	Lock Washer	3
50	0362455X01	Bolt, Unc	2
51	0362463X01	Screw	1
52	1860956M01	Reaction Pin	1
53	0363459X01	Pin Clevis	1
54	0354068X01	Cotter Pin	2
55	0847416M02	Bolt-Wheel Axle	8

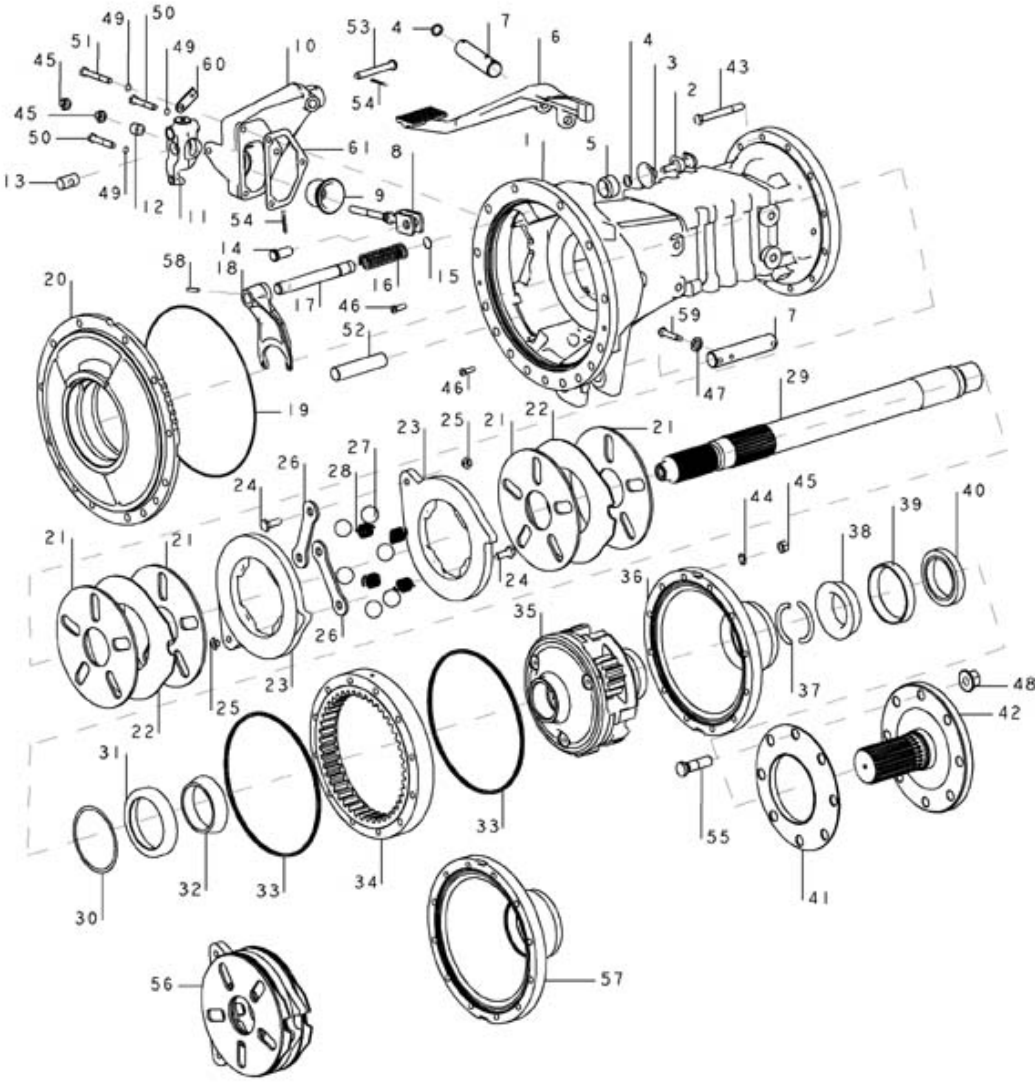


Sl No	Part No.	Description	Qty
56	4256140M91	Brake Assy	
		.(Include Item 21, 22 & 23)	1
57	3759165M91	Assy-Drive Cover	
		-(Incd Item 36, 39 & 40)	1
58	0355723X01	Pin-Spring	1
59	1860725M02	Bolt Hex	1
60	3701000M01	Bracket Spring Return	1
61	1860960M01	Gasket - Bracket Lever	1
NI	1850087M91	Taper Roller Bearing	
		(Include Item 38 & 39)	1
NI	0191124M01	Shield Bearing	1
NI	0892170M01	Shield Bearing	1
NI	0892171M01	Shield Bearing	1
NI	0892172M01	Shield Bearing	1
NI	0892173M01	Shield Bearing	1
NI	1686054M01	Shield Bearing	1
NI	0521401M01	Shield Bearing	1
NI	0894758M01	Shield Bearing	1

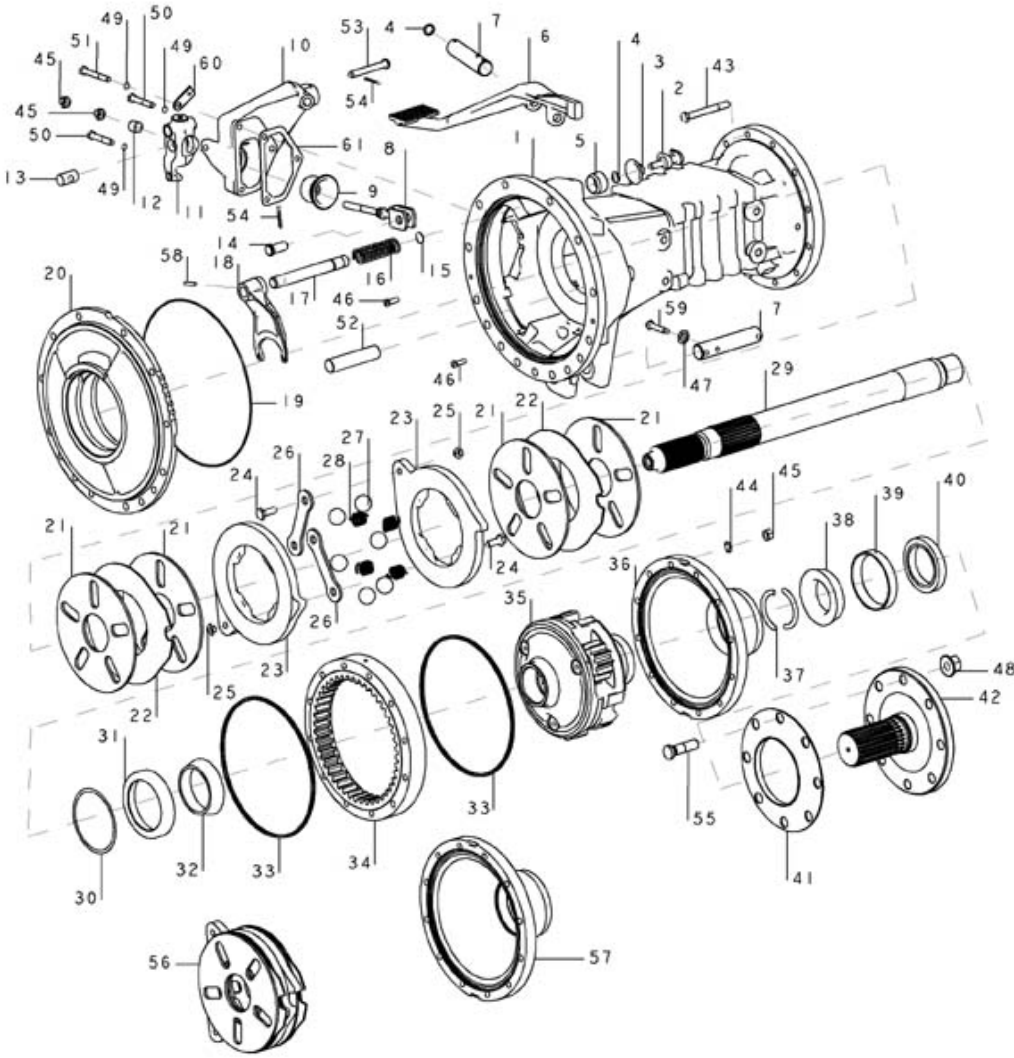


REAR AXLE HOUSING L.H ASSEMBLY


Sl No	Part No.	Description	Qty
1	3759144M01	Axle Housing LH	1
2	0847417M01	Nut-Rear Wheel	8
3	3759165M91	Assy-Drive Cover-Single (Incld Item 36,39&40)	1
4	1860956M01	Reaction Pin	1
5	1861676M91	Assy. Pull Rod.	1
6	4245372M01	Special Bonded Type Seal.	1
7	1860970M01	Bracket Lever Brake L.H Comp	1
8	1861666M01	Brake Lever LH	1
9	1865003M01	Trunnion	1
10	1865002M02	Collar	1
11	0354068X01	Cotter Pin	2
12	0362455X01	Bolt	2
13	0353434X01	Lock Washer	3
14	0362463X01	Screw	1
15	0361785X01	Bolt Hex	12
16	1695314M01	Shaft-Lower Link	1

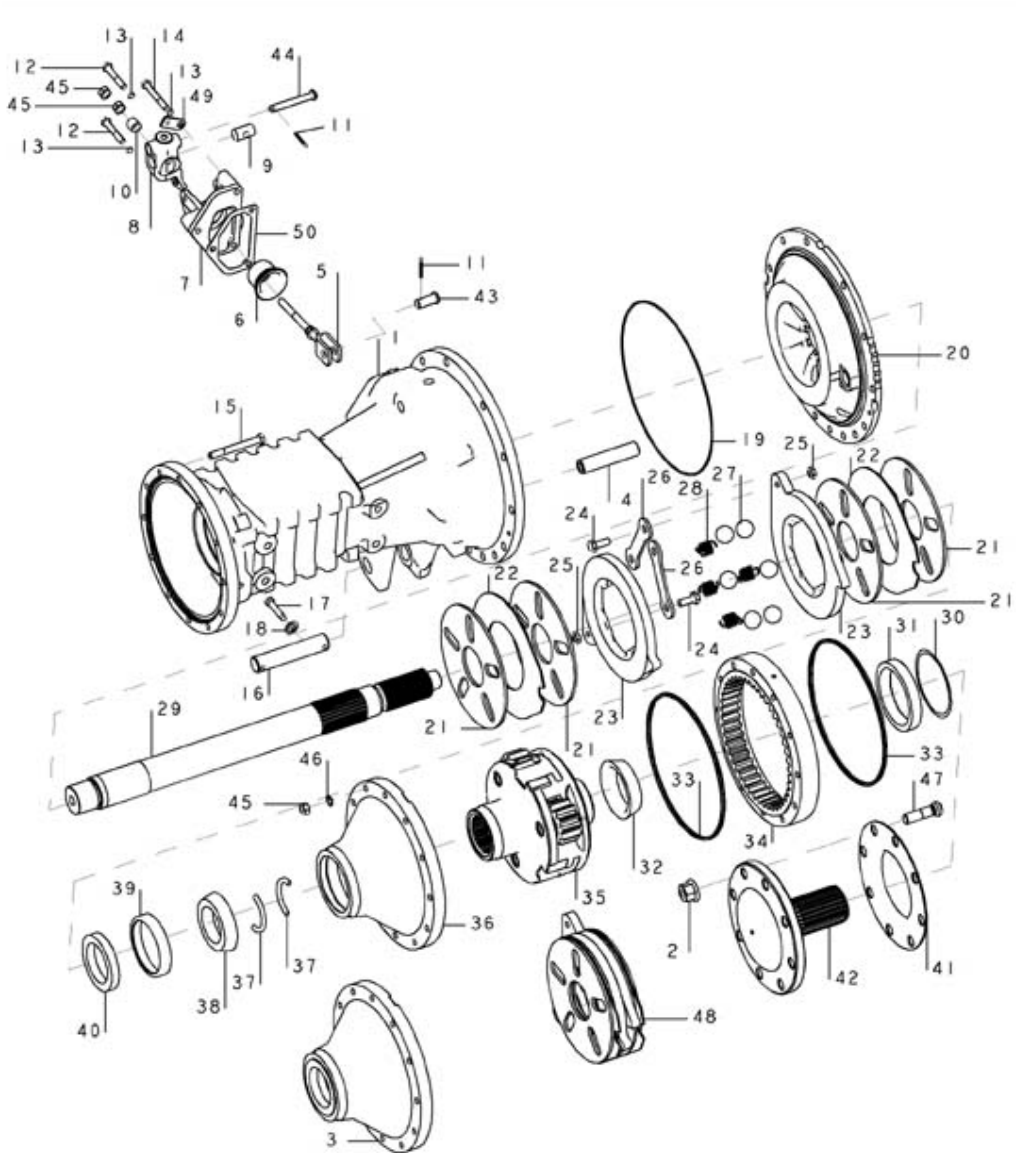

Sl No	Part No.	Description	Qty
17	1860725M02	Bolt Hex	1
18	0353430X01	Nut Hex	1
19	1860838M01	O Ring	1
20	3614194M02	Plate Differential Career L.H	1
21	4256143M01	Friction Disc Plate	4
22	3613538M01	Disc Intermediate	2
23	4256142M91	Assy. Actuator	2
24	1805982M01	Bolt	2
25	1805983M01	Nut	2
26	1805981M01	Link Plate	2
27	16979X	Ball	6
28	1890318M01	Spring	4
29	1678303M02	Shaft-Rear Axle	1
30	0894757M01	Shim-Straddle Mounted Planetary	1
30	0894758M01	Shim-Straddle Mounted Planetary	1
31	0882967M01	Bearing Tapered Cone And Roller	1
32	0884792M02	Cup-Tapered Roller Bearing	1
33	3759196M01	Seal-Epicyclical Ring-Composite	2
34	0894772M02	Gear-Internal Planetary Drive	1
35	4246700M91	Epicyclical Carrier Rear	1

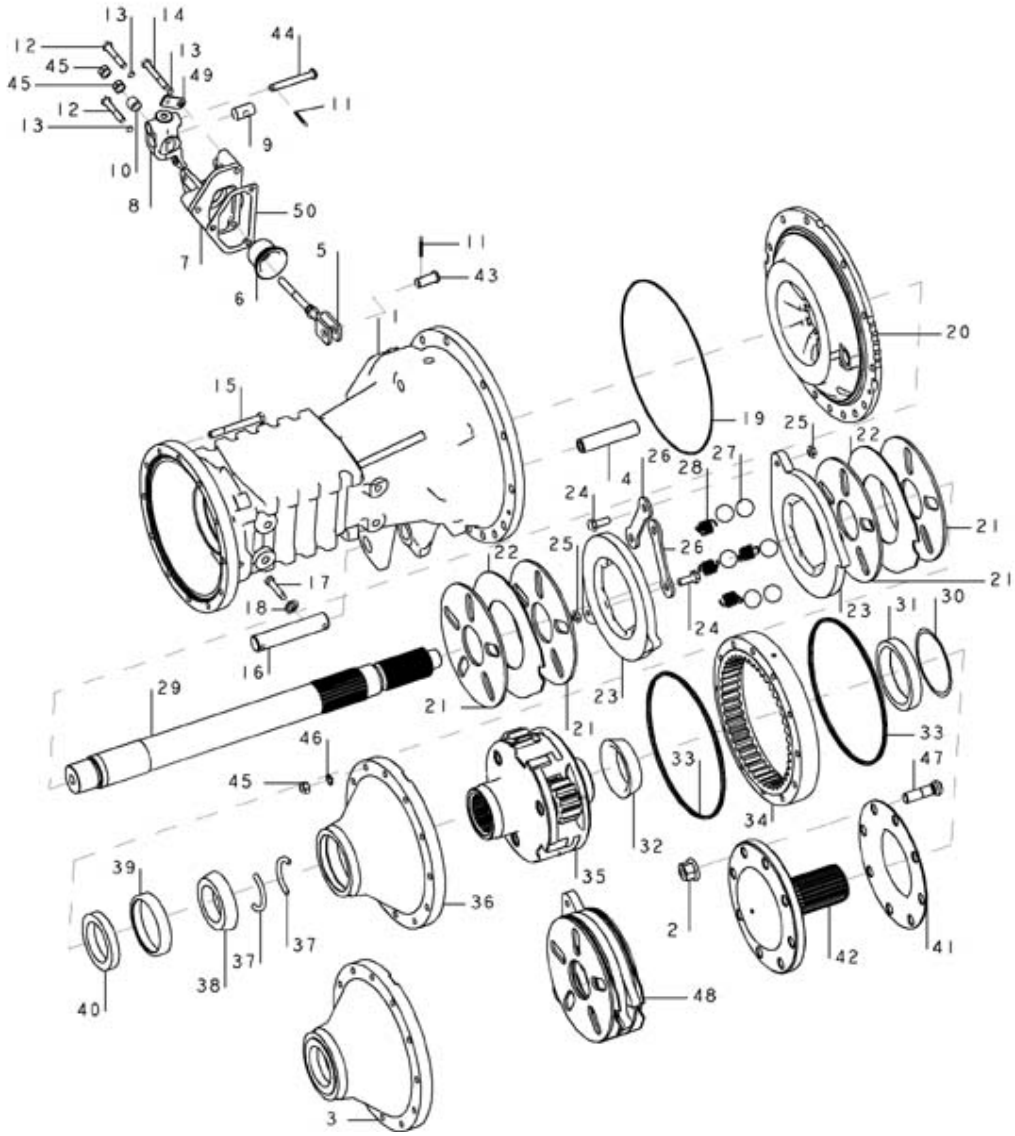


Sl No	Part No.	Description	Qty
36	3759150M01	Cover-Rear Axle Drive	1
37	0882601M01	Ring-Wheel Axle Retaining	2
38	0882967M01	Bearing Tapered Cone And Roller	1
39	0884792M02	Cup-Tapered Roller Bearing	1
40	4245373M01	Seal-Unitized Epicyclical Hub	1
41	0894756M01	Seal-Labyrinth	1
42	4251021M01	Wheel Axle-Standard Duty	1
43	0195348M01	Pin Clevis	1
44	0363459X01	Pin Clevis	1
45	0353426X01	Nut Hex	14
46	0353432X01	Lock Washer	13
47	0847416M02	Bolt-Wheel Axle	8
48	4256140M91	Brake Assy	
		.(Incl Item 21, 22 & 23)	1
49	3701000M01	Bracket Spring Return	1
50	1860960M01	Gasket - Bracket Lever	1
NI	1850087M91	Taper Roller Bearing	
		(Include Item 38 & 39)	1
NI	0894758M01	Shield Bearing	1

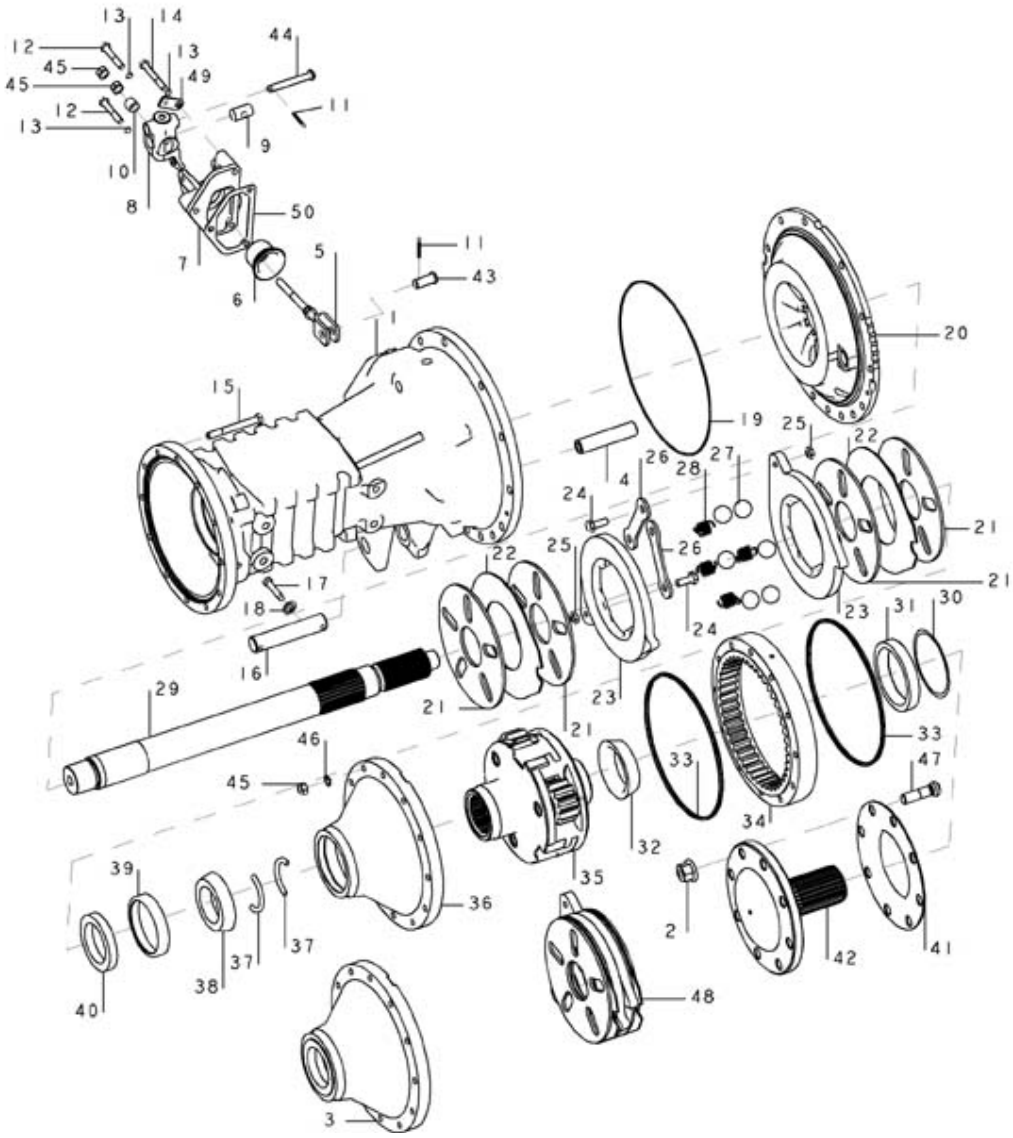


BRAKE PEDAL AND LINKAGE

Sl No	Part No.	Description	Qty
1	1862250M91	Pedal RH	1
2	195910M01	Bush	1
3	0897687M01	Pedal LH	1
4	364549X01	Bolt (unf)	1
5	376721X01	Lock Washer	1
6	363625X01	Nut (unf)	1
7	1860802M01	Shaft	1
8	200191M01	Nipple	1
9	181964M01	Washer	1
10	195904M01	Circlip	1
11	0012501X00	Woodruff Key	2
12	180864M01	Arm	1
13	361549X01	Bolt (unf)	1
14	0353432X01	Lock Washer	1
15	0377185X01	Nut (unf)	1
16	1684106M01	Stop	1
17	886024M01	Lock	1

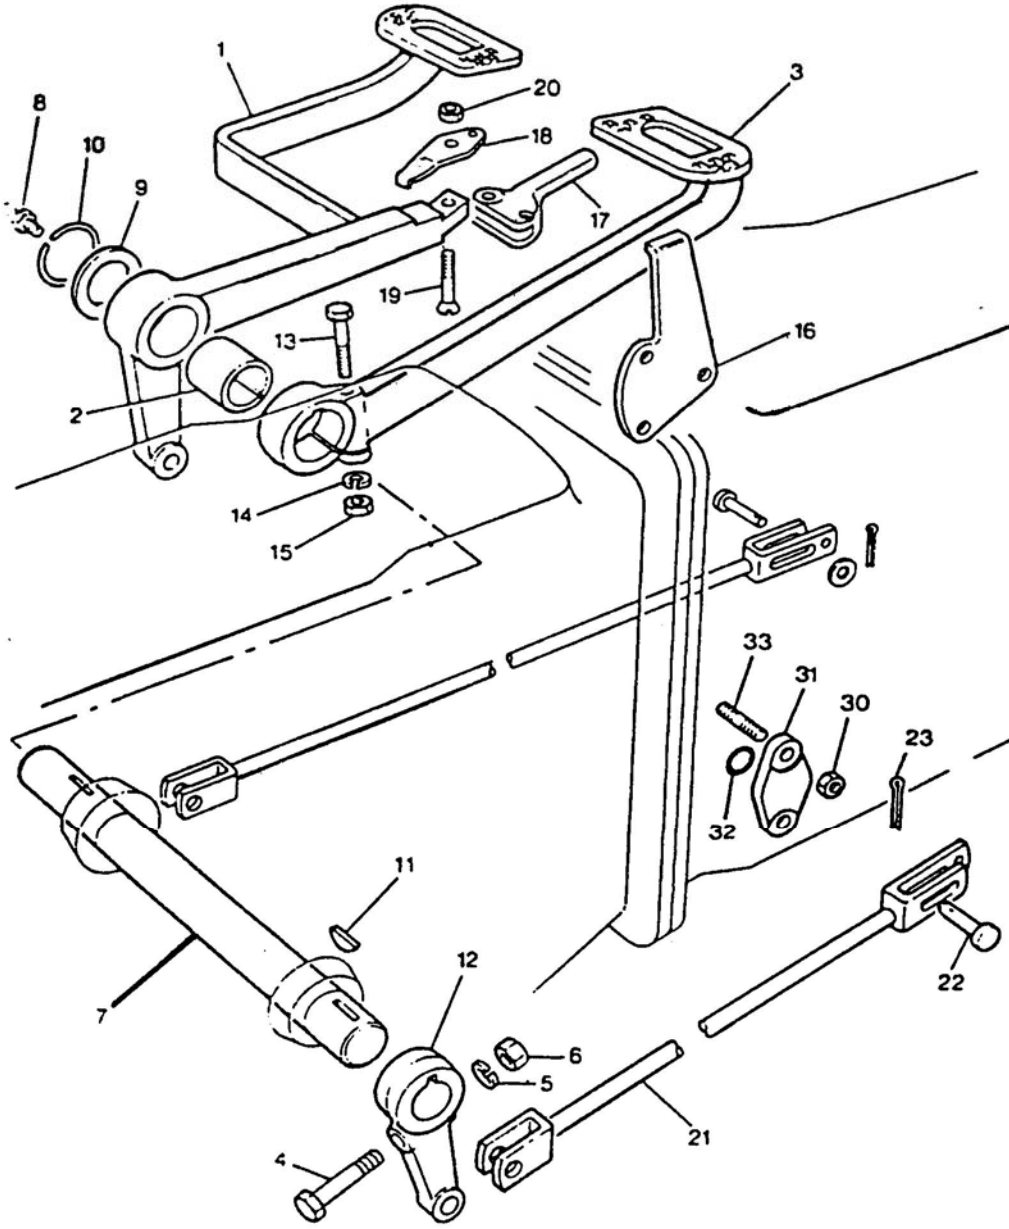


Sl No	Part No.	Description	Qty
18	181958M02	Spring	1
19	3009445X01	Screw (unf)	1
20	1441461X01	Nut (unf)	1
21	1911A00901	Assy. Brake Rod RH	1
	1911A00801	Assy. Brake Rod RH	1
22	832813M01	Clevis Pin	4
23	354059X01	Pin	4
30	353916X01	Nut (unf)	4
31	898643M01	Pin Pump Support	2
32	851258M01	‘O’ Ring	2
33	195569M02	Stud	4

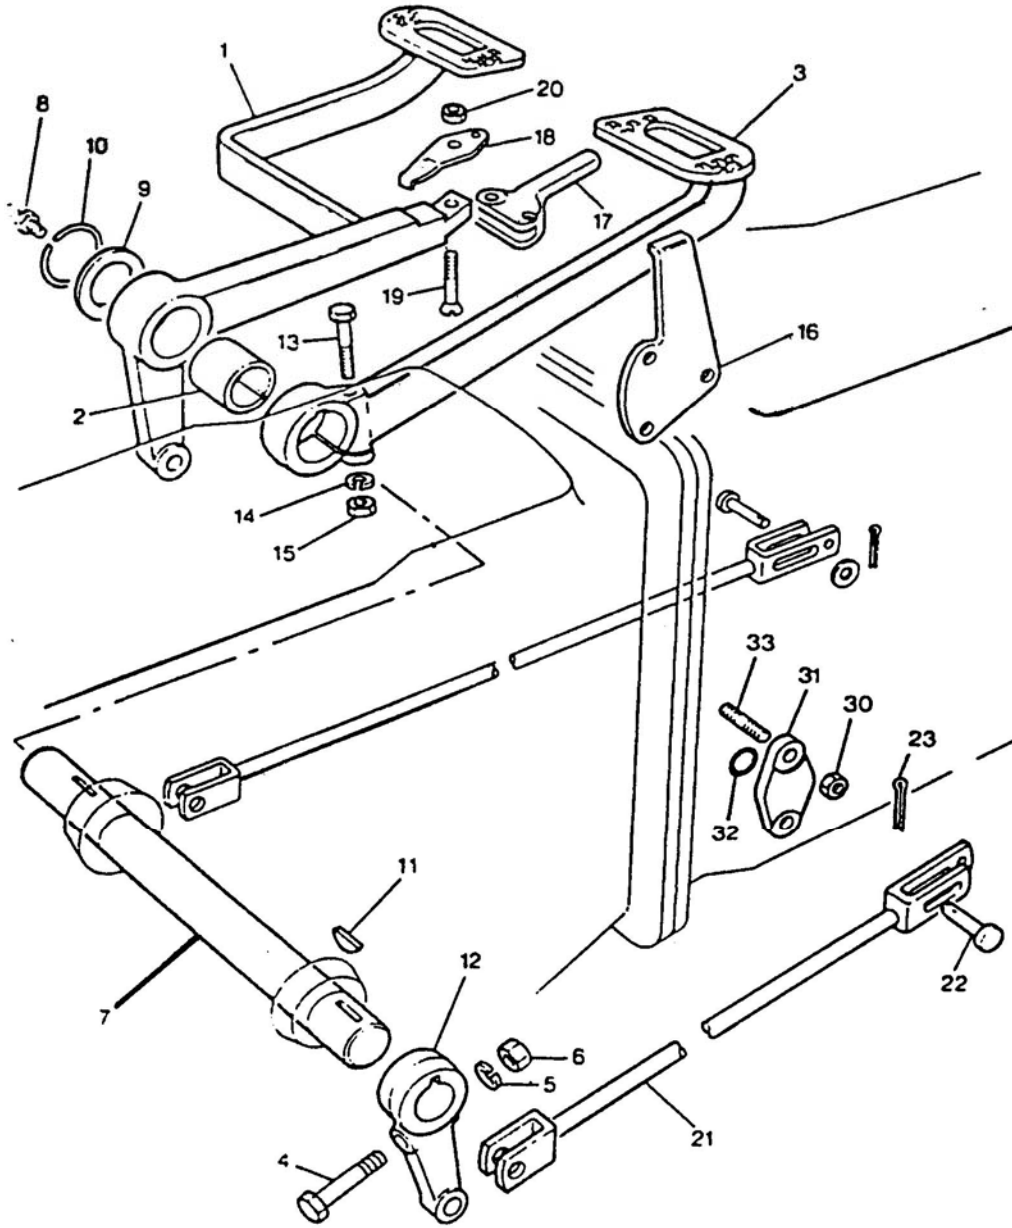


FRONT & REAR WHEELS

Sl No	Part No.	Description	Qty
NI	4244331E91	Assy.Front Wheel-2WD	2
	1917A00301	Assy.Front Wheel-4WD	2
1	0716672M01	Front Tyre - 7.50 X 16-2WD	2
	4252978M01	Front Tyre 12.4*24-4WD	2
2	0716674M01	Front Tube - 7.50 X 16-2WD	2
	4252979M01	Front Tube - 12.4*24-4WD	2
3	0716998M9165	Front Wheel - 7.50 X 16-2WD	2
	4257329M9165	Front Wheel – 12.4*24-4WD	2
4	0195490M01	Nut-Wheel Disk-2WD	12
	3699444M01	Nut-Wheel Disk-4WD	16
NI	4251740M91	Assy Rear Wheel & Tyre RH	1
NI	4251741M91	Assy Rear Wheel & Tyre LH	1
5	3700930M91	Rear Wheel - 75 Hp	2
6	0716675M01	Rear Tube - 18.4 * 30	2
7	0716673M01	Rear Tyre 18.4 * 30	2
8	0847417M01	Nut Rear Wheel-	16

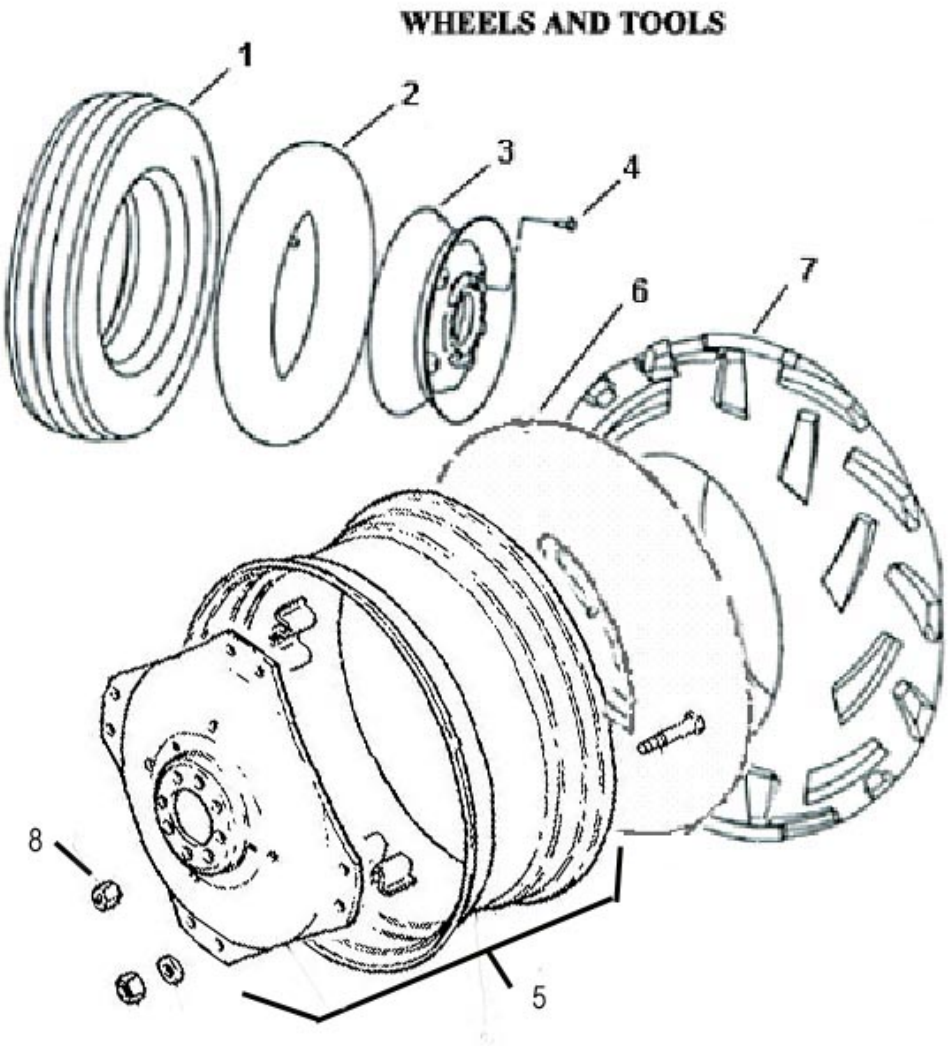


HYDRAULIC PUMP MARK III


Sl No	Part No.	Description	Qty
NI	0719793M91	Hydraulic Pump - MARK III	1
1	1868538M04	Coupling	1
2	1871659M01	Special Nut	2
3	1871659M01	Special Nut	2
4	1665500M01	Body Front Section	1
4A	1665499M92	Assy. Body Front Section	1
5	0195567M01	Plug Allen Cap	2
6	0377494X01	`O' Ring	4
7	0831528M01	O' Ring	4
8A	0716180M01	Bush Bearing	1
8B	0716180M01	Bush Bearing	1
9	1664589M01	Washer	2
10	0180924M02	Block Hydraulic Pump Front Cam	1
11	1860038M01	Piston	2
12	0897493M01	Piston Ring	4
13	0180933M01	Follower Cam	1
14	0180925M02	Block Hydraulic Pump Rear Cam	1
15A	0716219M91	Assy - Cam Shaft	1
15	0716220M01	Cam Shaft	1

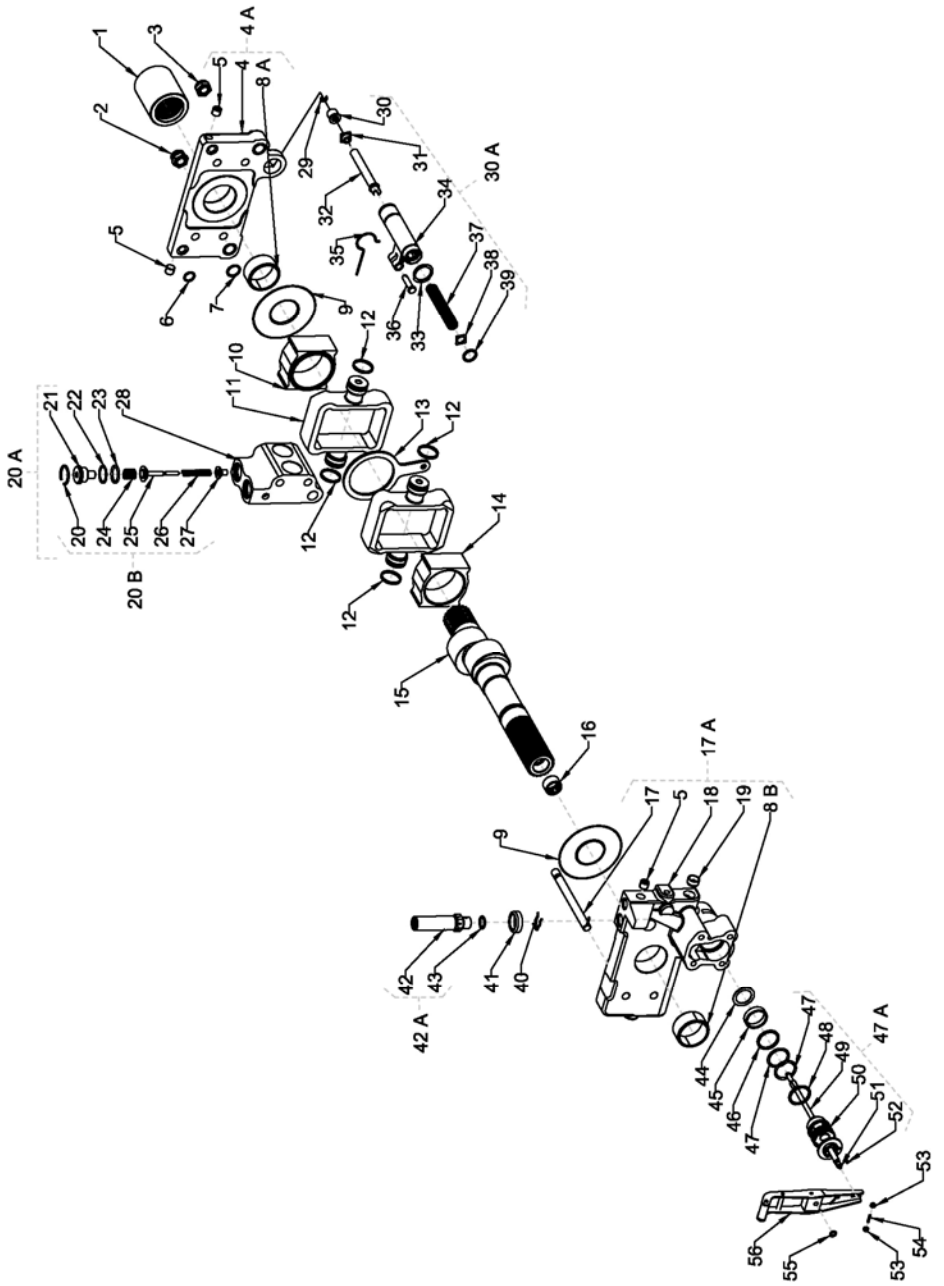


Sl No	Part No.	Description	Qty
16	1000251M01	Bearing	1
17A	1696259M92	Body Assy.- Rear Section	1
17	0377528X01	Stud	4
18	1696260M01	Body Rear Section	1
19	1868431M03	Plug Cap	2
20	1868743M01	Snap Ring	4
21	1868741M01	Plug - Valve Chamber	4
22	1868742M01	`O' Ring	4
23	1870849M01	Washer Back-Up	4
24	0180928M01	Spring	4
25	0180930M02	Valve Outlet	4
26	0180927M02	Spring Pump Inlet Valve	4
27	1660116M01	Valve Inlet	4
28	1868435M03	Valve Chamber	2
29	3000261X01	Ring Retaining	1
30A	1681790M91	Assy Oscillator Cont Valve	1
30	1681786M01	Collar Oscillator Drive	1
31	1862576M02	Guide Oscillator Drive	1
32	1686740M01	Balancer Tube	1
33	0195946M01	3/8" Shaft Retaining Ring	2
34	1869826M93	Oscillator	1

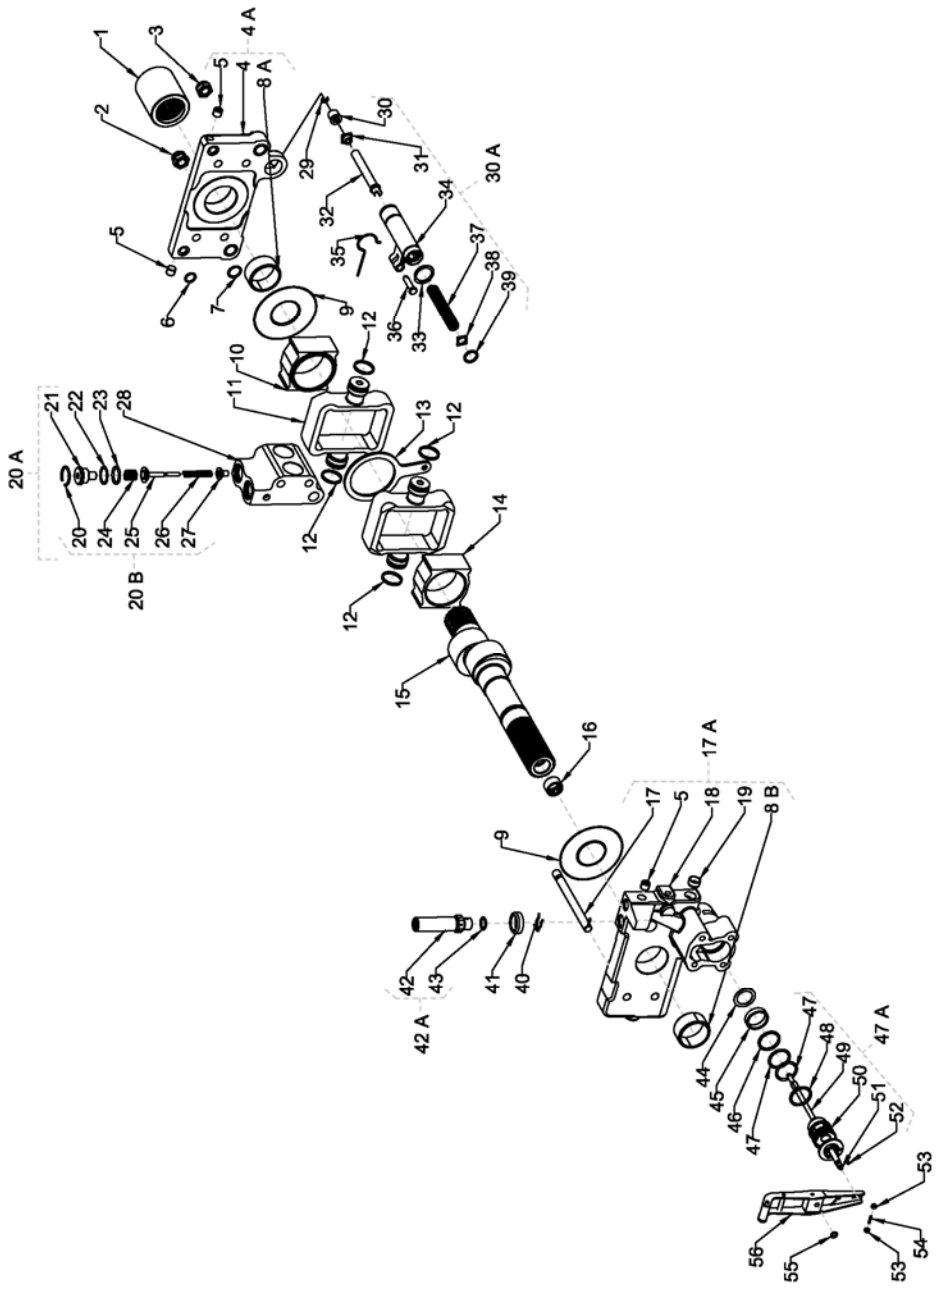

35	1671699M01	Retainer Oscillator Pin	1
36	0831130M01	Pin	1
37	0180940M01	Spring Control Valve	1
38	1869830M02	Disc Oscillator Drive Retainer	1
39	1442622X01	Circlip	1
40			
41	3598178M02	Washer Cap	1
42	0884747M93	Assy. Safety Valve	1
43	0831452M01	'O' Ring	1
44	1868485M01	Washer Special	1
44	0359290X01	O Ring	1
45	1868486M01	Spacer Valve Sleeve	1
46	0377543X01	Washer Backup	1
47A	3611085M91	Valve Assy.	1
47	0377502X01	`O' Ring	2
48	0377497X01	Washer	1
49	1681783M91	Rod Oscillator Drive	1
50	1870764M92	Spool & Valve	1
51	3599775M01	Rod	1
52	0377492X01	Pin Spirol	1

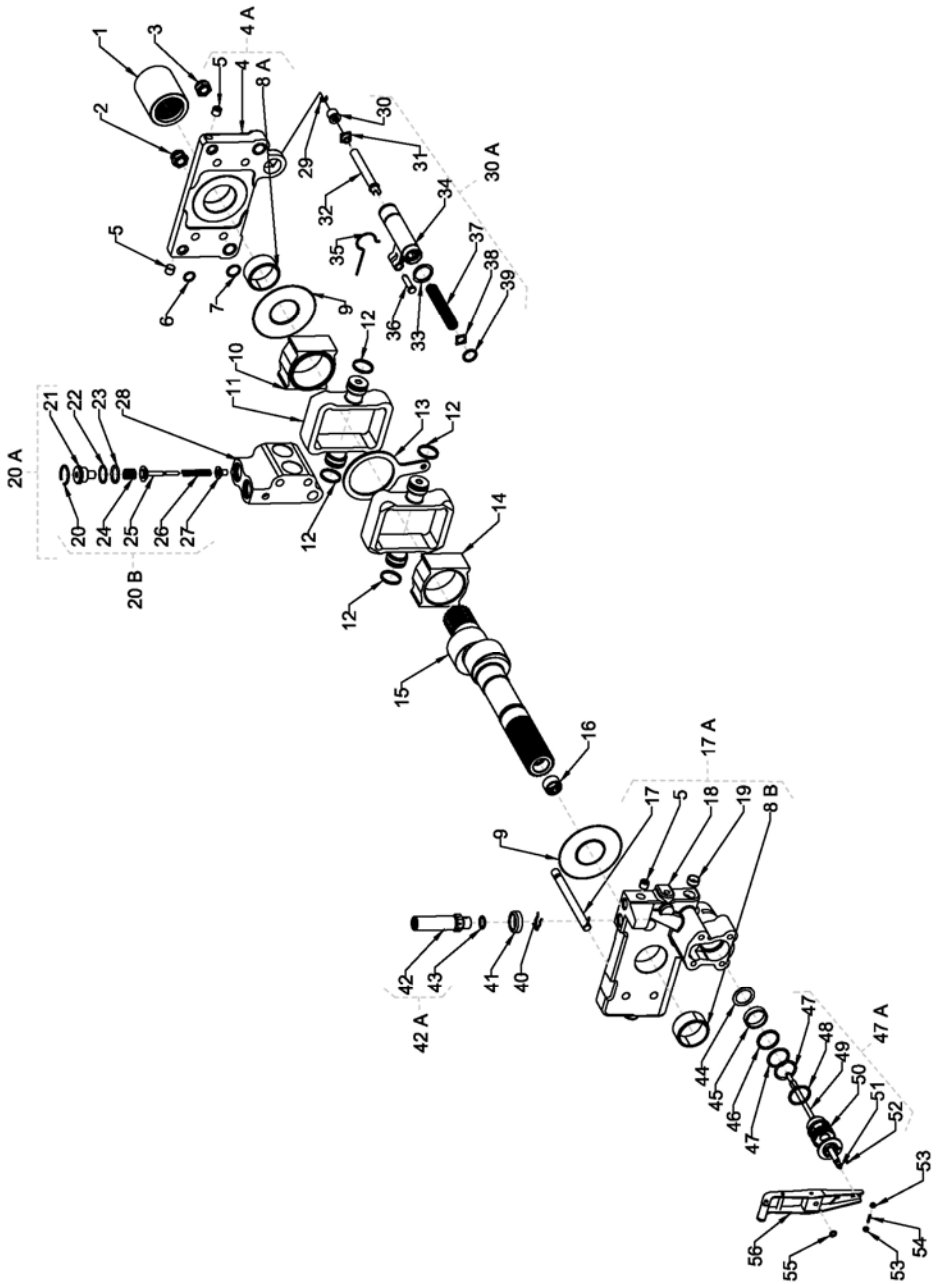


Sl No	Part No.	Description	Qty
53	0897599M01	Roller Valve Lever	2
54	0897504M01	Pin	1
55	0377493X01	Self Locking Ring	1

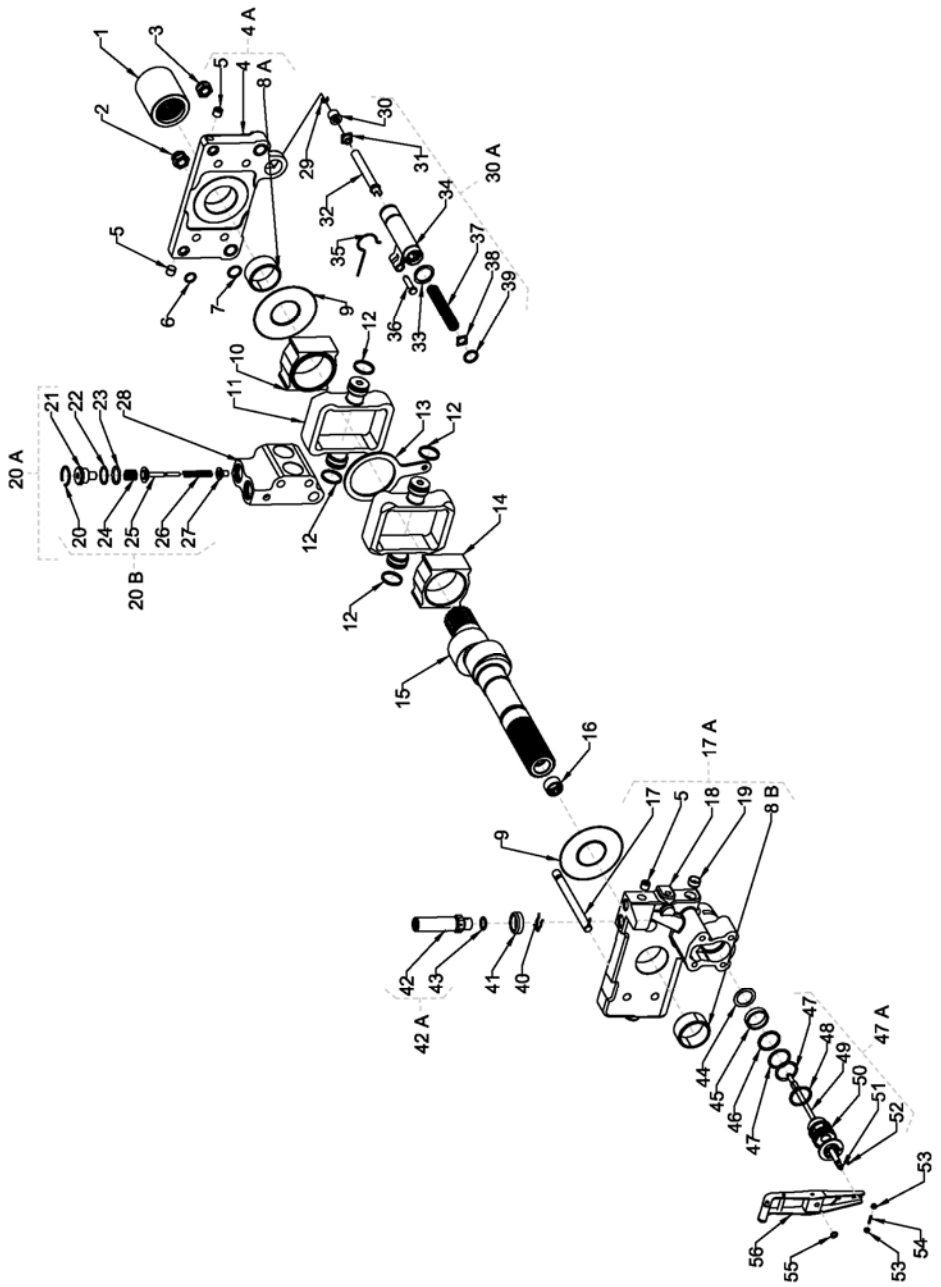


HYDRAULIC PUMP MARK III

Sl No	Part No.	Description	Qty
1A	0358334X01	Screw	2
1B	0355810X01	Screw	2
2	0376719X01	Spring Washer	4
4	3599747M91	Cover Assy	1
4A	3599748M91	Cover	1
4B	3599723M01	Pin	1
5	1868459M01	Bush Actuating Rod	1
6	1442621X01	`O' Ring	1
7	0377499X01	Washer Special	1
8	0358936X01	Snap Ring	1
9	1868456M01	Gasket	1
10	1870811M01	Valve Non Return	1
11	1870810M01	Sealing Ring	1
12	0719062M01	Housing Intake 245	1
14	0363645X01	Hex Nut	1
15	1870089M01	Clip Retaining	1
16	1869529M02	Gasket	1
17	1868466M01	Seal Non-Returnable Valve	1
18	1868460M01	Retainer Seal Non-Return Valve	1
19	1868465M01	Spring Non Return Valve	1

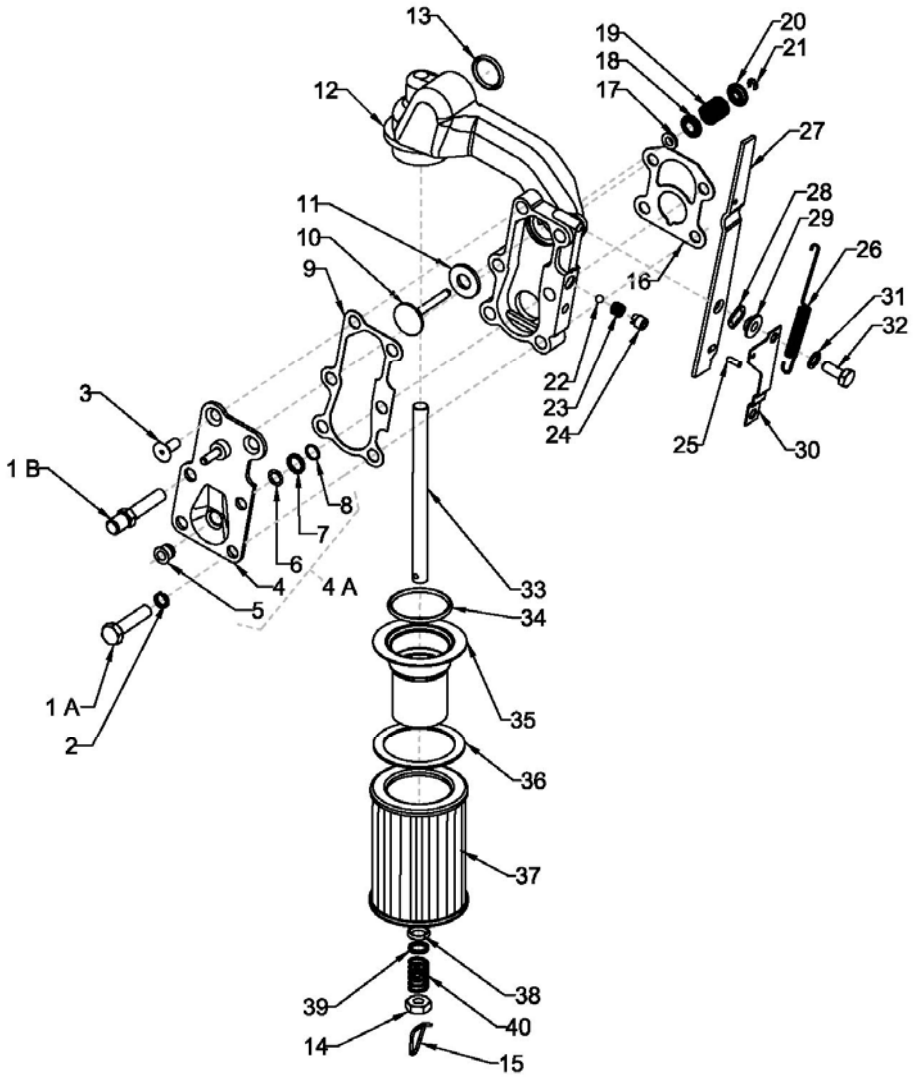


Sl No	Part No.	Description	Qty
20	1868464M01	Cap Spring	1
21	0377501X01	Circlip Non-Return Valve	1
22	0361023X01	3/16" Steel Ball	1
23	1868452M01	Spring Bias Response	1
24	1868451M02	Bush	1
25	0377489X01	Pin Spirol	1
26	1868454M02	Spring	1
27	1868453M02	Lever Response	1
28	0377500X01	Washer Wave	1
29	1868444M01	Bush Shoulder	1
31	0016229X00	Washer	2
32	0362352X01	Screw Hex	2
33	0377531X01	Stud Strainer Retaining	1
34	0195876M01	`O' Ring	1
35	1671633M01	Suction Tube	1
36	1868433M01	Gasket Strainer Assembly	1
37	0522231M04	Strainer	1
38	1007240M01	`O' Ring	1
39	0377499X01	Washer Special	1
40	1868469M01	Spring Strainer Retainer	1

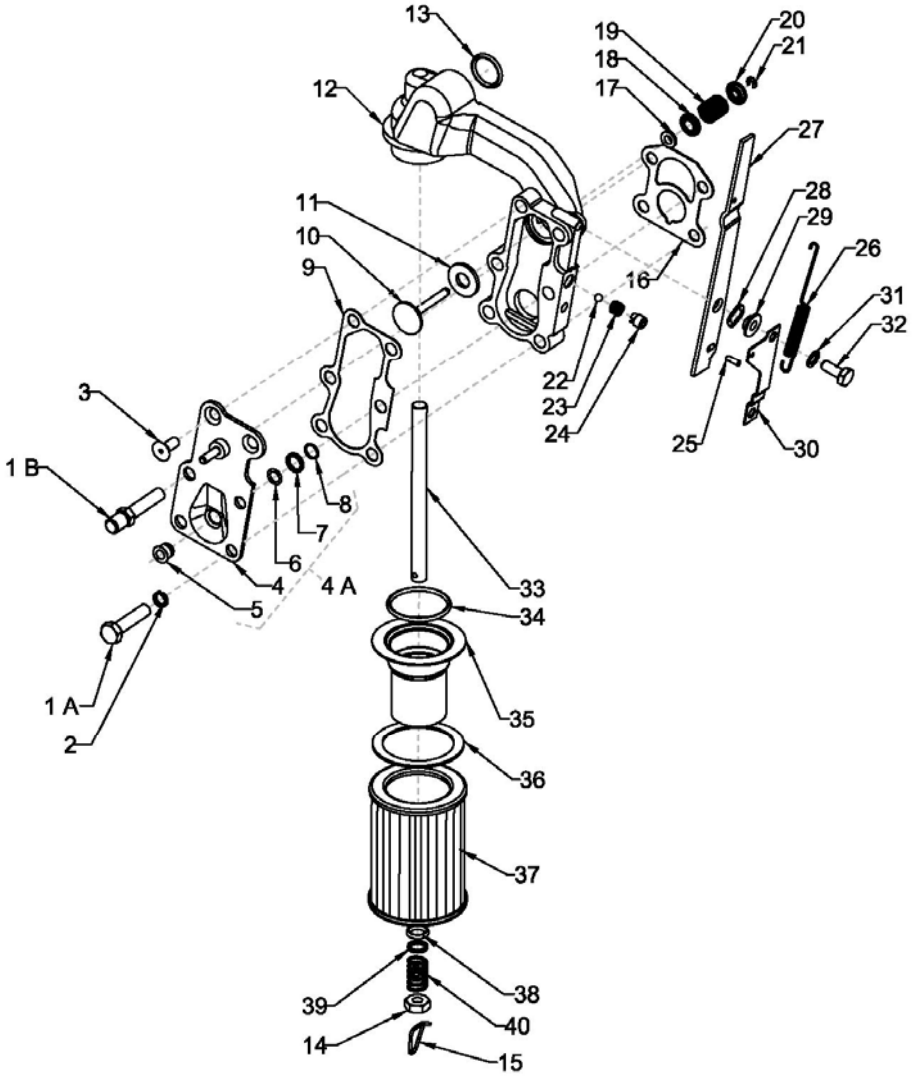


HYDRAULIC LIFT COVER

Sl No	Part No.	Description	Qty
1	3761904M01	Hydraulic Lift Cover	1
2	0826238M01	Sealing Washer	1
3	0826237M01	Plug Top Cover	1
4	0825031M02	Plug	1
5	0182099M91	Assy. Breather	2
6	0825031M02	Plug	2
7	0376768X01	Bolt Hex	2
8	0376805X01	Bolt	2
9	0377143X01	Bolt Hex	3
10	0377144X01	Bolt Hex	2
11	0377145X01	Bolt Hex	5
12	0180908M01	Cap - Hlc	1
13	0715073M01	Plug	1
14	0353700X01	Hex. Screw	2
15	0353432X01	Lock Washer (Common)	2
16	0195561M01	O Ring	3
17	0195874M01	Washer Backup	2

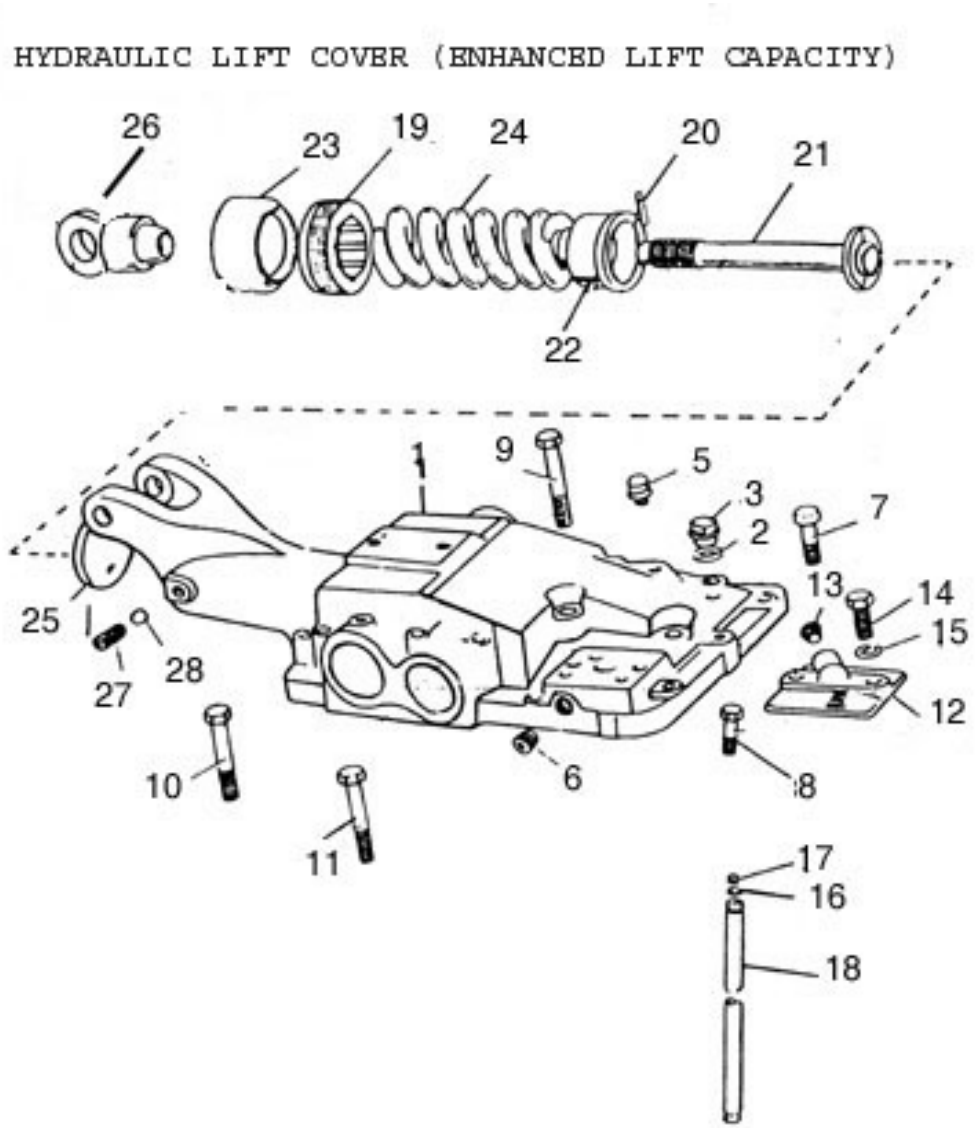


18	0898229M01	Stand Pipe	1
19	0180979M02	Nut Control Spring - New	1
Sl No	Part No.	Description	Qty
20	0195573M01	Pin Groove	1
21	0886348M02	Plunger Control Spring - 245	1
22	0886351M01	Seat Control Spring 245	1
23	0887654M02	Boot Rubber New	1
24	0182582M01	Spring - Hydraulic Control	1
25	0180981M01	Disc Overload Stop	1
26	1863389M01	Head Spring Control	1
27	0355286X01	Set Screw	1
28	0195593M01	Ball - Lead	1

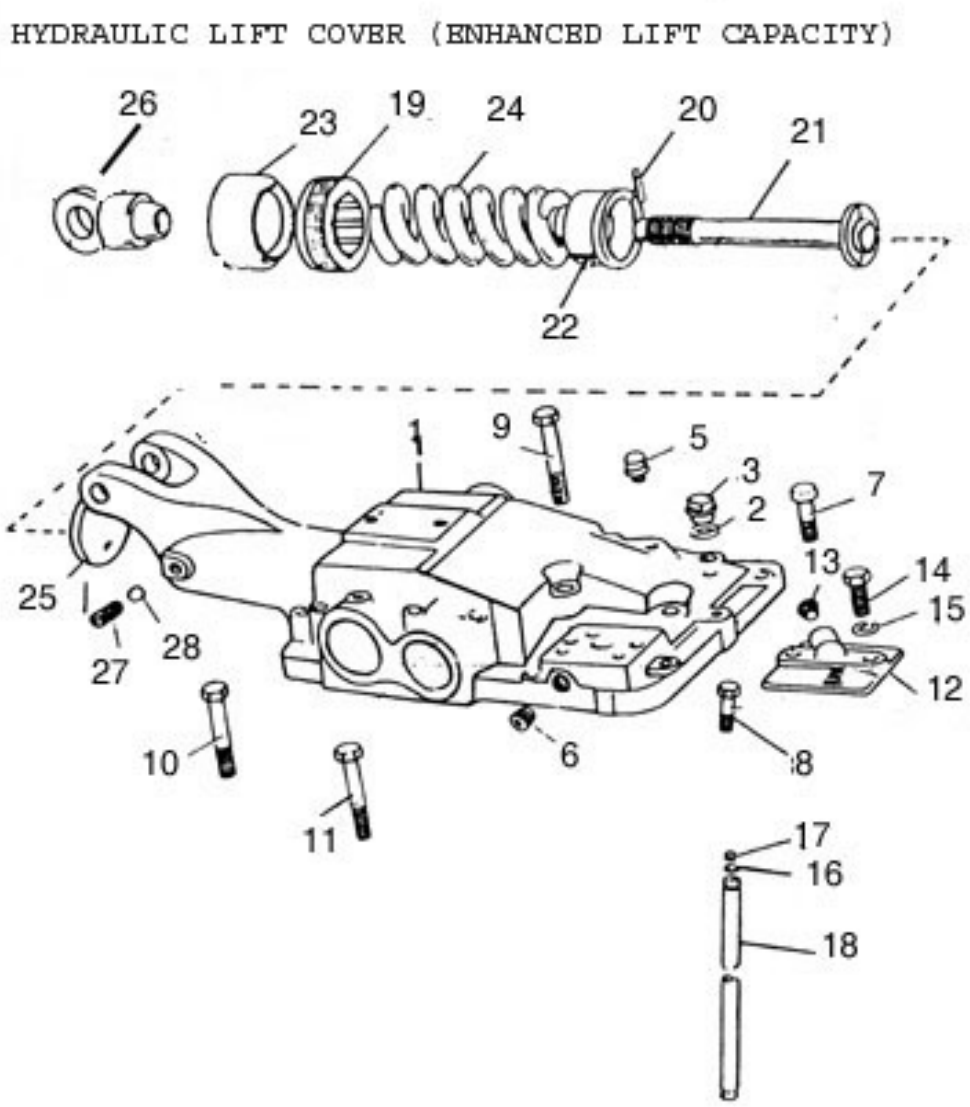


QUADRANT ASSEMBLY


Sl No	Part No.	Description	Qty
1	1870219M93	Assy. Shaft-Position Control	1
2	1870243M92	Assy. Shaft-Draft Control	1
3	1870241M01	Shaft (Order 1870 243 M92)	1
4	0377747X01	Washer	1
5	0898194M01	Pin Roll	1
6	0354039X01	Pin-Cotter	1
7	0195561M01	‘O’ Ring	3
8	0898196M02	Roller	1
9	1870225M01	Bush	1
10	1870240M01	Support Quadrant	1
11	0358945X01	Ring Snap	1
12	1870244M01	Pin Draft Shaft	1
13	0364281X01	‘O’ Ring	1
14	0762026M01	‘O’ Ring	1
15	0898189M02	Roller Quadrant	1
16	1869074M01	Pin-Dowel	1
17	1869075M01	Disc Spring	1
18	1674620M01	Assy. Quadrant Position	1
19	0898198M91	Stop	1

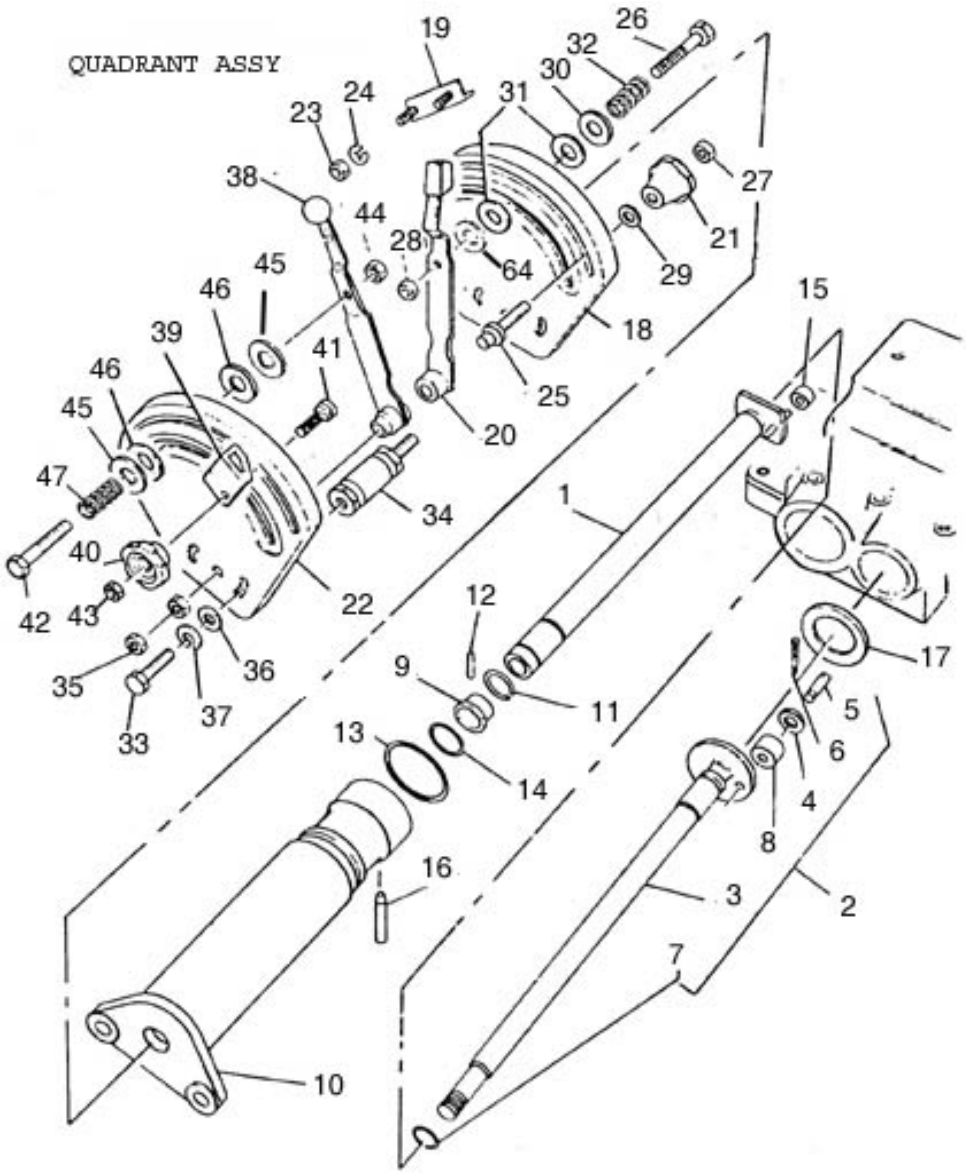

Sl No	Part No.	Description	Qty
20	1870341M92	Assy. Lever Position	1
21	1860403M01	Knob Adjustment	1
22	1870338M02	Quadrant Draft	1
23	0355564X01	Nut	2
24	0353441X01	Washer	2
25	0898201M01	Stop	1
26	0377607X01	Screw	1
27	0353918X01	Nut	4
28	0353919X01	Nut	1
29	0353754X01	Washer flat	1
30	0377581X01	Washer	4
31	0181041M01	Washer	4
32	1872240M01	Spring Lever	1
33	0353536X01	Bolt	2
34	1870294M01	Spacer	2
35	0353430X01	Nut	2
36	0353756X01	Washer-Flat	2
37	0353434X01	Washer-Lock	2
38	1870340M92	Assy. Lever Draft	1
39	0884387M01	Slide	1
40	1860402M01	Knob Adjustment	1

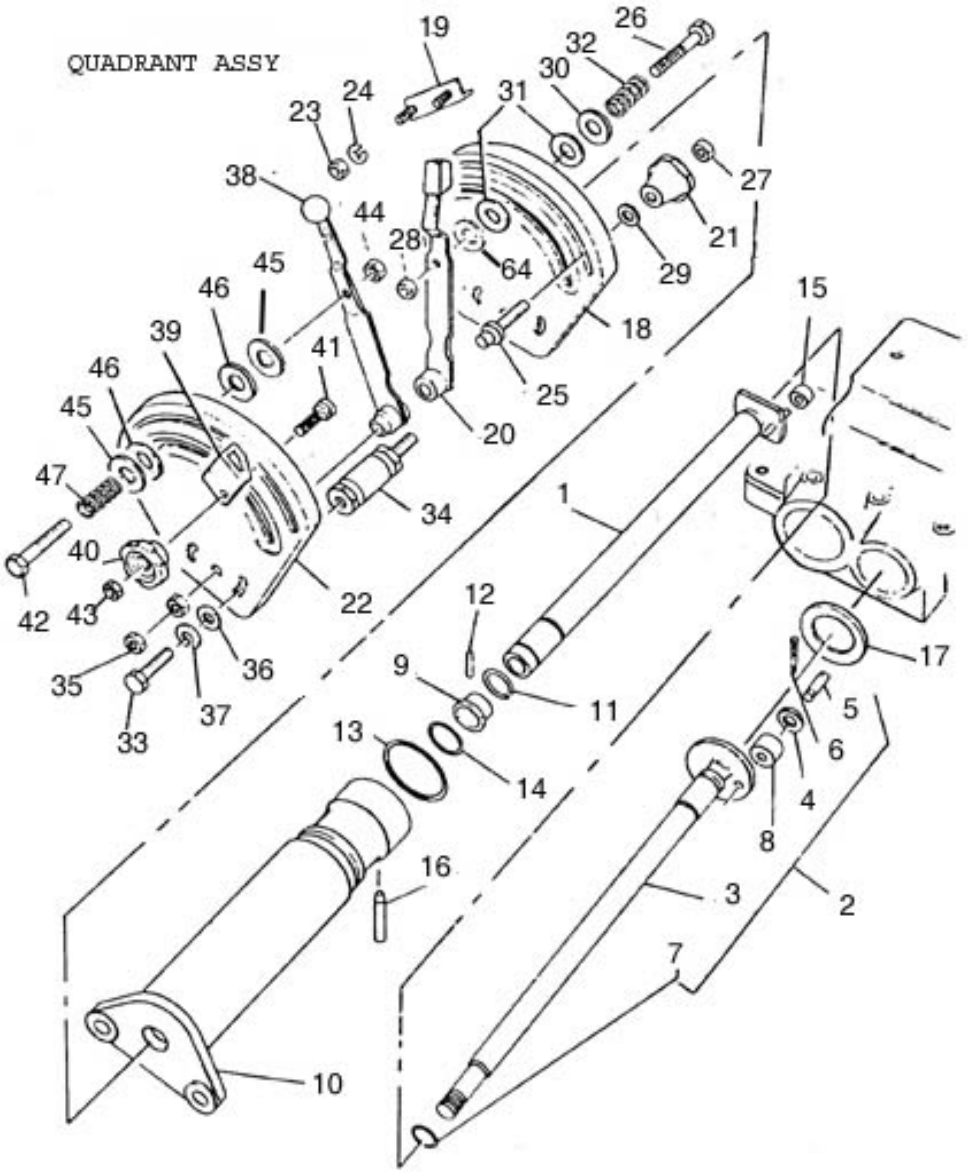


Sl No	Part No.	Description	Qty
41	0898183M01	Retainer	1
42	0377607X01	Screw	1
43	0353918X01	Nut	1
44	0353919X01	Nut	1
45	0377581X01	Washer	2
46	0181041M01	Washer	2
47	1872240M01	Spring Lever	1

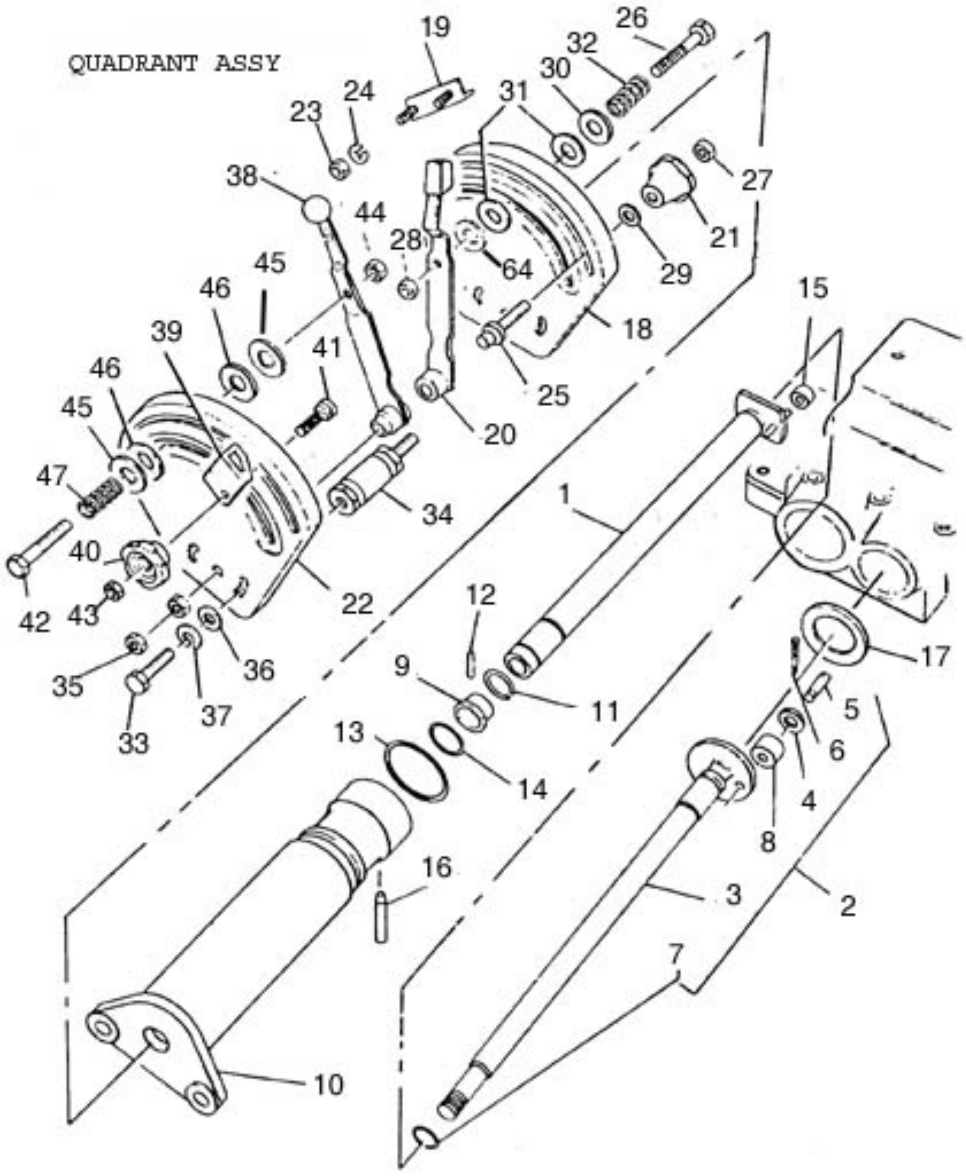


HYDRAULIC LIFT SHAFT AND LIFT ARMS


Sl No	Part No.	Description	Qty
1	0899149M03	Lift Shaft	1
2	3610357M02	Arm Ram - Hi Lift	1
3	3610356M02	Rod- Connecting	1
4	0420608M01	Coiled Spring Pin	1
5	0359136X01	O Ring	2
6	1870934M01	Bush	2
7	0897580M01	Washer - HLC	2
8	1680040M91	Arm - Hydraulic Lift	2
9	0361526X01	Hex. Screw -	2
10	0897581M03	Tab Washer	2
11	3599859M01	Cylinder Hydraulic Lift	1
12	1667580M01	Stud	2
13	1693939M02	Stud With End Recess	2
14	0377765X01	Hex. Nut-Spl.	4
15	3761473M01	O' Ring	1
16	2528508K93	Piston	1
17	3761476M01	Seal	1
18	0180997M01	Shaft Link	1
19	0898307M01	Collar(Order Sl.No.018)	1

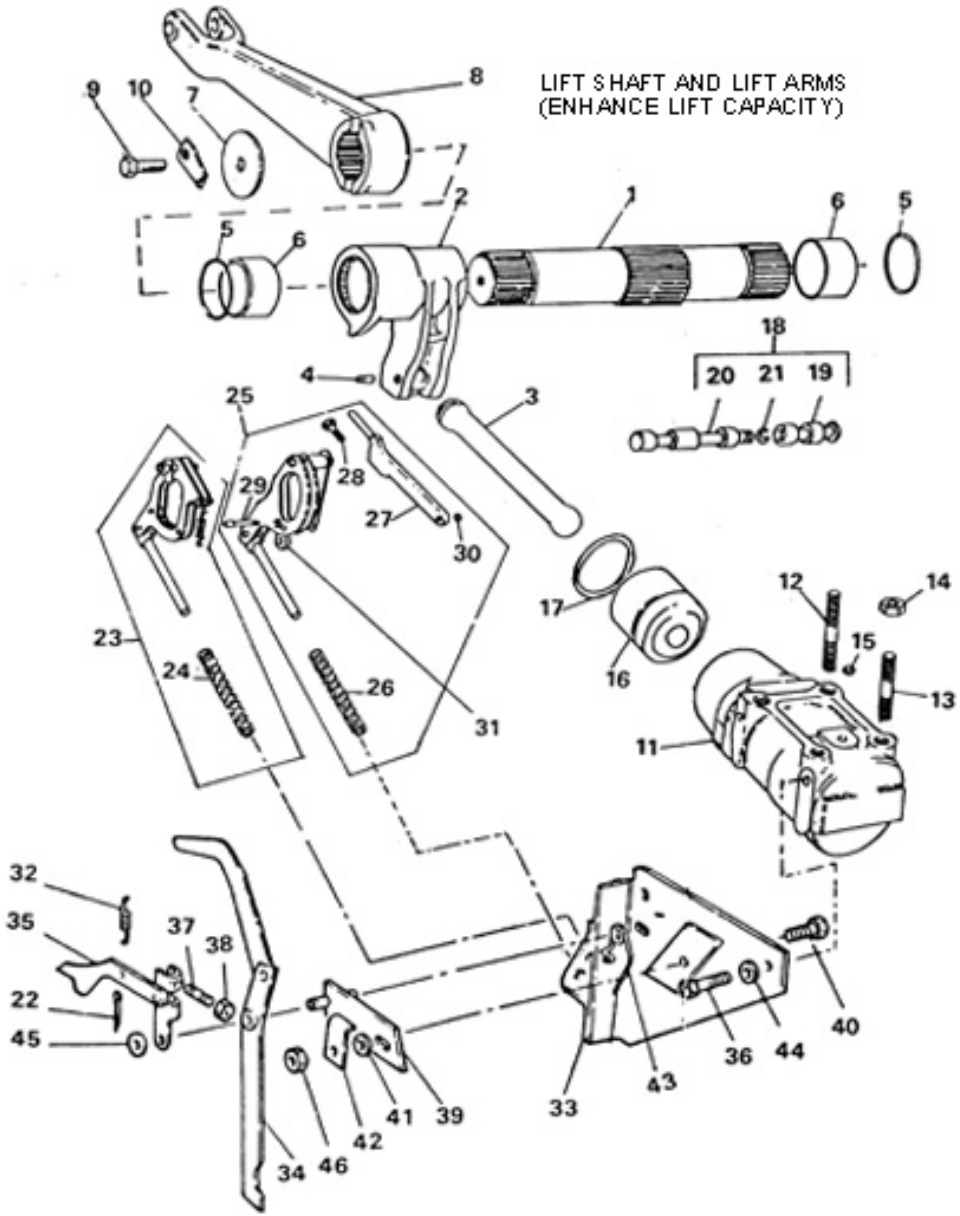

Sl No	Part No.	Description	Qty
20	0898305M01	Shaft(Order Sl.No.018)	1
21	0898306M01	Ring Snap(Order Sl.No.018)	1
22	0354039X01	Split Pin (0610042)	1
23	1661918M91	Link Position Control	1
24	1660323M01	Spring	1
25	1660324M91	Lever	1
26	1660323M01	Spring	1
27	0898124M01	Rod Draft	1
28	0898128M01	Screw	1
29	0180990M01	Pin	1
30	0195575M01	Ring Snap	1
31	0898125M01	Roller Cam	1
32	0898137M01	Spring	1
33	1870190M92	Assy. Bracket	1
34	1869093M93	Assy. Lever Cam	1
35	1661547M92	Cam Assy.P.C	1
36	0362429X01	Bolt Hex	2
37	0898153M02	Set Screw	1
38	0354120X01	Nut	1
39	1869104M91	Assy. Adjuster	1

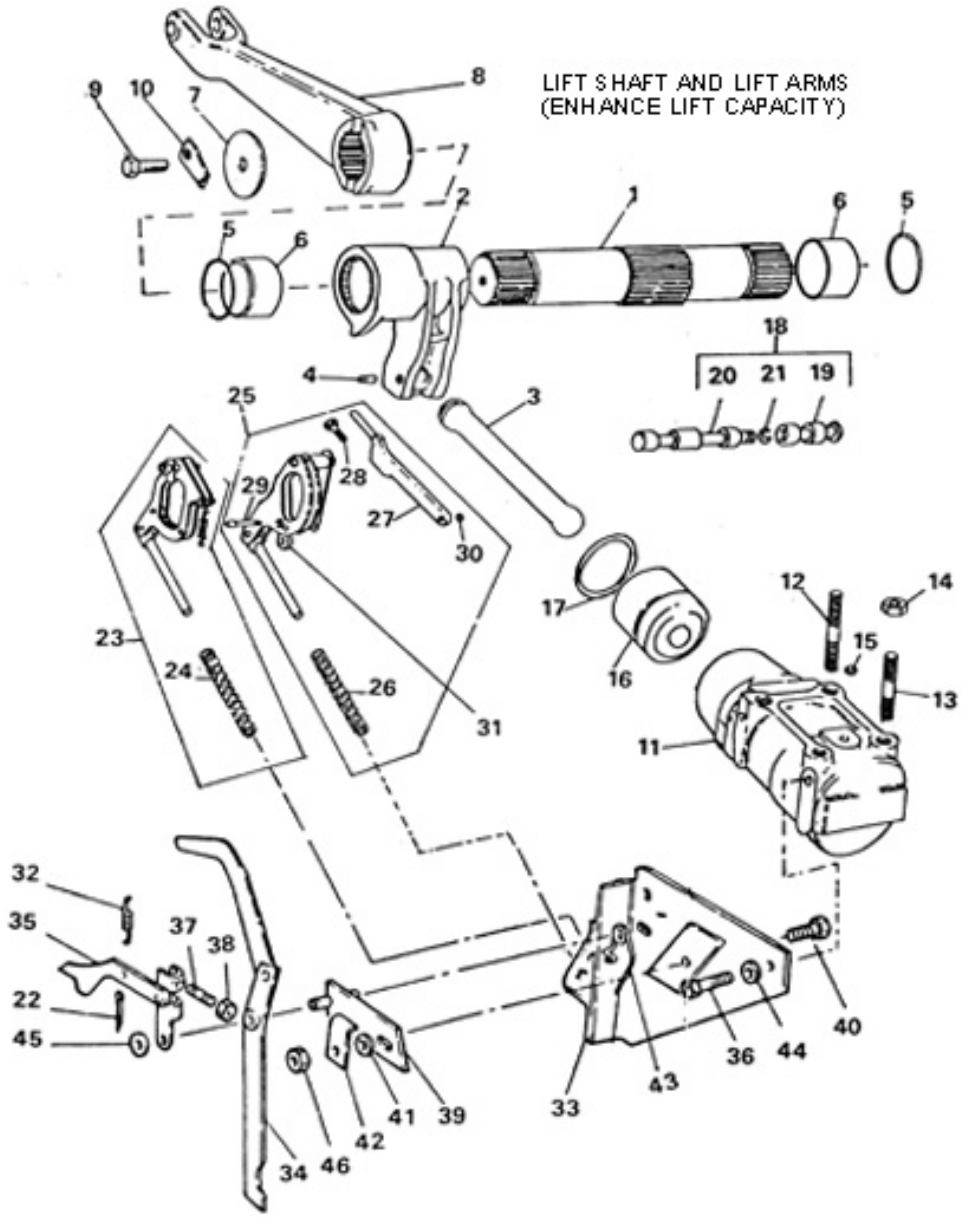


Sl No	Part No.	Description	Qty
40	0361448X01	Bolt	1
41	0376621X01	Washer	1
42	1869107M01	Washer-Tab	1
43	1872044M01	Spring Lever	1
44	022764X01	Washer	1
45	0355616X01	Washer	1
46	0363621X01	Nut	1
NI	2126765K01	Lift Shaft Kit	1

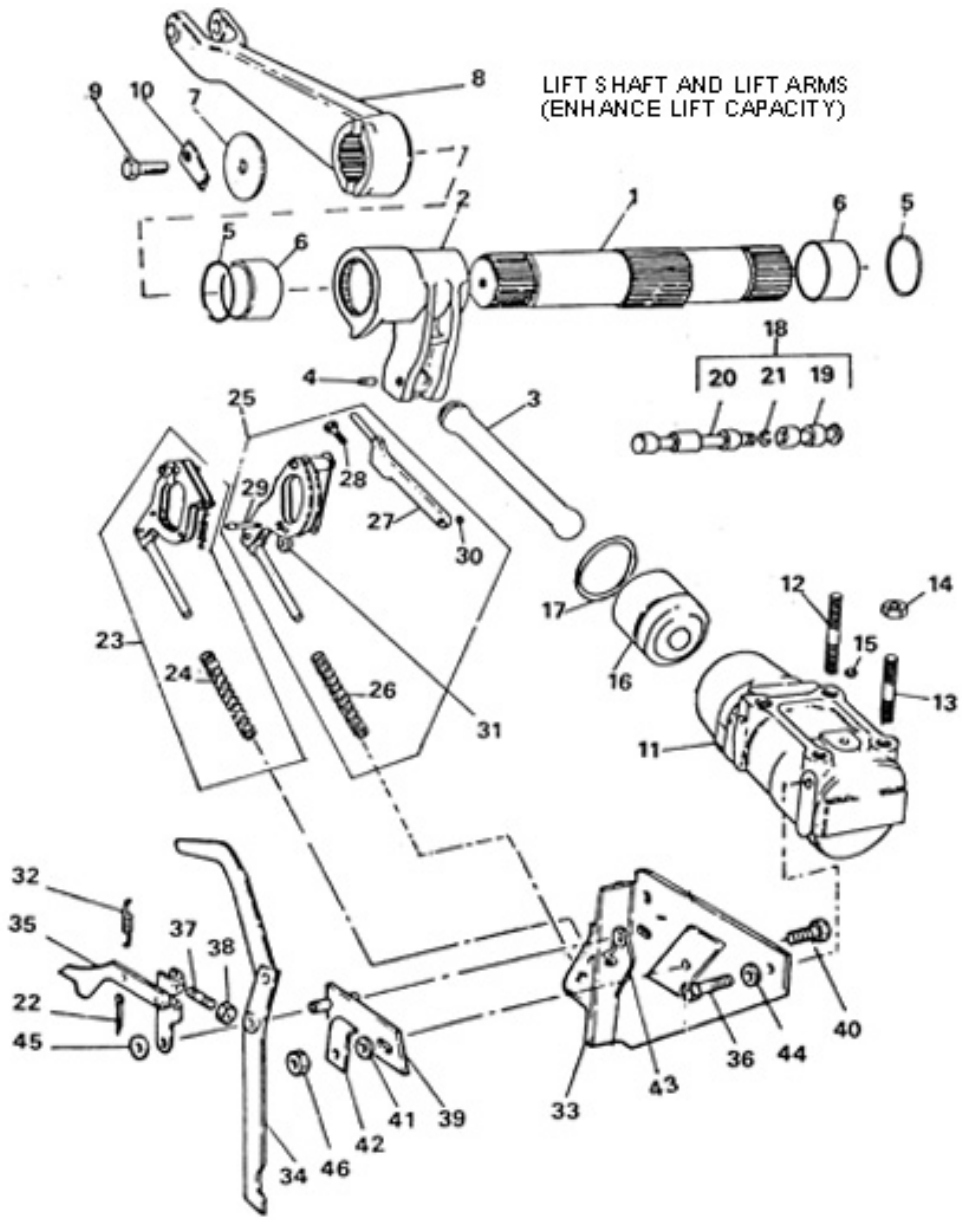


RESPONSE CONTROLS

Sl No	Part No.	Description	Qty
NI	0717901M91	Assy. Response Cover (Item 1-10)	1
1	1871873M01	Cover	1
2	0898207M02	Tube	1
3	1869407M02	Shaft	1
4	0377426X01	Ring	1
5	1001833M01	‘O’ Ring	1
6	1869136M01	Spring	1
7	1869134M02	Cam	1
8	1869408M01	Plate - Lever Adj	1
9	0360588X01	Pin - Spirol	1
10	0360559X01	Pin - Spirol	1
11	0181217M04	Gasket	1
12	1662278M02	Lever - Response	1
13	1668053M01	Plate - Draft Response	1
14	0716888M01	Screw	1
15	0717881M01	Screw Pan Head	4
16	0377748X01	Washer - Fibre	2
17	3760850M91	Indicator - Oil Level	1

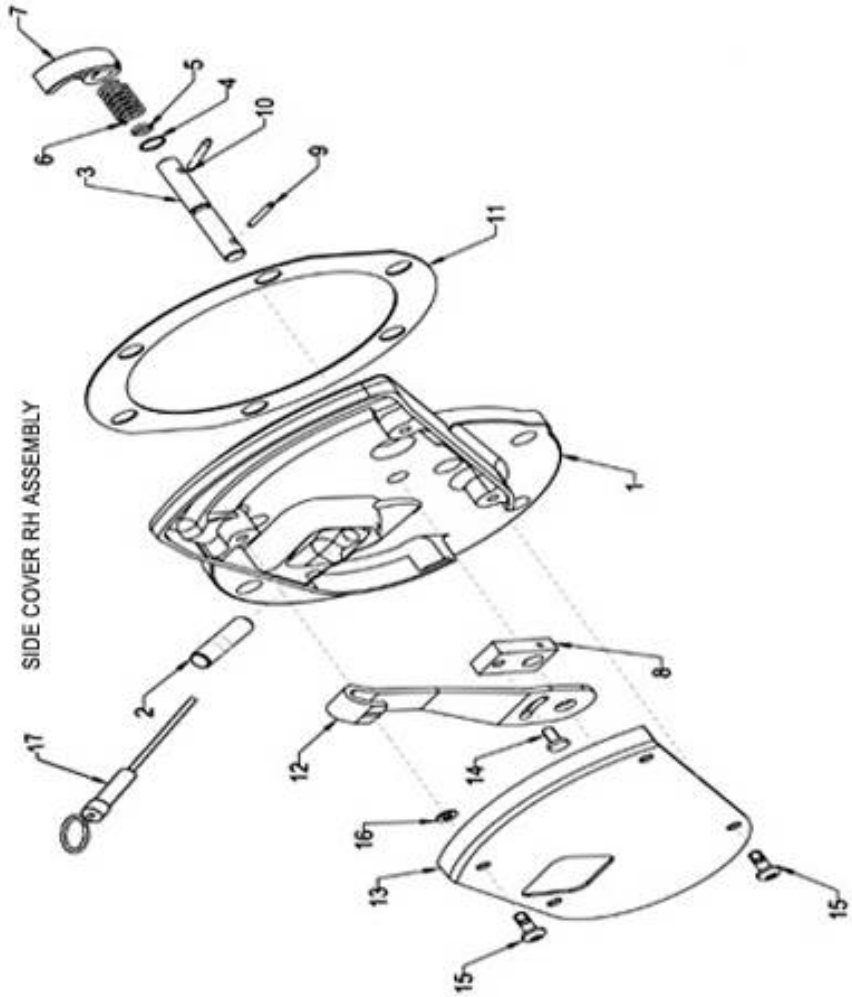


TOP LINK

Sl No	Part No.	Description	Qty
1	4246399M91	Top Link	1
2	183614M2	Spring	1
3	892476M01	Pin hitch (CAT 2)	1
4	0810285M92	Lynch Pin (11mm)	2
8	————————	Pin	1
9	————————	Ring	1
17	892476M01	Pinhitch(CAT2)	1
18	0810285M92	Lynch pin (11mm)	1
19	————————	Pin	1
20	————————	Ring	1
21	1863393M92	Beam Assy.	1
22	0180901M91	Clevis pin	1
23	0893567M01	Pin	1
24	1867294M02	Pin	1
25	354089X01	Pin	2
26	1862846M95	Bracket - Control Beam	1
27	0377824X01	Screw (unc)	2
28	1869272M01	Spacer	4
29	0376722X01	Lock Washer	4

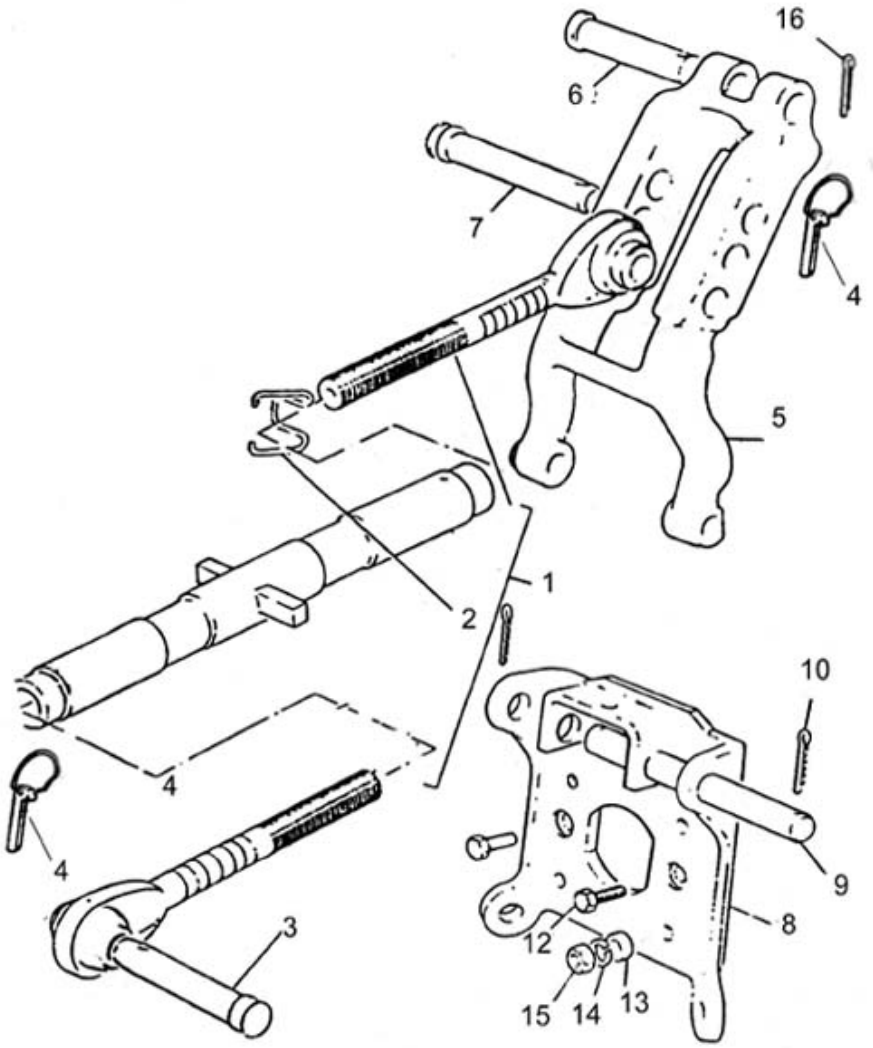


LOWER LINKS

Sl No	Part No.	Description	Qty
1	4246398M91	Lower Link Assembly -	2
2	1925A00101	Assy Check Chain	2
3	4246401M91	Lift Rod Assembly LH	1
4	4246400M91	Lift Rod Assy. RH	1
5	1980A00101	Chain Stabiliser Assy.	2
6	4246399M91	Top Link Assembly - 375ET	1
7	0195415M01	Pin	2
8	0810285M92	Assy Pin & Ring	2
9	1694025M01	Pin-Clevis	2
10	0354068X01	Cotter Pin	2
11	1695314M01	Shaft Lower Link	2
12	0377824X01	Screw	2

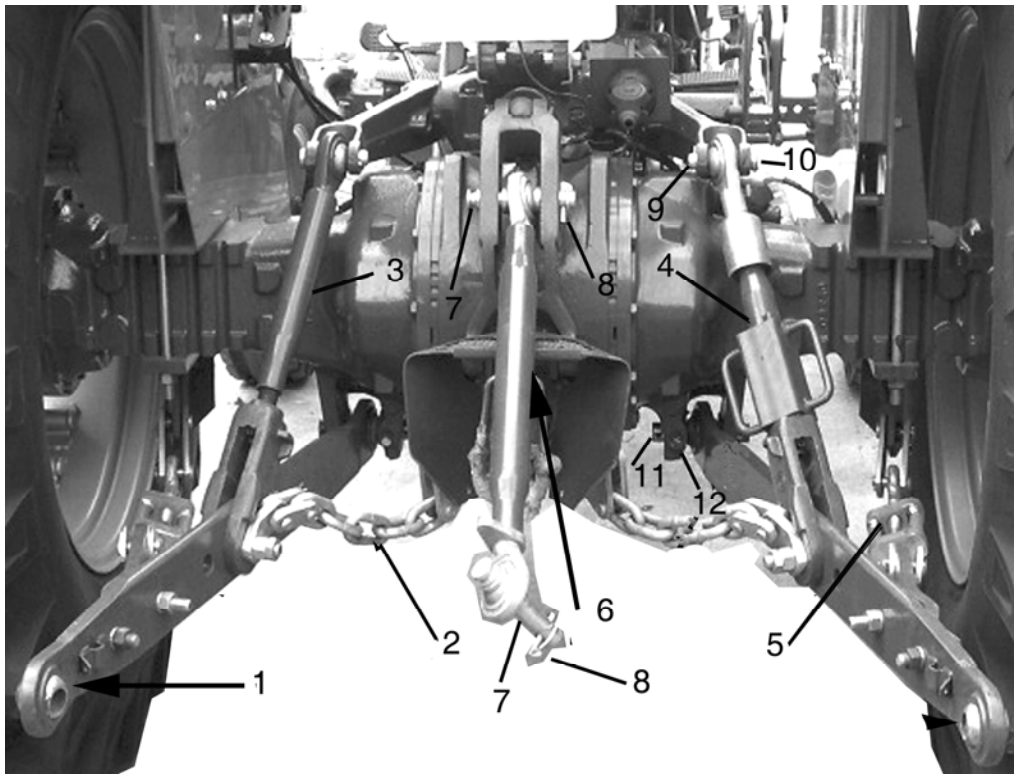


SHEET METAL – GRILL

Sl No	Part No.	Description	Qty
1	1678139M93	Wrapper	1
	1923A0250160	Wrapper (for 4WD)	1
2	1684862M01	Pad	1
3	1683404M01	Seal	2
4	1683413M01	Seal	2
5	4252018M91	Assy. Plate Grille Clip	1
6	353502X01	Screw (unf)	2
7	353441X01	Lock Washer	2
8	4244775M91	Assy. Grille	1
9	4256942M91	Assy. side plate LH	1
	1923A03601	Assy. side plate& Grill LH	1
9	4256941M91	Assy. side plate RH	1
	1923A03701	Assy. side plate& Grill RH	1
10	353689X01	Screw (unc)	4
11	353901X01	Screw (unc)	2
12	0353697X01	Screw (unc)-Bolt	2
13	4255684M91	Assy. Battery tray	1
14	353690X01	Screw (unc)	4

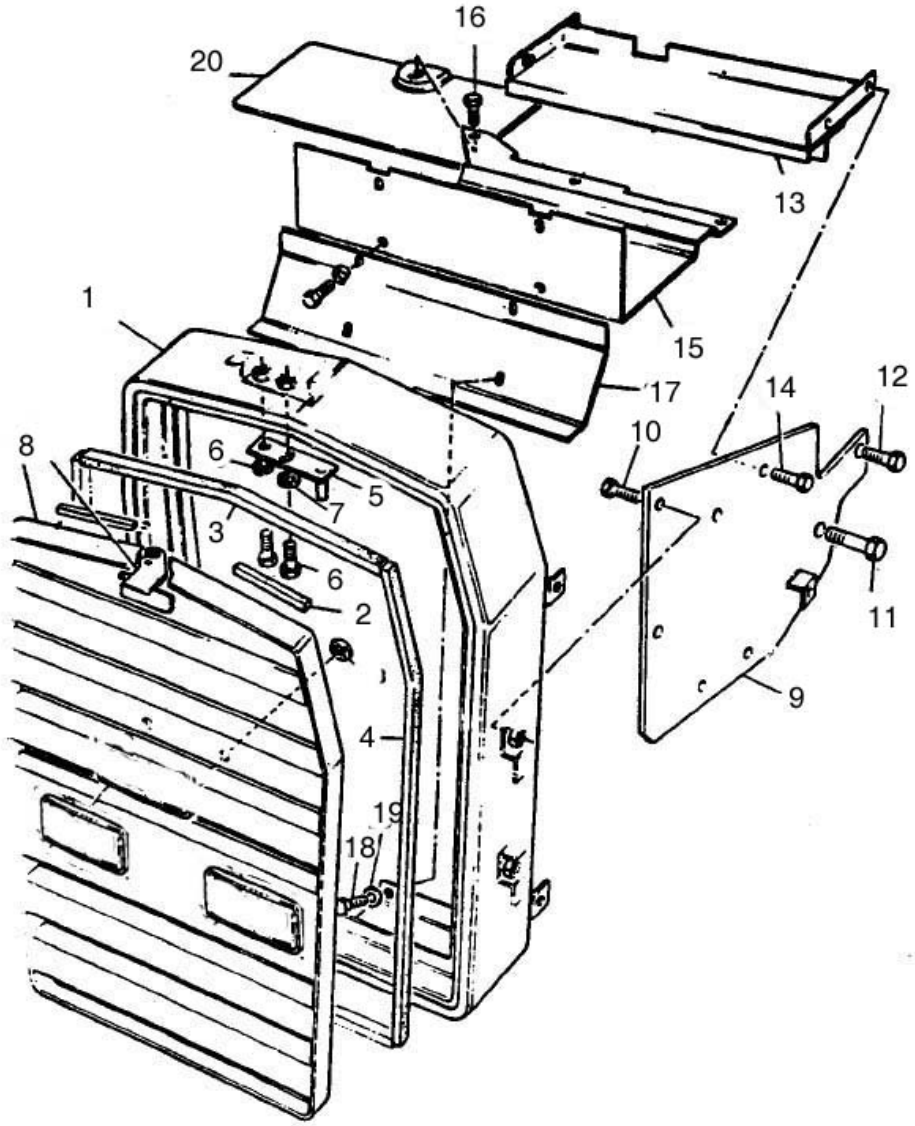


Sl No	Part No.	Description	Qty
15	1671563M92	Bracket	1
16	353664X01	Screw (unc)	3
17	1682554M02	Panel	1
18	353665X01	Screw (unc)	6
19	353754X01	Washer	6
20	1683646M02	Plate	1

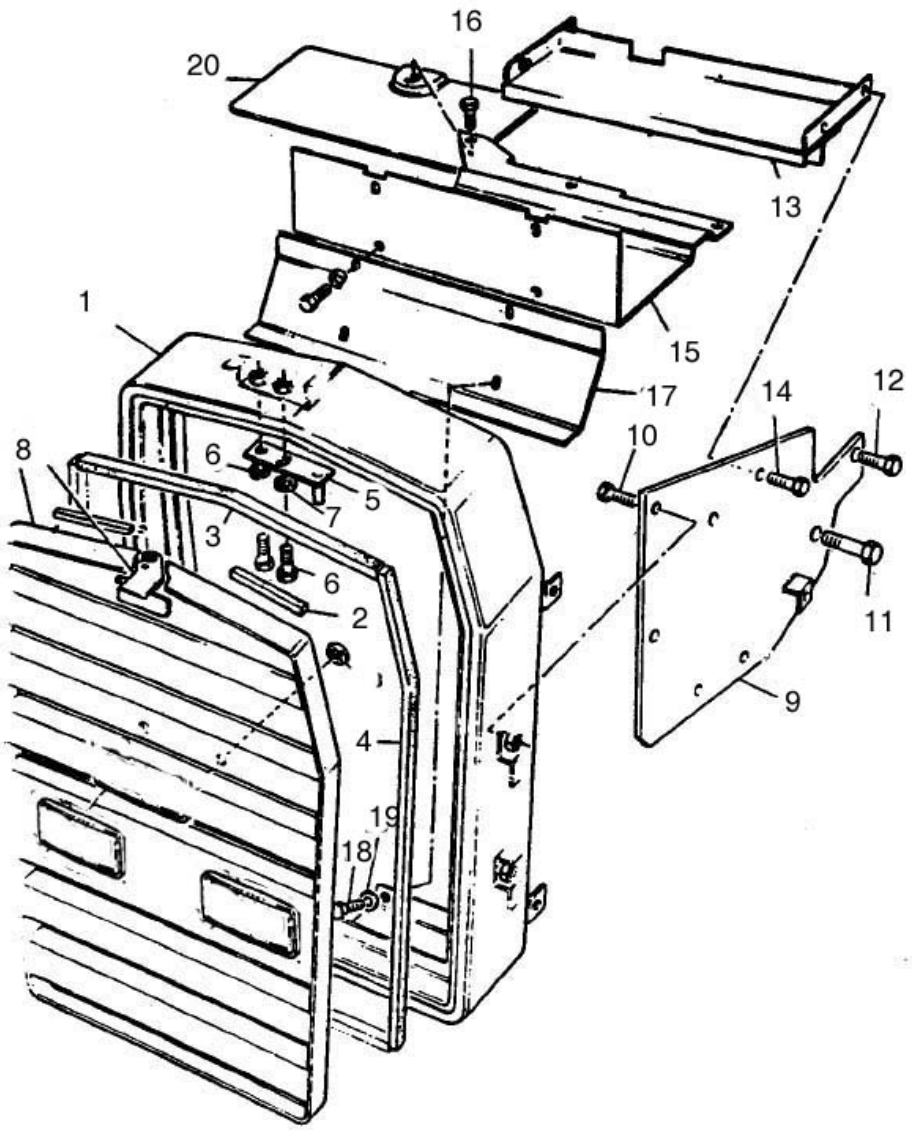


HOOD ASSY.


Sl No	Part No.	Description	Qty
1	4257176M91	Hood & Cap	1
	1923A03101	Hood & Cap (for 4WD)	1
2	4257034M01	Cover - Instrument Panel	1
3	4257035M91	Hood - Support Assy.	1
4	1874520M91	Strap – Assy.	1
5	0339123X01	Screw (unc)	2
6	0390972X01	Washer	2
7	1875595M91	Retaining clip assy.	4
8	353677X01	Screw (unc)	4
9	353755X01	Washer	4
10	1672996M01	Panel	1
11	353676X01	Screw (unc)	4
12	353755X01	Washer	4
13	1669667M96	Panel – LH	
		(Alt to part No. 1669666M94)	1
	1923A03301	Panel – LH –For 4WD	1
13	1669666M95	Panel – RH	
		(Alt to part No. 1669667M95)	1
	1923A03401	Panel – RH –For 4WD	1

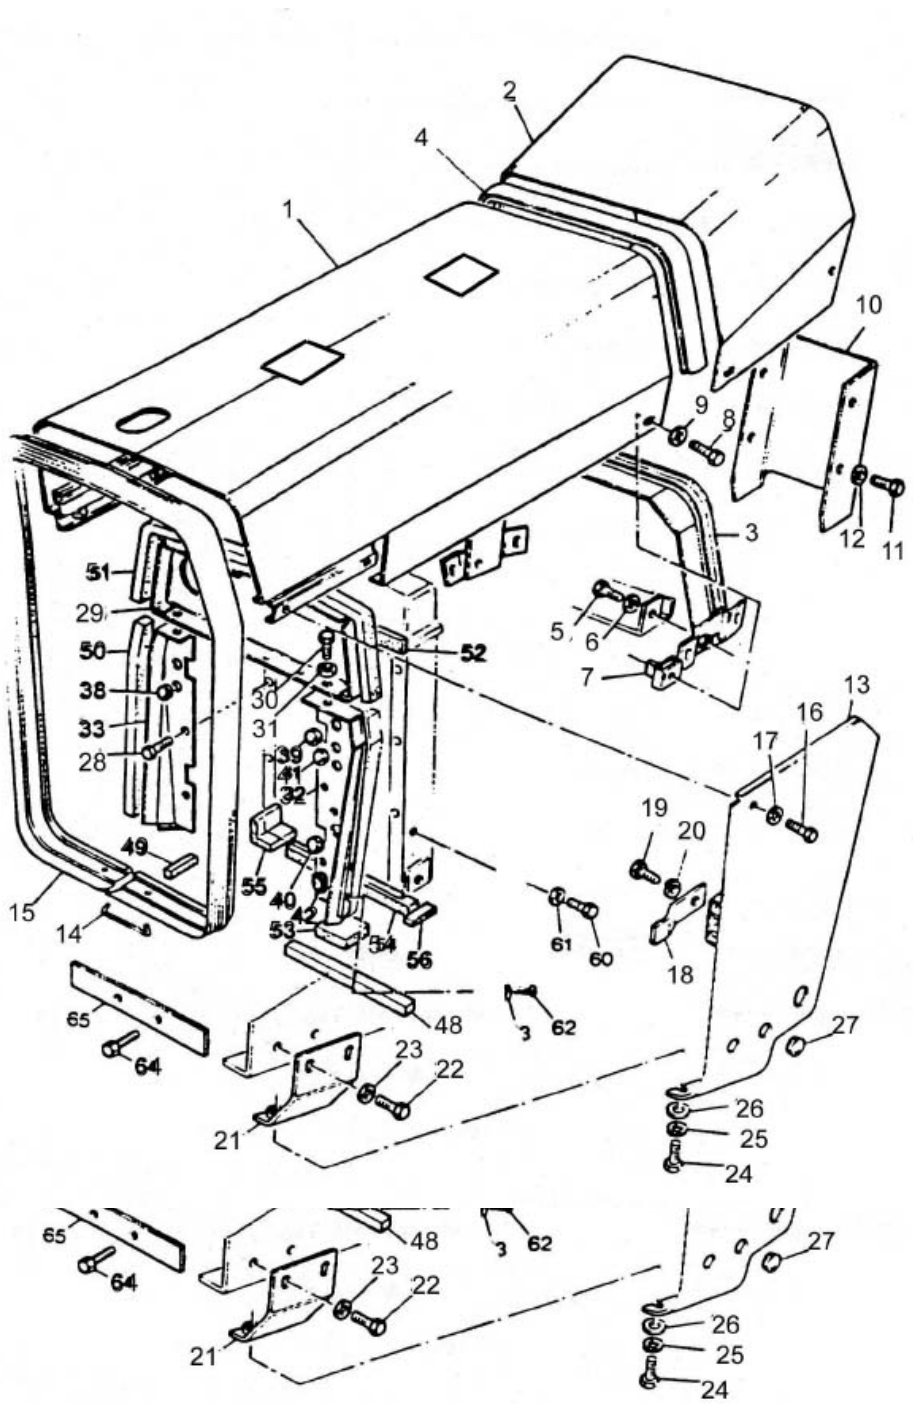

Sl No	Part No.	Description	Qty
14	1876057M01	Assy. Rod Moulding	1
	1923C05301	Assy. Rod Moulding(for 4WD)	1
15	1876153M01	Moulding - Front	1
	1692377M01	Moulding - Front (for 4WD)	1
16	0339123X01	Screw -	4
16	365637X01	Bolt -	4
17	0390972X01	Flat washer	2
18	353666X01	Screw (unc)	2
19	0353754X01	Flat Washer	1
25	1683326M91	Support Assy. – Side Panel	2
26	365018X01	Self tap screws	4
27	353755X01	Washer	4
28	0339123X01	Screw (unc)	2
29	0390972X01	Washer – Flat	2
30	0339374X01	Washer – Lock	2
31	1877335M01	Plug 4	
34	353516X01	Screw unf	5
35	1682554M2	Panel 1	
36	0353677X01	Screw (unc)*	2
37	0390972X01	Washer – Flat	2
*	0353755X01	Washer*	2

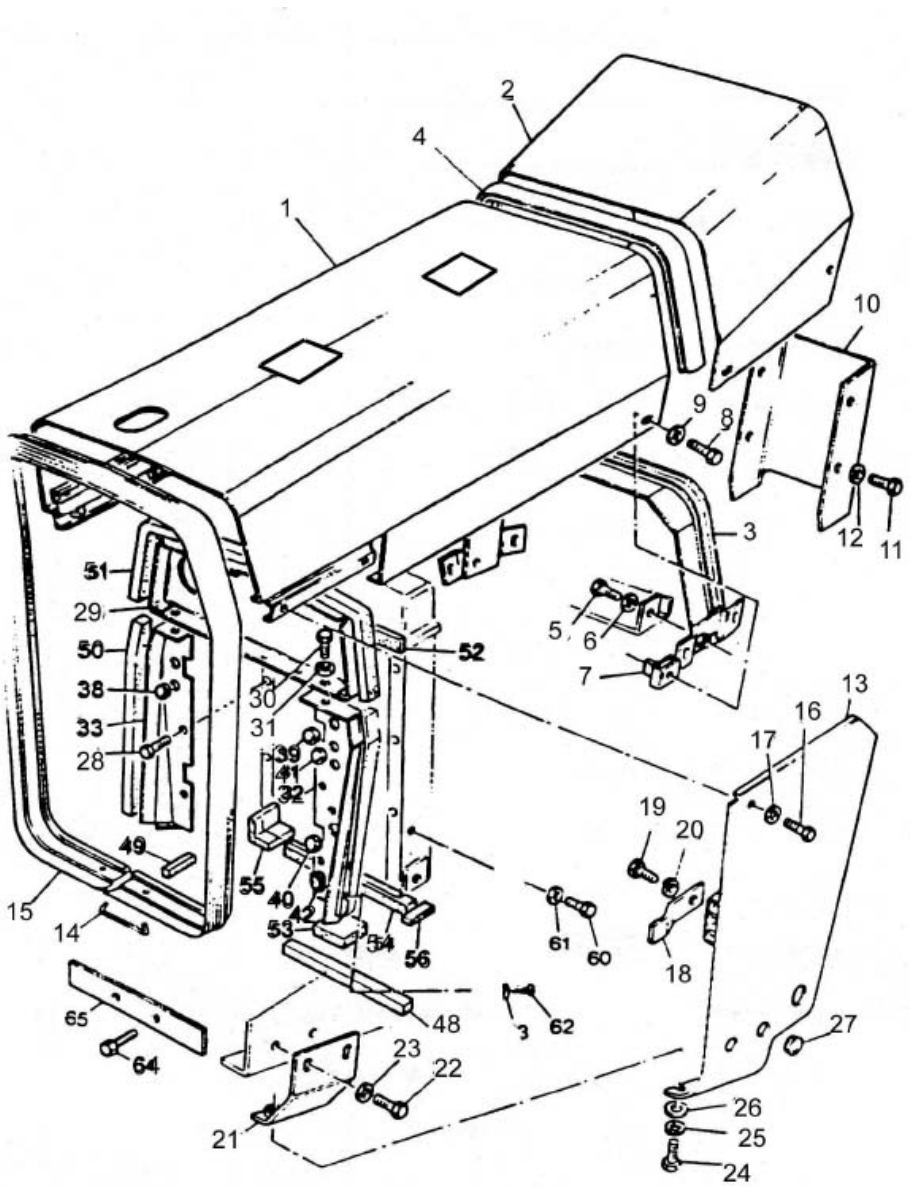


Sl No	Part No.	Description	Qty
39*	1860526M01	Plug	1
40*	885581M01	Plug	1
41*	1860526M01	Plug	1
48	1683416M01	Pad	1
49	1683419M01	Pad	1
50	1683403M01	Pad	2
51	1683404M01	Pad	1
52	1683413M01	Pad	1
53	1683412M01	Pad	2
54	1683405M01	Pad	2
55	1683412M01	Pad	1
56	1683417M01	Pad	1
57*	1664699M5	Retainer	1
58*	1664700M01	Seal	1
59*	1664950M01	Seal	1

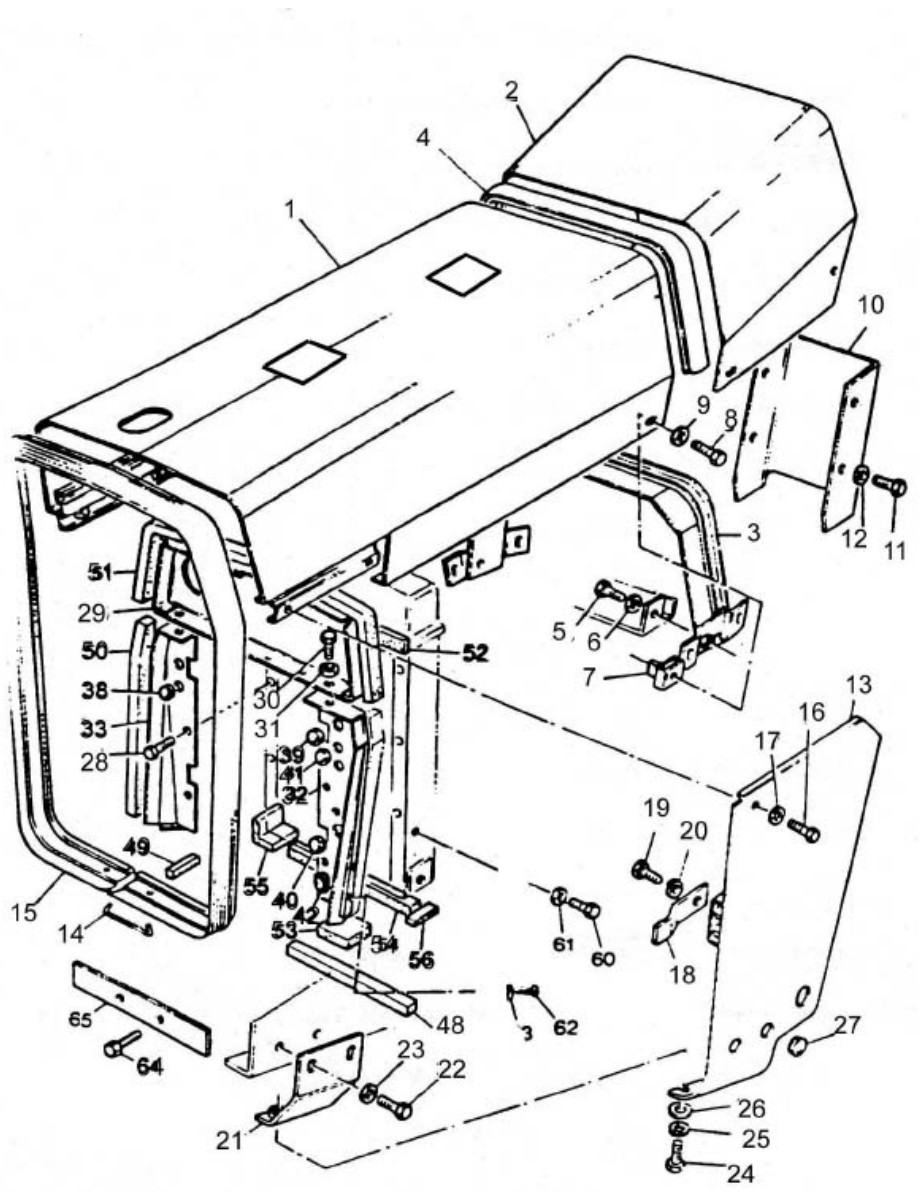


GUARDS P.T.O. & ALTERNATOR

Sl No	Part No.	Description	Qty
1	0353558 X01	Screw	1
2	0353432 X01	Lock Washer	1
3	3597894M01	Guard	1
10	353 682 X01	Bolt (unc)	1
11	353 446 X01	Lock washer	2
12	353 755 X01	Washer	2
13	1674 467 M92	Guard	1
14	355565X01	Nut (unc)	1
15	354 267 X01	Screw	1
16	353 756 X01	Washer	2
17	353 434 X01	Lock Washer	1
18	355 566 X01	Nut (unc)	1

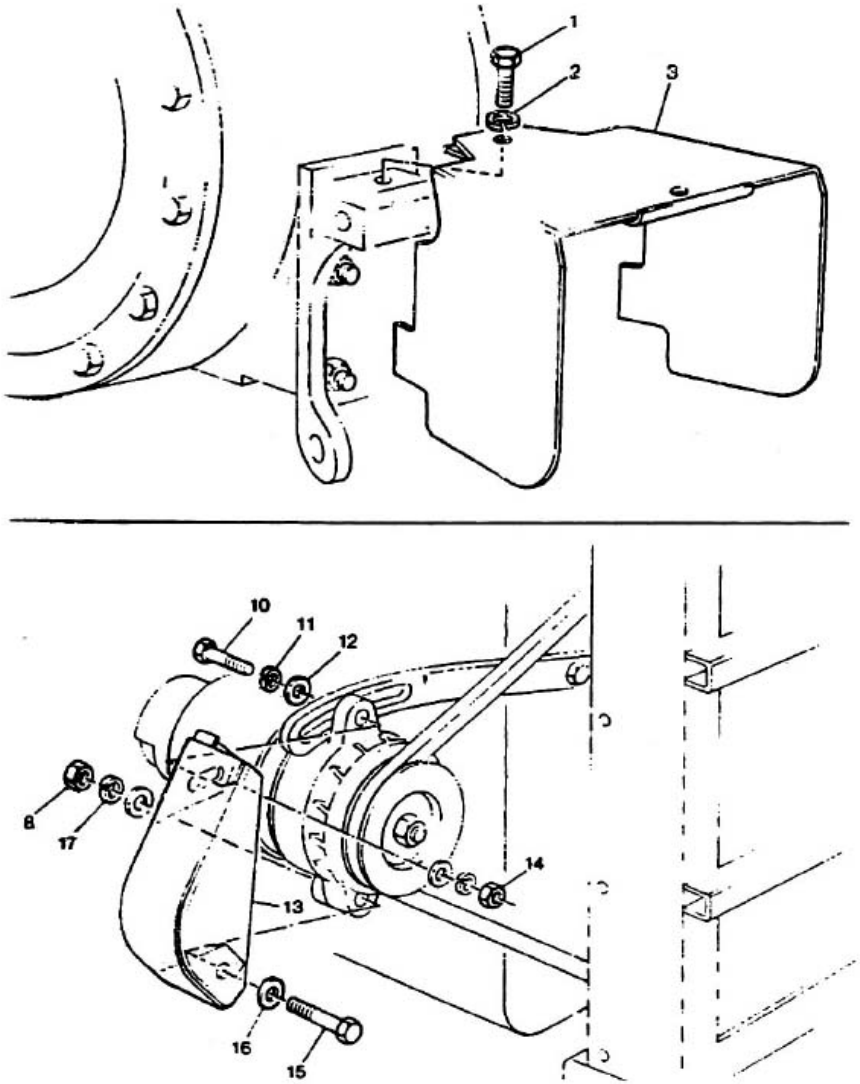


FOOT STEP ASSY.


Sl No	Part No.	Description	Qty
1	1861037M0365	Plate - Step LH	1
2	0897754M9165	Front Support Bracket LH	1
3	353700X01	Screw (unc)	2
4	353432X01	Lock Washer	2
5	353811X01	Bolt (unf)	1
6	353756X01	Washer	1
7	353434X01	Lock Washer	1
8	353431X01	Nut (unf)	1
9	353809X01	Bolt (unf)	1
10	353756X01	Washer	1
11	353434X01	Lock Washer	1
12	353431X01	Nut (unf)	1
13	0886086M01	Step-Intermediate	1
14	353519X01	Bolt (unf)	1
15	353755X01	Washer	2
16	353446X01	Lock Washer	1
17	353916X01	Nut (unf)	1
24	353785X01	Bolt (unf)	2
25	353754X01	Washer	2
26	353441X01	Lock Washer	2
27	353918X01	Nut (unf)	2

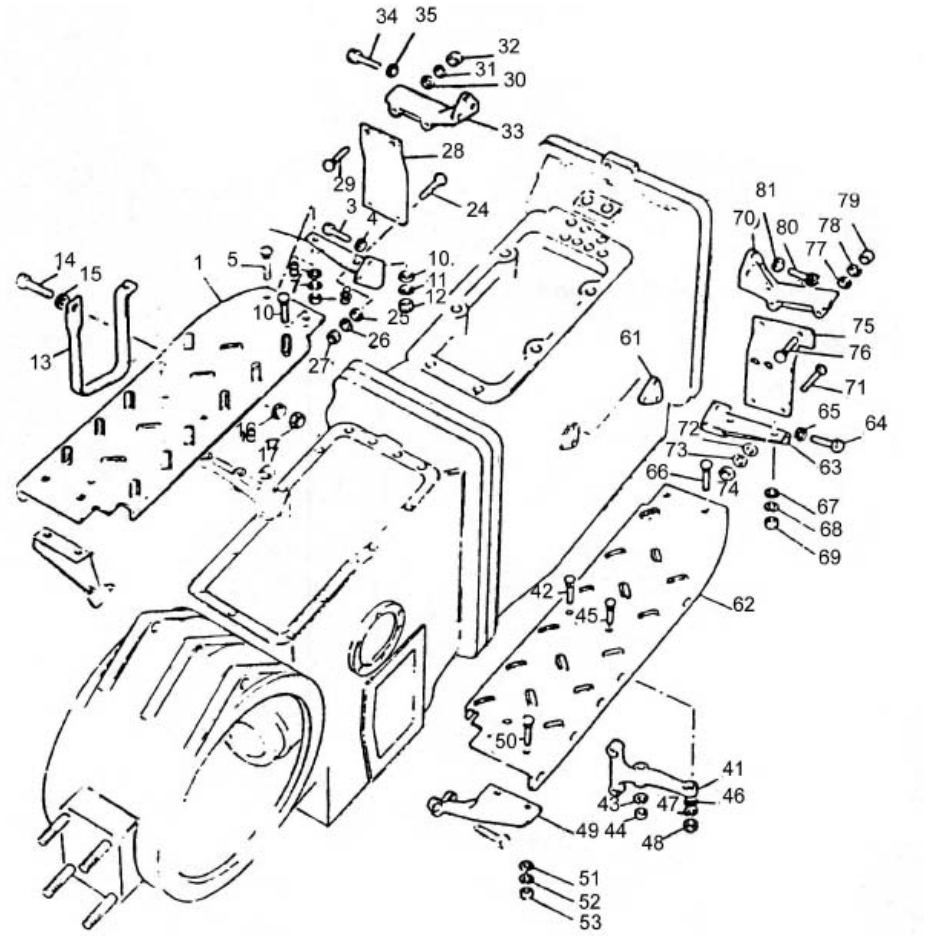

Sl No	Part No.	Description	Qty
28	0897746M01	Plate – Support LH	1
29	354244X01	Bolt (unf)	2
30	353754X01	Washer	2
31	353446X01	Lock Washer	2
32	353919X01	Nut (unf)	2
33	1875731M01	Foot rest - LH	1
34	0362437X01	Screw (unc)	3
35	0353434X01	Lock Washer	3
41	0881414M03	Support-Intermediate F/S	2
42	0353811X01	Bolt (unf)	2
43	0353434X01	Lock Washer	2
44	0353431X01	Nut (unf)	2
45	0353811X01	Bolt (unf)	1
46	353756X01	Washer	1
47	0353434X01	Lock Washer	1
48	0353431X01	Nut (unf)	1
49	1860769M01	Bracket – LH	1
49	1860768M01	Bracket – RH	1
50	353811X01	Bolt (unf)	4
51	353756X01	Washer	4
52	353434X01	Lock Washer	4
53	353431X01	Nut (unf)	4

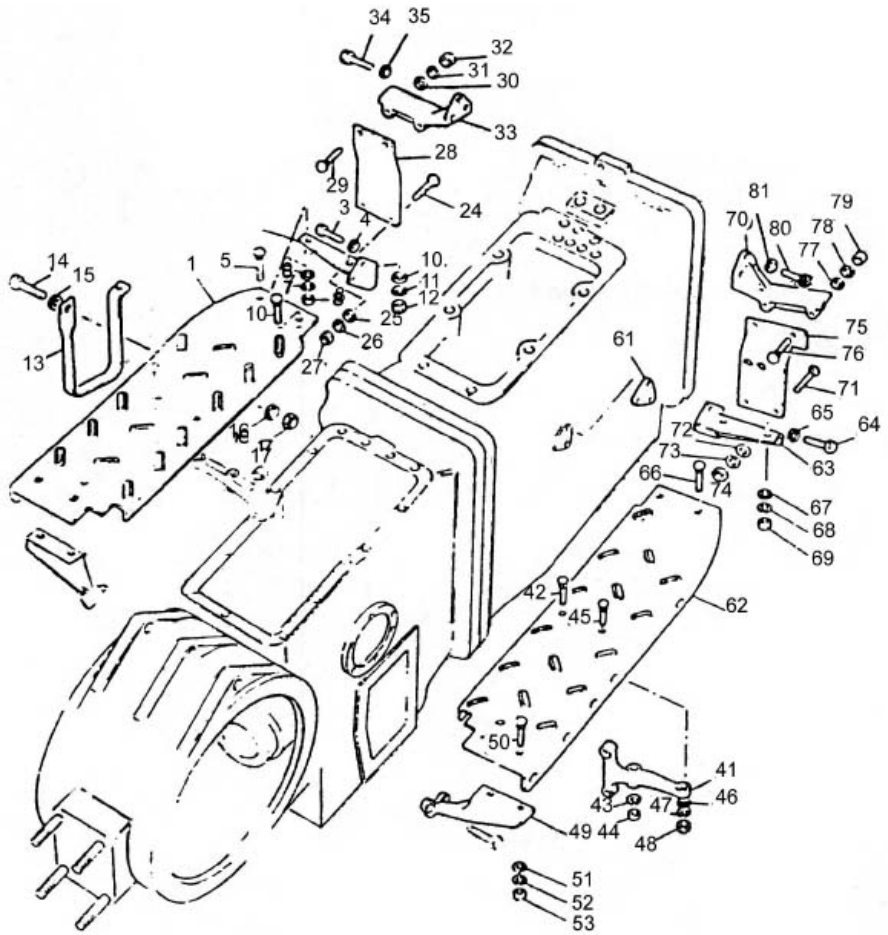


Sl No	Part No.	Description	Qty
61	0180870M01	Plate	1
62	1861036M0265	Plate - Step RH	1
63	0897753M9165	Front Support Bracket RH	1
64	753700X01	Screw Washer	2
65	353432X01	Lock Washer	2
66	353811X01	Bolt (unf)	2
67	353756X01	Washer	2
68	353434X01	Lock Washer	2
69	353434X01	Nut (unf)	2
70	1875730M02	Foot Rest RH	1
71	353785X01	Bolt (unf)	2
72	353754X01	Washer	2
73	353441X01	Washer Lock	2
74	363642X01	Nut (unf)	2
75	0897745M01	Plate – Support RH	1
76	354244X01	Bolt (unf)	2
77	353754X01	Washer	2
78	353441X01	Washer Lock	2
79	363642X01	Nut (unf)	2
80	0362437X01	Screw (unc)	3
81	0353434X01	Washer Lock	3

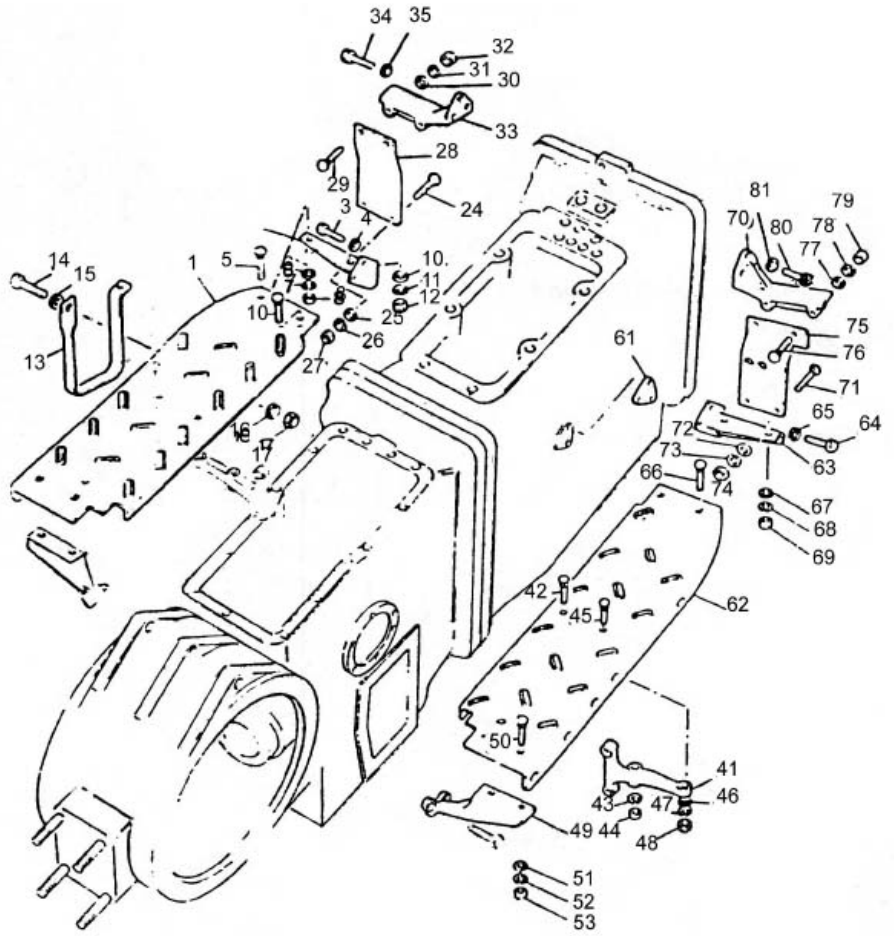


INSTALLATION SEAT ASSEMBLY

Sl No	Part No.	Description	Qty
1	4250806M91	Seat Assembly	1
2	1677409M01	Plate - Seat Support	1
3	3009494X01	Bolt Hex	2
4	0390597X01	Washer	2
	0339376X01	Lock Washer	2

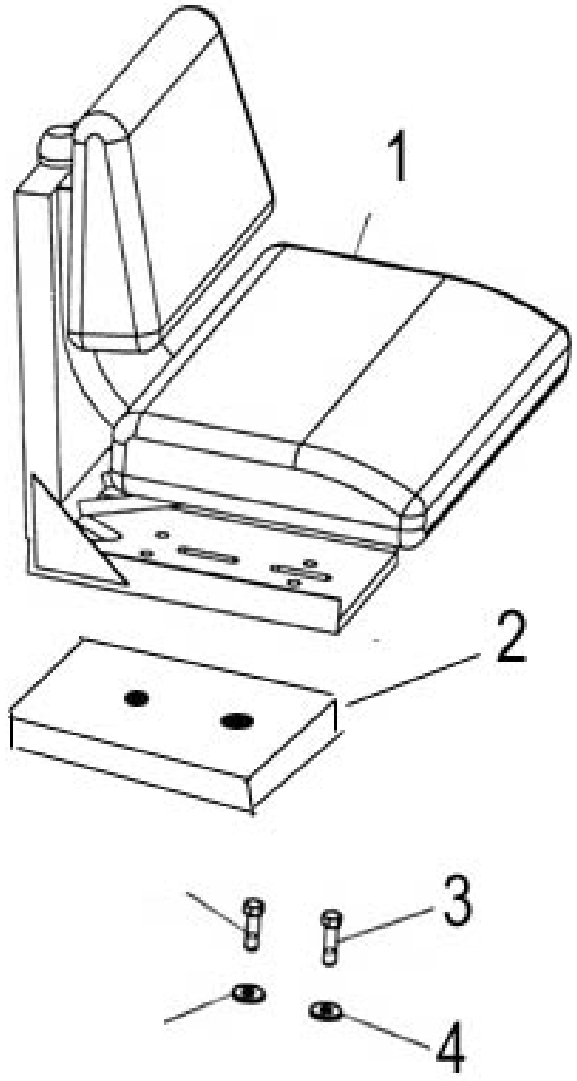


FRONT LIGHTING EQUIPMENT

Sl No	Part No.	Description	Qty
1	4251450M91	Head lam Assy. RH – TRAFFIC	2
	0716280M91	Head lam Assy. LH – TRAFFIC	2
2	2127028K01	Bulb 45/ 40w	1
3	0718085M01	Seal	2
4	4255546M91	Wiring harness front end	1

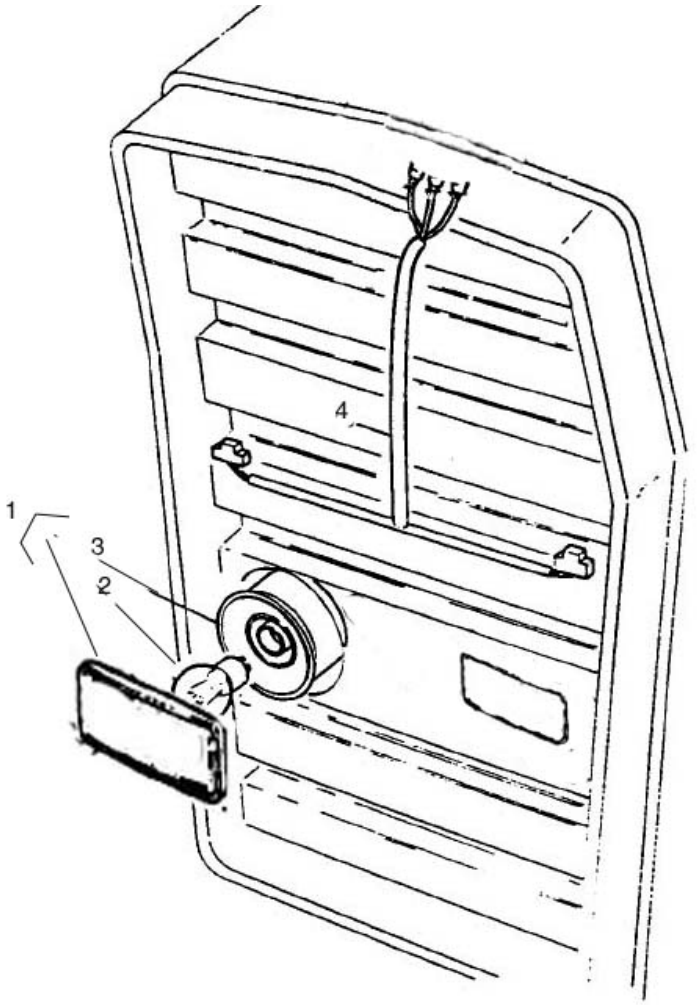


REAR LIGHTING EQUIPMENT


Sl No	Part No.	Description	Qty
1	4254988M91	Wiring harness –Trailer Socket	1
2	880 597 M01	Clip	3
3	1873 860 M01	Clip	4
6	353794X01	Bolt	2
7	353 755 X01	Washer	2
8	353 446 X01	Lock whether	2
9	353916X01	Nut(unf)	2
10	1874709M01	Brake Light Switch	1
12	1873 860 M01	Clip	1
13	353 756 X01	Washer	2
14	1677 803 M01	Tie	X
15	1679 525 M01	Cover	2
16	1680 882 M01	Clip	2
22	4255531M91	Fender LH Harness	1
22	4255532M91	Fender RH Harness	1
23	1684 847 M01	Connector	2
24	1 678 953 M01	Connector	7

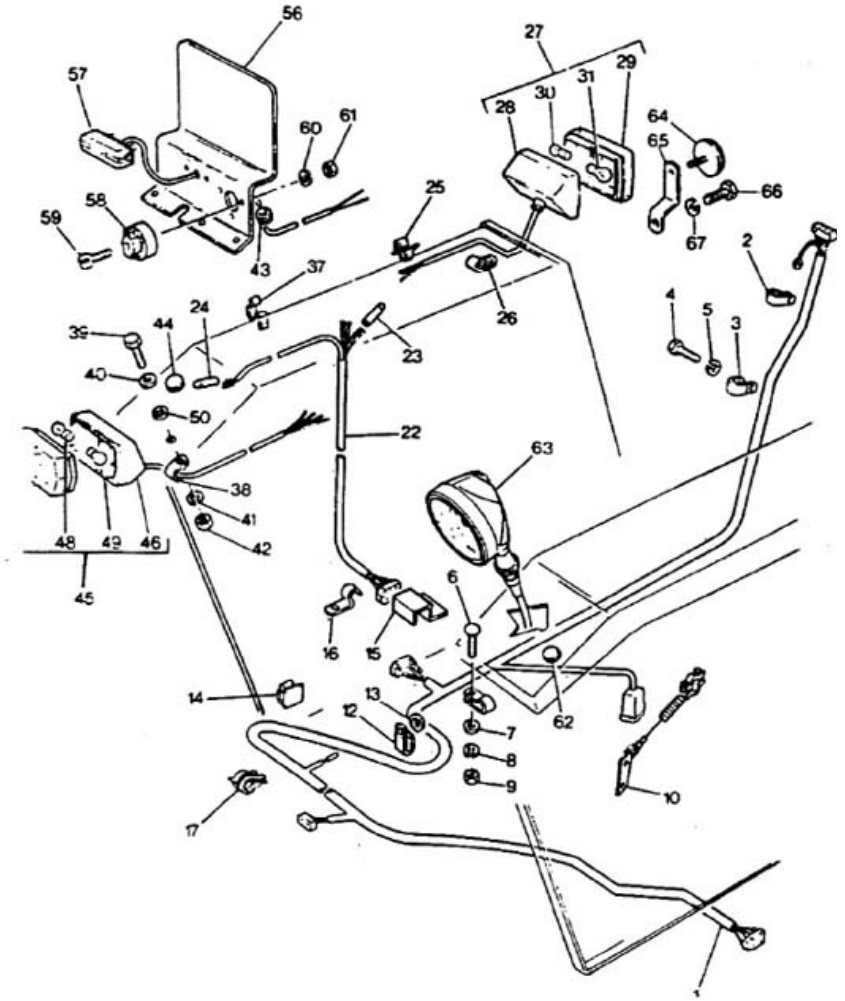

Sl No	Part No.	Description	Qty
25	8841 62 M01	Clip	2
26	1897 365 M01	Clip	2
27	4246095M91	Side lamp LH	1
27	4246094M91	Side lamp RH	1
28	Body	(Not serviced separately	1
29	Lens	(Order part No. 4246095M91	1
30	2127649K01	Bulb 12v 5w or 4246094M91)	1
31	2127029K01	Bulb	1
37	963497M01	Strap	1
38	1897 365 M01	Clip	4
39	353 502 X01	Screw	2
40	353 754 X01	Washer	2
41	353 441 X01	Lock Washer	2
42	353918X01	Nut	2
43	1680 062 M01	Grommet	1
44	885 581 M01	Plug	1
45	0719119M91	Rear lamp - LH	1
45	0719177M91	Rear lamp - RH	1
46	———	Body	1
47	3310307M91	Lens (Not serviced separately)	1
48	908 543 M01	Bulb	1
49	621 235 M01	Bulb	1

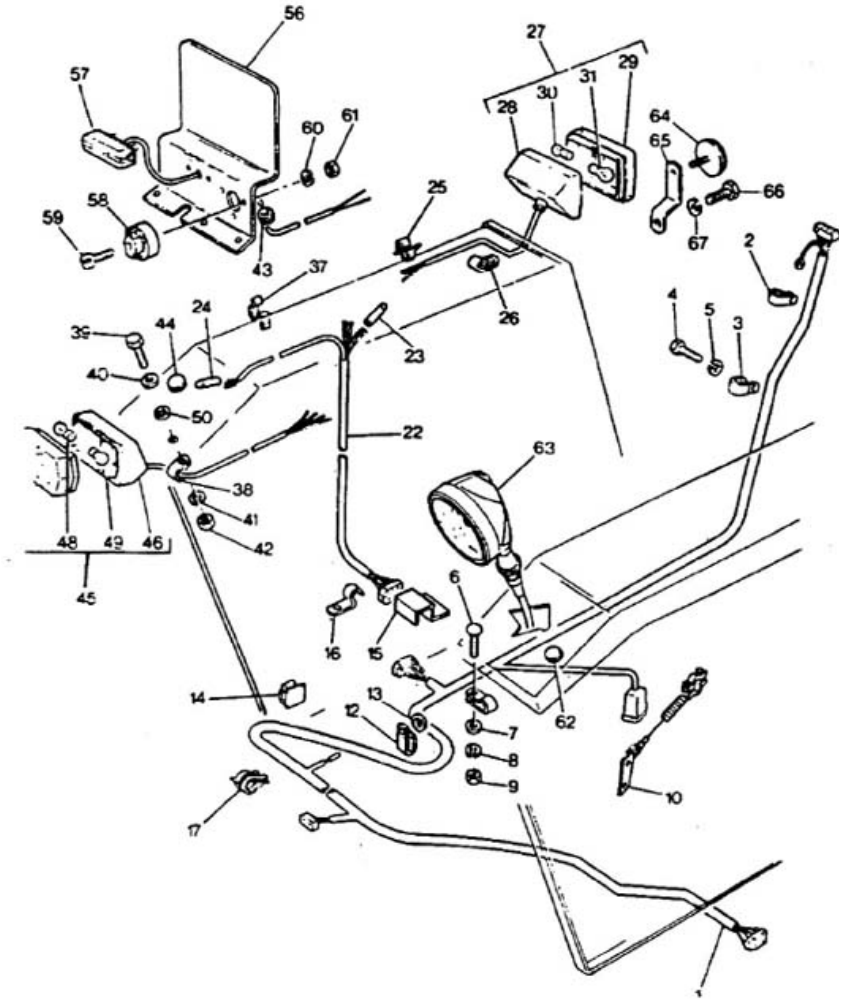


Sl No	Part No.	Description	Qty
50	353 754 X01	Washer	2
56	4254976M9160	Plate	1
57	0715751M91	Number plate lamp	1
58	4244744M91	Socket (7 pin)	1
59	355 033 X01	Screw	3
59	357 450 X01	Screw	3
60	353 445 X01	Lock washer	3
61	354120X01	Nut	3
62	1860 526 M01	Plug	1
63	4248082M91	Work lamp	1
64	1678 390 M01	Reflector	1
65	1666 377 M01	Bracket	1
66	354 441 X01	Screw (unc)	2
67	353 433 X01	Lock washer	2

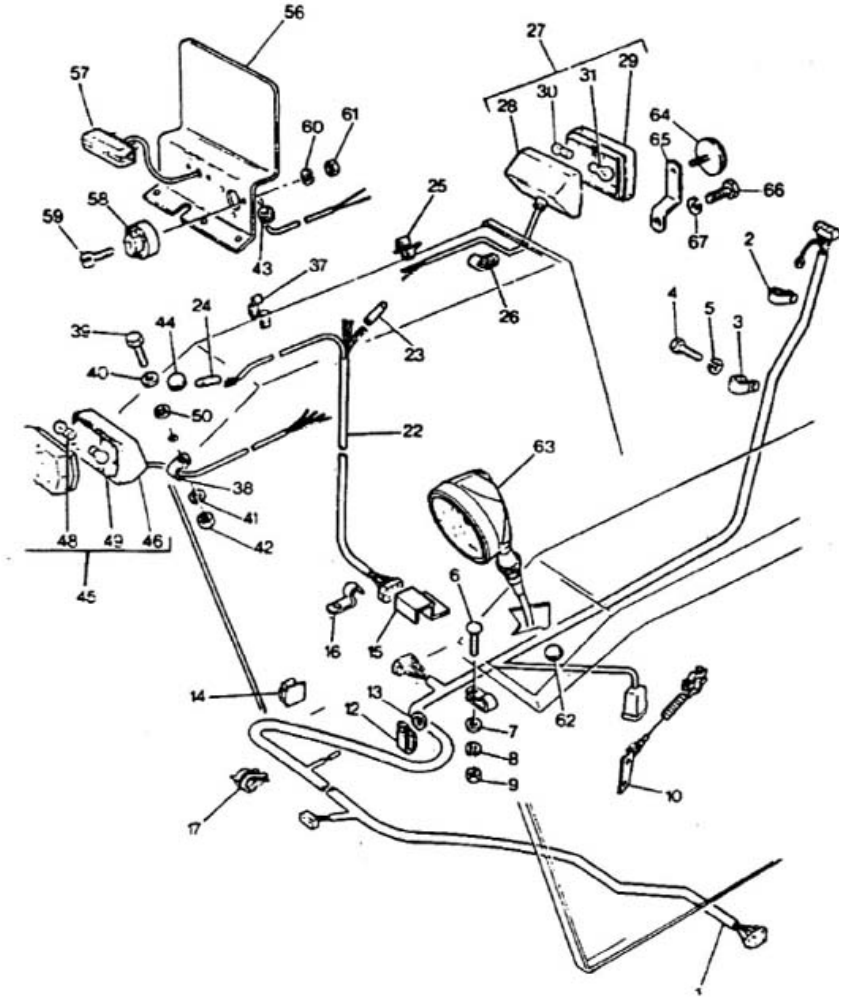


FRONT WEIGHT TRAY

Sl No	Part No.	Description	Qty
1	1686366M92	Frame	1
1	4248516M91	Frame	1
	14249010M91	Frame- for 4WD	1
2	0354681X01	Bolt	2
	14249010M91	Bolt -for 4WD	2
3	1686735M01	Spacer	2
4	0354286X01	Bolt	4
	0354283X01	Bolt -for 4WD	4
5	354433X1	Lock Washer	4
6	3052232M94	Pin hitch	1
7	0810285M92	Lynch Pin	1

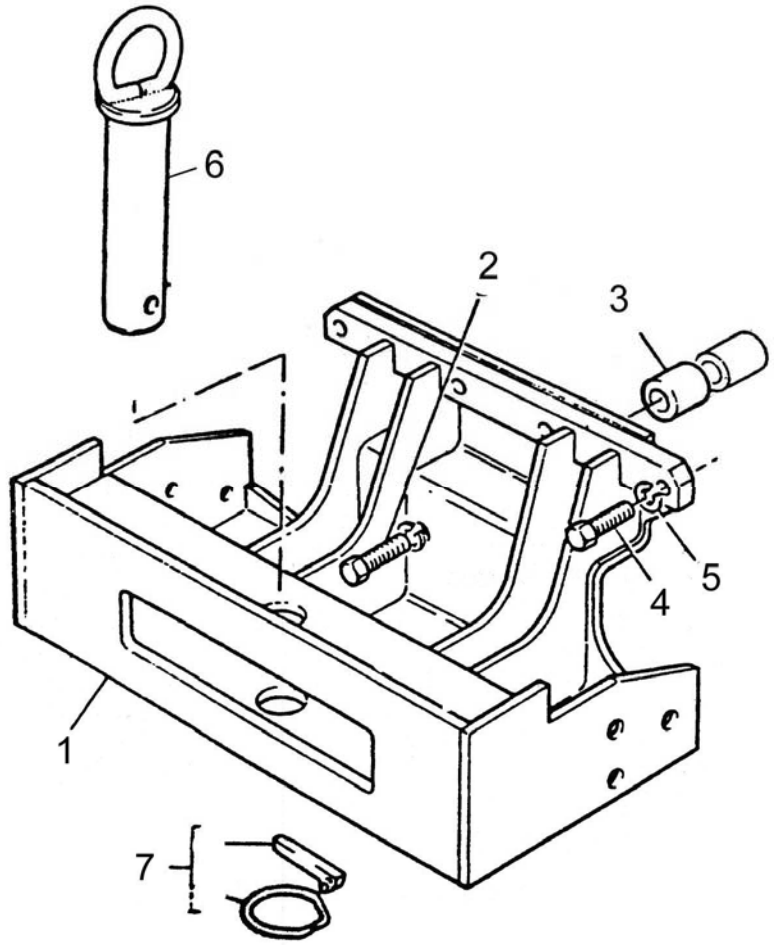


FRONT WEIGHTS

Sl No	Part No.	Description	Qty
1	4254994M91	Front End Weight [Exports]	AR

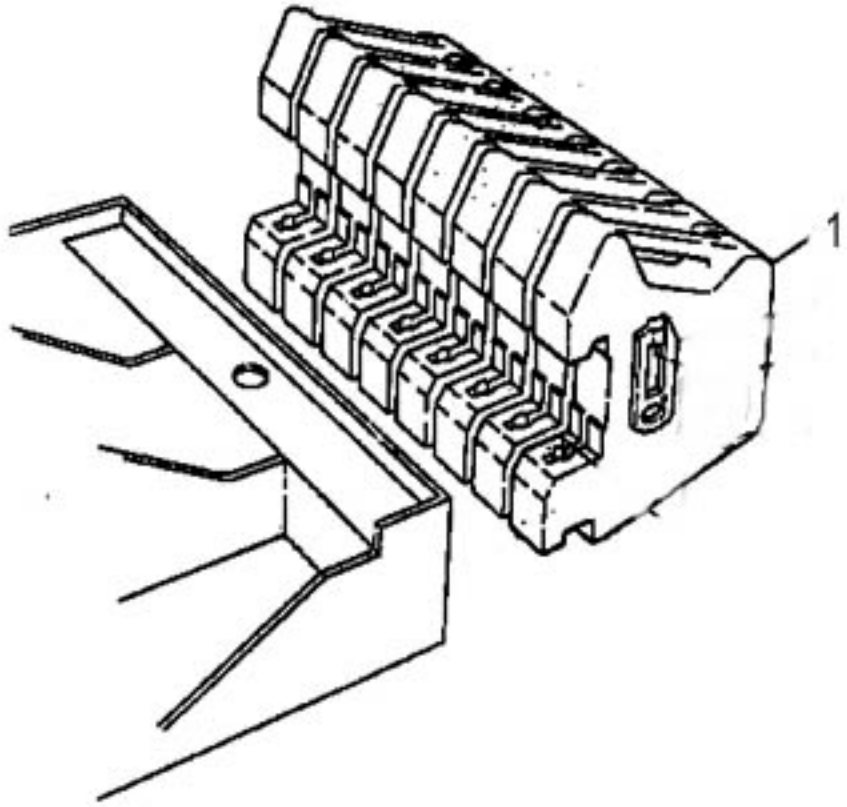


SWINGING DRAW BAR

Sl No	Part No.	Description	Qty
1	4251956M91	Swinging draw bar Assembly	1
2	1696 236 M93	Bracket	1
3	886162M92	Pin	1
4	811 201 M91	Lynch pin (6mm)	1
5	377661 X01	Bolt	6
6	0874949 M91	Support - LH	1
7	0874952M91	Support -RH	1
8	0886160 M01	Stud	4
9	1683 437 M01	Plate	2
10	353 435 X01	Nut	4
17	874 940 M91	Frame	1
18	8861 66 M01	Pin	1
19	1867 909 M01	Pin	2
20	886 224 M2	Shan	1
21	365139X01	Pin	1
22	353 448 X01	Screw	2
23	810 299 M2	Plate	1
24	888 851 M01	Decal	1

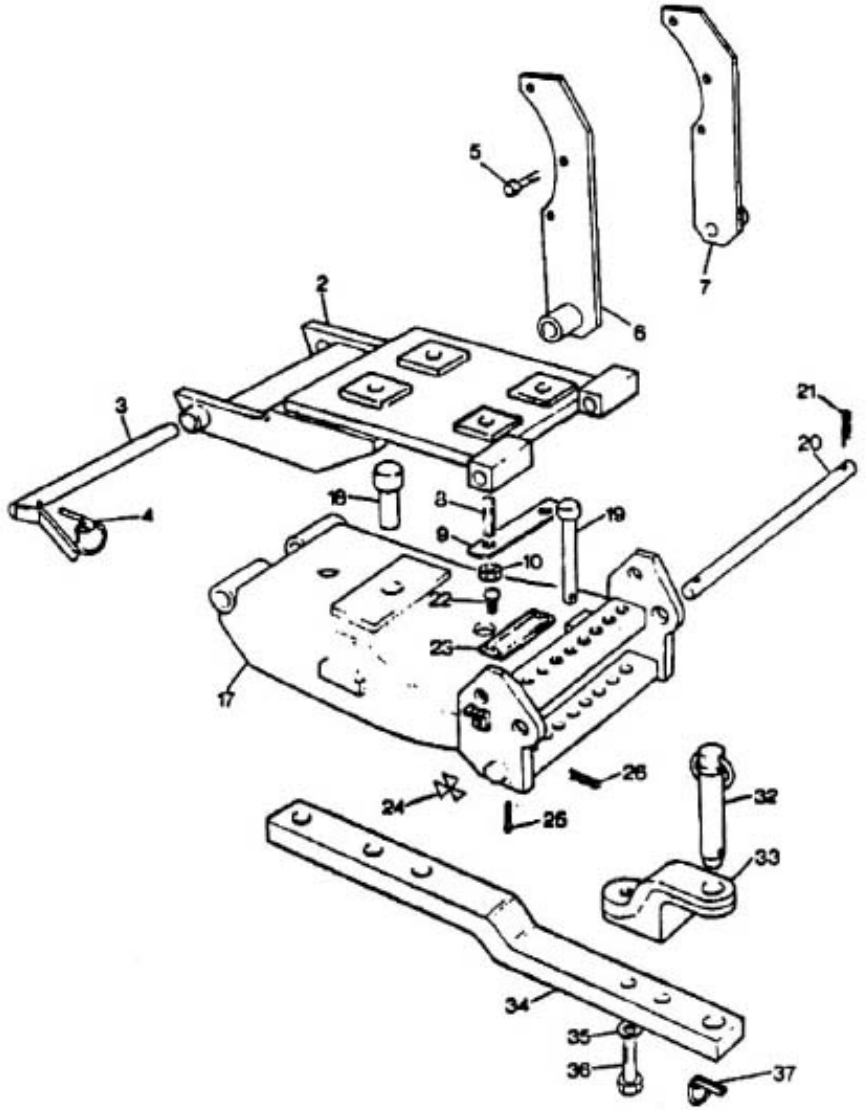


Sl No	Part No.	Description	Qty
25	354 091 X01	Pin	1
26	375 285 X01	Pin	2
32	1668 803 M91	Pin	1
33	874948M01	Adaptor	1
34	4250789M91	Swinging draw bar	2
35	353433X01	Lock washer	2
36	353618X01	Bolt	2
37	810285M92	Lynch pin (11 mm)	1

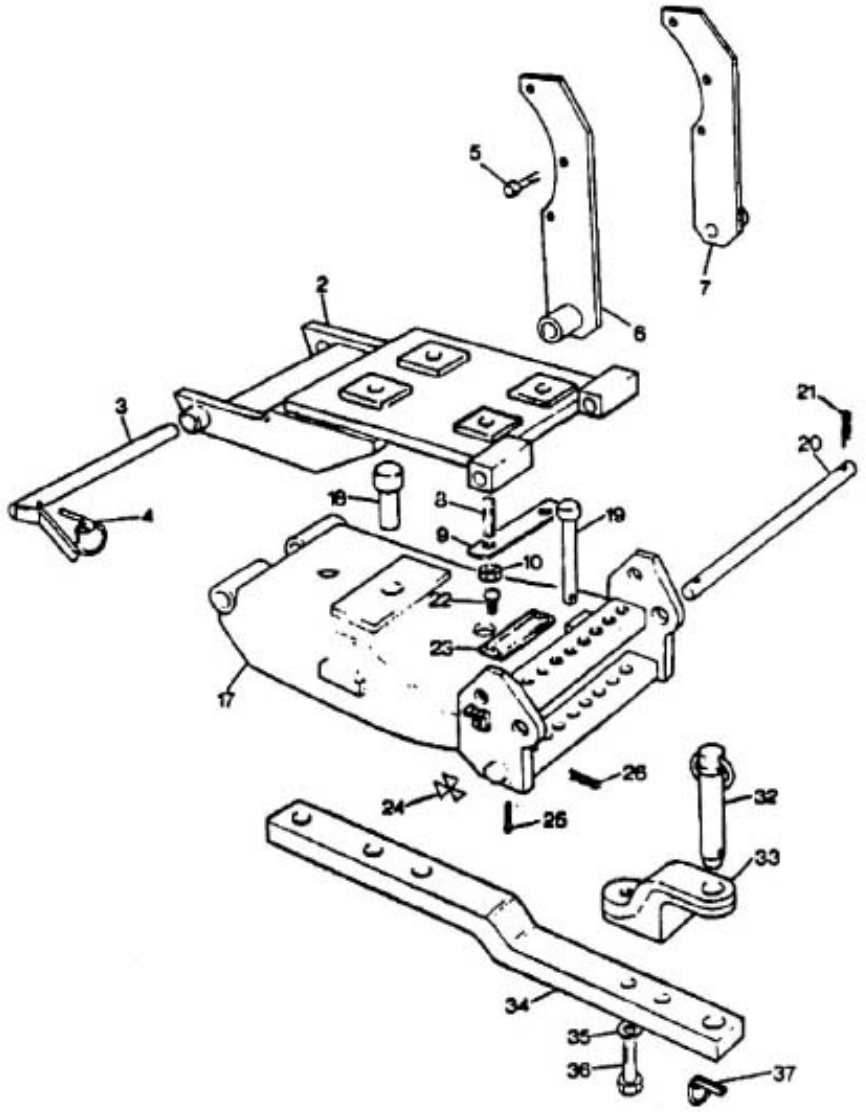


CHAIN STABILISER KIT

Sl No	Part No.	Description	Qty
1	3613366M91	Universal Stabilizer Kit	1
2	1695683M92	Bracket – LH	1
2	1695682M92	Bracket – RH	1
3	0354076X01	Pin	2
4	0364591X01	Clevis pin	2
5	1670841M91	Assy. Chain Stabilizer	2
6	1860594M01	Shackle	1
7	1661408M01	Tensioner	1
8	1661411M01	Buckle	1
9	1661409M01	Tensioner	1
10	1661412M01	Plate	2
11	0354076X01	Hair pin	1
12	0364491X01	Clevis pin	2
13	0354076X01	Pin	1
14	1867186M01	Bracket	1
20	1865158M01	Bolt	2
21	1865159M01	Spacer	2
22	0353762X01	Washer	2
23	0353435X01	Nut	2
24	0353436X01	Nut	2

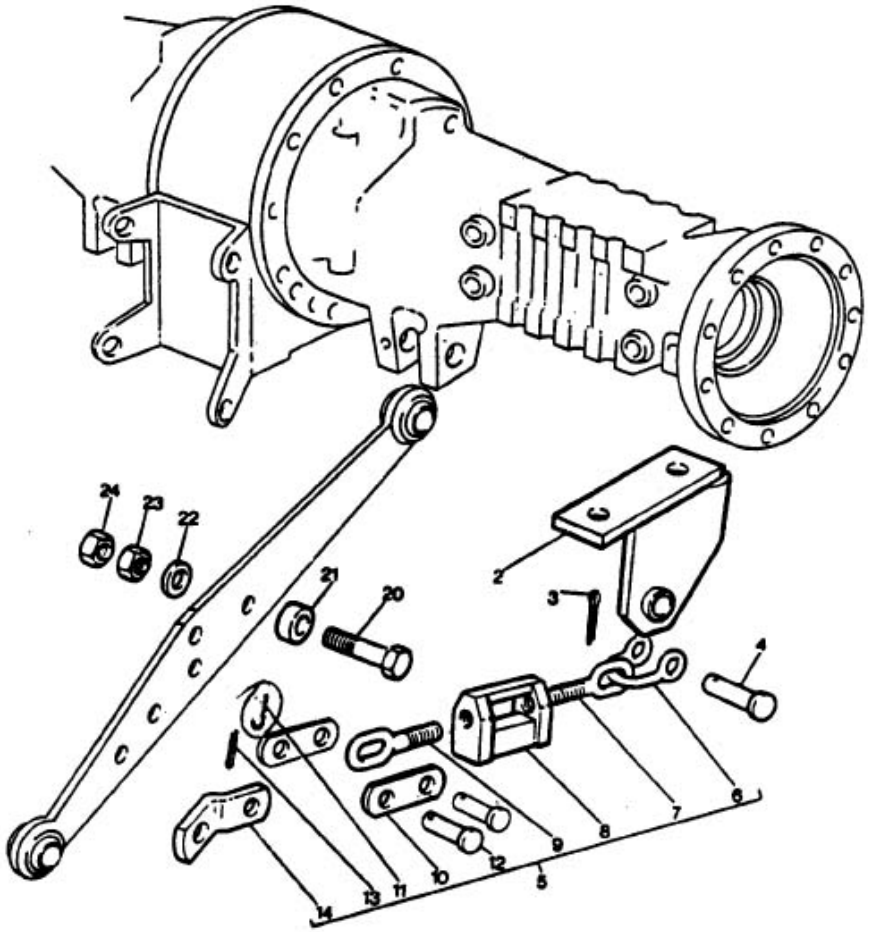


STABILISER EXTENSION KIT

Sl No	Part No.	Description	Qty
2	1661415M91	Extension Bracket Assy.	2
3	354567X01	Bolt (unf)	2
4	353440X01	Lock washer	2
5	353435X01	Nut (unf)	2
6	354116X01	Screw (unf)	2
7	353440X01	Lock washer	2

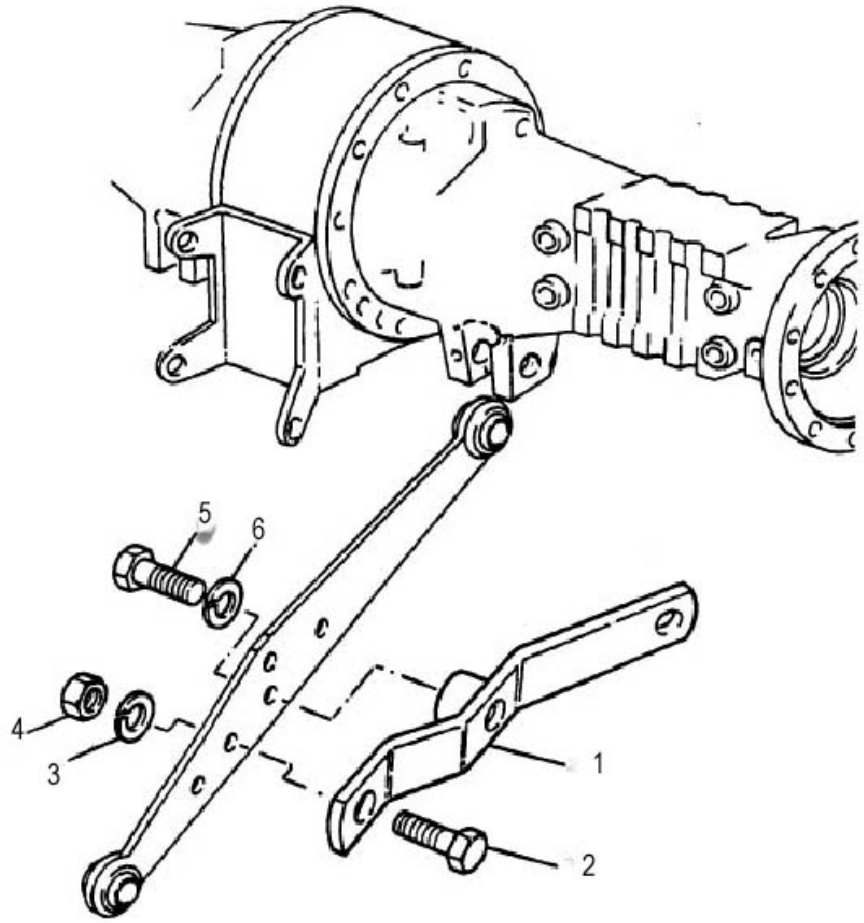


CONNECTOR ASSY KIT

Sl No	Part No.	Description	Qty
1	1680263M01	Male coupler	1
2	3611673M01	Plug	1

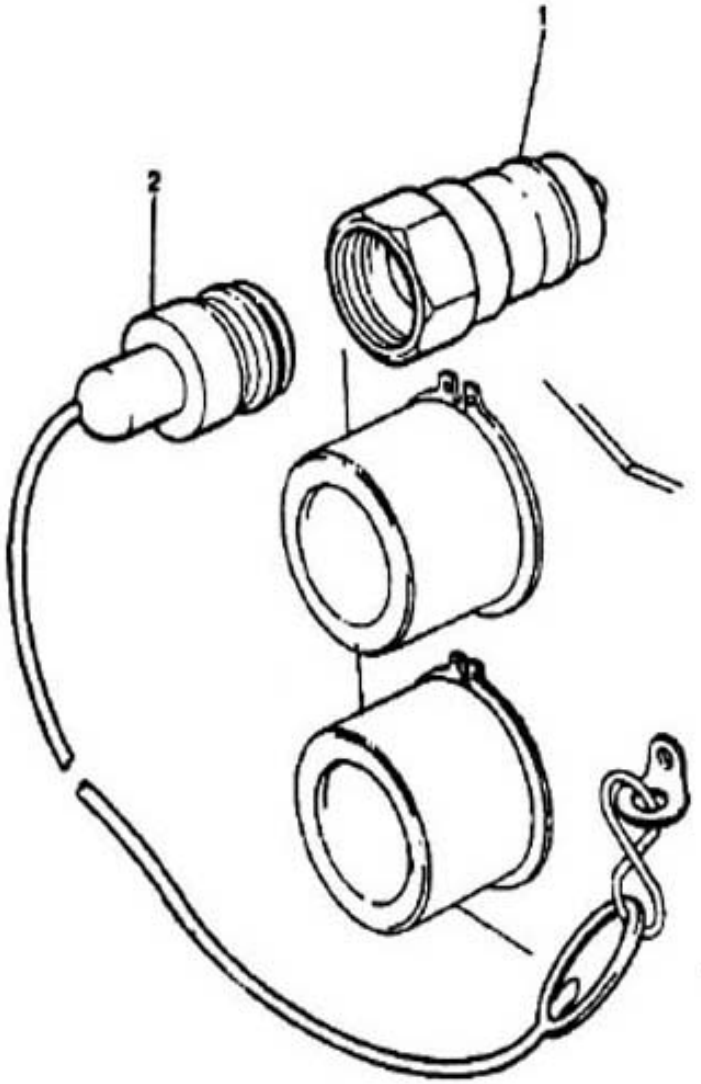


OIL PIPE KIT

Sl No	Part No.	Description	Qty
1	8000914P91	Kit – oil pipe	1
2	646669M01	Cap	1
3	4242640M91	Connector	1
4	1675689M01	Bracket – LH	1
5	812560M01	Nut	1
6	4242764M91	Oil Pipe	1
7	4246270M01	Bolt	1
8	4246271M01	Seal	2
9	353563X01	Bolt (unf)	1
10	1675691M01	Spacer	1
11	4242688M0165	Bracket – LH	1
12	353757X01	Washer	2
13	376760X01	Nut	1

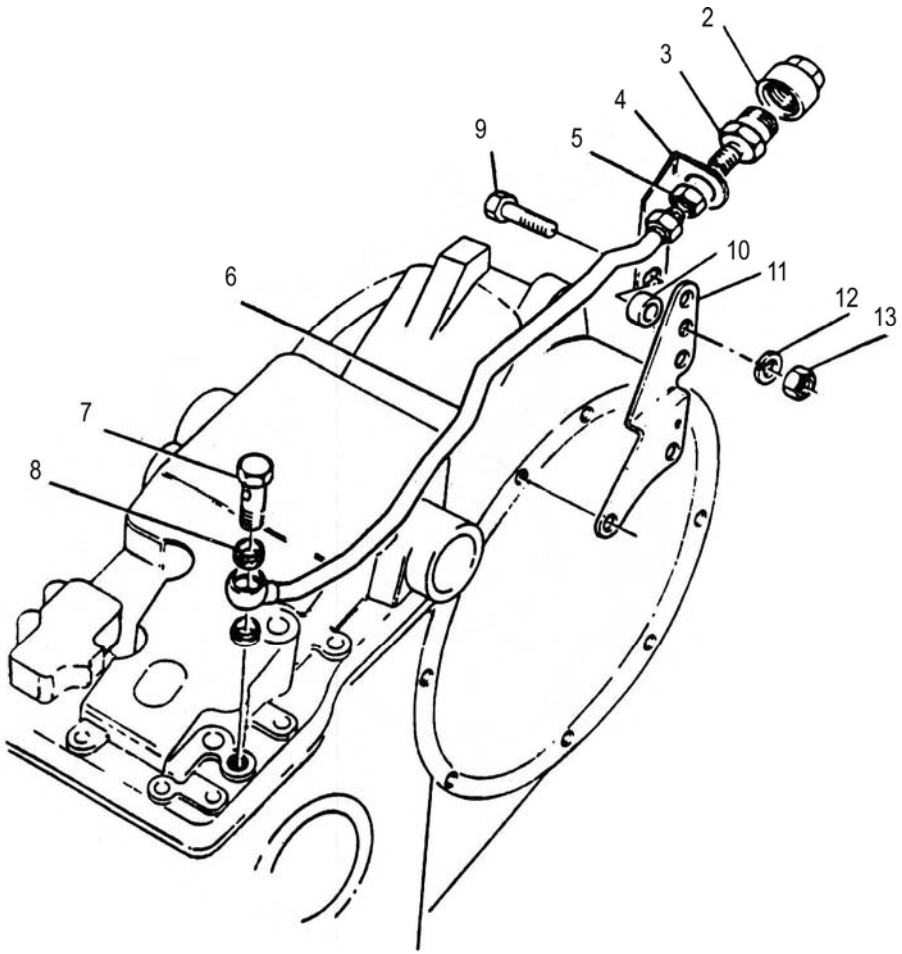


TOOL BOX

Sl No	Part No.	Description	Qty
1	3009492X01	Screw	2
2	0353755X01	Washer	4
3	0717675M01	Tool box	1
5	0339376X01	Lock washer	2
6	3009693X01	Nut (unf)	2

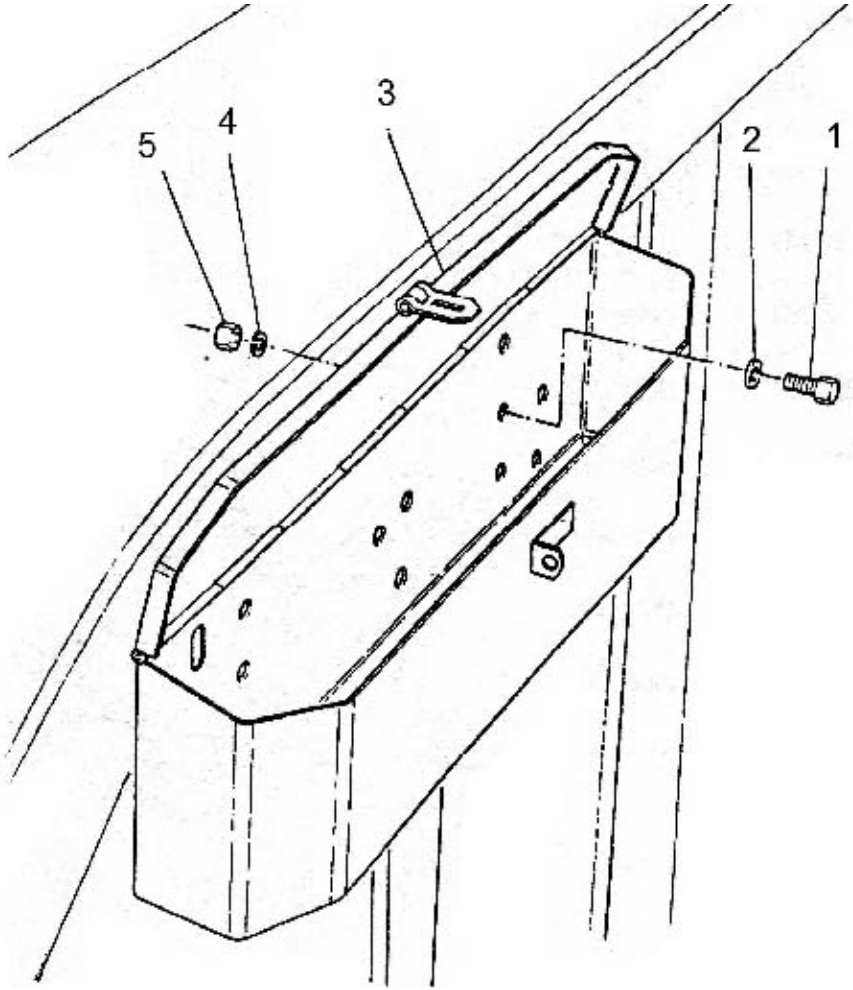


INSTALLATION INSTRUMENT PANEL & SWITCHES

Sl No	Part No.	Description	Qty
1	4255518M91	Instrument Cluster	1
2	4243516M91	Light Switch	1
3	4248966M91	Starter Switch	1
4	4245803M91	Hazard Warning Switch	1
5	0339721X01	Hex Bolt	2
NI	4245400M91	Steering Combination Switch	1
NI	4248572M91	Buzzer	1
NI	4256044M91	Electronic Flasher	1

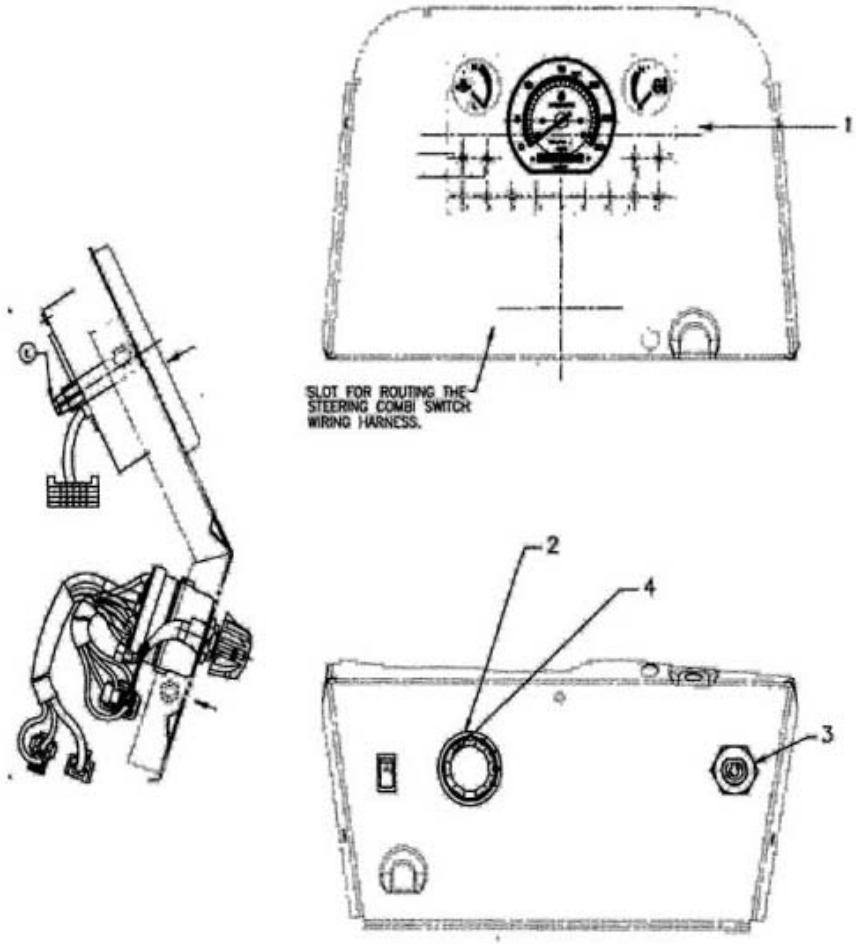


HAND BRAKE

Sl No	Part No.	Description	Qty
1	4251952M91	Assy Support Hand Brake Mtg.	1
2	0385395X01	Bolt	2
3	3009695X01	Nut Hex	1
4	0385369X01	Square Head Bolt	2
5	4248872M91	Assy. Hand Brake	1
6	0339081X01	Screw	2
7	0390734X01	Flat Washer	2
8	3009693X01	Hex Nut-M 10	2
9	4243573M91	Assy. Hand Brake Cable LH	1
10	4243572M91	Assy. Hand Brake Cable RH	1
11	3019200X01	Pin Clevis	2
12	0385361X01	Washer	4
13	1442864X01	Split Pin	2
14	3019199X01	Pin Clevis	2
15	0390972X01	Washer	4
16	1442864X01	Split Pin	2
17	4243799M01	Guard [Hand Brake Cable]	1
18	1696653M91	Plate Welded	1
19	0390972X01	Washer	4

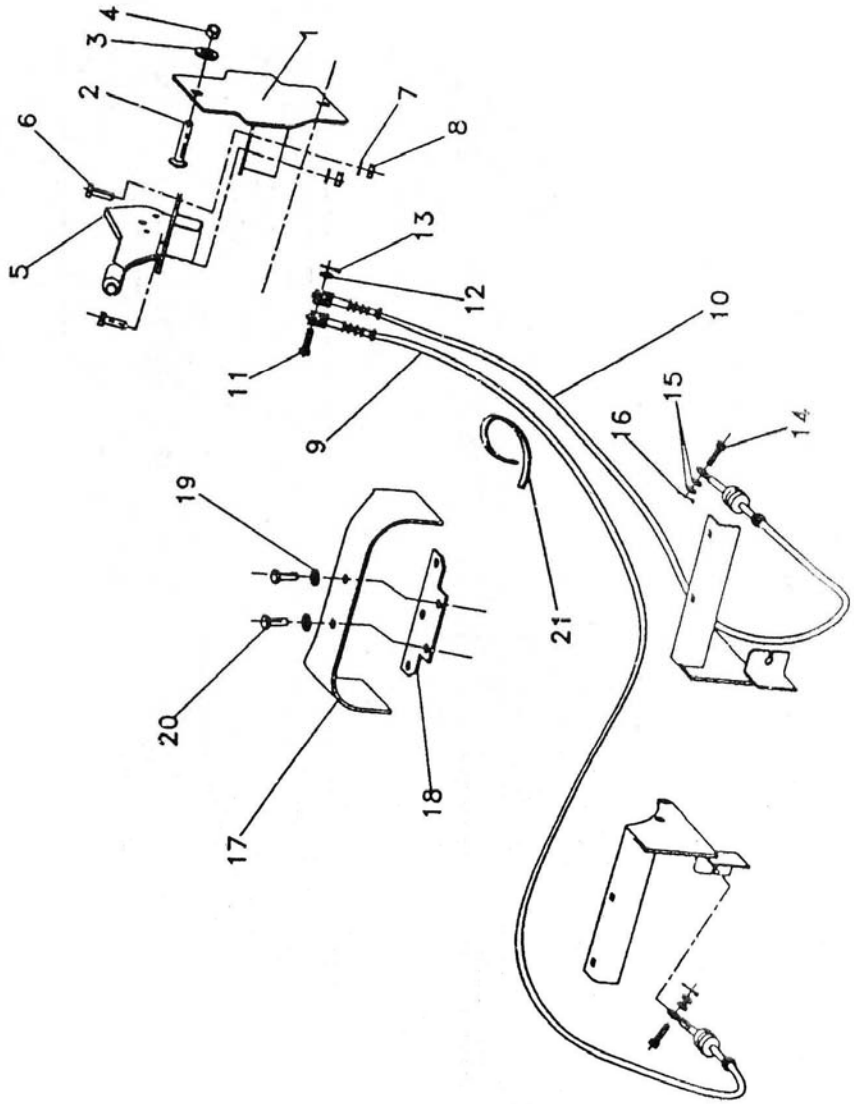



Sl No	Part No.	Description	Qty
20	0339124X01	M8 Hex Bolt Length 20	2
21	0717586M01	Strap - Clamp	1
NI	4256156M01	Hand Brake Cable Bracket LH	1
NI	4256155M01	Hand Brake Cable Bracket RH	1
NI	1696650M01	Clip - Hand Brake	1

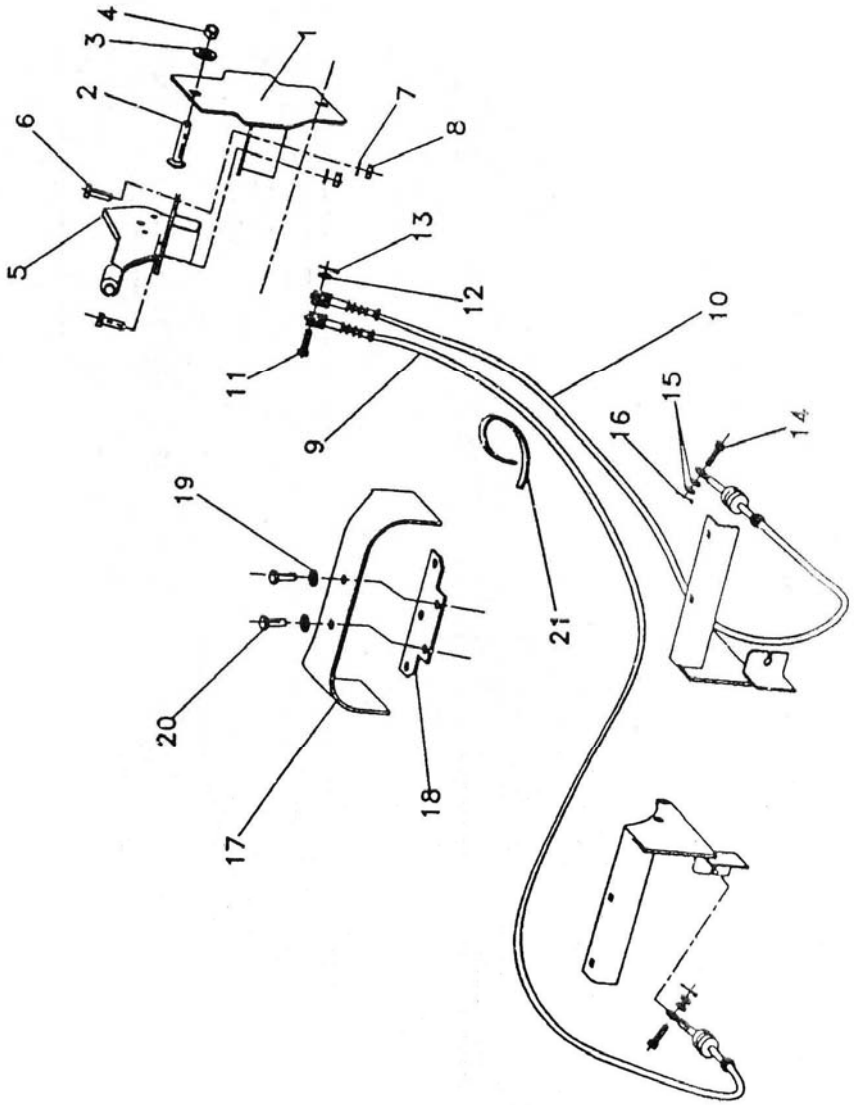

FUEL PIPE LINES

Sl No	Part No.	Description	Qty
1	3009 508 X01	Bolt Hex	2
	0339 369 X01	Lock Washer	2
	3009 695 X01	Nut	2
2	4257 328 M91	Flexible Hose Assy	1
3	4256 267 M91	Assy. Pipe	
		Water Sep. To Feed Pump	1
4	4256 268 M91	Assy. Pipe Filter To Feed Pump	1
5	3009 508 X01	Bolt Hex	2
	0339 369 X01	Lock Washer	2
	3009 695 X01	Nut	2
6	4256 269 M91	Assy. Pipe Tank To Injection Pump	1
7	4256 265 M91	Assy. Pipe Tank To Over Flow	1
8	0716 708 M02	Bolt Banjo	6
	0714 316 M02	Washer Banjo	16
9	4256 176 M01	Assy. Brkt. Water Separator	1
10	0339 761 X01	Bolt Hex	2
	0339 169 X01	Nut Hex	2
	0339 374 X01	Spl. Washer	2

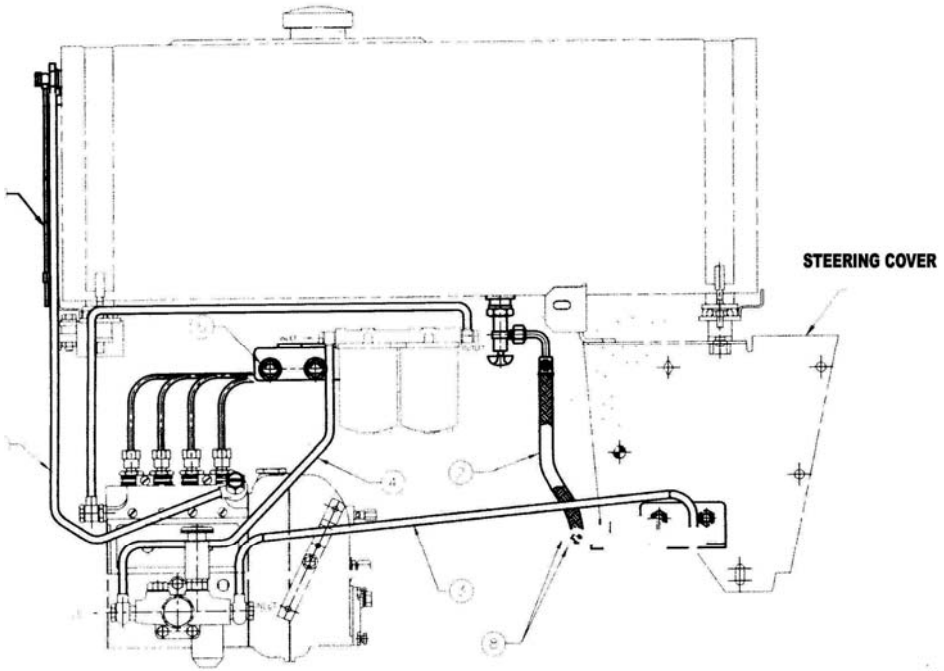


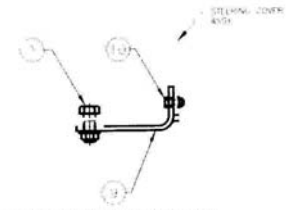

VIEW FROM THE DIRECTION
OF ARROW "ZT"


HYDROSTATIC STEERING

Sl No	Part No.	Description	Qty
1	4248608M91	Assy. Steering Cover	1
2	3009 491 X01	Bolt hex	2
3	0339 374 X01	Washer lock	2
4	4250905M91	Assy, Steering Bracket-Rear	1
5	0354262 X01	Bolt	2
6	0353 434 X01	Lock Washer	2
7	4246638M91	Steering column	1
8	3009492 X01	Screw gear fixing	4
9	0339376 X01	Spring washer	4
10	0716 201M01	Grommet	1
11	0827 210M01	Felt washer	1
12	4242 546 M91	Steering wheel cap & motif	1

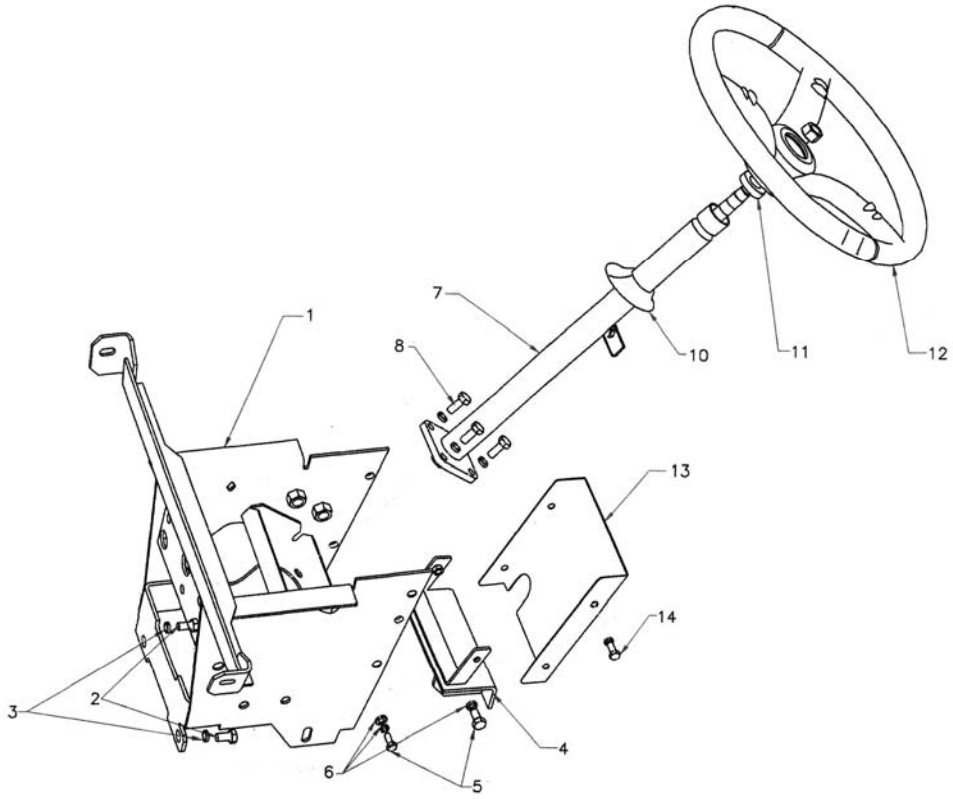


HYDROSTATIC STEERING PIPE LINES

Sl No	Part No.	Description	Qty
1	4246 691 M91	Steering Pump	1
2	1686 461 M03	External gear (Stg. pump)	1
3	4256 192 M91	Suction Pipe assy	1
4	4256189M01	“0” Ring Suction	1
5	4256 186 M91	Delivery pipe	1
6	4244 760 M01	“0” Ring	1
7	3019 879 X01	Hose clip	1
8	4245 156 M01	Suction hose	1
9	4246 060 M01	“O” ring	2
10	3019 879 X01	Hose clip	1
11	4250 540 M92	Reservoir	1
12	4249 340 M01	Sticker — stg. reservoir	1
13	4249 078 M91	Hydrostatic steering unit	1
14	4246 055 M01	“0” ring 2	
15	4246 050 M01	Gear part adaptor	2
16	4246 734 M01	“0” ring (gear port)	4
17	4246 056 M01	Gear port adaptor	2
18	4246 060 M01	“0” ring	2
19	4251 815 M91	Assy. pipe (stg. out to reservoir)	2
20	4251 819 M01	Return hose	1

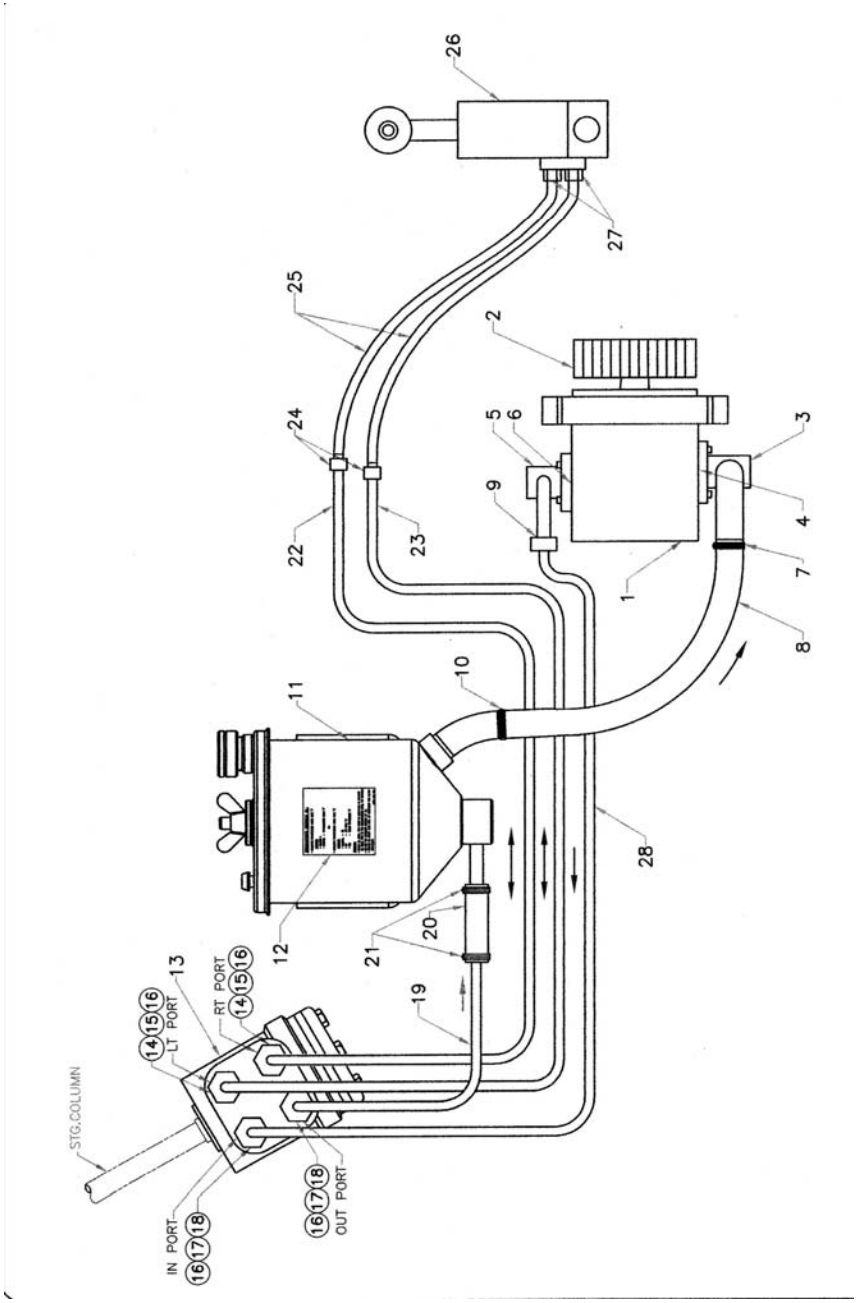


Sl No	Part No.	Description	Qty
21	3019 566 X01	Hose clip	2
22	4251 817 M91	Assy pipe gear RH port to cyl.RH hose	1
23	4251 816 M91	Assy pipe gear LH port to cyl.LH hose	2
24	4251 818 M01	Lock nut	2
25	4246 723 M91	Steering cylinder hoses	2
26	4247 626 M91	Steering cylinder	1
27	4249 073 M01	Cylinder port adaptor	2
28	4251 814 M91	Assy, pipe pump del to gear inlet	1

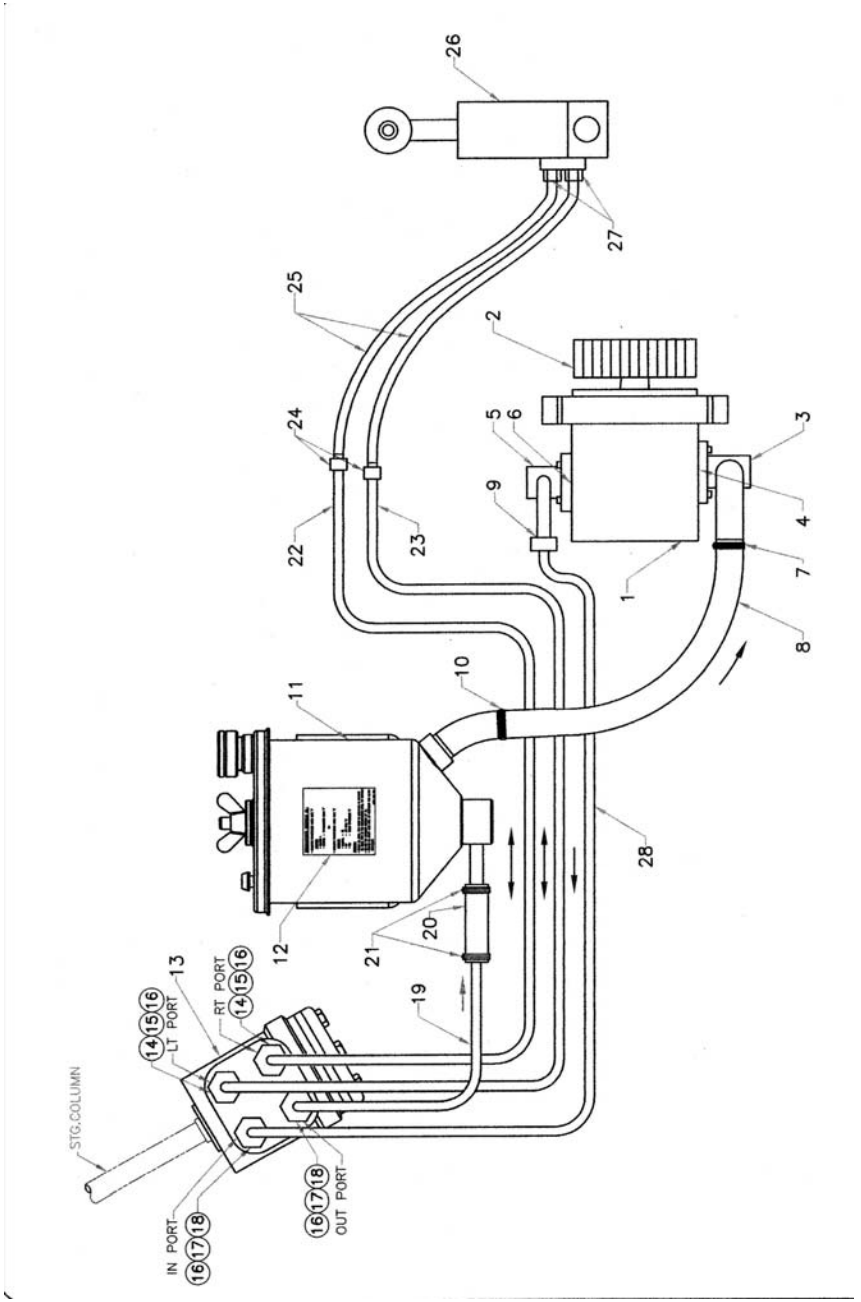


BATTERY

Sl No	Part No.	Description	Qty
1	4256941 M91	Assy. Side Plate RH	1
2	4256942 M91	Assy. Side Plate LH	1
3	0353697 X01	Bolt	2
4	0353665 X01	Bolt	4
5	4255684 M91	Assy Battery Tray	1
6	4255228 M91	Battery	1
7	4255573 M91	Assy. Battery Retainer	1
N.I	4255809M01	Rod-Battery	4
N.I	0390331X01	Wing Nut	4
N.I	0390972 X01	Washer Flat	4

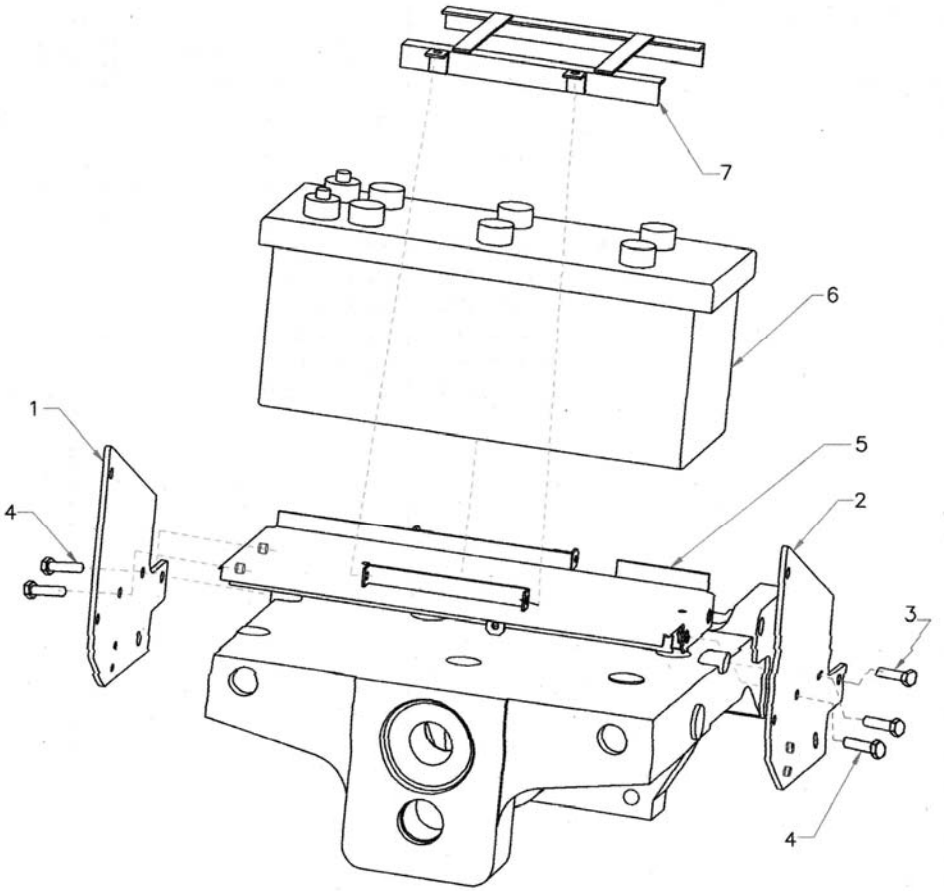


RADIATOR

Sl No	Part No.	Description	Qty
1	4255745M91	Assy. Radiator	1
	4247994M91	Assy. Radiator-for 4WD	1
2	0717231M01	Hose Top	1
	1921C00601	Hose Top-for 4WD	1
3	0898748M01	Hose Radiator	1
	1921C00701	Hose Radiator Bottom -for 4WD	1
4	0338616X01	Clip Hose	4
5	0353697X01	Bolt	4
6	0353432X01	Lock Washer	4
7	0180705M02	Pad Radiator	4

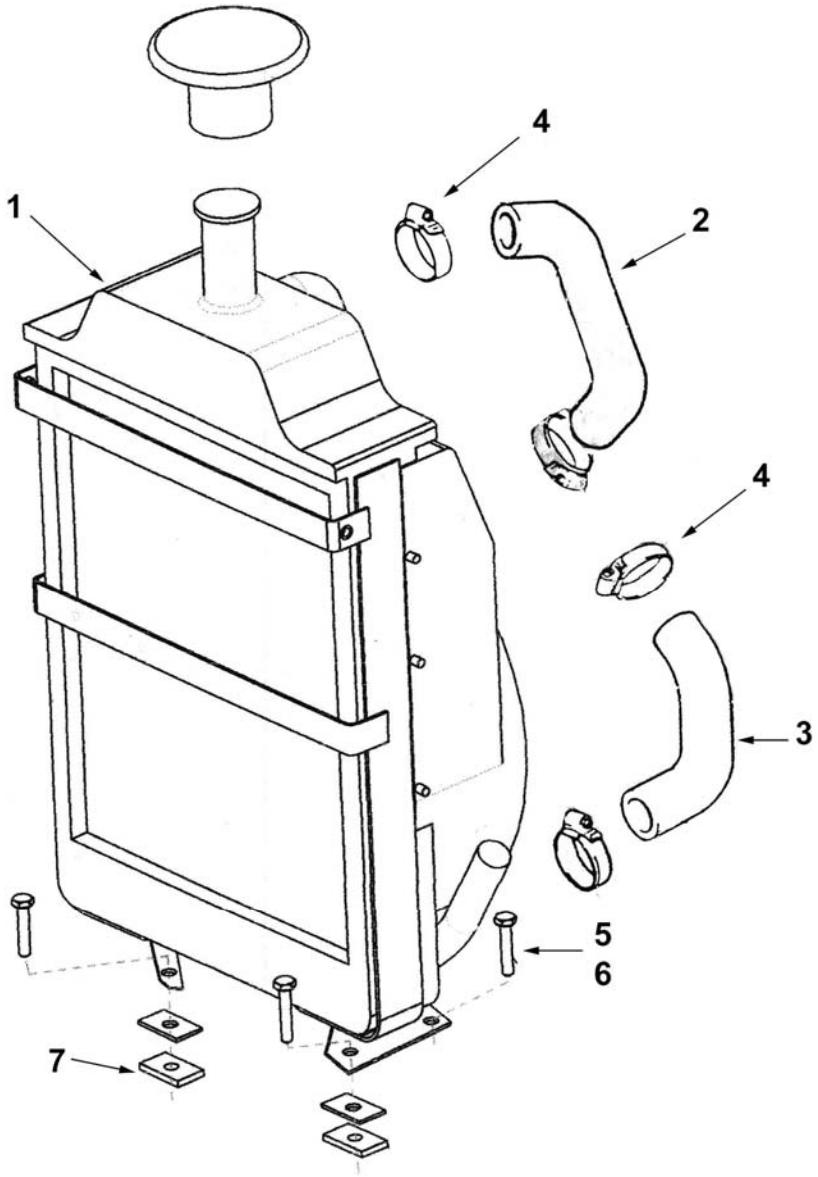


EMBLEM

Sl No	Part No.	Description	Qty
1	4257339M01	Emblem Hood LH(TAFE7502)	1
	2633C00201	Emblem Hood LH(TAFE8502)	1
2	4257340M01	Emblem Hood RH(TAFE7502)	1
	2633C00301	Emblem Hood RH(TAFE8502)	1
3	1933C00101	Plate Serial Number Plate(7502)	1
	2633C00101	Plate Serial Number Plate(8502)	1
4	0791214M01	Rivet	4
5	0715974M01	Sticker	1
6	0715678M01	Sticker Engine Oil Dipstick	1
7	0717035M01	Label Caution	1
8	0715679M01	Sticker Hand Brake	1
9	1867268M01	Decal Warming PTO	1
10	0715804M9360	Assy. Number Plate	1
11	0339 560 X01	Bolt Hex	2
11A.	0339 375 X01	Washer Lock	2
12	0717540M01	Label Battery Caution	1
13	4256151M01	Sticker Speed Chart	1
14	4257348M01	Decal Tractor Greasing	1
15	0509926M01	Label Caution	1

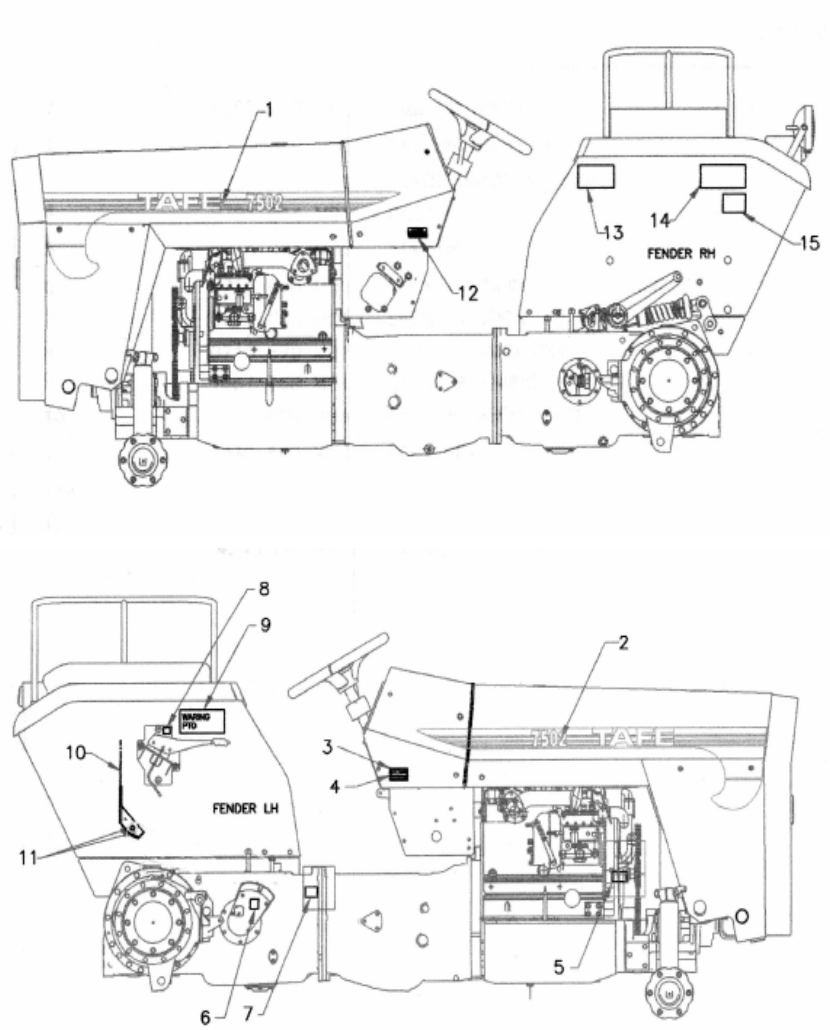


Sl No	Part No.	Description	Qty
N.I	4248659M01	Emblem	1
N.I	4256372M01	Sticker Side Panel RH-4WD	1
N.I	4256371M01	Sticker Side Panel LH-4WD	1

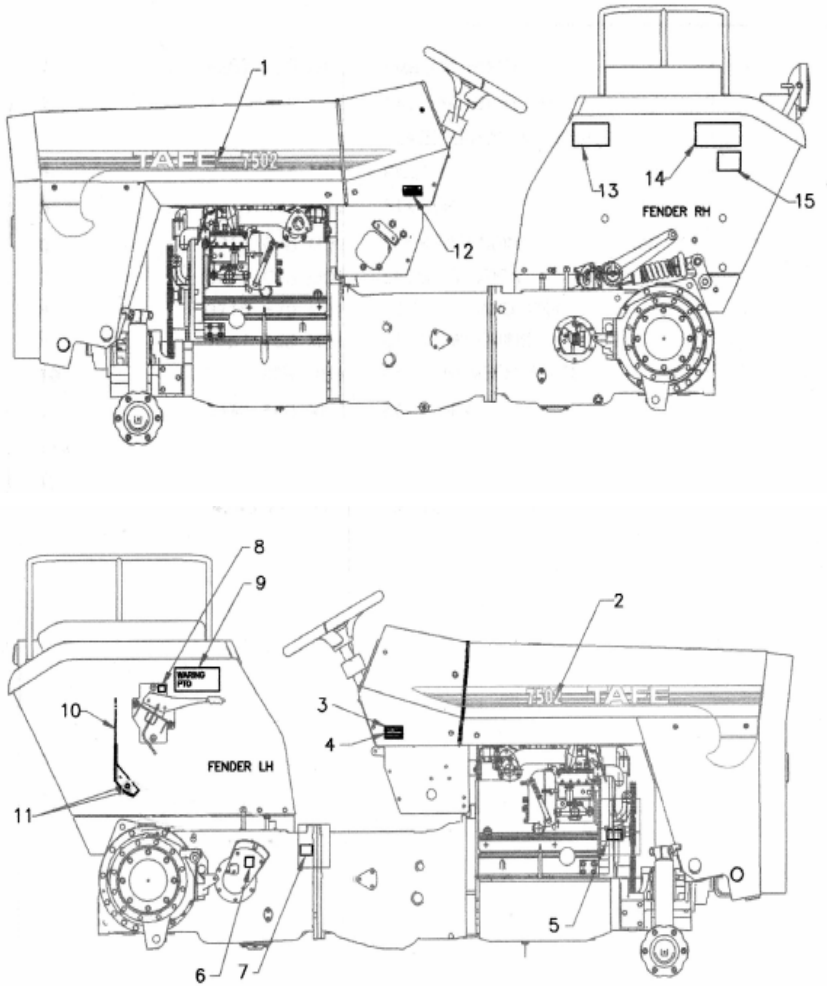


FENDER RH ASSEMBLY

Sl No	Part No.	Description	Qty
1	4257174M91	Assy Fender RH	1
	1934A01601	Fender – RH(with ROPS)	1
2	0719177M91	Assy. Rear Lamp RH	1
3	4246094M91	Assy. Side Lamp RH	1
4	4248082M91	Assy. Work Lamp	1
5	4257170M01	Extension Plate RH	1
	1934C01901	Extension Plate RH (with ROPS)	1
6	0339123X01	M8 Hex Bolt Length 20	4
7	0390972X01	Washer	4
8	0339374X01	Special Washer	4
9	0339169X01	M8 Hex Nut	4
10	0717675M91	Tool Box	1
11	3009492X01	Screw Hex (Ftf/1035/245)	2
12	0339376X01	Lock Washer	2
	0353755X01	Flat Washer	4
13	0339376X01	Hex Nut-M 10	2
14	4255532M91	RH Fender Harness	1
15	0392461X01	Fender Bolt (New)	2
16	3019575X01	Flat Washer	2

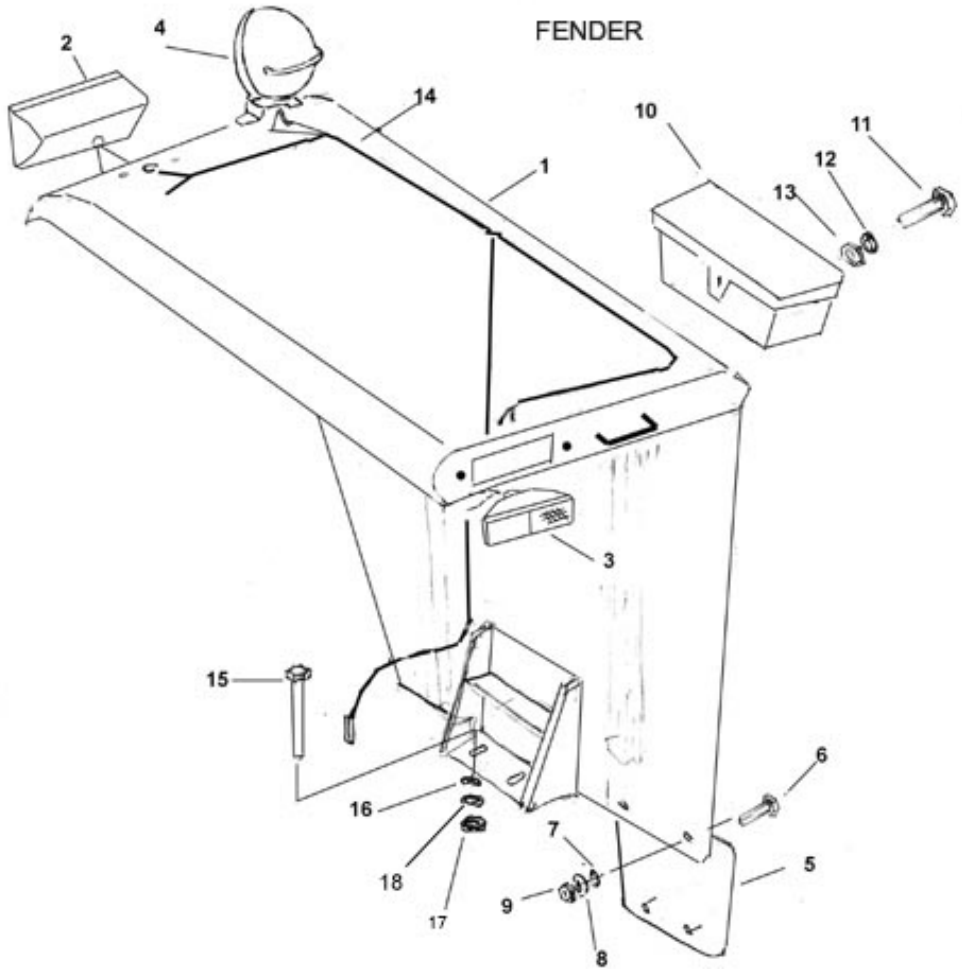


Sl No	Part No.	Description	Qty
17	0339034X01	Nut Hex	2
18	0339377X01	Spring Washer	2
NI	1425837M02	Handle-Grab	2
NI	0339123X01	M8 Hex Bolt Length 20	4
NI	0390972X01	Washer	4
NI	0339374X01	Special Washer	4
NI	4246142M9165	Assy. Guard - Rear Lamp	2
NI	4257129M01	Plug Fender	2

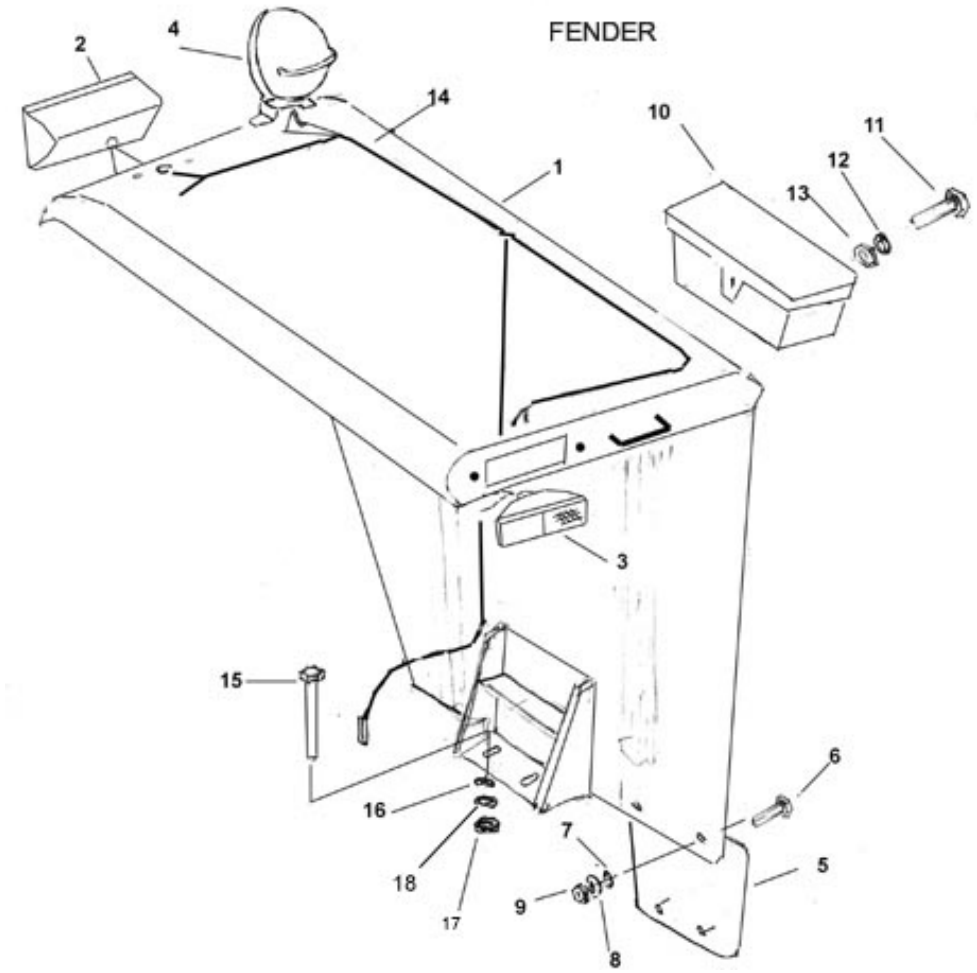


FENDER LH ASSEMBLY

Sl No	Part No.	Description	Qty
1	4257175M91	Assy. Fender LH	1
	1934A01501	Fender – LH(with ROPS)	1
2	0719119M91	Assy. Rear Lamp LH	1
3	4246095M91	Assy. Side Lamp LH	1
4	4257171M01	Extension Plate LH	1
	1934C02001	Extension Plate LH (with ROPS)	1
5	0339123X01	Screw - Hex	4
6	0390972X01	Washer Flat	4
7	0339374X01	Washer Lock	4
8	0339169X01	Nut - Hex	4
9	4255531M91	Assy. Fender Harness LH	1
10	0392461X01	Fender Bolt (New)	2
11	0339034X01	Nut Hex	2
12	3019575X01	Flat Washer	2
13	0339377X01	Spring Washer	2
NI	1425837M02	Handle-Grab	2
NI	0339123X01	M8 Hex Bolt Length 20	4
NI	0390972X01	Washer	4

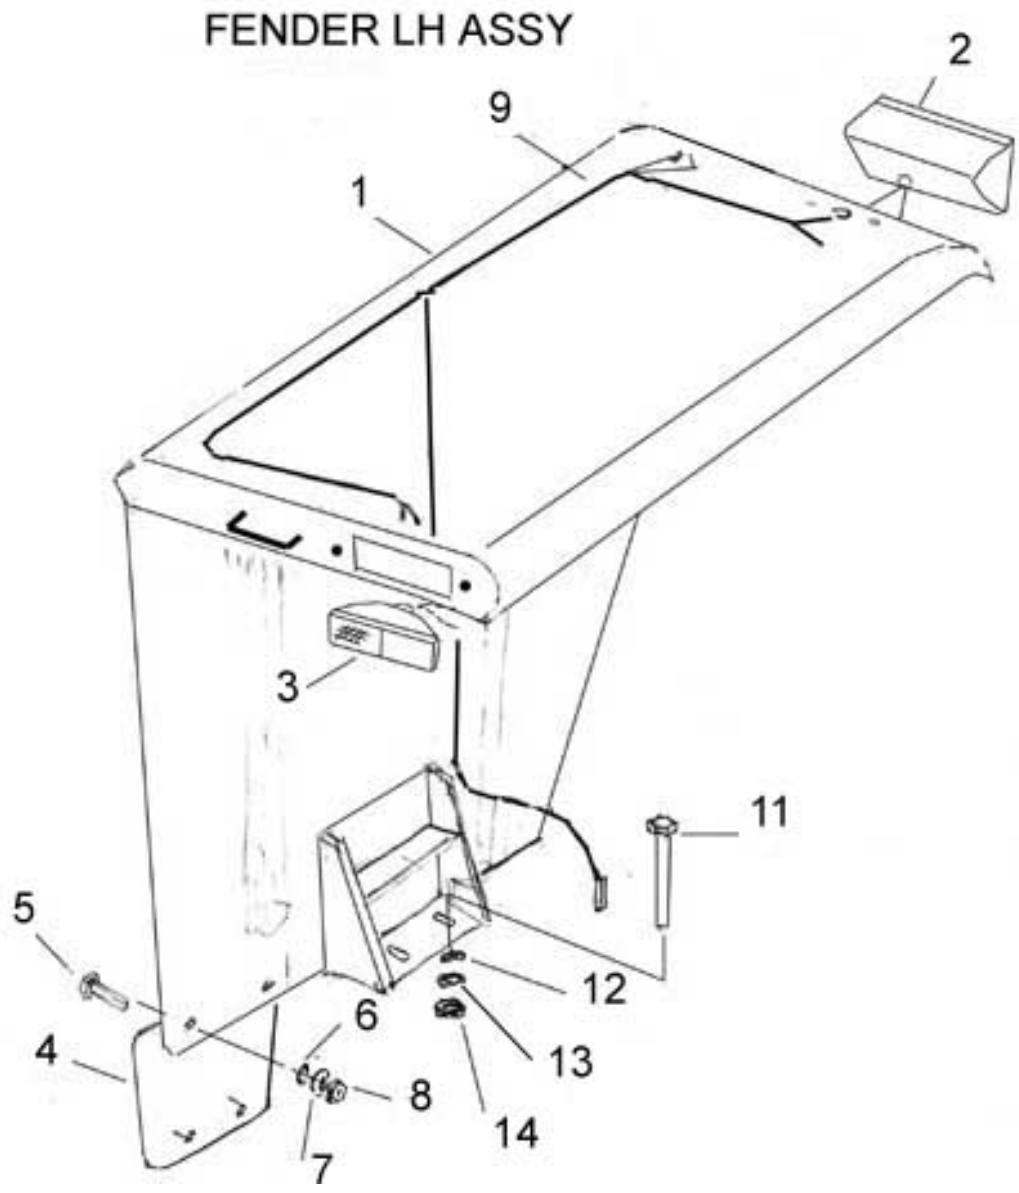

Sl No	Part No.	Description	Qty
NI	0339374X01	Special Washer	4
NI	4257129M01	Plug Fender	2
NI	4248501M01	Rubber Pad-Fender	3

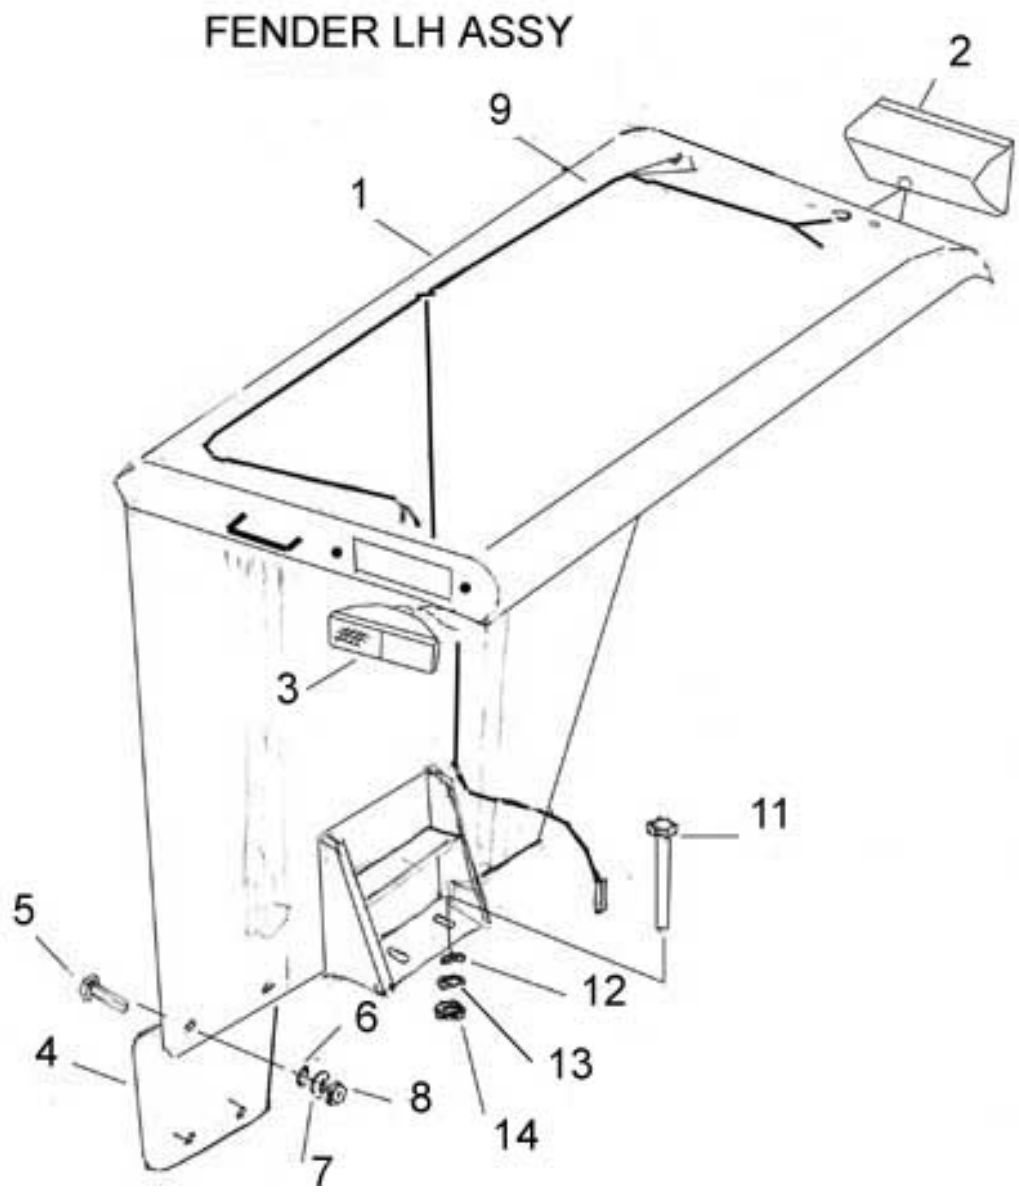

ROPS

Sl No	Part No.	Description	Qty
1	2289A00802	Rops Top Member Assy	1
2	2289A00302	Bottom Frame RH	1
3	2289A00202	Bottom Frame LH	1
4	1934A01301	Fender Mounting Bracket	2
5	1934C01901	Extension Plate RH	1
6	1934C02001	Extension Plate LH	1
7	3019903X01	Bolt	4
	3019575X01	Flat Washer	2
	0339377X01	Spring Washer	4
	3019871X01	Nut	4
8	2289A00703	Assy. Locking Pin	1
9	0391914X01	Bolt	1
	0390975X01	Flat Washer	1
	1442552X01	Nut Nyloc	1

