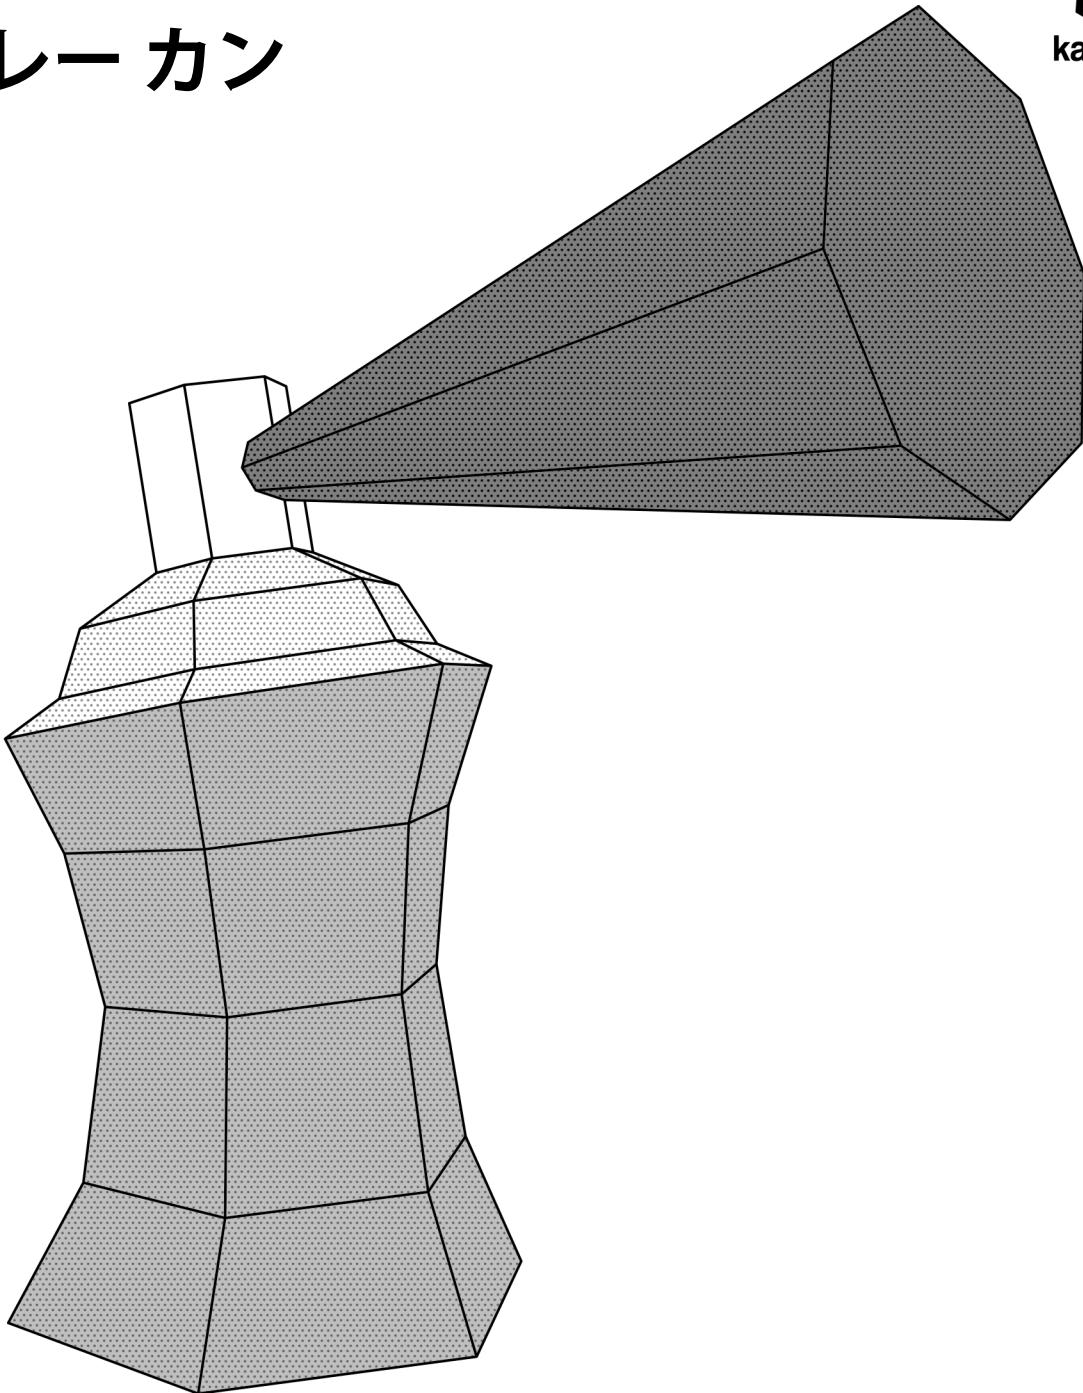


SPRAY CAN

スプレー カン



DIFFICULTY: Easy, ☺ ~3,5h

SIZE (LWH): 21x10x25cm / 8x4x10"

CONTENTS: 4 colored template sheets

TOOLS NEEDED: Non-drip paper glue,

craft knife, (metal) ruler, cutting mat,

paperclip or similar pointy object, 2 pins

ASSEMBLY INSTRUCTIONS

www.katokami.com/pdf/spraycan.pdf

Download and print the step-by-step instructions for this kit. Or use the QR-code to access the instructions directly on your tablet or phone.

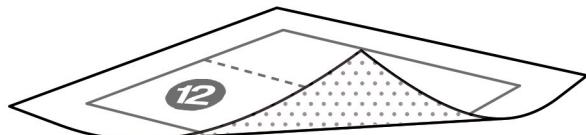


INSTRUCTION BASICS

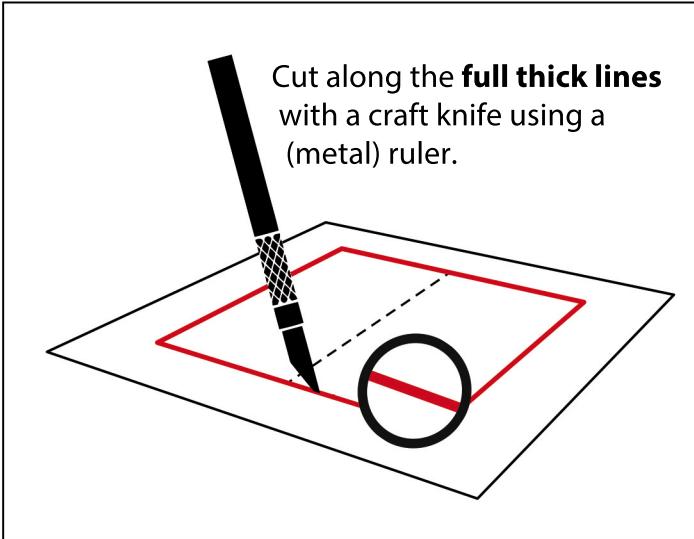
ファンダメンタルズ



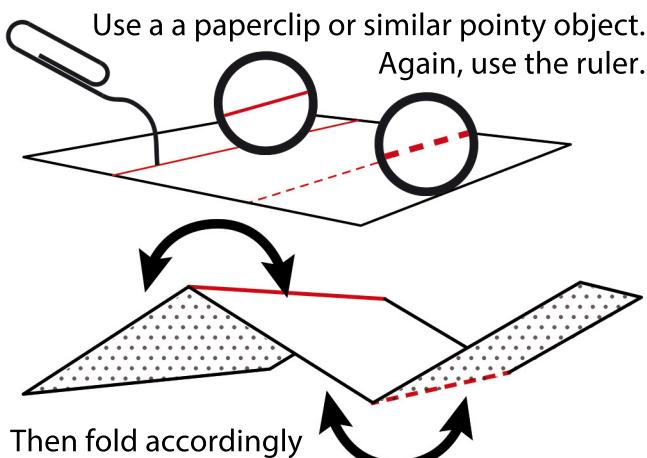
1. Take your time and work carefully.
2. Keep in mind that each sheet has two sides. Lines and part labels are printed on the **upside**. The **downside** is blank and represented by dots here.



3. Before applying glue, carefully cut and score each part as shown here on this page.
4. Use glue with care! Too much glue will squeeze out of the flaps, causing rage and madness.
5. It's good practice to spread glue evenly with a small, torn off piece of paper.

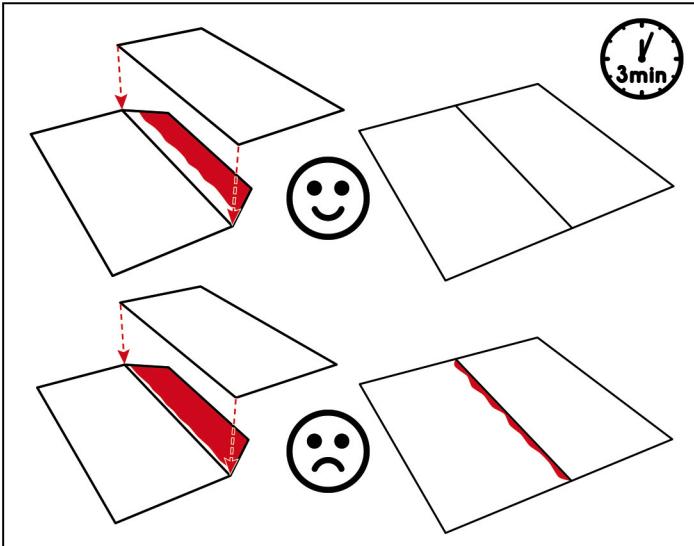
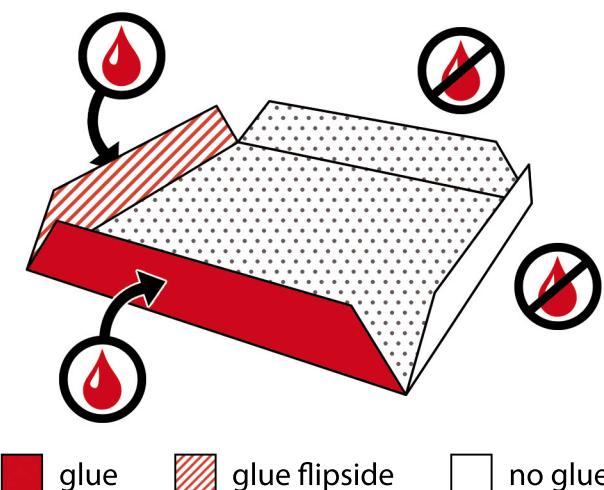
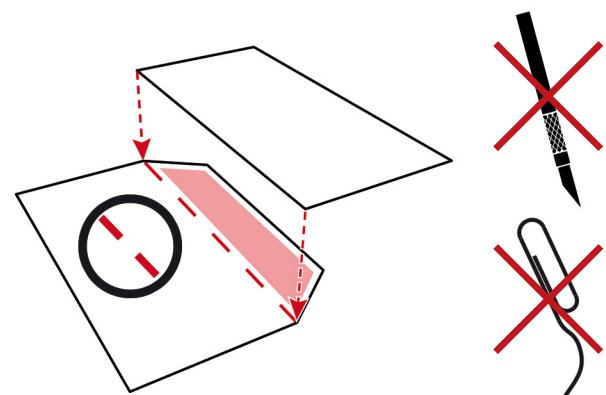


Score **full thin lines** and **small dashed lines**.



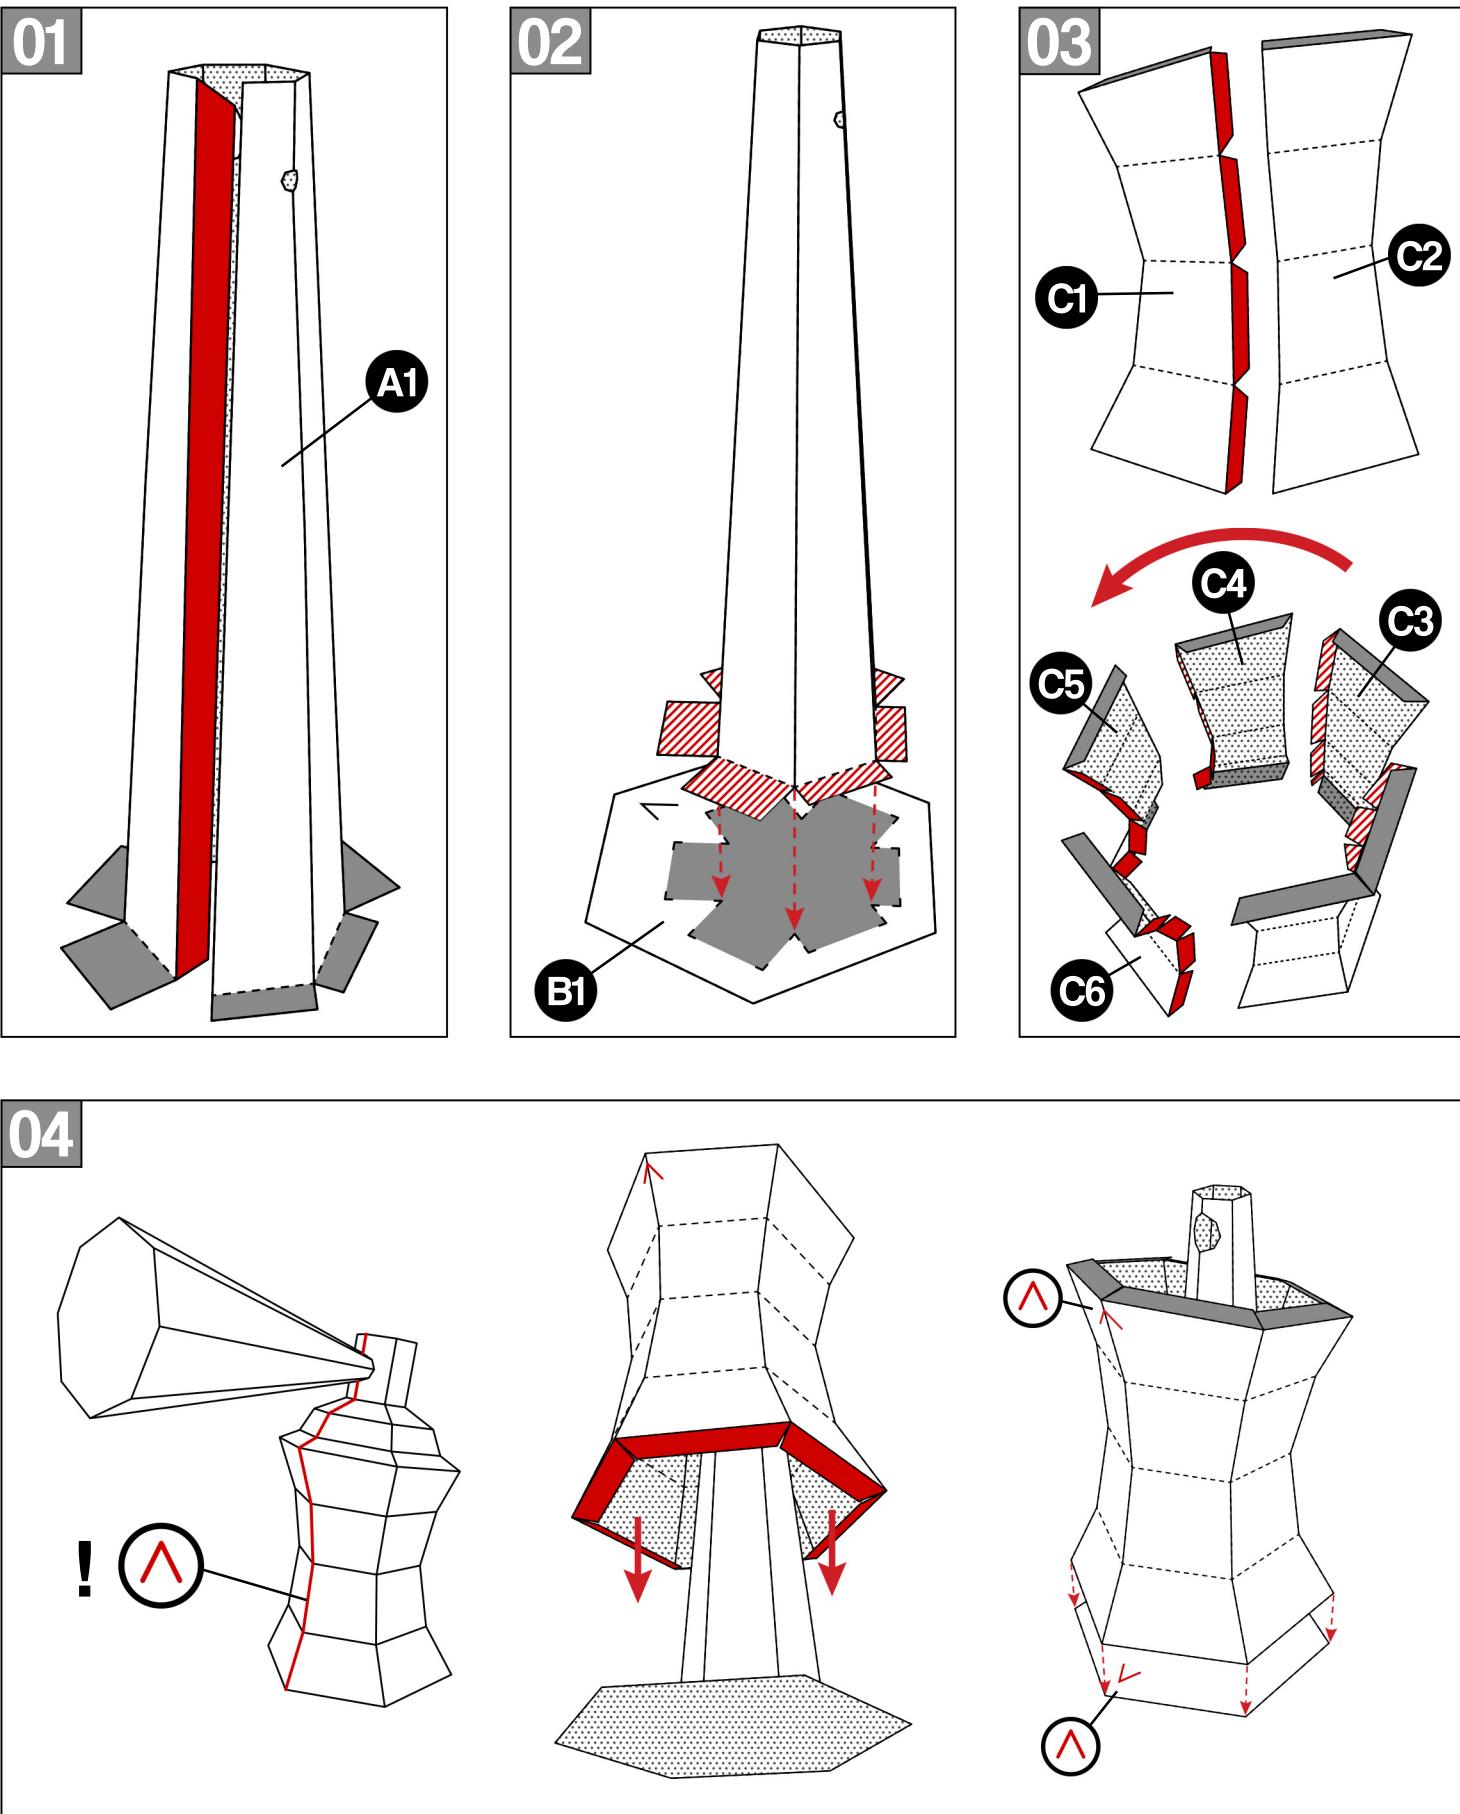
Then fold accordingly

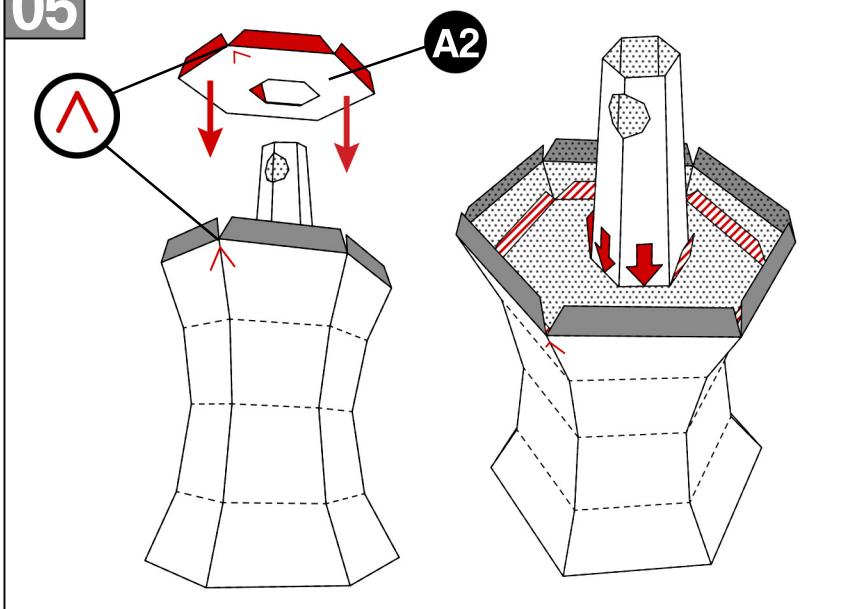
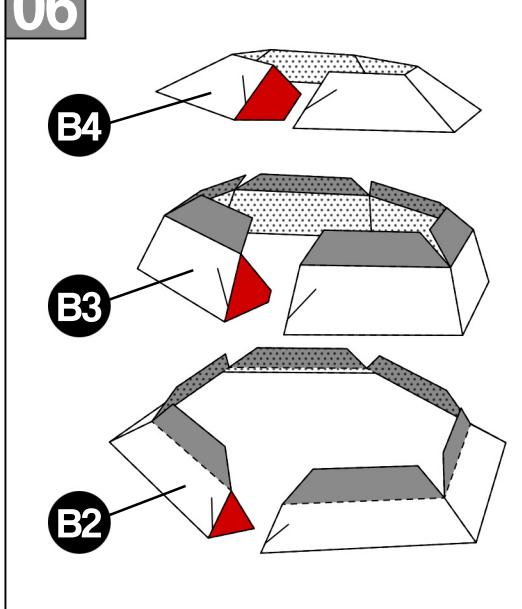
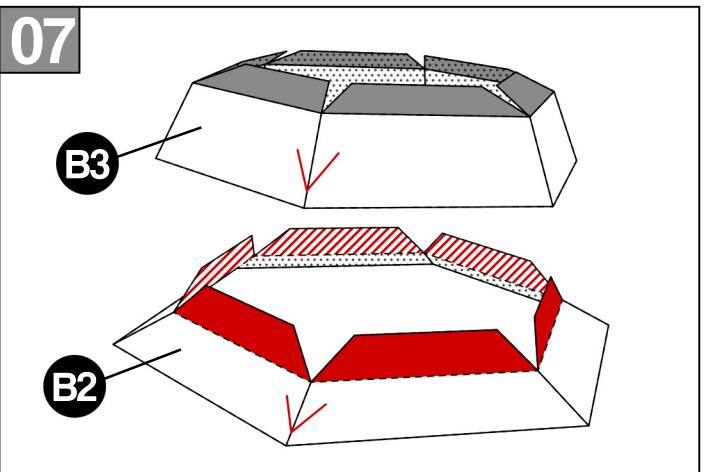
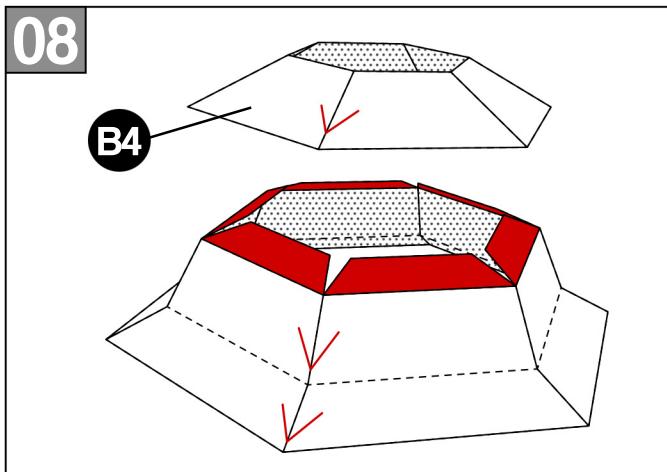
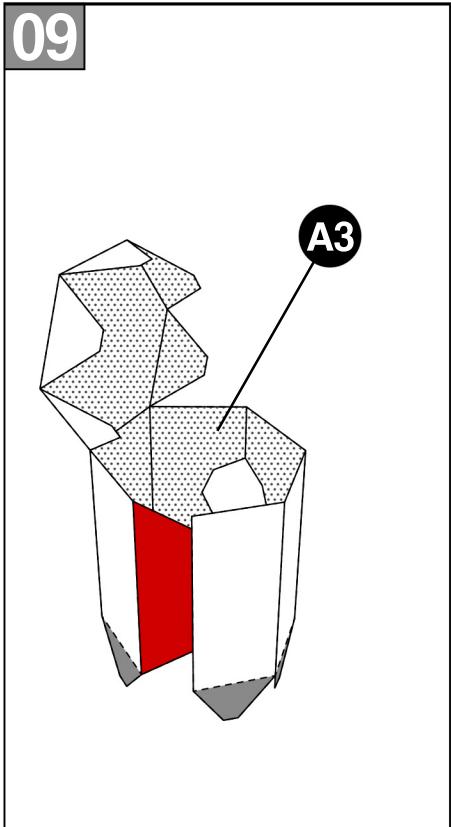
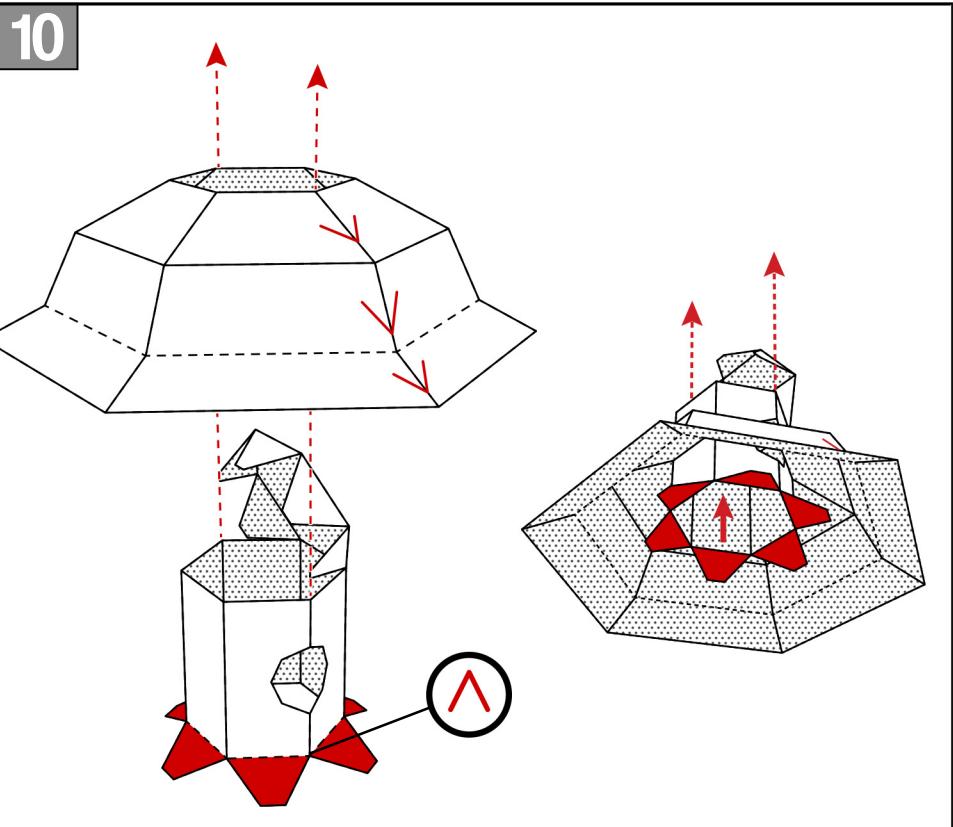
Large dashed lines tell you how to position parts when gluing. **Don't score or fold them!**

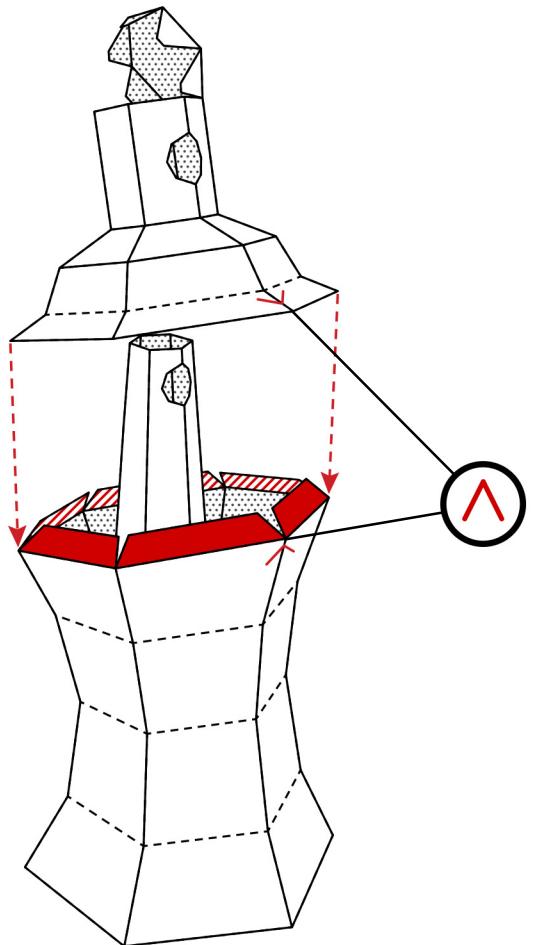
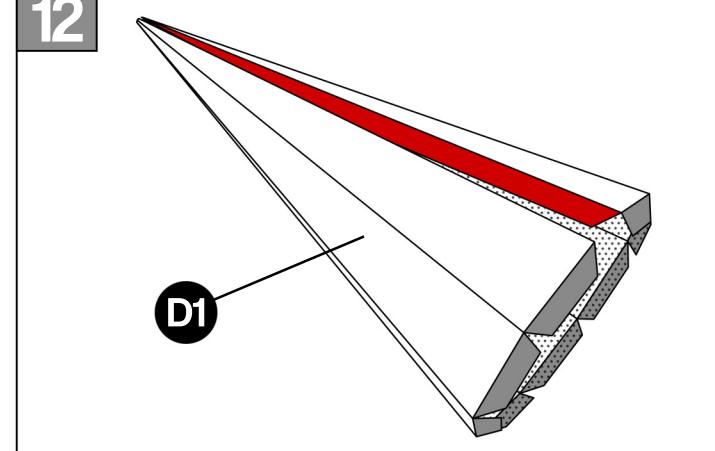
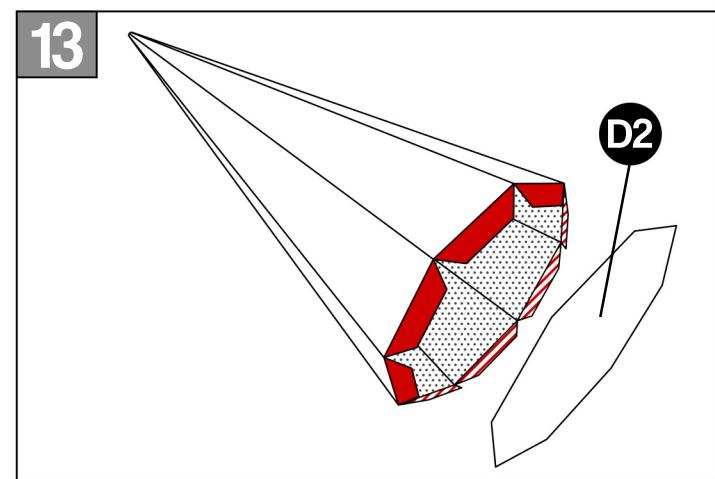
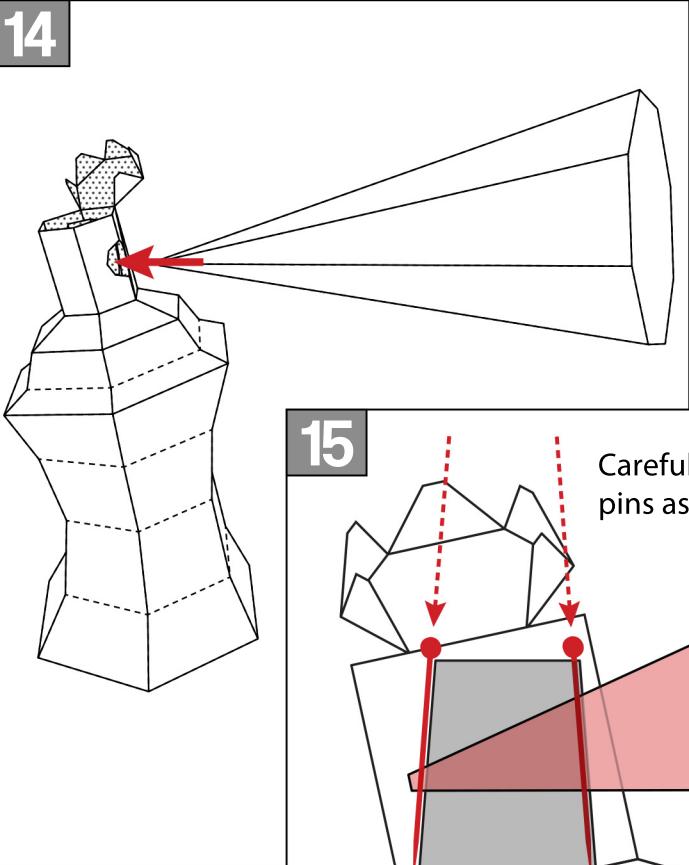


SPRAY CAN

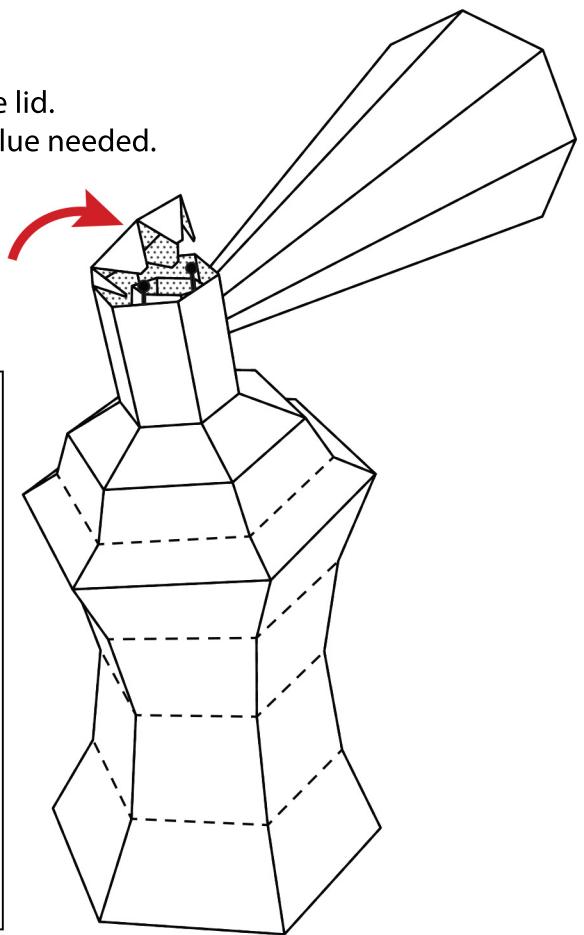
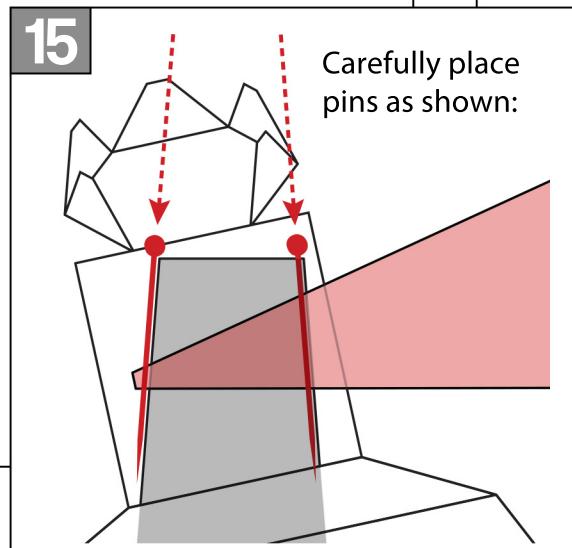
スプレー カン



05**06****07****08****09****10**

11**12****13****14****16**

Close lid.
No glue needed.

**15**

PARTS REFERENCE

