

AN1127: Power Amplifier Power Conversion Functions in RAIL 2.x

In many wireless applications, due to limitations imposed by the transmission protocol, law, or energy constraints, it is critical to know the power output of a given device. However, this issue is complicated by the fact that output characteristics may vary drastically even for a given chip, based on the board or module onto which the chip is mounted, due to poor impedance matching, or due to parasitics. This application note outlines how to account for the variation across custom boards and applications for the Silicon Labs EFR32 family of chips.

KEY POINTS

- Describes EFR32 Power Amplifiers and their management in RAIL.
- Provides instructions on generating custom curves for the default conversion functions.
- Offers an example of modifying the conversion functions.

1. Overview: EFR32 Power Amplifiers and RAIL

The EFR32 family of chips all come equipped with three Power Amplifiers (PAs):

- A high-power 2.4 GHz PA
- A low-power 2.4 GHz PA (for power 0 dBm and lower)
- A Sub-GHz PA

Each of these PAs has a unique number of discrete "power levels", which are simply abstractions of the different register settings that control the active PA. For each PA, the following power levels are available:

High-power 2.4 Ghz: 0-252Low-power 2.4 Ghz: 1-7

• Sub-GHz: 0-248

Although the number of power levels vary across PAs, for a given PA a higher power level generally indicates a higher dBm output power. It is important to realize, however, that a PA power level does not always correspond to the same dBm output power across boards and applications.

The power level of the active PA is controlled by the RAIL_GetTxPower and RAIL_SetTxPower APIs. RAIL_GetTxPowerDbm and RAIL_SetTxPowerDbm also allow users to interface with dBm output power values, but they are merely utility functions that combine calls to RAIL_ConvertRawToDbm, RAIL_ConvertDbmToRaw, RAIL_SetTxPower, and RAIL_GetTxPower. They add no new functionality or features on their own. See the RAIL documentation that comes with the Simplicity Studio SDK for more details.

Alhough these PA power levels add another layer of complexity to PA control, they give the user much more control to account for parasitics and impedance mismatch between the PA and a custom board. In RAIL 1.x, customers were only able to interface with PA output power in dBm and provide a linear offset, which was often not sufficiently robust to account for the complex PCB-to-PA interaction. Now, RAIL allows users to assign an exact dBm power to each of the PA power levels for their custom boards through the functions RAIL_ConvertDbmToRaw and RAIL_ConvertRawToDbm. Note that these functions convert between raw power levels and deci-dBm, or dBm * 10, to allow for higher precision dBm values. Though Silicon Labs provides a default implementation for these functions to do the conversion, the user can also override these functions with other algorithms, ranging from a highly precise but space-intensive 509-element lookup table for all possible PA-power level combinations, to less robust solutions such as a lookup table containing only a few power levels that correspond to the dBm output power levels of interest (see 3. Appendix: Alternative Methods to Convert between Power Levels and dBm Output Power for more information on creating custom conversion functions).

In the default conversion function implementation, Silicon Labs uses an 8-segment, piecewise linear curve fit of the mapping between PA power levels and dBm output powers to convert between these quantities. There is one curve for the high-power 2.4GHz PA, and another for the sub-GHz PA. For these two PAs, this method provides a good balance between accuracy across power levels, computational speed, and code size. The conversion for the low-power 2.4GHz, which has only seven possible values, is handled with a simple lookup table. The remainder of this application note focuses on how to generate the curve data (slopes and y-intercepts) for a custom application, similar to the default values currently found in pa_curves_efr32xg1x.h. In other words, it assumes that the existing methodologies found in RAIL_ConvertDbmToRaw and RAIL_ConvertRawToDbm are appropriate for your application and will not be overwritten, but that the parameters for these functions need to be adjusted for the custom board.

This application note is not intended for use with Silicon Labs' pre-certified Wireless SiP and PCB modules. The power amplifiers on these parts have been calibrated specifically to adhere to certain regulations. Trying to alter these calibrations in software will cause the RAIL library to assert and lock the chip, preventing further use until Silicon Labs' default libraries are restored.

In the following procedures, use the **railtest** and **pa_customer_curve_fits.py** script from RAIL 2.5 or higher in Flex SDK version 2.4.0 or higher, even if you are developing in an earlier Flex SDK 2.x version. There were improvements to the app and script that will subtly improve results. If you have already generated the CSV files from the procedure in section 2.1 High-Power 2.4 GHz PA and Sub-GHz PA, you can simply re-run the newer **pa_customer_curve_fits.py** on the existing CSVs. There is no need to re-generate the CSVs by running the sweep again.

2. Generating the Piecewise Linear Segment Data Used for Conversion

2.1 High-Power 2.4 GHz PA and Sub-GHz PA

The following steps explain how to generate the piecewise fit curves for the high-power 2.4GHz PA and sub-GHz PA. Please see section 2.2 Low-Power 2.4 GHz PA if you also intend to characterize that PA.

- 1. In Simplicity Studio, generate a RAILtest application configured with the desired PA, PA power source, and PA ramp time (specified through the Hardware Configurator). See AN1115: Configuring Peripherals for 32-Bit Devices in Simplicity Studio for more details on the configuration process. Build it, and flash the resulting binary to the chip mounted to the PCB you are trying to characterize.
- 2. Connect the RF output of the board (U.FL test connector, SMA connector, or similar, with antenna disconnected from the RF path) to the input of a spectrum analyzer. The spectrum analyzer should be in dBm peak detection mode to sense values between approximately -30 to 20 dBm and centered on the base frequency/channel for your PHY and channel combination. Make sure to account for any cable / adapter loss in your measurements.
- 3. Connect to the RAILtest CLI and enter the command sweepTxPower. For more information on RAILtest functionality and the CLI interface, see *Using RAILTest* in the Simplicity Studio Flex SDK RAIL documents group (RailTestUserGuide.html).
- 4. Your chip should begin a CW tone at power level 1. Record the dBm power measured on the spectrum analyzer in the appropriate position of either SubgigPowerMapping.csv or 2p4PowerMapping.csv, depending on the configured PA. These files are in the / platform/radio/rail_lib/chip/efr32/efr32xg1x/characterization folder of the SDK installation. Note that for each row, the format is POWER_LEVEL,ACTUAL_DBM_OUTPUT>. Modify the <actual_DBM_OUTPUT>. Unlike the conversion functions RAIL_GetTxPowerDbm and RAIL_SetTxPowerDbm, which use deci-dBm values, values in these csv files should be specified in dBm.
- 5. Repeat step 4 for all power levels. Press enter in the RAILtest CLI to progress to the next power level.
- 6. From a terminal prompt, run the <code>pa_customer_curve_fits.py</code> script (in /platform/radio/rail_lib/tools), with the <code>python pa_customer_curve_fits.py</code> <CSV_FILE>. If you don't already have them installed, you will need to install the <code>numpy</code> and <code>pylab</code> python libraries. Running the commands <code>pip install numpy</code> and <code>pip install matplotlab</code> will install those libraries in the appropriate directories on your machine to be accessible by python. The following figure shows an example of an intended result, after the <code>pa_customer_curve_fits.py</code> script has been run on the <code>2p4PowerMapping.csv</code> file from a terminal prompt.

Figure 2.1. pa customer curve fits.py Script Results

7. If using both high-power 2.4GHz and sub-GHz, repeat steps 1-6 for the PA you did not characterize previously.

8. Create a copy of pa_curves_efr32xg1x.h, and copy the terminal output from the python script under the appropriate macro. Note that there is one RAIL_PA_CURVES_... define for each combination of PA and PA power source, in other words four in total. You do not need to copy data for a PA/PA power supply ("..._VBAT_..." or "..._DCDC_...") combination that is not being used. Additionally, update the ..._MIN_POWER and ..._MAX_POWER macros to reflect the values you observed. The following figure shows an example of the copying process, where the values from the previous figure have been copied into the appropriate (Sub-GHz and 2.4 GHz, battery-powered) macros in a new CUSTOM_pa_curves_efr32xg1x.h file. Some of the ...MIN_POWER and ..._MAX_POWER macros have been updated.

```
__FA_CURVES_EFR32_H_
__PA_CURVES_EFR32_H_
38

39

40

41

42

44

45

46

47

48

49

51

52

53

54

55

56

66

67

67

67

77

77

74
                                RAIL_PA_CURVES_LP_VALUES 7
RAIL_PA_CURVES_2P4_HP_SG_PIECEWISE_SEGMENTS 8
                                 RAIL_PA_CURVES_2P4_HP_VBAT_MAX_POWER
                                RAIL_PA_CURVES_2P4_HP_VBAT_MIN_PO
RAIL_PA_CURVES_2P4_HP_VBAT_CURVES
                     { 248, 2761, -301724 }, { 157, 1359, -81052 },
                          116, 760, -11171 }, 73, 416, 14056 }, 51, 329, 18564 },
                          18, 209, 18160 }
8, 116, 14132 },
4, 75, 10593 } }
                              RAIL_PA_CURVES_2P4_HP_DCDC_MAX_POWER
RAIL_PA_CURVES_2P4_HP_DCDC_MIN_POWER
RAIL_PA_CURVES_2P4_HP_DCDC_CURVES \
                  fine RAIL_PA_co.

{ -1, 0, 0 },
 { 252, 4306, -391604 },
 { 129, 1435, -52495 },
 { 80, 610, 13579 },
 { 38, 331, 24456 },
 -224, 23902 },
                          24, 224, 23902 },
14, 140, 20330 },
8, 81, 15607 } }
                                RAIL_PA_CURVES_SG_VBAT_MAX_POWER
RAIL_PA_CURVES_SG_VBAT_MIN_POWER
                                                                                                                                                 200
-260
                                 RAIL_PA_CURVES
                    { 248, 2761, -301724 }, { 157, 1359, -81052 }, { 116, 760, -11171 }, { 73, 416, 14056 }, { 51, 329, 18564 },
                                     209, 18160 },
116, 14132 },
                                  116, 14132 },
75, 10593 } }
```

Figure 2.2. Terminal Output Copied into a Custom pa_curves_efr32xg1x.h File

9. Update the hardware config HAL_PA_CURVE_HEADER header to point to your new file. The following figure illustrates where to update the header.

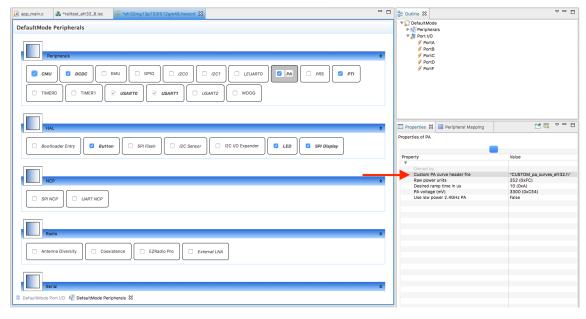


Figure 2.3. Updating the Custom PA Curve Header File Name in Simplicity Studio

10. For customers using only one or two of the available PAs, Silicon Labs recommends removing references to these functions from pa_conversions_efr32.c and from the RAIL_DECLARE_TX_POWER macros in your new version of pa_curves_efr32xg1x.h. Although not strictly necessarily, doing this can save substantial code size versus compiling in useless data for a PA that is never engaged.

2.2 Low-Power 2.4 GHz PA

Since it only has seven power levels, the low-power 2.4 GHz PA uses a simple array lookup table, as opposed to a piecewise linear curve fit. Create a copy of **pa_curves_efr32xg1x.h.** Follow steps 1-5 in the previous section, but for step 4, place the results directly into the RAIL_PA_CURVES_2P4_LP macro of the custom **pa_curves_efr32xg1x.h** file. These values should be entered as deci-dBm (for example. enter -100 to indicate -10 dBm). The following two figures contain an example of this process.

```
sweepTxPower{{(sweepTxPower)}{Sweeping:Started}{Instructions:'q' to quit or 'enter' to continue.}}
{{(sweepTxPower)}{PowerLevel:1}}
{{(sweepTxPower)}{PowerLevel:2}}
{{(sweepTxPower)}{PowerLevel:3}}
```

Figure 2.4. Running RAILtest's sweepTxPower Command

```
CUSTOM_pa_curves_efr32.h ×

#define RAIL_PA_CURVES_2P4_LP \
{
    -120, /*! Power Level 1 */ \
    -70, /*! Power Level 2 */ \
    -25, /*! Power Level 3 */ \
    -15, /*! Power Level 4 */ \
    -7, /*! Power Level 5 */ \
    -2, /*! Power Level 6 */ \
    0 /*! Power Level 7 */ \
}
```

Figure 2.5. Updating the deci-dBm Output Powers in the 2.4 GHz low-power PA Lookup Table

3. Appendix: Alternative Methods to Convert between Power Levels and dBm Output Power

For your application, having highly granular dBm output levels may not be necessary. Therefore, it may make sense to overwrite the RAIL_ConvertRawToDbm and RAIL_ConvertRawToDbm functions that Silicon Labs provides. This example demonstrates how to simplify those functions to return only a few values of interest. Doing this would also allow you to remove calls to the RAIL_InitTxPowerCurves function and RAIL_DECLARE_TX_POWER_XXXX_CURVES macro. Removing these dependencies on the piecewise linear curve fits allows you to reduce application code size significantly. In this example, the functions are meant to work with common dBm values, such as 20, 13, 3, 0 and -10 (200, 130, 30, 0 and -100 deci-dBm, respectively).

```
RAIL_TxPowerLevel_t RAIL_ConvertDbmToRaw(RAIL_Handle_t railHandle,
                                          RAIL_TxPowerMode_t mode,
                                          RAIL_TxPower_t power)
  // Anything above this power is likely still an error, so it
  // should return an invalid value
  if (power >= RAIL_TX_POWER_MAX) {
    return RAIL_TX_POWER_LEVEL_INVALID;
  if (mode == RAIL_TX_POWER_MODE_2P4_LP) {
    if (power >= 0) {
     return RAIL_TX_POWER_LEVEL_LP_MAX;
    } else if (power >= -100) {
     return 2;
     else {
      return 1;
  }
  if (mode == RAIL_TX_POWER_MODE_2P4_HP) {
    if (power >= 200) {
      return RAIL_TX_POWER_LEVEL_HP_MAX;
    } else if (power >= 130) {
     return 93;
    } else if (power >= 30) {
     return 33;
    } else if (power >= 0) {
      return 22;
    } else if (power >= -100) {
     return 7;
    } else {
      return 1;
  if (mode == RAIL_TX_POWER_MODE_SUBGIG) {
    if (power >= 200) {
      return RAIL_TX_POWER_LEVEL_SUBGIG_MAX;
    } else if (power >= 130) {
      return 86;
    } else if (power >= 30) {
     return 26;
    } else if (power >= 0) {
     return 18;
    } else if (power >= -100) {
      return 6;
     else {
      return 1;
  // return an error value if no PA is initialized
  return RAIL_TX_POWER_MIN;
RAIL_TxPower_t RAIL_ConvertRawToDbm(RAIL_Handle_t railHandle,
                                    RAIL_TxPowerMode_t mode,
                                    RAIL_TxPowerLevel_t powerLevel)
  if (mode == RAIL_TX_POWER_MODE_2P4_LP) {
```

```
if (powerLevel >= RAIL_TX_POWER_LEVEL_LP_MAX) {
   return 0;
  } else if (powerLevel >= 2) {
   return -100;
  } else {
    return 1;
}
if (mode == RAIL_TX_POWER_MODE_2P4_HP) {
  if (powerLevel >= RAIL_TX_POWER_LEVEL_HP_MAX) {
    return 200;
  } else if (powerLevel >= 93) {
   return 130;
  } else if (powerLevel >= 33) {
   return 30;
  } else if (powerLevel >=22) {
   return 0;
  } else if (powerLevel >= -7) {
   return -100;
  } else {
   return -250;
if (mode == RAIL_TX_POWER_MODE_SUBGIG) {
  if (powerLevel >= RAIL_TX_POWER_LEVEL_SUBGIG_MAX) {
   return 200;
  } else if (powerLevel >= 86) {
   return 130;
  } else if (powerLevel >= 26) {
   return 30;
  } else if (powerLevel >= 18) {
   return 0;
  } else if (powerLevel >= 6) {
   return -100;
  } else {
    return 1;
// return an error value if no PA is initialized
return RAIL_TX_POWER_MIN;
```





Products www.silabs.com/products



Quality <u>www.silabs.com/quality</u>



Support and Community community.silabs.com

Disclaimer

Silicon Labs intends to provide customers with the latest, accurate, and in-depth documentation of all peripherals and modules available for system and software implementers using or intending to use the Silicon Labs products. Characterization data, available modules and peripherals, memory sizes and memory addresses refer to each specific device, and "Typical" parameters provided can and do vary in different applications. Application examples described herein are for illustrative purposes only. Silicon Labs reserves the right to make changes without further notice and limitation to product information, specifications, and descriptions herein, and does not give warranties as to the accuracy or completeness of the included information. Silicon Labs shall have no liability for the consequences of use of the information supplied herein. This document does not imply or express copyright licenses granted hereunder to design or fabricate any integrated circuits. The products are not designed or authorized to be used within any Life Support System without the specific written consent of Silicon Labs. A "Life Support System" is any product or system intended to support or sustain life and/or health, which, if it fails, can be reasonably expected to result in significant personal injury or death. Silicon Labs products are not designed or authorized for military applications. Silicon Labs products shall under no circumstances be used in weapons of mass destruction including (but not limited to) nuclear, biological or chemical weapons, or missiles capable of delivering such weapons.

Trademark Information

Silicon Laboratories Inc.®, Silicon Laboratories®, Silicon Labs®, SiLabs® and the Silicon Labs logo®, Bluegiga®, Bluegiga Logo®, Clockbuilder®, CMEMS®, DSPLL®, EFM®, EFM32®, EFR, Ember®, Energy Micro, Energy Micro logo and combinations thereof, "the world's most energy friendly microcontrollers", Ember®, EZLink®, EZRadio®, EZRadio®, EZRadio®, EZRadio®, Gecko®, ISOmodem®, Micrium, Precision32®, ProSLIC®, Simplicity Studio®, SiPHY®, Telegesis, the Telegesis Logo®, USBXpress®, Zentri, Z-Wave and others are trademarks or registered trademarks of Silicon Labs. ARM, CORTEX, Cortex-M3 and THUMB are trademarks or registered trademarks of ARM Holdings. Keil is a registered trademark of ARM Limited. All other products or brand names mentioned herein are trademarks of their respective holders.



Silicon Laboratories Inc. 400 West Cesar Chavez Austin, TX 78701 USA