

UG235.05: Using Micrium OS (RTOS) with Silicon Labs Connect

This chapter of the *Connect User's Guide* describes how to run the Silicon Labs Connect stack on top of the Micrium OS kernel, a full-featured real-time operating system (RTOS) for embedded systems. The Connect stack is delivered as part of the Silicon Labs Flex SDK. The *Connect User's Guide* assumes that you have already installed the Simplicity Studio development environment and the Flex SDK, and that you are familiar with the basics of configuring, compiling, and flashing Connect-based applications. Refer to *UG235.01: Developing Code with Silicon Labs Connect* for an overview of the chapters in the *Connect User's Guide*.

The Connect User's Guide is a series of documents that provides in-depth information for developers who are using the Silicon Labs Connect Stack for their application development. If you are new to Connect and the Flex SDK, see QSG138: Getting Started with the Silicon Labs Flex Software Development Kit for the Wireless Gecko (EFR32™) Portfolio.

Connect is supported for EFR32FG, EFR32MG1x, and EFR32BG1x.

KEY POINTS

- Introduces Micrium OS support.
- Discusses the Micrium RTOS plugin features.
- Describes the Virtual NCP architecture details

1 Introduction

The Silicon Labs Connect support for Micrium is integrated into the Silicon Labs Application Builder (AppBuilder) utility in Simplicity Studio. To enable this support requires very little effort on the part of application developers. For documentation on the Micrium OS, see http://doc.micrium.com.

2 Getting Started

Any Connect application can be easily turned into an application running on Micrium OS by simply enabling the **Micrium RTOS** plugin as shown in Figure 2-1.

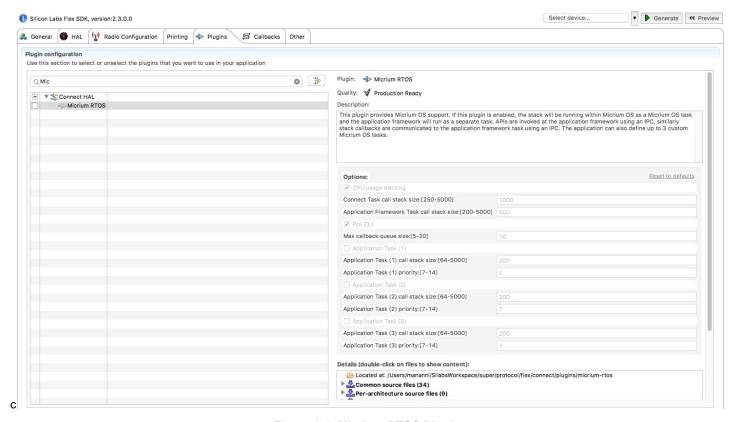


Figure 2-1. Micrium RTOS Plugin

The Micrium RTOS plugin has the following plugin options that allow application developers to customize certain settings:

- CPU usage tracking: If enabled, the Application Framework compiles in some additional code that allows certain debug tools to have extended debug information from the OS.
- Connect Task call stack size: The size in bytes of the call stack used by the stack task.
- Application Framework Task call stack size: The size in bytes of the call stack used by the Application Framework task.
- **Poll CLI:** If enabled, the application framework task (which is responsible for processing the incoming serial CLI commands) is allowed to yield only for small periods of time. This results in a more responsive CLI user experience.
- Max callback queue size: Defines the maximum supported number of simultaneous callback messages from the stack task to the application tasks.
- **Application Task (N)**: Application developers can also optionally enable up to three custom application tasks. For each of these tasks, application developers can specify the call stack size and the priority.
 - **Note:** Although the allowed priority range is nominally 7-14, each custom application task must be assigned a lower priority than both the stack task and the Application Framework task.

3 Virtual NCP Architecture Details

With the Micrium RTOS plugin enabled, the Connect stack runs within a Micrium Task while the Application Framework code runs within a separate Micrium Task. This two-task model is also known as the **virtual Network Co-Processor** architecture (**vNCP**) because the processing and communication between the two tasks is the same as for the host/NCP architecture. The difference is that instead of running on separate processors and passing messages to each other through the serial port, the application and NCP run on the same processor but in different Micrium tasks. Message passing is handled using Micrium message queues or protected global data structures and is transparent to the application.

By enabling the Micrium RTOS plugin, the Micrium kernel code is added to the project. The plugin code automatically starts all the OS tasks used in the configuration. At a minimum, two tasks are created:

- A Connect stack task (highest priority task) responsible for running the Connect stack. This task is responsible for the following
 operations:
 - Periodically tick the Connect stack by invoking the emberTick () API.
 - Process incoming IPC (inter-process communication) commands from application tasks (if any) and send out a response.
 - Send callback IPC commands (if any) to the application tasks.
 - Attempt whenever possible to suspend itself to allow lower priority application tasks to run.
- An Application Framework task responsible for running the Application Framework code. This task is responsible for the following operations:
 - Periodically tick the application framework plugins (for those that implement a tick callback). This includes, for instance, the processing of incoming CLI commands.
 - Run application events.
 - Process incoming callback IPC commands (if any) from the stack task.
 - Attempt whenever possible to suspend itself to allow lower priority custom application tasks to run.

The Micrium RTOS plugin also supports the creation of up to three custom application tasks. The custom application tasks must have a lower priority than both the Connect stack task and the Application Framework task. Each of these custom application tasks is started automatically, and should implement the following two callbacks:

- emberAfPluginMicriumRtosAppTaskNInitCallback (void) This callback is invoked at initialization time to allow
 the Nth custom application task to execute some initialization code.
- emberAfPluginMicriumRtosAppTaskNMainLoopCallback(void *p_arg) This callback shall contain the Nth task main loop.

Custom application tasks can call stack APIs freely because the underlying IPC protocol ensures that all stack APIs are thread-safe.

Note: As of Flex SDK 2.4, Connect does not support writing tokens from the Application Framework task. Silicon Labs intends to restore this functionality in an upcoming release. For more information on tokens, see *UG235.09*: *Using Other Services with Silicon Labs Connect*.





IoT Portfolio
www.silabs.com/loT



SW/HW <u>www.sila</u>bs.com/simplicity



Quality www.silabs.com/quality



Support and Community community.silabs.com

Disclaimer

Silicon Labs intends to provide customers with the latest, accurate, and in-depth documentation of all peripherals and modules available for system and software implementers using or intending to use the Silicon Labs products. Characterization data, available modules and peripherals, memory sizes and memory addresses refer to each specific device, and "Typical" parameters provided can and do vary in different applications. Application examples described herein are for illustrative purposes only. Silicon Labs reserves the right to make changes without further notice to the product information, specifications, and descriptions herein, and does not give warranties as to the accuracy or completeness of the included information. Without prior notification, Silicon Labs may update product firmware during the manufacturing process for security or reliability reasons. Such changes will not alter the specifications or the performance of the product. Silicon Labs shall have no liability for the consequences of use of the information supplied in this document. This document does not imply or expressly grant any license to design or fabricate any integrated circuits. The products are not designed or authorized to be used within any FDA Class III devices, applications for which FDA premarket approval is required or Life Support Systems without the specific written consent of Silicon Labs. A "Life Support System" is any product or system intended to support or sustain life and/or health, which, if it fails, can be reasonably expected to result in significant personal injury or death. Silicon Labs products are not designed or authorized for military applications. Silicon Labs products shall under no circumstances be used in weapons of mass destruction including (but not limited to) nuclear, biological or chemical weapons, or missiles capable of delivering such weapons. Silicon Labs disclaims all express and implied warranties and shall not be responsible or liable for any injuries or damages related to use of a Silicon Labs p

Trademark Information

Silicon Laboratories Inc.®, Silicon Laboratories®, Silicon Labs®, Silabs® and the Silicon Labs logo®, Bluegiga®, Bluegiga Logo®, Clockbuilder®, CMEMS®, DSPLL®, EFM®, EFM32®, EFR, Ember®, Energy Micro, Energy Micro, Energy Micro logo and combinations thereof, "the world's most energy friendly microcontrollers", Ember®, EZLink®, EZRadio®, EZRadioPRO®, Gecko®, ISOmodem®, Precision32®, ProSLIC®, Simplicity Studio®, SiPHY®, Telegesis, the Telegesis Logo®, USBXpress® and others are trademarks or registered trademarks of Silicon Labs. ARM, CORTEX, Cortex-M3 and THUMB are trademarks or registered trademarks of ARM Holdings. Keil is a registered trademark of ARM Limited. All other products or brand names mentioned herein are trademarks of their respective holders.



Silicon Laboratories Inc. 400 West Cesar Chavez Austin, TX 78701