बहु-विषयक क्षेत्रीय रेल प्रशिक्षण संस्थान ,
धनबाद (भूली)

MULTI-DISCIPLINARY ZONAL RAILWAY
TRAINING INSTITUTE, DHANBAD (Bhuli)

# PROLONG FAILURE OF AUTOMATIC SIGNAL AND COMMUNICATION NOT AVAILABLE

## (AS PER USR – 9.12/2(B))

# PROLONG FAILURE OF AUTOMATIC SIGNAL AND COMMUNICATION NOT AVAILABLE

**In the event of failure of all signals occurring in an area consisting of two or more station worked under Automatic Block System and when train cannot be worked by taking line clear by any one of the following means:-**


1. *Track circuit and Axle counter where indication of the section between two stations is available on VDU panel.*



TRACK CIRCUIT



AXLE COUNTER

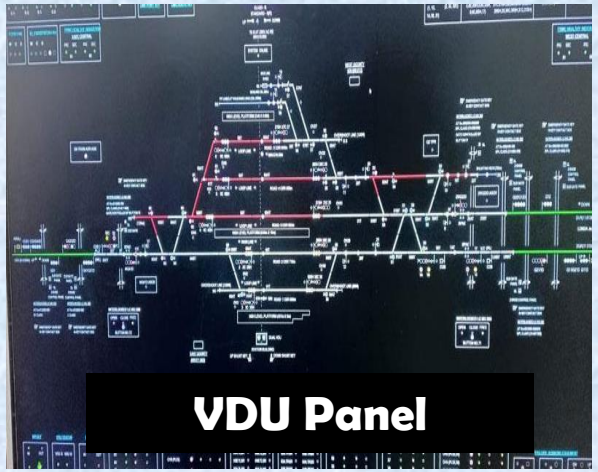

VDU Panel

# PROLONG FAILURE OF AUTOMATIC SIGNAL AND COMMUNICATION NOT AVAILABLE

2



Station to Station fixed telephones

3



Railway auto phone & BSNL/MTNL phone with caller ID.

4



Railway control telephone

# PROLONG FAILURE OF AUTOMATIC SIGNAL AND COMMUNICATION NOT AVAILABLE

5



VHF set under special instructions, but not as the sole means of communication on sections where passenger trains run.

6



Fixed Telephone with CUG sim which have been provided to the station only for official use by the on-duty Station Master.


# PROLONG FAILURE OF AUTOMATIC SIGNAL AND COMMUNICATION NOT AVAILABLE

1) **Before any train is allowed to leave the station, it shall be brought to a stand and the Loco Pilot/Motorman and the Train Manager of the train shall be advised of the circumstances by the Station Master.**



# PROLONG FAILURE OF AUTOMATIC SIGNAL AND COMMUNICATION NOT AVAILABLE

1) All the points over which the train will run within the affected section shall be correctly set and facing points are locked before the movement of any train is authorized over them.

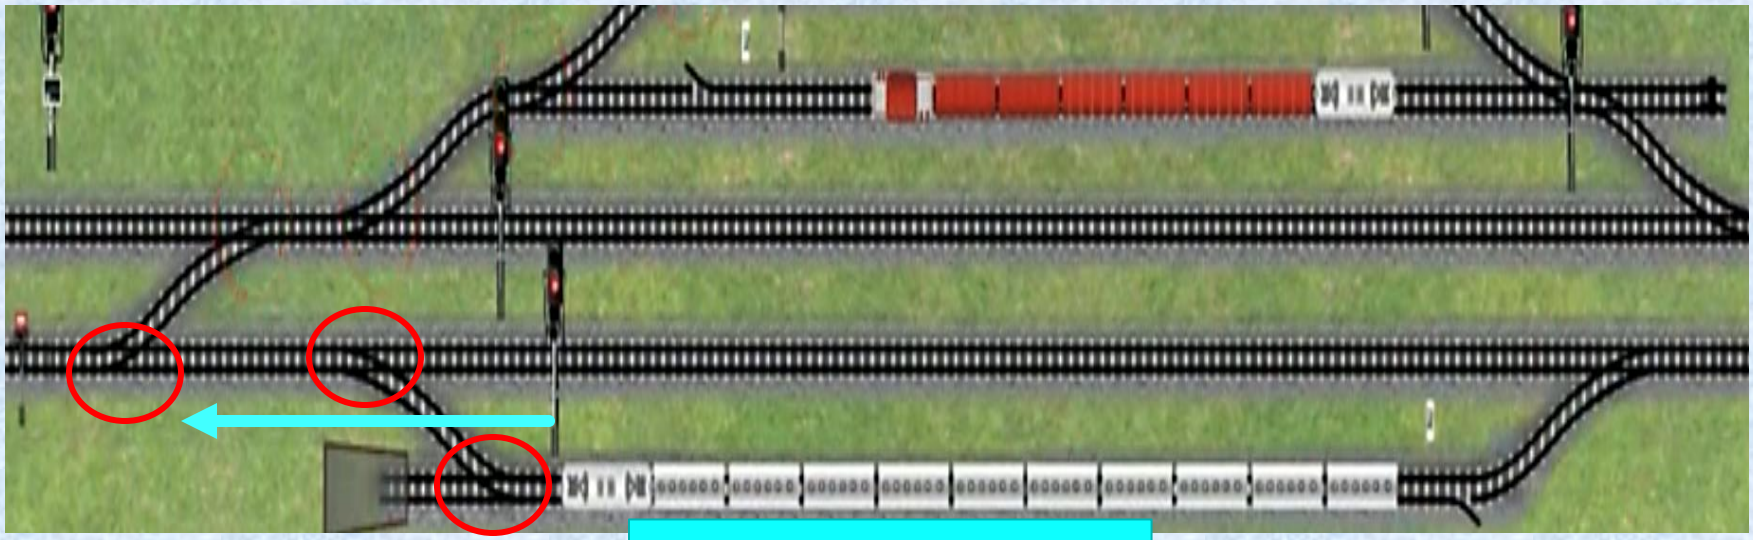

# PROLONG FAILURE OF AUTOMATIC SIGNAL AND COMMUNICATION NOT AVAILABLE

**5) SM shall give the LP of each train T/B 912 which shall consist of three parts:-**

a) An authority to proceed without line clear.

b) An authority to the Loco Pilot/Motorman Indicating the distinguishing numbers of departure, Automatic, Semi-Automatic, Manual and Gate signal/signals required to be passed, shall also be indicated on the Authority authorising the Loco Pilot/Motorman to pass them at 'ON' position. For a Starter signal / Manual/ Midsection Gate signal, the Loco Pilot/Motorman shall pass the signal only when he receives a proceed hand signal from a railway servant in uniform. In the case of midsection gate signals the Loco Pilot/Motorman shall cautiously pass the level crossing only after ensuring that the gates are closed and locked for road traffic.

# PROLONG FAILURE OF AUTOMATIC SIGNAL AND COMMUNICATION NOT AVAILABLE

c) SPEED


i) Not exceeding 15 KMPH under any circumstances, subject to other speed restrictions in force.



# PROLONG FAILURE OF AUTOMATIC SIGNAL AND COMMUNICATION NOT AVAILABLE

c)SPEED


ii) If the view is restricted due to fog, curve or any other reason, speed shall not exceed 10 KMPH.

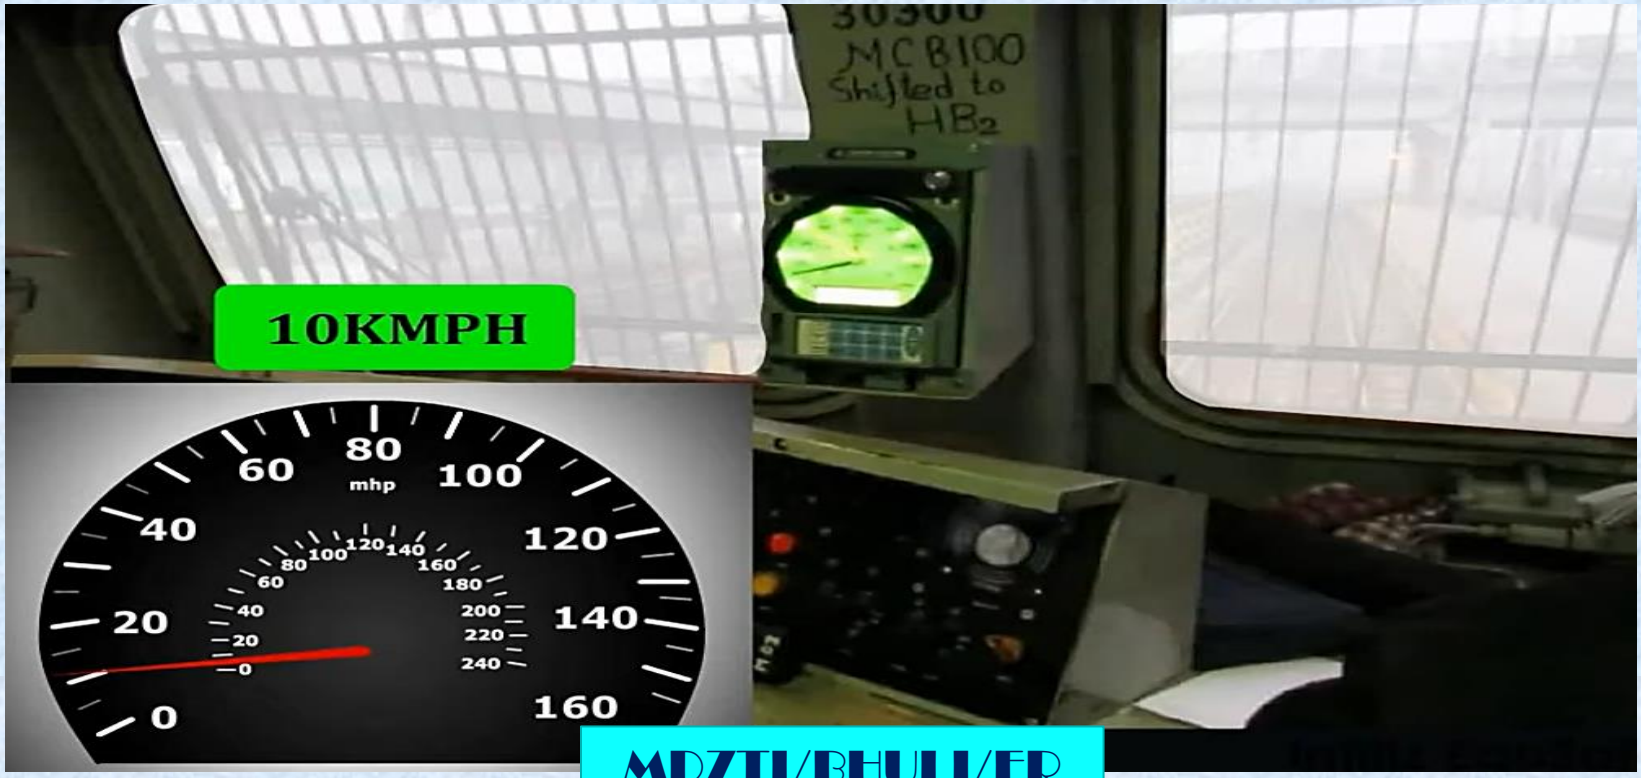

# PROLONG FAILURE OF AUTOMATIC SIGNAL AND COMMUNICATION NOT AVAILABLE

c)SPEED

iii) The speed over facing points, if any, being restricted to 15 KMPH.

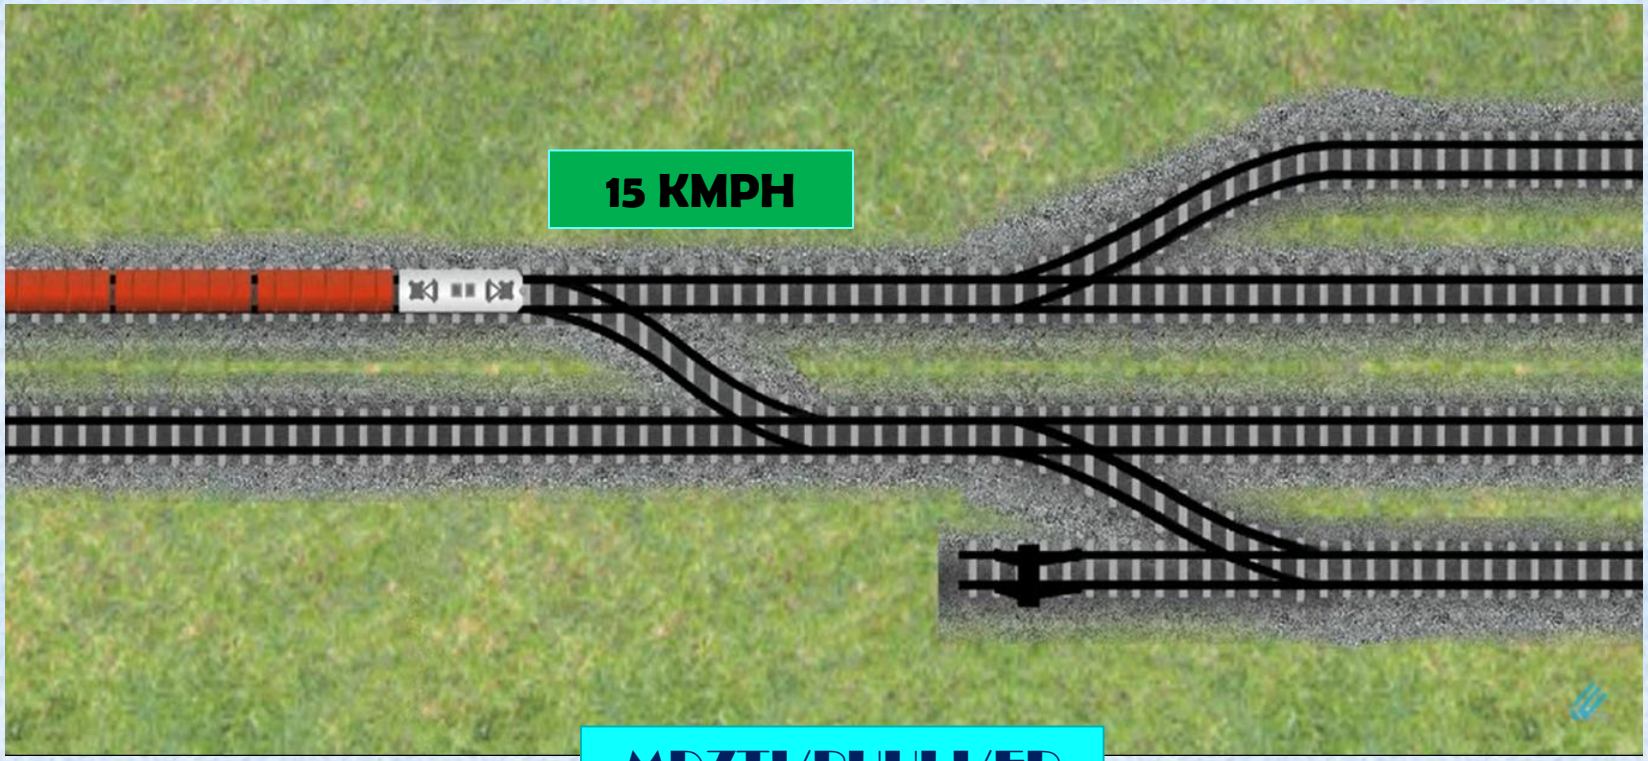

# T/B - 912

**EASTERN RAILWAY** **Form No. T/ B 912**

Serial No. _____

## AUTHORITY FOR WORKING OF TRAINS DURING TOTAL INTERRUPTION OF COMMUNICATION / OBSTRUCTION ON LINE IN AUTOMATIC BLOCK SYSTEM

**(Loco Pilot / Train Manager/ Station Master's Record)**

Station_____Date____ Time:_____hours_____mins

To
The Motorman / Loco Pilot of Engine / Train / Unit No._____UP/ DOWN.

### AUTHORITY TO PROCEED WITHOUT LINE CLEAR

1. You are hereby authorised to proceed cautiously without line clear from_____station to _____station on UP / DOWN* Line.
2. You shall bring your Engine / Train / Unit No._____to stand outside (i) Semi–Automatic / Manual First Reception Stop Signal pertaining to right line OR (ii) Semi-Automatic / Manual Last Despatch Stop Signal pertaining to wrong line* of_____station and thereafter be guided by the instructions from the Station Master of_____station.
3. Train No._____was the last train over the section. It left / arrived* here at_____hours _____mins.

### CIRCUMSTANCES UNDER WHICH THIS AUTHORITY IS GIVEN

*(A) Failure of signals and communications.
*(B) Blocking of line / obstruction on line at km_____between_____station and _____station and failure of means of communication.
*(C)_____(any other)

***Strike out whichever is not applicable.**

MDZTI/BHULI/ER

# T/B - 912

**AUTHORITY TO PASS SIGNALS IN 'ON' POSITION**

1. You are also authorized to pass Departure signals and all intervening Automatic signals between _____station and_____station at "ON" on this authority.
2. In addition, you are also authorized to pass Starter / Manual Stop Signal / Gate stop signals on being hand signalled past such signals by a railway servant in uniform.
3. You shall cautiously pass the level crossing only after ensuring that the gates are closed.
4. Here indicate distinguishing numbers of all signals to be thus passed _____

**CAUTION ORDER**

You are permitted to run your Engine / Train / Unit No. from_____station to _____station with **speed not exceeding 15 kmph when the view is clear and 10 kmph when view ahead is impaired** subject to other speed restrictions.

**The speed over facing points, if any, being restricted to 15 kmph.**

Trains starting on wrong line shall be piloted out of the station after all concerning points are correctly set and locked.

_____

Signature and Stamp of Station Master

I have understood the contents of this authority.

Signature of Train Manager_____ Date:_____Time:_____hours_____mins

Signature of Loco Pilot / Motorman_____ Date:_____Time:_____hours_____mins

**Loco Pilot / Motorman / Train Manager proceeding on this authority must observe instructions mentioned at the back of this form.**

MDZTI/BHULI/ER

# T/B - 912

## IMPORTANT INSTRUCTIONS

Motorman / Loco Pilot proceeding on this authority must observe the following precautions

1. Speed must not exceed 15 kmph over the straight line with clear view and 10 kmph when approaching or passing any portion of the line where the view ahead is not clear due to curve, obstruction, rain, fog or any other cause subject to the observance of speed restriction imposed and speed over facing points restricted to 15 kmph.

2. Both by day and by night, tunnel must not be entered until the Loco Pilot has ascertained that it is clear. Should there be any doubt on this point, the train should be piloted by a Railway Employee equipped with lighted hand signals and detonators.


3. A sharp look out must be kept at all times and Loco Pilot must be prepared to stop clear and short of any obstruction which may exist or crop up on the line. Engine whistle must be freely used.

4. When approaching the nominated station ahead, the Loco Pilot must bring his train engine to stand outside the Semi–Automatic/ Manual Reception Stop Signal pertaining to right line and outside the Semi–Automatic/ Manual Despatch Stop Signal pertaining to wrong line and sound one long whistle and act to the instructions of the Station Master.

5. The form should be handed over to the Station Master of the nominated station at the end of the authorized journey for record.

# PROLONG FAILURE OF AUTOMATIC SIGNAL AND COMMUNICATION NOT AVAILABLE

6) **No train shall be allowed to enter an affected section unless there is a clear interval of 25 minutes between the train about to leave and the preceding train.**

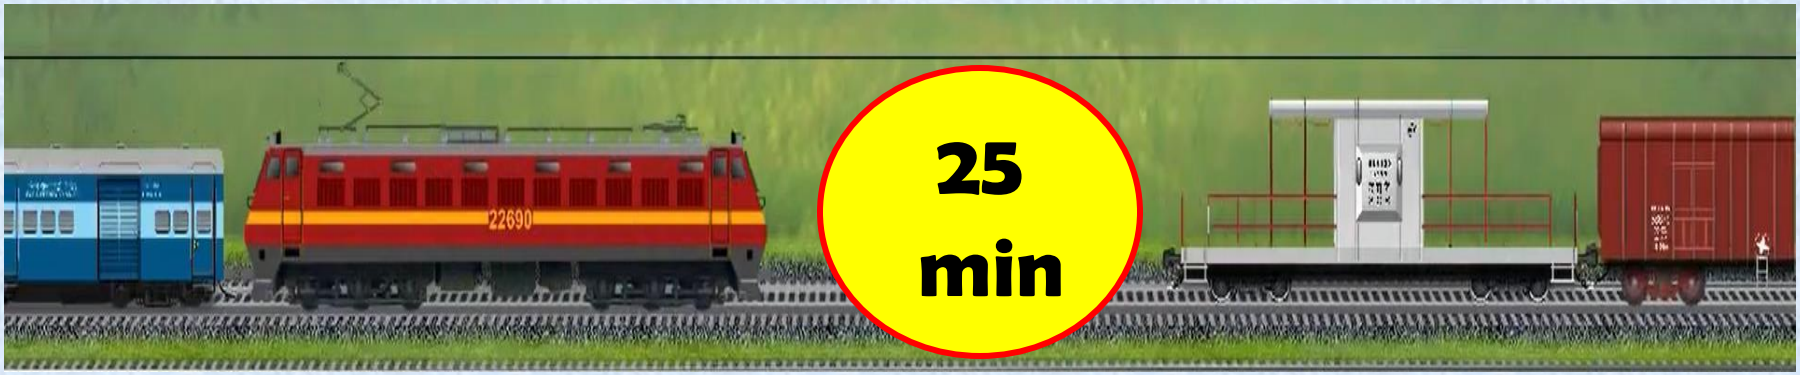

# PROLONG FAILURE OF AUTOMATIC SIGNAL AND COMMUNICATION NOT AVAILABLE

7) **Piloting in case of view ahead is not clear, the Assistant Loco Pilot/motorman or the Train Manager.**




# PROLONG FAILURE OF AUTOMATIC SIGNAL AND COMMUNICATION NOT AVAILABLE

8) **A tunnel shall be entered only after it has been ascertained that it is clear. If there is any doubt on this point, the train shall be piloted by a railway employee equipped with hand signals and detonators.**




# PROLONG FAILURE OF AUTOMATIC SIGNAL AND COMMUNICATION NOT AVAILABLE

9) **The Train Manager shall keep a sharp look out in the rear and be prepared to exhibit a danger signal to prevent the approach of a train from rear side and to protect it, if necessary, as per extant rules.**

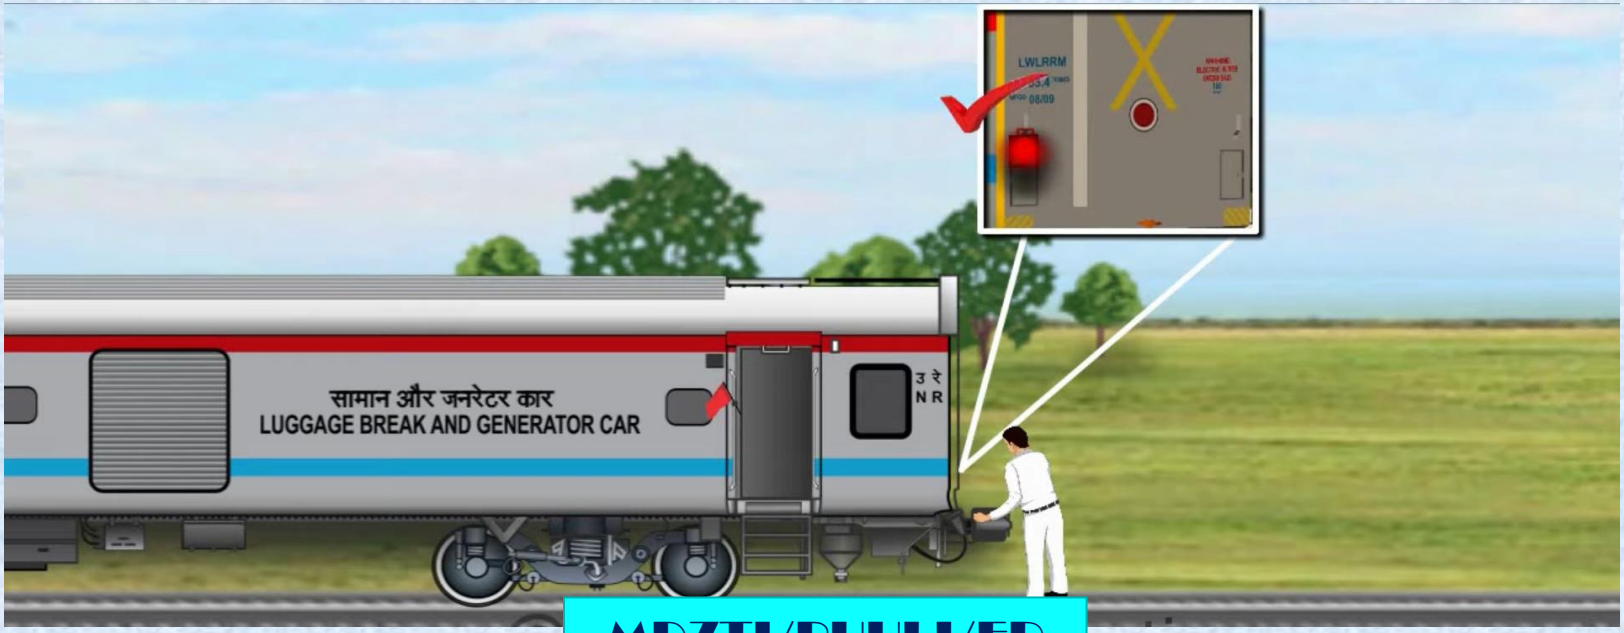

# PROLONG FAILURE OF AUTOMATIC SIGNAL AND COMMUNICATION NOT AVAILABLE

10) If the train is unable to move further due to any reason, then the train manager should protect the train in rear by placing one detonator at 250 meters from the train on the way out and 2 detonators, 10 meters apart, at 500 meters from the train.

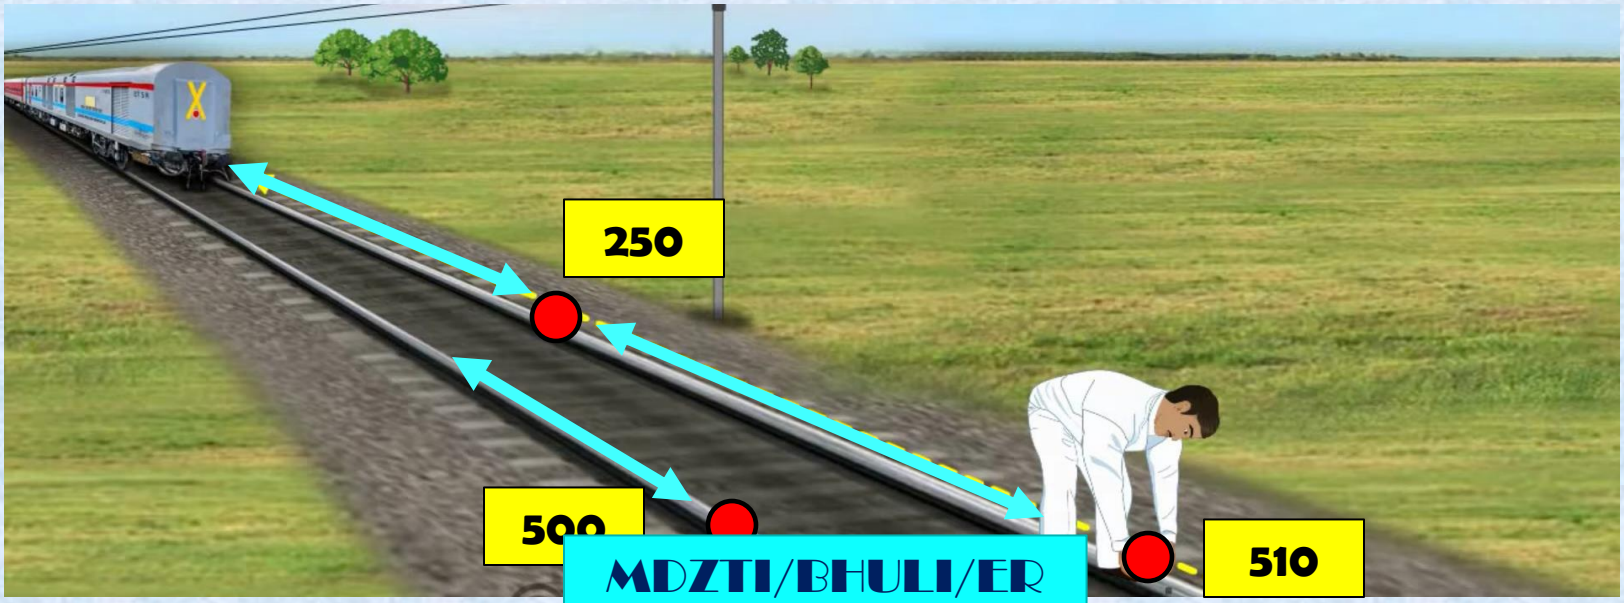

# PROLONG FAILURE OF AUTOMATIC SIGNAL AND COMMUNICATION NOT AVAILABLE


11) **When approaching the next station the LP shall bring his train to a stand outside the first stop signal and sound one continuous long whistle.**



# PROLONG FAILURE OF AUTOMATIC SIGNAL AND COMMUNICATION NOT AVAILABLE

12) **RECEPTION:**

**By T/369 (3b) + Piloting.**

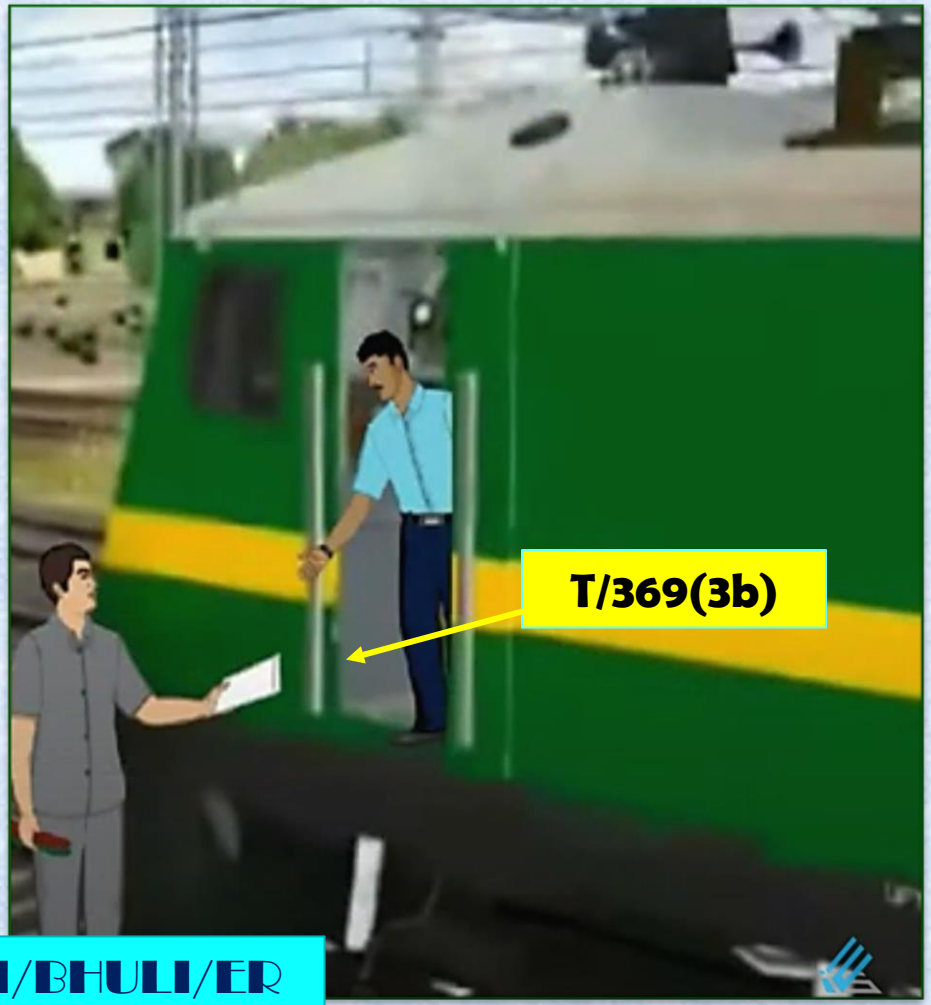

# PROLONG FAILURE OF AUTOMATIC SIGNAL AND COMMUNICATION NOT AVAILABLE

13) Trains must continue to work on this system until either the signals are put right or any one of the means of communications is restored by the S&T officials in writing.

14) As soon as the signals are put right, normal working of trains shall be resumed.


# PROLONG FAILURE OF AUTOMATIC SIGNAL AND COMMUNICATION NOT AVAILABLE

**18) However, where signals continue to remain in-operative but any of the means of communication is restored, the Station Masters at both end shall immediately exchange a message in the following format-**

| |
|---|
| From<br>Station Master/X<br>To<br>Station Master/Y<br>No. _____Train (Number and description) _____arrived complete at ____hours. Last Train (Number and description)_____ despatched to your station at ____hours. Cancel the present method of working of trains. Line Clear shall be obtained by means of _____Acknowledge<br><br>Private Number (In figures)_____ ( In words)_____ |
| From<br>Station Master/Y<br>To<br>Station Master/X<br>No.._____ Your No. _____Understood that Train (Number and understand description)_____ which was the last train to leave my station has arrived complete at your station. Train No. _____which left your station has arrived complete at my station at_____ Hours/not arrived. Present system of train working is being/ shall be cancelled immediately after the complete arrival of train No ___Line Clear for the next train shall be obtained by means of _____<br><br>Private Number (In figures) _____( In words)_____ |


# PROLONG FAILURE OF AUTOMATIC SIGNAL AND COMMUNICATION NOT AVAILABLE

20) In case of any of the means of communication is restored, train operation resumed as per USR- 9.12/2(A).

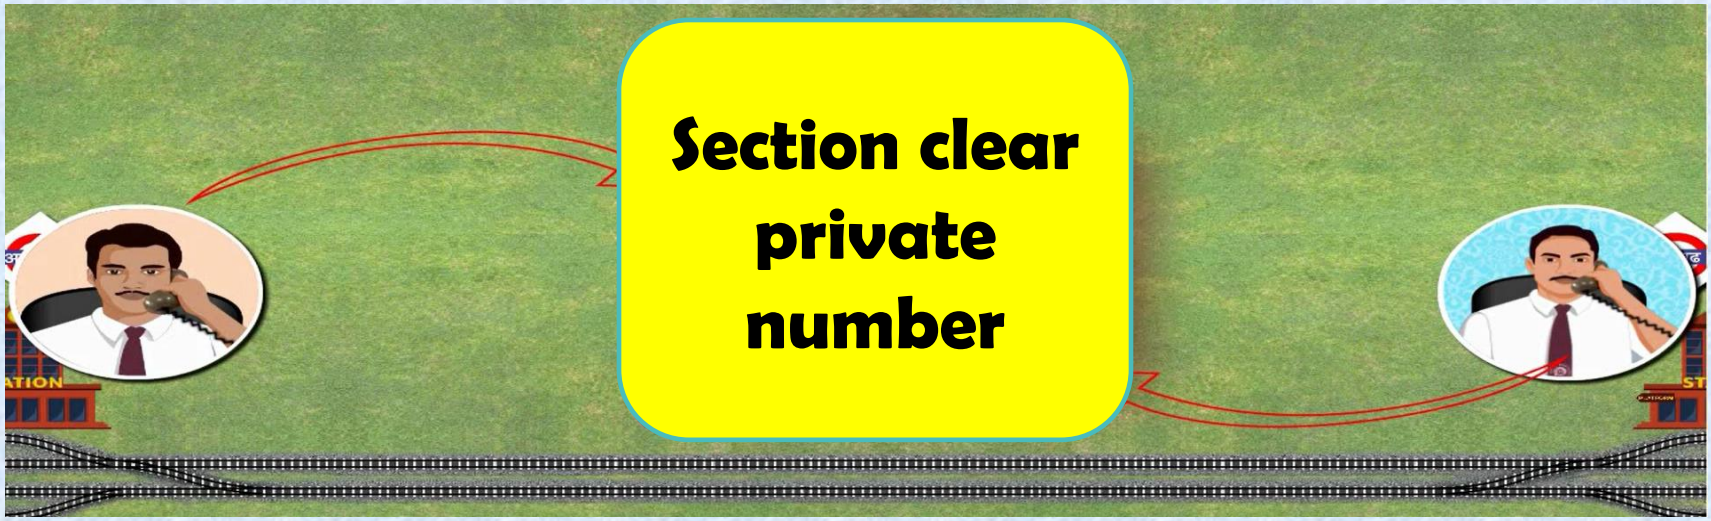

# PROLONG FAILURE OF AUTOMATIC SIGNAL AND COMMUNICATION NOT AVAILABLE

20) TI report to the Sr. Divisional Operations Manager / Divisional Operations Manager (in-charge) within 7 days of the resumption of normal working after scrutiny of necessary documents.

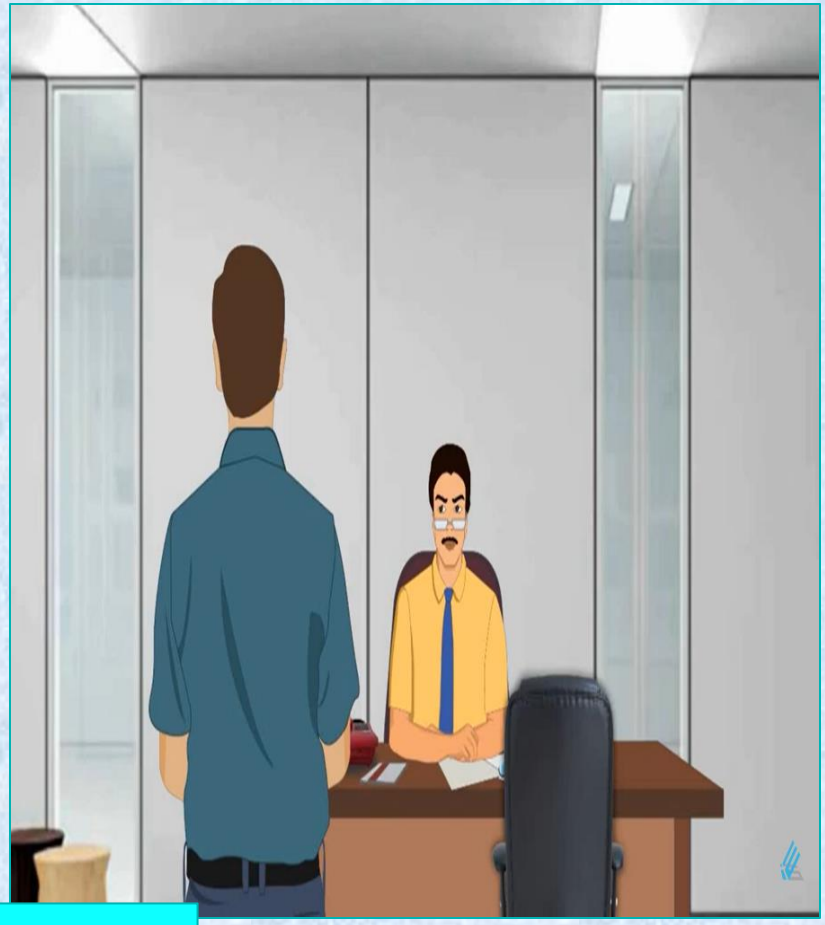

# बहु-विषयक क्षेत्रीय रेल प्रशिक्षण संस्थान , धनबाद (भूली)

# MULTI-DISCIPLINARY ZONAL RAILWAY TRAINING INSTITUTE, DHANBAD (Bhuli)

# शिक्षार्थ आइये
# सेवार्थ जाइये