




Before installation: Isolate the circuit, verify absence of voltage, support the busbar and use suitable PPE.

1 Align the busbar elements

Bring the two GGD busbar elements together and align the conductors and housing before joining.

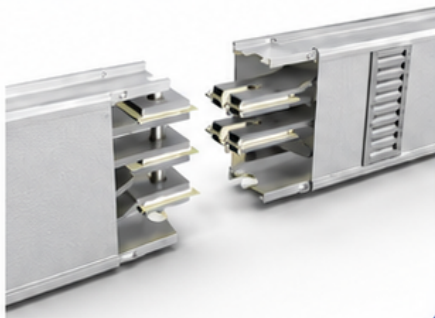


2 Insert the joint set

Position the joint components correctly and prepare the connection as shown before tightening.



3 Prepare the monoblock joint element

Position the monoblock joint element and arrange the joint components for installation as shown.

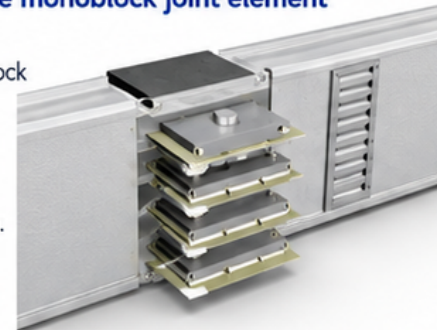


4 Tighten the joint assembly

Tighten the joint element with a wrench to the specified torque value.



5 Fit the joint cover

Fit the top joint cover and tighten the fixing screws to complete the joint and provide protection.

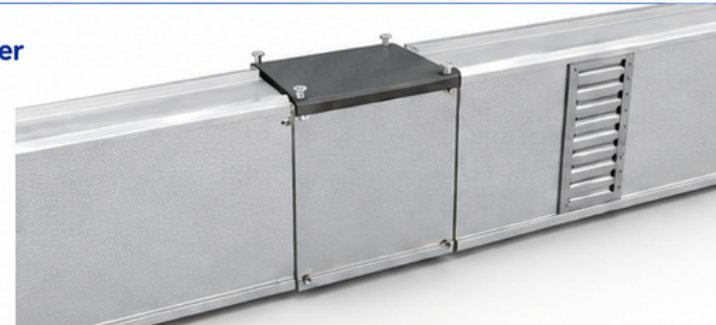


RECOMMENDED SUPPORT HANGER DISTANCE



Recommended spacing between support hangers for GGD busbar sections.

VERTICAL RISER HANGER

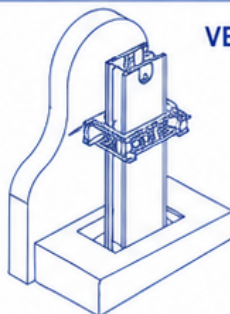

Use a spring hanger for vertical risers in addition to universal fixing hangers. Provide one spring hanger on each vertical riser and for every **150 kg** of busway.

FINAL CHECKLIST

- ☒ Joint points are aligned and correctly assembled.
- ☒ Joint components and cover are fitted and tightened.
- ☒ Support spacing and vertical hanger guidance are satisfied.



Installation must be carried out by qualified personnel. Do not work on energised equipment.