

Joining two GM busbar elements

Official Distributor: INFRAVOLT




Before installation: Isolate the circuit, verify absence of voltage, support the busbar and use suitable PPE.

**STEP
1**

Align the element ends


Bring the two GM busbar elements together and align the conductors and housing before joining.

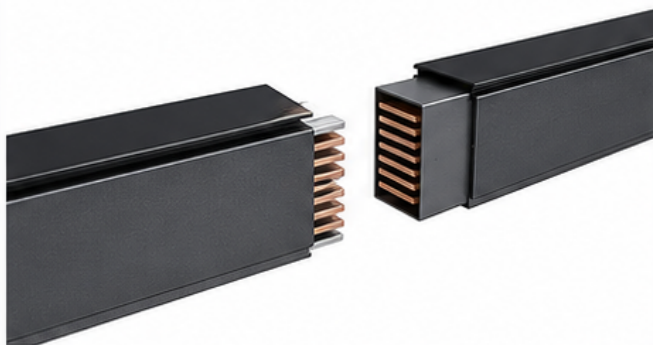

**STEP
2**

Fit the joint set

Position the GM joint set correctly and assemble the joint components as shown before tightening.

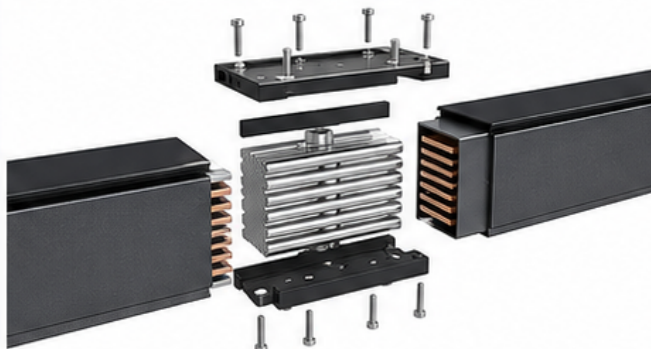

**STEP
3**

Close the joint cover

Fit the joint cover and tighten 4 × M5x15 screws to complete the joint and provide IP55 and mechanical protection.



RECOMMENDED SUPPORT HANGER DISTANCE



FINAL CHECKLIST

- ✓ Elements are fully aligned and correctly joined.
- ✓ Joint set and cover are fitted and tightened.
- ✓ Support spacing complies with installation guidance.



Installation must be carried out by qualified personnel. Do not work on energised equipment.