




Before installation: Isolate the circuit, verify absence of voltage, support the busbar and use suitable PPE.


1 Check the dimensions

Confirm the required element length and verify the cutting reference. Housing reference: $L = X + 280 \text{ mm}$ or $L = X - 280 \text{ mm}$ according to the assembly side.

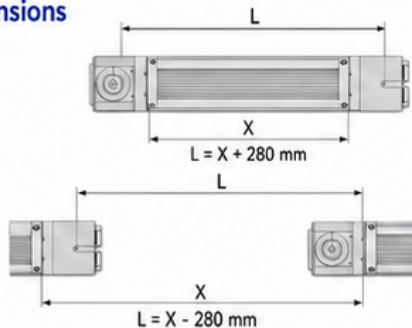


2 Prepare the conductor ends

Prepare the conductor side and align the exposed conductors according to the required joint configuration.

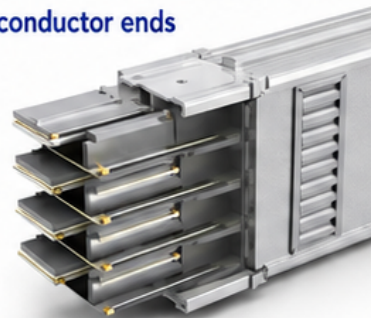


3 Align the busbar elements

Bring the two GS busbar elements together and align the conductors and housing before connection.

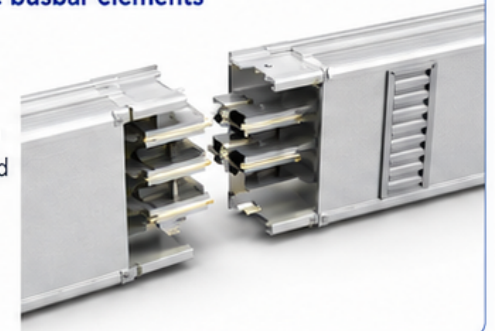

4 Fit the joint components

Position the standard or monoblock joint components correctly and prepare the connection as shown.

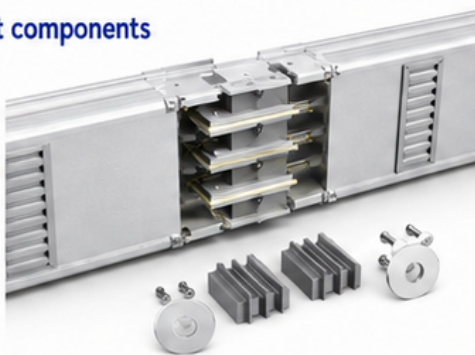

5 Complete the joint assembly

Bring the sections fully together and secure the joint assembly in the correct position.




6 Finish and inspect the joint

Fit the joint cover or final connection assembly and verify that the joint is fully seated and protected.




DIMENSION REFERENCE

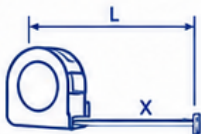

Verify L and X dimensions before cutting or assembly.

MONOBLOCK OPTION

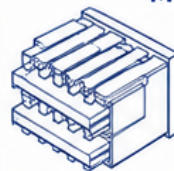

Use the matching GS monoblock joint set when specified by the project design.

FINAL CHECKLIST



- ✓ Dimensions verified before assembly.
- ✓ Joint components are aligned and fully fitted.
- ✓ Completed joint is secure and ready for service.



Installation must be carried out by qualified personnel. Do not work on energised equipment.