


Before installation: Isolate the circuit, verify absence of voltage and use suitable PPE.

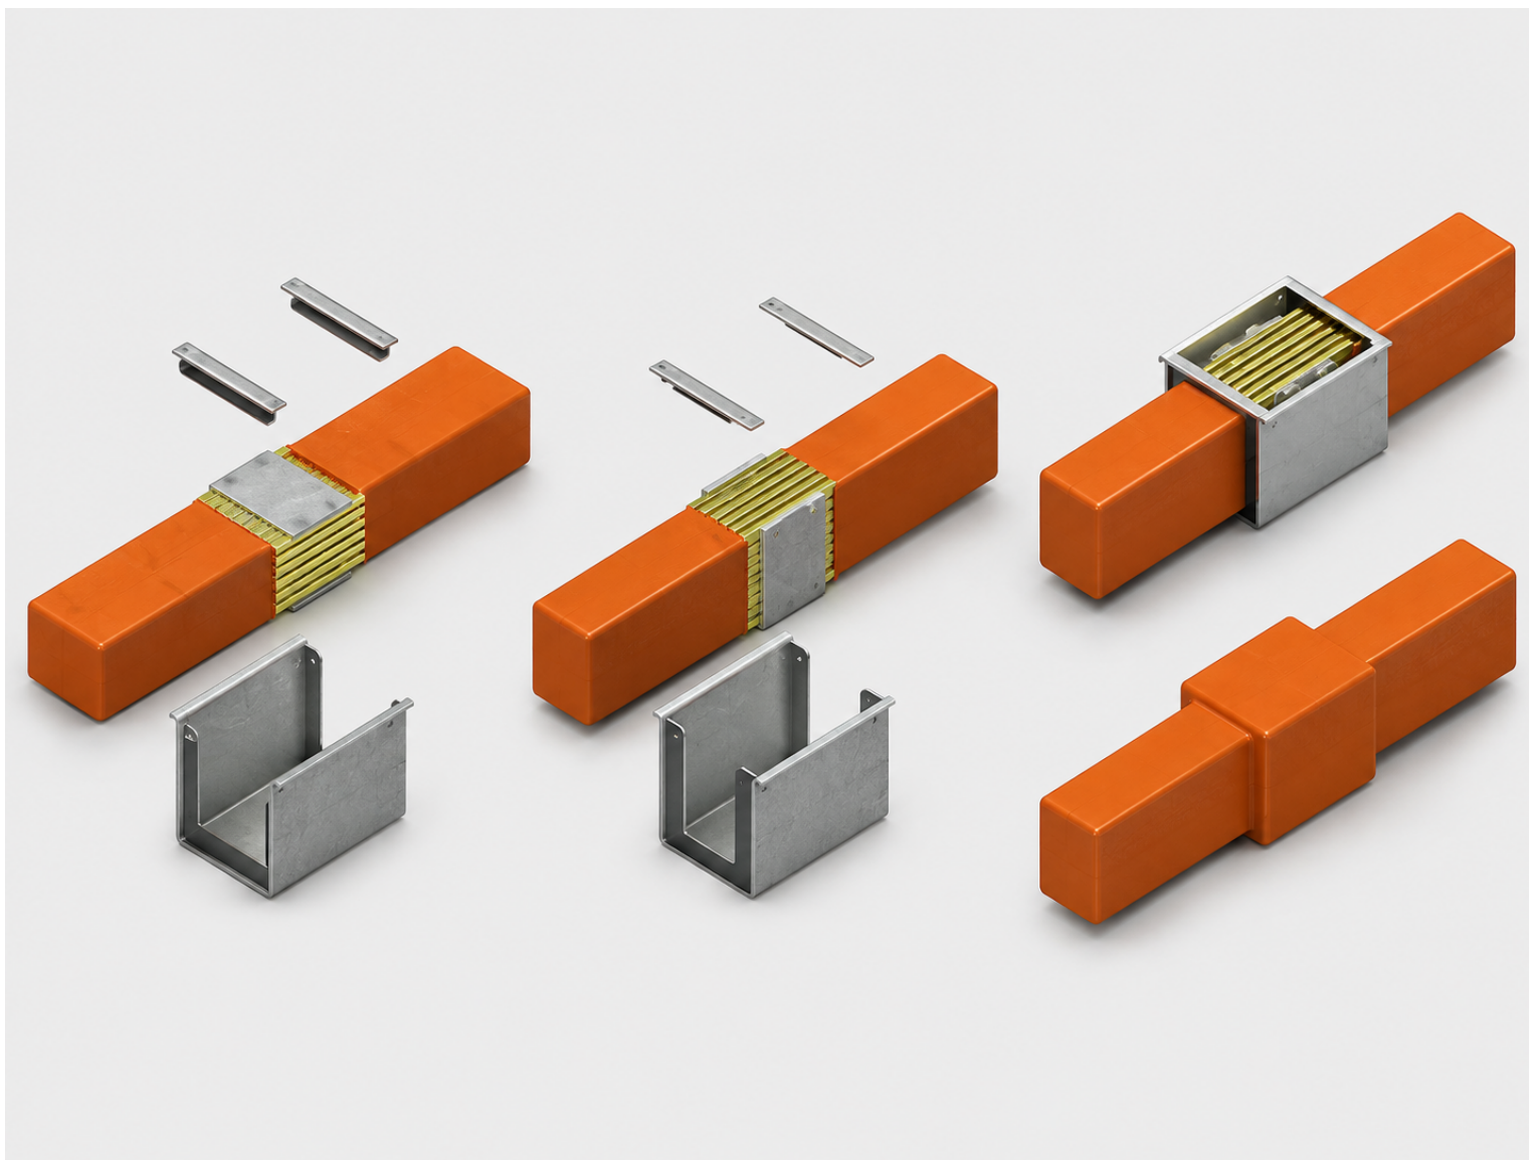

Before installation: Isolate the circuit, verify absence of voltage and use suitable PPE.

