


ZHIVEZEN

USER MANUAL

Flexible TPE • Peel & Stick

Peel and Stick Wall Molding Trim

Flexible TPE Decorative Trim • 20 FT × 0.9 IN • Matte White

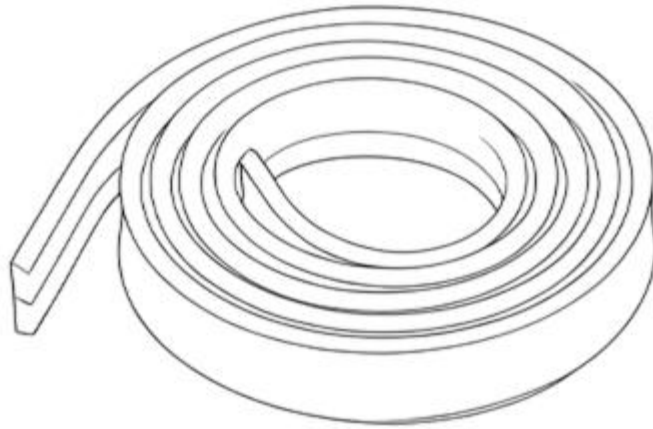

Product dimensions and material reference

IMPORTANT PRODUCT EXPECTATION

This is a flexible TPE decorative trim. A soft rubber-like feel, flexible structure, and matte appearance are normal characteristics of the material. It is not rigid wood, MDF, or other traditional hard molding.

CONTENTS

01

Product Overview

02

Knowing Your Trim

03

Before You Buy

04

Installation Guide

05

Surface Guide &
Troubleshooting

1. PRODUCT INFORMATION

- Material: Flexible TPE (Thermoplastic Elastomer)
- Finish: Matte White
- Length: 20 FT
- Width: 0.9 IN
- Thickness: Approx. 0.37 IN
- Construction: Flexible decorative trim with a soft, rubber-like feel

MATERIAL EXPECTATION

Soft rubber-like feel, flexible structure, and matte appearance are all characteristics of TPE material.

2. WHAT IT IS NOT

- Not rigid wood molding
- Not MDF trim
- Not rigid architectural molding
- Not paintable

PRODUCT

01

OVERVIEW

Flexible TPE decorative trim for DIY interior accents.



Actual product profile and flexibility reference

CHECK BEFORE ORDERING

Review the width, thickness, material characteristics, and application guidance before purchase.

1. FLEXIBLE TPE MATERIAL

Made from flexible TPE with a soft, rubber-like feel and a matte decorative appearance. The material is designed for lightweight DIY decorative projects.

2. MATTE APPEARANCE

The non-glossy matte appearance is a normal characteristic of the TPE material. It should not be interpreted as a wood or painted-hard-surface finish.

3. FLEXIBLE STRUCTURE

The trim can bend around gentle curves and corners and can be cut to the required length with suitable scissors or cutting tools.



Actual product flexibility / bend demonstration

FEATURES

02

KNOW YOUR TRIM


Understand the physical characteristics before installation.

4. SIZE REFERENCE

- 0.9 IN width
- Approx. 0.37 IN thickness
- 20 FT total length

SIZE CHECK

Please verify the dimensions before purchase so the trim matches your project requirements.

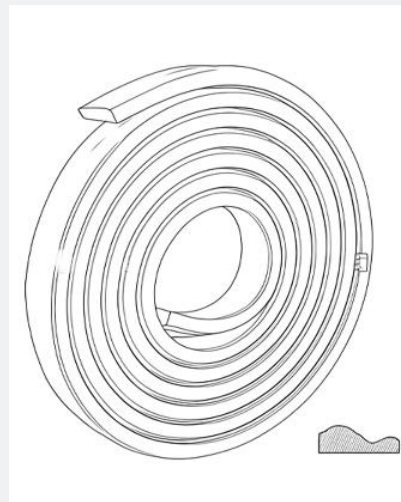

1. WHAT TO EXPECT

- ✓ Flexible TPE material
- ✓ Matte decorative finish
- ✓ Soft rubber-like feel
- ✓ Flexible, bendable structure
- ✓ DIY-oriented decorative trim

2. IMPORTANT LIMITATIONS

- ✗ Not rigid wood, MDF, or other hard molding
- ✗ Not paintable
- ✗ Not intended for heavily textured, rough, or unstable surfaces
- ✗ Adhesion performance depends on surface preparation and installation conditions

CHECK

: 0.9 IN • Thickness: Approx. 0.37 IN • Length: 20 FT. Review product specifications and dimensions carefully before ordering.

BEFORE YOU BUY

03

EXPECTATION GUIDE

A transparent material and use guide helps reduce surprises after purchase.



Product dimensions and material reference

MATTE + RUBBER-LIKE IS NORMAL

The flexible TPE construction can feel softer and more rubber-like than rigid molding materials. This is a product characteristic.

1 CLEAN

Remove dust, oil, and moisture. Keep the surface clean and dry.

For stronger adhesion, after cleaning and drying the surface, wipe the application area with the included adhesion promoter before applying the trim.

2 MEASURE

Measure the required length carefully before cutting.

3 CUT

Cut to length with suitable scissors or a sharp cutting tool.

4 PEEL

Slowly remove the release liner while aligning the trim.

5 APPLY

Apply gradually and align before making full contact.

6 PRESS

Press firmly along the entire trim to improve surface contact.

BETTER ADHESION


In colder conditions, gently warm the adhesive and trim with a hair dryer before installation. Gentle warming may improve bonding performance.

INSTALL

04

STEP BY STEP

Follow the sequence to improve alignment and bonding.

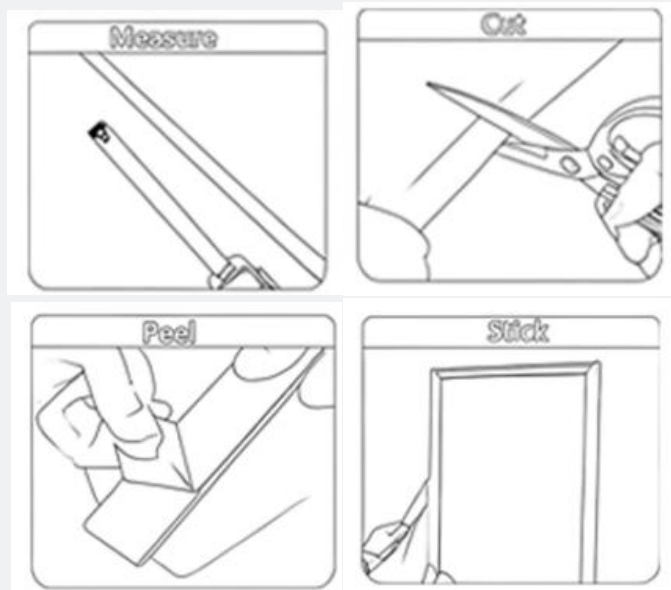

Flexible trim can be shaped around gentle curves

AVOID OVERHEATING

Use a hair dryer gently. Do not overheat, scorch, or deform the trim or adhesive.

1. RECOMMENDED SURFACES

- ✓ Glass and mirrors
- ✓ Metal
- ✓ Finished wood
- ✓ Plastic
- ✓ Painted walls

Surface must be clean, dry, and free of dust or oil before installation.

2. NOT RECOMMENDED

- × Dusty or dirty surfaces
- × Rough surfaces
- × Heavily textured walls
- × Peeling paint
- × Freshly painted surfaces
- × Porous wallpaper

SUPPORT

05

TROUBLESHOOTING

Common issues and practical checks before installation.

Trim feels rubber-like

Normal for flexible TPE material.

Trim is curled after opening

Gently warm and straighten before installation.

Adhesion is weak

Clean and dry the surface, apply firmly, and gently warm the adhesive when needed.

Trim is difficult to bend

Gently warm the material before shaping.

Size does not fit the project

Recheck the 0.9 IN width and approx. 0.37 IN thickness before purchase.

CUSTOMER SUPPORT

For product-selection or installation questions, contact us through your Amazon order or the Seller contact option.

1. BEFORE INSTALLATION

- ☐ I confirmed the 0.9 IN width and approx. 0.37 IN thickness.
- ☐ I confirmed the product is flexible TPE with a rubber-like feel.
- ☐ I checked that the surface is clean and dry.
- ☐ I confirmed the surface is suitable for adhesive application.
- ☐ I have measured the required length.

2. DURING INSTALLATION

- ☐ Cut to length before removing too much release liner.
- ☐ Warm gently when needed, especially in cooler conditions.
- ☐ Apply gradually and align before full contact.
- ☐ Press firmly along the entire trim.

KEEP THIS GUIDE

06

QUICK CHECKLIST

A compact reminder for material expectations, surface preparation and installation.

KEY REMINDERS

Flexible TPE • Matte White •
Rubber-like feel • 0.9 IN width •
Approx. 0.37 IN thickness • 20
FT length

ZHIVEZEN

Flexible TPE Peel & Stick Decorative Trim

