

Passenger footrest installation

Steinadler Pro / Matching dual-seat kit / 9 October 2026

Use with the supplied footrest kit and the vehicle configuration shown. Confirm kit compatibility with your dealer before installation.




Follow the installation video and verify all fixing points, clearance and stability.

Installation video: xw-tech.de/rj/support/#/product/steinadler-pro/topic/seat-footrest?audience=users&seat=ds

Five-point dual-seat frame

Steinadler Pro / Original installation sequence and torque reference

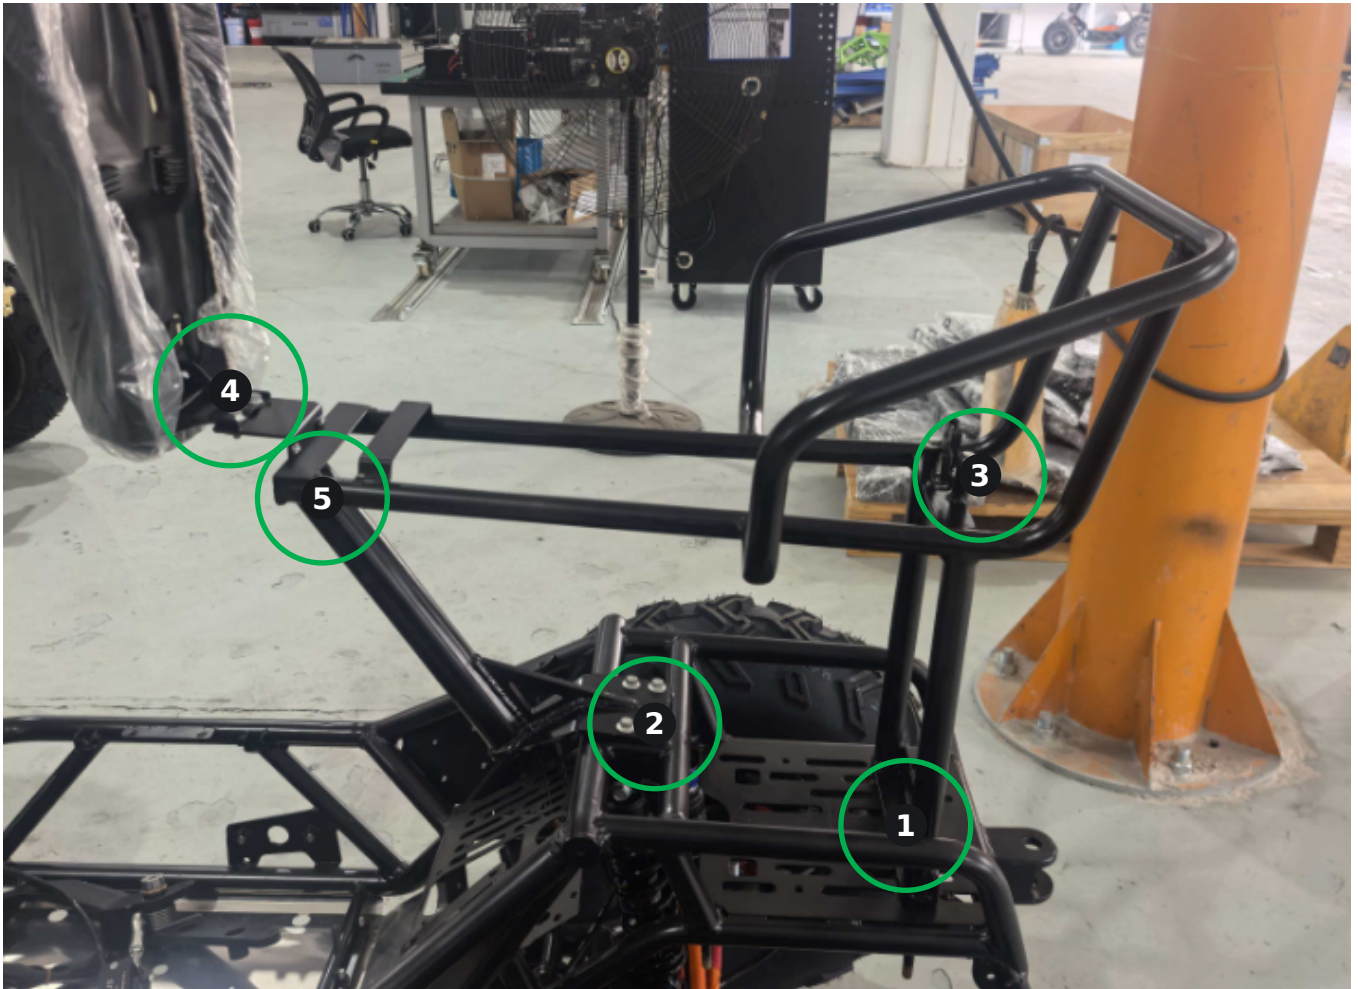

Tighten in the numbered sequence shown: 1, 2, 3, 4, 5.

Position 3: 12 N.m. Positions 1, 2, 4 and 5: 33 N.m.

These values apply only to the five-point frame and matching supplied hardware. Use the separate procedure for a four-point single seat or another kit revision.

After installation, verify fasteners, frame stability, passenger footrests, hand-holds and clearance before handover.