



T1: permanent upper truss + later suspended loft beam

STAGE 1 — Complete upper T1 truss supports roof; old roof remains

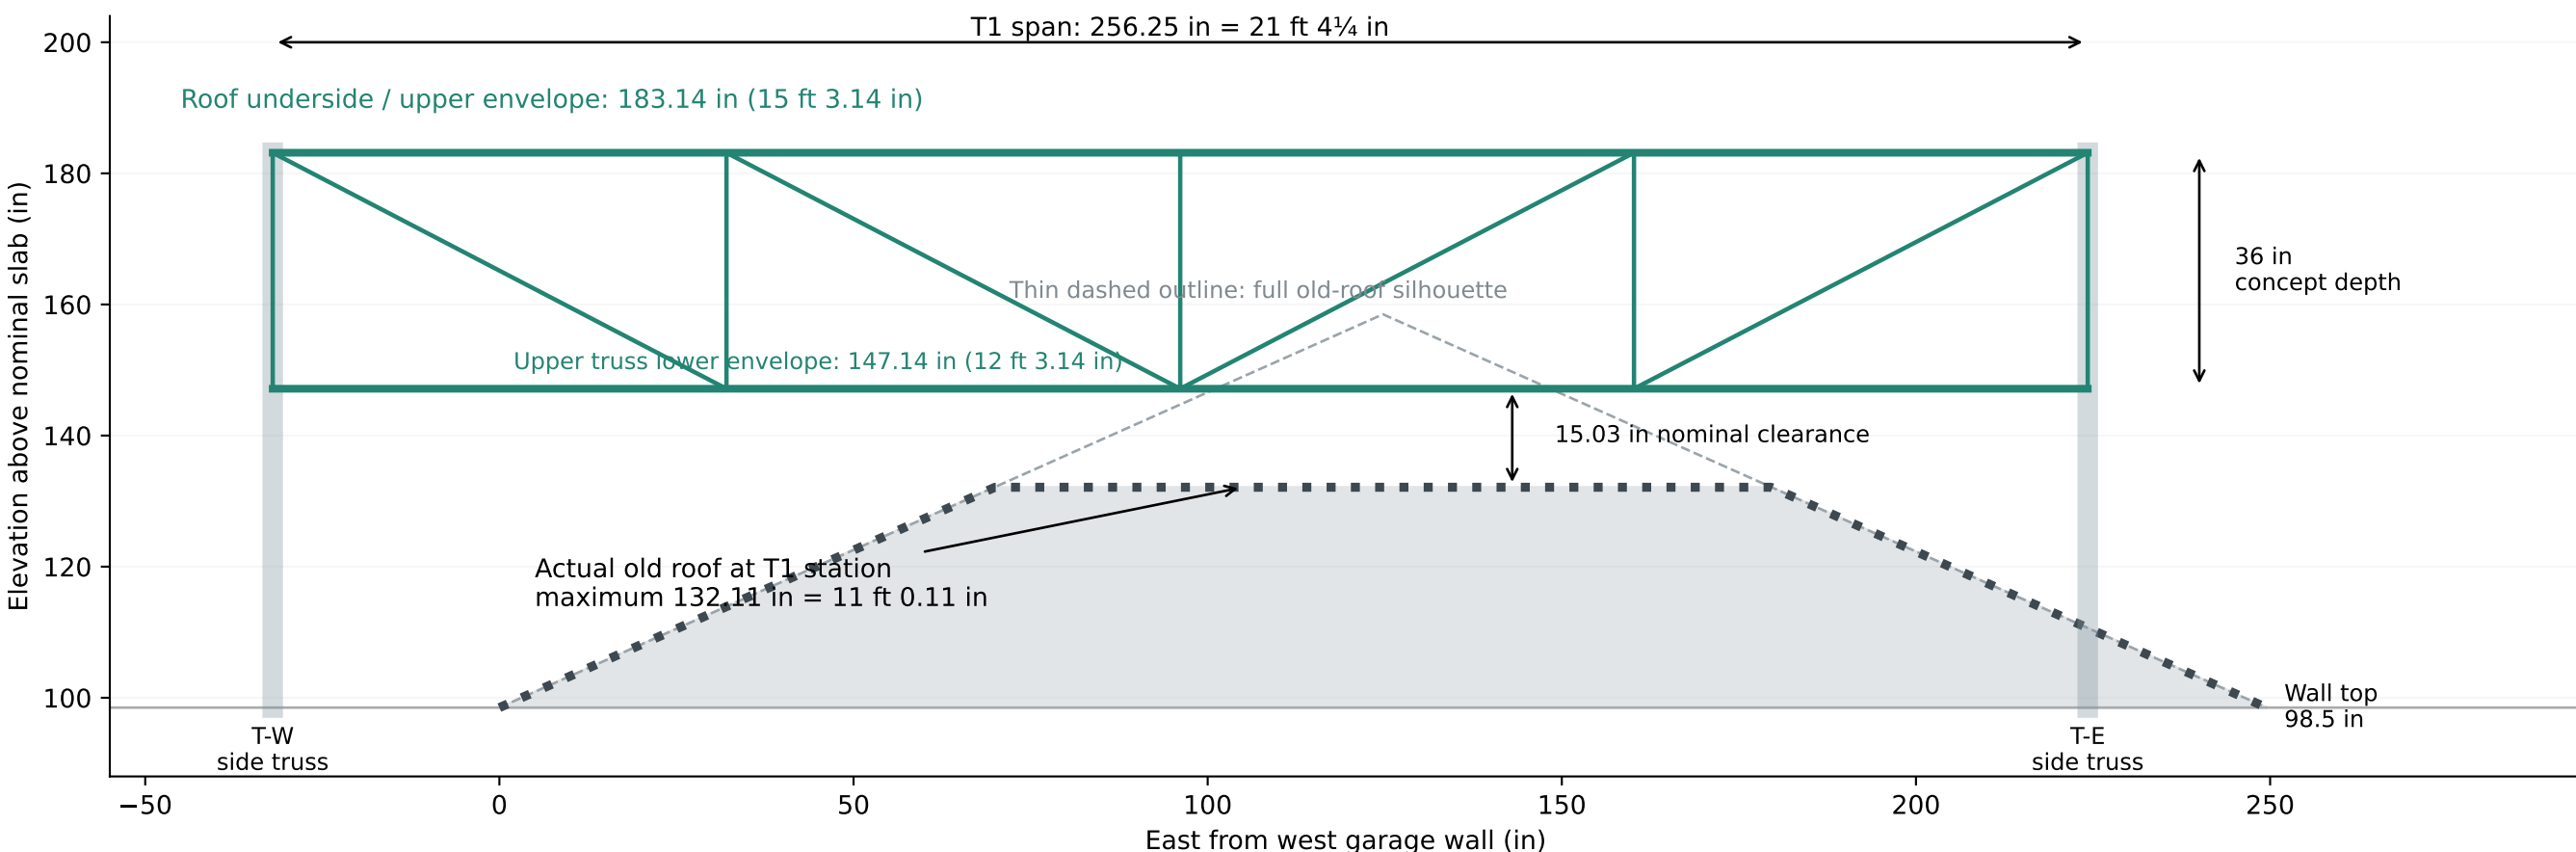

STAGE 2 — Keep upper T1; add hangers and lower floor beam after roof removal

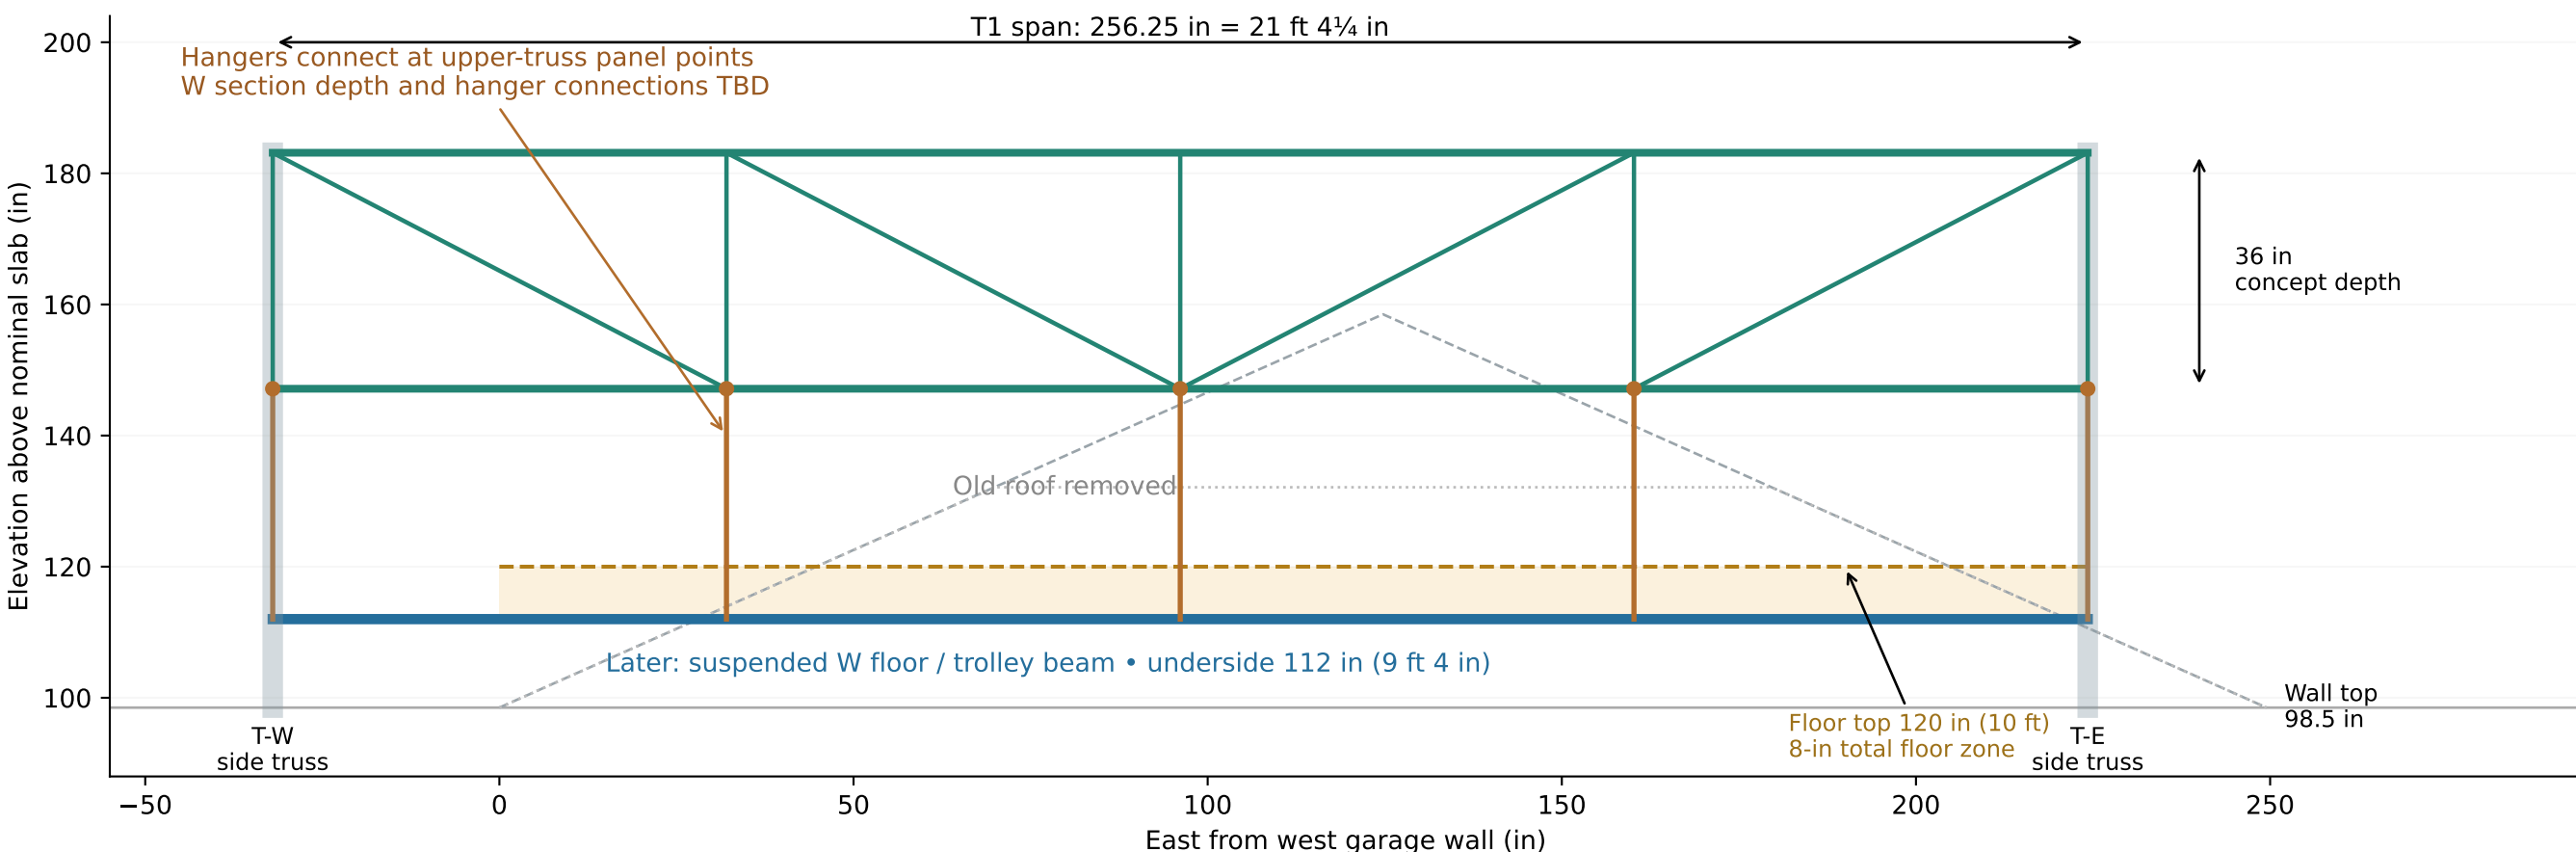

Concept geometry, not member sizing. Chord lines show envelopes; web layout is schematic. No interior post.
Upper truss and T-E/T-W connections must carry final roof + loft + trolley loads; check each erection stage separately.
Permanent upper lower chord sits 27.14 in above the loft surface at T1: this remains an obstruction across the loft.