


Α


031 Metal Corner Pulley Plate Assembly				
<u></u>	()	Created by: Joshua Vasquez	last edited: 6/1/2020	
		SCALE: 1:1	SHEET 1 OF 9	

В

Α

В

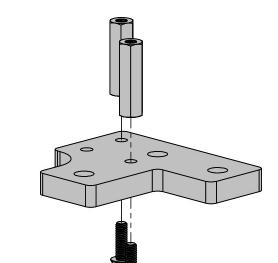


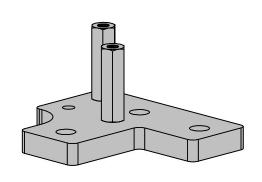


Α

ITEM NO.	DESCRIPTION	QTY.
1	Machined Left Corner Pulley Plate	1
2	M3 Standoff, 20mm long, 6mm wide	2
3	M3 Buttonhead Screw, 10mm long	2

Left Metal Plate Assembly				
(3)	()	Created by: Joshua Vasquez	last edited: 6/1/2020	
		SCALE: 1:1	SHEET 2 OF 9	

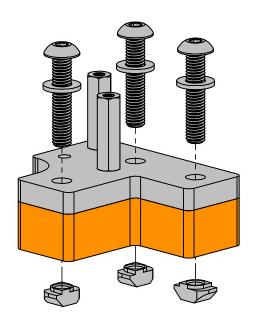

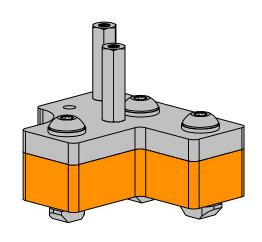


В


Α

ITEM NO.	DESCRIPTION	QTY.
4	Left Machined Bracket Spacer	1
5	M5 Washer	3
6	M5 Buttonhead Screw, 25mm long	3
7	M5 Drop-In T-Nut for 20x20 Extrusion	3

Left Base Assembly			
© BY	Created by: Joshua Vasquez	last edited: 6/1/2020	
	SCALE: 1:1	SHEET 3 OF 9	

If you are using Generic Pulleys, skip this page.

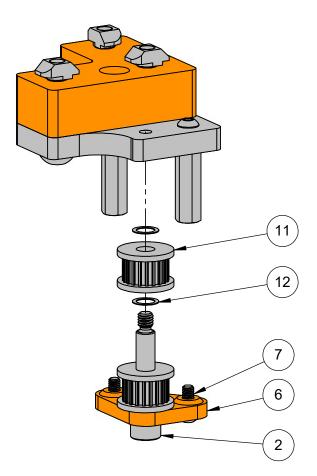

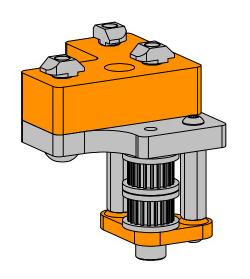

В


A


В

ITEM NO.	DESCRIPTION	QTY.
2	M4 Shoulder Screw, 25mm long	1
6	Left Corner Pulley Reinforcement Plate	1
7	M3 Buttonhead Screw, 8mm long	2
11	20T Idler pulley, 2GT, 5mm bore	2
12	M5 Shim, 0.2mm thick, 7mm OD	2

Left Gates Pulley Installation			
CC	(i) BY	Created by: Joshua Vasquez	last edited: 6/1/2020
		SCALE: 1:1	SHEET 4 OF 9

If you are using genuine Gates pulleys, skip this page.

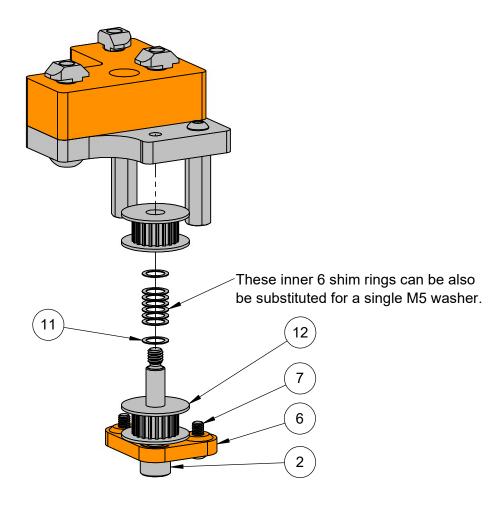

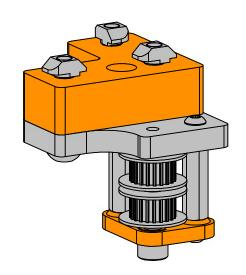


В


A

В

ITEM NO. DESCRIPTION		QTY.
2	2 M4 Shoulder Screw, 25mm long	
6 Left Corner Pulley Reinforcement Plate		1
7	M3 Buttonhead Screw, 8mm long	2
11	M5 Shim, 0.2mm thick, 7mm OD	9
12	20T Idler pulley, 2GT, 5mm bore	2

Left Generic Pulley Installation			
6	\bigcirc	Created by:	last edited:
	BY	Joshua Vasquez	6/1/2020
		SCALE: 1:1	SHEET 5 OF 9

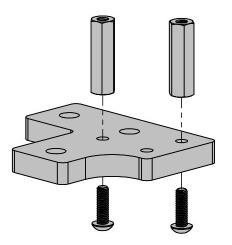

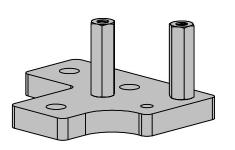


В

Α

ITEM NO.	DESCRIPTION	QTY.
1	Machined Right Corner Pulley Plate	1
2	M3 Standoff, 20mm long, 6mm wide	2
3	M3 Buttonhead Screw, 10mm long	2

Right Metal Plate Assembly			
<u></u>	(i) BY	Created by: Joshua Vasquez	last edited: 6/1/2020
		SCALE: 1:1	SHEET 6 OF 9

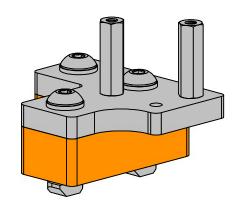

В


Α

ITEM NO. DESCRIPTION		QTY.
3	Right Machined Bracket Spacer	1
4	M5 Washer	3
5	M5 Buttonhead Screw, 25mm long	3
6	M5 Drop-In T-Nut for 20x20 Extrusion	3


Right Base Assembly				
(cc	(i) BY	Created by: Joshua Vasquez	last edited: 6/1/2020	
		SCALE: 1:1	SHEET 7 OF 9	

If you are using Generic Pulleys, skip this page.

В

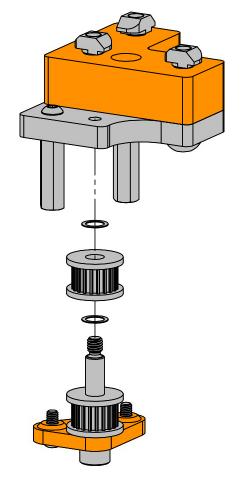

DESCRIPTION	QTY.
M4 Shoulder Screw, 25mm long	1
M3 Buttonhead Screw, 8mm long	2
Left Corner Pulley Reinforcement Plate	1
M5 Shim, 0.2mm thick, 7mm OD	3
20T Idler pulley, 2GT, 5mm bore	2
	M4 Shoulder Screw, 25mm long M3 Buttonhead Screw, 8mm long Left Corner Pulley Reinforcement Plate M5 Shim, 0.2mm thick, 7mm OD

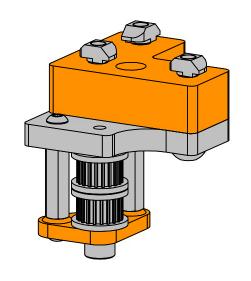


| -

В

Right Gates Pulley Installation			
(00)		Created by:	last edited:
		Joshua Vasquez	6/1/2020
		SCALE: 1:1	SHEET 8 OF 9


If you are using genuine Gates pulleys, skip this page.

В

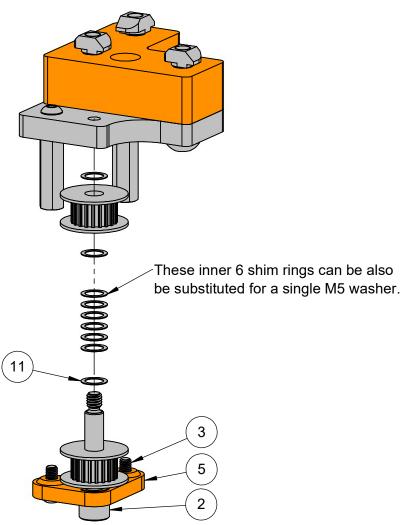



ITEM NO.	DESCRIPTION	QTY.
2	M4 Shoulder Screw, 25mm long	1
3	M3 Buttonhead Screw, 8mm long	2
5	Left Corner Pulley Reinforcement Plate	1
11	M5 Shim, 0.2mm thick, 7mm OD	9
12	20T Idler pulley, 2GT, 5mm bore	2

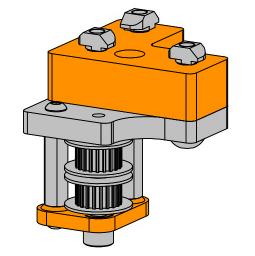

В

Right Generic Pulley Installation			
CC	BY	Created by:	last edited:
		Joshua Vasquez	6/1/2020
		SCALE: 1:1	SHEET 9 OF 9