

Make one assembly per tool. The remaining instructions depict a setup with two tools.

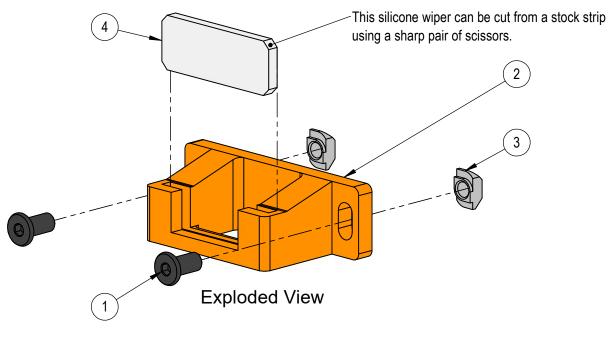

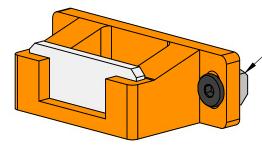

Keep these nuts loose, about 2 turns. They will be fully tightened into the frame later.

Assembled View

ITEM NO.	DESCRIPTION	QTY.
1	M5 Buttonhead Screw, 10mm long	2
2	Ooze Wiper	1
3	M5 Drop-In T-Nut for 20x20 Extrusion	2
4	15mm x 40mm Silicone Wiper	1

Extruder Wiper Assembly				
CC BY	Created by: Joshua Vasquez	last edited: 8/7/2020		
	SCALE: 1:1	SHEET 1 OF 1		

В

Δ

В

2