


FOR
FRONT RIGHT
REAR LEFT


A (x6)



M8 (x12)

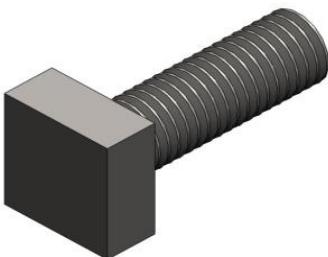


M8 (x6)

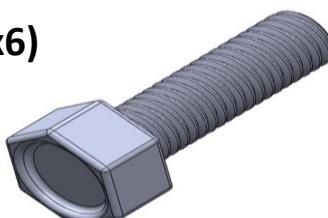


M8 (x6)



M8 (x12)

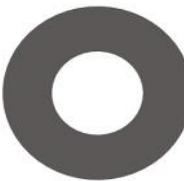

instructions

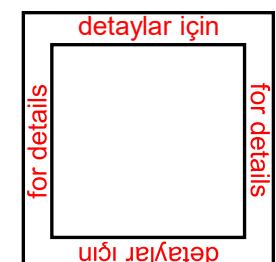

**MITSUBISHI L200 TRITON 2006 →
FIAT FULLBACK 2015 →
RUNNING BOARD**

eh **ERKUL®**
Products & Quality



