Motor Selection and Sizing

Motor Selection

With each application, the drive system requirements greatly vary. In order to accommodate this variety of needs, Aerotech offers five types of motors.

Linear Motors

Advantages

- · Highest acceleration, highest speed
- No backlash, windup or wear
- Brushless no maintenance

Slotless Motors

Advantages

- Ultra-smooth operation
- Zero cogging
- Brushless no maintenance

Disadvantages

· Complex amplifier design

Brushless Motors

Advantages

- · High acceleration
- · High torque
- Brushless no maintenance

Disadvantages

· More complex amplifier design

DC Servomotors

Advantages

- Smooth operation, low-velocity ripple
- · High torque

Disadvantages

- · Brushes limit ability to continuously start and stop
- Brushes require maintenance

Microstepping Motors

Advantages

- Simple operation
- · High torque at low speeds

Disadvantages

- Open loop
- · Low acceleration capability
- More heat generation than servomotors

Motor Sizing Process

The following sections describe how to choose a motor using speed, torque, and inertia selection criteria. The basic procedure for sizing a motor is:


- 1. Determine move parameters
- 2. Calculate load inertia (or mass)
- 3. Calculate peak and rms torque (or force) requirements

While the steps for motor sizing remain constant, different mechanical systems require different formulas to calculate the first three steps. The selection of the motor is determined by the general characteristics of the motor desired and the ability of the motor to meet the calculated requirements.

Motor Sizing Software


Aerotech's Motor Sizing Workbook is now available! This file may be downloaded from Aerotech's web site at www.aerotech.com. The free-of-charge motor sizing sheet features the following application support:

- · Linear Motor
- Direct Drive
- · Leadscrew
- Beltdrive
- · Rack and Pinion

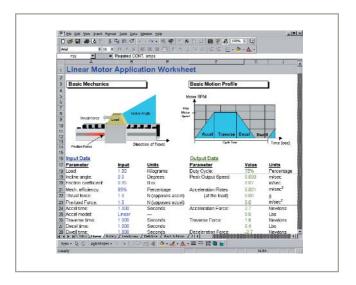

Motion Velocity Profile

The most common and efficient velocity profile for pointto-point moves is the "1/3-1/3-1/3" trapezoid. This profile breaks the time of the acceleration, traverse, and deceleration into three equal segments. The end result is that the profile provides the optimal move by minimizing the power required to complete the move.

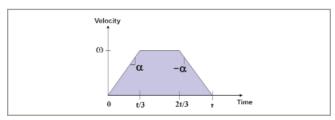

If you know the move distance and time, you can quickly calculate the acceleration and velocity as follows:

Rotaru

$$\alpha = \frac{4.5 \; \theta}{t^2}$$

$$\omega_{avg} = \!\! \frac{\Delta\theta}{\Delta t}$$

$$\omega = 1.5 \frac{\Delta \theta}{\Delta t}$$

where:

 α = acceleration in rad/s2

 θ = distance in radians

t = total move timein seconds

 ω = peak velocity in rad/s

$$a = \frac{4.5 \text{ x}}{t^2}$$

$$\mathbf{v}_{\text{avg}} = \frac{\Delta \mathbf{x}}{\Delta \mathbf{t}}$$

$$v = 1.5 \frac{\Delta x}{\Delta t}$$

a = acceleration in m/s^2

x = distance in meters

t = total move timein seconds

v = peak velocity in m/s

Inertia and Mass

In a rotary motor system, the best load-to-motor inertia match is 1:1 because it minimizes power consumption and increases system stability. Typically, systems will not achieve a 1:1 ratio; ratios as high as 10:1 can exist without adversely affecting system stability. For low bandwidth systems, higher ratios are acceptable but should be avoided due to the effect of decreased system stability.

In a linear motor system, the mass is direct-coupled to the moving coil (forcer). System stability is directly dependent on the stiffness of the mechanics and bandwidth of the servo controller.

Rotary

$$J = J_{motor} + J_{system}$$

otary
$$J = J_{motor} + J_{system}$$
Linear
 $m = m_{Forcer} + m_{Load}$

Note: The inertia of a rotary system (J_{system}) is dependent on the mechanics of the system. The load in a linear motor system (m_{Load}) is the sum of all weights (kg used as a force) directly connected to the moving forcer coil.

Peak Torque and Peak Force

The total torque that a motor must produce to move itself and the load is:

Rotary

$$T_{t} = T_{\alpha} + T_{f} + T_{\omega} + T \qquad F_{t} = F_{a} + F_{f} + F_{g}$$

in N-m

 T_a = acceleration torque in N-m

 T_f = friction torque in N-m

 T_w = viscous torque in

 T_g = gravity torque in N-m

$$F_t = F_a + F_f + F_g$$

 $T_t = \text{total peak torque}$ $F_t = \text{total peak force in N}$

 F_a = acceleration force N

 F_f = friction force in N

 F_g = gravity force in N

A simplified expression for acceleration torque and force that provides a reasonable estimation value is:

Rotary

$$T_{\alpha} = \frac{J_{t}\alpha}{e}$$

where:

 T_{α} = acceleration torque

 $J_t = total inertia in$ kg-m²

 α = acceleration in rad/s2

e = transmissionefficiency

$$F_a = \frac{m_t a}{e}$$

 F_a = acceleration force

 $m_t = total mass in kg$

 $a = acceleration in m/s^2$

e = transmission

efficiency

www.aerotech.com 27

A simplified expression for gravity torque and force that provides a reasonable estimation value is:

$$T_g = \frac{0.0016 \text{ W}}{\text{P e}}$$

 $T_g = \text{gravity torque in}$

W = weight of load in kg

P = pitch oftransmission (rev/mm)

e = transmissionefficiency

$$F_g = m_t g$$

 F_g = total force in N

 $m_t = total mass in kg$ g = acceleration from

gravity

rms Torque

Obtaining the root-mean-square (rms) value of the required torque in an application is important because the heating of the motor is related to the square of the rms torque output of the motor.

$$T_{rms} = \sqrt{\frac{\left(0.66 \; T_{\alpha}^{\; 2} + T_{f}^{\; 2} + T_{\omega}^{\; 2} + T_{g}^{\; 2}\right)t}{t_{on} + t_{off}}} \qquad F_{rms} = \sqrt{\frac{\left(0.66 \; F_{a}^{\; 2} + F_{f}^{\; 2} + F_{g}^{\; 2}\right)t}{t_{on} + t_{off}}}$$

where:

Trms = rms torque in oz-in (using 1/3-1/3-1/3 profile)

 T_a = acceleration torque

 T_f = friction torque in N-m

 $T_w = viscous torque in$ N-m

 T_{σ} = gravity torque in N-m

 t_{on} = total move time in seconds

 $t_{off} = dwell time$ between moves

$$F_{rms} = \sqrt{\frac{\left(0.66 F_{a}^{2} + F_{f}^{2} + F_{g}^{2}\right)t}{t_{on} + t_{off}}}$$

 $F_{rms} = rms$ force in N (using 1/3-1/3-1/3 profile)

 F_a = acceleration force in N

 F_f = friction force in N

 F_{σ} = gravity force in N

 t_{on} = total move time in seconds

 $t_{off} = dwell time$

between moves in seconds

Rotary Motor/Ball Screw Example

The specifications of the system are:

Ball-Screw Data

13 mm Diameter: 500 mm Length: Pitch: 0.5 rev/mm Efficiency: 90% (ball screw)

40% (lead screw)

Mechanical Data

Friction coefficient (µ): 0.05 Load: 4.5 kg Orientation: horizontal

Move Profile

Type: 1/3-1/3-1/3 trapezoid

Distance: 8 mm Move time: 0.1 sDwell time: 0.1 s

Motor

Brushless: BM75E

STEP 1. Determine move parameters

The peak speed (ω) and acceleration (α) of the motor required can be determined using the formulas:

$$\omega = \frac{1.5 (25.13 \text{ rad})}{0.1 \text{ s}} = \frac{377.0 \text{ rad}}{\text{s}} = 3600 \text{ rpm}$$

$$\alpha = \frac{4.5 \theta}{t^2} = \frac{4.5 (25.13 \text{ rad})}{0.1^2} = 11310.0 \frac{\text{rad}}{\text{s}^2}$$

Note: Verify that both values are within the specifications of the motor.

STEP 2. Determine motor shaft load inertia

The calculation of the inertia is dependent on the mechanics of the system. For the ball screw the inertia can be calculated by:

$$J_{\text{screw}} = (7.57 \times 10^{-13}) D^4 L \text{ kg} - \text{m}^2$$

$$J_{\text{screw}} = 7.57 \times 10^{-13} (13 \text{ mm})^4 (500 \text{ mm})$$
$$= 1.082 \times 10^{-5} \text{ kg} - \text{m}^2$$

where:

 $J_{\text{screw}} = \text{screw inertia in kg-m}^2$ = screw diameter in mm = screw length in mm

28 www.aerotech.com

The inertia of the load using a ballscrew mechanism can be calculated using:

$$J_{load} = 2.55 \times 10^{-8} \frac{m_{load}}{P^2} \quad kg - m^2$$

$$J_{load} = 2.55 \times 10^{-8} \frac{4.5}{0.5^2} = 4.59 \times 10^{-7} \quad kg - m^2$$

where:

 J_{load} = payload inertia (reflected) in kg-m²

 $m_{load} = payload in kg$

P = screw pitch in rev/mm

From the results above, the inertia at the motor shaft is:

$$J_{\text{system}} = J_{\text{screw}} + J_{\text{load}} = 1.08 \times 10^{-5} + 4.59 \times 10^{-7}$$

 $J_{\text{system}} = 1.13^{-5} \text{ kg} - \text{m}^2$

A motor that gives a good inertia match and meets the required motor speed of 3600 rpm is the BM75E, with an inertia of:

$$J_{motor} = 0.52 \times 10^{-5} \text{ kg} - \text{m}^2$$

Checking the inertia ratio $(J_{system}/J_{motor}) = 2.2:1$. The total inertia of the complete system is given by:

$$J_{system} + J_{motor} = 1.65 \times 10^{-5} \text{ kg} - \text{m}^2$$

Step 3. Calculate peak and rms torque

The acceleration (peak) torque, T_{α} , and friction torque, T_{f} , are now calculated using the system inertia values. The acceleration torque required can be estimated at:

$$T_{\alpha} = \left(J_{\text{motor}} + \frac{J_{\text{screw}}}{e} + \frac{J_{\text{load}}}{e}\right) \alpha$$

$$T_{\alpha} = \left(0.52 \times 10^{-5} + \frac{1.08 \times 10^{-5}}{0.9} + \frac{4.59 \times 10^{-7}}{0.9}\right) 11310$$

= 0.20 N-m

The BM75E can provide 0.53 N-m of continuous torque and 1.41 N-m peak torque, which is much greater than the system requires. The element of friction torque, T_f , can now be derived using the friction coefficient (μ):

$$T_f = \frac{(W\mu)}{2\pi Pe} = \frac{(4.5)(9.8)(0.05)}{(6.283)(0.5)(1000)(0.90)} = 8.0 \times 10^{-4} \text{ N-m}$$

Total peak torque required of the motor is estimated by:

$$T_t = T_{\alpha} + T_f = 0.20 + 8.0 \times 10^{-4} = 0.20 \text{ N-m}$$

Knowing the total torque, the formula for rms torque is applied and determined to be:

$$T_{ms} = \sqrt{\frac{[0.66 \ (0.20)^2 + (8.0 \ x \ 10^{-4})^2] \ 0.1}{0.2}} = 0.11 \ N - m$$

This is well within the motor's rating of 0.53 N-m.

www.aerotech.com 29

Linear Motor Sizing Example

The following specifications summarize the system.

Machine Details

Friction coefficient (µ): 0.002 Load: 10 kg Orientation: horizontal 1.36 bar (20 psi) Air cooling:

Carriage/motor mass: 5 kg

Move Profile

Type: 1/3-1/3-1/3 trapezoid

Distance: 350 mm Move time: 250 ms Dwell time: 275 ms

STEP 1. Determine move parameters

Using the 1/3-1/3-1/3 model:

$$a_{trap} = \frac{4.5 \text{ x}}{t^2} = \frac{4.5 (0.35 \text{ m})}{(0.25 \text{ s})^2} = 25.2 \frac{\text{m}}{\text{s}^2}$$

$$v = {1.5 \text{ x} \over t} = {1.5 (0.35 \text{ m}) \over (0.25 \text{ s})} = 2.1 {m \over s}$$

Note: Most systems utilize a sinusoidal acceleration profile instead of the more easily modeled trapezoidal for system considerations. Sinusoidal acceleration is modeled as:

$$a_{sine} = 1.5 (a_{trap})$$

$$a_{\text{sine}} = 1.5 (25.2 \frac{\text{m}}{\text{s}^2}) = 37.8 \frac{\text{m}}{\text{s}^2}$$

Note: Verify that all values are within the specifications of the system.

STEP 2. Determine moving mass

STEP 3. Calculate peak and rms force

$$m_{total} = m_{load} + m_{carriage/motor}$$

$$m_{total} = 10 \text{ kg} + 5 \text{ kg} = 15 \text{ kg}$$

Breaking up the move profile into four segments, the fundamental equations for calculating forces during a trapezoidal move are:

- 1. $F_a = ma + F_f$
- 2. $F_{trav} = F_f$
- 3. $F_d = ma F_f$
- 4. Cycle dwell time in seconds

Where:

 F_a = force to accelerate the load

 F_{trav} = force during traverse motion

 F_d = force required to decelerate the load

 F_f = force due to friction

ma = mass x acceleration

$$F_a = (ma) = (10 \text{ kg})(25.2 \frac{m}{s^2}) = 252 \text{ N}$$

The friction force is determined by:

$$F_f = \mu m_{total} a_g = (0.002)(15 \text{ kg})(10 \frac{\text{m}}{\text{s}^2}) = 0.3 \text{ N}$$

$$F_{\text{neak}} = F_{\text{a}} = 252 \text{ N} + 0.3 \text{ N} = 252.3 \text{ N}$$

To compute rms or continuous force, dwell time must be known.

Applying the rms force equation from the previous example, F_{rms} is:

$$F_{\text{rms}} = \sqrt{\frac{(F_{\text{a}})^2 (t_{\alpha}) + F_{\text{f}}^2 (t_{\text{trav}}) + (F_{\text{d}})^2 (t_{\text{dec}})}{t_{\text{on}} + t_{\text{off}}}}$$

$$F_{ms} = \sqrt{\frac{(252.3 \text{ N})^2 (83 \text{ ms}) + (0.3 \text{ N})^2 (83 \text{ ms}) + (251.7 \text{ N})^2 (83 \text{ ms})}{(250 \text{ ms} + 275 \text{ ms})}}$$

$$F_{rms} = 141.7 \text{ N}$$

The rms force of 142.4 N is used to select a linear motor. In this case, a BLM-203-A can provide up to 232 N of continuous force and 902 N peak force with 1.36 bar (20 psi) forced air cooling.