MWA:	Environmental Analysis Teaching	Date: X/XX/XXXX	Number: X
POMONA COLLEGE	and Research Laboratory		
	Standard Operating Procedure	Title: Accumet XL600 Meter	
	Approved By: TBD	Revision Date: Decem	ber 6, 2017

1. Scope and Application

1.1 This SOP describes how to use the Accumet meter system to measure and monitor a variety of water-based electrochemical parameters including pH, conductivity, temperature, salinity, dissolved oxygen, and ion-selective mV.

2. Summary of Method

2.1 This SOP does this . . .

Contents

1	Scope and Application	1
2	Summary of Method	1
3	Definitions	3
4	Biases and Interferences	3
5	Health and Safety Safety and Personnnel Protective Equipment	3
6	Personnel & Training Responsibilities	3
7	Required Materials and Apparati	3
8	Reagents and Standards	4
9	Estimated Time	4
10	Sample Collection, Preservation, and Storage	4
11	Procedure pH Measurements	4 4 4 5 5
	Conductivity	5

Author: Kate McWilliams
File: Accumet pH v03.tex

Page: 1 of 10

12	Data Analysis and Calculations Graphing	5 5
13	QC/QA Criteria	6
14	Trouble Shooting	6
	No response or all buffers read the same pH	6
	Slow electrode response with excessive crystallization inside the electrode	6
	Slow electrode response with due to clogged junction	6
	Dried Salt Deposits	7
	Slow electrode response, noisy, unstable or eratic readings	7
15	Calibration	7
	Temperature Probe	7
	pH Probe	8
	Conductivity	9
16	References	10

Author: Kate McWilliams

3. Definitions

- **3.1** Term 1: Electrode- The glass electrodes are ion-selective meaning the glass membrane is sensitive to a specific ion. For example, the pH electrode is sensitive to hydrogen ions.
- **3.2** Term 2: Reference Cavity-
- **3.3** Term 3: Buffer- A buffer solution is one which resists changes in pH when small quantities of an acid or an alkali are added to it. Buffer solutions are used as a means of keeping pH at a nearly constant value in a wide variety of chemical applications.

4. Biases and Interferences

4.1 Biases and interferences can come from ...

5. Health and Safety

5.1 Describe the risk . . .

Safety and Personnnel Protective Equipment

6. Personnel & Training Responsibilities

- **6.1** Researchers training is required before this the procedures in this method can be used...
- **6.2** Researchers using this SOP should be trained for the following SOPs
- SOP01 Laboratory Safety
- SOP02 Field Safety

7. Required Materials and Apparati

- 7.1 Accumet XL600 Benchtop Meter (XL94105590)
- **7.2** BOD Probe (2446146 445)
- 7.3 Automatic Temperature Compensation (ATC) Probe (93X306506 505)
- **7.4** pH Electrode (13 620 183A)
- 7.5 Conductivity Electrode (13 620 100)

Author: Kate McWilliams Page: 3 of 10

7.6 Standards for calibration (pH 4.00, 7.00, 10.00, conductivity, and a small bottle that can be used to make the DO standard)

8. Reagents and Standards

- **8.1** Buffer Solution pH 4, 7, 10.
- 8.2 Conductivity Standard 1000 μ mho/cm @ 25 degrees celsius

9. Estimated Time

- **9.1** This procedure requires XX minutes . . .
- 10. Sample Collection, Preservation, and Storage

11. Procedure

- 11.1 To turn on the Accumet, hold the power button for three seconds.
- 11.2 If Standardization Due Warning appears, follow the steps in Section 12 to calibrate standard parameters for each measurement type.

pH Measurements

- 11.3 If the pH electrode has been stored dry, soak in storage solution for 10 minutes before standardization to saturate the pH electrode surface and minimize drift. If storage solution is not available, use a neutral pH buffer. While okay for rinsing, do not store pH electrodes in deionized or distilled water as this will dehydrate the electrode and decrease performance.
- 11.4 In the single channel measurement display of pH, select the Measurement icon on the right-side menu. A graph will appear and begin tracking pH.
- 11.5 Fill the outer cavity with the liquid you wish to measure and stir gently.
- 11.6 See section to learn how to standardize the pH parameters.

pH

11.7

11.8 Stir the standards and samples to speed up the response and permit a more representative measurement.

Author: Kate McWilliams Page: 4 of 10

11.9 After measurement, remove the electrode from the sample rinse with clean water. Do not wipe the electrode. This may impart a static charge, and result in an unstable reading. A hydrated electrode is important rinse and shake dry without wiping, and place the electrode into your storage solution.

Temperature

- 11.10 The ATC probe eliminates errors calculating pH. This is necessary because accuracy of the pH probe decreases as samples deviate from 25 degrees C and pH 7. If you are not using an ATC probe, the default temperature (25 degrees C) will be used instead. The default temperature range is -10 degrees C to 110 degrees C.
- 11.11 If you are measuring the pH of a solution that is not 25 degrees C and you are not using an (ATC) probe, enter the temperature value of the solution for best results. The manual temperature compensation (MTC) value will be visible on the screen. The default temperature can be set from -5 degrees C to 105 degrees C.
- 11.12 Set Default Temperature. First, select temperature units C Celsius, F Farenheit, or K Kelvin. Then Touch the **Default Temperature** box and use the numeric keypad to enter the desired default temperature. Press **Enter** in the keypad to return to pH (pH FET) Setup screen

BOD (Biological Oxygen Demand)

11.13 Calibration

Conductivity

12. Data Analysis and Calculations

Graphing

- 12.1 The efficiency of the electrode is reported as the slope. Slope can be described as percentage where 100% is ideal, or as a mV/decade unit. When performing standardization with 3 or more standards, multiple slopes will be calculated by the instrument. The slope that appears on the screen during measurement, is the slope which is applicable to the zone in which the measurement is currently being made. For example, if pH 4, 7, and 10 are standardized, and a sample of pH 5 is being measured, the slope displayed would be the slope calculated between 4 and 7. The slopes are independent of each other.
- 12.2 Real-time data can be viewed on a graph to view changes over brief or extended periods. Time is plotted in seconds. The graph refreshes every hour from the start of graphing.

Author: Kate McWilliams Page: 5 of 10

- 12.3 Select Show Graph. A graph will be displayed on the lower half of the screen where various measurement details were previously displayed.
- 12.4 To track live measurement data on the graph, select Start Plotting. The measurement data will continue until Stop Plotting is selected. When stopped, the graph can be dragged left/right and up/down.
- **12.5** Select the Zoom In or Zoom Out options to examine the data more closely or broadly.
- 12.6 To remove the graph display and revert to display measurement data on the lower half of the screen, select Hide Graph. Note:Measurement data will continue to be tracked on the graph until Stop Plotting is selected.

13. QC/QA Criteria

14. Trouble Shooting

No response or all buffers read the same pH

14.1 Verify that the correct meter input and channels are connected. Try removing the electrode storage bottle or rubber buld guard to ensure contact with sample. If the meter has automatically frozen reading, be sure the meter's hold or auto read feature are off. Lastly, try replacing the electrode.

Slow electrode response with excessive crystallization inside the electrode

14.2 Verify that the fill hole is open durign measurements and closed during storage. Otherwise, the electroclyte flow could be clogged with supersaturated electrolyte. Flush and refill electrode. Remove the filling solution through the fill hole with a syringe or by shakign it upside down. Repeatedly flush and rinse the reference cavity with clean water at a temp of 60-80 degrees celsius to dissolve crystals. Replace the filling solution and apply gentle pressure to filling hole. Hydrate the electrode with in storage solution of pH 4 buffer.

Slow electrode response with due to clogged junction

14.3 For protein deposits, prepare a 1% pepsinsolution in 0.1M HCI and soak the reference junction for one hour. Rinse the electrode with distilled water. For general cleaning, heat a diluted KCI solution to 60 to 80 degrees celsius and soak the sensing bulb for about 10 minutes. All the electrode to coll in unheated KCI solution.

Author: Kate McWilliams Page: 6 of 10

Dried Salt Deposits

14.4 Dissolve the salt deposits in warm tap water and then soak the electrode briefly in pH 4 buffer.

Slow electrode response, noisy, unstable or eratic readings


14.5 Clean the electrode with mild detergent and warm water and then hydrate. Allow the electrode to reach sample temp. Take 30 minute readings and soak the electrode in pH buffer for 1 minute between measurements.

15. Calibration

Temperature Probe

- **15.1** Connect the ATC probe and place it into a solution with a known accurate temperature such as a constant temperature bath.
- 15.2 When the temperature reading is stable, select Standardize from any measure screen, and then select the Temp Std. icon. The upper display shows the current factory default temperature without standardization (A), while the lower display will be the new standardization temperature(B).
- 15.3 To enter a new Standardization Temperature, select the box and enter value using the keypad that will appear. Select OK to accept the new temperature.

Author: Kate McWilliams Page: 7 of 10

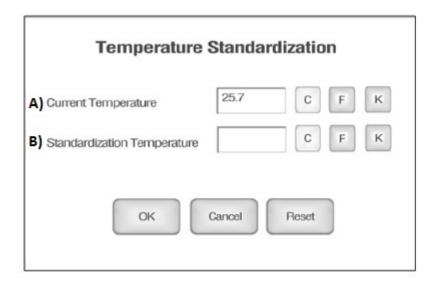



15.4

pH Probe


- 15.5 In PH Setup, select the buffer group custom, as this allows manual buffer recognition. There is an option for autodetection for setting parameters, but in this course we will only use manual.
- 15.6 Back at the pH measurement display, select (Standardize) at the top right.
- 15.7 If the pH electrode has been stored dry, soak in storage solution for 10 minutes before standardization to saturate the pH electrode surface and minimize drift. If storage solution is not available, use a neutral pH buffer. While OK for rinsing, do not store pH electrodes in deionized or distilled water as this will dehydrate the electrode and decrease performance.
- 15.8 Fill outer cavity with the first standard, pH 4. The level of electrolyte in the outer cavity should be kept above the level of the solution being measured to prevent reverse electrolyte flow. The electrolyte need only be immersed far enough to cover both the glass pH sensing bulb and reference junction to obtain accurate readings.
- **15.9** Enter pH value in the keypad on the screen.
- 15.10 When dispay reads (Stable), select Confirm to accept the value and return to measurement screen. A warning message will appear if the standardization is accepted by the instrument but is not within range. An error message will appear if

Author: Kate McWilliams

Page: 8 of 10

the standardization is not accepted.

15.11 Now dispose of the buffer in the outer cavity and rinse the cavity and electrode. Repeat from step to input standards pH 7 and pH 10.

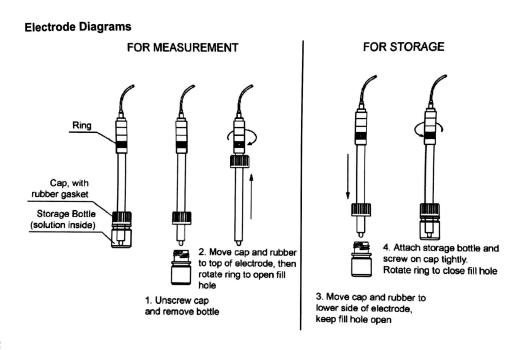

15.12

Conductivity

15.13 In Conductivity Setup, select MANUAL to enter the conductivity value of your standard. You may set Single Point Standardization in which the single standard applies to all ranges, or Multi Point Standardization in which a single stard is applied to an specific range. When using a Multi Point standardization, perform standardization in each range that you expect to use for best results.

	Conductivity (/cm)	Resistivity (/cm)
Range 1:	0.000 μS – 199.9 μS	0.000 Ω – 19.99 kΩ
Range 2:	200.0 μS – 1.999 mS	20.00 kΩ – 199.9 kΩ
Range 3:	2.000 mS - 19.99 mS	200.0 kΩ – 1.999 ΜΩ
Range 4:	20.00 mS – 500.0 mS	2.000 MΩ & above

15.14

15.15 Cell Constant. Select the nominal cell constant of the conductivity electrode you are using. There are three cell constants to choose from. Each is used for

Author: Kate McWilliams

a different range. The following indicates the optimal conductivity range for the accumet conductivity cells. For resistivity measurements, an electrode having a nominal 0.1 cell constant (13-620-101 or equivalent) is recommended.

cm 10.00 / cm

Cell Constant	2-Cell	4-Cell
0.1	0.5 to 200 µS/cm	Not Available
1.0	0.01 to 2 mS/cm	0.01 to 20 mS/cm
10.0	1 to 200 mS/cm	1 to 200 mS/cm

15.16

16. References

- **16.1** APHA, AWWA. WEF. (2012) Standard Methods for examination of water and wastewater. 22nd American Public Health Association (Eds.). Washington. 1360 pp. (2014).
- 16.2 Online Instruction Manual can be found here: link

Author: Kate McWilliams

Page: 10 of 10