

Assembly Supplement for SiPM Optode
E. Hazen – 2026-10-13


Required Materials

1. Standard detector optode cable with 3 conductors plus shield, pinout below.
2. Detector housing, double chip (to accommodate two chips as shown)
3. Optode cap
4. PCB Assembly with
    1. (1) PCB fabricated from SiPM_Ada_S13360_v05_DualTip_Gerber.zip
    2. (2) Hamamatsu S13360-3050PE
    3. (1) Thermistor NTC 10k e.g. Kamaya JSNB103F397FBBXG
5. Epoxy and potting compound as used for source optodes

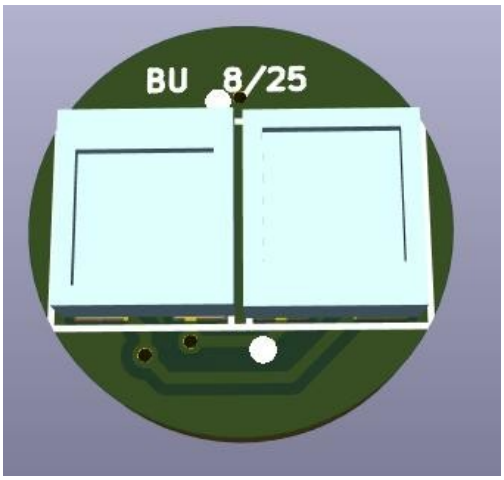

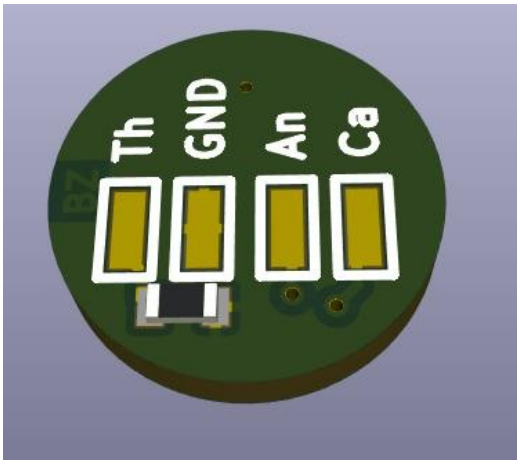

PCB Assembly View. Note that there are two S13360-3050PE SiPM modules with opposite orientations. This results in a 0.5mm vertical offset between the center of the photosensitive areas (probably not important).

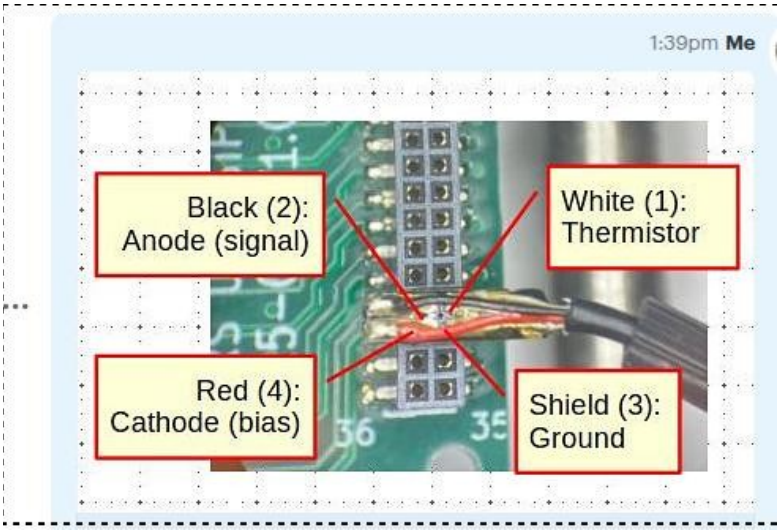

No	Color	Function	PCB Label
1	White	Thermistor	Th
2	Black	Anode	An
3	Shield	Ground	GND
4	Red	Cathode	Ca

Cable Pinout for SiPM Optode