


Laundry Install Quick Reference Guide

**A successful Laundry install
REQUIRES pre work to be done**

Product Placement

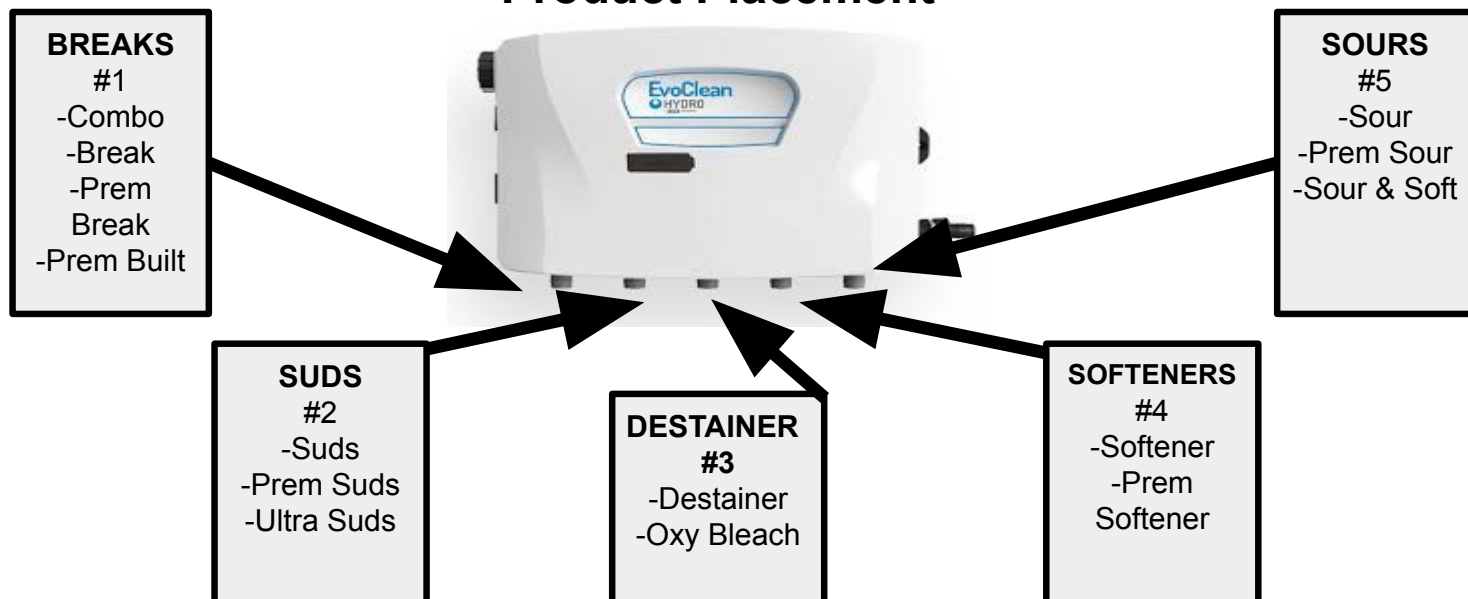

Wiring Interface to Machine

Signal 1- **Black** and **Brown** together for Break & Suds

Signal 2- Leave **Red** by itself for Destainer

Signal 3- **Orange** and **Yellow** together for Soft & Sour

Signal 4- **Blue** by itself for AFS (Auto Formula Select)




TRIGGER Non-programmable machines cannot use this feature

Commons- Tie all White Striped wires together with a jumper to attach to the common connector



*Milnor EP-Express: Blue (AFS Trigger) goes on Signal #1 as it's the only one that can be edited

Examples of machine supply signals

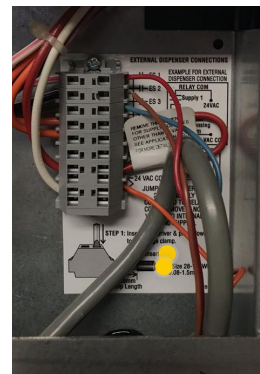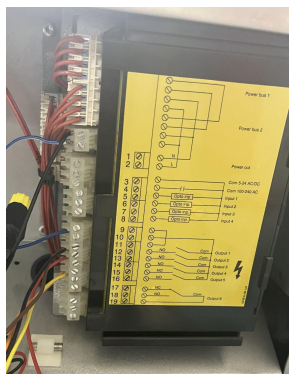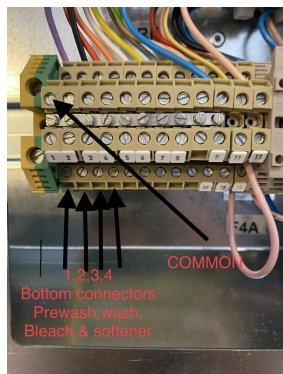

Standard Machine Cycle

Operation	Time	Temp	Supplies
Flush	2 Min	High	Split (<110F)
Drain	1 Min		
Wash	8 Min	Low	Hot (140-160F)
Drain	1 Min		
Bleach	7 Min	Low	Hot (140-160F)
Drain	1 Min		
Rinse	2 Min	High	Split (<120F)
Drain	1 Min		
Rinse	2 Min	High	Split (<120F)
Drain	1 Min		
Rinse (Final)	4 Min	Low	Split (<80-120F)
Drain	1 Min		
Extract	6 Min		
Tumble	1 Min		
Stop	0		Buzzer
Formula Time: 38 Minutes plus fill time			

For Colors, eliminate Bleach. Specialty formulas may include: Table Linens, Heavy Soil, Bed Pads, Mops/Rags, Microfibre, New Linen - US Chem rep can help with formulas if needed

Evoclean Calibration

- With a clean graduated cylinder (10 ounce preferred)
- Pour at least 8 ounces into the cylinder
- Insert the corresponding pick-up tube into the product
- From the Calibrate Pumps screen choose 'timed calibration'
- Run the pump to draw product out of the cylinder
- Measure the remaining product in the cylinder
- The difference is the amount pumped- enter that amount into the control head
- Repeat for each product
- Exit Pump Calibration

Suggested Chemical Amounts 50# Machine

WEIGHT:	50#														
	Combo	Prem Built	Suds	HD Det	Prem Suds	Break	Prem Break	Destainer	Oxy Bleach	Sour	Prem Sour	Sour/Soft	Softener	Prem Soft	Sizing
Sheets	5.0	1.2	3.0	3.0	0.7	2.0	0.6	2.5	3.0	1.0	0.3	1.8	1.0	0.3	3.0
Towels	5.0	1.4	2.0	2.0	0.7	3.0	0.8	3.0	3.0	1.0	0.3	2.0	1.0	0.4	3.0
Blanket	2.0	1.0	2.0	2.0	0.7	0.0	0.0	0.0	0.0	1.0	0.3	2.0	1.0	0.4	3.0
Table Linen	6.0	1.2	3.0	3.0	1.0	3.0	1.0	0.0	3.0	1.0	0.3	0.0	0.0	0.0	3.0
Reclaim	8.0	1.6	4.0	4.0	1.2	4.0	1.2	5.0	4.0	1.0	0.3	2.0	1.0	0.3	3.0

*** Standard Rules to Follow ***

- #1 Prepare for the instal - Gather machine info, formulas, supplies (typically sales will have formulas for you to use, ASK THEM FOR IT)
- #2- Understand & take pictures of existing wiring BEFORE removing
- #3 Calibrate all pumps/products
- #4 Label pick up lines and provide formula chart
- #5 Test cycles before leaving to ensure all chemicals are being dispensed accordingly