


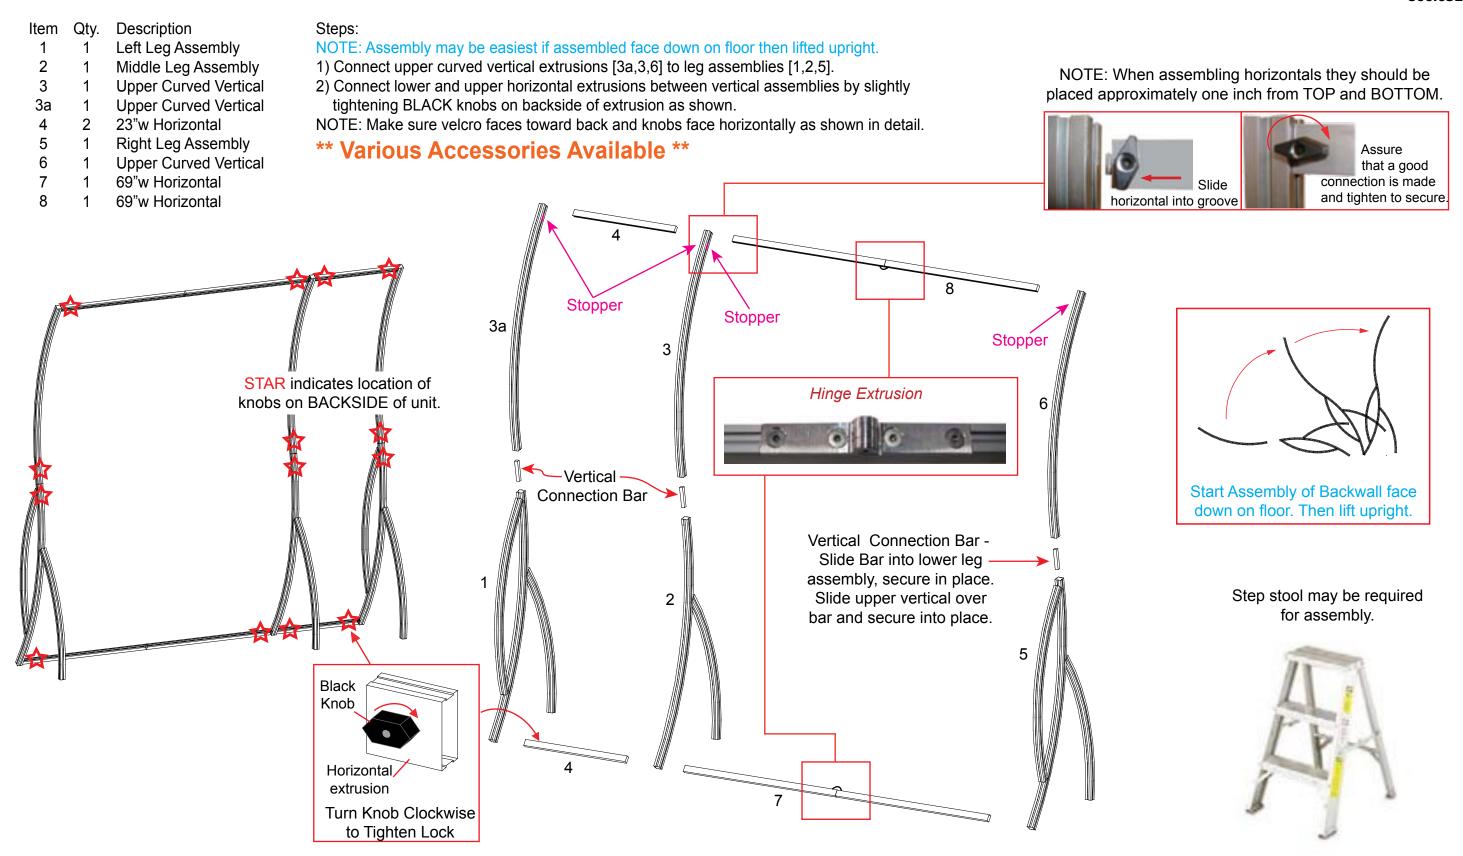

Order #XXXXX - P10 - Backwall Assembly

866.652.2100



www.classicexhibits.com

WHEN DISASSEMBLING TIGHTEN ALL KNOBS TO PREVENT LOSS DURING SHIPPING

Order #XXXXX - P10 - Backwall Attachments Step 2

Light Connection Attach lights to backwall where - - - 🔟 desired and tighten in place. A10's 1 Example of A10 Clamp Attachment When desired location is found, tighten 9----> set screw to secure. - 🗐 - - - . Slide connector on back Tighten knob to secure of A10 clamp into groove shelf/wing in place. of extrusion. - 🕮 - - -Wings



WHEN DISASSEMBLING TIGHTEN ALL KNOBS TO PREVENT LOSS DURING SHIPPING

866.652.2100

866.652.2100

Part Number Description

A Left Leg Assembly B Right Leg Assembly


C Horizontal Extrusion


D Horiontal Extrusion w/ Door Stopper

Steps:

- 1) Connect lower horizontal extrusion [C] between bottom of leg assemblies [A and B] as shown.
- 2) Insert Laminated infill into grooves of leg assemblies [A and B].
- 3) Attach extrusion door between leg assemblies [A and B] and on top of laminated infill.
- 4) Attach upper horizontal extrusion w/ door stopper [D] between leg assemblies [A and B], and set flush with top of legs [A and B].

NOTE: Make sure the lock is flush with extrusion before tightening. If lock will not fully engage, gently rock lock and extrusion back and forth while turning knob until lock fully opens.

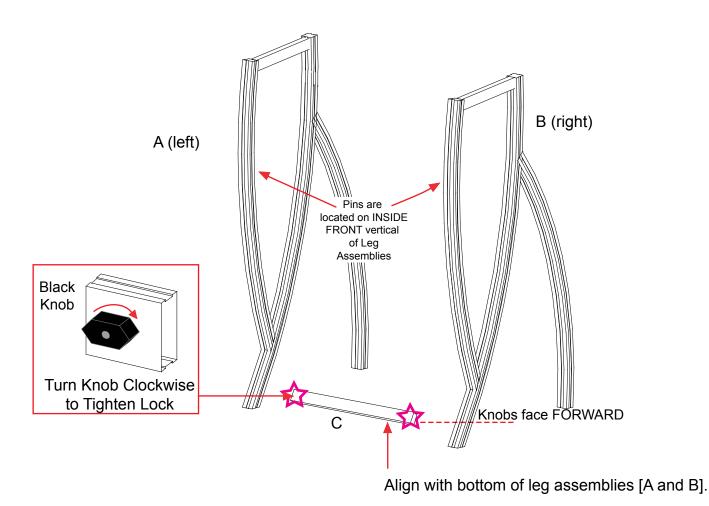

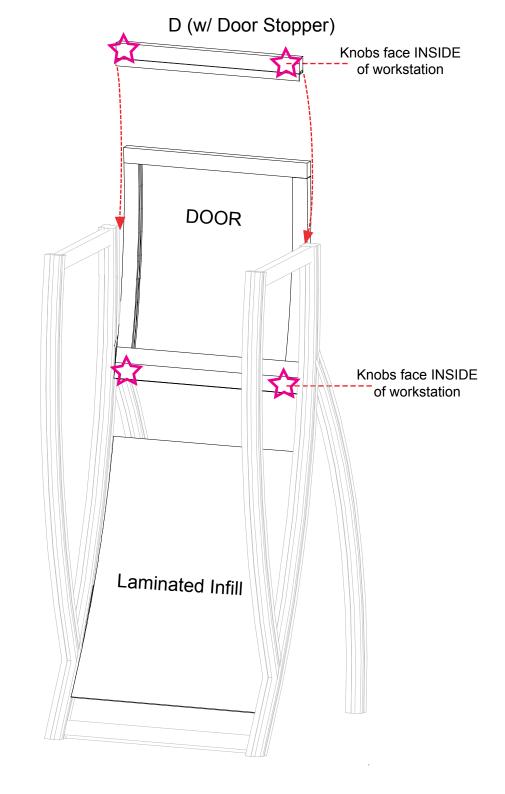

WHEN DISASSEMBLING TIGHTEN ALL KNOBS TO PREVENT LOSS DURING SHIPPING

www.classicexhibits.com

© 2014


866.652.2100

Part Number Description


E Horizontal Extrusion
F Horizontal Extrusion

Steps:

- 1) Attach horizontal extrusion [E] between vertical leg assemblies [A and B] as shown below.
- 2) Insert Laminated infill into grooves of vertical leg assemblies [A and B].
- 3) Attach upper horizontal extrusion [F] between vertical leg assemblies [A and B] atop infill.
- 4) Place internal shelf into assembled pedestal atop pins...
- 5) Set Counter atop assembled pedestal and secure with Velcro straps attached to underside of top.

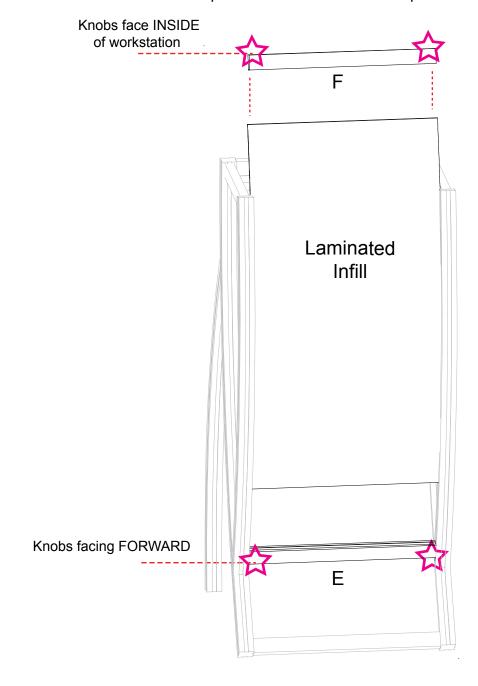

Place internal shelf into workstation then place counter atop assembled workstation.

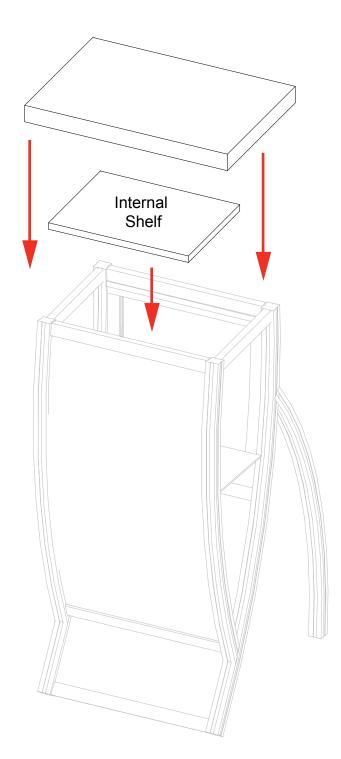






© 2014

866.652.2100

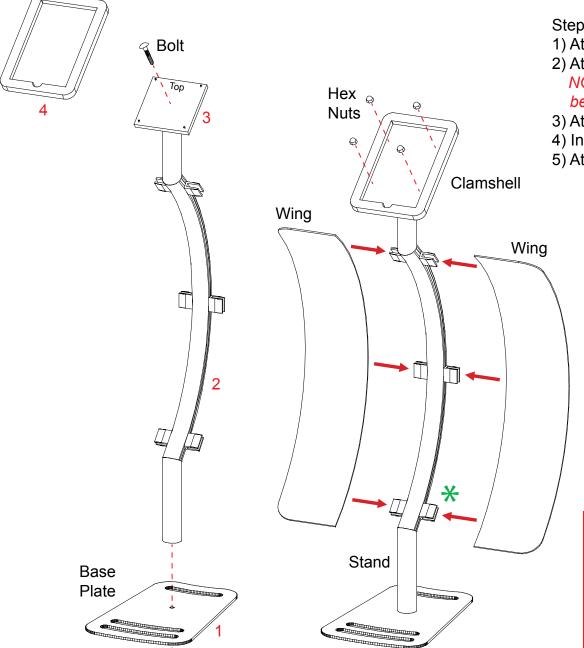

Steps:

- 1) Attach base [1] to curved vertical [2] using bolt.
- 2) Attach square plate [3] to vertical [2] using bolt. NOTE: Square plate [3] must rotate to left and right before installing clamshell
- 3) Attach clamshell [4] to square plate [3] using hex nuts.
- 4) Insert iPad and feed wire through hole.
- 5) Attach wings to stand. Refer to detail.

Tools Required:

A10 Clamp Detail

Tighten set screw to


secure A10 to extrusion.

Tighten knob to secure


header/wing in place.

- 1) Hex Tool
- 2) Pliers




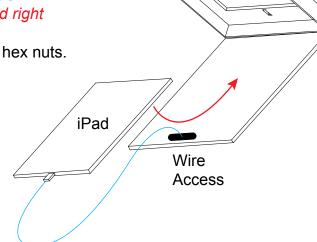

Lock

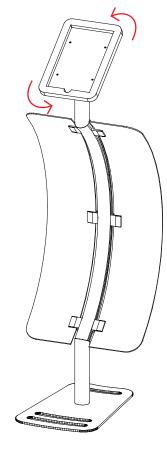

Optional Cover for Home Button

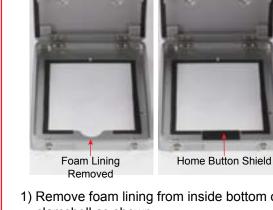

- 1) Remove foam lining from inside bottom of clamshell as shown.
- 2) Attach Home Button Shield with double-sided tape to inside of clamshell, keeping top of shield flush with clamshell opening as shown.

NOTE: This is a permanent fix and can't be easily removed.

Wire Management for iPad





Feed iPad charging cord through holes from top to bottom of post as shown.


Bolt


WHEN DISASSEMBLING TIGHTEN ALL KNOBS TO PREVENT LOSS DURING SHIPPING


Top View of Each Level

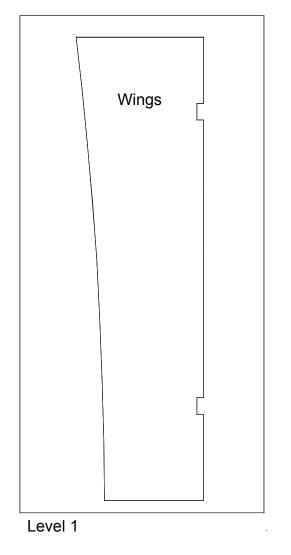

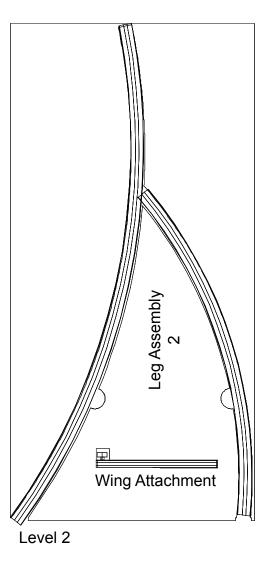

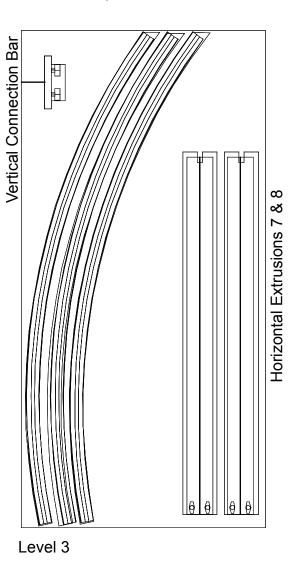

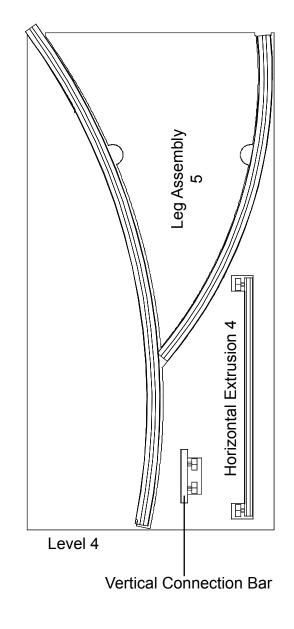

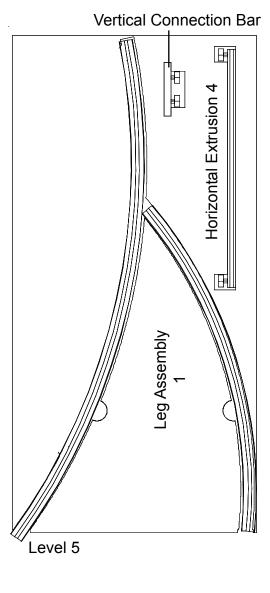

Additional Items:

- Setup Hardware
- Graphic

patent D599,121

- (3) Lights

Top View of Each Level

