
Clamshell






- 1) Attach base [1] to vertical [2] using bolts.
- 2) Attach square plate [3] to vertical [2] using bolts.

 NOTE: Square plate [3] must rotate to left and right before installing clamshell.
- 3) Attach clamshell [4] to square plate [3] using hex nuts.
- 4) Insert iPad and feed wire through hole as shown in detail.

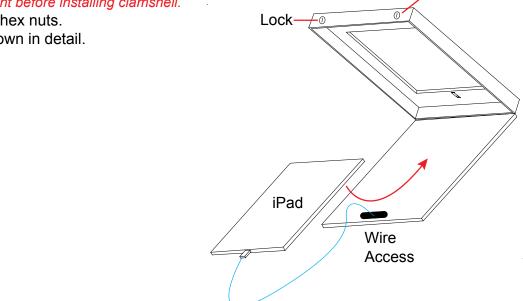

Rotate clamshell to turn iPad from portrait to landscape orientation

When assembled

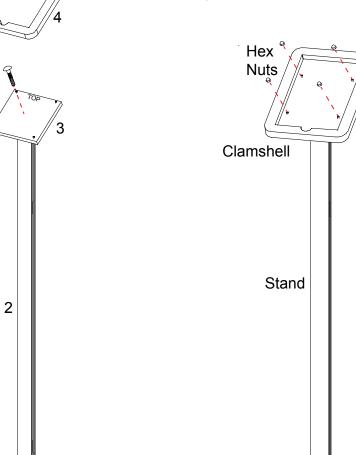






Feed iPad charging cord through holes from top to bottom of post as shown.


Optional Cover for Home Button

Lock

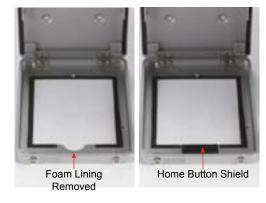

- 1) Remove foam lining from inside bottom of clamshell as shown.
- 2) Attach Home Button Shield with double-sided tape to inside of clamshell, keeping top of shield flush with clamshell opening as shown.

NOTE: This is a permanent fix and can't be easily removed.

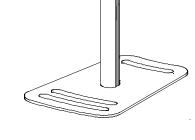

Tools Required:

- 1) Hex Tool
- 2) Pliers



