
## Setup Instructions




 Assemble the bungle cord poles by pushing the shafts in the corded post.

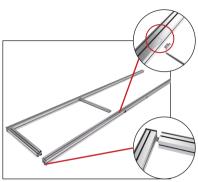


2. Connect only one horizontal on the first joint, see picture.



3. Lift the frame and fit to the base, push it all the way in to the round plate.

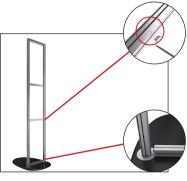

 Force this last profile in place and lock both sides, it is made a little tight so it locks the frame.

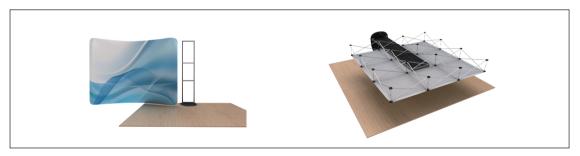


5. Assemble waveline frame and place in front of Standroid make sure in middle.

After you assemble standroid ,lay horizantac and slide onefabric in position.



6. From the back insert the 2 bolts that secure the TV profile. There are 3 holes you can select the height you need, push the fabric against the screw and make a hole in the fabric.



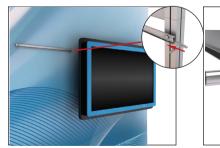



7. Use the bolts supplied and attach to the TV as you can see in the above images. Bolts(A) slide in to the hanging profile. Use wing nuts to secure TV profile.



8. After you connect the TV unit you can cover the wires and the connections by using the supplied black fabric.