


QUICK START INSTRUCTIONS HINGED CHANNEL BAR

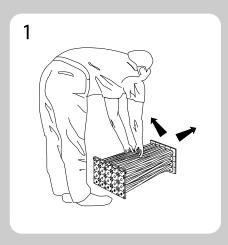

Remove frame from case and place on floor. Place frame with the yellow dots on the bottom facing you. Grasp upper ends of frame and pull up and outwards. Continue pulling up and outward until the frame is fully expanded.

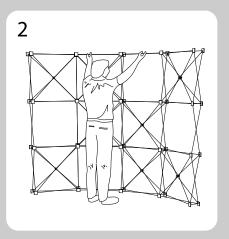


Frame should pop into a fully open and upright position. Yellow dots on bottom row of hubs should be on the floor.

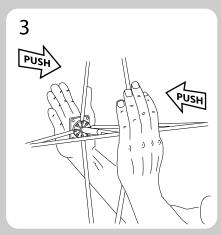


Ensure that spacer bars are fully engaged and




Connect each three-section channel bar assembly by inserting the sections that are pre-attached with bungie cords. By straightening out the channel bar assembly the bungie cords will automatically align the assembly.

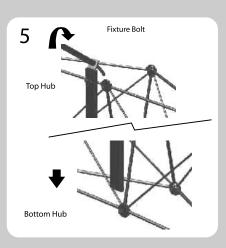


Place the channel bar assembly onto the frame by first attaching it to the top hub. Slide it onto the top hub, then slide the Lower channel bar onto the bottom hub. Slide gently downward to engage.

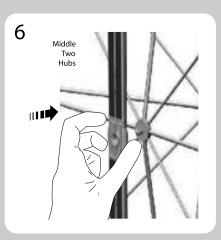


Attach the center sections of the channel bar assembly to the middle two hubs by pushing the channel bar assembly onto the hub. The bushing on the hub should engage through the hole in the connector assembly. Repeat for remaining channel bars at all panel locations.

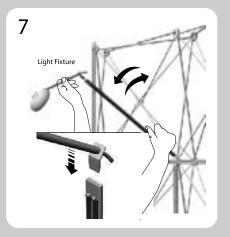

To attach light fixtures, first disengage the upper channel bar from the top hub and tilt downward. Push the light fixture down into the top of the channel bar. Tilt channel bar with light fixture back up and re-engage to the top hub. Drape cable over the frame.

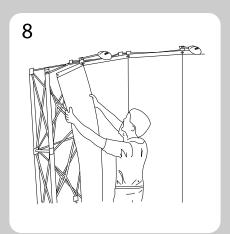


Hold a front panel on its side edges about 1/3 of the way down from the top. Lift section and guide notches over the panel pegs on the top hubs. Slowly release the panel, allowing it to roll down the channel bars. Repeat for all front panels aligning them as you go.

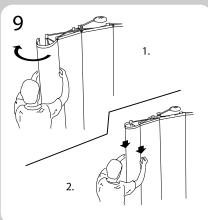


1. Lift end panel and guide front notch of plastic plate over front peg. Hook the other side on the


panel, attaching magnetic strips to the channel

bars and straightening as you go.




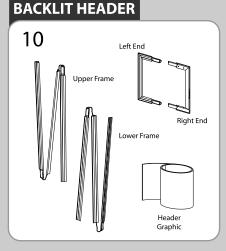


To assemble the Backlit Header: Unpack and identify frame parts shown above.

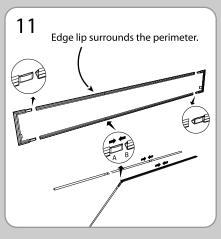


Assemble the upper and lower straight sections by inserting A side (with metal spring) into B side, as shown in detail illustration above. Insert the U-shaped end pieces into the ends of the assembled straight sections.

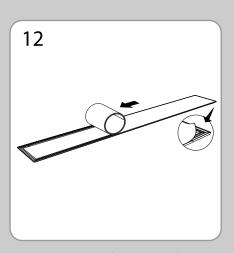


Place the assembled frame on the floor with the velcro side facing up. Roll up the graphic panel, making sure the velcro is on the outside. Matching the end of the graphic to the end of the frame, slowly unroll the graphic while guiding your hand along the edge to keep it even. Press to secure.

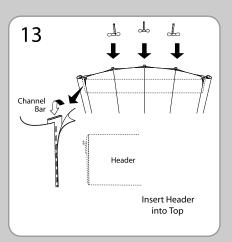


Lift the completed header assembly and hang it by inserting the brackets into the top of the channel bars. Hang lights by inserting the light bracket into the top of the channel bars.

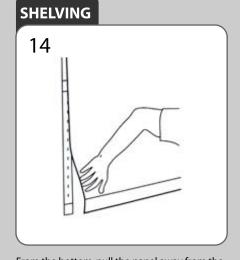

From the bottom, pull the panel away from the frame to expose the slots in the channel bar

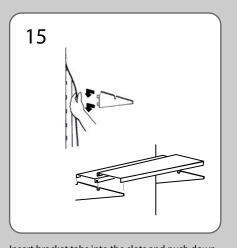


Insert bracket tabs into the slots and push down into place. Place the second bracket level with the first. Attach each shelf with the notches facing the back. Secure each shelf by making sure it is pressed down into the slots in the brackets.

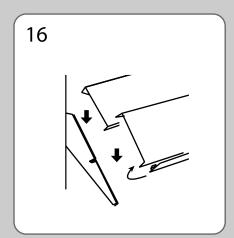


Snap the literature strip onto the front edge of the shelf after shelves are installed.

CASE OPTIONS

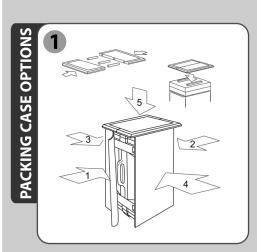


Case Conversion: Assemble the top as shown and place on the case. Attach panels in the numbered order shown. Velcro the blotter (#5) to the counter top.

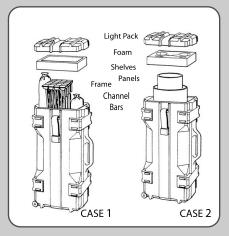


Case packing: Collapse frame, pack in box and insert into Case1. Pack lights & channel bars in bags and pack in Case1. Roll up panels fabric to fabric and insert into Case2, Cases can be strapped together to roll as a complete unit.

Note: Graphics Roll Individually with image

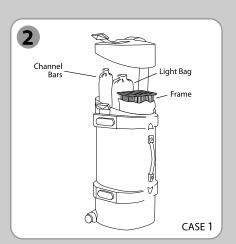


Collapse frame, pack in bag and insert into Case 1. Pack lights in bag and pack in Case 1 next to channel bar bag as shown.

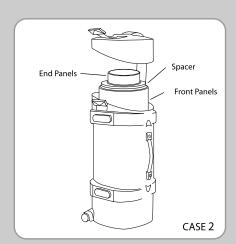


Roll up panels fabric to fabric and insert into Case 2 as shown. Once two cases are loaded they can be strapped together for easy transport.


Note: Graphics Roll Individually with image side out against a plastic liner.

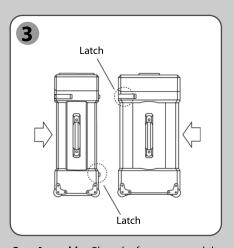

Case Assembly: Place the frame case and the panel case next to each other with handles on same side. Align the upper two and lawer two latches and Latch together.

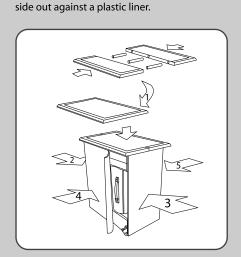


Case Conversion: Assemble top as shown and place on cases. Attach panels in numbered order shown. Velcro blotter to table top.

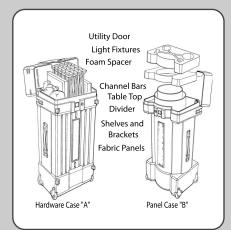


Case packing: Collapse frame, pack in box and insert into Case A. Pack shelves & channel bars in bags and pack in Case A. Roll up panels fabric to fabric and insert into Case B. Cases latch together two places to roll as a complete unit.

Note: Graphics Roll Individually with image

side out against a plastic liner.

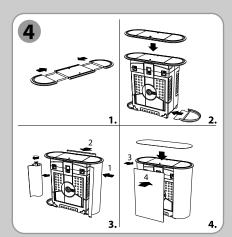


Case Conversion: Assemble top and secure to case using a coin to tighten the two fasteners. Slip an end tray under both sets of wheels. Store panel liners and bags under table top overhang. Attach panels in numbered order as shown.

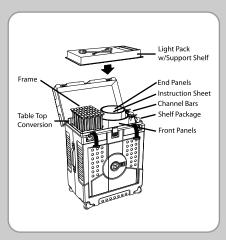

Case Packing: Roll and load skirts followed by panels and ends. Load your frame next followed by the channel bars, shelves, headers and table top conversion. Connect support straps and lay the light pack on top of straps. Close lid and lock. Refer to inside of case lid for additional instructions.

Note: Graphics Roll Individually with image side out against a plastic liner.

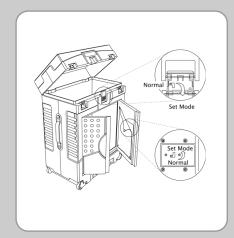


Changing Combination Locks:

Upper Lock: Lift latch on expose underside. Move metal tang from Normal to Set position. Lower latch and set desired combination. Lift latch and move tang back to normal position.


Lower Lock: Open case doors and unsnap accessory pouch. Locate metal tang on lock backplate. Move from Normal to Set position. Set desired combination. Move the tang back to normal position.



Case Conversion: Stretch the Lycra skirt over the empty case as shown with the seam of the skirt at the rear of the case (wheel side).

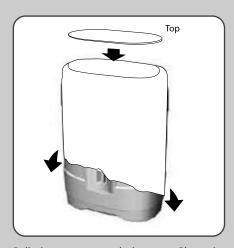

Pull down to conceal the case. Place the counter top onto the top attaching it to the Velcro.

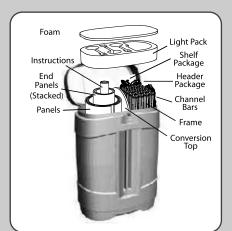


To Pack: Slide conversion top section into center sleeve of case to act as a divider. Roll panels in pairs surface to surface and insert into left side of case. (Graphics require protective liners.) Stack end panels separated by a plastic donut. Insert ends into sleeve. All hardware packs on the right.

Note: Graphics Roll Individually with image side out against a plastic liner.




Case Conversion: To convert the empty case into a counter, wrap the fabric skirt panel around case as shown and overlap the magnetic strips at the rear wheel side of the case. Place the counter top onto the lid of the case with the laminated side up to complete.

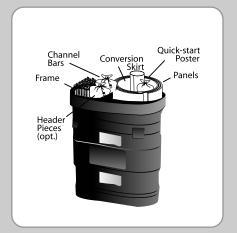

To pack: Roll up panels in pairs, surface to surface, and insert into the round side of the case. Place frame & channel bars into bags, insert into other side of case.

Note: Graphics Roll Individually with image side out against a plastic liner.

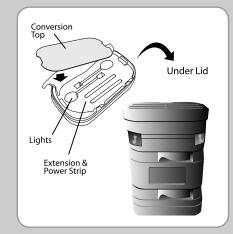

Pull back the foam cover inside the main lid to insert the lights, extension cord and power strip. Replace foam and insert the conversion top, or plastic shipping protector. Attach velcro straps to hold in place. Flip over Lid and close all 4 latches.