



## General Setup Instructions


- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.




- For Cleaning Metal, Plex, & Laminate Parts:
  Use a MILD NON-ABRASIVE cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure.
   Heat and UV exposure will warp and fade components.
- Retain all provided Packing Materials.
  All provided packing materials are for ease of repacking & component protection.

## Disassembly

- For loss prevention, tighten all setscrews and locks during disassembly

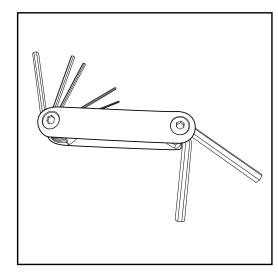


Hex Tool - Essential for Assembly

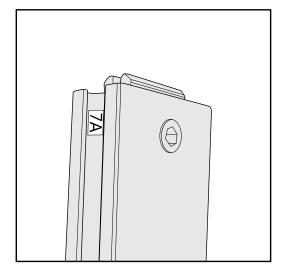


Part Identification - Numbering



# MARNING

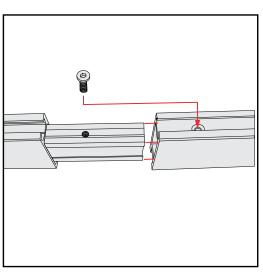

Spline Connection

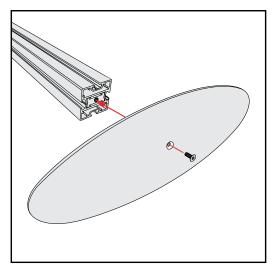


Base Plate & Extrusion Connection




DO NOT USE POWER TOOLS



LADDERS OR LIFTS MAY BE REQUIRED

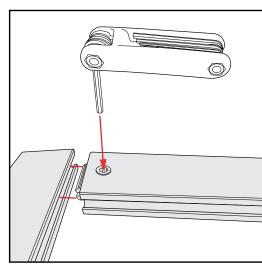

**Extrusion & Lock Connection** 

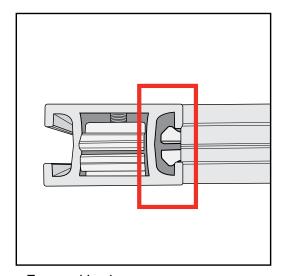

Engaged Lock



ALL CONNECTIONS MUST BE TIGHTLY SECURED




#### Order #XXXXX - Backwall Assembly

Item	Qty.	Description	Item	Qty.	Description
1	1	94"h Q914 Vertical Extrusion w/ Door Hinges	7	1	94"h Q914 Vertical Extrusion
2	1	36"w Z45 Horizontal Extrusion	8/8A	1/1	23"w Z45 Horizontal Extrusion w/ Velcro
2A/2B	1/1	36"w Z45 Horizontal Extrusion w/ Velcro	9/9A	1/1	9"w Q914 Horizontal Extrusion
3	1	94"h Q914 Vertical Extrusion	9B	1	9"w Z45 Horizontal Extrusion
4/4A/4B	1/1/1	23"w Z45 Horizontal Extrusion	10	1	94"h Q914 Vertical Extrusion
5	1	94"h Q914 Vertical Extrusion	11/11A/11B	1/1/1	23"w Z45 Horizontal Extrusion
6/6A	1/1	36"w Z45 Horizontal Extrusion w/ Velcro	12	1	94"h Q914 Vertical Extrusion

# 12 11B 2B Small Infill B 2A Front Infill Large Infill 9B\_\_\_ 5 11A Small Infill 4 Front Infill Large Infill

- 1) Connect horizontals [2], [2A], & [2B] between verticals [1] & [3].
- 2) Attach horizontals [8] & [8A] between verticals [1] & [7].
- 3) Connect horizonals [6] & [6A] between verticals [5] & [7].
- 4) Attach horizontal [4] between verticals [3] & [5]; insert Front Infill A.
- 5) Connect horizontal [4A] on top of Front Infill A; insert Front Infill B; secure with horizontal [4B].
- 6) Attach horizontal [9] between verticals [7] & [10]; insert Small Infill A; secure with horizontal [9B].
- 7) Insert Small Infill B between verticals [7] & [10]; secure with horizontal [9A].
- 8) Attach horizontal [11] between verticals [10] & [12].
- 9) Insert Large Infill A between verticals [10] & [12]; secure with horizontal [11A]; insert Large Infill B; secure with horizontal [11B].
- 10) Install Assembled Closet Door. See Door Attachment detail.



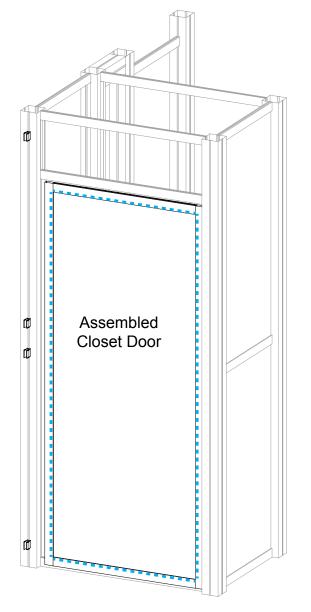



## **Order #XXXXX - Ceiling Assembly**


Item Qty. Description


13/13A 1/1 73.085"w S44 Horizontal Extrusion


2 15.5"w S44 Extrusion 14 15 15.5"w Z140 Extrusion

1 15.5"w Z140 Extrusion w/ Puck Light 16

- Attach extrusions [14] to horizontal [13].
  Insert infills and extrusions [15] & [16]; secure with horizontal [13A]

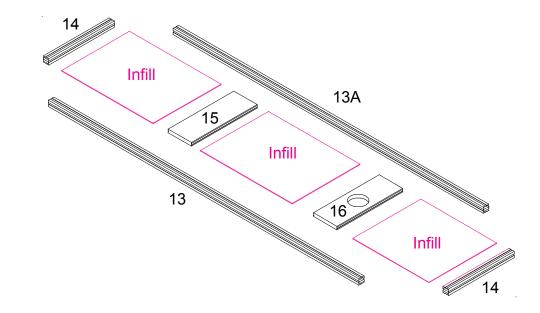

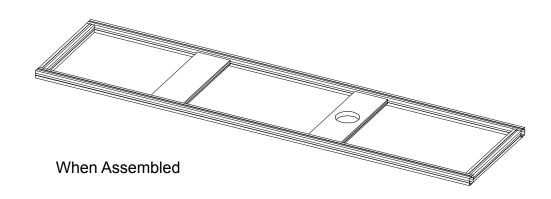

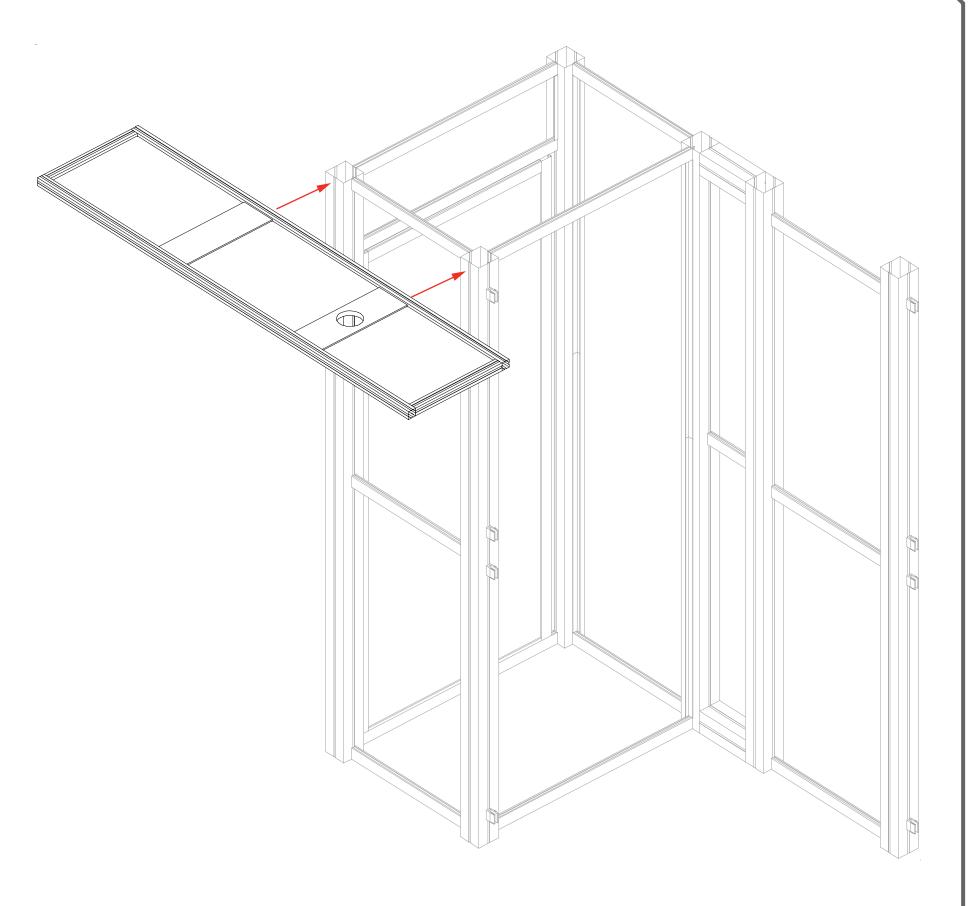



#### **Order #XXXXX - Attachments**


Item Qty. Description


17 9 Shelf Support Horizontal Extrusion

- 1) Attach shelves to verticals [3] & [10]. See Shelf Attachment detail.
- 2) Connect Graphic Wings to installed A10 Clamps on verticals [1], [3], & [12].
- 3) Install Light on top of vertical [10]. See Light Attachment detail.

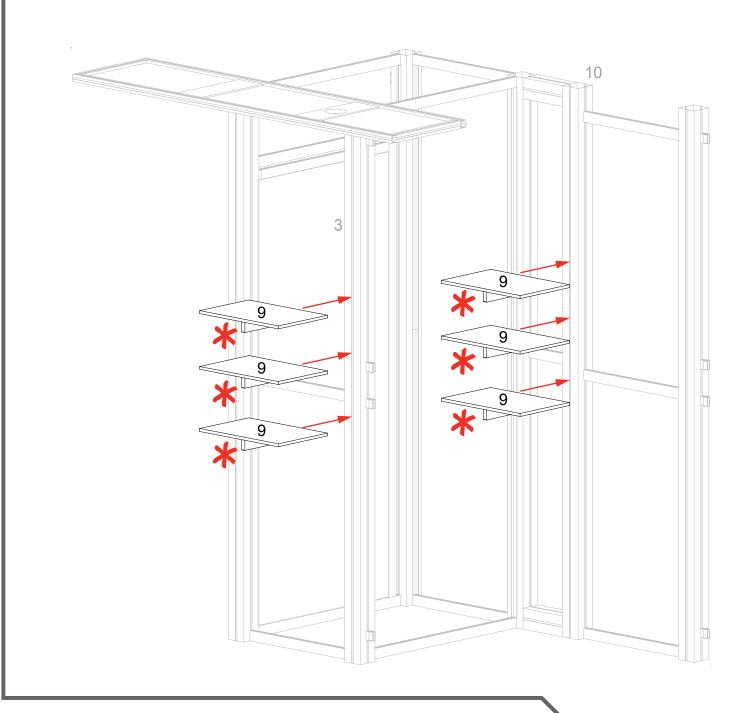

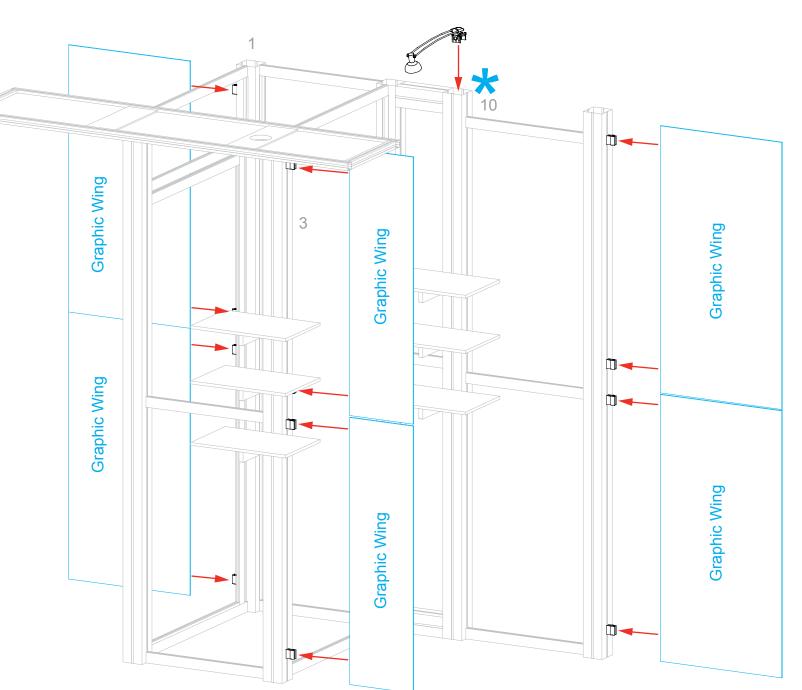


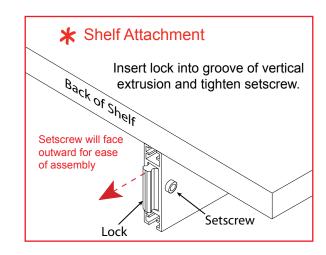


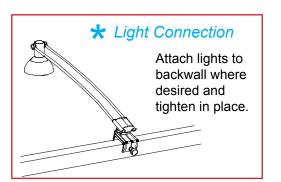



- 1) Attach monitor mounts to verticals [2] & [12]. See Monitor Mount Attachment detail.
- 2) Connect Graphic Header to front verticals [2] & [3]. NOTE: Will attach using velcro.

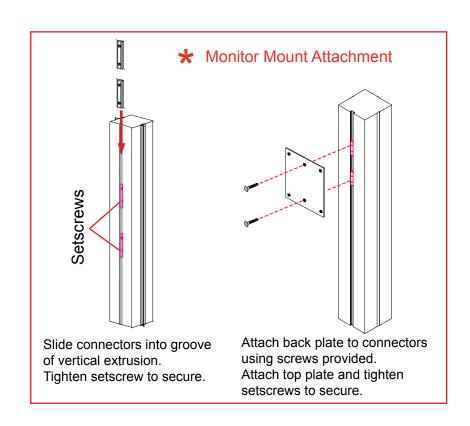

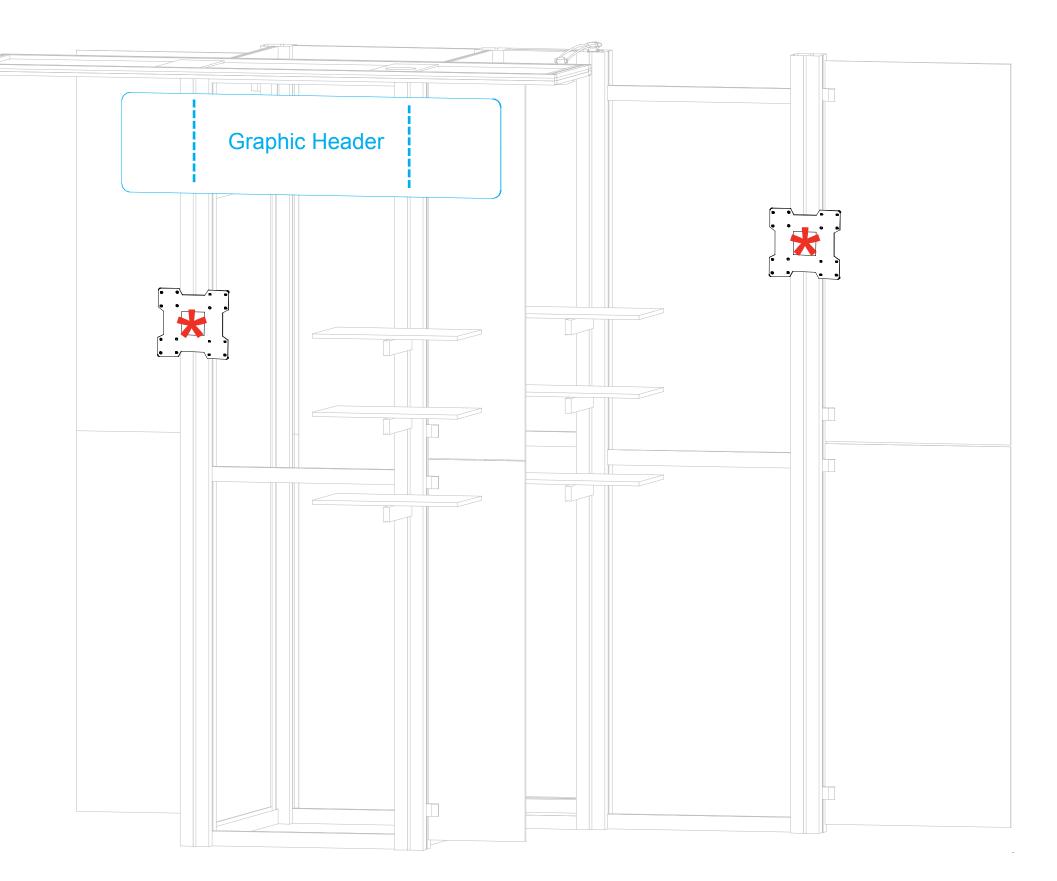





## **Order #XXXXX - Backwall Pedestals**

Item Qty. Description

A 2 3" Horizontal Extrusion

- 1) Screw assembled pedastal to Q914 vertical with screwcaps.
- 2) Attach counter top support [A] to backwall verticals [2,4,20].
- 3) Attach counter top to front horizontal and support [A] using screws.
- 4) Attach literature pockets to Velcro on sides of pedestal as shown.

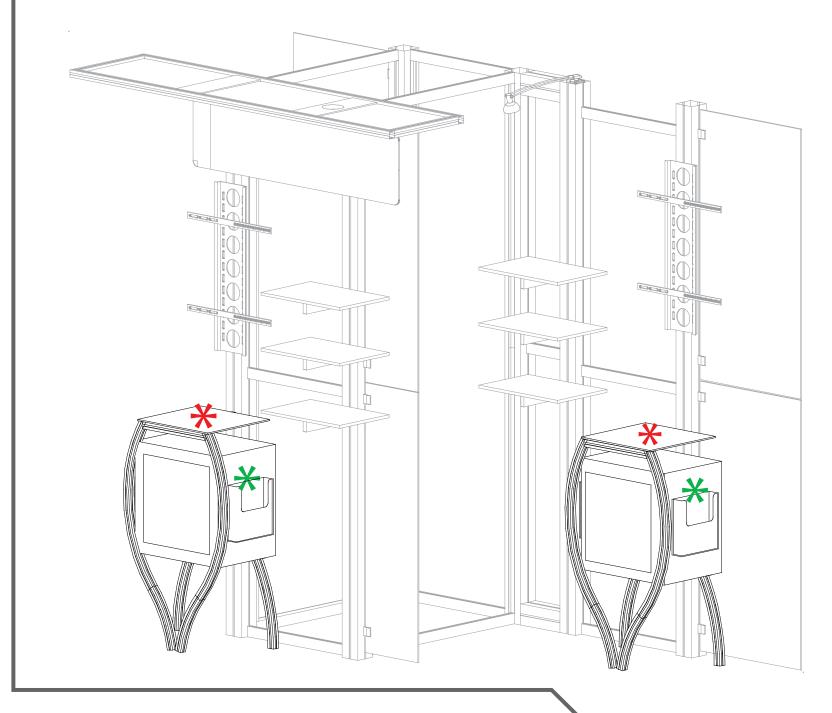

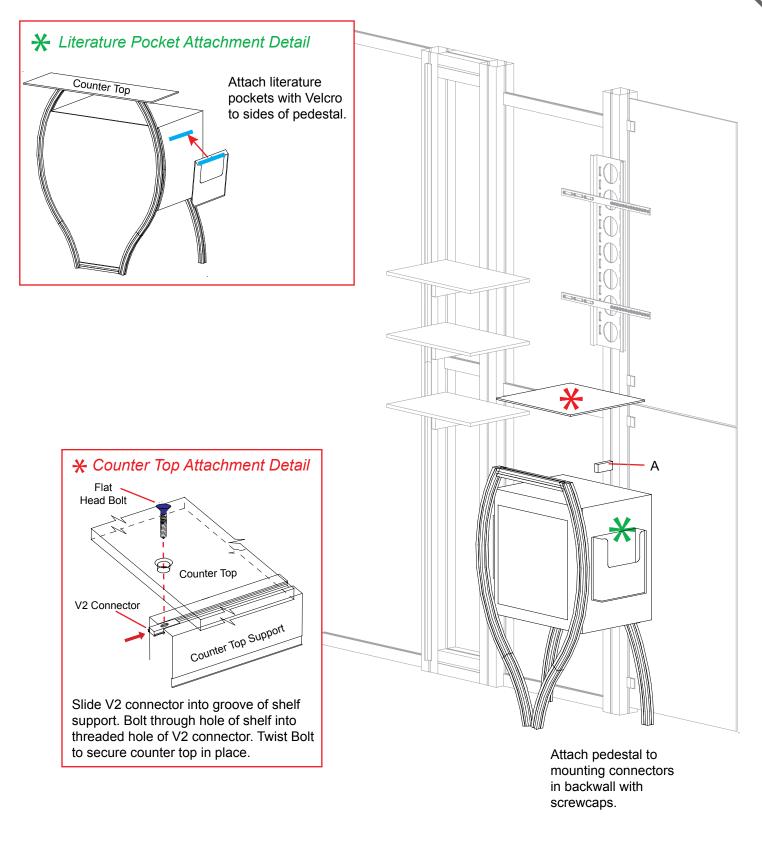



#### Setup Instructions:

- 1) Attach counter top to front horizontal using screws as shown in detail.
- 2) Attach literature pockets to Velcro on sides of pedestal as shown.

