


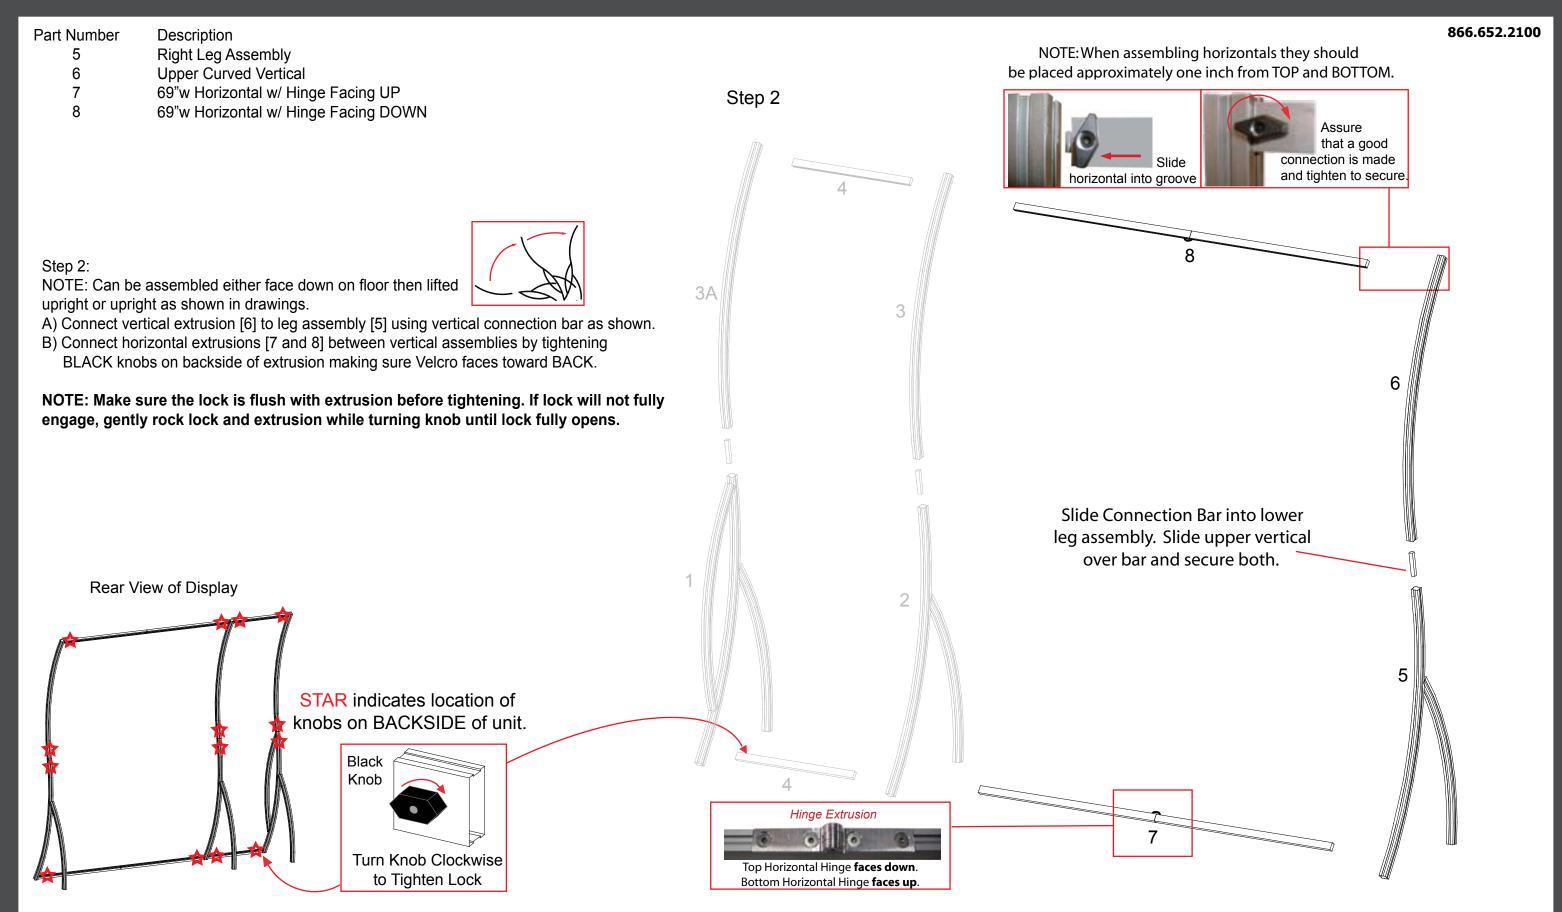




to Tighten Lock






WHEN DISASSEMBLING TIGHTEN ALL BLACK KNOBS TO PREVENT LOSS DURING SHIPPING

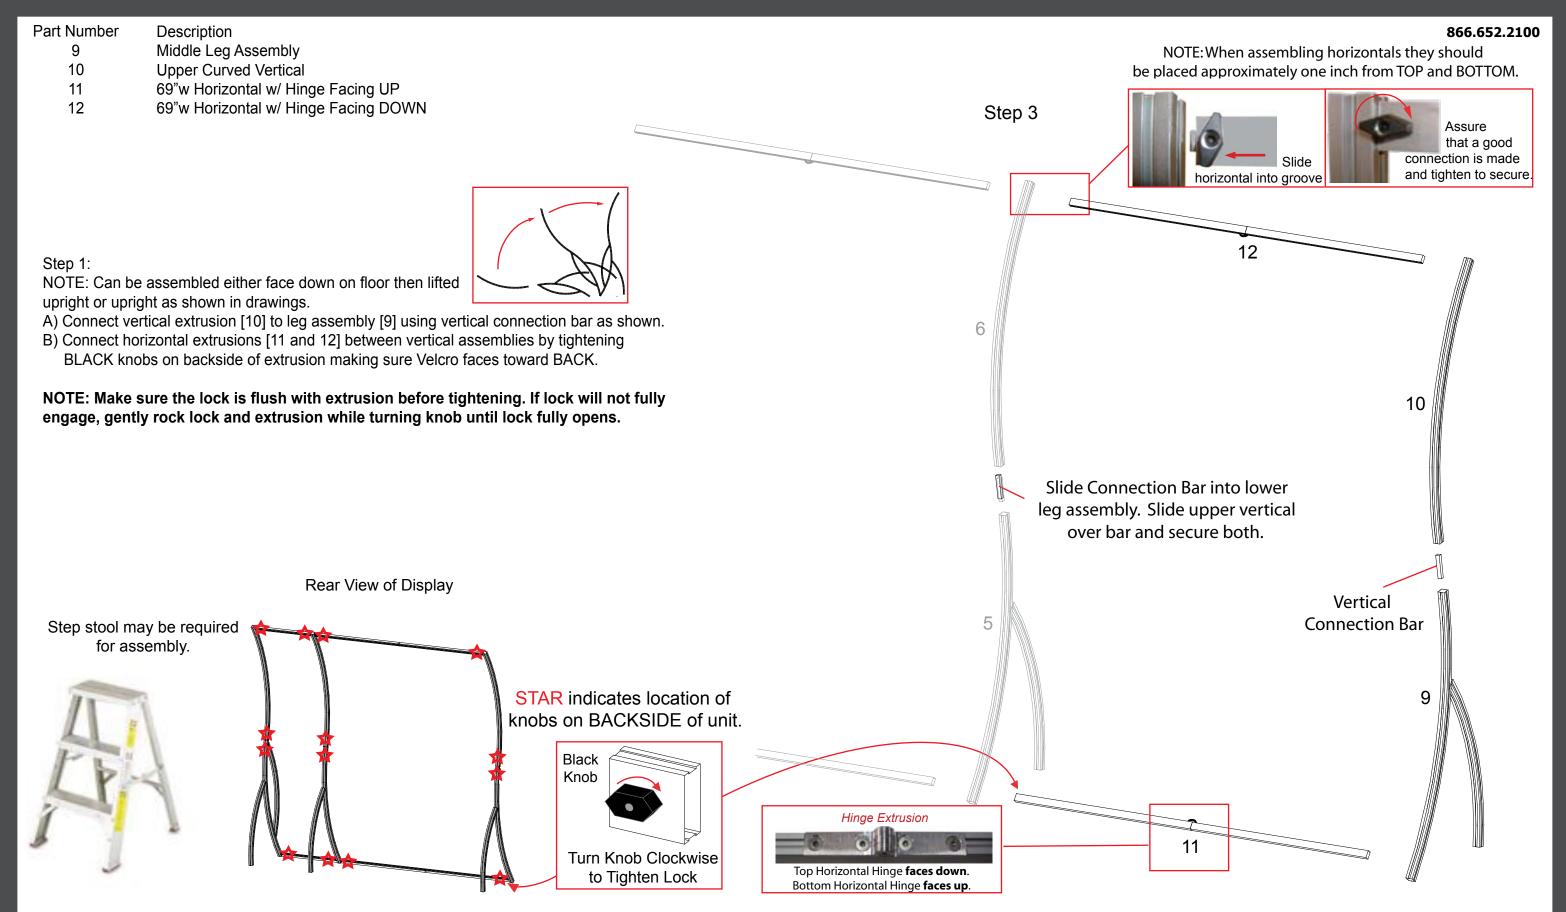



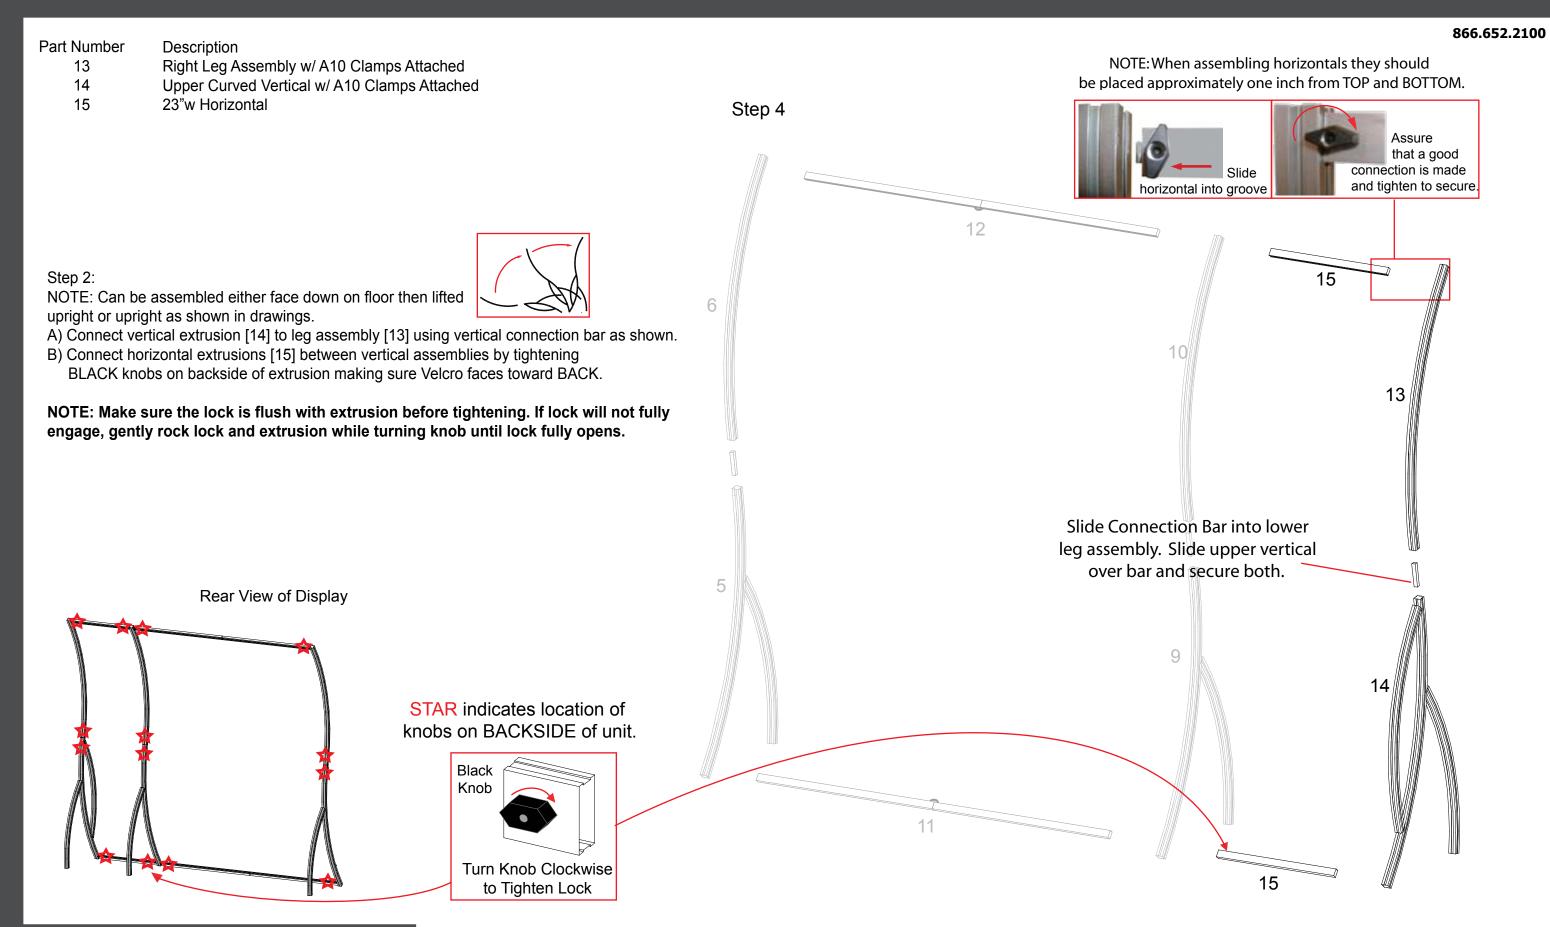




866.652.2100

Decorative Blade Attachment (if accidently removed) Slide A10 Clamp into groove of square extrusion. When desired location is found, tighten set screw to secure. Attach decorative wing and blades to A10's attached to Set-Screw Backwall as shown. Tighten black plastic set screw to secure Wing in place. Black Plastic Set-screw Hex Key Tool Flathead Screwdriver (if necessary)



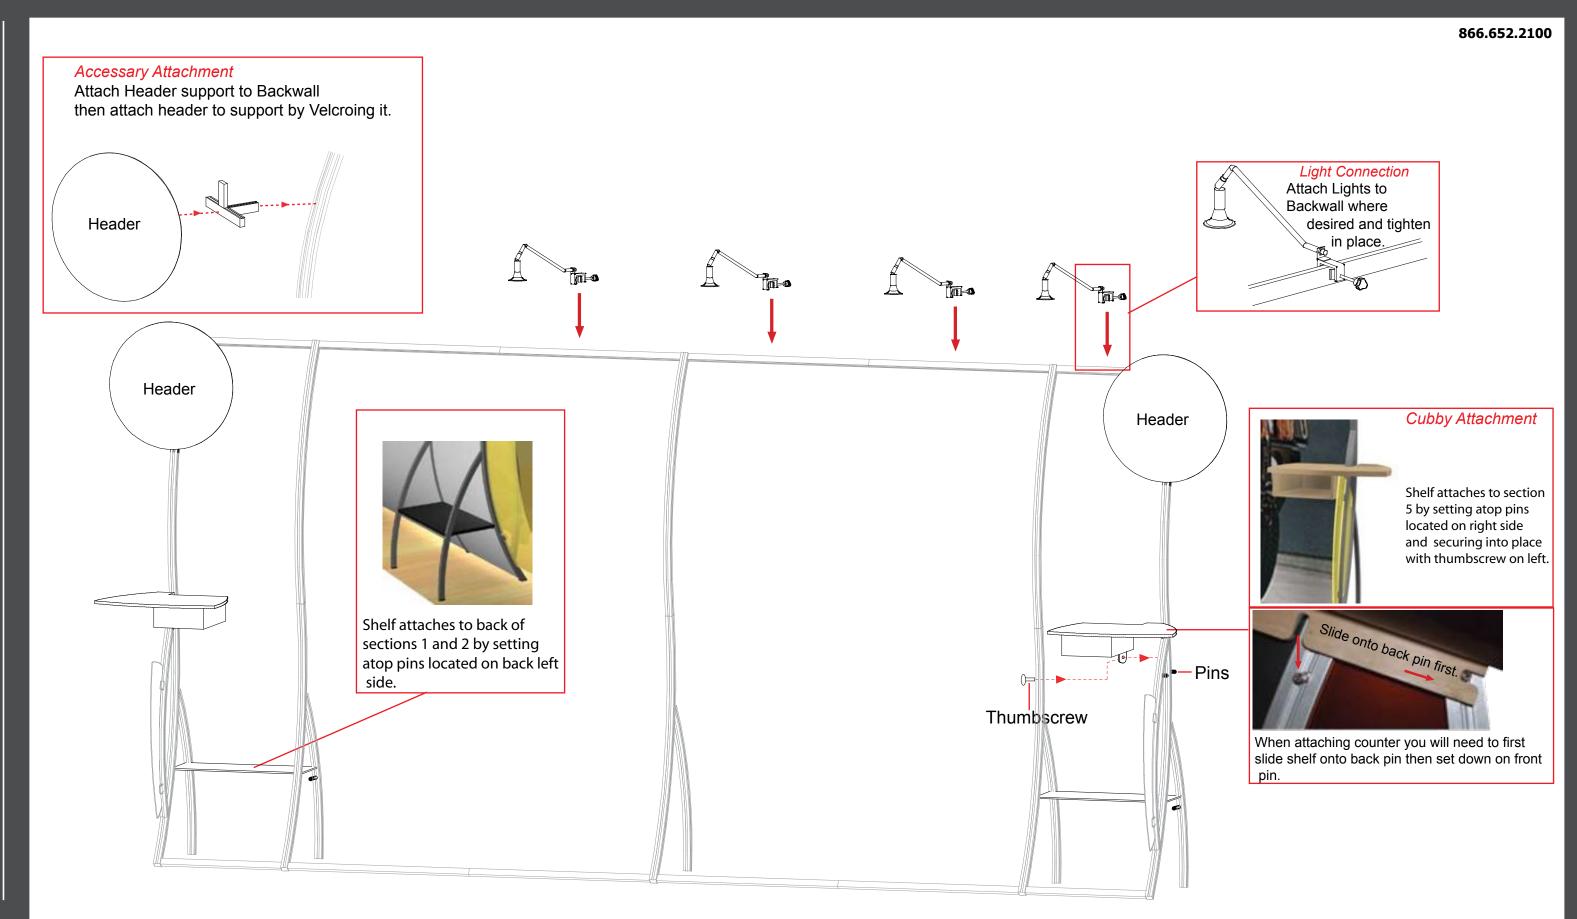



WHEN DISASSEMBLING TIGHTEN ALL BLACK KNOBS TO PREVENT LOSS DURING SHIPPING

866.652.2100

Part Number Description

A Left Leg Assembly

B Right Leg Assembly


C Horizontal Extrusion


D Horiontal Extrusion w/ Door Stopper

Step 1:

- A) Connect lower horizontal extrusion [C] between bottom of leg assemblies [A and B] as shown.
- B) Insert Laminated infill into grooves of leg assemblies [A and B].
- C) Attach extrusion door between leg assemblies [A and B] and atop laminated infill.
- D) Attach upper horizontal extrusion w/ door stopper [D] between leg assemblies [A and B], and set flush with top of legs [A and B].

NOTE: Make sure the lock is flush with extrusion before tightening. If lock will not fully engage, gently rock lock and extrusion while turning knob until lock fully opens.

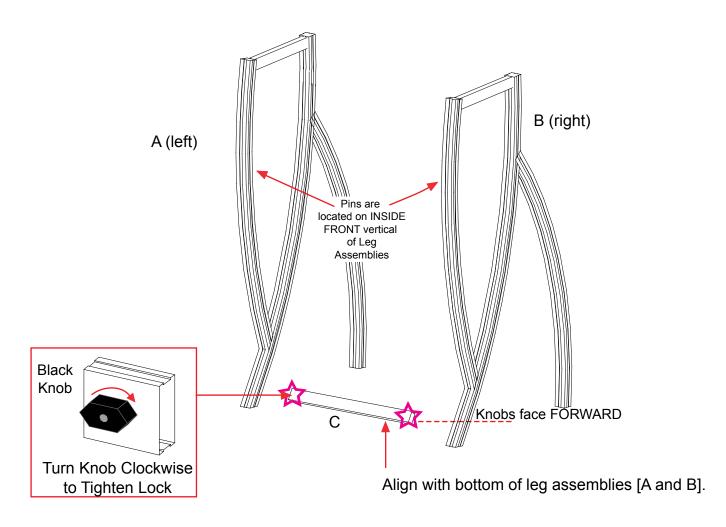

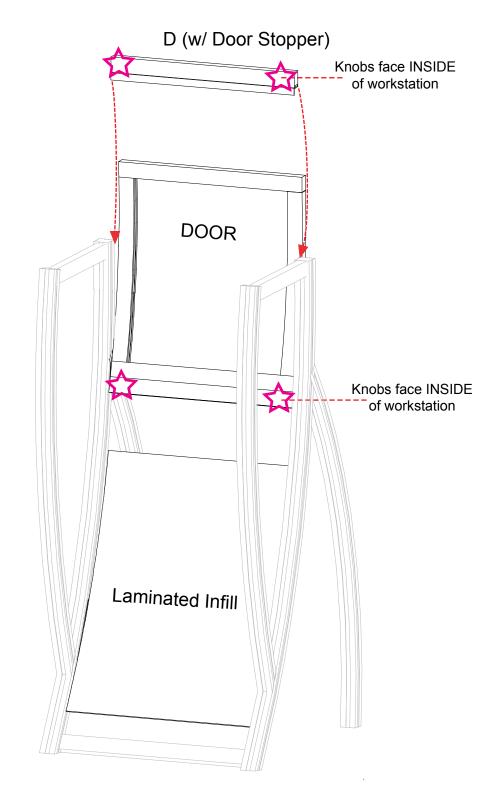

WHEN DISASSEMBLING TIGHTEN ALL BLACK KNOBS TO PREVENT LOSS DURING SHIPPING


866.652.2100


Part Number Description


E Horizontal ExtrusionF Horizontal Extrusion

Step 2:


- A) Attach horizontal extrusion [E] between vertical leg assemblies [A and B] as shown below.
- B) Insert Laminated infill into grooves of vertical leg assemblies [A and B].
- C) Attach upper horizontal extrusion [F] between vertical leg assemblies [A and B] atop infill.
- D) Place internal shelf into assembled pedestal atop pins.
- E) Set Counter atop assembled pedestal and secure with Velcro straps attached to underside of top.

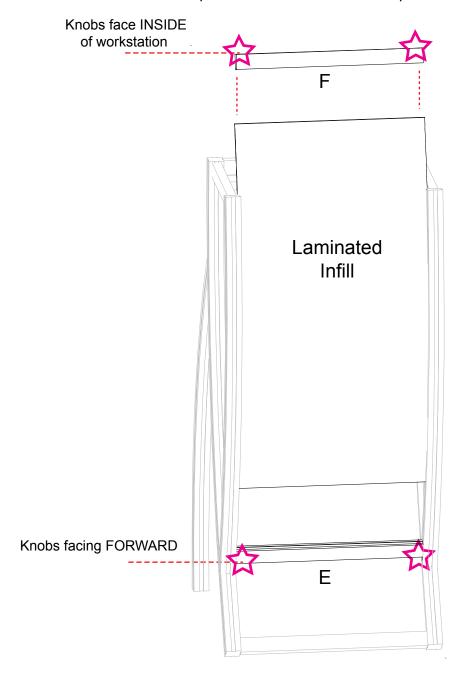





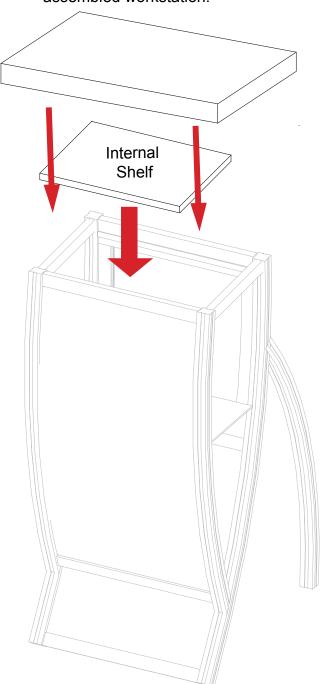



Case #1 - Backwall Components

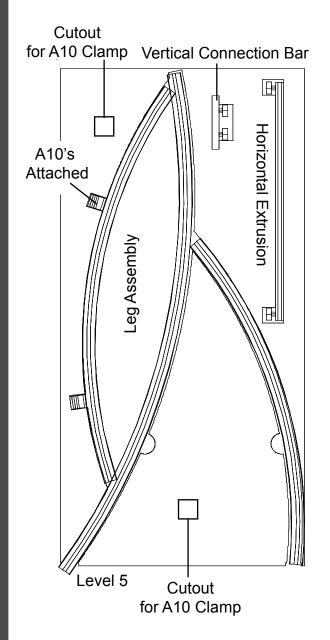


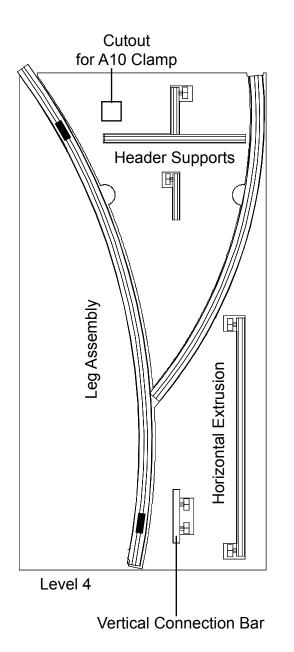


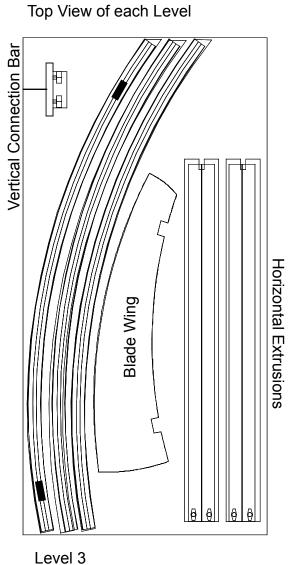


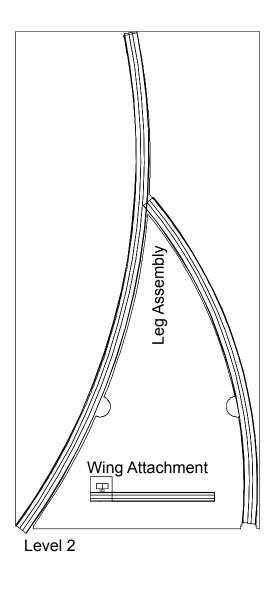


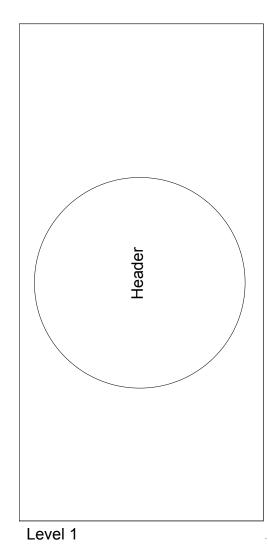

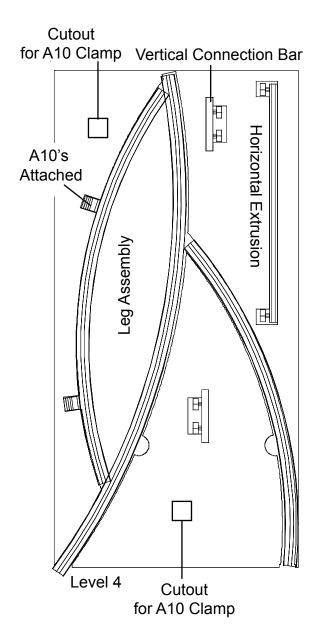

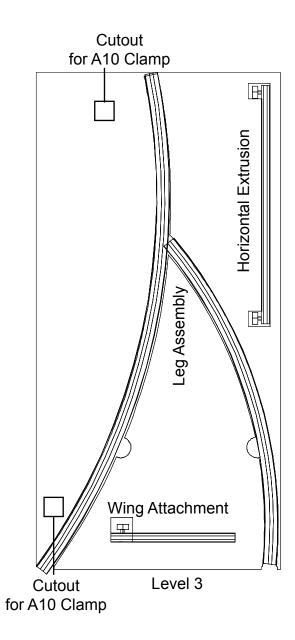


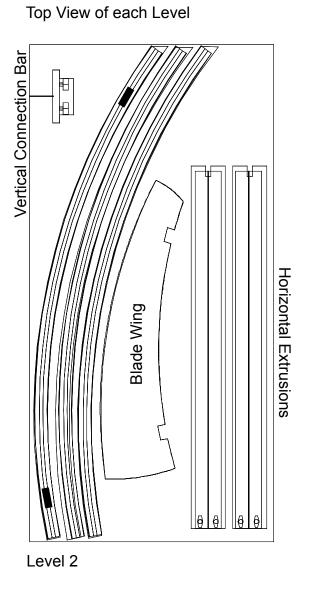


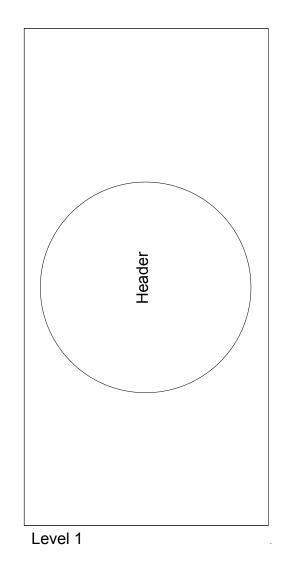

Case #3 - Backwall Components

Top View of each Level

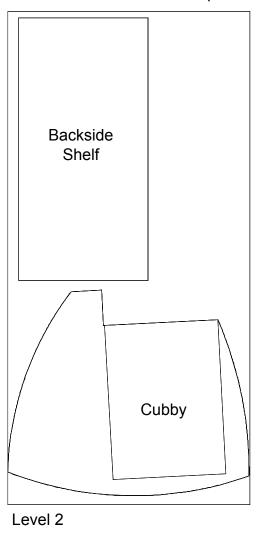


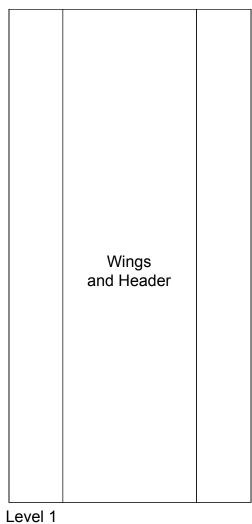




Case # 4 - Backwall Components


Top View of each Level

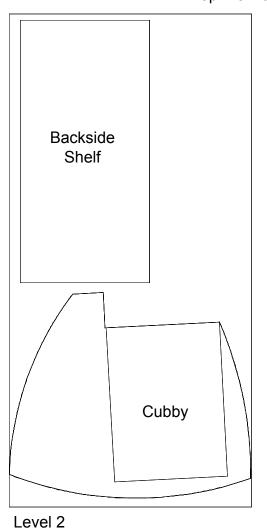


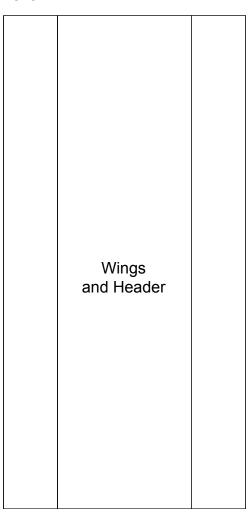



Level 1


Case # 5 -Workstation Components

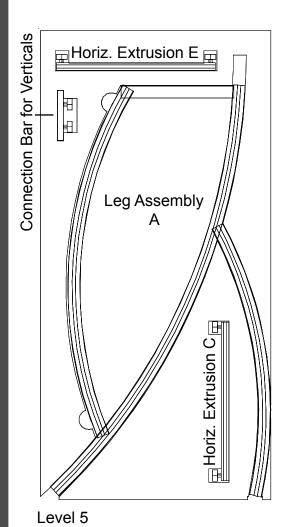

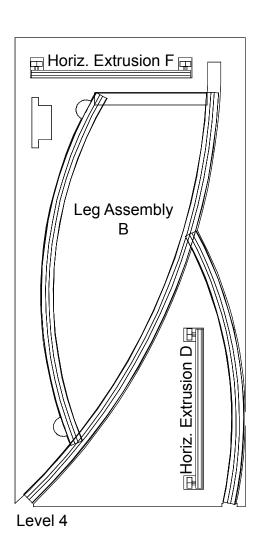

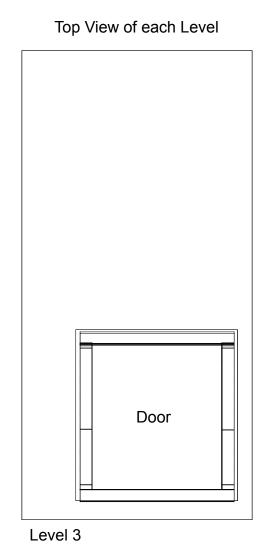


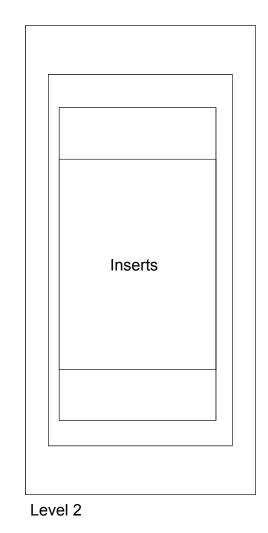


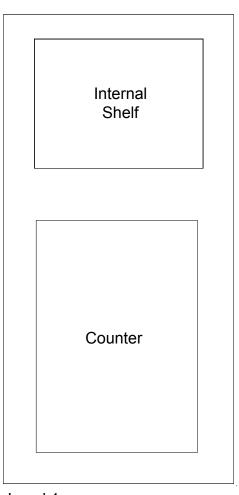



Level 1


Case # 6 - Workstation Components

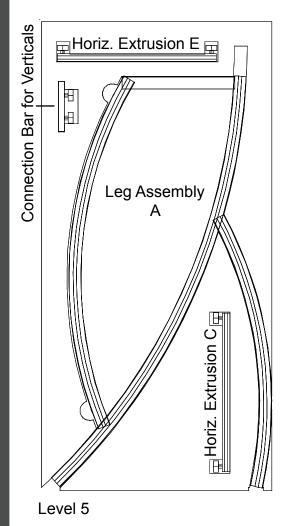

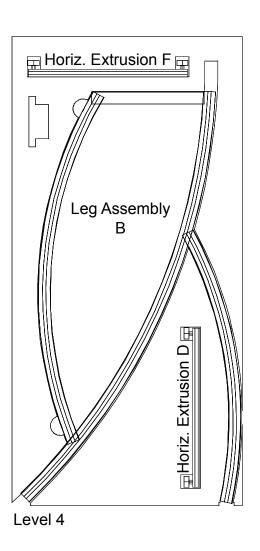

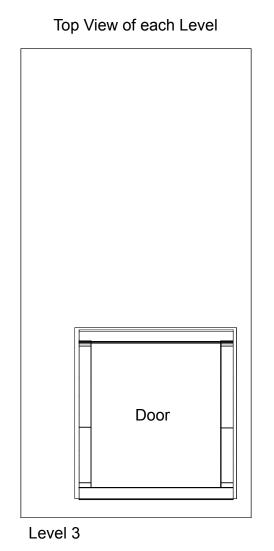

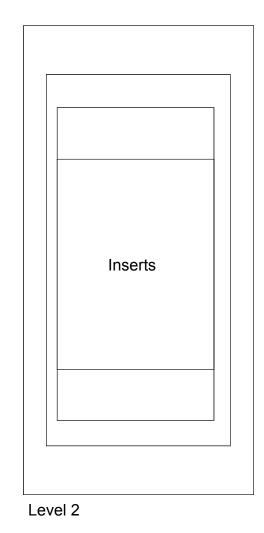

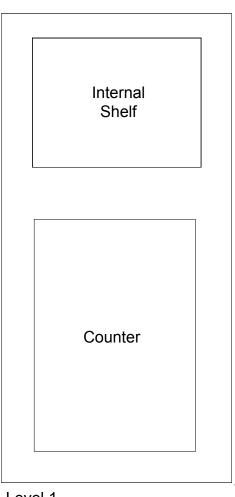

Level 1