




- Copy “BFU.7zads” file to your disk.
- Launch ADS.
- File → Unarchive

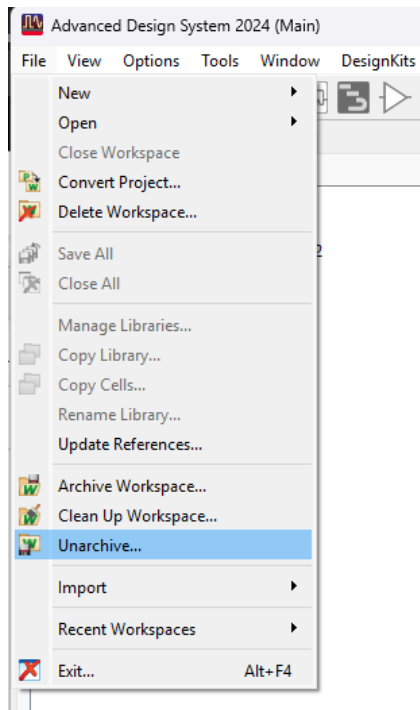

- Browse the file location and open “BFU.7zads”.
- Choose the destination path where the file will be unarchived. Click “Next”.
- Unselect “Workspaces”. Click “Finish”

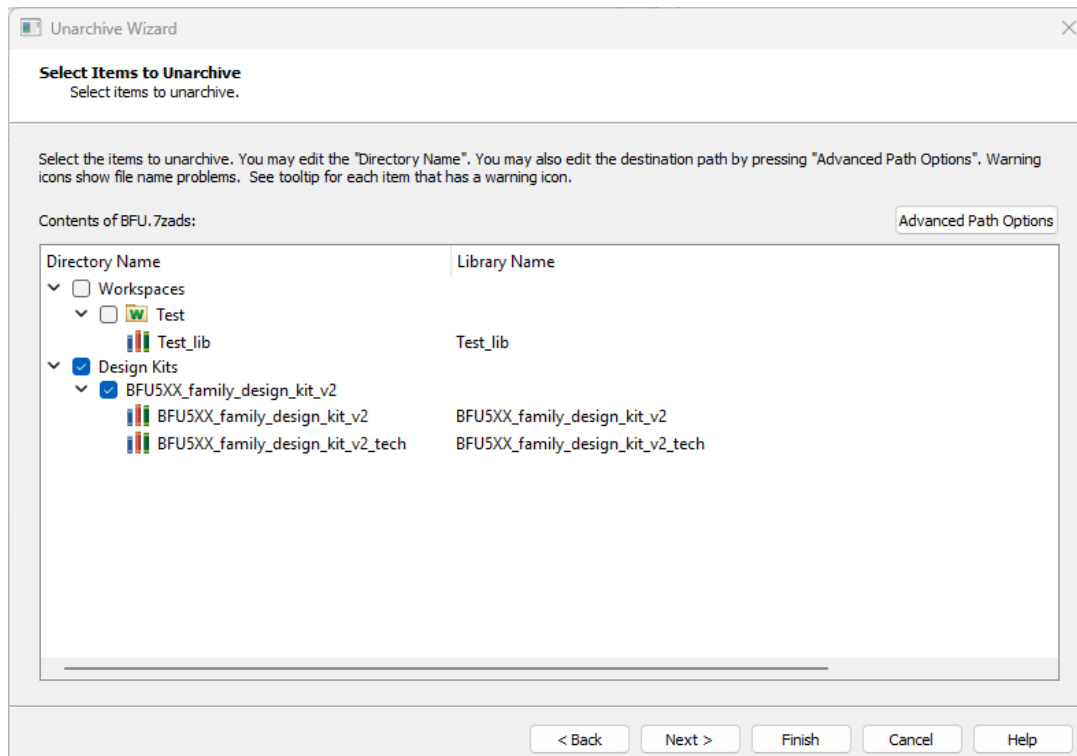

- Create a new workspace to design.

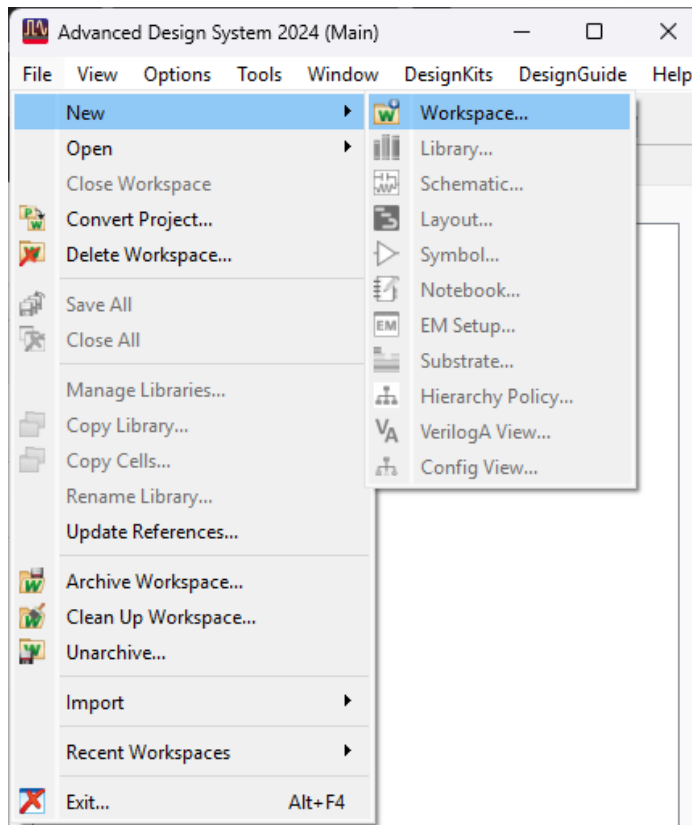


- Set your workspace name and path. Click “Create Workspace”.
- Design Kits → Manage Libraries.
- Click “Add Library Definition File”.
- Browse the path location where you unarchive the design kit “....\BFU5XX_family_design_kit_v2”.
- Select “for_editing_pdk.defs” file.
- Your workspace should look like:

```


tech.subst [Master for Bfu5XX_family_design_kit_v2]
> bfu5xx_v2_lib_BFU520_schematic
> bfu5xx_v2_lib_BFU520A_schematic
> bfu5xx_v2_lib_BFU520W_schematic
> bfu5xx_v2_lib_BFU520X_schematic
> bfu5xx_v2_lib_BFU520XR_schematic
> bfu5xx_v2_lib_BFU530_schematic
> bfu5xx_v2_lib_BFU530_X_schematic
> bfu5xx_v2_lib_BFU530_XR_schematic
> bfu5xx_v2_lib_BFU530A_schematic
> bfu5xx_v2_lib_BFU530W_schematic
> bfu5xx_v2_lib_BFU550_schematic
> bfu5xx_v2_lib_BFU550_X_schematic
> bfu5xx_v2_lib_BFU550_XR_schematic
> bfu5xx_v2_lib_BFU550A_schematic
> bfu5xx_v2_lib_BFU550W_schematic
> bfu5xx_v2_lib_BFU580G_schematic
> bfu5xx_v2_lib_BFU580Q_schematic
> bfu5xx_v2_lib_BFU590G_schematic
> bfu5xx_v2_lib_BFU590Q_schematic

```


- Options → Technology → Technology Setup

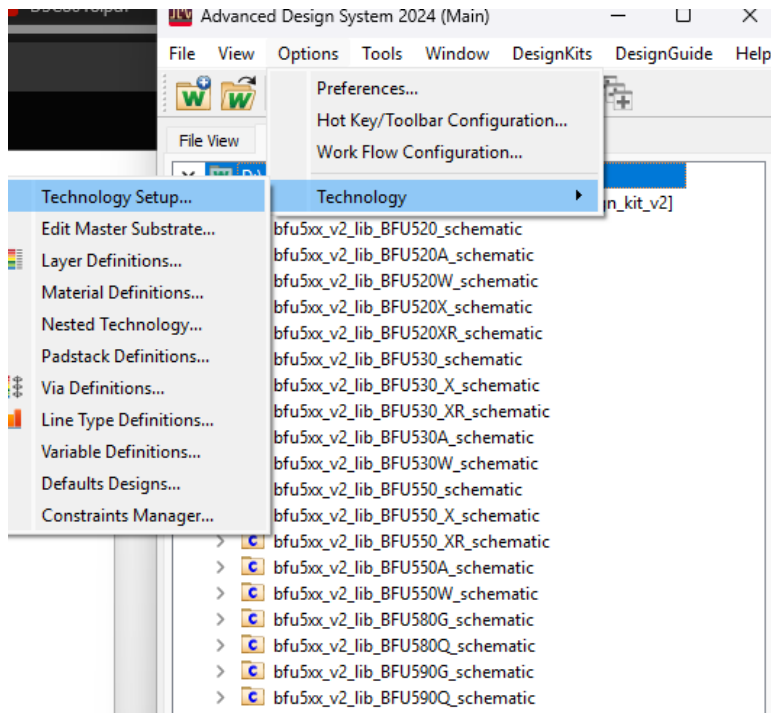


- Select “Add Referenced Library ...”. Select “BFU5XX_family_design_kit_v2”.

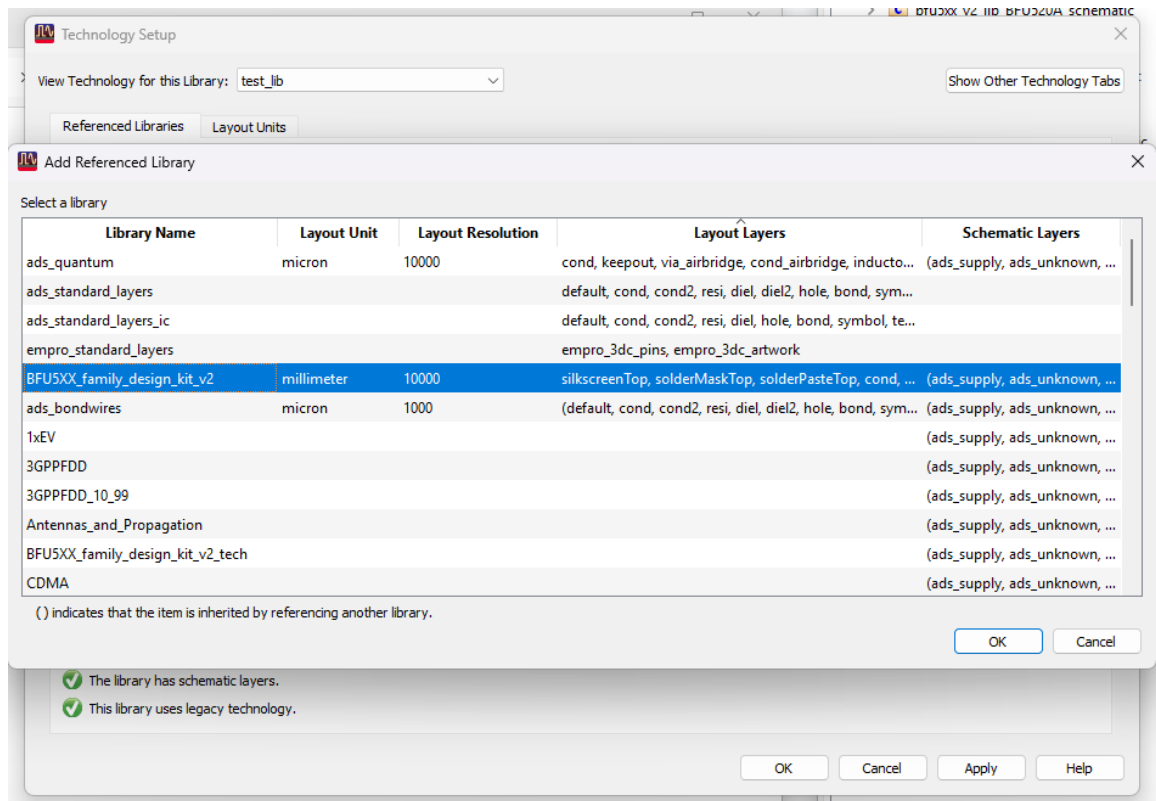


- Make sure that all options are checked . Select “OK” and close the window.

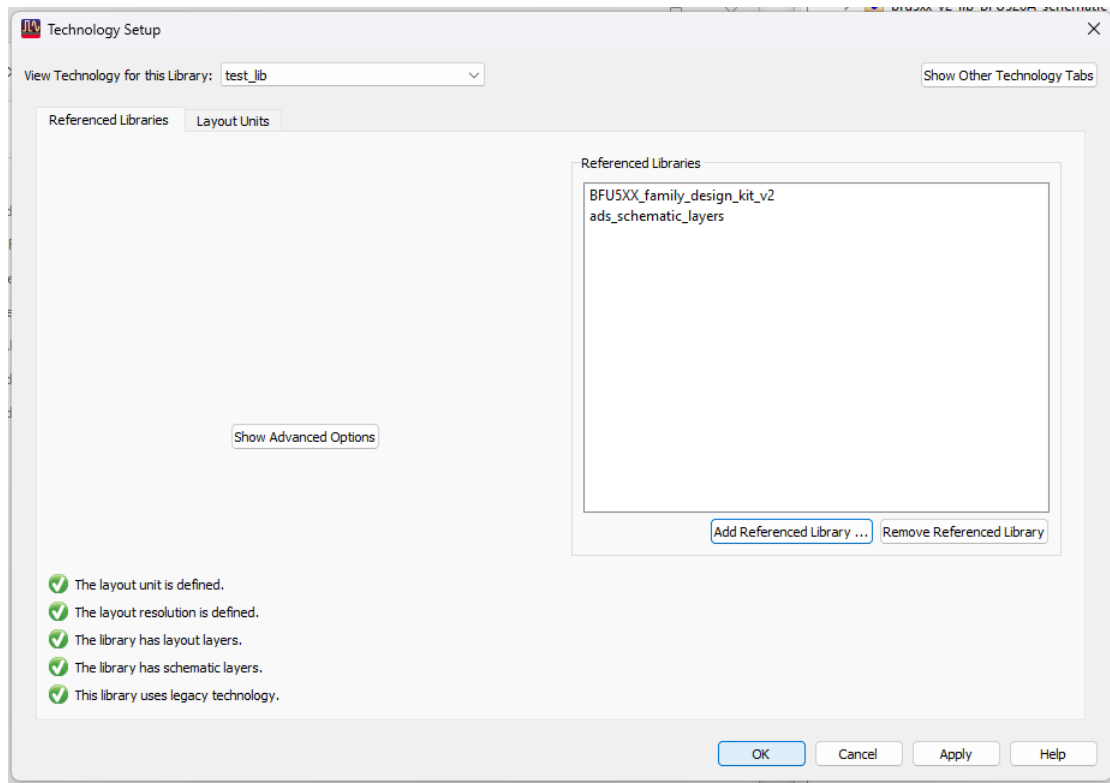

- Create a new folder and name it “DesignKit”

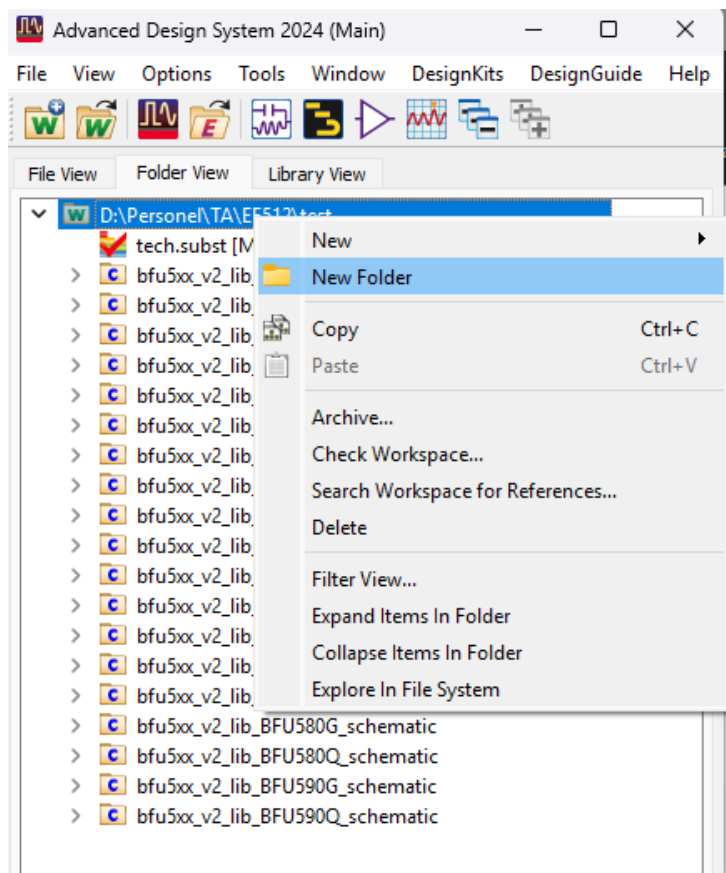

- Select all other files and move it into the “DesignKit” folder.

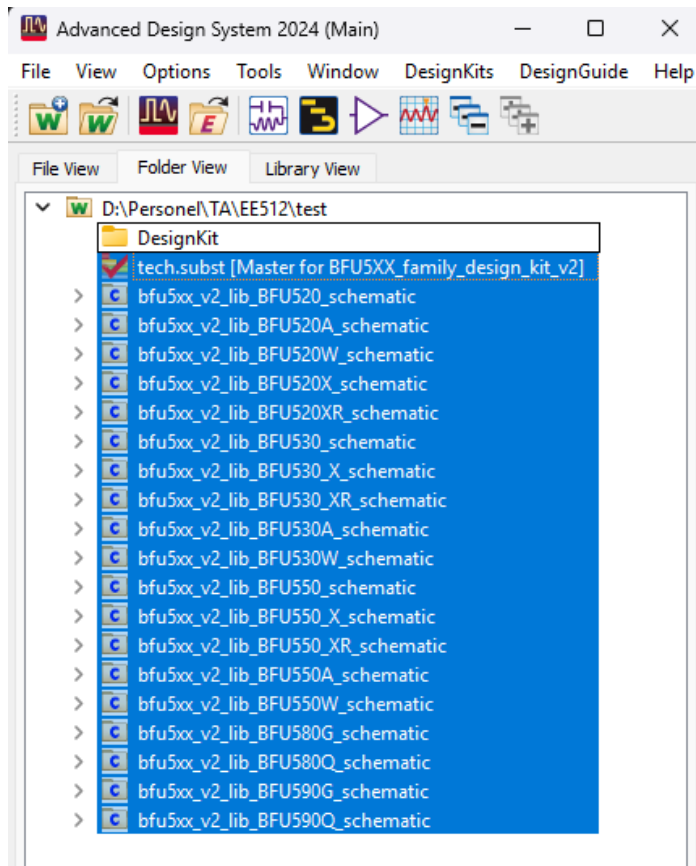

- Now you can create a new schematic to design with PDK. All PDK components should be available in the palette.

