


1. Download Project File Steps

Step 1. Create a New Project.

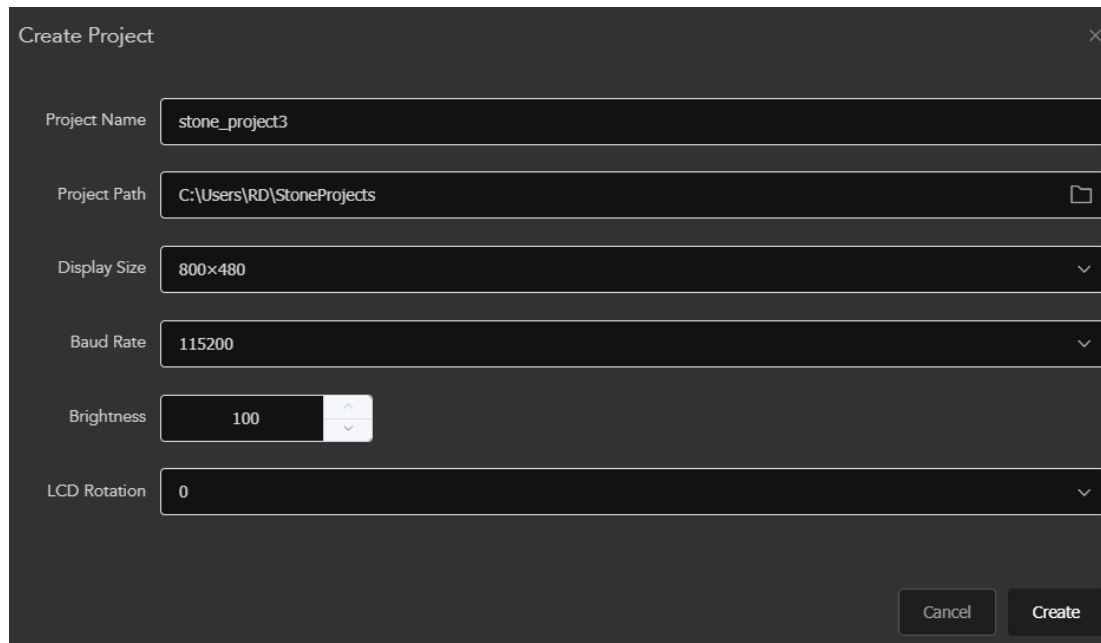


The 'Create Project' dialog box is shown with the following settings:



- Project Name: stone_project3
- Project Path: C:\Users\RD\StoneProjects
- Display Size: 800x480
- Baud Rate: 115200
- Brightness: 100
- LCD Rotation: 0

Buttons: Cancel, Create

Step 2. Define the New Project.

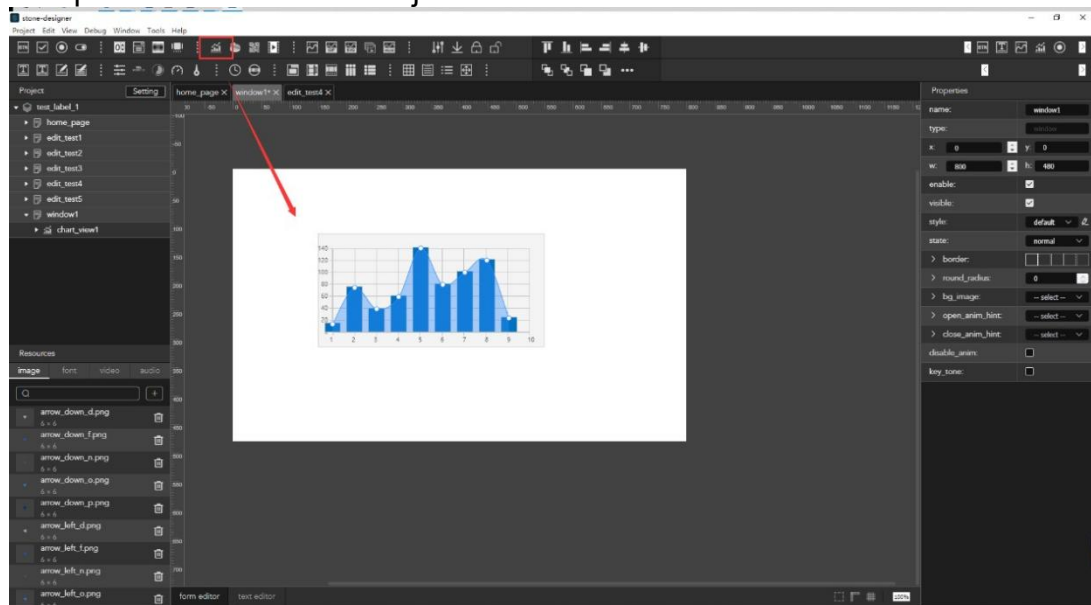


Step 3. Create the Downloading file -----“default” folder

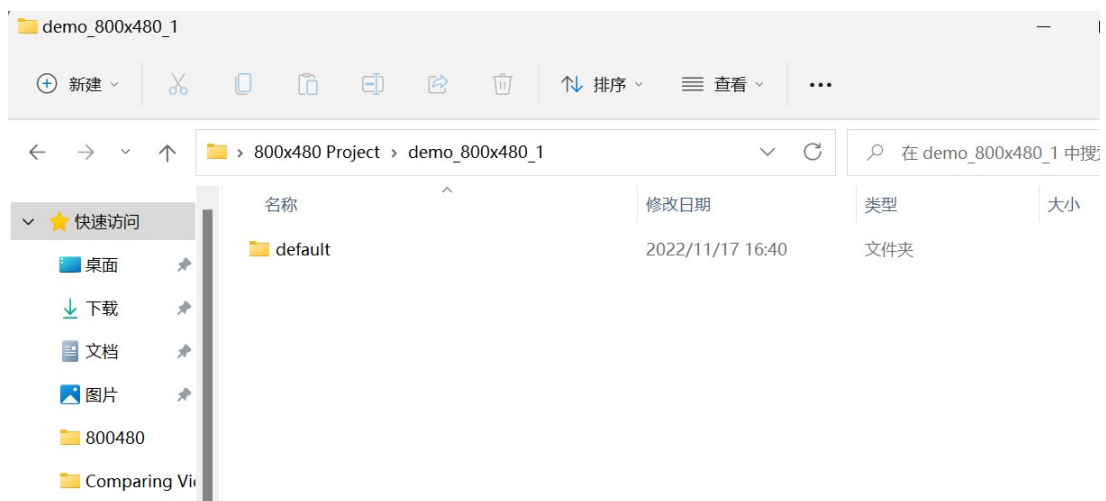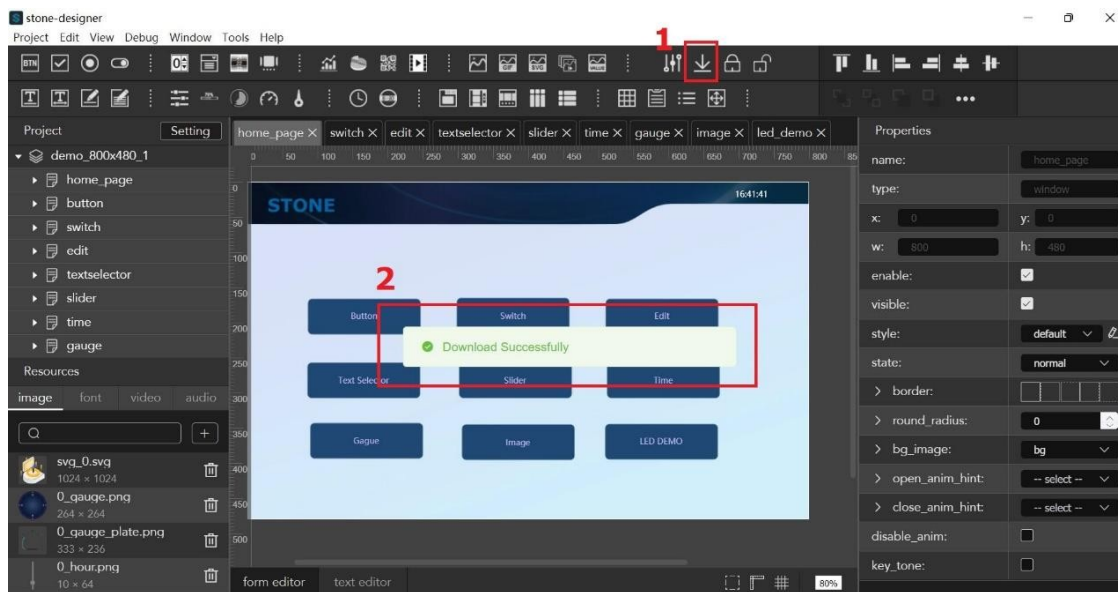


Step 4. Downloading the Project

- 1) Choose the “U-Disk” switch on the PCB.
- 2) Create a “STONE/project” folder like DEMO (Case matters), Then copy “default” folder into “STONE/project” folder.

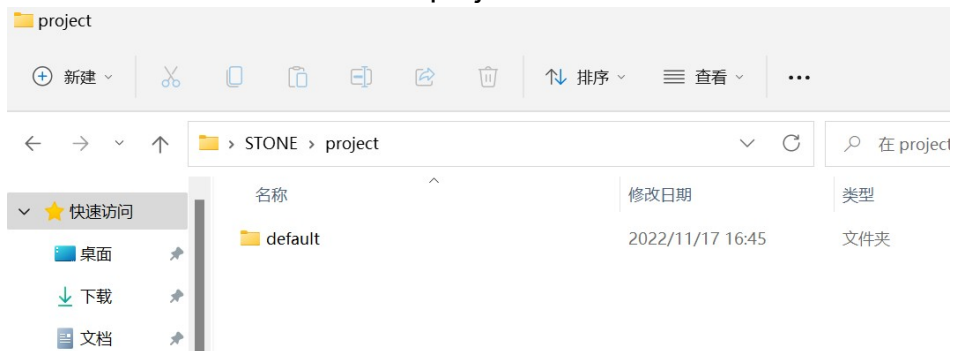


- 3) Only copy “STONE” folder into U storage disk.
- 4) Plug the U storage disk on the USB port, Automatic download.

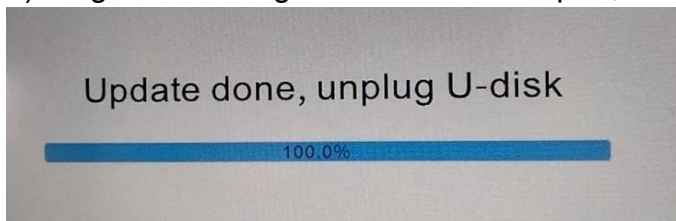

- 5) After updating, take out the U disk, Auto Reboot.

Note: the corresponding path of configuration files is below.

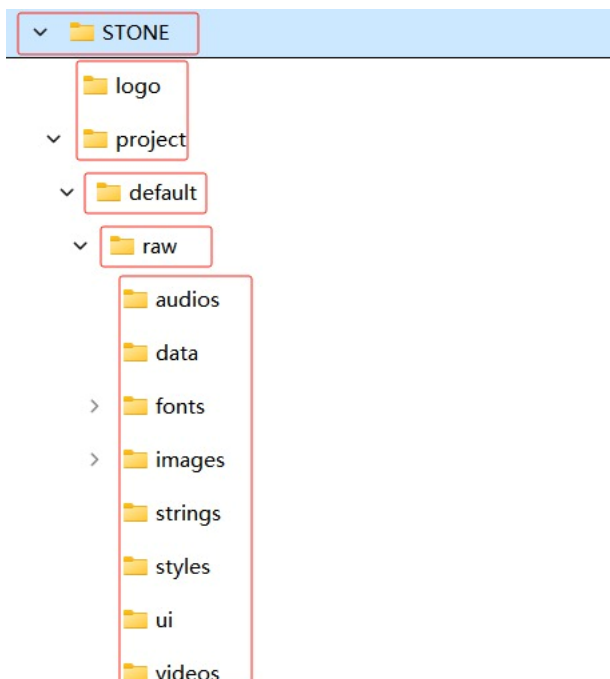


2. Update Logo file Steps

Step 1. It only can update the booting logo by U storage disk. (FAT32 Format!)

Step 2. Name your logo image file as “logo.bmp” (Case matters!), See DEMO.


Note: The logo image file should be 8 bit or 24 bit bmp format.

& The resolutions of logo image should be same with the screen.

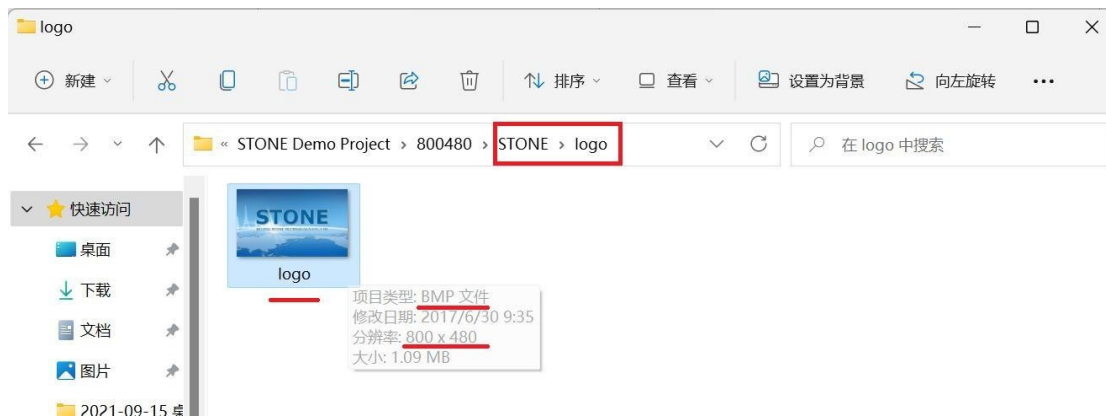

Step 3. Create a “STONE/logo” folder like DEMO (Case matters!), See DEMO.

Then copy “logo.bmp” file into “STONE/logo” folder.

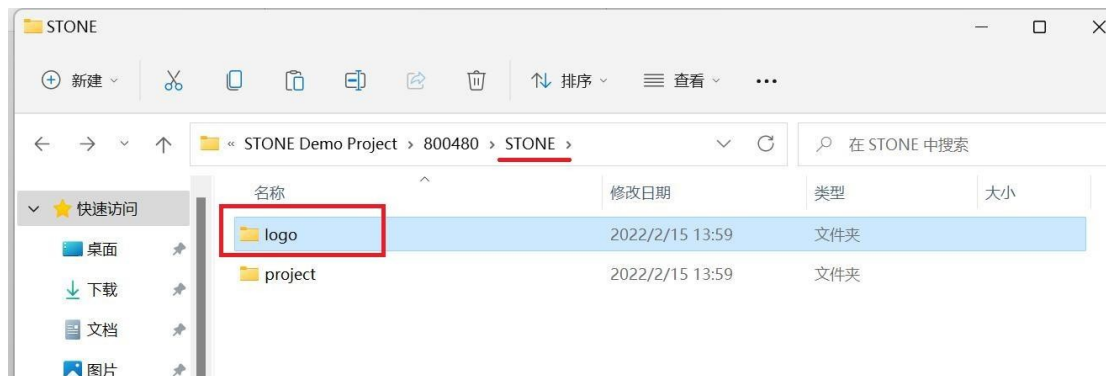

Step 4. Updating

- 1) Only copy “STONE” folder into U storage disk.
- 2) Choose the “U-Disk” switch on the PCB
- 3) Plug the U storage disk on the USB port, Automatic update.
- 4) After updating, take out the U disk, Auto Reboot

3. Update Firmware file Steps

If updating the latest firmware file, it also needs to create a “firmware” folder under “STONE” folder, then put the corresponding firmware file into “STONE/firmware” folder. Such as: **STONE\firmware\stoneHMI.bin**

