

B4Slider Cheat Sheet

set card · *italic* = 2nd axis (pan)



Recommended B4Slider 2-axis panel layout

Panel

Silk: S SET · < MOVE_L · > MOVE_R · * OPTION. *2-axis: <2 MOVE_L2 · >2 MOVE_R2 below OPTION (GP8/GP9). ACCEL pot optional. Unlock: OPTION (rainbow LED). Homing: axis 1 then axis 2 at boot.*

Move

ACTION	KEY	DESCRIPTION
(MOVE_L / MOVE_R) tap ≤1/5s	< / > tap	Locked cruise toward that soft end at SPEED
(MOVE_L / MOVE_R) hold >1/5s	< / > hold	Hold-to-run; soft-stop on release
Same MOVE tip while locked	< or > tip	Soft-stop cruise
Opposite MOVE	< or >	Reverse / retarget other soft end
OPTION + (MOVE_L / MOVE_R)	* + < / >	Same as MOVE at panel max speed
OPTION hold while moving	* hold	Boost to max speed; release → SPEED pot
SET while moving	S	Soft-stop
MOVE_L + MOVE_R	< >	Halt; driver off until any key
MOVE_L + MOVE_R hold ≥1s	< > hold ≥1s	Swap left/right
All four (L+R+OPTION+SET)	< > * S	Halt + reset like power-up
MOVE_L2 / MOVE_R2 tap ≤1/5s	<2 / >2 tap	Locked cruise on pan axis
MOVE_L + MOVE_L2 tap	<+<2 tap	Dual cruise — time-sync after pan A+B set
MOVE_L + MOVE_L2 hold >1/5s	both held	Dual hold; release either stops both
MOVE_L2 + MOVE_R2	<2 >2	Halt
MOVE_L2 + MOVE_R2 hold ≥1s	<2 >2 hold ≥1s	Swap pan L/R

Tap vs hold: B4S_MOVE_TAP_MS (333 ms). *Dual chord: timer starts when 2nd button joins — first button alone does not move while assembling L+L2. OPTION before MOVE = max speed + max accel; OPTION during move = speed boost only.*

Soft limits (A / B window)

ACTION	KEY	DESCRIPTION
SET + MOVE_L tap	S < tap	Set soft_limit_L here
SET + MOVE_R tap	S > tap	Set soft_limit_R here
SET + MOVE_L hold ≥1s	S < hold ≥1s	Reset L → slider min
SET + MOVE_R hold ≥1s	S > hold ≥1s	Reset R → slider max
SET + L + R hold ≥1s	S < > hold ≥1s	Reset both ends
SET + MOVE_L2 tap	S <2 tap	Set pan soft_limit_L2
SET + MOVE_R2 tap	S >2 tap	Set pan soft_limit_R2
SET + L2 + R2 hold ≥1s	S <2 >2 hold ≥1s	Reset both pan ends

Travel only inside the working window. *Mark both pan limits → dual L+L2 / R+R2 finish together; before that, both axes run at pot speed.*

SET / OPTION

ACTION	KEY	DESCRIPTION
SET tap (idle)	S tap	Nothing
SET hold ≥1s (idle)	S hold ≥1s	Accel preset L — no ACCEL pot
SET hold ≥3s (idle)	S hold ≥3s	Accel preset H — no ACCEL pot
SET hold ≥5s (idle)	S hold ≥5s	Accel learn from SPEED pot — no ACCEL pot
OPTION + SET tap	* S tap	Disable driver
OPTION + SET hold ≥1s	* S hold ≥1s	Toggle loop armed
Any key while disabled	—	Re-enable driver

Loop arm does not start motion; next MOVE cruise ping-pongs until SET / same tip / halt.

Pots


CONTROL	DESCRIPTION
SPEED	Left → slower floor; right → faster (finer at low end)
ACCEL	If B4S_USE_ACCEL_POT=1: left gentler / right snappier. SET accel holds off.

Workflows

- Normal moving
 - Unlock with OPTION if LED is rainbow
 - Dial SPEED (and ACCEL pot, or SET 1s/3s presets if no pot)
 - Tap MOVE to cruise to a soft end; hold MOVE to jog
 - Same tip stops; opposite reverses; SET stops; L+R halt
- Frame A / B
 - Jog to first pose; S < tap → soft_limit_L
 - Jog to second pose; S > tap → soft_limit_R
 - Rehearse: MOVE tap cruises to that end
 - Optional loop: idle * S hold ≥1s, then MOVE tap
- Pan A / B (2-axis)
 - S <2 tap → pan soft_limit_L2; S >2 tap → soft_limit_R2
 - LED + blue idle = dual chords time-sync
 - <+<2 tap = coordinated travel + pan

Status LED

COLOUR	MEANING
Rainbow	Power-on / unlock
Dim white	Idle, ready
White ↔ blue	Loop armed (idle)
Yellow	Accel / decel
Green	Steady speed
+30% / 100% blue	Near / at soft end
+10% blue	Loop running
+10% blue idle	Pan window set — dual sync armed
Dim orange	Driver off
Red fast blink	Hard limit
Red blink	Homing
Red	DRV_ERROR / E-stop
White blip	Soft limit set / reset
White flash /s	SET hold second counter
Violet ×1 / ×2 / ×3	Accel preset L / H / learn
Red flash	Halt / all-four reset

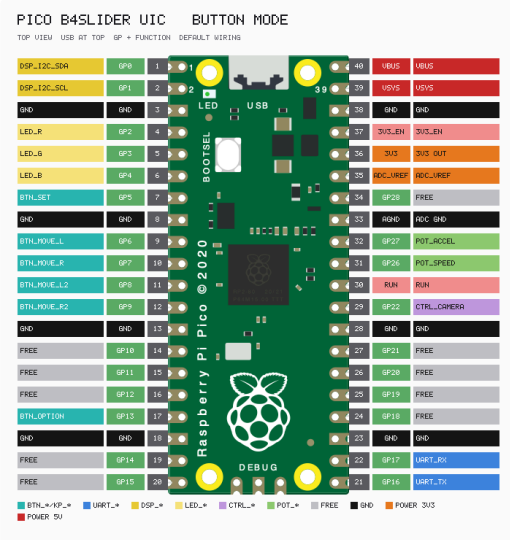

UART to SliderMC @ 115 200 baud (GP16/17 crossed). GP8/GP9 = MOVE_L2/R2 when axis2 on. Handshake: UIC \n → MC welcome # ... banner.