




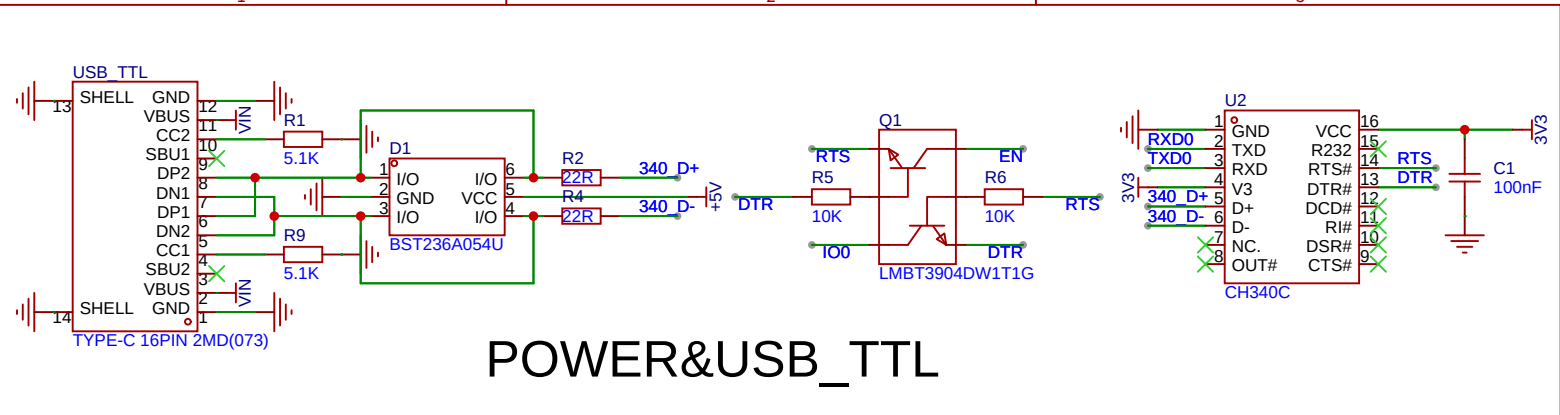


POWER&USB_TTL

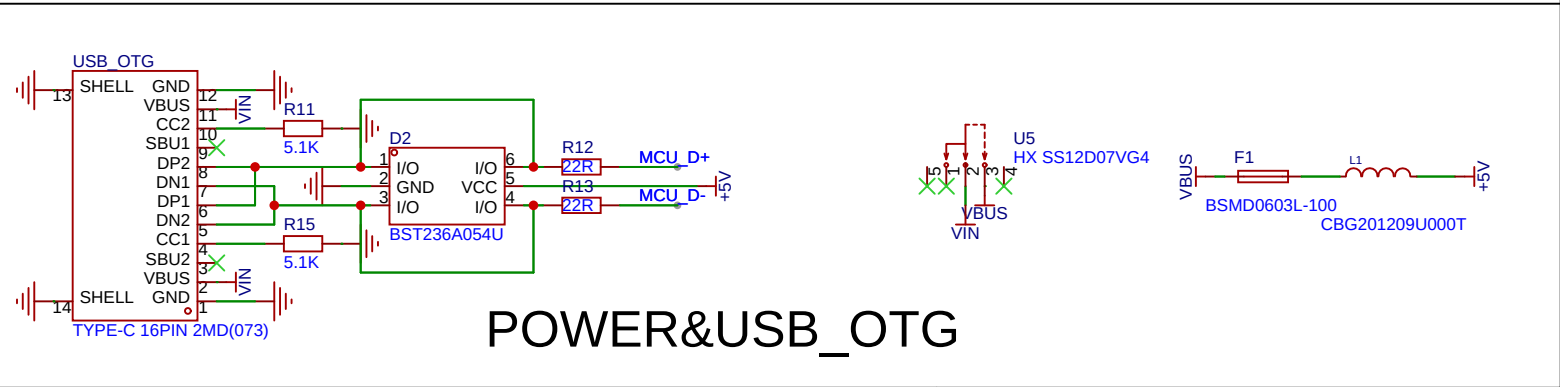


POWER&USB_OTG

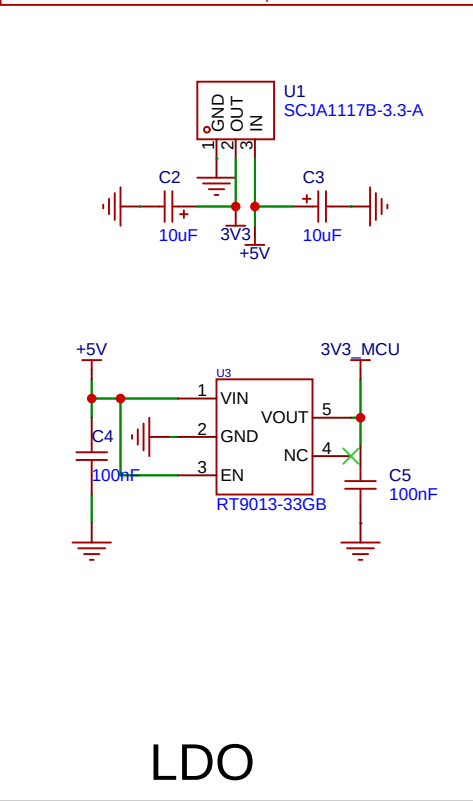




LDO

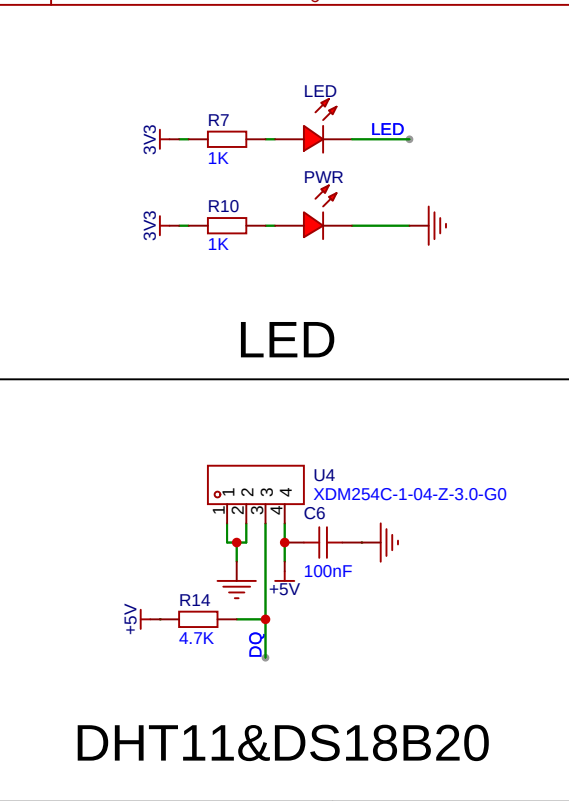


DHT11&DS18B20

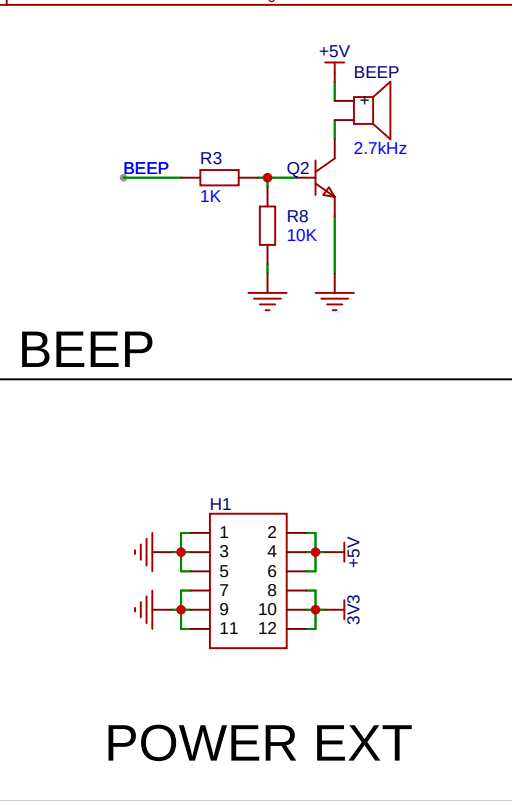

POWER EXT

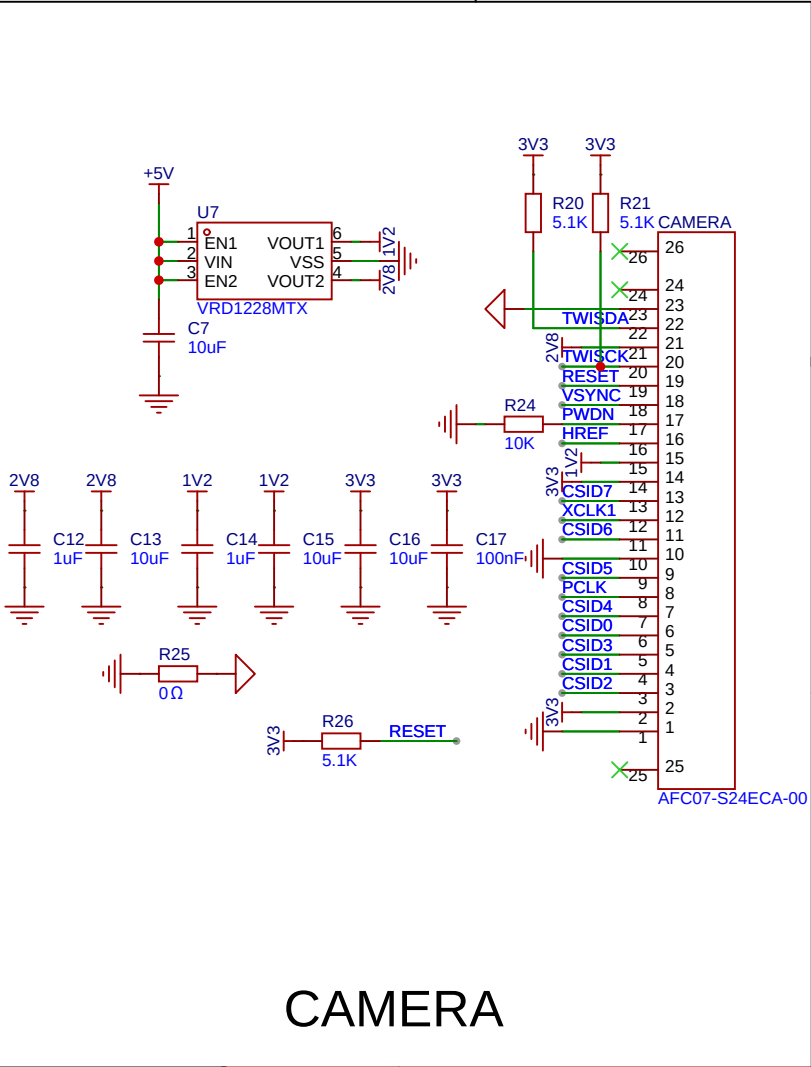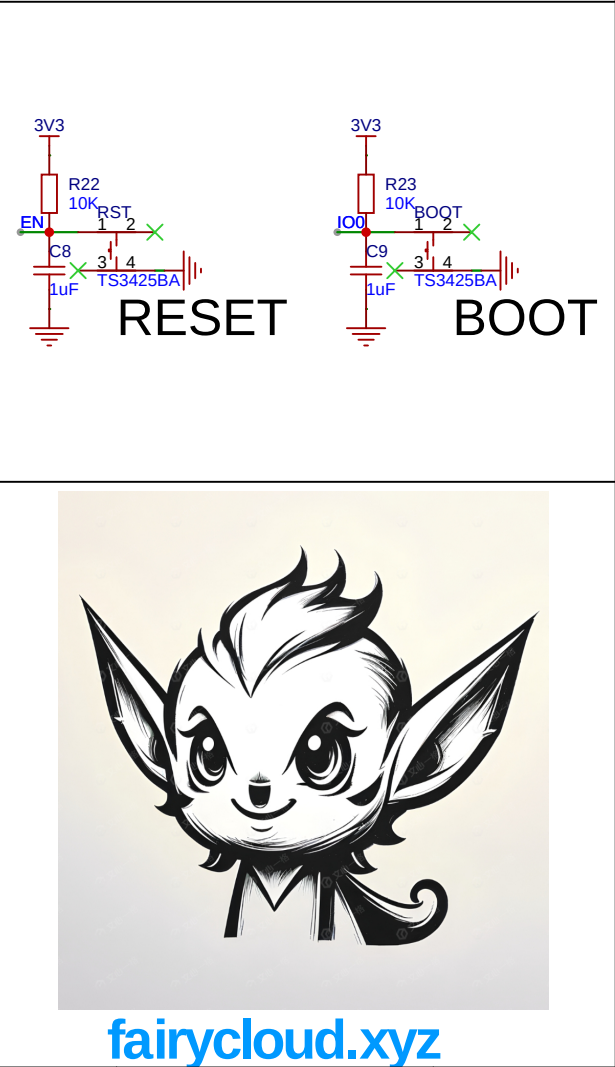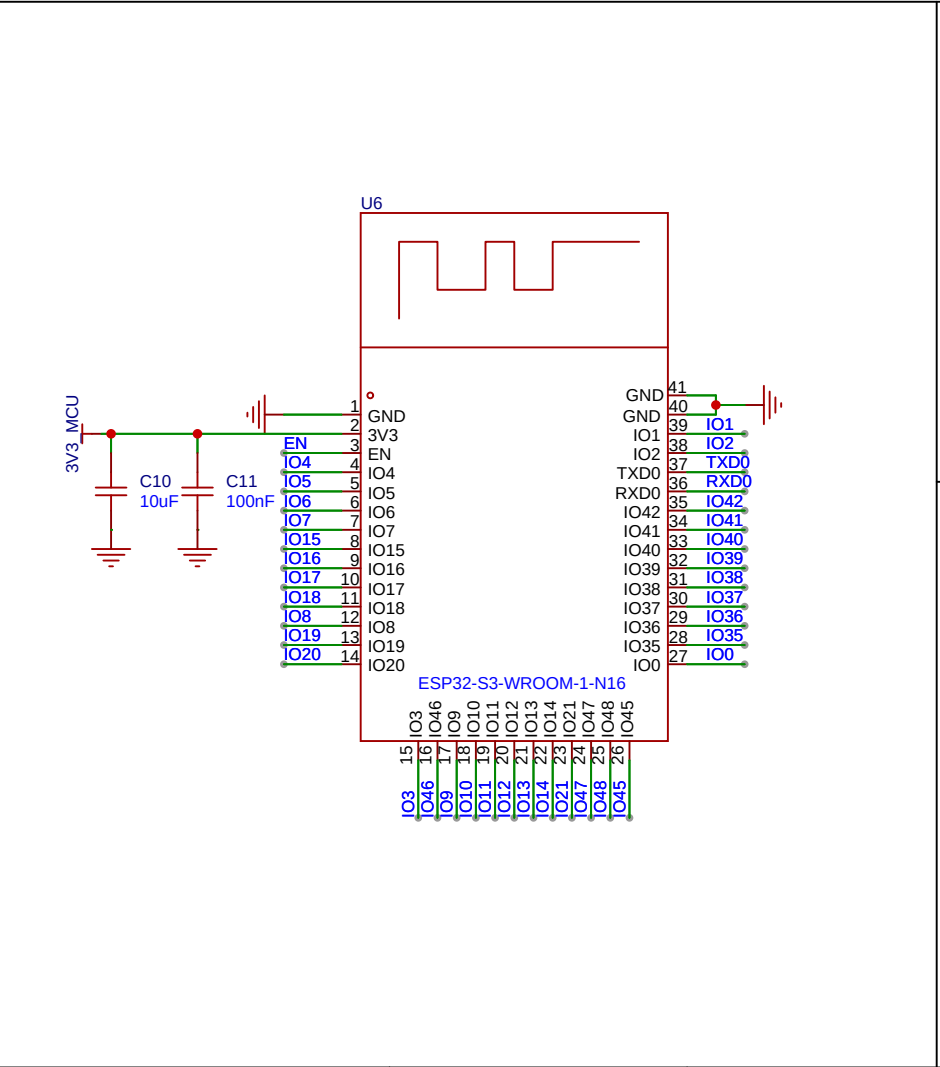

CAMERA

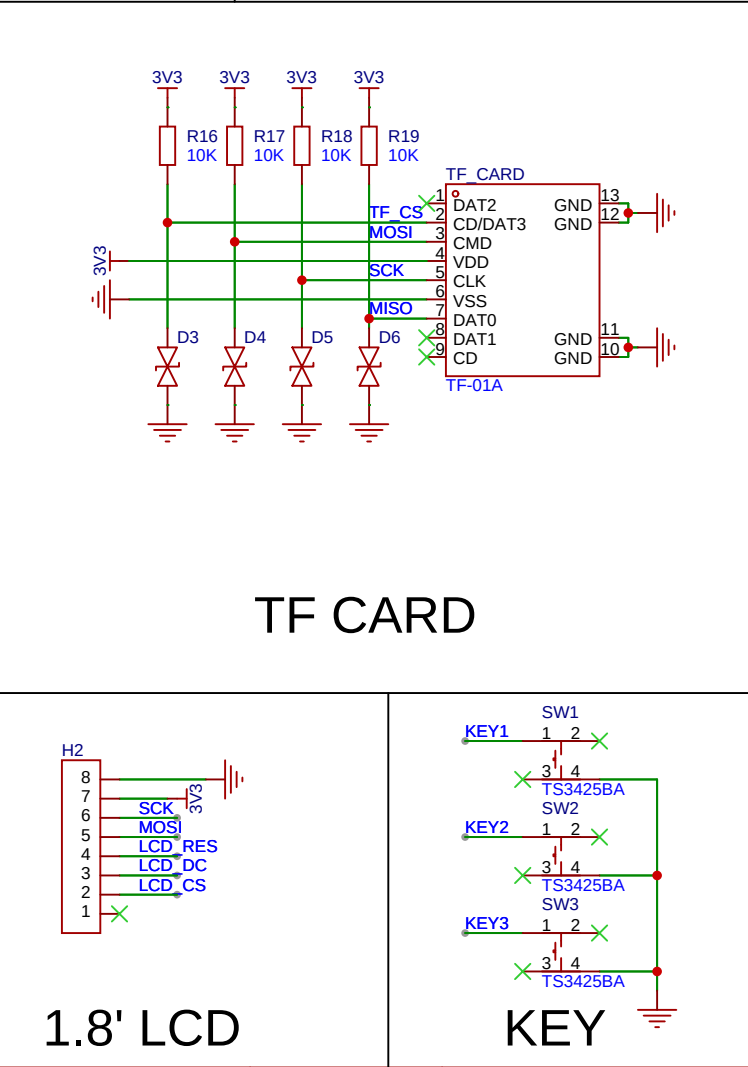

TF CARD

1.8' LCD

KEY

IO8 PCLK IO7 CSID0 IO9 XCLK1 IO5 CSID1 IO10 HREF IO4 CSID2 IO11 VSYNC IO6 CSID3 IO12 RESET IO15 CSID4 IO13 TWISCK IO16 CSID5 IO14 TWISDA IO17 CSID6 IO18 CSID7 摄像头引脚		IO19 MCU_D- IO20 MCU_D+ USB_OTG引脚		IO3 KEY1 IO46 KEY2 用户按键引脚		IO1 TF_CS IO38 LCD_RES IO48 MOSI IO21 MISQ IO47 SCK LCD屏幕 TF卡接口		IO45 SW4 IO38 KEY3 IO42 LED IO40 LCD_CS IO42 LCD_DC IO42 BEEP IO42 DQ 用户根据自己使用拨动拨码开关切换引脚功能 IO2--温湿度传感器 IO38--板载LED灯 IO42--蜂鸣器 IO45--用户按键KEY3 IO39、IO40--LCD屏幕部分接口		IO2 IO1 IO3 IO4 IO39 IO38 IO37 IO36 IO35 IO34 IO12 IO11 IO21 IO20 IO47 IO46 2.54-2*8P针		hole1 hole2 hole3 hole4 M3		原理图 图页 绘制 审阅		更新日期 创建日期 物料编码		Fairy-ESP32S3		版本 尺寸 页 共		嘉立创EDA	
---	--	--	--	--	--	--	--	--	--	---	--	---	--	--	--	-------------------------------------	--	----------------------	--	---------------------------------------	--	---------------	--