



Tigrillo API 1.0

Developer Guide

Document: 8281 v1.5



Copyright

Copyright 2021 Eseye Ltd. All rights reserved.

You may not reproduce or use this document or any portion thereof without prior written permission of Eseye Ltd. Eseye Ltd retains the right to change this document or related product specifications and descriptions, at any time, without notice. Eseye Ltd makes no warranty for the use of this document and assumes no responsibility for any errors that may appear in the document, nor does it make a commitment to update the information contained herein. For the most current product information, please visit www.eseye.com.

Eseye® and its logos, Eseye Intelligently Connected® and Hera 300™ are trademarks of Eseye Ltd in the United Kingdom and/or other countries. All other marks and names mentioned herein may be claimed as the property of others.

Last updated: 01 July 2022

Contents

About this guide	vi
Extra reading	vi
Standards and conventions	vii
Tigrillo API introduction	1
Accessing the API	1
Tigrillo API functionality	2
Testing the Tigrillo API	2
Tigrillo API requests	3
Configuring headers	4
Headers	4
POST /Japi/Tigrillo/login	6
Authentication	6
Headers	6
Request Body application/json	6
Responses application/json	6
POST /Japi/Tigrillo/getCookieName	9
Authentication	9
Request Body application/json	9
Responses application/json	9
POST /Japi/Tigrillo/ping	10
Authentication	10
Request Body application/json	10
Responses application/json	10
POST /Japi/Tigrillo/getSIMs	11
Authentication	11
Headers	11
Request Body application/json	11
Responses application/json	13
POST /Japi/Tigrillo/getSIMStateOptions	17
Authentication	17
Headers	17
Request Body application/json	18

Responses application/json	18
POST /Japi/Tigrillo/setSIMState	20
Authentication	20
Headers	20
Request Body application/json	20
Responses application/json	21
POST /Japi/Tigrillo/activateSIMs	22
Authentication	22
Headers	22
Request Body application/json	22
Responses application/json	23
POST /Japi/Tigrillo/suspendSIMs	25
Authentication	25
Headers	25
Request Body application/json	25
Responses application/json	26
POST /Japi/Tigrillo/unsuspendSIMs	27
Authentication	27
Headers	27
Request Body application/json	27
Responses application/json	27
POST /Japi/Tigrillo/terminateSIMs	29
Authentication	29
Headers	29
Request Body application/json	29
Responses application/json	29
POST /Japi/Tigrillo/setSIMDetail	31
Authentication	31
Headers	31
Request Body application/json	31
Responses application/json	32
POST /Japi/Tigrillo/getSIMBilling	33
Authentication	33
Headers	33

Request Body application/json	33
Responses application/json	34
POST /Japi/Tigrillo/getSIMLastActivity	37
Authentication	37
Headers	37
Request Body application/json	37
Responses application/json	37
POST /Japi/Tigrillo/logout	42
Authentication	42
Headers	42
Request Body application/json	42
Responses application/json	42
Troubleshooting errors	43

About this guide

This guide is designed to help you access provisioning status and connection metadata for your Eseye-managed connectivity, using the Tigrillo API.

Extra reading

For general information, see the online help: <https://docs.eseye.com/Content/Home.htm>

You can also manage SIM cards through the web portal. For more information, see the [8295 SIAM User Guide \(PDF\)](#).

Standards and conventions

This guide uses consistent visual cues and standard text styles to help you locate and interpret information easily.

Style	Description
 Note	Extra information or a recommendation related to the current topic.
 Tip	Good-to-know information that helps users complete a procedure or understand a topic.
 Warning	Information that alerts the user about significant or critical actions or outcomes.

<i>Title names</i>	Window or section names, denoting a title, appear in italics.
Field or button name	Element names in a user interface, for example fields and buttons, appear in bold.
Ctrl+X; Ctrl+click	A key combination with a plus sign separating two key names or a key name and a mouse action, indicates that you hold down the first key while pressing the second key or performing the mouse action.
Cross reference <i>Title</i> and page	Cross references appear in italics, for example: For more information, see <i>Copyright</i> on page 2. Select the cross reference to view it.
Hyperlinks	Underlined cross references are hyperlinks to electronic forms of the document. Select the hyperlink to open the cross reference.
AT Commands	
Commands	Command formats are displayed in monospaced typeface.
<Parameter>	Angle brackets enclose the AT Command parameter, for example <topic>. The brackets do not appear in the command line.
"ParameterString"	Quotation marks enclose parameter strings.
<i>CommandValue</i>	Italics in a command depicts values or examples that need replacing with your specific parameters.
[CommandOptionalEntry]	Square brackets display optional entries.
ATCommandResponse	Returned responses to AT Commands are displayed in monospaced bold typeface.
<ASCIICHARACTERS>	Returned ASCII characters are in uppercase.

Tigrillo API introduction

The Tigrillo API enables you to access your SIAM account to return SIM card information, such as data usage, and configure specific fields, such as the friendlyName and SIM card status. You can only view and configure information for SIM cards that are already linked to your SIAM account.

Eseye makes data available for two months. You must store any historic data you want to retain.

Before you begin

You will need:

- A SIAM account, with all your SIM cards linked to this account.
- Your SIAM account portfolioID. Contact Eseye Support for more information: support@eseye.com.
- A static IP address that Eseye will whitelist to access the Tigrillo API.

Accessing the API

Use the following URL to access the latest version of the Tigrillo API:

- `https://siam.eseye.com/Japi/Tigrillo/<method>`

where `<method>` is the method used, for example `getSIMs`.

Use the following URL to access a specific version of the Tigrillo API:

- `https://siam.eseye.com/Japi/<version>Tigrillo/<method>`

where `<version>` is the required version, for example:

`https://siam.eseye.com/Japi/v1.0/Tigrillo/getSIMs`

Tigrillo API functionality

I want to...

Change the state of a single SIM card

- Activate one or more SIM cards – see *POST /Japi/Tigrillo/activateSIMs* on page 22
- Suspend, reactivate or terminate a single SIM card – see *POST /Japi/Tigrillo/setSIMState* on page 20

Change the state of multiple SIM cards

- Activate one or more SIM cards – see *POST /Japi/Tigrillo/activateSIMs* on page 22
- Suspend multiple SIM cards – *POST /Japi/Tigrillo/suspendSIMs* on page 25
- Unsuspend (re-enable) multiple SIM cards – see *POST /Japi/Tigrillo/unsuspendSIMs* on page 27
- Terminate multiple SIM cards – see *POST /Japi/Tigrillo/terminateSIMs* on page 29

Understand the current state of a single SIM card, and what states are available

- See *POST /Japi/Tigrillo/getSIMStateOptions* on page 17.

Update the details of a single SIM card

- See *POST /Japi/Tigrillo/setSIMDetail* on page 31.

View the SIM card estate for the account, or a portion thereof (such as the total number of activated SIM cards)

- See *POST /Japi/Tigrillo/getSIMs* on page 11.

View billing information for a single SIM card

- See *POST /Japi/Tigrillo/getSIMBilling* on page 33.

View the last recorded details for a SIM card, for the purposes of tracking or viewing data usage

- See *POST /Japi/Tigrillo/getSIMLastActivity* on page 37.

Testing the Tigrillo API

Eseye can supply SIM numbers on a zero charge contract for testing purposes, to permit full testing of the API without incurring connectivity costs. We recommend requesting at least 1000 numbers for volume testing.

Contact your Account Manager to request the test SIM numbers.

Tigrillo API requests

You can call the Tigrillo API in any API development app using the following commands:

- `login` – see *POST /Japi/Tigrillo/login* on page 6
- `getCookieName` – *POST /Japi/Tigrillo/getCookieName* on page 9
- `ping` – see *POST /Japi/Tigrillo/ping* on page 10
- `getSIMs` – see *POST /Japi/Tigrillo/getSIMs* on page 11
- `getSIMStateOptions` – see *POST /Japi/Tigrillo/getSIMStateOptions* on page 17
- `setSIMState` – see *POST /Japi/Tigrillo/setSIMState* on page 20
- `activateSIMs` – see *POST /Japi/Tigrillo/activateSIMs* on page 22
- `suspendSIMs` – see *POST /Japi/Tigrillo/suspendSIMs* on page 25
- `unsuspendSIMs` – see *POST /Japi/Tigrillo/unsuspendSIMs* on page 27
- `terminateSIMs` – see *POST /Japi/Tigrillo/terminateSIMs* on page 29
- `setSIMDetail` – see *POST /Japi/Tigrillo/setSIMDetail* on page 31
- `getSIMBilling` – see *POST /Japi/Tigrillo/getSIMBilling* on page 33
- `getSIMLastActivity` – see *POST /Japi/Tigrillo/getSIMLastActivity* on page 37
- `logout` – see *POST /Japi/Tigrillo/logout* on page 42

All information is sent in JSON.




Use plain text to send requests.



All Eseye API examples are written for Postman. For information about using Postman, see the [8314 Postman User Guide \(PDF\)](#).

Using Postman, if required, you can select **Code** to generate code snippets.

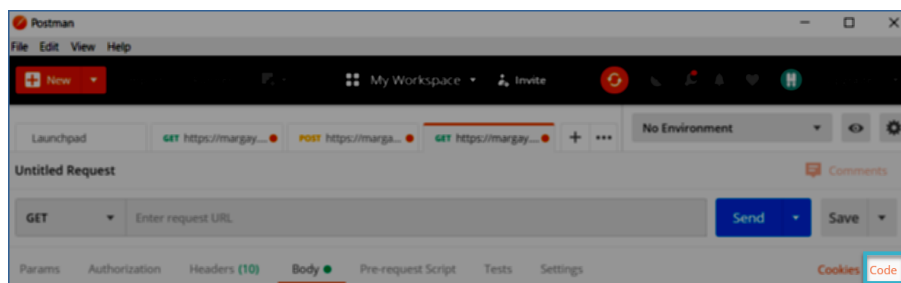

For more information, see *Troubleshooting errors* on page 43.

Configuring headers

Headers accompany the body of a request, containing information about the request and how to process it. All Tigrillo API requests use the same headers.

Headers



If you are using Postman, the following headers are automatically generated.

Schema

Object name	Default value (Postman)	Description	Required?
Cookie	PHPSESSID=<CookieNumber>	Sends cookies that are associated with this endpoint.	✓
Cache-Control	no-cache	We recommend using this header. Prevents the server returning a stale response when you make repeated requests.	
Postman-Token	<calculated when request is sent>	If you are using Postman, we recommend this header, which appends a random UUID to every outgoing request. This aids debugging, by ensuring separate requests are distinct in the receiving server.	
Content-Type	application/json	Helps the server identify the media type of the current request body.	✓
Content-Length	<calculated when request is sent>	For parsing purposes. Indicates the size of the current request body to the server.	
Host	<calculated when request is sent>	Helps the server identify the domain name where the request is sent.	✓
User-Agent	PostmanRuntime/<PostmanVersion>	If you are using Postman, we	

Object name	Default value (Postman)	Description	Required?
		recommend using this header. Helps the server identify Postman as the HTTP requesting application or client.	
Accept	*/*	If you are using Postman, we recommend using this header. The "Accept: */*" header tells the server that Postman can understand and process all forms of response content types.	
Accept-Encoding	gzip, deflate, br	If you are using Postman, we recommend using this header. Indicates to the server that the Postman HTTP client supports a defined list of content-encoding or compression algorithms as response.	
Connection	keep-alive	We recommend using this header. Indicates to the server to keep the underlying network connection open after receiving the current response. This enables you to reuse the same connection for faster response times in subsequent requests to the same server.	

Example

Headers
<pre>'headers': { 'Content-Type': 'application/json', 'Cookie': 'PHPSESSID=3cp0ct8ofutokn6q950qpg5555' },</pre>

POST /Japi/Tigrillo/login

Logs the user into SIAM.

Authentication

- User account must exist in SIAM
- PortfolioID

Headers

For information about headers, see *Configuring headers* on page 4.

Request Body application/json

Schema

Object name	Description	Required?
username	The end-user name or email address that enables access to an existing SIAM account. Can contain from 6 to 255 characters.	✓
password	The end-user password. Can contain from 6 to 255 characters	✓
portfolioID	The SIAM account portfolio identifier. Must contain exactly 32 characters.	✓

Example

Body raw JSON

```
{
  "username" : "Example@Username.com",
  "password" : "examplepassword",
  "portfolioID" : "CustomerPortfolioID"
}
```

Responses application/json

Schema

JSON key	Description
status	The array, containing details about the request status.
status	"OK" – the request processed successfully "ERR" – the request failed
errorCode	" " – the request processed successfully

JSON key	Description														
	"<ErrorCodeNumber>" – the request failed because of this specific error. For more information, see <i>Troubleshooting errors</i> on page 43.														
errorMessage	" " – the request processed successfully "<ErrorMessage>" – displays an explanation of the error if the request failed. For more information, see <i>Troubleshooting errors</i> on page 1.														
cookie	The cookie stores your login details so that the session can remain open without the need to log in again. If you do not log out, but an attempt is made to log in, the previous user is logged out, regardless of whether the new login attempt is successful. A cookie is valid for 4 hours after it is generated.  The system will only record an attempt to login if the function and JSON format text is entered correctly.														
permissions	Indicates the account type, which enables different functions, either: <table> <tr> <th>Character</th><th>Permission</th></tr> <tr> <td>A</td><td>Admin</td></tr> <tr> <td>E</td><td>Engineering</td></tr> <tr> <td>F</td><td>Finance</td></tr> <tr> <td>L</td><td>Logistics</td></tr> <tr> <td>T</td><td>Technical</td></tr> <tr> <td>U</td><td>Standard User</td></tr> </table> For information about permissions, see 8295 SIAM User Guide (PDF).	Character	Permission	A	Admin	E	Engineering	F	Finance	L	Logistics	T	Technical	U	Standard User
Character	Permission														
A	Admin														
E	Engineering														
F	Finance														
L	Logistics														
T	Technical														
U	Standard User														
canActivate	Indicates whether the account is permitted to activate SIM cards. Either yes or no.														



The Tigrillo API returns a **Set-Cookie** header in the following format:

PHPSESSID=<cookie>; path=/
 where *cookie* is the session cookie to maintain the login status.

Example

JSON
<pre>{ "status": {</pre>

```
    "errorCode": "",
    "errorMessage": "",
    "status": "OK"
  },
  "cookie": "01eq42isi4e2ksr2p6dq7jfut2",
  "permissions": "UEFLA",
  "canActivate": "yes"
}
```

POST /Japi/Tigrillo/getCookieName

Returns the name of the HTTP cookie needed for sessions to continue without the need to log in each time. A cookie is valid for 4 hours after it is generated.

Authentication

- User required to login

Request Body application/json

None

Responses application/json

Schema

JSON key	Description
PHPSESSID	The identification number that is generated on the server side to assign user requests to a session. This session ID is stored locally with the user and transferred in the form of cookies.

Example

JSON
"PHPSESSID"

Viewing the latest cookie

To view the PHPSESSID value, select **Cookies**.

The displayed value is the latest cookie, used in the last successful login.

For more information, see *Troubleshooting errors* on page 43.

POST /Japi/Tigrillo/ping

Tests whether the server is running.

Authentication

- None

Request Body application/json

None

Responses application/json

Schema

JSON key	Description
pong	Message received if the server is running.

Example

JSON
"pong"

POST /Japi/Tigrillo/getSIMs

Returns a list of SIM records containing data about each SIM. You can set search parameters to restrict your search.

Authentication

- User required to login

Headers

For information about headers, see *Configuring headers* on page 4.

Request Body application/json

Schema



Use null without quotes as the input if you do not wish to use these objects. The value will remain as previously set. If you want to change the object value to a new value, replace null with "<value>" within quotes, where <value> is the required value. To remove an existing value, type an empty string. For example: "friendlyName" : "" ,

JSON key	Description	Required?
searchCriteria	You can set searchCriteria on state, group, or tariff, or search for an exact string.  If null is entered as input for all parameters, all SIM records are returned, in ascending order of ICCID.	
state	The current SIM state, either: • null (default) – returns all values, regardless of state • "suspended" • "terminated" • "provisioned" • "unprovisioned"	
group	The SIM group name. Set the group names for SIM collections when you activate them using the activateSIMs function, or through the SIAM portal. The default is null.	
tariff	The SIM tariff (returns <i>PackageID</i>). The tariff is usually four numerical digits in length, for example: 2356. The default is null.	

JSON key	Description	Required?														
matchString	An exact search string that you want to find. Requires matchType and matchFields to define where to search within a specified field. The default is null.															
matchType	Used in conjunction with matchString. Where to search for an exact string within a field, using the following search types: "S" – starts with... "E" – ends with... "C" – contains "M" – matches The default is null.															
matchFields	Used in conjunction with matchString. The field you want to search for an exact string. You can use either the field name or indicator: <table><thead><tr><th>Field name</th><th>Indicator</th></tr></thead><tbody><tr><td>"FriendlyName"</td><td>"F"</td></tr><tr><td>"ICCID"</td><td>"I"</td></tr><tr><td>"IMEI"</td><td>"E"</td></tr><tr><td>"IMSI"</td><td>"S"</td></tr><tr><td>"IP Address"</td><td>"A"</td></tr><tr><td>"MSISDN"</td><td>"M"</td></tr></tbody></table> The default is null.	Field name	Indicator	"FriendlyName"	"F"	"ICCID"	"I"	"IMEI"	"E"	"IMSI"	"S"	"IP Address"	"A"	"MSISDN"	"M"	
Field name	Indicator															
"FriendlyName"	"F"															
"ICCID"	"I"															
"IMEI"	"E"															
"IMSI"	"S"															
"IP Address"	"A"															
"MSISDN"	"M"															
sortOrder	The field used for sorting the returned results. The default is null, which returns results in an undefined order. Use either the field name or indicator: <table><thead><tr><th>Field name</th><th>Indicator</th></tr></thead><tbody><tr><td>"FriendlyName"</td><td>"F"</td></tr><tr><td>"ICCID"</td><td>"I"</td></tr><tr><td>"IMEI"</td><td>"E"</td></tr><tr><td>"IMSI"</td><td>"S"</td></tr><tr><td>"IP Address"</td><td>"A"</td></tr><tr><td>MSISDN</td><td>"M"</td></tr></tbody></table>	Field name	Indicator	"FriendlyName"	"F"	"ICCID"	"I"	"IMEI"	"E"	"IMSI"	"S"	"IP Address"	"A"	MSISDN	"M"	
Field name	Indicator															
"FriendlyName"	"F"															
"ICCID"	"I"															
"IMEI"	"E"															
"IMSI"	"S"															
"IP Address"	"A"															
MSISDN	"M"															

JSON key	Description	Required?
	Type A (ascending) or D (descending) immediately after the indicator to arrange the results using the selected field. For example, "FA" sorts the results by friendlyName, in ascending (0-9, A to Z) order. "FD" sorts the results by friendlyName, in descending order (Z to A, 9-0).	
startRec	The start record for returned results. The default is null (alternatively, use "0"), which returns all the results listed from the first record (record 0). Use "1" to return all the results from record 1 onwards, "2" to return the results from record 2 onwards, and so on.	
numRecs	The number of records to return. The default is null, which returns ten records. Use "1" to return one result, "2" to return two results, and so on.	

Example

Body raw JSON

```
{
  "searchCriteria" : {
    "state" : null ,
    "group" : null ,
    "tariff" : null ,
    "matchString" : null ,
    "matchType" : null ,
    "matchFields" : null
  } ,
  "sortOrder" : null ,
  "startRec" : 0 ,
  "numRecs" : 23
}
```

Responses application/json

Schema

JSON key	Description
status	The array, containing details about the request status.
status	"OK" – the request processed successfully "ERR" – the request failed
errorCode	" " – the request processed successfully "<ErrorCodeNumber>" – the request failed because of this specific error. For more information, see <i>Troubleshooting errors</i> on page 43.

JSON key	Description
errorMessage	"" – the request processed successfully "<ErrorMessage>" – displays an explanation of the error if the request failed. For more information, see <i>Troubleshooting errors</i> on page 43.
totRecs	The total number of returned records.
sims	The array, containing details about each SIM.
MSISDN	The unique SIM phone number (Mobile Station International ISDN Number).
simID	The SIM number.
friendlyName	A unique user-friendly name, to help identify the SIM. Change this value using <i>setSIMDetail</i> . For more information, see <i>POST /Japi/Tigrillo/setSIMDetail</i> on page 31.
MEID	The Mobile Equipment Identifier. The unique 14 digit number that identifies CDMA system devices using Verizon, US Cellular, or Sprint carriers.
ICCID	The unique Integrated Circuit Card Identification Number.
IMSI	The International Mobile Subscriber Identity.
DataUsage	The total amount of data used in the current month, in bytes.
DataDate	The date and time stamp of the last data usage update.
ipAddress	The unique SIM internet protocol address.
group	The name identifying a group of SIMs. Change this value in the SIAM portal.
LastMCC	The last recorded Mobile Country Code – the country the device was in when the event occurred, in three-digit numeric format. For more information, see http://en.wikipedia.org/wiki/Mobile_country_code .
LastMNC	Last recorded Mobile Network Code – the network operator the device was using when the event occurred, in one or two digit numeric format. For more information, see http://en.wikipedia.org/wiki/Mobile_country_code .
LastRadiusStart	The last recorded date and time that the device opened a data session and obtained an IP address.
LastRadiusStop	The last recorded date and time that the device ended a data session. If LastRadiusStop occurs before the LastRadiusStart, the current session is in progress. If LastRadiusStop occurs after LastRadiusStart, the session has ended.

JSON key	Description
	 If the data session abnormally terminates without a close request from the device, the event and date and time stamp may be absent.
PackageID	The package reference number (tariffID), usually four digits.
Activated	The date and time stamp indicating when the SIM was activated.
OutOfService	The date and time stamp indicating when the SIM was deprovisioned or terminated.
status	SIM status, either: "available", "suspended", "terminated", "provisioned", or "unprovisioned".
statusReason	For suspended or terminated SIMs only, a reason for the status. Either: "customer" – the customer requested the suspension or termination "profile" – the alerting profile rules have triggered a suspension. For more information, see 8295 SIAM User Guide (PDF).
alert	Currently unused
controls	The type of control message you can send to the SIM: - s – SMS - u – USSD - us – both USSD and SMS "" – neither USSD nor SMS are permitted
dataMSISDN	Not normally supported for IoT devices without prior arrangement. One or more phone numbers that are associated with the SIM for sending and receiving data only.
localMSISDN	The primary phone number associated with the SIM.
mappedMSISDN	One or more country-specific phone numbers that are associated with the SIM.

Example

JSON
<pre>{ "totRecs": 15, "sims": [{ "MSISDN": 19282885999, "simID": "8944555523012560998", "friendlyName": "null", "MEID": null, "ICCID": "8944555523012560998", "IMSI": 234588550763077, }] }</pre>


```
    "DataUsage": 0,  
    "DataDate": null,  
    "ipAddress": "10.246.121.56",  
    "group": null,  
    "LastMCC": "310",  
    "LastMNC": "260",  
    "LastRadiusStart": "2018-01-09 17:46:43",  
    "LastRadiusStop": "2018-01-09 17:47:14",  
    "PackageID": 9337,  
    "Activated": "2020-09-18 12:57:02",  
    "OutOfService": null,  
    "status": "provisioned",  
    "alert": "",  
    "controls": "SU",  
    "dataMSISDN": null,  
    "localMSISDN": 44745256365313,  
    "mappedMSISDN": 19282885056  
  },
```

POST /Japi/Tigrillo/getSIMStateOptions

Returns the state options you can apply to the current SIM card, based on the current state:

- If the SIM card is activated, then you can suspend or terminate it.
- If the SIM card is suspended, then you can reactivate or terminate it.
- If the SIM card is terminated, then you can reactivate it.

Eseye SIMs have the following lifecycle:

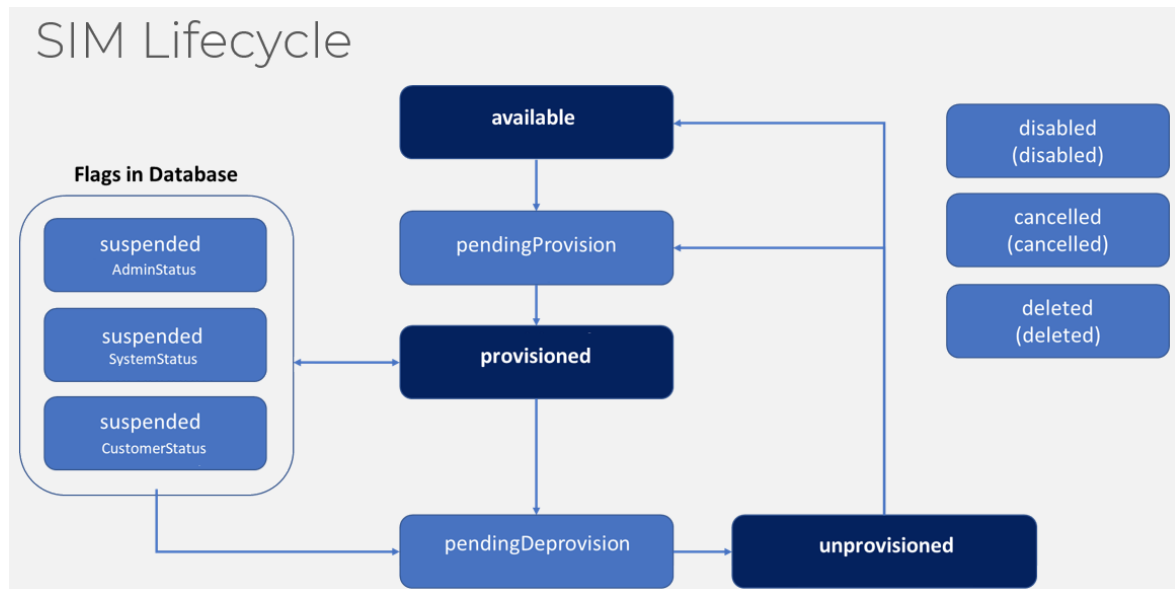

The Tigrillo API fetches the following statuses from SIAM :

SIAM SIM Status	Tigrillo SIM Status
Available	available
PendingProvision	pendingProvision
Active	provisioned
Suspended	suspended (admin, system, customer)
PendingTermination	pendingDeprovision
Terminated	unprovisioned

Authentication

- User required to login

Headers

For information about headers, see *Configuring headers* on page 4.

Request Body application/json

Schema

Object name	Type	Description	Required?
ICCID	20 char string	The current SIM ICCID	☑

Example

Body raw JSON

```
{
  "ICCID" : "8944538523016999555"
}
```

Responses application/json

Schema

JSON key	Description
status	The array, containing details about the request status.
status	"OK" – the request processed successfully "ERR" – the request failed
errorCode	" " – the request processed successfully "<ErrorCodeNumber>" – the request failed because of this specific error. For more information, see <i>Troubleshooting errors</i> on page 43.
errorMessage	" " – the request processed successfully "<ErrorCodeMessage>" – displays an explanation of the error if the request failed. For more information, see <i>Troubleshooting errors</i> on page 43.
stateOptions	The array, displaying optional states.
ID	Either: suspend – you can suspend the SIM card. If suspended, the SIM will continue connecting to the network and service charges will continue, but you cannot use the SIM. Suspension is instant and you can reverse it. terminate – you can terminate the SIM card. If terminated, the SIM card will stop connecting to the network. Service charges will stop unless the SIM card is in contract, in which case the customer is liable for the rest of the service charges up until the end date of the contract. Termination is not instant – Eseye must verify

JSON key	Description
	the termination. In some instances, you can reprovision a terminated SIM. For more information, see <i>POST /Japi/Tigrillo/activateSIMs</i> on page 22. Allow two hours for the reprovisioning process to complete. active – you can reactivate the SIM card. If activated, the SIM card will start connecting to the network and service charges could apply. You can reverse activation. reason – indicates that you cannot change the SIM card state, and explains why.
title	A description of the state option.

Example

JSON
<pre>{ "status": { "status": "OK", "errorCode": "", "errorMessage": "" }, "stateOptions": [{ "ID": "suspend", "title": "Suspend SIM" }, { "ID": "terminate", "title": "Terminate the SIM" }] }</pre>

POST /Japi/Tigrillo/setSIMState

Changes the state of a single SIM card to any of the following states:

- suspend
- active, for activation and reactivation
- terminate, which will request termination and become a pendingDeprovision state. If the SIM is pending termination, you cannot change its state.

If you want to set the state of multiple SIMs, use any of the following methods:

- activateSIMs – see *POST /Japi/Tigrillo/activateSIMs* on page 22.
- suspendSIMs – see *POST /Japi/Tigrillo/suspendSIMs* on page 25.
- unsuspendSIMs – see *POST /Japi/Tigrillo/unsuspendSIMs* on page 27.
- terminateSIMs – see *POST /Japi/Tigrillo/terminateSIMs* on page 29.

Authentication

- User required to login

Headers

For information about headers, see *Configuring headers* on page 4.

Request Body application/json

Schema

Object name	Description	Required?
ICCID	The current SIM ICCID	✓
state	The desired state, either "active", "suspend", or "terminate".	

Example

Body raw JSON
<pre>{ "ICCID" : "8944538523012999555" , "state" : "active" }</pre>

Responses application/json

Schema

JSON key	Description
status	The array, containing details about the request status.
status	"OK" – the request processed successfully "ERR" – the request failed
errorCode	" " – the request processed successfully "<ErrorCodeNumber>" – the request failed because of this specific error.
errorMessage	" " – the request processed successfully "<ErrorMessage>" – displays an explanation of the error if the request failed.

Example

JSON
<pre>{ "status": { "status": "OK", "errorCode": "", "errorMessage": "" } }</pre>

POST /Japi/Tigrillo/activateSIMs

Activates single or multiple SIMs. Eseye SIM cards are preprovisioned, ready for activation. Before you can activate one or more SIM cards, you must have a signed Service Contract form agreeing to the associated costs. You must associate the SIMs with a package, using the tariffID.

Use activateSIMs to reprovision terminated SIM cards. You must agree to contract terms before the SIM card is reprovisioned.



We recommend that you only activate up to 300 SIM cards per POST, as internet latency issues may introduce errors.

Authentication

- User required to login

Headers

For information about headers, see *Configuring headers* on page 4.

Request Body application/json

Schema



Use null without quotes as the input if you do not wish to use these objects. The value will remain as previously set. If you want to change the object value to a new value, replace null with "<value>" within quotes, where <value> is the required value. To remove an existing value, type an empty string. For example: "friendlyName" : "" ,

JSON key	Description	Required?
sims	Activate one or more SIM cards. You can assign the friendly name and IMEI per ICCID, as well as tariffID, group name and Device ID at activation.  If null is entered as input for all parameters, all SIM records are returned, in ascending order of ICCID.	
ICCID	The ICCID of the SIM you want to activate.	
friendlyName	A unique user-friendly name, to help identify the SIM. Change this value in the SIAM portal. Friendly names contain up to 255 characters and should not include commas.	
IMEI	The International Mobile Equipment Identity number that identifies the device to which the SIM is currently connected.	

JSON key	Description	Required?
tariffID	The SIM tariff (returns <i>PackageID</i>). The tariff is usually four numerical digits in length, for example: 2356. The default is null.	
group	The SIM group name. Set the group names for SIM collections when you activate them using POST /Japi/Tigrillo/activateSIMs, or through the SIAM portal. The default is null.	
device	The device type, for example Hera 604.	

Example

Body raw JSON

```
{
  "sims" : [ {
    "ICCID" : "8944538523012555999" ,
    "friendlyName" : null ,
    "IMEI" : null
  },
  {
    "ICCID" : "8944538523013333111" ,
    "friendlyName" : null ,
    "IMEI" : null
  } ] ,
  "tariffID" : null ,
  "group" : null ,
  "device" : null
}
```

Responses application/json

Schema

JSON key	Description
status	The array, containing details about the request status.
status	"OK" – the request processed successfully "ERR" – the request failed
errorCode	" " – the request processed successfully "<ErrorCodeNumber>" – the request failed because of this specific error. For more information, see <i>Troubleshooting errors</i> on page 43.
errorMessage	" " – the request processed successfully "<ErrorCodeMessage>" – displays an explanation of the error if the request failed. For more information, see <i>Troubleshooting errors</i> on page 43.
simStatuses	The simStatuses title, which includes the ICCID.

JSON key	Description
ICCID	The unique Integrated Circuit Card Identifier for the activated SIM.
status	Returns any of the following: • "AUTO" – the SIM card is scheduled for activation and should appear on the network within five minutes • "OK" – the request was sent to the Eseye provisioning team • "Sim is pending activation" – a previous activation request exists. If you want to reset the SIM to test the activation process again, contact Eseye Support. • "PAY" – payment is required before you can activate the SIM. To pay the outstanding amount, you must have Finance permission: 1. Log into SIAM. 2. Using the top menu, select Finance > Transactions. A list of transactions is displayed. 3. At the bottom right, select Make Credit Card Payment. The Finance overview is displayed, detailing Amount due. 4. Select Make Ad-hoc Payment by Credit Card. For information about account type permissions, see <i>Responses application/json</i> on the previous page.
price	Displays only if the status is "PAY" . Indicates the outstanding amount owed to Eseye.
ccy	Displays only if the status is "PAY" . Indicates the currency of the outstanding amount, as specified on the account contract.

Example

JSON
<pre>{ "status": { "status": "OK", "errorCode": "", "errorMessage": "" }, "simStatuses": { "8944538523013333111": "SIM is pending activation", } }</pre>

POST /Japi/Tigrillo/suspendSIMs

Suspends multiple SIMs. The current SIM state must allow suspension – you cannot suspend a SIM that is already suspended, pending deprovision, or terminated.

Suspension starts immediately, but the SIM card will initially deprovision. The suspension process takes up to two hours until the status displays as suspended. You cannot use the SIM card in its suspended state.



When suspended, the SIM will continue to connect to the network, and service charges will continue. However, usage charges will not continue. For more information, see [Understanding service charges](#).

If required, you can reverse the suspension and reactivate the SIM card. For more information, see [POST /Japi/Tigrillo/unsuspendSIMs](#) on page 27.

Authentication

- User required to login

Headers

For information about headers, see [Configuring headers](#) on page 4.

Request Body application/json

Schema

Object name	Description	Required?
sims	The array, listing the SIM cards you want to suspend.	✓
ICCID	The ICCID of a SIM you want to suspend.	

Example

Body raw JSON

```
{ "sims" : [
  "8944538523013777333" ,
  "8944538523014222888"
]
}
```

Responses application/json

Schema

JSON key	Description
status	The array, containing details about the request status.
status	"OK" – the request processed successfully "ERR" – the request failed
errorCode	" " – the request processed successfully "<ErrorCodeNumber>" – the request failed because of this specific error. For more information, see <i>Troubleshooting errors</i> on page 43.
errorMessage	" " – the request processed successfully "<ErrorCodeMessage>" – displays an explanation of the error if the request failed. For more information, see <i>Troubleshooting errors</i> on page 43.
simStatuses	The simStatuses title, which includes the ICCID. If all SIMs are successfully suspended, this section does not appear in the returned results.
"<ICCID>": errorMessage	The ICCID of each SIM that was not suspended, with a reason for the error.

Example

JSON
<pre>{ "status": { "status": "OK", "errorCode": "", "errorMessage": "" }, "simStatuses": { "8944538523013777333": "E0137:Invalid SIM no. provided", } }</pre>

POST /Japi/Tigrillo/unsuspendSIMs

Unsusponds multiple SIMs that are currently suspended.

Do not send an unsuspend request until the SIM card state is "suspended", as these may be discarded or delayed.

Authentication

- User required to login

Headers

For information about headers, see *Configuring headers* on page 4.

Request Body application/json

Schema

Object name	Description	Required?
sims	The array, listing the SIM cards you want to unsuspend.	
ICCID	The SIM ICCID that you want to unsuspend.	✓

Example

Body raw JSON
<pre>{ "sims" : ["8944538523013111555" , "8944538523014444777"] }</pre>

Responses application/json

Schema

JSON key	Description
status	The array, containing details about the request status.
status	"OK" – the request processed successfully "ERR" – the request failed
errorCode	" " – the request processed successfully "<ErrorCodeNumber>" – the request failed because of this specific error. For more information, see <i>Troubleshooting errors</i> on page 43.

JSON key	Description
errorMessage	" " – the request processed successfully "<ErrorCodeMessage>" – displays an explanation of the error if the request failed. For more information, see <i>Troubleshooting errors</i> on page 43.
simStatuses	The array, listing all ICCIDs that failed to unsuspend. If all SIMs are successfully unsuspended, this section does not appear in the returned results.
"<ICCID>": errorMessage	The ICCID of each SIM that failed to unsuspend, with a reason for the error.

Example

JSON
<pre>{ "status": { "status": "OK", "errorCode": "", "errorMessage": "" }, "simStatuses": { "8944538523013111555": "E0144:SIM cannot be unsuspended", } }</pre>

POST /Japi/Tigrillo/terminateSIMs

Terminates multiple SIMs, and assigns them a pendingDeprovision status. If terminated, the SIM card will stop connecting to the network. Service charges will stop unless the SIM card is in contract, in which case the customer is liable for the rest of the service charges up until the end date of the contract. Termination is not instant – Eseye must verify the termination. In some instances, you can reprovision a terminated SIM. For more information, see *POST /Japi/Tigrillo/activateSIMs* on page 22. Allow two hours for the reprovisioning process to complete.

Authentication

- User required to login

Headers

For information about headers, see *Configuring headers* on page 4.

Request Body application/json

Schema

Object name	Description	Required?
sims	The array, listing all ICCIDs you want to terminate.	✓
ICCID	The SIM ICCID that you want to terminate	✓

Example

Body raw JSON
<pre>{ "sims" : ["8944538523013777333" , "8944538523014222888"] }</pre>

Responses application/json

Schema

JSON key	Description
status	The array, containing details about the request status.
status	"OK" – the request processed successfully "ERR" – the request failed
errorCode	" " – the request processed successfully

JSON key	Description
	"<ErrorCodeNumber>" – the request failed because of this specific error. For more information, see <i>Troubleshooting errors</i> on page 43.
errorMessage	" " – the request processed successfully "<ErrorMessage>" – displays an explanation of the error if the request failed. For more information, see <i>Troubleshooting errors</i> on page 43.
simStatuses	The array, listing all ICCIDs that failed to terminate. If all SIMs are successfully terminated, this section does not appear in the returned results.
"<ICCID>": errorMessage	The ICCID of each SIM that failed to terminate, with a reason for the error.

Example

JSON
<pre>{ "status": { "status": "OK", "errorCode": "", "errorMessage": "" } }</pre>

POST /Japi/Tigrillo/setSIMDetail

Updates the details of a single SIM.

Authentication

- User required to login

Headers

For information about headers, see *Configuring headers* on page 4.

Request Body application/json

Schema

Object name	Description	Required?
ICCID	The unique Integrated Circuit Card Identifier of the SIM you want to update.	
friendlyName	A unique user-friendly name, to help identify the SIM. Change this value in the SIAM portal. Friendly names contain up to 255 characters and should not include commas.	
group	The SIM group name. Set the group names for SIM collections when you activate them using POST /Japi/Tigrillo/activateSIMs, or through the SIAM portal. The default is null.	

Example

Body raw JSON
<pre>{ "ICCID" : "8944538523012555999" , "friendlyName" : "Warehouse1 Hera604", "group" : null }</pre>



Use null without quotes as the input if you do not wish to use these objects. The value will remain as previously set. If you want to change the object value to a new value, replace null with "<value>" within quotes, where <value> is the required value. To remove an existing value, type an empty string. For example: "friendlyName" : "" ,

Responses application/json

Schema

Object name	Description
status	The array, containing details about the request status.
status	"OK" – the request processed successfully "ERR" – the request failed
errorCode	" " – the request processed successfully "<ErrorCodeNumber>" – the request failed because of this specific error. For more information, see <i>Troubleshooting errors</i> on page 43.
errorMessage	" " – the request processed successfully "<ErrorCodeMessage>" – displays an explanation of the error if the request failed. For more information, see <i>Troubleshooting errors</i> on page 43.

Example

JSON
<pre>{ "status": { "status": "OK", "errorCode": "", "errorMessage": "" } }</pre>

POST /Japi/Tigrillo/getSIMBilling

Returns billing information for a single SIM card.

Authentication

- User required to login

Headers

For information about headers, see *Configuring headers* on page 4.

Request Body application/json

Schema

Object name	Description	Required?
ICCID	The SIM card ICCID for which you want to view billing information.	
startDate	The first date included in the search, in the format: "yyyy-mm-dd hh:mm:ss". If no time is included, the default is used: 00:00:00. The default is null, which returns the most recent records.	
endDate	The last date included in the search, in the format "yyyy-mm-dd hh:mm:ss". If no time is included, the default is used: 00:00:00. The default is null, which returns the most recent records.	
sortOrder	Sort the results by Activity ("A") or Event ("E"). The default is null, which sorts the returned results by Event in descending order. Type A (ascending) or D (descending) immediately after the field indicator to arrange the results using the selected field. For example, "AA" sorts the results by Activity, in ascending (0-9, A to Z) order. "AD" sorts the results by Activity, in descending order (9-0, Z to A).  If you do not specify a date range, the results are returned in descending order only.	
startRec	The start record for returned results. The default is null (alternatively, use "0"), which returns all the results listed from the first record (record 0). Use "1" to return all the results from record 1 onwards, "2" to return the results from record 2 onwards, and so on.	

Object name	Description	Required?
numRecs	The number of records to return. The default is null, which returns ten records. Use "1" to return one result, "2" to return two results, and so on.	
filter	Filter the results according to record type, either: • Data – "D" • SMS – "S" • Voice – "V" The default is null, which returns all record types.	

Example

Body raw JSON

```
{
  "ICCID" : "8944538523013522377" ,
  "startDate" : null ,
  "endDate" : "2018-11-15" ,
  "sortOrder" : null ,
  "startRec" : null ,
  "numRecs" : null ,
  "filter" : null
}
```

Responses application/json

Schema

JSON key	Description
totalRecs	Total number of records returned
recs	The array, listing the billing records.
activity	The activity type, either: • "Data" • "SMS" • "Voice" • "Other"
start	The event start date and time stamp, in the format: yyyy-mm-dd hh:mm:ss.
stop	The event stop date and time stamp, in the format: yyyy-mm-dd hh:mm:ss.
description	The activity description, as displayed in your contract.

JSON key	Description								
quantity	The total activity usage amount in the event. <table> <tr> <th>Activity</th><th>Measured in</th></tr> <tr> <td>Data</td><td>Bytes</td></tr> <tr> <td>SMS</td><td>Number of messages</td></tr> <tr> <td>Voice</td><td>Number of seconds</td></tr> </table>	Activity	Measured in	Data	Bytes	SMS	Number of messages	Voice	Number of seconds
Activity	Measured in								
Data	Bytes								
SMS	Number of messages								
Voice	Number of seconds								
price	The amount billed for the event in the currency specified in the SIM card contract, rounded to two decimal points.								
mcc	Mobile Country Code – the country the device was in when the event occurred, in three-digit numeric format. For more information, see http://en.wikipedia.org/wiki/Mobile_country_code .								
mnc	Mobile Network Code – the network operator the device was using when the event occurred, in one or two digit numeric format. For more information, see http://en.wikipedia.org/wiki/Mobile_country_code .								
packageID	The package reference number for the SIM card at the time of the event, usually four digits.								
status	The array, containing details about the request status.								
status	"OK" – the request processed successfully "ERR" – the request failed								
errorCode	" " – the request processed successfully "<ErrorCodeNumber>" – the request failed because of this specific error. For more information, see <i>Troubleshooting errors</i> on page 43.								
errorMessage	" " – the request processed successfully "<ErrorMessage>" – displays an explanation of the error if the request failed. For more information, see <i>Troubleshooting errors</i> on page 43.								

Example

JSON
<pre>{ "totalRecs": 2, "recs": [{ "activity": "Data", "start": "2018-11-14 23:41:47",</pre>

```
    "stop": "2018-11-15 02:34:46",
    "description": "Data",
    "quantity": 2048,
    "price": "9.37",
    "mcc": "310",
    "mnc": "410",
    "packageID": 10001
  },
  {
    "activity": "Data",
    "start": "2018-10-31 22:20:58",
    "stop": "2018-10-31 23:59:59",
    "description": "EU",
    "quantity": 2000,
    "price": "0.56",
    "mcc": "310",
    "mnc": "410",
    "packageID": 13518
  }
],
"status": {
  "status": "OK",
  "errorCode": "",
  "errorMessage": ""
}
}
```

POST /Japi/Tigrillo/getSIMLastActivity

Returns details of the most recent recorded activity on the specified SIM.

Authentication

- User required to login

Headers

For information about headers, see *Configuring headers* on page 4.

Request Body application/json

Schema



Use null without quotes as the input if you do not wish to use these objects. The value will remain as previously set. If you want to change the object value to a new value, replace null with "<value>" within quotes, where <value> is the required value. To remove an existing value, type an empty string. For example: "friendlyName" : "" ,

Object name	Description	Required?
ICCID	The current SIM ICCID	☑

Example

Body raw JSON

```
{
  "ICCID" : "8944538523012560937"
}
```

Responses application/json

Schema

JSON key	Description
info	The array, listing the last activity for the requested ICCID.
LastLat	The last recorded latitude of the SIM.
LastLon	The last recorded longitude of the SIM.
LastLatLonDate	Date and time stamp when the latitude and longitude were last recorded.
LastAPN	The last recorded gateway used by the device to connect to the network.

JSON key	Description
LastRadiusBytes	Number of bytes sent and received in the last recorded data session.
LastUsername	The username recorded in the last APN authentication.
LastMCC	The last recorded Mobile Country Code – identifies the country of the cellular tower to which the SIM last connected, in three-digit numeric format. For more information, see Mobile country codes .
LastMNC	The last recorded Mobile Network Code – identifies the network operator of the network to which the SIM last subscribed, in two-digit numeric format. For more information, see: Mobile network codes listed by country .
LastLAI	The Location Area Identity of the cellular tower to which the SIM last connected, in hexadecimal format. Tracks the physical location of the SIM within the network.
LastCI	The last recorded Cell Identification to track which base station in a location area the SIM was last connected to.
LastRAT	The last Radio Access Technology used by the device to connect to the network.
LastIP	The last allocated Internet Protocol address.
LastMCCMNCDate	The date and time stamp when the MCC and MNC were last recorded.
LastLAICIDate	The date and time stamp when the LAI and CI were last recorded.
LastRadiusStart	The last recorded date and time that the device opened a data session and obtained an IP address.
LastRadiusStop	The last recorded date and time that the device ended a data session. If LastRadiusStop occurs before the LastRadiusStart, the current session is in progress. If LastRadiusStop occurs after LastRadiusStart, the session has ended.  If the data session abnormally terminates without a close request from the device, the event and date and time stamp may be absent.
MonthsRadiusBytes	The total data in bytes used by the SIM in the last month, prior to rounding for billing.
LastSMSMO	The date and time stamp that the last mobile-originated SMS was sent from the device using the SIM.

JSON key	Description
LastSMSMT	The date and time stamp that the last SMS was sent to the phone number associated with the SIM.
LastVoiceMO	The date and time stamp that the last mobile-originated Voice call was made.
LastVoiceMT	The date and time stamp that the last mobile-originated Voice call was made to the phone number associated with the SIM.
LastUSSDMO	The date and time stamp that the last Unstructured Supplementary Service Data (USSD) message was sent from the SIM.
LastUSSDMT	The date and time stamp that the last USSD message was sent to the SIM.
LastIMEI	The last modem International Mobile Equipment Identity number that used the SIM.
LastIMEIDate	The date and time stamp that the IMEI was last recorded.
LastIMSI	The last international mobile subscriber identity number used to authenticate the SIM on the network.
LastIMSIDate	The date and time stamp that the IMSI was last recorded.
MonthsDataTotal	The total data in bytes used by the SIM in the last month, rounded off for billing.
LastMonthsDataTotal	The total amount of data in bytes used in the last month.
MonthsDataDate	The last month's end date and time stamp, when the MonthsDataTotal was calculated.
MonthsSMSTotal	The total number of SMSs used in the last month.
MonthsSMSDate	The last month's end date and time stamp, when the MonthsSMSTotal was calculated.
MonthsUSSDTotal	The total number of unstructured supplementary service data (USSD) used in the last month.
MonthsUSSDDate	The last month's end date and time stamp, when the MonthsUSSDTotal was calculated.
MonthsVoiceTotal	The total amount of voice calls in seconds made and received in the last month.
MonthsVoiceDate	The last month's end date and time stamp, when the MonthsVoiceTotal was calculated.
MonthsMsgTotal	Not specified in this version.

JSON key	Description
MonthsMsgDate	Not specified in this version.
MonthsPriceTotal	The total cost in the currency defined on your contract.
MonthsPriceDate	The last month's end date and time stamp, when MonthsPriceTotal was calculated.
LastSMSMT_DR	The date and time stamp of the last delivery receipt for an MT SMS.
LastNetworkName	The last network used by the SIM.
status	The array, containing details about the request status.
status	"OK" – the request processed successfully "ERR" – the request failed
errorCode	" " – the request processed successfully "<ErrorCodeNumber>" – the request failed because of this specific error. For more information, see <i>Troubleshooting errors</i> on page 43.
errorMessage	" " – the request processed successfully "<ErrorCodeMessage>" – displays an explanation of the error if the request failed. For more information, see <i>Troubleshooting errors</i> on page 43.

Example

JSON
<pre>{ "info": { "LastLat": "50.42", "LastLon": "-0.60", "LastLatLonDate": "2020-07-18 10:06:50", "LastAPN": "eseye1", "LastRadiusBytes": 23782493, "LastUsername": "user@example.com", "LastMCC": "234", "LastMNC": "15", "LastLAI": "3de", "LastCI": "633c", "LastRAT": "UTRAN", "LastIP": "10.228.192.29", "LastMCCMNCDate": "2020-07-18 10:06:50", "LastLAICIDate": "2020-07-18 10:06:50", "LastRadiusStart": "2020-07-18 10:06:50", "LastRadiusStop": "2020-07-18 14:28:53", "MonthsRadiusBytes": 0, "LastSMSMO": "2018-07-18 10:06:50", "LastSMSMT": "2018-07-10 10:03:44", "LastVoiceMO": null, "LastVoiceMT": null, "LastUSSDMO": null, } }</pre>

```

    "LastUSSDMT": null,
    "LastIMEI": "866758047655555",
    "LastIMEIDate": "2020-03-27 11:09:55",
    "LastIMSI": "204043990855555",
    "LastIMSIDate": "2020-03-27 11:09:55",
    "MonthsDataTotal": 0,
    "LastMonthsDataTotal": 0,
    "MonthsDataDate": null,
    "MonthsSMSGTotal": 0,
    "MonthsSMSDate": null,
    "MonthsUSSDTTotal": 0,
    "MonthsUSSDDate": null,
    "MonthsVoiceTotal": 0,
    "MonthsVoiceDate": null,
    "MonthsMsgTotal": null,
    "MonthsMsgDate": null,
    "MonthsPriceTotal": "9.0999",
    "MonthsPriceDate": "2020-07-10 07:34:58",
    "LastSMSMT_DR": null,
    "LastNetworkName": "GB - Vodafone"
  },
  "status": {
    "status": "OK",
    "errorCode": "",
    "errorMessage": ""
  }
}

```

POST /Japi/Tigrillo/logout

Logs the user out of the Tigrillo API.

Authentication

- User required to login

Headers

For information about headers, see *Configuring headers* on page 4.

Request Body application/json

None

Responses application/json

Schema

JSON key	Description
status	The array, containing details about the request status.
status	"OK" – the request processed successfully "ERR" – the request failed
errorCode	" " – the request processed successfully "<ErrorCodeNumber>" – the request failed because of this specific error. For more information, see <i>Troubleshooting errors</i> on page 43.
errorMessage	" " – the request processed successfully "<ErrorMessage>" – displays an explanation of the error if the request failed. For more information, see <i>Troubleshooting errors</i> on page 43.

Example

JSON
<pre>{ "status": { "status": "OK", "errorCode": "", "errorMessage": "" } }</pre>

Troubleshooting errors

When an error occurs, an error code and message are generated in the returned result:

```
{
  "status": {
    "status": "ERR",
    "errorCode": "<ErrorCodeNumber>",
    "errorMessage": "<ErrorCodeMessage>"
  },
}
```

The following table can help you diagnose the error:

Error Code and Message	Reason for error
E0000 – Unknown username or password	The password value is incorrect.
E0001 – Invalid input – Syntax error, malformed JSON	The JSON text is structured incorrectly. Ensure the JSON text follows the format described.  You may receive this error if you copied and pasted text from Microsoft Word. Some MS Word characters are slightly different from ASCII text. To avoid this, either type the text directly into Postman, or configure Microsoft Word to use basic ASCII text.
E0002 – Function not recognized	The <i>SIAM/<method></i> section of the request URL was entered incorrectly, where <i><method></i> is the method used, for example: ...SIAM/suspenddSIMs
E0003 – API version not recognized	The ...<i><version>/SIAM/<method></i> section of the request URL was entered incorrectly or the method was omitted, where <i><version></i> is a previous version of the Tigrillo API, and <i><method></i> is the method used. Leave out <i><version></i> to use the current version. Every request must have a method.
E0004 – Missing parameter – <i><parameter></i> where <i><parameter></i> is the missing parameter	The reported parameter is absent or entered incorrectly, or the "s" in the https section of the request URL was not entered.
E0005 – Invalid parameter – <i><parameter></i> where <i><parameter></i> is the invalid	The reported parameter is absent or entered incorrectly.

Error Code and Message	Reason for error
parameter	
E0006 – Permission denied	The user is logged out, or cookies are stored incorrectly. Login first before you send requests. For more information, see <i>POST /Japi/Tigrillo/login</i> on page 6.
E0100 – Unknown username or password	The username or password value is incorrect.
E0137 – Invalid SIM no. provided	The ICCID was entered incorrectly.
E0143 – SIM cannot be suspended	You cannot suspend the SIM. Use <code>getSIMStateOptions</code> to understand the current state of the SIM, and which states are available as a result. For more information, see <i>POST /Japi/Tigrillo/getSIMStateOptions</i> on page 17.
E0144 – SIM cannot be unsuspended	You cannot unsuspend the SIM. Use <code>getSIMStateOptions</code> to understand the current state of the SIM, and which states are available as a result. For more information, see <i>POST /Japi/Tigrillo/getSIMStateOptions</i> on page 17.
E9998 – System not available at this moment	The system is not currently running. Try again later.
Could not get any response	Error connecting to the server, for any of the following reasons: - You are not connected to the internet. - The Request URL is incorrect in one or more of the following sections: <pre>http :// .eseye.com</pre> - The server backend is not working properly. - SSL connections were blocked: fix this by importing SSL certificates in Chrome. - Cookies were not sent: fix this by using the Postman Interceptor extension. - Restricted headers were not sent: fix this by using the Postman Interceptor extension. - Request timeout: fix this by changing request timeout settings.

Error Code and Message	Reason for error
<!DOCTYPE html>	Error message begins as follows: <pre><!DOCTYPE html PUBLIC "-//W3C//DTD XHTML 1.0 Strict//EN" "http://www.w3.org/TR/xhtml1/DTD/xhtml1-strict.dtd"> <html> <head> <title>Tigrillo Application error page</title> <meta charset="UTF-8"> ...</pre> Indicates that one or more of the following sections in the Request URL is incorrect: • <code>siam</code> • <code>Japi/</code>
SIM is pending activation	A previous activation request exists. If you want to reset the SIM to test the activation process again, contact Eseye Support.



Technical Support:

UK (Head office): +44 1483 802503

France: +33 9 87 67 53 37

Australia: +61 8 9551 5200

USA: +1 484-935-3130

Brazil: +55 11 4950-7015

Email: support@eseye.com

Sales:

UK (Head office): +44 1483 802501

France: +33 9 87 67 53 36

Norway: +47 454 62 017

South Africa: +27 87 551 8200

USA: +1 512-813-0599

Brazil: +55 11 5059-1574

Email: sales@eseye.com