
WALL MOUNT FOOT ALIGNING SQUARE DETENT FOR #8 PAN HEAD SCREW

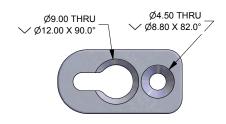


R4.50 Ø4.50 R4.50 R2.40 [R.18] [Ø.18] [R.09] [R.18] 6.47 A [.25] 16.95 [.67] 6.47 15.90 [.63] [.25] 4.50 5.50 [.18] 32.94 [.22] [1.30].30 [.01] **SECTION A-A**




HEAVY DUTY MOUNT INSTALLATION

Install mounting feet to enclosure,

1. using supplied screws with a torque of
Polycarbonate 100 - 110 cN-m or 8.8 - 9.7 lbf-in.
ABS 80 - 90 cN-m or 7 - 8 lbf-in.




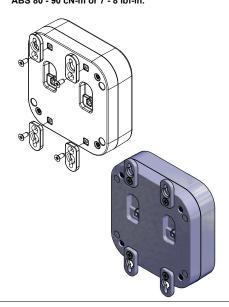




FLUSH MOUNT INSTALLATION

1. At the correct spacing for your enclosure, we recommend installing two #8 pan head screw (not included),

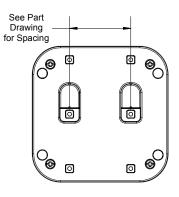

 Using a mounting foot, set the height for the screw by loosely tightening the screw onto the foot. Remove foot and give the screw 1/4 turn more.



Install mounting feet to enclosure, using supplied screws with a torque of Polycarbonate 100 - 110 cN-m or 8.8 - 9.7 lbf-in. ABS 80 - 90 cN-m or 7 - 8 lbf-in.

4. Push enclosure onto installed screws.
Press down on top of the enclosure till you feel the detent click over the pan head screw. some adjustment may be required.

